 


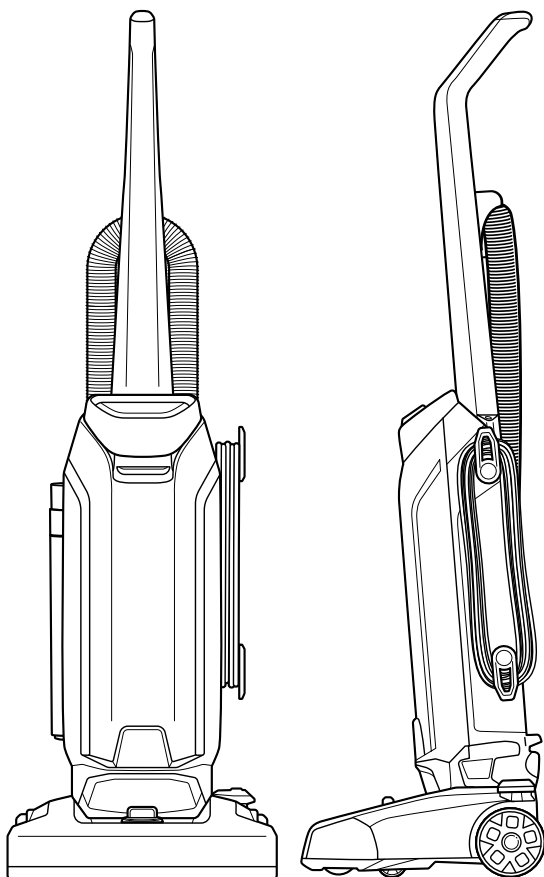

POWERFORCE[®]

Bagged Vacuum

USER GUIDE
1739 SERIES



IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR UPRIGHT VACUUM.

Always connect to a polarized outlet (one slot is wider than the other). Unplug from outlet when not in use and before conducting maintenance. When using an electrical appliance, basic precautions should be observed, including the following:

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- » Do not leave vacuum cleaner when it is plugged in. Unplug from outlet when not in use and before servicing.
- » Do not use outdoors or on wet surfaces.
- » Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- » Do not use for any purpose other than described in this User's Guide. Use only manufacturer's recommended attachments.
- » Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- » Do not pull or carry by cord, use cord as a handle, close a door on

cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.

- » Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- » Do not handle plug or vacuum cleaner with wet hands.
- » Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- » Turn off all controls before plugging or unplugging vacuum cleaner.
- » Use extra care when cleaning on stairs.
- » Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.)

or use in areas where they may be present.

 
- » Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- » Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- » Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- » Do not use without filters in place.
- » Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- » Use only on dry, indoor surfaces.
- » Keep appliance on a level surface.
- » Do not carry the vacuum cleaner while it is running.

WARNING

- » Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- » Do not plug in your vacuum cleaner UNTIL you are familiar with all instructions and operating procedures.
- » To reduce the risk of electrical shock, turn power switch off and disconnect polarized plug from electrical outlet BEFORE performing maintenance or troubleshooting checks.

THIS APPLIANCE HAS A POLARIZED PLUG

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.

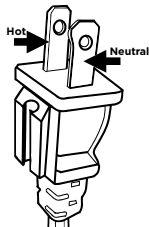

SAVE THESE INSTRUCTIONS

This model is for household use only.

Thanks for buying a BISSELL vacuum!

We love to clean and we're excited to share one of our innovative products with you. We want to make sure your vacuum works as well in one year as it does today, so this guide has tips on using (page 6-7), maintaining (pages 7-9), and if there is a problem, troubleshooting (page 10).

What's in the Box?



 
User Guide



2 Screws



Bag



Hose



 
Extension Wand



Crevice Tool
(stored inside
Extension Wand)




Dusting Brush

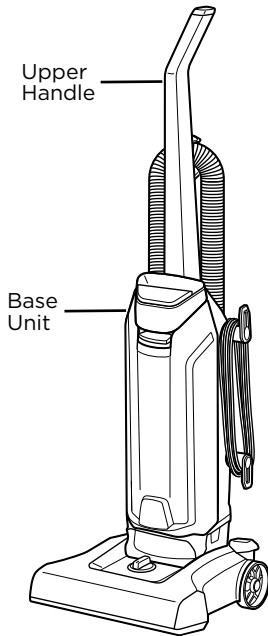


NOTE: Standard accessories may vary by model. To identify what should be included with your purchase, please refer to the "Carton Contents" list located on the carton top flap.

Safety Instructions.....	2	Warranty.....	11
Product View.....	4	Service.....	11
Assembly	5	Contact Information	11
Operations	6-7	Product Registration.....	12
Maintenance & Care	7-9	Parts & Supplies	12
Troubleshooting	10		

 Product View

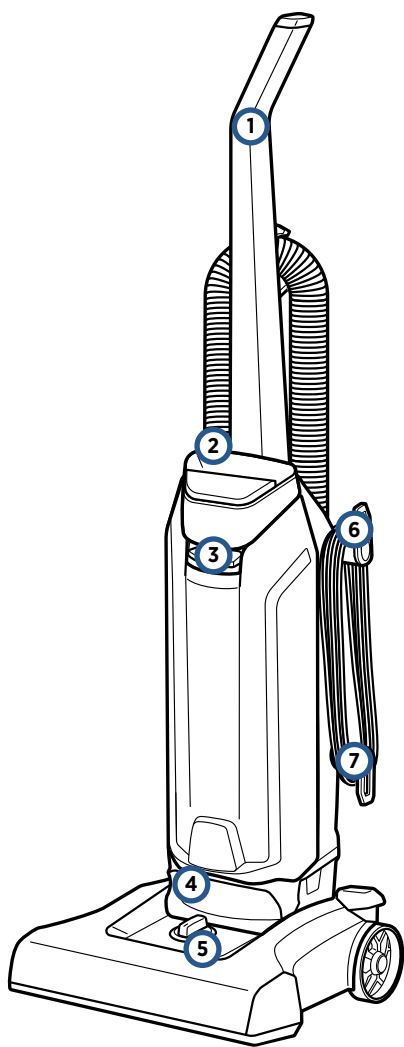

 - 1 Upper Handle
- 2 Carry Handle
- 3 Bag Door Release Button
- 4 WashablePre-Motor Filter
- 5 Height Adjustment Knob
- 6 Upper Quick Wrap Release™
- 7 Cord Wrap
- 8 Lower Cord Wrap
- 9 Hose Clip

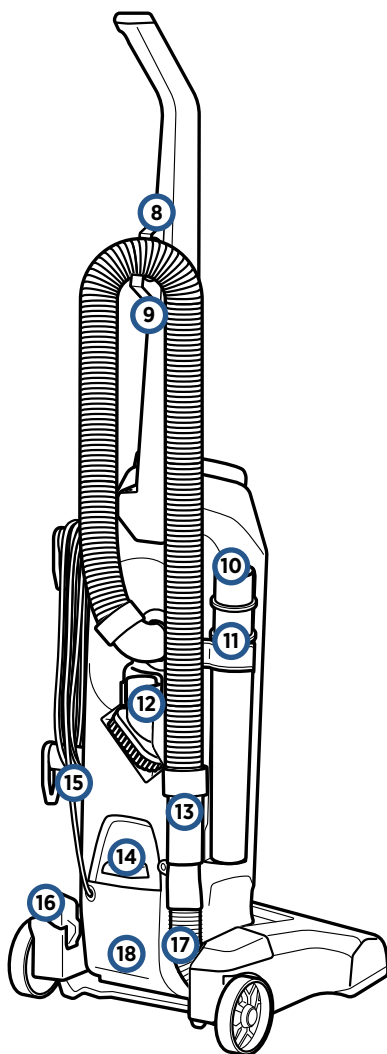


- 10 Crevice Tool (stored in Extension Wand)
- 11 Extension Wand
- 12 Dusting Brush
- 13 Hose Wand
- 14 Power Switch Pedal
- 15 Power Cord
- 16 Handle Recline Pedal
- 17 Foot Hose
- 18 Product Rating Label & Serial Number

Assembly


⚠ WARNING

Do not plug in your vacuum until you are familiar with all instructions and operating procedures.

 The only tool you will need to assemble your vacuum is a Phillips screwdriver.

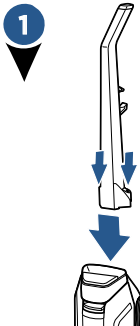


 Place the upper handle onto the base and push it down. Then attach the handle with the 2 screws that are taped to the handle in a plastic bag.

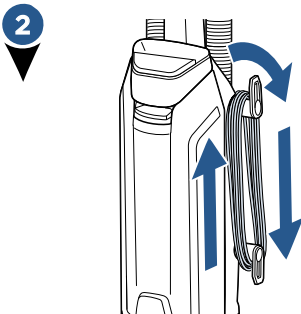

Wrap the power cord around the cord wraps and clip the end of the plug to the power cord.

 
3

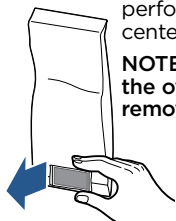

To experience freshness as you vacuum, locate the Febreze® scent tag at the bottom of the vacuum bag. Carefully pull the tab along the perforated lines in the center of the scent tag.


NOTE: Only a portion of the overwrap should be removed.

 4

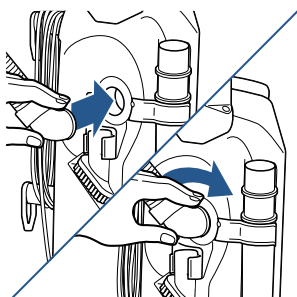


Next, insert the end of the hose into the back of the vacuum and twist to lock it into place.

 5

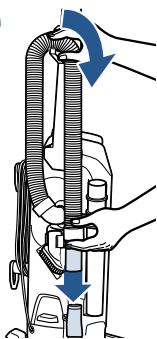


Now wrap the hose through the hose clip and connect the hose wand to the foot hose down at the bottom of the vacuum.

 Put your accessory tools on the vacuum and you're ready to go!

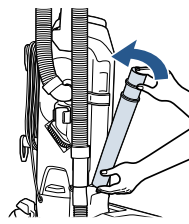

 
Extension Wand
(with Crevice Tool inside)

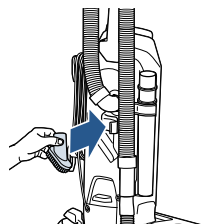


Dusting Brush

NOTE: The crevice tool can be found inside the extension wand. You can remove it to use it and put it back to store it neatly out of your way when you're finished.

 Power Switch

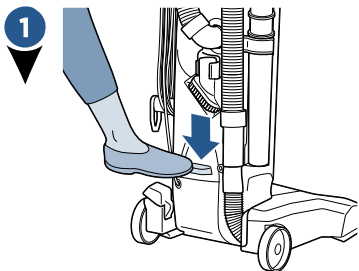

 
Press the red power switch ① with your foot to turn on the unit.
Press it ① again to turn your vacuum off when you've finished cleaning.

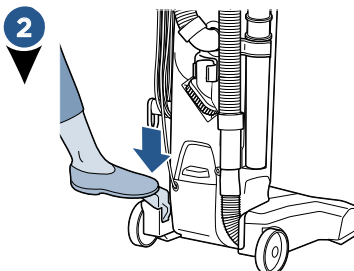

Press the recline pedal to lean your vacuum back for cleaning. To get even lower, press the recline pedal a second time. When you're finished, lean it all the way back up to lock it into the upright position.

NOTE: The floor brush will continue to rotate while you use your vacuum for above floor cleaning. To prevent carpet damage, do not lean on the vacuum or let the powerfoot tilt forward.

 Height Adjustment

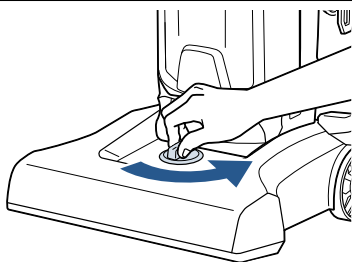


You can easily raise or lower your vacuum to adjust to different flooring types. Simply turn the knob towards the desired flooring type. If your vacuum becomes too difficult to push, just move to a higher setting.

NOTE: Some frieze and berber carpets have long delicate fibers or threads that may be damaged by rotating brush. Repeated strokes in the same area may enhance this condition.

⚠ WARNING Before using your vacuum, make sure the bag and filter are in place and the bag door is secure. **DO NOT** operate your vacuum without the bag and filter.

⚠ WARNING
The rotating floor brush continues to rotate while tools are in use. To reduce the risk of injury from moving parts, always move the cleaner with the carry handle at the front of the unit. Always place the cleaner on the floor with the handle in the upright position when using tools. Never place your fingers under the cleaner when it is running. Never place the powerfoot on furniture or uneven surfaces. Do not place vacuum cleaner close enough to objects to pull them into rotating brush.

 Specialized Tools

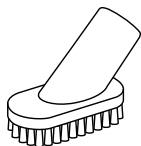

Dusting Brush



 
Extension Wand




Crevice Tool

Your new PowerForce vacuum not only does a great job on your floors, it also comes with a complete set of accessory tools to make your above floor cleaning jobs easier. Just put your vacuum in the upright position, pick the accessory tool that best fits your needs and attach it to the end of your hose. You're ready to clean base boards, curtains, upholstery and much more.


Changing the Bag

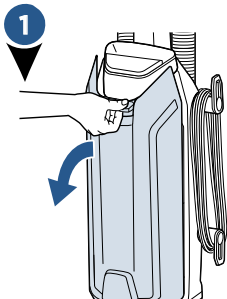

 1 To check if the bag is full, remove the bag door cover by pressing the latch down and pulling the door off to inspect the bag. If the bag is full, it is time to replace it.

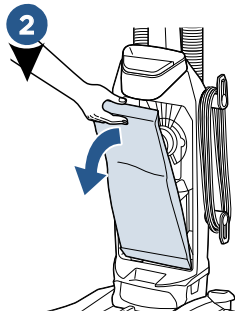

 2 Remove the old bag by grabbing the dust bag collar and pull towards you to remove it from the vacuum. Then carefully throw it away.

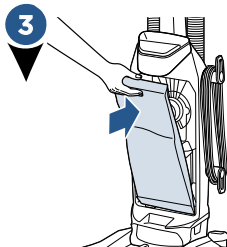

3 Grab a new bag, grasp the collar and press it onto the connector tube. Tuck the bag into the bag compartment. If it's a Febreze® bag, open the wrapper on the scent tag by pulling along the perforated line to release the Febreze® freshness. Put the bag door back on and you're finished.

 
Febreze® and related trademarks are owned by The Procter & Gamble Company, Cincinnati, Ohio and used under license by BISSELL Homecare, Inc.

Parts & Supplies

For Parts and Supplies, go to www.BISSELL.com and enter your model number in the search field.


Helpful Tips

1

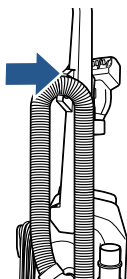

While vacuum is in use, fasten the power cord to the cord clip located on the back of the handle above the hose clip. This will help to keep the cord out of your way as you vacuum.

 
2

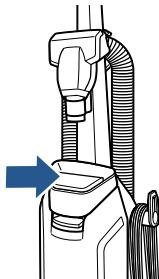

Easily carry the vacuum up and down stairs or from room to room using the vacuum carry handle. The vacuum carry handle is located on the front of the vacuum above the vacuum bag latch.


Cleaning the Pre-Motor Filter

 1

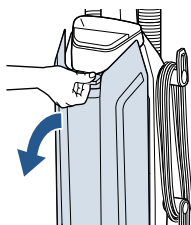

Remove the bag door cover by pressing the latch down and pulling the door off.

 2

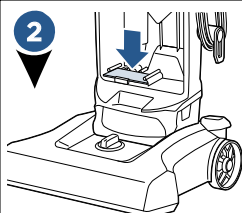


Locate the filter on the left side at the bottom of the bag compartment. You may need to lift the bag out of the way to find it.

3



Remove the pre-motor filter. Clean it with warm water. Allow it to dry completely.

 4

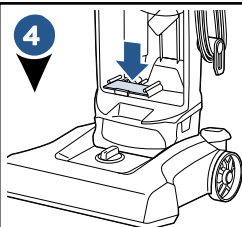

Once it's clean and dry, put it back into the unit.

WARNING

 
To reduce the risk of electrical shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

WARNING

Do not operate the vacuum with damp or wet filters, without the bag in place, or with the bag door missing. Allow components to dry before reassembling the unit.


Replace the Brush & Belt

1

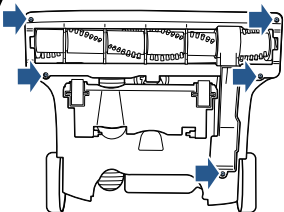


Unplug vacuum, turn over and unscrew Philips head screws to remove bottom cover. Model 1739 has 5 screws.

 2

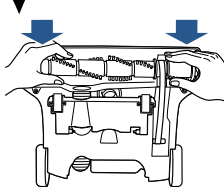

Lift roller straight out. If the belt is not broken, remove roller from inside of the looped belt.

 
3

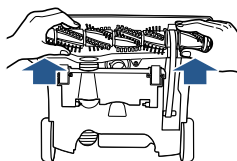

Replace the brush roll and belt by looping the belt over the motor shaft and the brush roll. Line up the end caps and pull the brush forward into place. This will stretch the belt. Once the brush roll is installed, place the bottom cover back on and replace the screws.


Clearing a Clog

 1

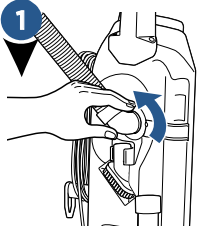


Remove the hose from the back of the vacuum by twisting it to the left. Remove any debris that may have gotten clogged.

 2

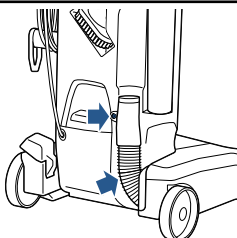

Check the foot hose on the back of your vacuum down towards the bottom. Remove the screw from the foot hose and check for clogs.

 3

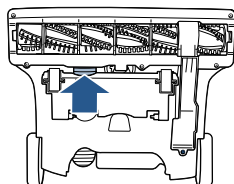

Check the air passageway on the bottom of your vacuum. Remove the bottom cover and the brush. Remove any debris.

Troubleshooting

WARNING

To reduce the risk of electric shock, turn power switch off and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.

Problem	Possible causes	Remedies
Vacuum cleaner won't run	Power cord not plugged in	Check electrical plug
	Blown fuse/tripped breaker	Check/replace fuse or reset breaker
Vacuum cleaner won't pick up dirt	Dirt bag is full	Replace bag
	Filter dirty	Check, remove debris or clean
	Hose not secure	Check to ensure the hose is secured into place at both ends
	Bag door is not in place	Make sure the bag isn't caught between the door and the body of the unit and snap the door into place
	Vacuum path clogged	Visually check air passageway, hose inlet, and hose for anything that might be obstructing the vacuum path. Carefully remove blockage
	Rotating power brush drive belt broken	Replace drive belt
	Drive belt stretched	Check drive belt area and remove obstructions. Replace drive belt if necessary
	Floor brush bristles worn	Replace floor brush
	Floor brush jammed	Remove floor brush and clean debris from brush and ends, then check drive belt for any damage

Warranty

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care by E-mail, telephone, or regular mail as described below.

Limited One-Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for one year any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

BISSELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

***EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY**
THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you.

NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim.

Service

If your BISSELL product should require service:

Contact BISSELL Consumer Care to locate a BISSELL Authorized Service Center in your area.

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Care.

Website:

www.BISSELL.com

E-mail:

www.BISSELL.com/email-us

Call:

BISSELL Consumer Care

1-800-237-7691

Monday - Friday 8am - 10pm ET

Saturday 9am - 8pm ET

Sunday 10am - 7pm ET

Please do not return this product to the store.

Other maintenance or service not included in the manual should be performed by an authorized service representative.

For any questions or concerns, BISSELL is happy to be of service. Contact us directly at 1-800-237-7691.

Register your product today!

Registering is quick, easy and offers you benefits over the lifetime of your product.

You'll receive:

BISSELL Rewards Points

Automatically earn points for discounts and free shipping on future purchases.

Faster Service

Supplying your information now saves you time should you need to contact us with questions regarding your product.

Product Support Reminders and Alerts

We'll contact you with any important product maintenance reminders and alerts.

Special Promotions

Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit www.BISSELL.com/registration!

Visit the BISSELL website: www.BISSELL.com

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____

Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 11 for details.

Parts & Supplies

For Parts and Supplies, go to www.BISSELL.com and enter your model number in the search field.

We can't wait to hear from you!

Rate this product and let us (and millions of your closest friends) know what you think!

www.BISSELL.com



©2017 BISSELL Homecare, Inc.
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 161-1356 5/17
Visit our website at: www.BISSELL.com