

POWERGLIDE[®]

WITH LIFT-OFF[®] TECHNOLOGY

USER GUIDE

2763 & 9182 SERIES

*Product images may vary

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR UPRIGHT VACUUM.

Always connect to a polarized outlet (one slot is wider than the other). Unplug from outlet when not in use and before conducting maintenance. When using an electrical appliance, basic precautions should be observed, including the following:

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- » Always connect to a polarized outlet (one slot is wider than the other). Do not modify the polarized plug to fit a non-polarized outlet or extension cord.
- » Do not leave vacuum cleaner when it is plugged in. Unplug from outlet when not in use and before servicing.
- » Do not use outdoors or on wet surfaces.
- » Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- » Do not use for any purpose other than described in this User's Guide. Use only manufacturer's recommended attachments.
- » Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- » Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- » Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- » Do not handle plug or vacuum cleaner with wet hands.
- » Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- » Turn off all controls before plugging or unplugging vacuum cleaner.
- » Use extra care when cleaning on stairs.
- » Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- » Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- » Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- » Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- » Do not use without filters in place.
- » Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- » Use only on dry, indoor surfaces.
- » Keep appliance on a level surface.
- » Do not carry the vacuum cleaner while it is running.
- » Unplug before connecting or disconnecting the TurboBrush® Tool or Pet TurboEraser® Tool.

SAVE THESE INSTRUCTIONS FOR FUTURE USE

This model is for household use only.

THIS APPLIANCE HAS A POLARIZED PLUG

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.

 
Thanks for buying a BISSELL vacuum

We're glad you purchased a BISSELL vacuum. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL vacuum is well made, and we back it with a limited five-year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL vacuum.

Thanks again, from all of us
at BISSELL.



Mark J. Bissell
Chairman & CEO

Safety Instructions.....	2
Product View.....	4
Assembly	5
Operations	5-7
Maintenance & Care	8-12
Troubleshooting	13
Replacement Parts	14
Warranty	15
Product Registration.....	16
Consumer Care.....	16

Product View



- 1 Handle
- 2 Lift-Off Pod Release Button
- 3 Dirt Tank Release Button
- 4 Carry Handle
- 5 Power Switch
- 6 Brush Roll Power Switch
- 7 Bottom Easy Empty™ Dirt Tank
- 8 Filter Cover (Pre-Motor Filters (2) and Post-Motor Filter are located underneath Filter Cover)
- 9 Powerfoot
- 10 Cord Clip
- 11 Handle Height Adjustment Button
- 12 Specialty Tool (Select models include TurboBrush® Tool or Pet TurboEraser® Tool)
- 13 Specialty Tool Mount
- 14 Stretch Hose
- 15 Crevice Tool
- 16 Quick Release® Cord Wrap
- 17 Crevice Tool or Extension Wand Mount (select models)
- 18 Power Cord
- 19 Extension Wand (select models)
- 20 Variable Suction Ring
- 21 Hose Wand
- 22 Hose Wand Base



WARNING

Plastic film can be dangerous. To avoid danger of suffocation, keep away from babies and children.



WARNING

Do not plug in your vacuum cleaner until you are familiar with all instructions and operating procedures.



WARNING

To reduce the risk of electric shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

Assembly

No tools required for assembly.

Attach handle to vacuum

Locate the vacuum base and the handle. Stand the vacuum base upright and slide the handle into the opening at the top of the vacuum base. The handle will click into place at the highest height setting.

NOTE: The handle has two height settings. To lower or raise the handle, push the handle height adjustment button (designated by the corresponding icon pictured below) and slide the handle up or down until it locks into place.



⚠ WARNING

Do not plug in your vacuum cleaner until you are familiar with all instructions and operating procedures.

⚠ WARNING

Plastic film can be dangerous. To avoid danger of suffocation, keep away from babies and children.

Attach vacuum hose and tools

1. Attach the Twist n' Snap™ hose by lining up the tabs on the hose cuff with the corresponding notches on the back of the vacuum. Twist the hose cuff clockwise to lock the hose into place.


2. Fold the hose over the upper hose wrap and slide the end of the hose wand into the hose wand base.

NOTE: The powerfoot will not operate effectively unless the hose is firmly attached to the base.

3. Slide the crevice tool/extension wand holder onto the lower mount on the back of the vacuum as shown. Snap the crevice tool into the tool holder.

4. The mounting clip may come attached to the speciality tool inside the carton. Remove the mounting clip from the tool and slide the clip onto the upper mount on the back of the vacuum as shown (select models). Snap the Turbobrush Tool into the tool holder.

5. Wrap the power cord around the cord wrap clips.

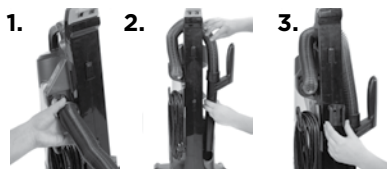

Tip

» Your vacuum features a quick-release cord wrap. To remove the power cord quickly and easily, rotate the upper cord wrap towards floor, and slip power cord off from upper cord wrap.

Operations

Power switch/brush switch

The power switch is located just below the handle on the front of the detachable pod. Push the switch once to turn the vacuum on and again to turn the vacuum off when cleaning is complete.

 
The brush roll power switch is located just below the handle on the front of the detachable pod above the power switch. This switch turns the rotating brush power on and off. The switch will glow when activated.

NOTE: The brush roll power will automatically shut off whenever the vacuum is locked in its upright position. The switch will continue to glow if left on in the upright position or if the pod is detached from the vacuum base, although the brush will not reactivate until the pod is attached and the vacuum is reclined.

power



brush



⚠ CAUTION

Before using your vacuum, make sure that the dirt container is in locked position and that all filters (pre-motor and post-motor) are in place. Do not operate your vacuum without these filters.

Operations

Handle position

1. Upright - For storage and above floor cleaning with special tools.

2. Normal Cleaning - Step on the left side of the vacuum powerfoot and pull back on the handle to lower the vacuum. The icon pictured to the right indicates where to step.



Special tools

Your vacuum is not only a powerful floor vacuum cleaner, it's also a versatile stairs and above floor vacuum when you select one of the special tools.

NOTE: The tools can be used with the vacuum in the upright position or with the removable pod.

1. Remove the vacuum hose by grasping the hose wand grip and lifting to separate from the hose wand base.

2. Attach tools by firmly pushing onto the hose wand.

a. Crevice Tool: use in tight, narrow spaces.

b. Extension Wand (select models): use with desired attachment for a longer reach.

c. TurboBrush Tool (select models): use rotating brush action for small, flat areas such as stairs and cushions. Press down gently and pull toward you in a raking motion; excessive force will cause the brush to stop rotating.

d. Pet TurboEraser Tool (select models): use to remove dirt and pet hair from stairs, upholstery, area rugs, and other small areas. Pull the tool toward you in a raking motion.

Note: The Pet TurboEraser Tool is designed to remove pet hair from upholstered or carpeted surfaces. It should not be used on pets.

e. Pet Hair Fabric Tool (select models): use this tool on fabrics such as drapes, beds, or anywhere else pet hair may collect.

f. Long Reach Dusting Tool (select models): use this tool for dusting large surfaces.

NOTE: The Long Reach Dusting Tool is not intended to be used to clean TV or computer screens.

ATTENTION

Some frieze carpets have long delicate fibers or threads that may be damaged by the rotating brush during vacuuming. It is recommended the rotating brush be turned OFF when cleaning this type of carpet.

TIPS

» Before cleaning under low furniture, check area first for objects that might harm the unit or block the vacuum hose.

» The PowerGlide is capable of powerful suction. The suction power can be adjusted with the variable suction ring when using the special tools.

ATTENTION

Some thick carpets can make vacuums hard to push. The push force can be reduced by opening the variable suction ring. On most carpets, for best cleaning performance, the ring should remain closed.

a. 

b. 

c. 

d. 

e. 

f. 

CAUTION

Always place vacuum cleaner on floor in its fully upright position and make sure it is locked into place before removing pod or when using tools. Placing the vacuum in its full upright position automatically stops the rotating brush.

NOTICE:

While vacuuming, certain carpets and low humidity conditions may generate small static discharges. The discharges are entirely harmless and are not associated in any way with the main power supply.

Operations

Cleaning with the removable pod

The Lift-Off vacuum pod easily detaches from the vacuum base for cleanups on stairs and in other hard-to-reach areas in your home.

Before removing the pod, your vacuum must be in its fully upright position. You do not need to turn off the power before removing the pod.

1. Press the Lift-Off pod release button at the base of the vacuum handle and lift the vacuum pod off its base.

2. Grasp the hose wand grip and lift to separate the hose from the hose wand base.

3. Connect the desired hose attachment to the hose wand, or use the hose wand on its own.

4. When you're finished using the desired hose attachment, remove the hose attachment from the hose wand and reconnect the hose wand to the hose wand base.

5. Return the vacuum pod to the vacuum base by aligning the pod base to the vacuum base. Push the pod onto the vacuum base until it 'clicks' into place.



LIFT OFF



WARNING

While the vacuum is in use, warm air is emitted through the post-motor filter on the front of the pod. The bottom of the pod may also become warm.

Variable Suction Ring

When using your vacuum on high pile carpet and area rugs, open the variable suction ring for easier steering and maneuverability.

Open the variable suction ring for less suction and close it for more suction.



Variable Suction Ring

Power cord storage

When you are done using your vacuum, return it to the upright position and store the power cord.

1. Turn vacuum cleaner off.

2. Unplug power cord by grasping the polarized plug (NOT the cord) and disconnect from outlet.

3. Loop power cord around cord wraps on side of the pod.

4. Clip molded plug to power cord to secure.

Transporting Cleaner

1. To move your vacuum cleaner from room to room, put the handle in the upright position, tilt the cleaner back on its rear wheels and push forward.

2. The vacuum can also be transported by grasping the carry handle on the Lift-Off vacuum pod.



Removing Handle

1. If you need to completely remove the handle for transporting, insert a small screwdriver into the hole to depress the button and press the handle adjustment button down (a) while pulling the handle out.

2. To re-assemble the handle, insert the handle tube into the main body. (see page 5, "Assembly" for details).



← a.

Maintenance & Care

To maintain maximum cleaning performance, the following maintenance steps must be performed:

1. Empty the dirt container before the dirt reaches the "Full" line.
2. Check the pre-motor filters at least once a month and clean and replace as needed. See "Cleaning the pre-motor filter" on page 9.
3. Check and replace the post-motor filter as needed. See "Replacing/Cleaning the post-motor filter" on page 9.

NOTE: More frequent filter cleaning may be necessary if you are vacuuming new carpet, fine dust or have allergy concerns.

Follow the instructions on the following pages to perform these simple maintenance steps.

WARNING

To reduce the risk of electric shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

WARNING


Do not operate vacuum with damp or wet filters or without all filters in place.

Empty Dirt Container

The dirt tank needs to be emptied before the dirt reaches the 'Full' line on the side of the tank.

1. Unplug cleaner from electrical outlet.
2. Remove the Easy Empty dirt tank from the vacuum base by pushing the tank release button.
3. Hold the dirt tank over a garbage container. Press the bottom lid release button on the lower back of the dirt tank to empty dirt.
4. Mount the Easy Empty dirt tank on the vacuum base.

NOTE: The dirt tank may be washed in warm water with a mild detergent. Make sure it is completely dry before replacing.

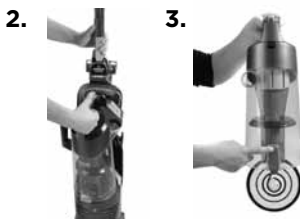

Cleaning the inner cyclone

Unplug the cleaner from electrical outlet.

1. With the bottom of the Easy Empty dirt tank open, reach up into the tank and grasp the cyclone. Twist the cyclone counter-clockwise to unlock and pull straight down to remove.
2. The inner cyclone and dirt tank may be wiped clean with a damp cloth. Make sure all parts are dry before replacing.



Maintenance & Care


Cleaning the pre-motor filters

1. Unplug the vacuum from electrical outlet
2. The pre-motor filters protect the motor from dirt particles and are located underneath the dirt tank. To access the filters, first remove the dirt tank. Next, lift up on the tab attached to the filter cover.
3. There are two pre-motor filters; one foam filter on top and a thinner fiber filter directly underneath it. If the filters appear dirty, remove both filters. Both pre-motor filters may be hand washed in cold water with mild detergent. Rinse well and air dry thoroughly before replacing the filters. The foam filter is made of two parts a black and yellow part joined together. When replacing the filter the yellow part should be placed towards the vacuum motor.

NOTE: The thinner fiber filter should be placed underneath the foam filter.

⚠ WARNING

To reduce the risk of electric shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

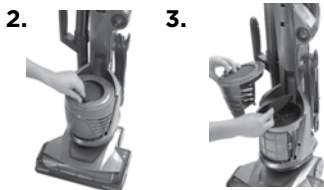

Replacing/cleaning the post-motor filter

1. The post-motor filter assists in the filtration process to return cleaner air to the room. The post-motor filter is located on the front of the vacuum underneath the filter cover. (Instructions for removing the filter cover are listed above).
2. If the post-motor filter appears dirty, remove the filter and gently tap the filter on the edge of a waste basket to clear any accumulated dust and debris.

NOTE: The post-motor filter is a pleated filter. The filter is not washable and for optimum performance it should be replaced when it becomes dirty.



Tip

» Select models include a Febreze® pre-motor filter in addition to the foam pre-motor filter. Either filter should be used along with the fiber filter. This Febreze® filter is compatible with all BISSELL model series 2763 and 9182 vacuums. For ordering information, please refer to the Replacement Parts information on page 14.

Maintenance & Care


Rotating brush and drive belt maintenance

Check your vacuum cleaner's rotating floor brush and drive belt regularly for debris, wear or damage. Debris can wrap around the brush and hamper its ability to effectively clean your carpet.

1. Unplug cleaner from electrical outlet.
2. Remove detachable pod from vacuum cleaner.
3. Recline handle and turn vacuum cleaner over so bottom side is up.
4. Remove the eight screws as shown with a Phillips head screwdriver. Lift the brush cover off.
5. Lift the rotating floor brush to remove. Clean strings, hair and other debris from the brush, paying special attention to the brush ends.
6. Check air passageway for obstructions. Remove any debris from this area.
7. Clean debris from the motor pulley and drive belt areas.
8. Check drive belt carefully for wear, cuts or stressed areas. If any damage is present, discard old drive belt and replace.

WARNING

To reduce the risk of electric shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

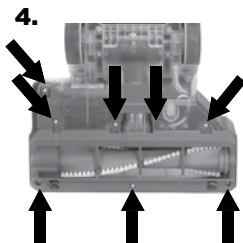


Maintenance & Care

Replace drive belt

1. Unplug the vacuum from electrical outlet.
2. With rotating floor brush removed from vacuum cleaner (Steps 1-8 of check rotating floor brush and drive belt), grasp old drive belt and remove from motor pulley. Discard the old drive belt.
3. Place new drive belt over motor pulley and loop other end over rotating floor brush in the space between the bristles.

NOTE: It is important that you use only genuine BISSELL replacement belts. Generic belts may not meet the exacting specifications required to keep your vacuum operating at its peak performance. The use of unbranded belts could lead to early failure of the vacuum and could void your warranty.

- 4 Pull the rotating floor brush firmly into position, stretching the drive belt, and place ends of rotating floor brush down into the slots on sides as shown. Alignment of brush ends in slots is necessary to fully insert the brush.
5. Turn rotating floor brush by hand several times in the direction of motor pulley. If properly installed, drive belt will center itself on rotating brush crown.
6. Reposition brush cover and screw back into place.

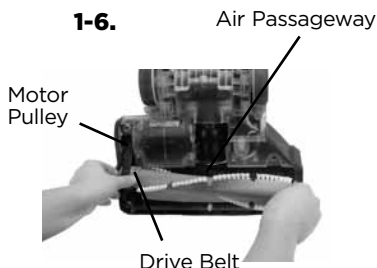

Maintenance & Care

Maintaining the TurboBrush Tool and Pet TurboEraser Tool (select models)

The TurboBrush Tool should be checked regularly for clogs or debris wrapping around the brush. Select models include a Pet TurboEraser Tool that follows the same maintenance instructions.


1. Unplug the vacuum from electrical outlet.
2. If a clog is present or debris is visible, twist the grey collar counterclockwise to remove the faceplate and clear any obstructions.
3. To clean debris from the brush, remove the brush from the drive belt and clean debris.
4. Reposition the drive belt on the brush. Place ends of the brush in slots on sides.
5. Reposition the faceplate and secure by twisting the grey collar clockwise.



Clearing clogs

Low suction or poor pickup may be due to a clog in the vacuum cleaner. If you notice a change in the sound of the motor or a reduction in the spinning action, check for clogs.

1. Unplug cleaner from electrical outlet.
2. Empty dirt container.
3. Check upper tank for build up or clogs.
4. Remove the secondary cyclone and check the suction inlet for a clog.
5. Grasp the hose grip and lift to separate from the suction opening. Check for a clog in the base or the hose.
6. Release the Twist n' Snap hose from the vacuum by turning to the left. Straighten the hose and unclog with a long, narrow object such as a broomstick.
7. If the low suction persists, follow the instructions for checking the rotating brush on page 10 and inspect the air passageway for obstructions.
8. Check all filters for clogs, per instructions on page 9.

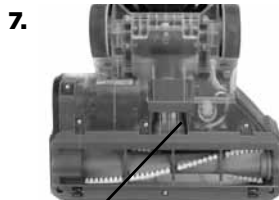

Air Passageway

Troubleshooting



WARNING

To reduce the risk of electric shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

Problem	Possible causes	Remedies
Vacuum cleaner won't turn on	Power cord not plugged in	Check electrical plug
	Blown fuse/tripped breakers in home	Check/replace fuse or reset breaker
No power at rotating floor brush	Pod is not securely seated	Remove pod and replace, making sure that it "clicks" into place
	Brush switch turned to "OFF"	Make sure brush switch is in "ON" position
	Vacuum is in upright position	Recline vacuum to operate brush
Vacuum cleaner won't pick up dirt	Hose not attached to suction opening	Grasp quick reach handle and firmly push hose wand onto the suction opening
	Crack or hole in hose	Check hose and replace if needed
	Broken or worn drive belt	Replace drive belt, see pages 10, 11
	Rotating floor brush bristles worn	Replace brush
	Rotating floor brush jammed	Remove brush and clean debris from brush ends
	Clog in vacuum	Follow instructions on page 12 for clearing clogs
	Dirt container full	Empty dirt container
	Dirt container or secondary cyclone not installed properly	Position correctly and lock in place
	Filters are dirty	Check and clean pre-motor and post-motor filters, see page 9
Visible dirt escaping from cleaner	Dirt container full	Empty dirt container
	Filters or secondary cyclone missing or installed incorrectly	Check secondary cyclone, pre-motor and post-motor filters for correct installation
	Dirt container installed incorrectly	Pull out and re-insert dirt container correctly
Hard to push on thick carpet	Carpet seals bottom of vacuum to floor	Reduce suction using variable suction ring

Please do not return this product to the store.

Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.

For any questions or concerns, BISSELL is happy to be of service. Contact us directly at 1-800-237-7691.

Replacement Parts

These items are available for your BISSELL PowerGlide Vacuum.
Call 1-800-237-7691 or visit www.bissell.com

PART #	PART NAME		PART #	PART NAME	
160-1961	Drive Belt		1211	Replacement Filter Pack (includes one of each: Pre-Motor Fiber Filter, Pre-Motor Foam Filter, Post-Motor Multi-Layer Filter)	
160-1962	Brush Roll		160-1974	Post-Motor Multi-Layer Filter	
160-4191	Twist 'n Snap Hose		1214	Febreze® Pre-Motor Filter (fits all models)	

Accessories

These items are available for your BISSELL PowerGlide Vacuum.
Call 1-800-237-7691 or visit www.bissell.com

PART #	PART NAME		PART #	PART NAME	
203-1056	Crevice Tool		203-1368	Pet Contour Tool®	
203-2666	Extension Wand		160-1966	Corner Tool	
160-1965	Bendable Extension Wand (Need extension wand #203-2666 to connect to the bendable extension wand.)		160-1967	Long Reach Dusting Tool	
160-1964	Deluxe Bare Floor Tool		160-1963	Pet Hair Fabric Tool	
203-1429	TurboBrush® Tool		160-1510	Pet TurboEraser® Tool	

Febreze and related trademarks are owned by the Procter & Gamble Company, Cincinnati, Ohio and used under license by Bissell Homecare, Inc.

Warranty

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care by E-mail, telephone, or regular mail as described below.

Limited Five-Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for five years any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

BISSELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE FIVE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty last so the above limitation may not apply to you.

NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim.

Service

If your BISSELL product should require service:

Visit BISSELL.com or contact BISSELL Consumer Care to locate a BISSELL Authorized Service Center in your area.

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Care.

Website:

www.BISSELL.com

Or Call:

BISSELL Consumer Care
1-800-237-7691

Monday - Friday 8am - 10pm ET

Saturday 9am - 8pm ET

Sunday 10am - 7pm ET

Or Write:

BISSELL Homecare, Inc.
PO Box 3606
Grand Rapids, MI 49501
ATTN: Consumer Care

Register your product today!

Registering is quick, easy and offers you benefits over the lifetime of your product.

You'll receive:

BISSELL Rewards Points

Automatically earn points for discounts and free shipping on future purchases.

Faster Service

Supplying your information now saves you time should you need to contact us with questions regarding your product.

Product Support Reminders and Alerts

We'll contact you with any important product maintenance reminders and alerts.

Special Promotions

Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit www.BISSELL.com/registration now!

BISSELL Consumer Care

For information about repairs or replacement parts, or questions about your warranty:

Call:

BISSELL Consumer Care
1-800-237-7691

Monday - Friday	8 am - 10 pm ET
Saturday	9 am - 8 pm ET
Sunday	10am - 7pm ET

Write:

BISSELL Homecare, Inc.
PO Box 3606
Grand Rapids MI 49501
ATTN: Consumer Care

Visit the BISSELL website: www.BISSELL.com

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____

Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 15 for details.



©2014 BISSELL Homecare, Inc.
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 160-3174 Rev 03/14
Visit our website at: www.BISSELL.com