

MULTI SURFACE EXPERT™
C4 CYCLONIC™
1233

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR VACUUM.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- » Use indoors only.
- » For dry pick up only.
- » Do not leave machine when it is plugged in.
- » Do not service machine when it is plugged in.
- » Do not use with damaged cable or plug.
- » If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- » Do not handle unit with wet hands.
- » Do not pull or carry by cable, use cable as a handle, close door on cable, pull cable around sharp corners or edges, run appliance over cable, or expose cable to heated surfaces.
- » Do not unplug by pulling on cable. Unplug by grasping plug.
- » Do not run appliance over cable.
- » Do not handle plug or appliance with wet hands.
- » Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- » Do not pick up hot or burning objects such as cigarettes, matches, or hot ashes.
- » Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc.) or use in the presence of explosive liquids or vapours.
- » Do not use appliance in an enclosed space filled with vapours given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapours.
- » This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory and mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision.
- » Children should be supervised to ensure that they do not play with the appliance.
- » Remove plug from electrical socket before cleaning or maintaining the appliance.
- » If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- » Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, petrol, etc.).
- » Do not use for any purpose other than described in this User's Guide.
- » Use only manufacturer's recommended attachments.
- » Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- » Keep appliance on a level surface
- » Turn off all controls before unplugging.
- » Be extra careful when cleaning stairs.
- » Use only identical replacement parts.
- » Pay close attention when working around children.
- » Unplug from outlet when not in use.
- » Do not use outdoors or on wet surfaces.
- » Do not put any object into openings.
- » The hose contains electrical wires. Do not use when damaged, cut, or punctured. Avoid picking up sharp objects.
- » Always turn off this appliance before connecting or disconnecting either hose or motorized nozzle.
- » Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.
- » Unplug before connecting powered accessories.
- » Do not use without dust bag and/or filters in place.
- » To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.
- » Any service details not laid out in this user guide should only be performed by an authorized service center.

SAVE THESE INSTRUCTIONS FOR FUTURE USE

This model is for household use only.

Operations Thermal Motor protection

An internal thermal protect or has been designed into your cleaner to protect it from overheating. When the thermal protect or activates , the main vacuum motor will stop operating. If this happens, proceed as follows :

1. Turn the cleaner OFF and unplug from electrical outlet.
2. Check the cleaner for the source of overheating problem (ie. Full dirt cup, dirty filters or clog).
3. Fix the problem by following the steps in the maintenance section of the user guide.
4. When the motor cools for approximately 60 minutes, the thermal protector will reset and cleaning may continue. If the cleaner will not turn on or the thermal protector continues to activate, your cleaner may need servicing. Call BISSELL Consumer Care or visit the website.

 
Thanks for buying a BISSELL vacuum

We're glad you purchased a BISSELL vacuum. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL vacuum is well made, and we back it with a limited five-year guarantee. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high-quality homecare products like your BISSELL vacuum.

Thanks again, from all of us at BISSELL.

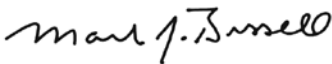

Mark J. Bissell
Chairman & CEO

Symbol Definitions

	WARNING	AN ACTION OR ATTENTION IS NEEDED TO THIS AREA IN ORDER TO REDUCE THE RISK OF ELECTRIC SHOCK, FIRE, OR INJURY
	GUIDE	READ USER GUIDE FOR COMPLETE SAFETY AND USER INSTRUCTIONS
	WEEE	DO NOT THROW THE APPLIANCE AWAY WITH THE NORMAL HOUSHOLD WASTE AT THE END OF ITS LIFE, BUT HAND IT IN AT AN OFFICIAL COLLECTION POINT FOR RECYCLING. BY DOING THIS YOU WILL HELP TO PRESERVE THE ENVIRONMENT.
1X 	ONCE A MONTH	
1X 	ONCE EVERY THREE MONTHS	
	LET DRY FOR TWENTY-FOUR HOURS	

 
1



2



3


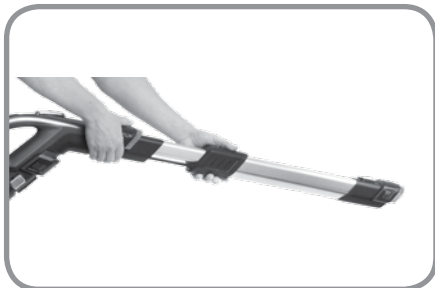


4



  5



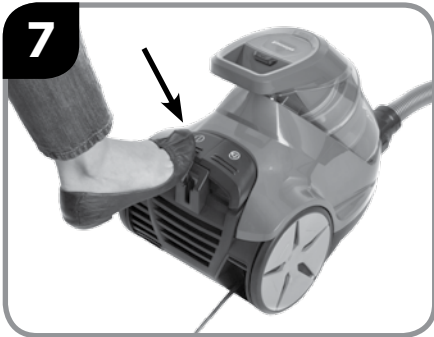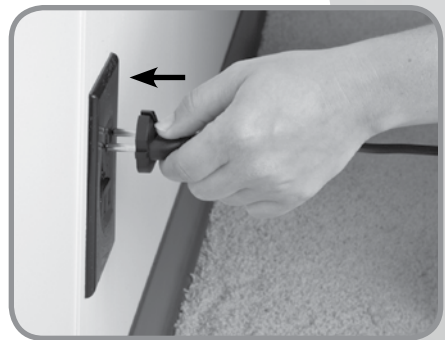

On the handle of the wand there are fingertip controls. Press the button with the brush symbol to turn off the powered brush roll. Press the button with the power symbol to turn off the power at the handle.

NOTE: The unit remains off as long as the handle is plugged in, but the power is still on until the power button is depressed on the canister as shown in step 7.

 


Top slot for power foot
Bottom slot for combination or hard floor tool








1X


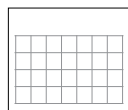


1X

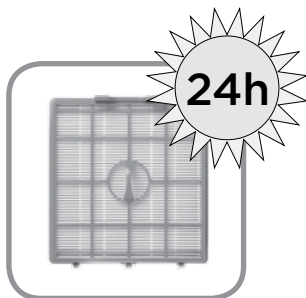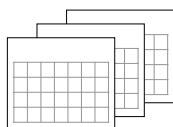  



1X

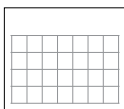 

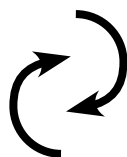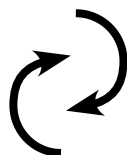  



Combination Floor Tool

  Select Models




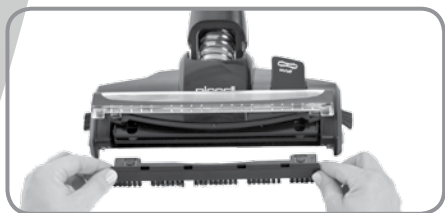
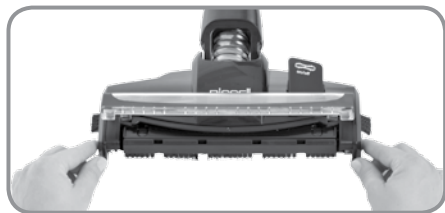


Hard Floor Tool

  Select Models

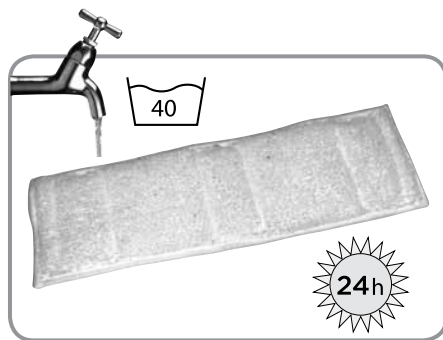
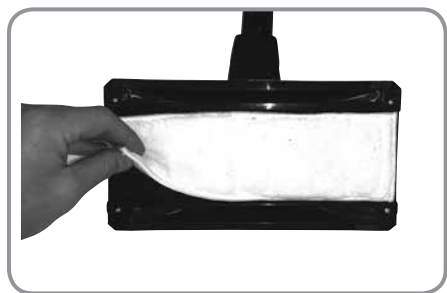


Brush Bar Access for Cleaning

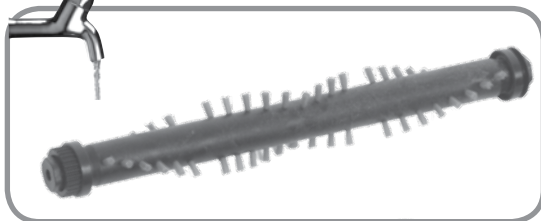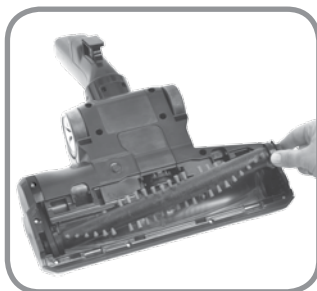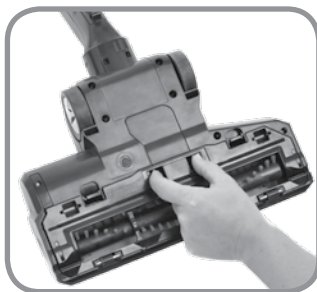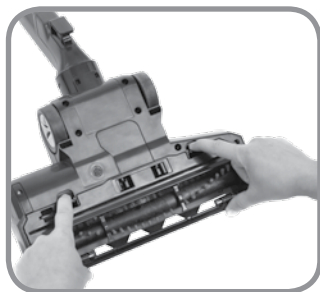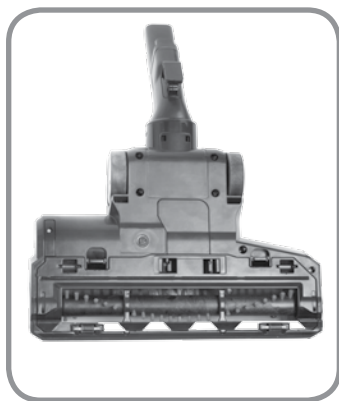     

Belt Access for Replacement

  Remove 1 screw and brush bar when removing and replacing belt.

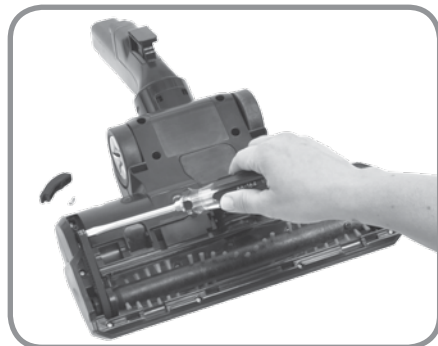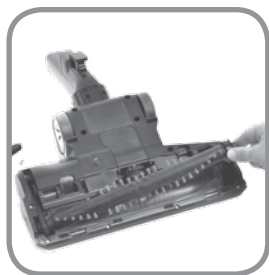

Storage

When storing the C4® Cyclonic canister, rewind the cord with the auto rewind button. The hose can be disconnected and coiled for storage or looped once as shown in the image at the left.

Replacement Parts

These items are available for purchase as accessories for your BISSELL vacuum:
To purchase visit www.BISSELL.com.

PART #	PART NAME		PART #	PART NAME	
1602262	Pre-Motor Filter		1602263	Post-Motor Filter	
1604445	Hose		1604446	Handle	
1604447	Wand		1603332	Crevice Tool	
1602264	Combination Floor Tool		1603331	Replacement Brush Strip	
1602265	Hard Floor Tool		1603333	Replacement Microfibre Pad	
1602277	Soft Dusting Brush		1602278	Firm Dusting Brush	
1602279	Upholstery Tool		1602266	Mini Turbo Brush & Connector	
1604448	Powerfoot		1604449	Powerfoot Brush Bar	
1604992	Powerfoot belt				

Warranty

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care by E-mail, telephone, or regular mail as described below.

Limited Five-Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for five years any defective or malfunctioning part.

See information on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

BISSELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE FIVE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty last so the above limitation may not apply to you.

NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim.

Service

If your BISSELL product should require service:

Visit BISSELL.com or contact BISSELL Consumer Care to locate a BISSELL Authorized Service Center in your area.

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Care.

Website or E-mail:

www.BISSELL.com

Or Call:

BISSELL Consumer Care

1-800-237-7691

Monday - Friday 8am - 10pm ET

Saturday 9am - 8pm ET

Sunday 10am - 7pm ET

Register your product today!

Registering is quick, easy and offers you benefits over the lifetime of your product.
You'll receive:

BISSELL Rewards Points

Automatically earn points for discounts and free shipping on future purchases.

Faster Service

Supplying your information now saves you time should you need to contact us with questions regarding your product.

Product Support Reminders and Alerts

We'll contact you with any important product maintenance reminders and alerts.

Special Promotions

Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit www.BISSELL.com/registration now!

BISSELL Consumer Care

For information about repairs or replacement parts, or questions about your warranty:

Call:

BISSELL Consumer Care
1-800-237-7691

Monday - Friday	8 am - 10 pm ET
Saturday	9 am - 8 pm ET
Sunday	10am - 7pm ET

Visit the BISSELL website: www.BISSELL.com

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____

Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 15 for details.



©2014 BISSELL Homecare, Inc.
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 160-4434 Rev 07/14 RevA
Visit our website at: www.BISSELL.com