

STEAMREADY™ STEAM MOP **USER GUIDE**

1464 SERIES

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR STEAM MOP.

When using an electrical appliance, basic precautions should be observed, including the following:
Always connect to a polarized outlet (left slot is wider than right). Unplug from outlet when not in use and before conducting maintenance.

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- » Do not direct steam at people, animals, or at electrical outlets.
- » Do not expose to rain.
- » Store indoors.
- » Unplug from outlet when not in use and before conducting maintenance or troubleshooting.
- » Do not leave steam cleaner unattended.
- » Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- » Do not service steam cleaner when it is plugged in.
- » Do not handle steam cleaner with wet hands.
- » Do not use steam cleaner if it has been dropped, damaged, left outdoors or dropped into water, return it to a service center.
- » Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, or expose cord to heated surfaces.
- » Do not unplug by pulling on cord.
- » Do not use appliance in an enclosed space filled with vapor given off by oil-base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- » Do not allow to be used as a toy.
- » Do not use on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.
- » Do not immerse.
- » Not for space heating purposes
- » Do not use for any purpose other than described in this User's Guide.
- » Use only manufacturer's recommended attachments – use of attachments not provided or sold by BISSELL may cause fire, electric shock or injury.
- » Never put descaling, aromatic, alcoholic or detergent products into the steam cleaner, as this may damage it or make it unsafe for use.
- » Unplug by grasping the plug, not the cord.
- » Close attention is necessary when used by or near children.

SAVE THESE INSTRUCTIONS FOR FUTURE USE

This model is for household use only. Commercial use of this unit voids the manufacturer's warranty.

THIS APPLIANCE HAS A POLARIZED PLUG

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.

 
Thanks for buying a BISSELL steam mop

We're glad you purchased a BISSELL steam mop. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL steam mop is well made, and we back it with a limited one-year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL steam mop.

Thanks again, from all of us
at BISSELL.




Mark J. Bissell
Chairman & CEO

Safety Instructions.....	2
Product View.....	4
Assembly	5
Operations	6-8
Maintenance & Care	9
Troubleshooting	10
Replacement Parts	10
Warranty	11
Service	11
Consumer Care	12
Product Registration.....	12

Product View

 - 1 Steam on Demand Trigger
- 2 Quick Release™ Cord Wrap
- 3 Power Cord
- 4 Lower Cord Wrap
- 5 Removable Water Tank
- 6 Indicator Light
- 7 Mop Pad

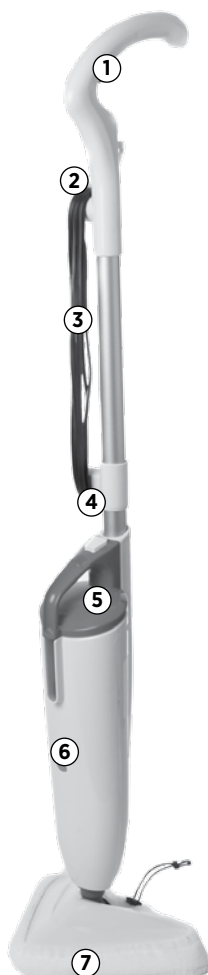

WARNING

Plastic film can be dangerous. To avoid danger of suffocation, keep away from babies and children.



WARNING

Do not plug in your steam mop until you are familiar with all instructions and operating procedures.



WARNING

To reduce the risk of electric shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

Assembly


Your steam mop assembles quickly and easily. Your steam mop is packaged with the following items:

- Handle Assembly
- Lower Body
- Maneuverable Mop Head
- Removable Water Tank
- 1 Mop Pad

1. Attach lower body to mop head and screw until tightened.

2. Slide handle assembly into lower body until it snaps into place and screw until tightened.

 Your steam mop assembly is now complete.

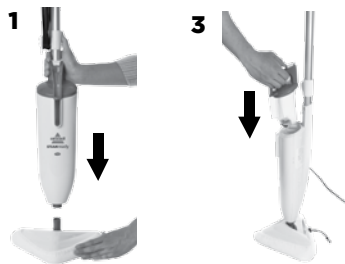

Operations

Special features

Removable water tank

The water tank is located on the top of the steam mop. It can be refilled with water any time during use. Distilled or demineralized water is recommended in place of tap water.

Do not use chemicals with your steam mop.

Indicator light

The indicator light will illuminate red when the steam mop is plugged in. After about 20 seconds, the light will illuminate green when the steam mop is ready to use.

Steam on demand trigger

Press to release steam and hold trigger for continuous steam.

Microfiber Mop Pad

The reusable microfiber mop pad is machine washable and safe for all hard floor surfaces. The all-white "soft" pad is best for everyday use on delicate flooring like sealed hardwoods and laminate.

Tip

» Do not attempt to use your steam mop without water in the tank.


Operations

Getting ready

The mop pad may have already come attached to the mop head, if not follow steps 1a and 1b below.


1. Attach mop pad

 - a. Set mop head in mop pad, making sure toggle is located on the back.
- b. Tighten mop pad by pulling on elastic cord while pressing on toggle.

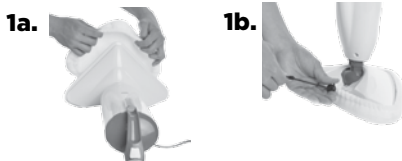

2. Fill the water tank

 - a. Remove tank by lifting straight up and away from unit.
- b. Unscrew cap at bottom of water tank.
- c. Fill water tank with water. For best results, water should be at room temperature.
- d. Replace the cap, tighten until snug.
- e. Replace water tank by gently sliding tank into place.

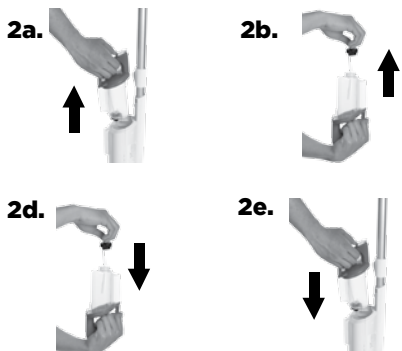

3. Twist the quick release cord wrap clockwise to unwrap the power cord completely and plug into a 120-Volt outlet as described on the Important Safety Instructions, page 2.

4. The indicator light will illuminate red when the steam mop is plugged in. After about 20 seconds, the light will illuminate green when the steam mop is ready to use.

NOTE: Upon first use of the steam mop or first use after refilling the water tank, the pump may make a “knocking” sound. This is normal and should only last a few seconds. While in use, the pump will continue to make a soft “knocking” sound. This is also normal.

Tip

» Use of distilled water is recommended to prolong the life of your steam mop.

Operations

Before you clean

Thoroughly sweep or vacuum floor prior to cleaning with the steam mop.

Cleaning hard floors

Your steam mop is designed to clean hard flooring such as ceramic tile, vinyl, laminate, marble, stone and sealed hard wood floors. Use of your steam mop on waxed or some unwaxed floors may result in a diminished glossiness. The steam mop is not for use on unsealed wood floors. For best results test in an inconspicuous area and check the care instructions from your flooring manufacturer.

- 1.** Plug the unit in and wait 20 seconds for it to heat up. Begin cleaning by slowly passing over surface while pressing the steam on demand trigger to emit steam as needed.
- 2.** When the steam mop stops emitting steam, unplug the unit. Simply remove the water tank, refill, and continue cleaning.

Maintenance & Care

When you're done

1. Unplug power cord from outlet.
2. Carefully remove mop pad from mop head, as mop pad and lower assembly may be hot.
3. Any water remaining in the water tank should be emptied prior to machine storage.
4. Mop pad can be machine washed in warm water. Use only liquid detergents. Do not use fabric softeners. For best results, air dry.
5. Wrap power cord around quick release cord wrap on side of steam mop.
6. Wipe all surfaces of steam mop with a soft cloth. Store upright in a protected, dry area.



WARNING

To reduce the risk of electric shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.



CAUTION

Upright storage of the Steam mop with a wet mop pad may result in the formation of white marks on your floor. To remove the white marks, clean area with vinegar.

Troubleshooting



WARNING

To reduce the risk of electric shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

Problem	Possible causes	Remedies
Reduced steam or no steam	Water tank empty	Fill tank
	Water tank not inserted properly.	Remove water tank and insert properly into unit.
Mop pad falling off	Elastic cord not tightened	Tighten mop pad by pulling on elastic cord while pressing on toggle.

Please do not return this product to the store.

Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.

For any questions or concerns, BISSELL is happy to be of service. Contact us directly at 1-800-237-7691.

Replacement Parts

These items are available for your BISSELL steam mop.
Call 1-800-237-7691 or visit www.bissell.com

PART #	PART NAME		PART #	PART NAME	
1604919	Handle Assembly		1604920	Water Tank with Cap and Insert	
1604921	Cap and Insert Assembly		1604964	Mop pad	

Warranty

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care by E-mail, telephone, or regular mail as described below.

Limited One-Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for one year any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

BISSELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty last so the above limitation may not apply to you.

NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim.

Service

If your BISSELL product should require service:

Visit BISSELL.com or contact BISSELL Consumer Care to locate a BISSELL Authorized Service Center in your area.

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Care.

Website:

www.BISSELL.com

Or Call:

BISSELL Consumer Care
1-800-237-7691

Monday - Friday 8am - 10pm ET

Saturday 9am - 8pm ET

Sunday 10am - 7pm ET

Register your product today!

Registering is quick, easy and offers you benefits over the lifetime of your product.
You'll receive:

BISSELL Rewards Points

Automatically earn points for discounts and free shipping on future purchases.

Faster Service

Supplying your information now saves you time should you need to contact us with questions regarding your product.

Product Support Reminders and Alerts

We'll contact you with any important product maintenance reminders and alerts.

Special Promotions

Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit www.BISSELL.com/registration now!

BISSELL Consumer Care

For information about repairs or replacement parts, or questions about your warranty:

Call:

BISSELL Consumer Care
1-800-237-7691

Monday - Friday	8 am - 10 pm ET
Saturday	9 am - 8 pm ET
Sunday	10am - 7pm ET

Email:

www.BISSELL.com

Visit the BISSELL website: www.BISSELL.com

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____

Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 11 for details.



©2014 BISSELL Homecare, Inc.
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 160-4905 Rev 06/14
Visit our website at: www.BISSELL.com