



POWERFRESH®

DELUXE PLUS / DELUXE PLUS PET


SCRUBBING & SANITIZING STEAM MOP

1806 SERIES

Important Safety Instructions.....	2
What's in the Box?	2
Assembly	3
Getting Ready to Clean.....	3
Steam Cleaning & Sanitizing.....	4
After-Cleaning Care.....	6
Troubleshooting.....	7
Warranty	7

Product Overview

- | | |
|-------------------------------------|---------------------------|
| A. Handle | G. Mop Foot Release Lever |
| B. In-Use Cord Clip | H. Scent Disc Tray |
| C. Quick Release™ Cord Wrap | I. Removable Mop Foot |
| D. Water Tank | J. Microfiber Mop Pad |
| E. Smart Set Steam Control | |
| F. SpotBoost™ Scrubbing Steam Brush | |

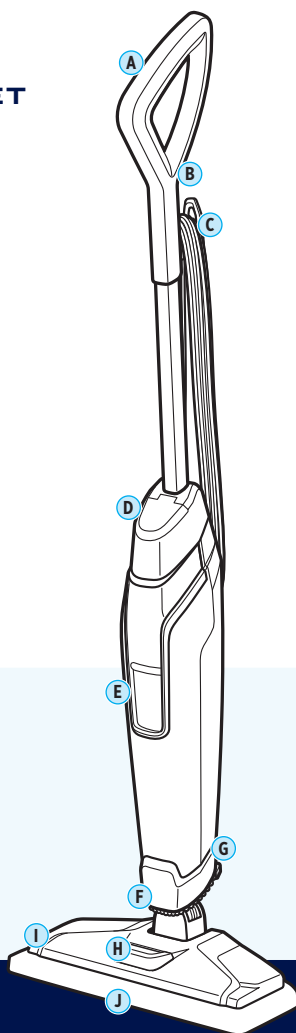

Meet your new BISSELL® product!

Go to support.BISSELL.com for a walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Children should be supervised to ensure that they do not play with the appliance.
- If the cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Use extra care when cleaning on stairs.
- Do not use outdoors.
- Always turn off this appliance before connecting or disconnecting the nozzle. Do not direct steam at people, animals or at electrical outlets.
- Store indoors.
- Unplug from outlet when not in use and before conducting maintenance or troubleshooting.
- Do not leave steam cleaner unattended.
- Do not service steam cleaner when it is plugged in.
- Do not handle steam cleaner with wet hands.
- Do not use steam cleaner if it has been dropped, damaged, left outdoors or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, or expose cord to heated surfaces.
- Do not unplug by pulling on cord.
- Do not use appliance in an enclosed space filled with vapor given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not allow to be used as a toy.
- Do not use on leather, wax polished furniture or floors, synthetic fabrics, velvet, or other delicate, steam-sensitive materials.
- Do not immerse in water or liquid.
- Not for space heating purposes.
- Do not use for any purpose other than described in this user guide.
- Use only manufacturer's recommended attachments – use of attachments not provided or sold by BISSELL may cause fire, electric shock or injury.
- Never put descaling, aromatic, alcoholic, detergent, or vinegar products into the steam cleaner, as this may damage it or make it unsafe for use.
- Unplug by grasping the plug, not the cord.
- Close attention is necessary when used by or near children.
- Do not leave appliance when it is plugged in.
- Use indoors only.
- Use only on surfaces moistened by cleaning process.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorized service center.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Turn OFF all controls before plugging or unplugging appliance.
- Do not carry while in use.
- Do not turn over the steam-cleaning nozzle, or touch the surface of the nozzle when using the steam-cleaner.
- Do not touch the steam-cleaning nozzle or adjacent surfaces when steam-cleaning or when the nozzle is heated.
- Do not apply steam directly to any person or animal.
- Do not turn your appliance ON until you are familiar with all instructions and operating procedures.
- Keep appliance on a level surface.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

COMMERCIAL USE OF THIS UNIT voids THE MANUFACTURER'S WARRANTY.

 
THIS APPLIANCE HAS A POLARIZED PLUG To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.

IMPORTANT INFORMATION

- To reduce the risk of a leaking condition, do not store where freezing may occur. Damage to internal components may result.
- Plastic tanks are not dishwasher safe. Do not put tanks in dishwasher.

TOOLS INCLUDED IN BOX WILL DIFFER BY MODEL

To see what's included with your purchase,
check the "Carton Contents" list on the top flap of the box.



Handle




Body




Mop Foot



Screw

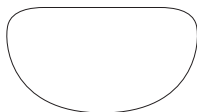

Soft Mop Pad
(may be attached
to foot)

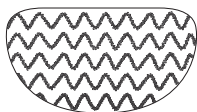

Scrubby Mop Pad(s)
(may be attached
to foot)




Scent Discs
(varies by model)




Carpet
Refresher Tray
(select models only)

Assembly

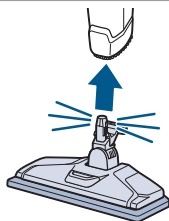

1. Attach lower body to mop foot by snapping into place.

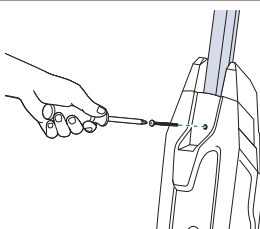

2. Insert handle into body of unit and screw until tightened.




3. Wrap cord. To easily unwrap, turn the Quick Release Cord Wrap down.

Getting Ready to Clean

Note: Use of **distilled water** in place of tap water is recommended for optimal steam performance and to prolong the life of your steamer.


To add a fresh scent as you clean, try BISSELL® Demineralized Waters in scents like Citrus, Eucalyptus Mint and Spring Breeze. **Do not use chemicals in the water tank of your machine.** Other solutions may harm the machine.

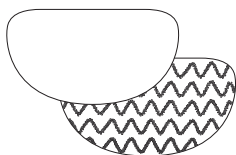


1. Choose your mop pad.

Soft Pad: Best for everyday use on delicate flooring like sealed hardwoods and laminate.

Scrubby Pad: Best for more durable flooring like tile, scrubbing heavily soiled floors or cleaning tougher messes.

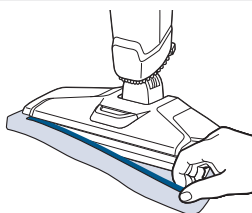


2. To attach mop pad, wrap mop pad around the bottom of the foot, making sure the gray stitching is located on the front of the foot and the Quick Grip Release™ Tab is located on the back.

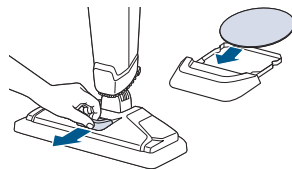

3. Optional: Add scent disc. Use a whole disc or cut in half. To insert scent discs, pull the tray on top of mop head. Load disc and reinstall tray.



4. Lift the water tank cap straight up to open.

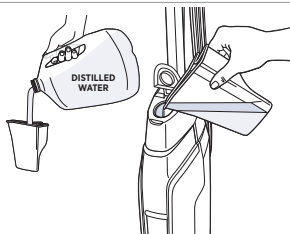

5. Using measuring cup, slowly pour 560 mL (19 oz) of water into the water tank.



6. Close the water tank cap after filling.




Steam Cleaning & Sanitizing*



Your handheld steam cleaner was tested by third-party laboratories under controlled conditions to ensure it sanitizes and kills 99.9% of germs, bacteria and viruses, including Coronavirus and Influenza viruses*. Please use as directed; your results may vary.

*Kills 99.9% of Human Coronavirus (Strain 229E), Influenza A Virus (H1N1), Staphylococcus aureus, Klebsiella aerogenes, and Aspergillus niger when used as directed. Testing conducted in a third-party laboratory under controlled conditions. Results may vary.




Cleaning Tips

- Before using your steam mop to clean and sanitize*, thoroughly sweep or vacuum floor.
- Your steam mop is designed to clean sealed hard floors, including ceramic tile, laminate, marble, stone and hardwood floors. The steam mop is not intended for use on vinyl, vinyl plank, linoleum, or unsealed floors. Use of your steam mop on waxed or some unwaxed floors may result in a diminished glossiness. For best results and to prevent damage to flooring, always check the care instructions from your floor manufacturer and test in an inconspicuous area before use. Do not use the steam mop if you notice any damage to your flooring prior to, during, or after use.

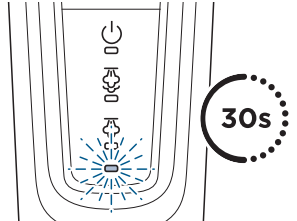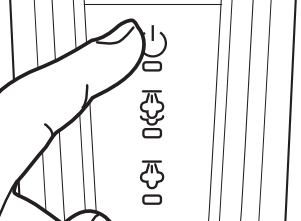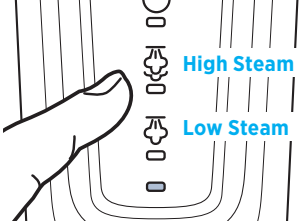		
1. Plug the machine into a properly grounded outlet. The Steam Ready light will start to blink. Wait 30 seconds for machine to heat up until light turns solid. Note: During first use or after refilling the water tank, the pump may make a “knocking” sound. This is normal and will diminish after a few seconds.	2. Press the STEAM ON/OFF button to turn machine ON.	3. Press your desired steam level button. High Steam: For cleaning durable floors or tough, stuck-on or sticky messes. Low Steam: For delicate floors or for light, everyday cleaning.

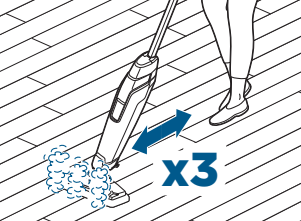
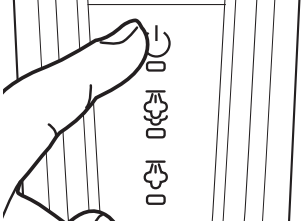
		
4. To begin cleaning, step on the back of the mop foot to recline the body of the machine. Note: Pedal on back of machine is to remove mop foot and is not a reclining lever.	5. To sanitize an area of your floor, use the microfiber mop pad and slowly and evenly move machine back and forth at least three times over the area using continuous steam. Remove the mop pad after use and wash.	6. When finished cleaning, turn the machine OFF by pressing the power button. Unplug the unit.

Using the SpotBoost™ Scrubbing Steam Brush for Tough Messes

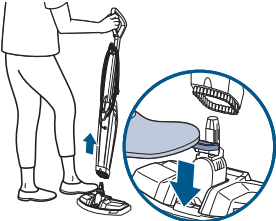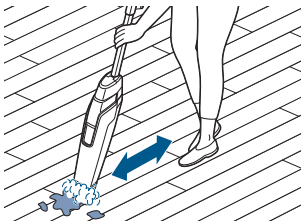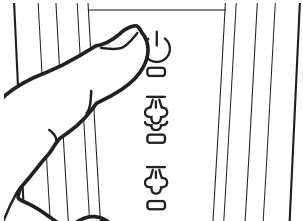
		
1. Step on the pedal on the back of the machine, lifting up and away from the mop foot to expose the SpotBoost Brush.	2. Move back and forth to easily clean grout, crevices and scrub away stuck-on or sticky messes.	Tip: Turn off the machine before and after using SpotBoost Brush to prevent from coming into contact with steam.

Using Carpet Refresher Tray


This product is not intended to be used as a carpet cleaner, only a carpet refresher. Never attempt to use steam mop on carpet or rugs without the carpet refresher tray in place. Move steam mop with carpet refresher tray attached in a continuous motion until you are finished. DO NOT leave mop in a stationary position.

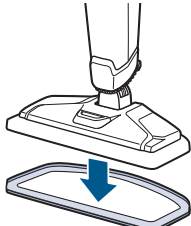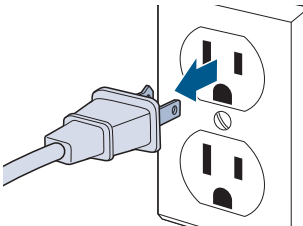		
1. Place mop head, with soft mop pad attached, in carpet refresher tray. Note: Always be sure a mop pad is in place before placing in carpet refresher tray. Only soft mop pads should be used with the carpet refresher. Do not use carpet refresher on spots or stains, or glide it over the same spot for longer than 20 seconds.	2. Refresh carpet or rugs by moving steam mop with carpet refresher tray attached in a continuous back and forth motion and gently glide over carpet or rug, releasing steam as you go. Note: The steam mop rests in the carpet refresher tray and may pull out. If this happens simply place the mop head back in to the tray.	3. When your finished refreshing your carpet or rugs, turn the power OFF, unplug the steam mop and remove from carpet or rug.

After-Cleaning Care

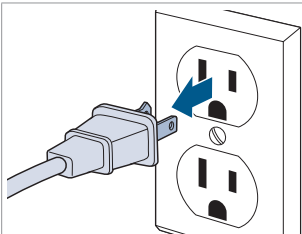


1. Turn OFF and unplug the machine from the grounded outlet.

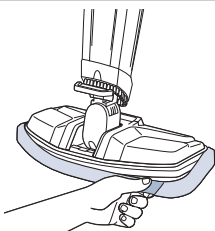


2. Carefully remove mop pad using the Quick Grip Release Tab from the mop head.


Note: Mop pad, mop foot and lower assembly may be hot.

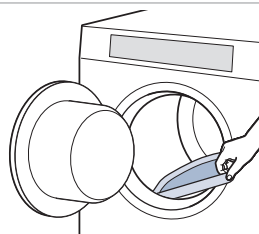


3. Mop pads can be machine washed in warm water. Use only non-bleach liquid detergents. Do not use fabric softeners or bleach. For best results, air dry.

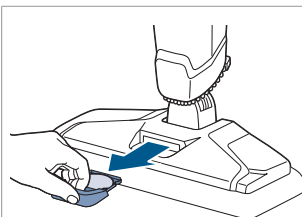

4. Remove the scent disc from the scent disc tray or replace as needed.

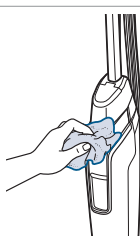

5. Wipe all surfaces of the machine with a soft cloth.

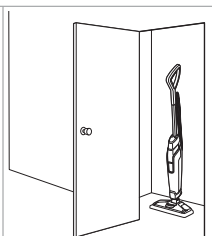

6. Store upright in a protected, dry area.

Note: When finished using the product, wrap cord around cord wrap for storage. Store unit indoors in a dry location in an area where the product is not likely to get damaged.

Troubleshooting

🔧 Below are some of the issues you may run into. If you don't see the issue you're experiencing below, visit support.BISSELL.com.

Problem	Possible Cause	Remedies
Reduced steam OR no steam	Water tank empty.	Refill tank.
	Steam level not selected.	Wait until Steam Ready light stops blinking and is solid, push the POWER ON/OFF button and then select the desired steam level button.
	Scented disc tray not installed properly.	Push the scented disc tray all the way into the unit until it's flush.
	ON/OFF button not pressed.	Wait until Steam Ready light stops blinking and is solid and then push the POWER ON/OFF button.
	Mineral deposits from hard water caused clog.	Contact BISSELL Consumer Care at support.BISSELL.com or call 1-800-237-7691
Streaking	Dirty mop pad.	Remove and wash pad per instructions before further use.
	Use on waxed or oiled floor.	If you have used floor polishes or wax on your floors, steam products may decrease glossiness. Refer to the wax or polish manufacturer. If you don't wax or polish your floors, check the floor care instructions from your flooring manufacturer.
Leaking	Mop pad is too wet.	Remove and replace with dry mop pad.
	Steam level is too high.	Lower the steam level.
	Crack in unit or water tank.	Check to see if there are any cracks on the unit or tank and check to make sure the rubber gasket on the tank is still attached and seated properly in the unit.
Knocking noise	First use or water tank is empty.	Fill water tank and knocking will diminish after a few seconds.

Note: Any other servicing should be performed by an authorized service representative.

Warranty

Limited 2-year warranty, may vary by state. Visit support.BISSELL.com or call 1-800-237-7691 for complete warranty information.

Terms and Conditions

Your purchase is subject to the BISSELL® Terms and Conditions, which includes dispute resolution through arbitration and class waiver. For complete terms or to opt out from arbitration or class waiver, visit BISSELL.com/terms-of-use or call 1-800-237-7691.



Every purchase makes it possible for BISSELL to continue our support of BISSELL Pet Foundation® and its mission of saving pets in need. Since 2011, BISSELL has donated over \$26 million in support of BISSELL Pet Foundation®. When you purchase a BISSELL® product, you help save pets, too. Our products are engineered to clean even the toughest messes so pets can stay at home and out of shelters.

Visit **BISSELLsavespets.com** to learn more.

Need more support?

Head to **support.BISSELL.com** to troubleshoot, register your product, order spare parts, view your warranty, and more.



INFO



REGISTER



VIDEOS



PARTS



SUPPORT



©2026 BISSELL Inc. All rights reserved.
Part Number 1813049