




LITTLE GREEN®

1400, 3353, 3369, 3519 SERIES

Warranty	2	Getting Ready to Clean	5
What's in the Box?	3	Using the Tools	6
Assembly	3	After-Cleaning Care	7
Cleaning Formulas	4	Troubleshooting	8
Filling the Clean Water Tank	4		

Product Overview

1. Clean Water Tank
2. Power Button
3. Dirty Water Tank and Retainer Lever
4. Flex Hose and Clip
5. Hose Grip Bracket
6. Spray Trigger
7. Hose Grip Bracket Latch

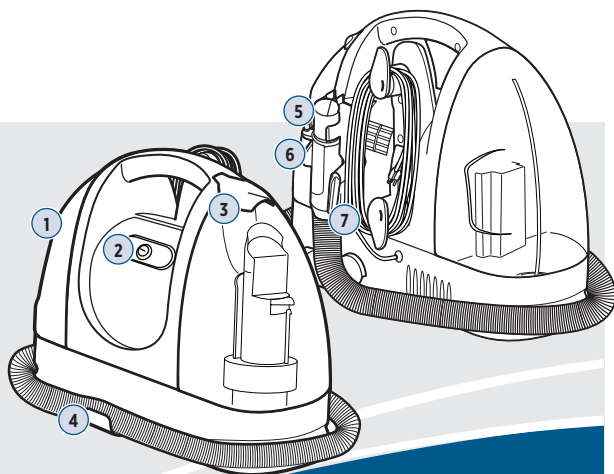

Meet your new BISSELL product!

Go to **[support.BISSELL.com](https://support.bissell.com)** for a comprehensive walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Connect to a properly grounded outlet only. See grounding instructions. Do not modify the three-prong grounded plug.
- Do not leave appliance when it is plugged in. Unplug from outlet when not in use and before servicing.
- Do not expose to rain. Store indoors.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn OFF all controls before plugging or unplugging appliance.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not use appliance in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Use only BISSELL® cleaning formulas intended for use with this appliance to prevent internal component damage. See the "Cleaning Formulas" section of this guide.
- Keep appliance on a level surface.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Liquid must not be directed towards equipment containing electrical components.
- To reduce the risk of a leaking condition, do not store where freezing may occur. Damage to internal components may result.
- Use only the type and amount of liquids specified under the operations section of this guide.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY.


COMMERCIAL USE OF THIS UNIT VOIDS THE MANUFACTURER'S WARRANTY.

WARNING

Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you aren't sure if the outlet is properly grounded. **DO NOT MODIFY THE PLUG.** If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is designed for use on a nominal 120-volt circuit, and has a grounding attachment plug that looks like the plug in the illustration. Make certain that the appliance is connected to an outlet having the same configuration as the plug. No plug adapter should be used with this appliance.

GROUNDING INSTRUCTIONS


This appliance must be connected to a grounded wiring system. If it should malfunction or break down, grounding provides a safe path of least resistance for electrical current, reducing the risk of electrical shock. The cord for this appliance has an equipment-grounding conductor and a grounding plug. It must only be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

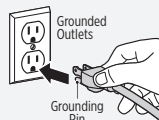

Warranty

➤ Limited 1-year warranty, may vary by state. Visit **support.BISSELL.com** or call 1-800-237-7691 for complete warranty information.

What's in the Box?

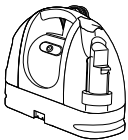					
Little Green®	Flex Hose Clip	Hose Grip Bracket	Tools (vary by model)	Trial-Size Formula (varies by model)	(1) Screw


Assembly

You will need a Phillips-head screwdriver for assembly.


Required for Assembly




Phillips-head Screwdriver

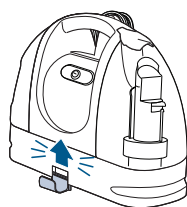


1. Slide the back plate of the flex hose clip into the opening on the front of the machine until it clicks into place.

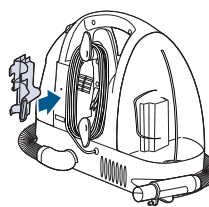

2. Take the flex hose storage bracket and slide the lower plate into the opening on the back of machine. Make sure the screw holes line up.

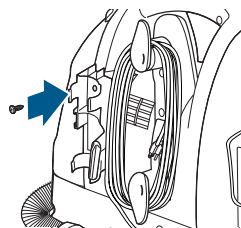

3. Insert screw and tighten with a screwdriver.

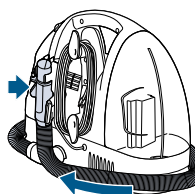

4. Wrap the flex hose around machine and place hose grip into bracket. Turn bracket latch clockwise to lock in place.

⚠ WARNING Do not plug in your portable carpet & upholstery cleaner until you are familiar with all instructions and operating procedures.


Cleaning Formulas

➤ View our family of carpet cleaning formulas for your family of mess-makers at **BISSELL.com**.


Keep plenty of BISSELL® formulas on hand so you can clean whenever it fits your schedule. Always use genuine BISSELL formulas in your machine. Other formulas may harm the machine. Do not use Hard Floor Formula on area rugs or carpet.

Certain trademarks used under license from The Procter & Gamble Company or its affiliates.


Filling the Clean Water Tank

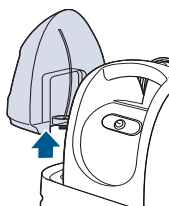

1. Remove the clean water tank by lifting it straight up and then away from the machine.

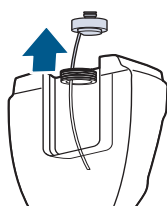


2. Unscrew the black cap at the bottom of the tank.

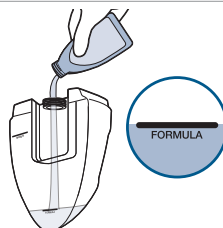


3. Add BISSELL formula to the FORMULA line.

Note: Add 1 oz of any BISSELL® Boost, if desired.

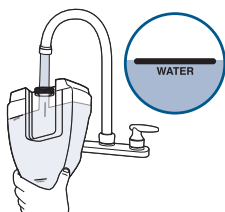

4. Fill with warm (140°F/60°C MAX) tap water to the WATER line. **Do not use boiling water. Do not heat water in the microwave.**

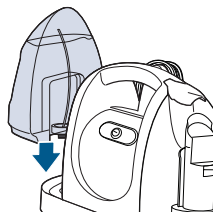

5. Replace the tank by lining up the vertical guides on the left side of the machine with the indentations on the tank and slide it down into place.

⚠ WARNING To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning formula intended for use with this machine.

Getting Ready to Clean

Tools vary by model. To shop all tools and accessories, visit [BISSELL.com/parts](https://www.bissell.com/parts).

Before You Clean

1. Vacuum to remove loose dirt from the area.
2. Spray any BISSELL® stain pretreat formula to soiled areas or stains.
3. Allow to sit for at least 3 minutes.
4. Clean following instructions below.


Choose Your Desired Tool

Tools vary by model.



3" and 4" Tools

Great for carpet stains, furniture and other hard-to-reach surfaces.

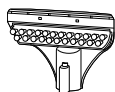

6" Tool

Great for cleaning stairs and larger furniture areas.



Pet Stain Tool

Deep injection technology cleans the carpet from the bottom up to quickly and thoroughly remove pet stains.



HydroRinse™ Self-Cleaning Hose Tool

Use to clean out your hose after each use.



Stain Trapper Tool


Messes are collected and stored in a separate, removable container, keeping pet and other liquid messes out of your machine.




Spraying Crevice Tool

Great for narrow spaces and hard-to-reach crevices.


Attaching the Tool

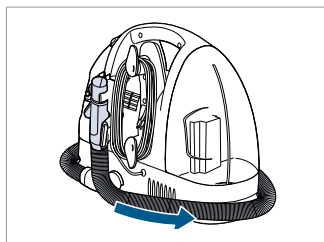


- 1.** Release the flex hose from the hose grip bracket latch and unwrap from machine.

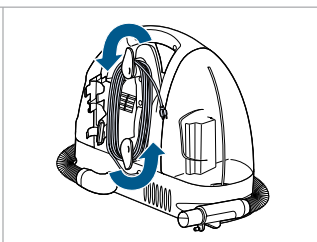

- 2.** Unwind cord and plug into outlet.

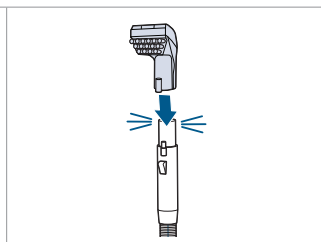

- 3.** Choose your tool and snap on the end of the hose.

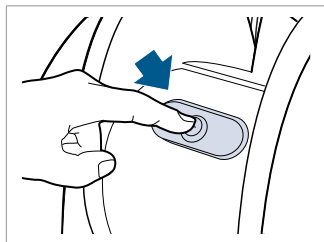

- 4.** Press the power button beneath the handle to turn it ON.


IMPORTANT

Check the manufacturer's tag before cleaning upholstery. If manufacturer's tag is missing or not coded, check with your furniture dealer. Test a small, hidden area for colorfastness and examine when dry. If color is affected do not use. Do not use on silk or velvet.

Using the Tools


▶ Search your tool on **support.BISSELL.com** for how-to videos.

Stain Trapper Tool

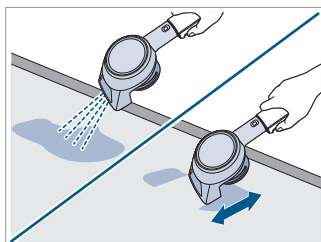

1. Point the tool approximately 1 inch above the spot or stain and press the spray trigger.

Suction up the stain by placing tool onto carpet and slowly moving backwards.

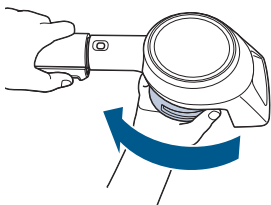


2. To empty the tool tank, rotate clockwise.




3. Pour dirty liquid into sink or toilet and rinse. Allow time to air dry.

Return the tank to the tool by lining up the grooves and twisting it into place.

3", 4", 6" and Spraying Crevice Tools

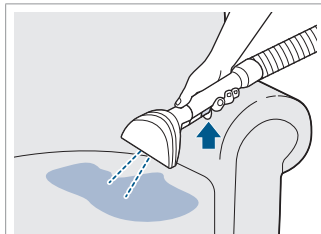


1. Point the tool approximately 1 inch above the spot or stain and press the spray trigger.

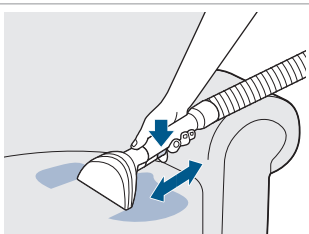


2. Release spray trigger and gently scrub the stain.

Deep Stain Tool

Note: Always keep tool in contact with carpet to avoid over-spraying.

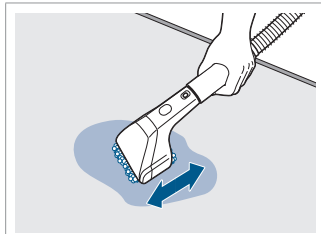

1. Set the tool directly on to the carpet and pull the trigger.


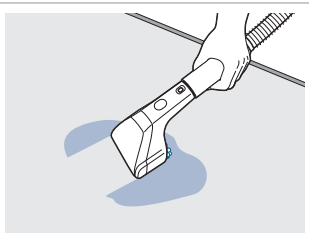


2. Scrub back and forth to suction away the spot or stain.





WARNING Keep spray away from face. Failure to do so may result in personal injury.

HydroRinse™ Tool


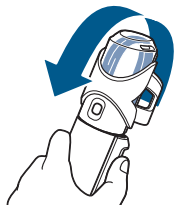
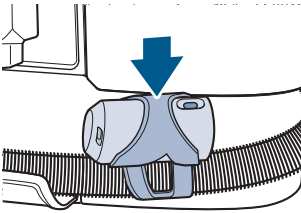
	
1. Hold the hose and tool in an upright position with the machine ON. Hold down the trigger for 30 seconds. Be sure to empty the dirty water tank after use (see below).	2. You can store tool on machine, as shown.

After-Cleaning Care


▶ Go to support.BISSELL.com for how-to videos.

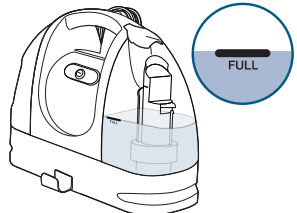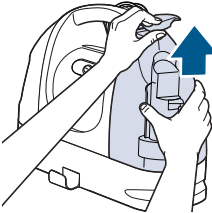		
1. Empty and rinse the dirty water tank after each use, OR when dirty water reaches the indicated maximum FULL line.	2. To remove the tank, lift up the dirty water tank retainer lever and remove the tank from the machine.	3. Empty tank by pouring dirty water into a utility sink or similar wastewater receptacle. Place tank back onto machine.

Cleaning the Tools

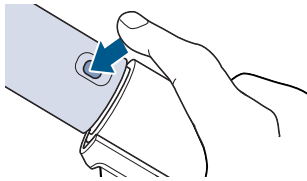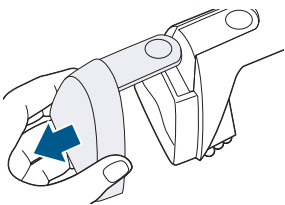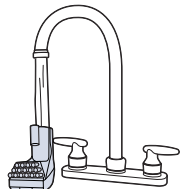		
1. To disconnect the cleaning tools, push down on the button above the hose grip and pull straight off. (Do NOT twist tool to remove it.)	2. The front cover of most tools can be removed for easy cleaning. If so, you will see a button on the top of the tool that will allow you to slide the tool cover off.	3. Rinse with water and air dry.

Cleaning the Duckbill Gasket

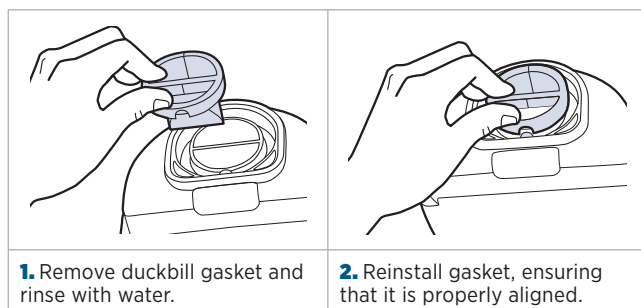

1. Remove duckbill gasket and rinse with water.

2. Reinstall gasket, ensuring that it is properly aligned.

Troubleshooting

Below are some of the issues you may run into. If you don't see the issue you're experiencing below, visit support.BISSELL.com.

Problem	Possible Cause	Remedies
Reduced spray or no spray	Spray nozzle clogged.	Clean spray nozzle.
	Clean water tank empty.	Refill tank.
	Clean water tank insert clogged.	Clean insert at bottom of tank.
	Pump needs priming.	Gently lift clean water tank while pressing the spray trigger OR gently squeeze tank while pressing spray trigger.
Machine won't pick up cleaning solution	Tank release latch is not closed properly.	Lift up the tank release latch and press down firmly to make sure it is in place.
	Poor tool position.	Reposition tool on surface, follow recommended cleaning procedures.
	Dirty water tank is full.	Empty tank.
	Tool brush worn.	Replace with new brush.
	Excess solution in flex hose.	Lift tool and point upwards to allow water in hose to flow into the dirty water tank.
	Incorrect cleaning formula.	Only use BISSELL® portable machine formulas (with BISSELL Boost if desired).
	Duckbill gasket in dirty water tank is missing or incorrectly aligned.	Clean and reinstall gasket, ensuring it is properly aligned.

Any other maintenance or servicing not included in this manual should be performed by an authorized service representative.

⚠ WARNING To reduce the risk of electric shock, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.

♥ Every Purchase Saves Pets™

BISSELL proudly supports BISSELL Pet Foundation® and its mission to help save homeless pets. When you buy a BISSELL® product, you help save pets, too. We're proud to design products that help make pet messes, odors and pet homelessness disappear. Visit BISSELLsavespets.com to learn more.