



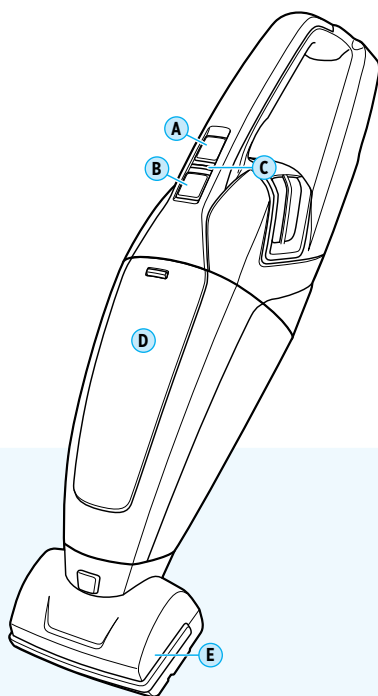 
PET HAIR ERASER®

LITHIUM ION

HAND VACUUM

2390 SERIES

Important Safety Instructions	2
Charging the Battery	3
LED Display Status	3
Using Your Vacuum	4
Emptying the Dirt Tank	5
Replacing the Filter	6
Maintaining the Brush Roll	6
LED Display Status	7
Troubleshooting	7
Warranty	7



Product Overview

- A. Power Button
- B. Dirt Tank Release Button
- C. Charging Light
- D. Dirt Tank
- E. Motorized Brush



Meet your new BISSELL® product!

Go to support.BISSELL.com for a walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not handle charger, including charger plug and charger terminal with wet hands.
- Do not charge the unit outdoors.
- Do not incinerate the appliance even if it severely damaged. The batteries can explode in a fire.
- Use extra care when cleaning stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without dust cup or filters in place.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Always turn off this appliance before connecting or disconnecting the motorized nozzle.
- Do not pull or carry charger by the cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord.
- Prevent unintentional starting. Ensure the switch is in the OFF position before picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C/265°F may cause explosion.
- Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.
- Keep the temperature range of between 40-104°F when charging battery, storing unit or during use.
- Use only with LUCKY DRAGON charger, Model BLI15WIG74060P-U.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Do not plug in your vacuum UNTIL you are familiar with all instructions and operating procedures.
- To reduce the risk of electrical shock, turn power switch OFF and disconnect plug from electrical outlet BEFORE performing maintenance or troubleshooting checks.
- Use only on dry, indoor surfaces.
- This appliance contains batteries that are non-replaceable.
- Battery pack, charging port on the appliance and charger output are not to be short-circuited.
- Turn OFF all controls, including the Power Switch and disconnect charger from electrical outlet before making any adjustments, performing maintenance, troubleshooting, changing accessories or storing appliance. Such preventative safety measures reduce the risk of starting the appliance accidentally.
- Unplug charger from electrical socket when not in use, before cleaning maintaining or servicing the appliance.
- Risk of injury from moving parts. Brush may start unexpectedly. Turn OFF before cleaning or servicing.
- The battery must be removed from the appliance before it is scrapped.
- Do not charge with damaged charger or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors or dropped into water, have it repaired by a qualified technician. Do not unplug charger by pulling on cord. To unplug, grasp the charger plug, not the cord.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY. COMMERCIAL USE OF THIS UNIT voids THE MANUFACTURER'S WARRANTY.

SUPPLIER'S DECLARATION OF CONFORMITY 47 CFR SECTION 2.1077 COMPLIANCE INFORMATION

 
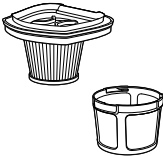 
 
 
 
Charger adapter for BISSELL product. CONTACT: BISSELL Homecare Inc., 2345 Walker Ave. NW, Grand Rapids, MI 49544. This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/TV technician for help.

NOTICE Disconnecting the battery will destroy the appliance and invalidate the warranty.

⚠ WARNING This product contains Lithium-Ion rechargeable batteries. DO NOT mix Lithium-Ion batteries with general household waste. According to Federal and State regulations, removal and proper disposal of Lithium-Ion batteries is required. For specific battery disposal instructions please contact Call2Recycle at 877-723-1297 or visit www.call2recycle.org. For full instructions on battery removal for recycling visit support.BISSELL.com.






What's in the Box?

			
Hand Vacuum	Charging Adapter Plug	Filter	Motorized Brush
			
Crevice Tool	Upholstery Tool	2-in-1 Dusting Brush (select models)	



Charging the Battery

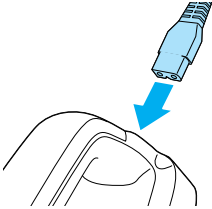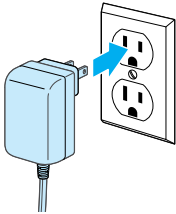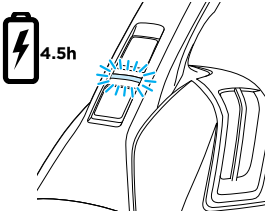   IMPORTANT: Turn power OFF prior to charging. Failing to do so may result in battery not fully charging

		
1. Insert charging adapter plug into charging port on back of machine.	2. Plug adapter into suitable outlet.	3. Power LED lights illuminate. Charge machine for 4.5 hours before first use.

Note: It is normal for adapter to become warm during charging.


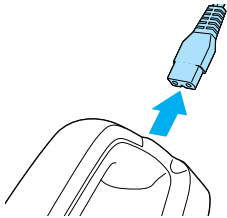 
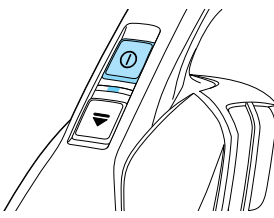 
Using Your Vacuum

	
1. Unplug machine from charging adapter.	2. Push power button ON.




Note: The LED light will shine GREEN while in use. When the battery level gets low, the LED light will blink RED. When the battery is fully discharged, the LED light will shut off completely.

Using the Motorized Brush

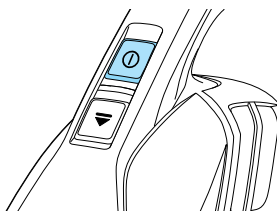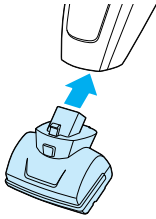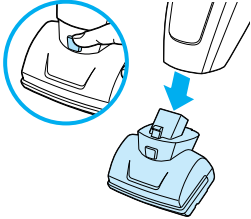   The motorized brush can be used to vacuum stairs, upholstery and other hard-to-reach areas.


		
1. To attach motorized brush, make sure machine is powered OFF.	2. Firmly insert motorized brush into nozzle of hand vac until it clicks into place.	3. To detach, make sure machine is powered OFF. Press button on top of motorized brush and pull brush out.

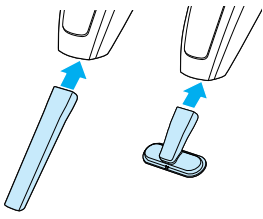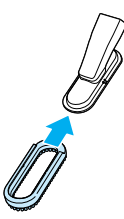   Using the Tools

		
1. Insert tool into end of hand vacuum and power ON.	2. Combine tools if desired. Note: Upholstery tool rotates clockwise and counterclockwise for cleaning convenience.	3. If your hand vacuum came with the 2-in-1 dusting brush, slide it onto upholstery tool until it clicks into place.

Emptying the Dirt Tank & Replacing the Filter

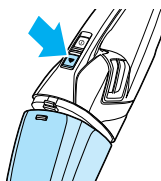 
The dirt tank should be emptied before debris reached FULL line.



1. Power OFF. To remove dirt tank, hold vacuum vertically and press dirt tank release button.



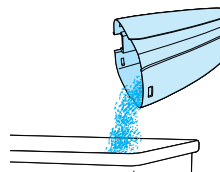 
2. Grip filter tabs and pull up to remove.



3. Empty dirt tank.




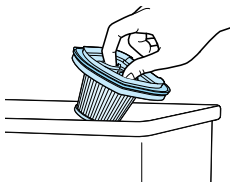 4. Turn filter counterclockwise and lift out of cup.



5. To remove debris, tap filter firmly against inside of trash receptacle.

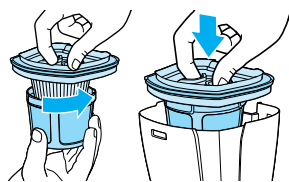 Note: Filter and filter cup may be hand washed in warm water and mild dish detergent. Rinse thoroughly and dry completely before reinstalling.




6. Reinstall filter into cup by turning clockwise and lock into place. Place filter cup back into dirt tank.

7. Reattach tank to hand vacuum until it clicks into place.


WARNING

- To reduce the risk of electric shock, turn power switch OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.
- Do not operate vacuum with damp or wet filters, as well as without filters or the dirt tank in place. Allow components to dry before reassembling the dirt tank.


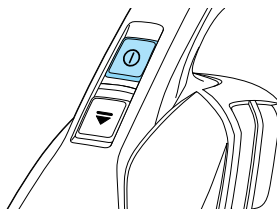 
Maintaining the Brush Roll




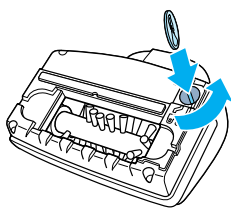 
1. Turn vacuum OFF and remove motorized brush. See page 4.



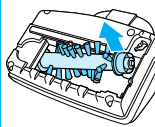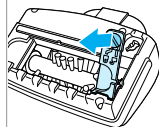  
2. Turn coin counterclockwise to unlock access plate.



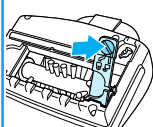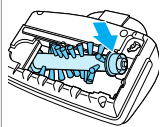  3. Remove access plate. Lift brush roll out to remove. Clean out bristles and sides of brush roll.



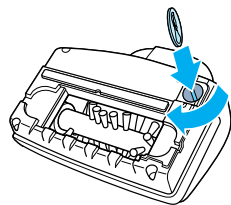 4. Reinstall brush and access plate.



5. Turn coin clockwise to lock access plate.

⚠ WARNING To reduce the risk of electrical shock, turn power switch OFF and disconnect polarized plug from electrical outlet BEFORE performing maintenance or troubleshooting checks.

LED Display Status

Battery Status	Light Status
IN USE	
In Use	Solid green light
Low Power	Blinking red light (.5 seconds)
No Power	Solid red light (3 seconds)
Brush Stall	Solid red light, then machine turns off

Battery Status	Light Status
CHARGING	
Charging	Blinking red light (1 second)
Fully Charged	Green light (on 10 minutes, then blinks every 1 minute)
Charger/Battery Error	Red and green blinking light, contact Consumer Care
Battery/Motor Issue	Red and green blinking light, contact Consumer Care

Troubleshooting

🔧 Below are some of the issues you may run into. If you don't see the issue you're experiencing below, visit support.BISSELL.com.

Problem	Possible Cause	Remedies
Hand vacuum won't turn ON	Battery is fully discharged.	Charge battery. Follow charging battery instructions on page 5.
Low suction	Dirt tank is full.	Empty dirt tank.
	Dirt tank is not installed properly.	Position dirt tank correctly and snap firmly into place.
	Filters need cleaning.	Follow filter instructions on page 5.
	Filters need replacing.	Visit BISSELL.com to order replacement filters.
	Battery needs charging.	Charge battery. Follow battery charging instructions on page 3.
	Clog in tool.	Remove tool from vacuum. Clear debris from both ends of tool.
Visible dirt escaping from vacuum	Dirt tank is full.	Empty dirt tank.
	Filter is missing or installed incorrectly.	Check filter for correct installation.
Vacuum won't charge	Machine is in the ON position.	Set hand vacuum in OFF position.
	Not the correct charger.	Use only charger that comes with machine. Correct charger model # is listed on white warning label on hand vac.

Note: Any other servicing should be performed by an authorized service representative.

Warranty

Limited 1-year warranty, may vary by state. Visit support.BISSELL.com or call 1-800-237-7691 for complete warranty information.

Terms and Conditions

Your purchase is subject to the BISSELL® Terms and Conditions, which includes dispute resolution through arbitration and class waiver. For complete terms or to opt out from arbitration or class waiver, visit BISSELL.com/terms-of-use or call 1-800-237-7691.

⚠️ WARNING To reduce the risk of electrical shock, turn power switch OFF and disconnect polarized plug from electrical outlet BEFORE performing maintenance or troubleshooting checks.



Every purchase makes it possible for BISSELL to continue our support of BISSELL Pet Foundation® and its mission of saving pets in need. Since 2011, BISSELL has donated over \$26 million in support of BISSELL Pet Foundation. When you purchase a BISSELL® product, you help save pets, too. Our products are engineered to clean even the toughest messes so pets can stay at home and out of shelters.

Visit **BISSELLsavespets.com** to learn more.

Need more support?

Head to **support.BISSELL.com** to troubleshoot, register your product, order spare parts, view your warranty, and more.



INFO



REGISTER



VIDEOS



PARTS



SUPPORT



©2026 BISSELL Inc. All rights reserved.
Part Number 1690889