


BOLT[®] LITHIUM MAX PET

Cordless Hand Vacuum

USER GUIDE
2133 SERIES

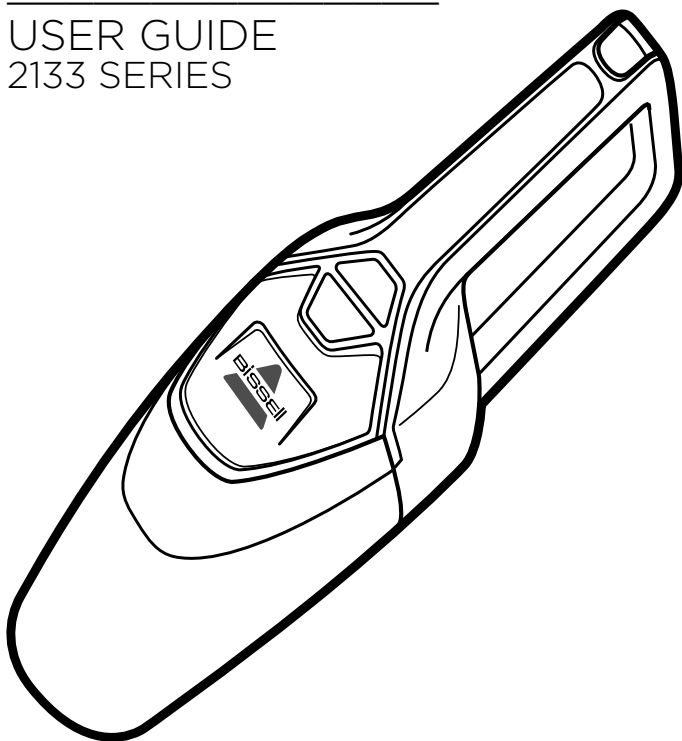

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR VACUUM.

Always connect to a polarized outlet (one slot is wider than the other) for charging. Unplug from outlet when not in use and before conducting maintenance. When using an electrical appliance, basic precautions should be observed, including the following:

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts. Brushroll continues to rotate when in the upright position.
- » Brushroll continues to turn while product is turned on and handle is in upright position. To avoid damage to carpet, rugs, furniture and flooring, avoid tipping cleaner or setting it on furniture, fringed area rugs, or carpeted stairs during tool use.
- » With brushroll on, do not allow cleaner to sit in one location for an extended period of time, as damage to floor can result.
- » Do not use outdoors or on wet surfaces.
- » Do not allow to be used as a toy.
- » Close attention is necessary when

used by or near children.

- » Do not use for any purpose other than described in this User's Guide.
- » Use only manufacturer's recommended attachments.
- » Do not use with damaged cord or plug.
- » If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- » Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- » Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- » Do not handle charging base, including plug and charging base terminal with wet hands.
- » Do not charge the unit outdoors.
- » Use only the charger supplied by the manufacturer to recharge.
- » Do not incinerate the appliance even if it severely damaged. The batteries can explode in a fire.
- » Do not put any object into opening.
- » Do not use with any opening blocked.

- » Keep openings free of dust, lint, hair and anything that may reduce airflow.
- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- » Use extra care when cleaning stairs.
- » Do not pick up flammable materials (lighter fluid, gasoline, kerosene, etc.) or use in the presence of explosive liquids or vapors.
- » Always turn off this appliance before connecting or disconnecting the motorized nozzle.
- » Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- » Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- » Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- » Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- » Do not use without dust cup or filters in place.
- » Use only on dry, indoor surfaces.
- » Keep appliance on a level surface.

SAVE THESE INSTRUCTIONS FOR FUTURE USE

This model is for household use only.

Thanks for buying a BISSELL BOLT® Lithium!

 
We love to clean and we're excited to share one of our innovative products with you. We want to make sure your vacuum works as well as it does today in years to come, so this guide has tips on using (page 6), maintaining (pages 7-9), and if there is a problem, troubleshooting (page 10).

Your vacuum may require charging before you can put it to work, so flip to page 5 and let's get started!


What's In Your Box?



Pet and Debris
Nozzle Tool



Charging
Adapter


 


Crevice Tool w/
Dusting Brush

NOTE: Standard accessories may vary by model.

Safety Instructions.....	2	Troubleshooting.....	10
Product View.....	4	Warranty.....	11
Assembly	5	Service.....	11
Operations	6	Product Registration.....	12
Maintenance & Care	7-9	Consumer Care.....	12

Getting to Know Your BOLT[®] Lithium

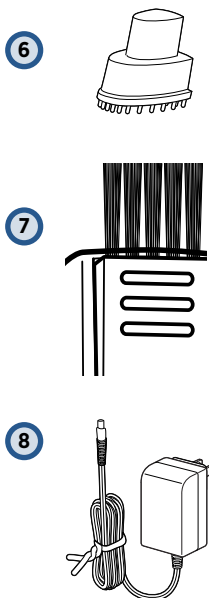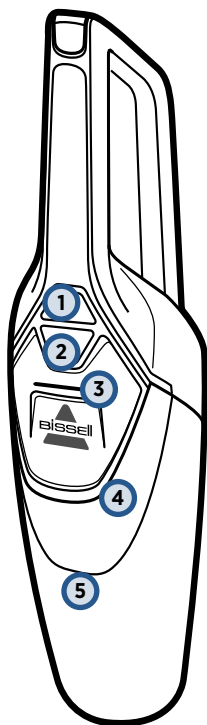

- | | |
|---------------------------------------|---------------------------------|
| 1 Hand Vacuum Power Button | 5 Dirt Cup |
| 2 Dirt Cup Release Button | 6 Pet and Debris Nozzle Brush |
| 3 Charging & Battery Status Indicator | 7 Crevice Tool w/ Dusting Brush |
| 4 Washable Filter Assembly | 8 Charging Adapter Plug |

Assembly




WARNING

Do not plug in your BOLT® Lithium until you are familiar with all instructions and operating procedures.

Your BISSELL BOLT® Lithium Max Pet hand vacuum does not require any assembly. Charge up to 4 hours before use, or until the Charging and Battery Status Indicator light behavior indicates that the battery is full.


Charging

1

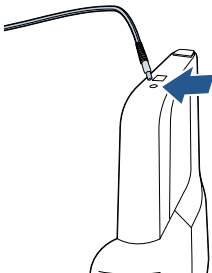

The charging port is located on the back of the hand vacuum handle. Plug the adapter cord into the opening.

2

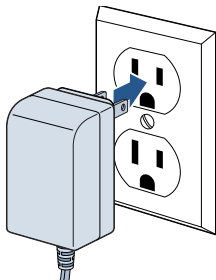

Plug the adapter into the wall outlet.


NOTE: Check your Charging and Battery Status Indicator to determine the battery status while charging and using.

LED Display: Charging and Battery Status Indicator

Battery Status	LED Color	Light Behavior
While in Use	Blue	3 solid lights
While Charging	Blue	3 solid lights for 10 minutes, then flashes once per minute
100%	Blue	3 solid lights for 10 minutes, then flashes once per minute
66-99%	Blue	2 lights on, 1 light blinking
33-65%	Blue	1 light on, 1 light blinking
1-32%	Blue	1 light blinking
0%	Red	1 light blinking quickly


Using Your BOLT Hand Vacuum

1

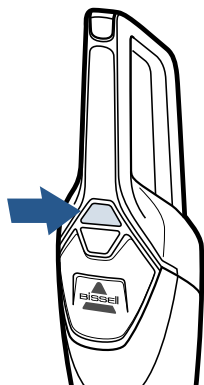

Press the power button to begin cleaning.


2

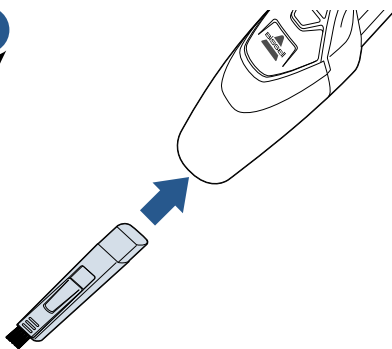


To attach any of the included tools, insert the desired tool firmly into the hand vacuum nozzle.

Hand Vacuum Tools

Depending on the model purchased, the tools and accessories included may vary. All tools and accessories for BOLT hand vacuum are available for purchase at www.BISSELL.com.

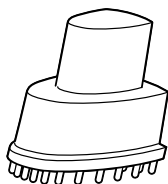

The Pet Hair Nozzle has rubberized teeth to pull and lift up embedded hair and dirt.

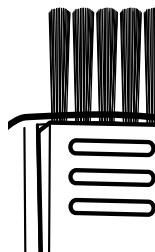


The Crevice Tool w/ Dusting Brush reaches narrow spaces and is delicate on upholstery.

Maintenance: Emptying the Dirt Cup

WARNING

To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.

1

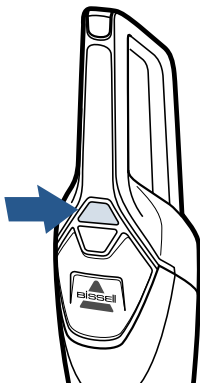


Make sure the vacuum is OFF by pressing the power button.

2




Find the dirt cup removal button and press to remove the dirt cup from hand vacuum.

3

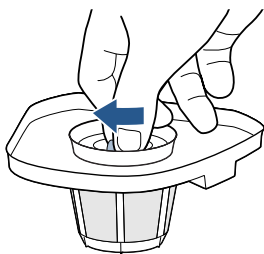

With the dirt cup removed, locate the filter removal tab in the center of the filter assembly. Firmly grasp the tab and turn clockwise to operate the Clean-Turn feature. As you turn the tab, the filter will turn and help clean off excess dirt and debris.

4

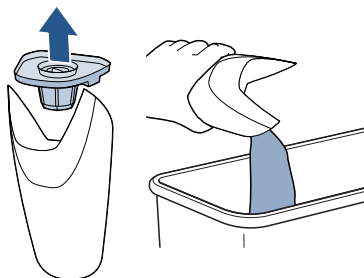


Firmly grasp the tab and pull up to remove the filter from the dirt cup. Empty the dirt cup into a waste receptacle.

WARNING

Do not operate your BOLT® Lithium with damp or wet filters or without filters in place.


Maintenance: Filters

TIP: It may be helpful to turn the filter assembly over and view the underside locking parts before completing steps 1 - 6.

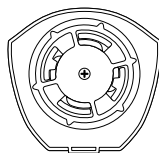


underside view of filter

1

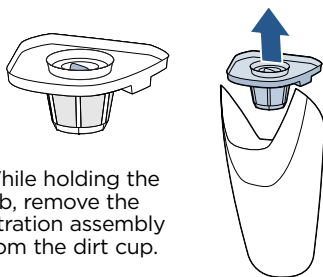


While holding the tab, remove the filtration assembly from the dirt cup.

2

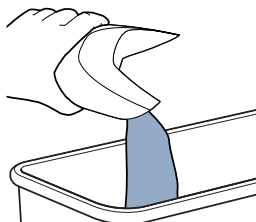

Empty the dirt cup into a waste receptacle.


3

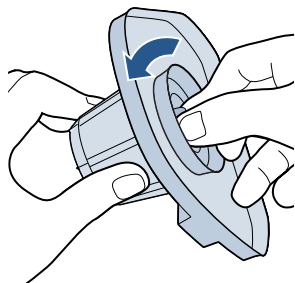

To disassemble for thorough cleaning, firmly grasp the filter assembly tab with one hand and the mesh filter frame with the other.


Turn the tab to the left (counterclockwise) to unlock from the mesh filter frame.

4

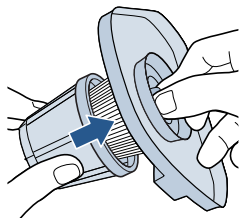

To re-assemble the filter, insert the pleated filter into the mesh filter frame.

5

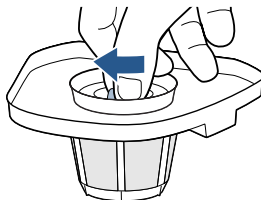

While firmly holding the mesh filter frame, turn the tab to the right (clockwise) to lock the pieces together.

NOTE: You may rinse the filter and frame in warm water to clean. The filter and frame need to be 100% dry before reuse. The key to maximum performance is having a clean filter. Cleaning the filter after each use will help your vacuum operate at peak efficiency.

Maintenance: Disposal of Batteries


WARNING

This product contains Lithium Ion rechargeable batteries. According to Federal and State regulations, removal and proper disposal of Lithium Ion batteries is required. For removal of the batteries in your Bolt Lithium, see instructions on this page.



NOTICE: Disconnecting the battery will destroy the appliance and invalidate the warranty.

NOTE: If your Bolt Cordless Hand Vacuum is to be disposed of, the batteries should be removed and disposed of properly.

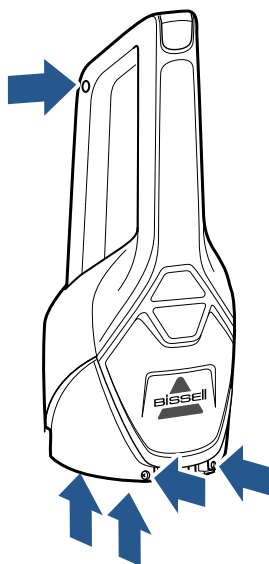

- Unplug the charger.
- Remove hand vac from unit and remove dirt cup from handle.
- Remove (2) Phillips head screws and remove the lens from the hand vacuum.
- Remove (2) Phillips head screws from the hand vacuum cover.
- Lift off the hand vacuum cover and take out the push rod.
- Remove (5) Phillips head screws from the side of the hand vacuum.
- Remove the entire battery assembly from the cover.
- Cut wires from the PCB and wrap the wire ends with insulation tape.
- Keep Battery Pack together – DO NOT separate individual batteries. For specific disposal instructions of batteries, please contact RBRC (Rechargeable Battery Recycling Corporation) 1-800-822-8837 or visit www.rbrc.com.
- Discard remainder of product.

Troubleshooting

WARNING

To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.

Problem	Possible causes	Remedies
Vacuum won't turn on	Battery isn't fully charged	Charge battery. Follow charging battery instructions on page 5
	Wrong charger being used	Be sure to use only the charger supplied with your product. The label on the detachable hand vacuum will list which charger can be used.
Vacuum cleaner has low suction	Dirt container is full	Empty dirt container
	Dirt container is not installed properly	Position container correctly and snap firmly into place
	Filters need cleaning	Follow filter instructions on page 7
	Filters need replacing	Visit www.bissell.com or call 1-800-237-7691 to order replacement filters
Visible dirt escaping from cleaner	Dirt container is full of debris	Empty dirt container
	Filter is missing or installed incorrectly	Check filter for correct installation
	Dirt container installed incorrectly	Position container correctly and snap firmly into place
Vacuum won't charge	Not the correct charger	Use only the charger that comes with the machine

Please do not return this product to the store.

Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.

For any questions or concerns, BISSELL is happy to be of service. Contact us directly at 1-800-237-7691.

Warranty

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care by E-mail, telephone, or regular mail as described below.

Limited Two-Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for two years any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

BISSELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE TWO YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you.

NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim.

Service

If your BISSELL product should require service:

Contact BISSELL Consumer Care to locate a BISSELL Authorized Service Center in your area. If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Care.

Website:

www.BISSELL.com/service-centers

E-mail:

www.BISSELL.com/email-us

Call:

BISSELL Consumer Care

1-800-237-7691

Monday - Friday 8am - 10pm ET

Saturday 9am - 8pm ET

Sunday 10am - 7pm ET

Please do not return this product to the store.

Other maintenance or service not included in the manual should be performed by an authorized service representative.

For any questions or concerns, BISSELL is happy to be of service. Contact us directly at 1-800-237-7691.

Register your product today!

Registering is quick, easy and offers you benefits over the lifetime of your product.

You'll receive:

BISSELL Rewards Points

Automatically earn points for discounts and free shipping on future purchases.

Faster Service

Supplying your information now saves you time should you need to contact us with questions regarding your product.

Product Support Reminders and Alerts

We'll contact you with any important product maintenance reminders and alerts.

Special Promotions

Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit **www.BISSELL.com/registration**!

Visit us online at: **BISSELL.com**

When contacting BISSELL, have model number of cleaner available.

Please record your

Model Number: _____

Please record your

Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 15 for details.

*We can't wait
to hear from you!*

We really do read
your comments, tweets,
and posts.

**Rate this product on
BISSELL.com**

or any of our retailer sites
and let us (and millions of
your closest friends)
know what you think!

Parts & Supplies

For Parts and Supplies, go to BISSELL.com and enter your model number in the search field.

For cleaning tips and more visit www.BISSELL.com or find us at:



BISSELL



BISSELLClean



BISSELLClean



BISSELL

YouTube

BISSELL



©2017 BISSELL Homecare, Inc.
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 161-1404 01/17
Visit our website at: www.BISSELL.com