



MOMENTUM REWIND PET Vacuum

USER GUIDE
1792P SERIES



More of a video person? Look for this icon and go online for an instructional how-to video at

www.BISSELL.com

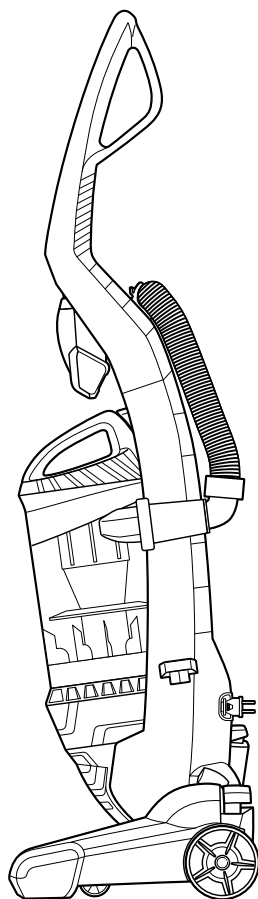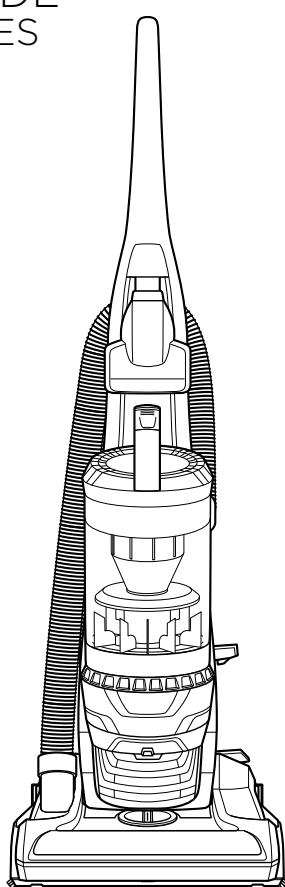

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR UPRIGHT VACUUM.

When using an electrical appliance, basic precautions should be observed, including the following:

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- » Always connect to a polarized outlet (one slot is wider than the other). Do not modify the polarized plug to fit a non-polarized outlet or extension cord.
- » Do not leave vacuum cleaner when it is plugged in. Unplug from outlet when not in use and before servicing.
- » Do not use outdoors or on wet surfaces.
- » Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- » Do not use for any purpose other than described in this User's Guide. Use only manufacturer's recommended attachments.
- » Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- » Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- » Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- » Do not handle plug or vacuum cleaner with wet hands.
- » Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- » Turn off all controls before plugging or unplugging vacuum cleaner.
- » Use extra care when cleaning on stairs.
- » Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- » Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- » Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- » Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- » Do not use without filters in place.
- » Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- » Use only on dry, indoor surfaces.
- » Keep appliance on a level surface.
- » Do not carry the vacuum cleaner while it is running.
- » Unplug before connecting or disconnecting the TurboEraser® Tool.
- » Hold plug when rewinding into cord reel. Do not allow plug to whip when rewinding.

SAVE THESE INSTRUCTIONS

This model is for household use only.

WARNING

The rotating floor brush continues to rotate while tools are in use. To reduce the risk of injury from moving parts, always move the cleaner with the carrying handle at the back of the cleaner. Always place vacuum cleaner on floor with handle in upright position when using tools. Never place your fingers under the cleaner when it is running. Never place powerfoot on furniture or on uneven surfaces. Do not place vacuum cleaner close enough to objects to pull them into a rotating brush.

WARNING


Plastic film can be dangerous. To avoid danger of suffocation, keep away from babies and children.

WARNING

Do not plug in your vacuum cleaner until you are familiar with all instructions and operating procedures.

THIS APPLIANCE HAS A POLARIZED PLUG

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.

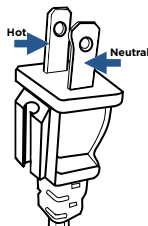

Thanks for buying a BISSELL vacuum!

We love to clean and we're excited to share one of our innovative products with you. We want to make sure your vacuum works as well in five years as it does today, so this guide has tips on using (page 6-7), maintaining (pages 7-10), and if there is a problem, troubleshooting (page 10).

Your vacuum needs a little assembly before you can put it to work, so flip to page 5 and let's get started!

What's in the Box


NOTE: Standard accessories may vary by model. To identify what should be included with your purchase, please refer to the "Carton Contents" list located on the carton top flap.



User Guide




2 Screws
(taped to handle)

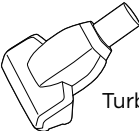

Pet TurboEraser® Tool



 2 Febreze™ Pre-Motor Filters
(Replacement model 1214)



Pet Hair Eraser® Tool



Dusting Brush



Pet Crevice Tool




Extension Wand



NOTE: The Pet Hair Eraser Tool and Dusting Brush do not store on vacuum.

Safety Instructions.....	2	Troubleshooting	10
Product View.....	4	Warranty	11
Assembly	5	Service.....	11
Operations	6-7	Product Registration.....	12
Maintenance & Care	7-10	Consumer Care.....	12

Getting to Know Your Vacuum

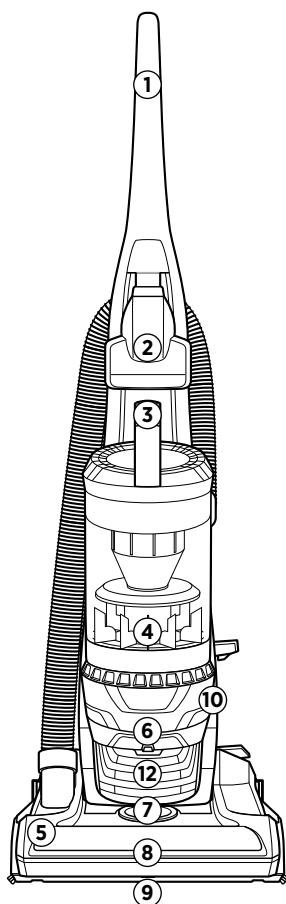

1. Handle
2. Pet TurboEraser® Tool
3. Dirt Tank Release Button
4. Dirt Tank
5. Hose Wand Base
(remove to use tools)
6. Pre-Motor Filter
(located under dirt tank)
7. Post Motor Filter Door
Access
8. Height Adjustment Knob
9. Triple Action™ Brush Roll
10. Cord Rewind
11. Stretch Hose
12. Power Cord
13. Pet Crevice Tool
14. Extension Wand
15. Hose Clip
16. Power Switch Pedal
17. Handle Recline Pedal
18. Pet Hair Eraser® Tool
(does not store on vacuum)
19. Dusting Brush
(does not store on vacuum)

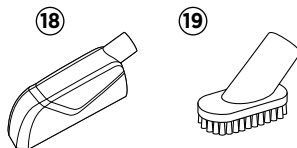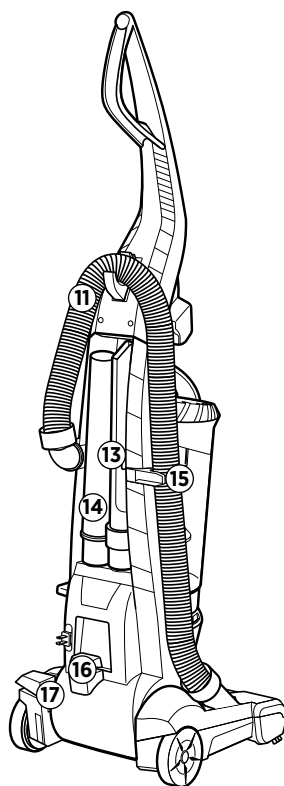


NOTICE:

(2) additional Febreze® Pet Odor Eliminator pre-motor foam filters are included with your vacuum.


Febreze and related trademarks are owned by the Procter & Gamble Company, Cincinnati, Ohio and used under license by Bissell Homecare, Inc.

Assembly


The only tool you will need to assemble your vacuum is a Phillips screwdriver.

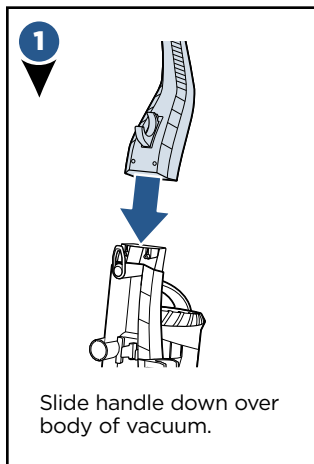


Slide handle down over body of vacuum.

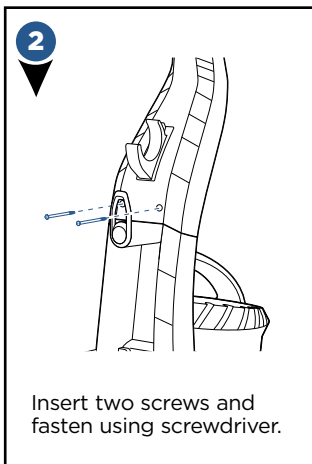

Insert two screws and fasten using screwdriver.

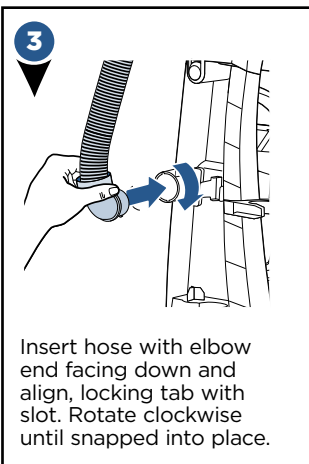


Insert hose with elbow end facing down and align, locking tab with slot. Rotate clockwise until snapped into place.

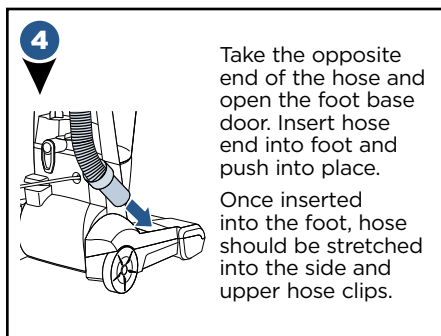


Take the opposite end of the hose and open the foot base door. Insert hose end into foot and push into place.


Once inserted into the foot, hose should be stretched into the side and upper hose clips.

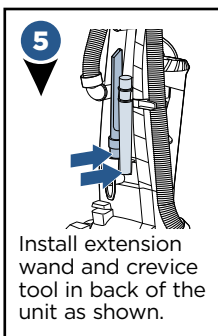


Install extension wand and crevice tool in back of the unit as shown.

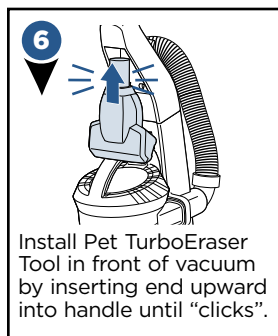

Install Pet TurboEraser Tool in front of vacuum by inserting end upward into handle until "clicks".

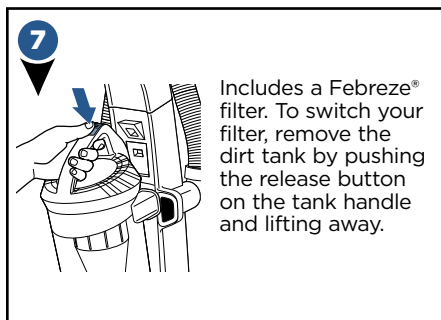

Includes a Febreze® filter. To switch your filter, remove the dirt tank by pushing the release button on the tank handle and lifting away.

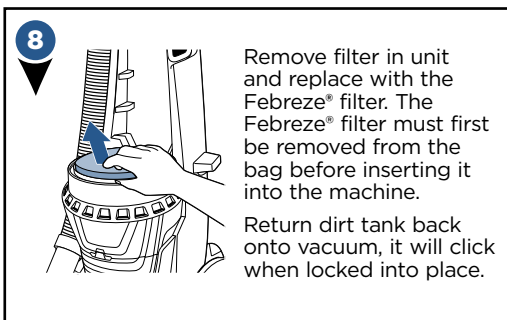


Remove filter in unit and replace with the Febreze® filter. The Febreze® filter must first be removed from the bag before inserting it into the machine.


Return dirt tank back onto vacuum, it will click when locked into place.

NOTE: The Pet Hair Eraser Tool and Dusting Brush do not store on-board (see Tools section for usage).

Tools

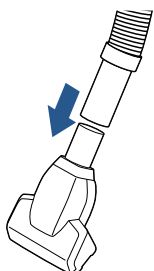

To attach any of the included tools, remove the lower wand base from the foot of the vacuum and from both hose clips. Insert the desired tool firmly into the hose end.

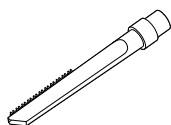


Pet Crevice Tool

Use END side as standard crevice tool. Twist to SIDE to open up suction across rubber fingers for upholstery and large surface areas.




Extension Wand

 Attach with desired tool for longer reach.




Dusting Brush

Use brush to dust furniture, blinds, books, lamps, shelves and baseboards.

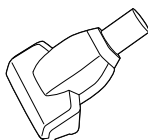

Pet TurboEraser™ Tool

Remove tool by pulling away and downwards from vacuum. For best use, press the brush gently down and pull towards you in raking motion; too much pressure will cause brush to stop rotating.

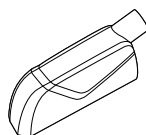


Pet Hair Eraser™ Tool

Move sweeper from side to side. When you hear “click”, reverse the motion. Clean inside the dirt bin by pressing on the side tabs gently to open. You can use a damp cloth or towel to clean excess dirt and any excess hair. Connect the hose to use with the vacuum or you can use without the hose connection.

NOTE: The Pet Hair Eraser Tool and Dusting Brush do not store on the vacuum.


Operations: Power On & Settings

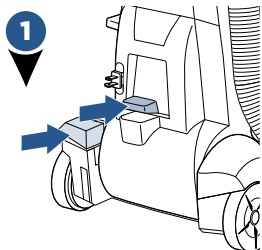

To power ON, step on the RED Power Switch Pedal located near the bottom and center on the back side of the unit. Push the lower Handle Recline Pedal two times for an even lower recline.



Turn dial on foot to adjust to 1 of 5 height adjustments.

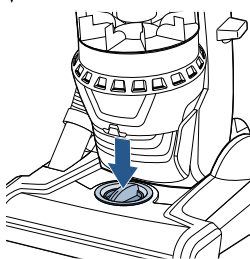

Lowest Setting: For low pile carpet and bare floors.


Medium Setting: For medium pile carpet.

Highest Setting: For high pile and most shag carpet. Adjust to high setting if difficult to push.

NOTE: For optimal cleaning, adjust to the lowest practical setting. If your vacuum is difficult to push, or is pushing larger debris, adjust to the next higher setting.


Operations: Automatic Cord Rewind

1

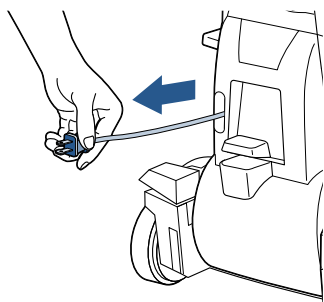

Gently pull out power cord and stop when yellow band is visible on the cord. Do not pull power cord beyond the red line. Plug cord into electrical outlet.


2

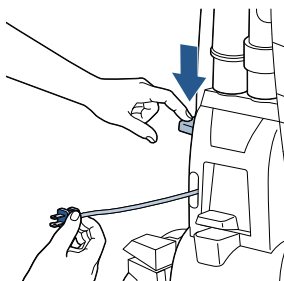

To return cord, turn vacuum power switch off and remove plug from outlet. Hold plug and press automatic cord rewind button located on the lower side of the unit to wind cord into reel. Do not allow plug to whip when rewinding.


Maintenance: Empty Dirt Tank

1

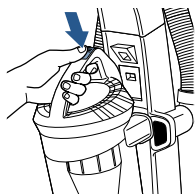

Remove tank by pressing the release button on the tank handle.


2

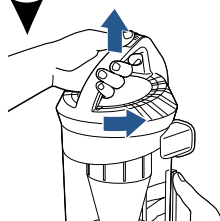


Grasp handle on back of tank with one hand and the top handle with the other. Twist the top handle counterclockwise until latches release. Pull the top handle straight up from the dirt tank.

3

Empty contents of dirt tank into trash container, and gently shake the top handle to remove build up.

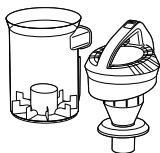

4

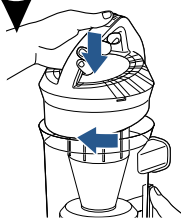


Place the top handle straight down into the dirt tank. Align the latch arrows and gently twist clockwise. When fully assembled, the tank will click into place. Replace the tank back onto the vacuum - it will click when fully installed.

NOTE: If you notice excess build up around the top of the tank, before removing top piece, gently tap the tank to allow contents to settle.

Maintenance: Pre-Motor Filter

1

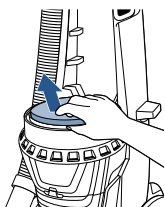

Remove the dirt tank to locate and remove the pre-motor filter. Pinch the filter and lift to remove from unit.

2



While holding over trash, gently separate filter layers (being careful not to rip filter layers) and shake out excess debris.

NOTE: Filter can be rinsed in warm water. Allow it to completely dry before replacing. If the filter is damaged, replace the part.

NOTICE:


Your vacuum model includes a Febreze® filter. Over time with washing, you will notice a reduction in the scent strength.

WARNING

To reduce the risk of electrical shock, turn power switch off and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.


Maintenance: Post-Motor Filter

1

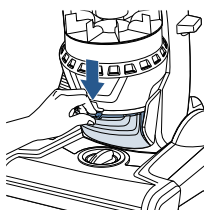

Located on the front near the height adjustment knob, remove filter door by pressing and pulling latch downward.


2

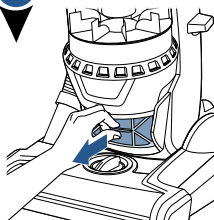

Remove the filter by grasping the handle on the front of the filter and pulling out from vacuum. Clean, wash, or replace filter, as necessary.

3

Replace filter in unit with handle facing you. Replace the door by hooking the bottom into the grooves and rotate towards unit, snapping into place.

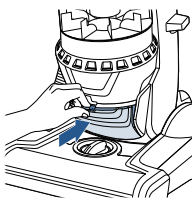


NOTE: The pleated post-motor filter may NOT be washed with water or detergent. If dust and/or debris accumulates on filter, gently tap the filter on the side of a garbage container.


WARNING

Do not operate vacuum with damp or wet filters, as well as without filters or the Dirt Container in place. Allow components to dry before reassembling the Dirt Container.


Maintenance: Floor Brush Roll

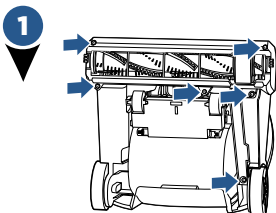

Ensure vacuum is unplugged. Place handle in low position, remove hose from foot and turn vacuum over bottom side up. Remove 6 screws with a Phillips head screwdriver. Lift brush cover off of the vacuum.

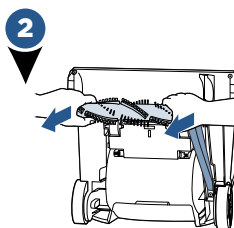


Grasp rotating floor brush at both ends and lift straight out of the vacuum foot. Slip off the belt.

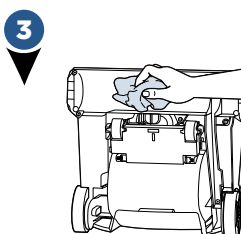


Clean debris from rotating floor brush, motor pulley, drive belt and air passageway areas.


Maintenance: Drive Belt

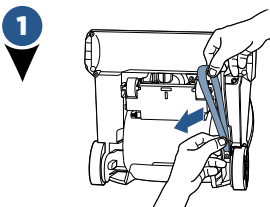

With rotating brush removed (steps 1-3 maintenance floor brush roll), grasp old drive belt and remove from motor pulley.

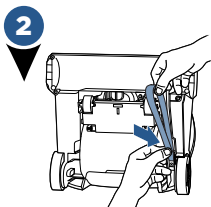


Place new belt over motor pulley and stretch other end over the floor brush.

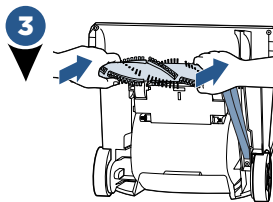


Place ends of rotating floor brush down into slots. Reposition bottom cover and replace all 6 screws.


Maintenance: Cleaning the Dirt Tank

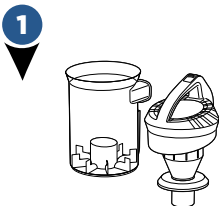

With the top handle removed, wash the dirt tank in warm water with mild detergent. Allow tank to air dry.

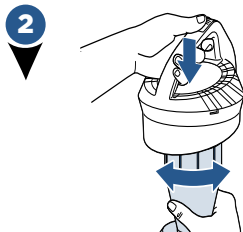

Twist top handle from the round separator counterclockwise to release. Wash in warm water with mild detergent. Dry completely before reassembling.

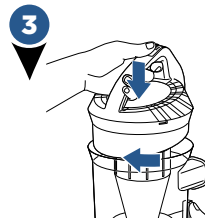


Align tabs to return separator to top handle. Align latch arrows and twist tank clockwise until "clicks" into place.

Maintenance: Clearing a Clog




1

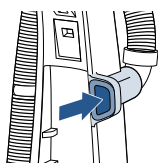

Remove dirt tank and check suction inlet located on body of vacuum for debris.

2

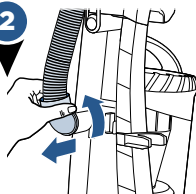

Grasp upper hose end and twist elbow counterclockwise to remove. Remove lower hose end by pulling it from vacuum base. Unclog by inserting a “blunt” object, like a broom handle, into hose to dislodge blockage. Do not use sharp objects.

NOTE: If clog persists, follow the floor brush roll maintenance steps on page 8 and inspect air passageways for obstructions.

Troubleshooting



Problem	Possible causes	Remedies
Vacuum cleaner won't turn on	Blown fuse/tripped breakers in home	Check/replace fuse or reset breaker
Vacuum cleaner won't pick up dirt	Hose not attached to foot suction opening	Grasp quick reach handle and firmly push hose wand onto the suction opening
	Crack or hole in hose	Check hose and replace if needed
	Broken or stretched drive belt	Replace drive belt, see page 9
	Rotating floor brush bristles worn	Replace brush
	Rotating floor brush jammed	Remove brush and clean debris from brush ends
	Filters are dirty	Check and clean pre-motor and post-motor filters, see page 7-8
	Clog in vacuum	Follow instructions on page 9 for clearing clogs
Tools won't pick up	Dirt container or upper tank not installed properly	Position correctly and lock in place
	Filters are dirty	Check and clean pre-motor and post-motor filters, see page 7-8
	Clog in vacuum	Follow instructions on page 9 for clearing clogs
Visible dirt escaping from cleaner	Dirt container full	Empty dirt container
	Filters missing or installed incorrectly	Check pre-motor and post-motor filters for correct installation
Vacuum cleaner difficult to push	Incorrect height adjustment	Adjust powerfoot to correct height setting
Cord will not retract	Knotted or twisted	Follow instructions on page 6

Warranty

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care by E-mail, telephone, or regular mail as described below.

Limited Five-Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for five years any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

BISSELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

***EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY**
THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE FIVE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you.

NOTE: Please keep your original sales receipt. It provides proof of date of purchase in case you ever need to make a warranty claim.

Service

If your BISSELL product should require service:

Contact BISSELL Consumer Care to locate a BISSELL Authorized Service Center in your area.

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Care.

Website:

www.BISSELL.com

E-mail:

www.BISSELL.com/email-us

Call:

BISSELL Consumer Care

1-800-237-7691

Monday - Friday 8am - 10pm ET

Saturday 9am - 8pm ET

Sunday 10am - 7pm ET

Please do not return this product to the store.

Other maintenance or service not included in the manual should be performed by an authorized service representative.

For any questions or concerns, BISSELL is happy to be of service. Contact us directly at 1-800-237-7691.

Register your product today!

Registering is quick, easy and offers you benefits over the lifetime of your product.

You'll receive:

BISSELL Rewards Points

Automatically earn points for discounts and free shipping on future purchases.

Faster Service

Supplying your information now saves you time should you need to contact us with questions regarding your product.

Product Support Reminders and Alerts

We'll contact you with any important product maintenance reminders and alerts.

Special Promotions

Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit **www.BISSELL.com/registration**!

Visit us online at: **BISSELL.com**

When contacting BISSELL, have model number of cleaner available.

Please record your

Model Number: _____

Please record your

Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 11 for details.

Parts & Supplies

For Parts and Supplies, go to BISSELL.com and enter your model number in the search field.

We can't wait to hear from you!

We really do read your comments, tweets, and posts.

Rate this product on BISSELL.com

or any of our retailer sites and let us (and millions of your closest friends) know what you think!

For cleaning tips and more visit www.BISSELL.com or find us at:



BISSELL



BISSELLClean



BISSELLClean



BISSELL

YouTube

BISSELL



©2017 BISSELL Homecare, Inc.
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 161-1822 02/17
Visit our website at: www.BISSELL.com