



ANNA

32.4vDC / 120v AC

**HYBRID UPRIGHT VACUUM CLEANER
WITH LIFT-OFF**

Series 1422

USER GUIDE

**1422
Series**

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR UPRIGHT VACUUM.

Always connect to a polarized outlet (one slot is wider than the other). Unplug from outlet when not in use and before conducting maintenance. When using an electrical appliance, basic precautions should be observed, including the following:

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- » Always connect to a polarized outlet (one slot is wider than the other). Do not modify the polarized plug to fit a non-polarized outlet or extension cord.
- » Do not leave vacuum cleaner when it is plugged in. Unplug from outlet when not in use and before servicing.
- » Do not use outdoors or on wet surfaces.
- » Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- » Do not use for any purpose other than described in this User's Guide. Use only manufacturer's recommended attachments.
- » Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- » Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- » Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- » Do not handle plug or vacuum cleaner with wet hands.
- » Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- » Turn off all controls before plugging or unplugging vacuum cleaner.
- » Use extra care when cleaning on stairs.
- » Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- » Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- » Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- » Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- » Do not use without filters in place.
- » Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- » Use only on dry, indoor surfaces.
- » Keep appliance on a level surface.
- » Do not carry the vacuum cleaner while it is running.
- » Unplug before connecting or disconnecting the TurboBrush® Tool.

THIS APPLIANCE HAS A POLARIZED PLUG

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.

SAVE THESE INSTRUCTIONS FOR FUTURE USE

This model is for household use only.

Warranty

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. If you need additional instructions regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care by e-mail, telephone, or regular mail as described below.

Limited 5 Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for five years a defective or malfunctioning part.

See information below on how to return your BISSELL product for service.

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered."

If your BISSELL product should require service:

Contact BISSELL Consumer Care.

By phone (Toll-Free): (1)855-267-2662

Monday-Friday 8am-4:45pm EST

BISSELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL's LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE **LIMITED** WARRANTY

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Product View


HYBRID UPRIGHT VACUUM
CLEANER



Product View



Product View

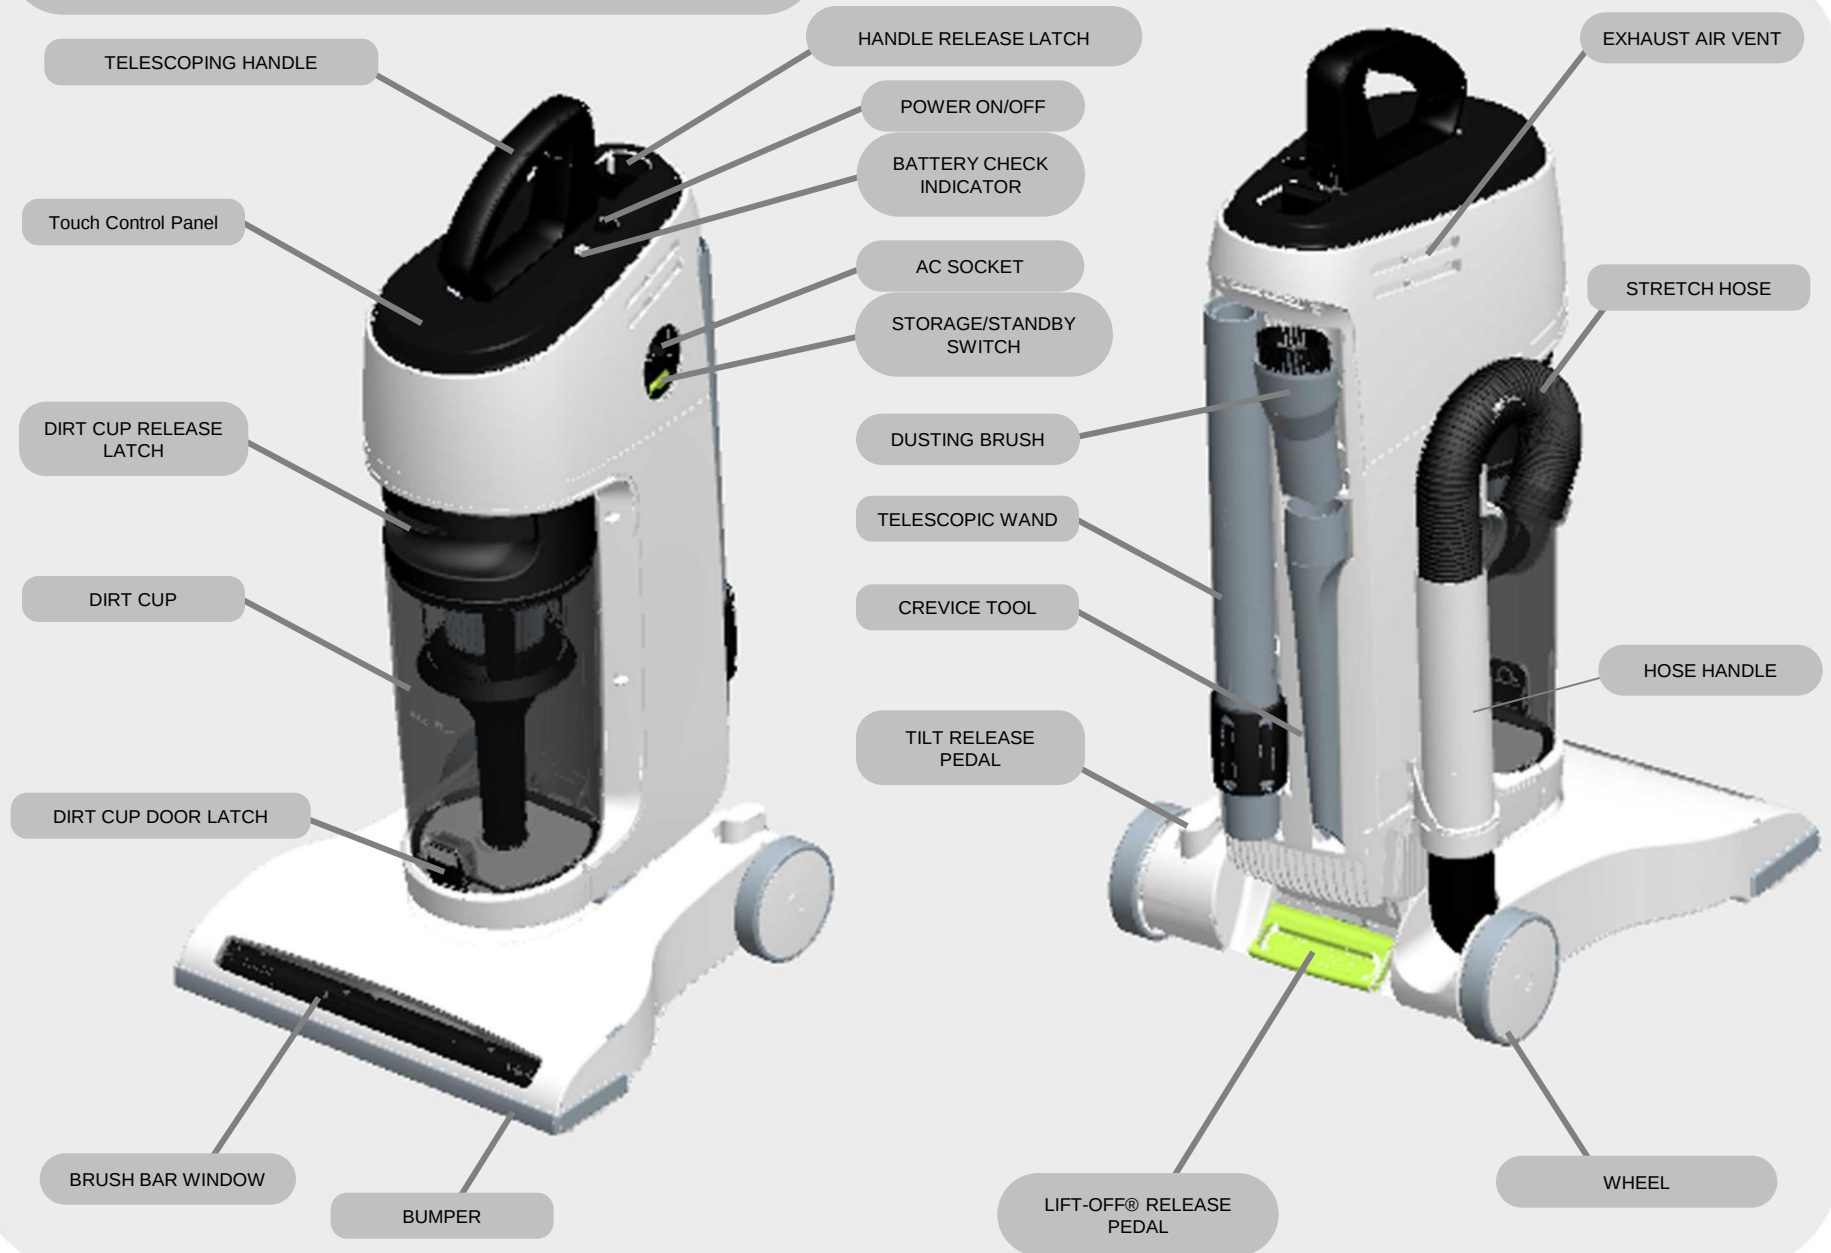

OPERATIONS

Preset Carpet / Crevice

In floor cleaning mode the CARPET preset can be pressed = Max suction power + Brush Bar ON. Use this setting on carpeted floors.
In lift-off and parked mode the CREVICE preset can be pressed = Max suction power. Use this setting when using the crevice tool at the end of the hose.

Preset Floor / Stairs

In floor clean mode the FLOOR preset can be pressed = Max suction power + Brush Bar OFF. Use this setting on hard floor surfaces.
In lift-off and parked mode the STAIRS preset can be pressed = Med suction power. Use this setting when using the stair tool on the end of the hose.

Preset Rugs / Drapes

In floor clean mode the RUGS preset can be pressed = Low suction power + Brush Bar OFF. Use this setting on loose rugs.
In lift-off and parked mode the DRAPES preset can be pressed = Min suction. Use this setting when using tools to clean drapes and other delicate fabrics.

POWER INDICATORS

POWER indicator:

Blue LED indicates that an AC plug is plugged in and live. No illumination indicates AC is not connected.

Battery indicator:

Displays the capacity level of the battery when the unit is in standby and while the product is in use.
If a fault condition has occurred the fault can be identified by reading number of LED's illuminated and referencing the fault indication information.

Battery check button:

Push this button to show battery capacity level.
If a fault has occurred press this to identify the fault condition.

Power Button:


Pushing this button turns the vacuum cleaner ON/OFF (unit must be in standby mode)

Power Socket:

Allows connection to mains AC power supply

Storage/Standby Switch:

Storage mode is complete power off
For charging the battery and putting into standby mode slide switch to standby position

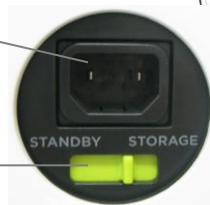

FLOOR SETTINGS

SUCTION ADJUSTMENT

Brush bar ON/OFF:

Press this touch panel button to turn brush bar ON/OFF

Maximum suction:


Press this touch panel button to select max suction power

Medium suction:

Press this touch panel button to select medium suction power

Low suction:

Press this touch panel button to select low suction power

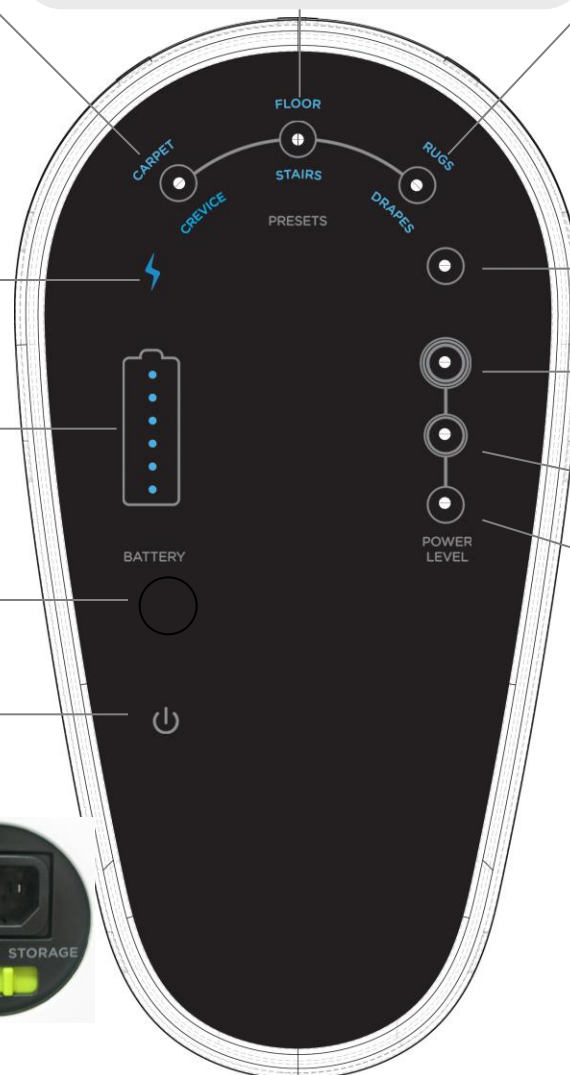

Operations

TO CHARGE THE UNIT

SLIDE SWITCH TO
STANDBY



PLUG IN POWER CORD
WHICH IS CONNECTED
TO LIVE 120vAC



CHARGING INDICATOR
ILLUMINATES, CHARGE
CYCLE ON BATTERY
INDICATOR WILL BE SHOWN



Operations

2. PULL UP HANDLE

USE TELESCOPIC
HANDLE



1. PULL BACK HANDLE
RELEASE



3. PULL BACK HANDLE
RELEASE TO PUT
HANDLE DOWN



CLICK
TO
LOCK



4. PUSH DOWN
HANDLE TO PUT
HANDLE BACK
DOWN




Operations- Cordless Mode




1. Once the product is fully charged, UNPLUG THE AC CABLE

2. Slide Switch to standby mode

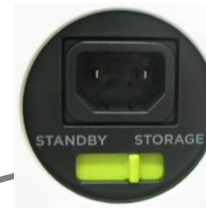

3. Press the Power Button to turn machine on.

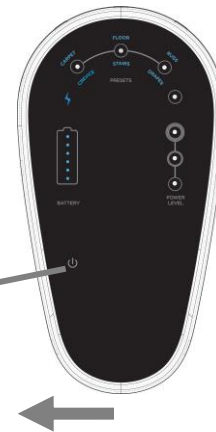

4. PRESS FOOT PEDAL AND RECLINE



5. ENJOY THE FREEDOM OF CORDLESS VACUUMING


Operations- Corded Mode



1. Plug in the power cord to the machine and to the wall

2. Slide Switch to standby mode

3. Press the Power Button to turn machine on.

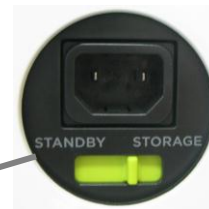

PRESS FOOT PEDAL
AND RECLINE



VACUUM IN CORDED MODE

Operations- Tool Selection

RELEASE TELESCOPIC
WAND




RELEASE DUSTING
BRUSH



RELEASE CREVICE
TOOL



RELEASE STAIR
TOOL

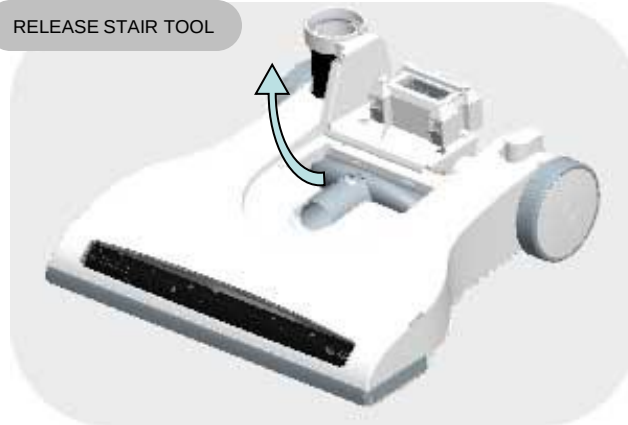

Operations- Above floor cleaning



1. Remove hose handle from docking foot
2. Attach desired cleaning tool to end of hose
3. Clean in corded or cordless mode following operations instructions



CREVICE TOOL



DUSTING BRUSH



TELESCOPIC WAND
WITH TOOL


Operations- Lift-Off® Pod

2. LIFT THE
REMOVABLE POD

3. TO RE-DOCK
PLACE REMOVABLE POD ONTO
FOOT ALIGNING THE HOSE AND
DOCKING STATION

PUSH DOWN

1. STEP ONTO FOOT RELEASE PEDAL

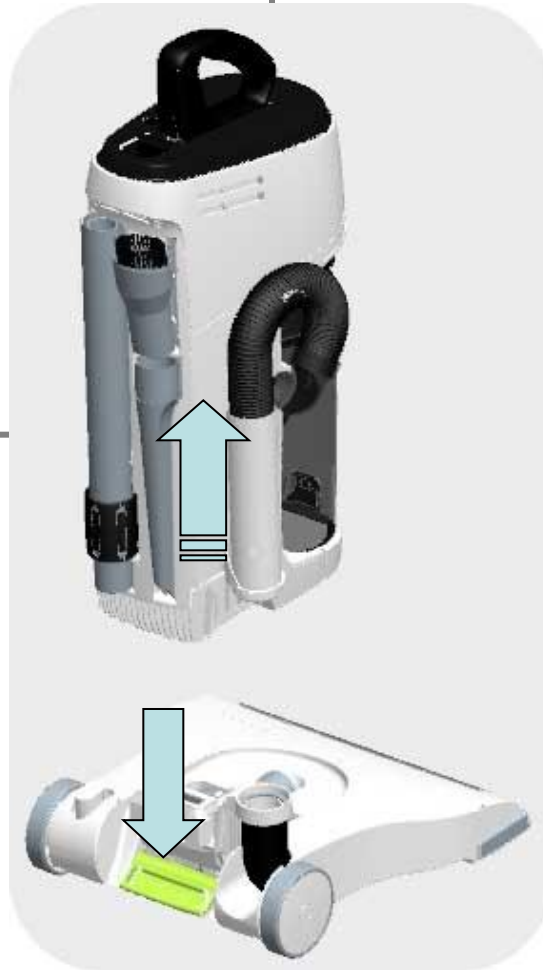

Operations- Lift-Off® Pod Above Floor Cleaning



PRESS LIFT-OFF® FOOT PEDAL AND
USE THE COMBINATION OF STRETCH
HOSE, TOOL AND CORDLESS
FREEDOM TO VACUUM WHERE YOU
WANT TO



LIFT-OFF® +

CREVICE TOOL



LIFT-OFF® +

DUSTING BRUSH



LIFT-OFF® +

TELESCOPIC WAND +
TOOL

Operations- Lift-Off® Pod Stairs


REMOVE STAIR TOOL
FROM FOOT



ATTACH STAIR TOOL
TO HOSE



VACUUM THE STAIRS

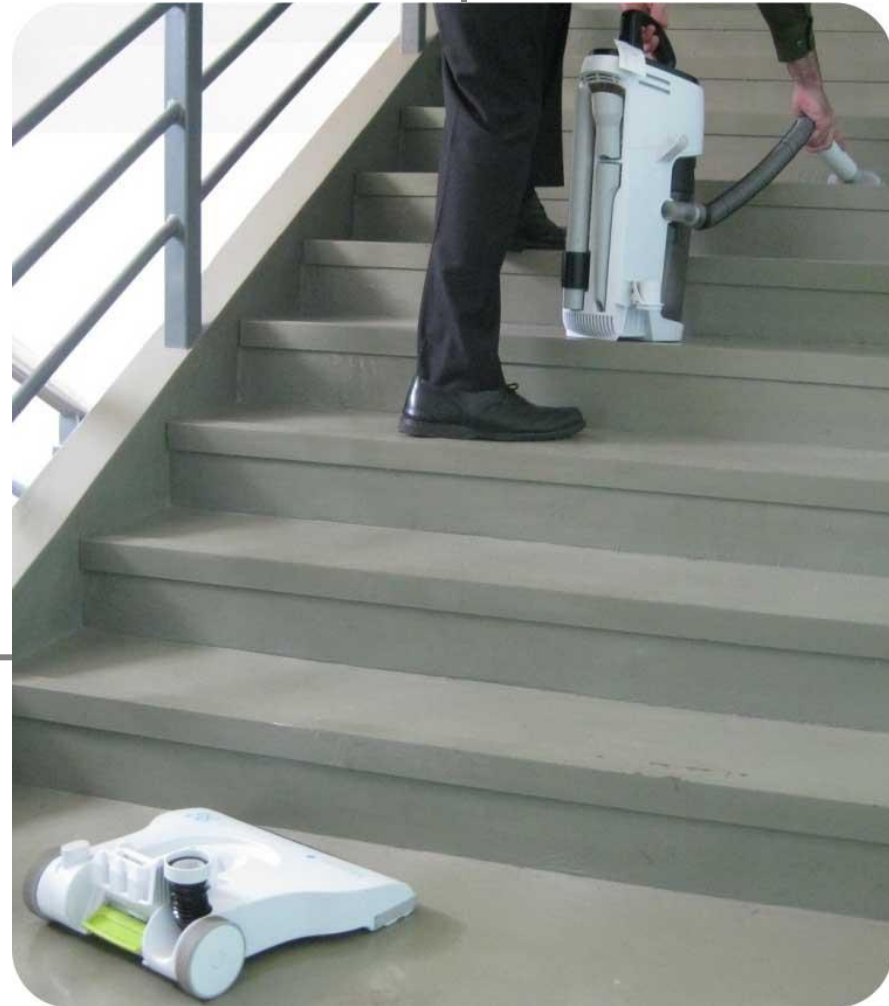

Maintenance & Care- Empty Dirt Bin

1. PUSH BIN RELEASE LEVER AND PULL OUT BIN



2. PRESS LATCH TO OPEN DIRT CUP DOOR AND RELEASE DEBRIS




3. EMPTY DIRT INTO TRASH BIN



Maintenance & Care- Clean Filters

1. PUSH BIN RELEASE LEVER AND PULL OUT BIN

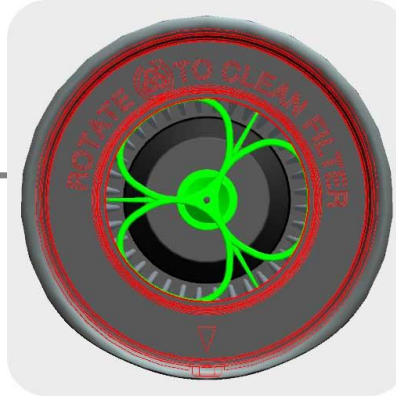

2. Rotate the tabs on the top of the dirt bin clockwise



3. Remove filter and tap off large debris. Replace filter by inserting and turning counterclockwise (until the arrows on the filter and dirt bin align).

Maintenance & Care- Clean Dirt Bin



1. Separate the top and bottom in opposite directions.
2. Wipe the cyclone clean with a damp cloth.

NOTE: Make sure the cyclone is fully dry before replacing and operating.

LOCK



UN-LOCK



Maintenance & Care- Clogs

1. UN-SCREW HOSE END TO CHECK AND REMOVE BLOCKAGES




Maintenance & Care- Clogs

REMOVE BLOCKAGES FROM
DUCT LOCATED ON THE
UNDERSIDE OF THE FOOT

1. REMOVE HOSE FROM
HOUSING TO ACCESS AND
REMOVE BLOCKAGES



2. PUSH HOSE BACK INTO
LOCATION

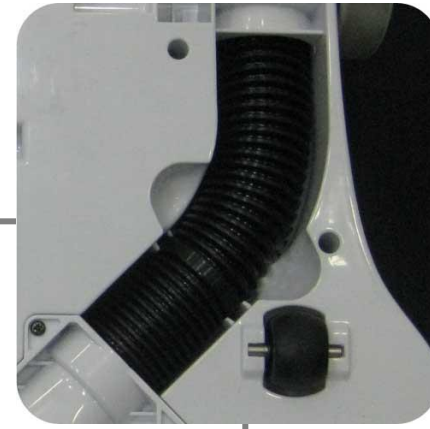

3. ENSURE THE LARGER
HOUSING RIB ALIGNS WITH
THE SLOT AND CAPTURES
THE HOSE





WARNING: To reduce the risk of electric shock disconnect polarized plug from electrical outlet and slide switch to storage mode before servicing the device


REMOVE FOOT ASSEMBLY FROM BODY

ACCESS TO BRUSH BAR FOR CLEANING AND BRUSH BAR BELT IN CASE OF BREAKAGE


UN-SCREW THE SIX SCREWS

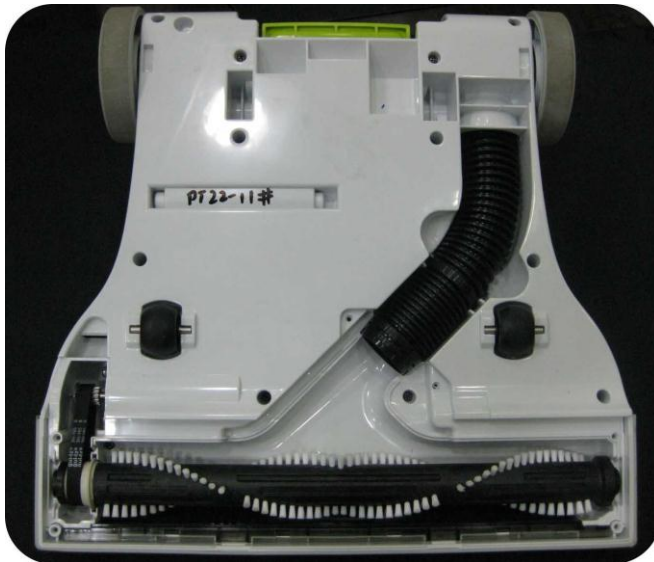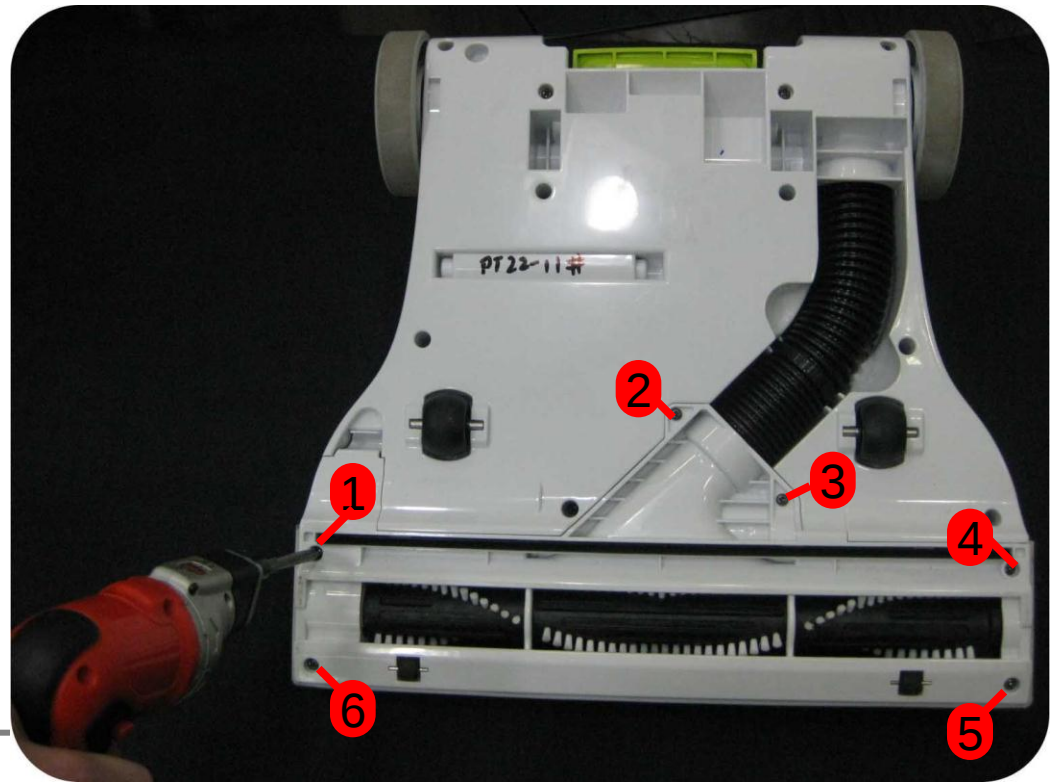

PULL TAB (A) AND LIFT SOLE PLATE (B) TO ACCESS

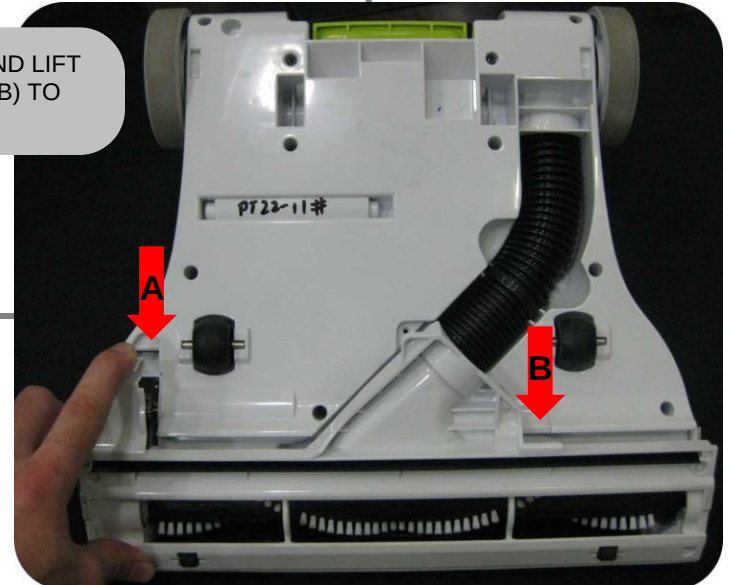


Feedback indication:

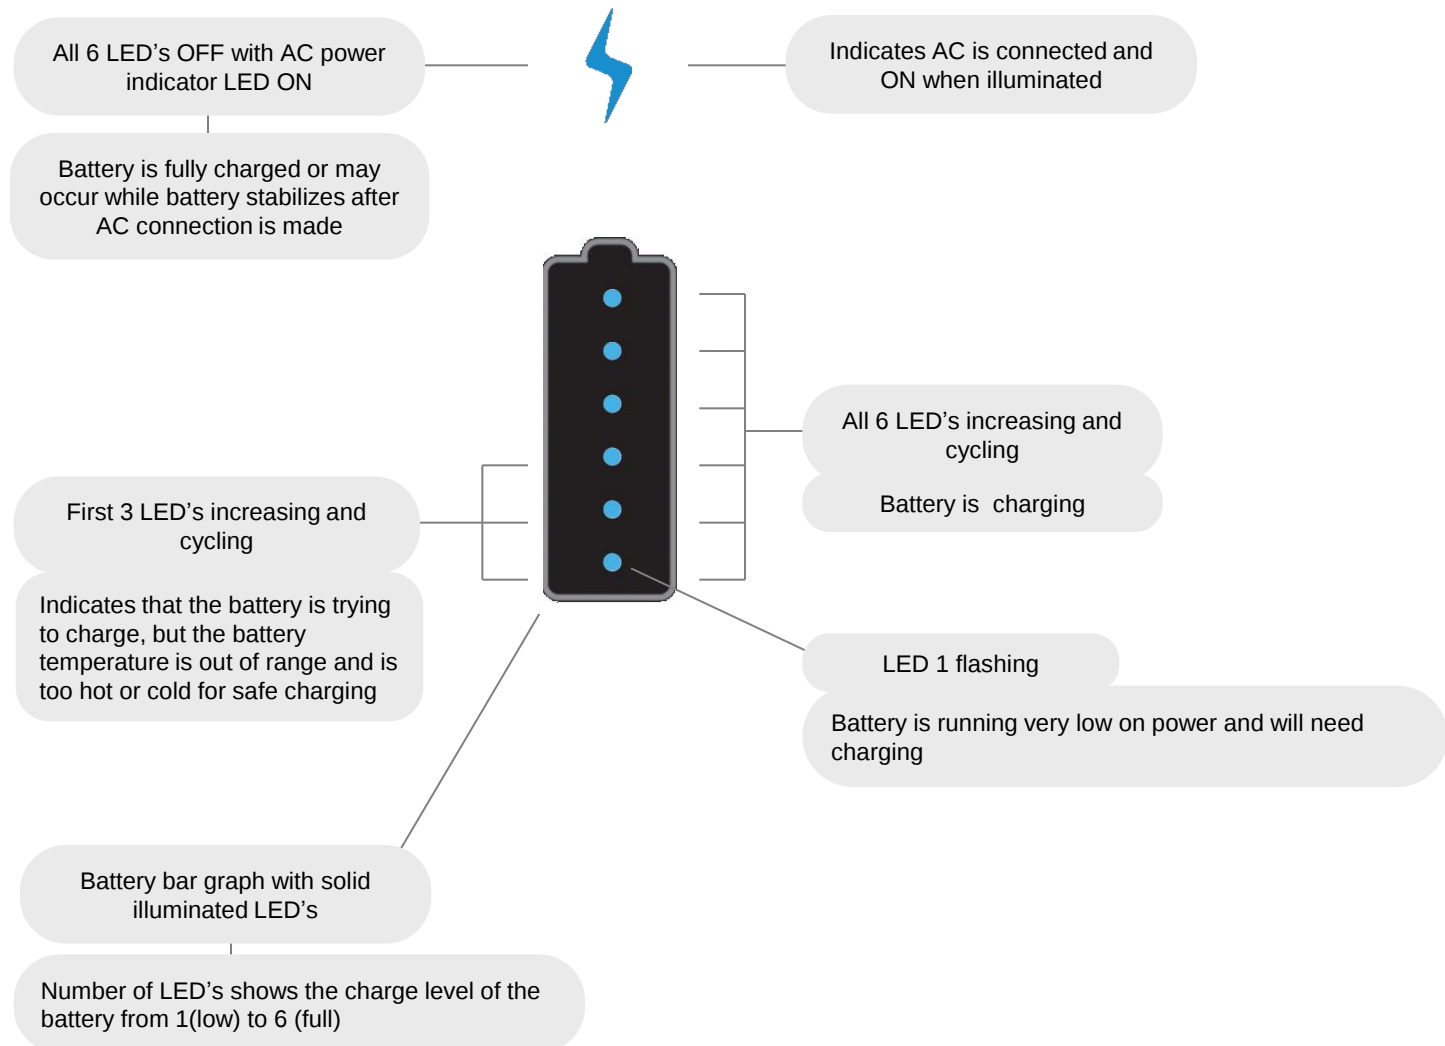

Fault mode indication:

This product has intelligent software inside it that monitors performance and shuts down the product to protect the battery if a fault has occurred. If a fault has occurred with the machine, all 6 battery LED's will flash on and off. To understand the reason for the fault, simply press the battery check button, one LED will stay lit while the others continue to flash (More than 1 fault LED may be on at a time). Follow the instructions below to identify the correct fault.

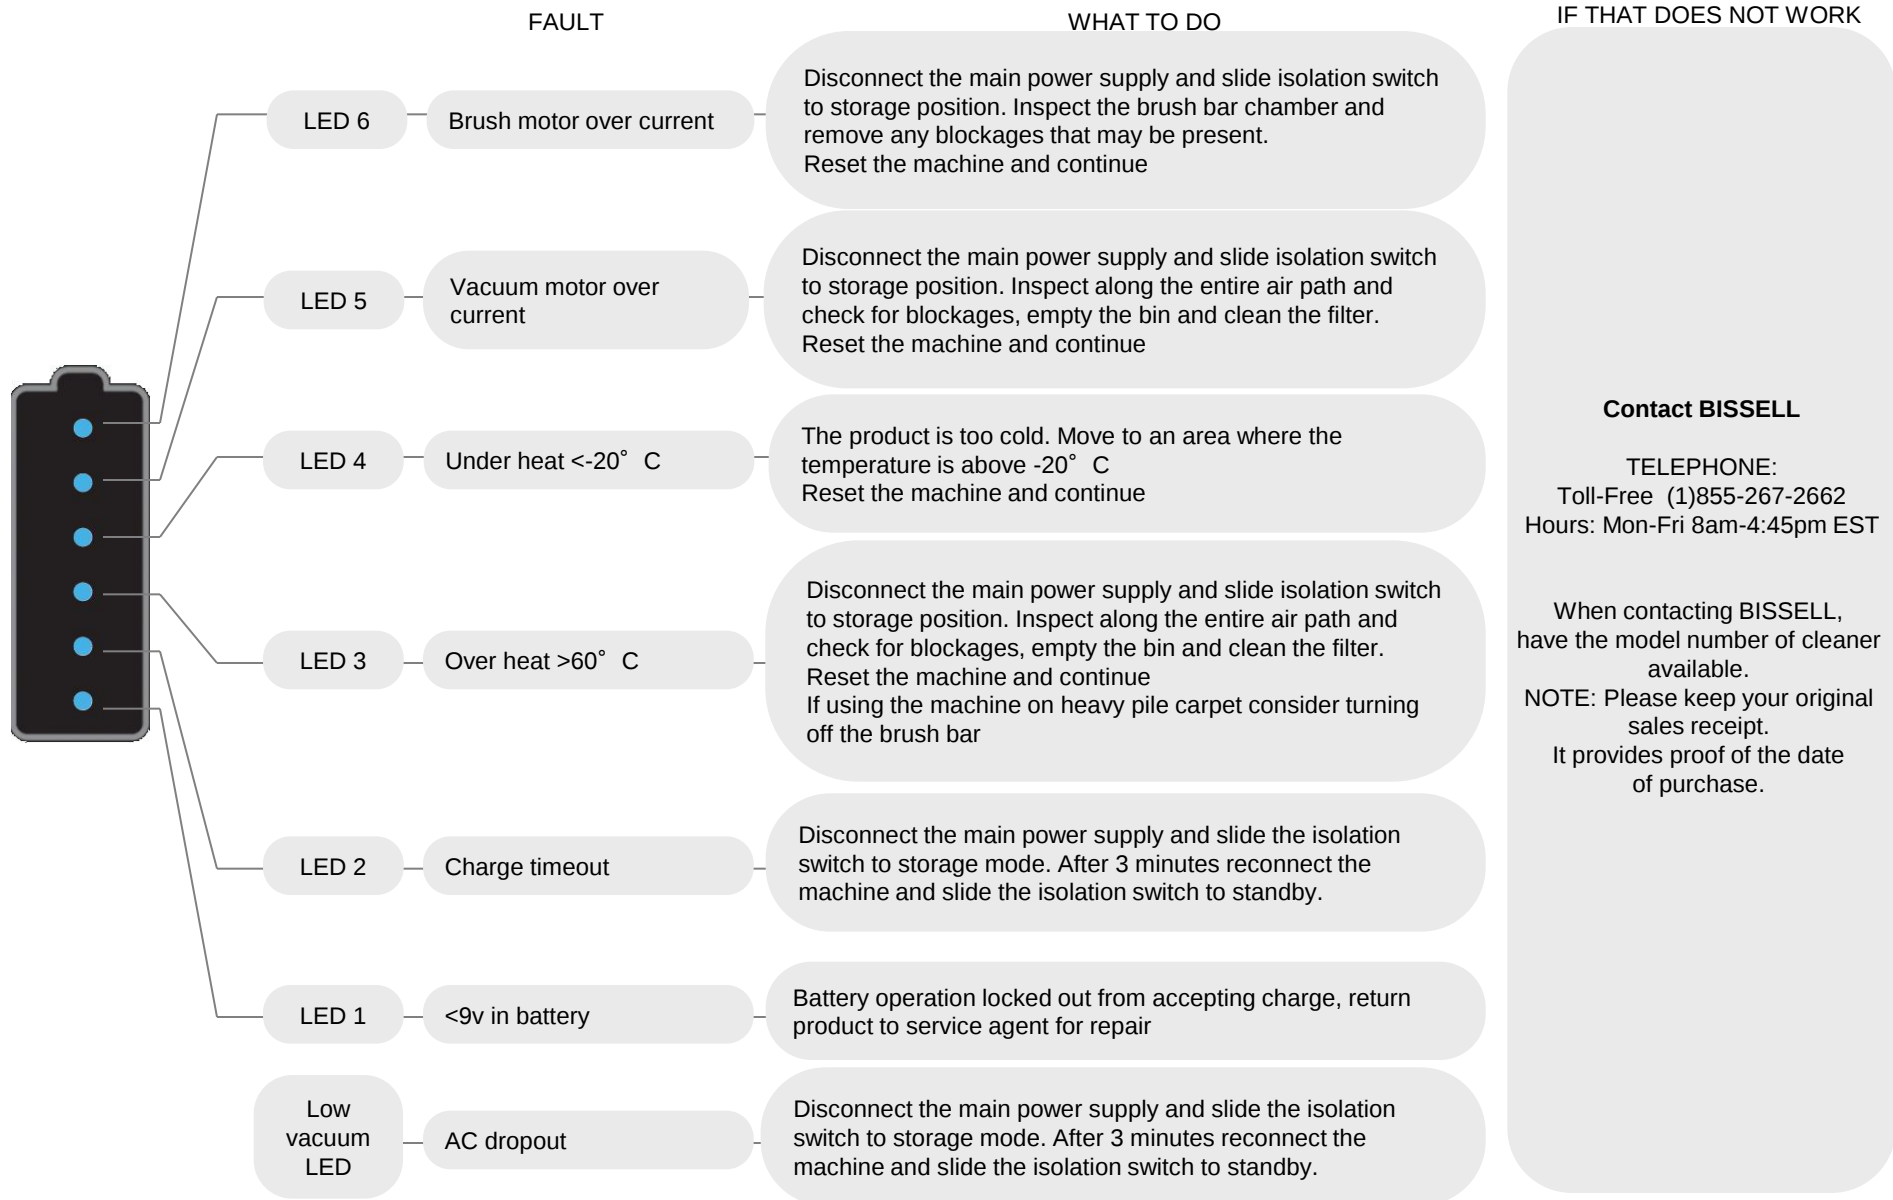

Consumer Care

If your BISSELL product should require service, please contact consumer care before returning the product.

Call:

BISSELL Consumer Care

Toll Free (1)855-267-2662

Monday – Friday 8am-4:45pm EST