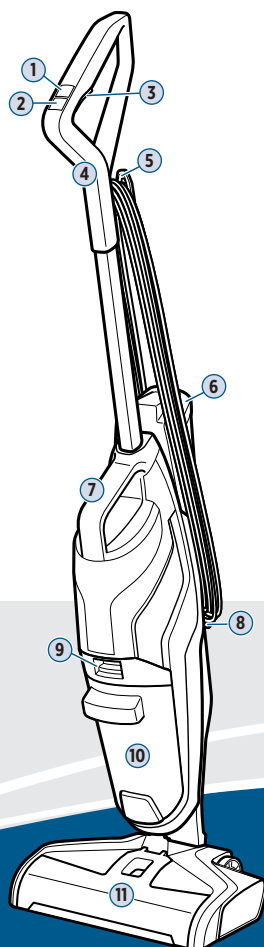




## CROSSWAVE® ALL-IN-ONE MULTI-SURFACE CLEANER 1785, 2210, 3238, 3395 SERIES

|                                              |   |
|----------------------------------------------|---|
| Important Safety Instructions.....           | 2 |
| What's in the Box? .....                     | 2 |
| Assembly .....                               | 3 |
| Filling the Clean Water Tank .....           | 4 |
| Cleaning Your Floors .....                   | 5 |
| Emptying the Dirty Water Tank.....           | 6 |
| Using the Storage Tray & Clean Out Cycle ... | 6 |
| After-Cleaning Care.....                     | 7 |
| Storing Your Machine.....                    | 7 |
| Troubleshooting.....                         | 8 |
| Warranty .....                               | 8 |



### Product Overview

- |                                              |                             |
|----------------------------------------------|-----------------------------|
| 1. Hard Floor Mode Button                    | 7. Integrated Carry Handle  |
| 2. Area Rug Mode /<br>Clean Out Cycle Button | 8. Lower Cord Wrap          |
| 3. Solution Spray Trigger                    | 9. Dirty Water Tank Release |
| 4. Upper Handle                              | 10. Dirty Water Tank        |
| 5. Quick Release™<br>Cord Wrap               | 11. Brush Roll Window       |
| 6. Clean Water Tank                          |                             |



### Meet your new BISSELL® product!

Go to **support.BISSELL.com** for a comprehensive walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...

# IMPORTANT SAFETY INSTRUCTIONS



## READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



## WARNING

### TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Connect to a properly grounded outlet only. See grounding instructions. Do not modify the 3-prong grounded plug.
- Do not leave appliance when it is plugged in. Unplug from outlet when not in use and before servicing.
- Use indoors only.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from

openings and moving parts.

- Turn OFF all controls before plugging or unplugging appliance.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not use appliance in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Use only BISSELL® cleaning formulas intended for use with this appliance to prevent internal component damage. See the Cleaning Formulas section of this guide.
- Do not immerse. Use only on surfaces moistened by the cleaning process.
- Keep appliance on a level surface.
- Do not carry the appliance while in use.
- Do not use without filters in place.
- Risk of injury. Brush may start unexpectedly. Unplug before cleaning or servicing.
- To reduce the risk of injury from moving parts – unplug before servicing.

## SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

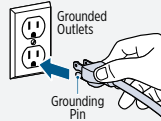
COMMERCIAL USE OF THIS UNIT voids THE MANUFACTURER'S WARRANTY.

## ⚠ WARNING

Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you aren't sure if the outlet is properly grounded. DO NOT MODIFY THE PLUG. If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is designed for use on a nominal 120-volt circuit, and has a grounding attachment plug that looks like the plug in the illustration. Make certain that the appliance is connected to an outlet having the same configuration as the plug. No plug adapter should be used with this appliance.

### GROUNDING INSTRUCTIONS

This appliance must be connected to a grounded wiring system. If it should malfunction or break down, grounding provides a safe path of least resistance for electrical current, reducing the risk of electrical shock. The cord for this appliance has an equipment-grounding conductor and a grounding plug. It must only be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.



## What's in the Box?

Standard accessories may vary by model. To identify what should be included with your purchase, please refer to the "Carton Contents" list located on the carton top flap.

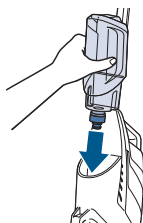
|        |      |               |                     |                                         |                    |
|--------|------|---------------|---------------------|-----------------------------------------|--------------------|
|        |      |               |                     |                                         |                    |
| Handle | Body | Brush Roll(s) | Cleaning Formula(s) | Storage Tray and Brush Roll Drying Tray | Replacement Filter |

# Assembly

▶ Go to [support.BISSELL.com](https://support.BISSELL.com) for assembly videos.



**1.** Insert handle into body of machine until it clicks into place.




**2.** Align clean water tank with the grooves on the back of the machine and slide it until it clicks into place.



**3.** Wrap the cord around the Quick Release™ Cord Wrap and the lower cord wrap.


**Note:** To easily unwrap the cord, turn the Quick Release Cord Wrap down to remove the cord.

## Changing the Brush Roll

 

### FreshStart™ Multi-Surface Brush Roll

 Maintain freshness of the brush roll while removing tough, sticky messes and picking up dry debris.




### Wood Floor Brush Roll

Gently clean sealed hard floors.




### Area Rug Brush Roll

 Pick up dry debris and pet hair.




### FreshStart PET Multi-Surface Brush Roll

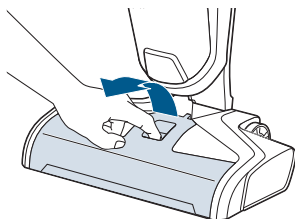
Maintain freshness of the brush roll while removing tough, sticky messes and picking up pet hair and dry debris.



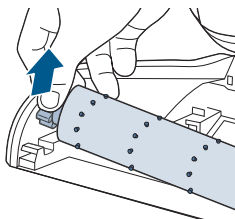
**4.** Grab the front of the brush window and pull upward to remove.



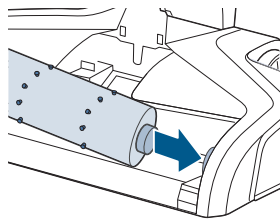
**5.** Remove the brush roll by pulling the tab.



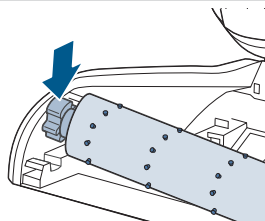
**6.** Reinstall by placing the end of the brush into the right side of the foot.



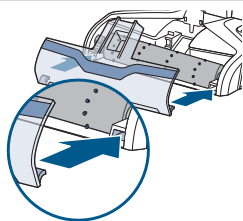**7.** Press the tab of the brush down so it locks into place.



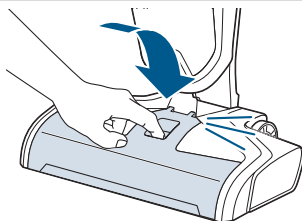**8.** Replace the brush roll window by lining up tabs on the edges of the foot.





**9.** Press the window back so it clicks into place.




# Filling the Clean Water Tank

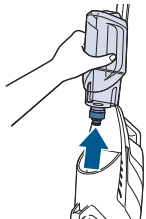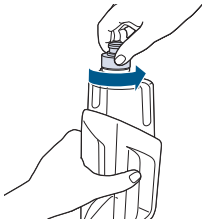▶ Visit [support.BISSELL.com](https://support.BISSELL.com) to watch additional how-to videos.

Keep plenty of CrossWave® formulas on hand so you can clean whenever it fits your schedule.

**Note:** Only use CrossWave formulas in your machine. Other formulas or household cleaners may harm the machine. Do not use hard floor formula on area rugs or carpet.

|                                                                                                                     |                                                                                   |                                                                                                                                                                 |
|---------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                    |  |                                                                                |
| <p><b>1.</b> The clean water tank is located on the back of the machine. To remove, grasp the tank and pull up.</p> | <p><b>2.</b> Unscrew the cap from the bottom of the tank.</p>                     | <p><b>3.</b> Choose your formula*.</p> <p>Scan the QR code with your smartphone camera or visit <a href="https://BISSELL.com">BISSELL.com</a> for formulas.</p> |
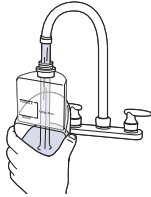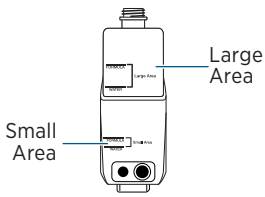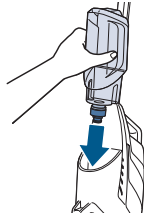
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |                                                                                                                                                     |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |                                                                    |
| <p><b>4.</b> The clean water tank has two measuring volumes depending on the amount of space you would like to clean.</p> <p>For <b>large area cleaning</b> (up to 700 sq ft)</p> <ol style="list-style-type: none"> <li>Fill formula tank with warm tap water to the second water fill line (24 fl. oz.).</li> <li>Then add formula to the second formula fill line (4 fl. oz.).</li> </ol> <p>For <b>small area cleaning</b> (&lt;350 sq ft)</p> <ol style="list-style-type: none"> <li>Fill formula tank with warm tap water to the first water fill line (12 fl. oz.).</li> <li>Then add formula to the first formula fill line (2 fl. oz.).</li> </ol> | <p><b>5.</b> Screw the cap back on, align clean water tank with the grooves on the back of the machine and slide it until it clicks into place.</p> |




\*Compatible BISSELL formulas include: Multi-Surface, Wood Floor, Area Rug, PET Multi-Surface with Febreze Freshness, Hard Floor Sanitize, Simply Multi-Surface. Certain trademarks used under license from The Procter & Gamble Company or its affiliates.




**ATTENTION** This machine is designed to be used on sealed hard floors and area rugs.

**⚠ WARNING** To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning formula intended for use with the hard floor device.

# Cleaning Your Floors

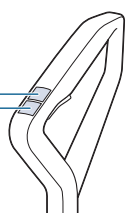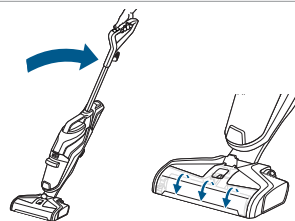
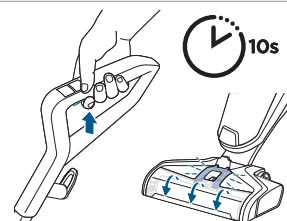
▶ Visit [support.BISSELL.com](http://support.BISSELL.com) to watch additional how-to videos.

|                                                                                                                                                                                                                                                                                                   |                                                                                                              |                                                                                                                                                                                                                                                                                    |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p>Hard Floor<br/>Rug</p>                                                                                                                                                                                       |                             |  <p>10s</p>                                                                                                                                                                                      |
| <p><b>1.</b> To turn the machine ON, press the hard floor or rug button.</p> <p><b>Hard Floor:</b> Everyday messes on sealed hard floors, like tracked-in mud, spilled cereal and milk, coffee, and more.</p> <p><b>Rug:</b> Refresh and clean dry messes, like crumbs, dirt, hair, and more.</p> | <p><b>2.</b> Recline to start the brush roll spinning. Brush roll will not spin when machine is upright.</p> | <p><b>3.</b> Before each use, hold the solution spray trigger for 10 seconds to prime the system with cleaning solution.</p> <p>LED lights will illuminate when holding the solution spray trigger. Bubbles will appear in the brush roll window when the solution is flowing.</p> |
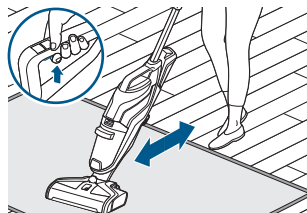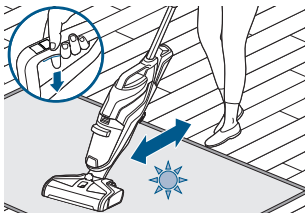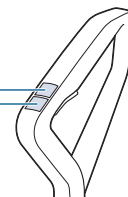
|                                                                                                    |                                                                                                                                              |                                                                                                             |
|----------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
|                    |                                                             |  <p>Hard Floor<br/>Rug</p> |
| <p><b>4.</b> Hold the solution spray trigger to apply solution on forward and backward passes.</p> | <p><b>5.</b> Release the trigger and make a backward pass without dispensing solution. To dry floors faster, make additional dry passes.</p> | <p><b>6.</b> Press the rug or hard floor button to turn the machine OFF.</p>                                |

## Cleaning with Hard Floor Sanitize Formula


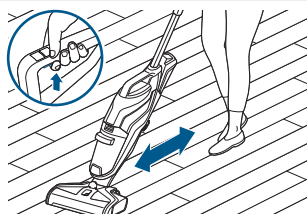
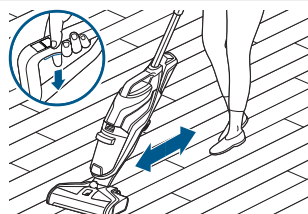
Please read "Directions For Use" on Hard Floor Sanitize label. Use on hard nonporous floors only.

|                                                                                                            |                                                                                                                         |                                                                                                   |
|------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|
|                          |  <p>5m</p>                           |               |
| <p><b>1.</b> Remove visible soil before cleaning. Hold trigger down to apply solution on to the floor.</p> | <p><b>2.</b> Allow formula to remain visibly wet on the floor for five minutes. This may require additional passes.</p> | <p><b>3.</b> With the trigger released, make forward and backward passes to extract solution.</p> |

**ATTENTION** Do not overwet carpet or hardwood floors. Be careful not to run over loose objects or edges of area rugs. Stalling the brush may result in premature belt failure.

## Emptying the Dirty Water Tank

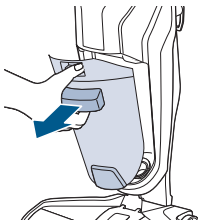
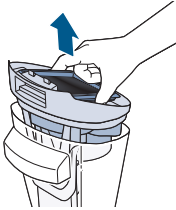
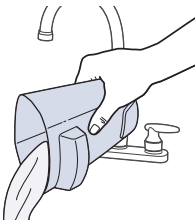
▶ Go to [support.BISSELL.com](https://support.BISSELL.com) for a full list of how-to videos.




|                                                                                                    |                                                                                               |                                                                                   |
|----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
|                    |              |  |
| <p><b>1.</b> Press the button on top of the tank, grab the front handle and pull the tank out.</p> | <p><b>2.</b> Hold the top of the tank near the sides of the filter and pull up to remove.</p> | <p><b>3.</b> Pour dirty water down the sink and rinse the tank.</p>               |

## Using the Storage Tray & Clean Out Cycle

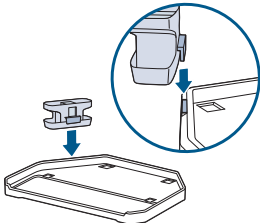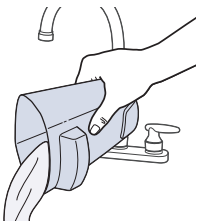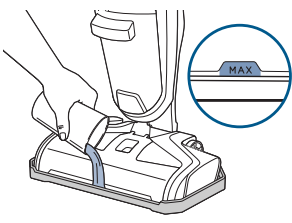▶ Visit [support.BISSELL.com](https://support.BISSELL.com) to watch additional how-to videos.

**Note:** The Clean Out Cycle can be run in the storage tray or on sealed hard floors.

|                                                                                                                   |                                                                                                                                                                                   |                                                                                               |
|-------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|
|                                   |                                                                                                  |              |
| <p><b>1.</b> Align arrows on the storage tray with arrows on the brush roll drying tray and slide into place.</p> | <p><b>2.</b> Make sure there is enough solution in the clean water tank to run the self cleaning cycle. Empty the dirty water tank prior to starting the self-cleaning cycle.</p> | <p><b>3.</b> Optional: Add <b>FreshStart™ Clean-Out Formula</b> to max fill line on tray.</p> |

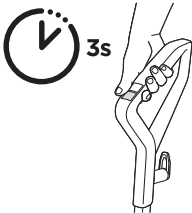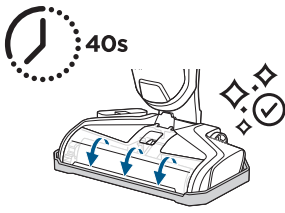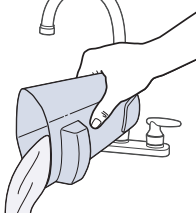
|                                                                                                                        |                                                                                                                                                                                                |                                                                                                                                         |
|------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
|                                      |                                                                                                             |                                                      |
| <p><b>4.</b> To begin the self-cleaning cycle, press and hold the Area Rug / Clean Out Cycle button for 3 seconds.</p> | <p><b>5.</b> The Clean Out Cycle will run for 40 seconds. <b>Note:</b> To stop or pause the cycle, press the Area Rug / Clean Out Cycle button. Press again within one minute to continue.</p> | <p><b>6.</b> Once the clean out cycle has completed, empty the dirty water tank and follow the after-cleaning care steps on page 7.</p> |

**ATTENTION** Do not overwet carpet or hardwood floors. Be careful not to run over loose objects or edges of area rugs. Stalling the brush may result in premature belt failure.


## After-Cleaning Care

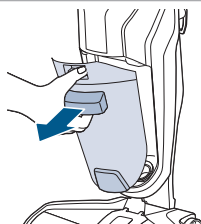▶ Visit [support.BISSELL.com](https://support.BISSELL.com) to watch additional how-to videos.


**Important:** The filter must be cleaned and dried after every use to maximize suction and performance. Replace the filter every 3 months.



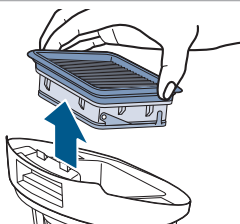
**1.** Remove and empty the dirty water tank following steps 1-3 on page 6.



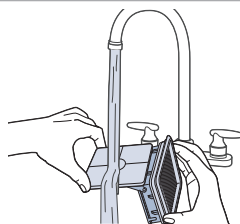
**2.** Hold the top of the tank near the sides of the filter and pull up to remove.



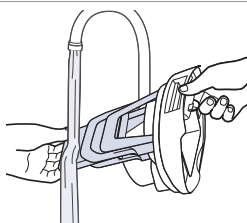
**3.** Wash filter and screen with warm water and mild detergent.



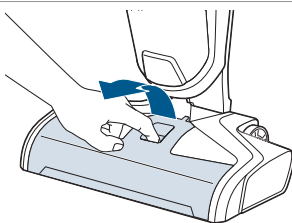
**4.** Rinse the float at the bottom of the top of the dirty water tank cover.



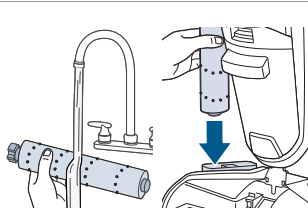
**5.** Remove the brush roll. See page 3 for instructions.



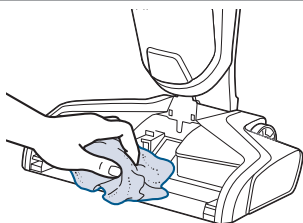**6.** Hand wash with mild detergent. Put the brush roll in the drying tray.



**7.** Wipe out the brush roll chamber.

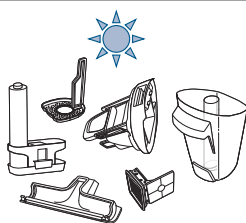

**8.** Leave all parts out to dry before reassembling.

## Storing Your Machine

➤ For more helpful maintenance tips, check out [support.BISSELL.com](https://support.BISSELL.com).

Store machine in a protected, dry area. Since this product uses water, it must not be stored where there is danger of freezing. Freezing will damage internal components and may void the warranty.

**NOTICE** To reduce the risk of a leaking condition, do not store machine where freezing may occur. Damage to internal components may result.

**⚠ WARNING** To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.

## Troubleshooting

Below are some of the issues you may run into. If you don't see the issue you're experiencing below, visit [support.BISSELL.com](https://support.BISSELL.com).

| Problem                      | Possible Cause                                       | Remedies                                                                                  |
|------------------------------|------------------------------------------------------|-------------------------------------------------------------------------------------------|
| Reduced or no spray          | Clean water tank may be empty or seated incorrectly. | Refill and reinstall tank.                                                                |
|                              | System isn't completely primed.                      | Hold trigger for 10 to 15 seconds to make sure the solution has flowed to the spray tips. |
|                              | Brush window is not latched in place.                | Unplug machine and reinstall brush window.                                                |
|                              | Not holding trigger to spray solution.               | Hold trigger continuously while using the machine.                                        |
| Loss of suction or streaking | Tanks may not be seated properly.                    | Remove both tanks and reseal them so they fit properly on the machine.                    |
|                              | Dirty water tank is full.                            | Empty dirty water tank.                                                                   |
|                              | Brush window is not latched in place.                | Unplug machine and reinstall window.                                                      |
|                              | Debris channel in foot is clogged by debris.         | Clean the channel with a paper towel.                                                     |
|                              | Filter clogged by debris.                            | Remove debris clogging the filter screen and clean the filter.                            |
|                              | Too much water applied.                              | Go over area without spraying water.                                                      |
| Brush roll isn't turning     | Brush roll is not installed properly.                | Follow instructions on page 10 for replacing brush roll.                                  |
|                              | Machine is standing upright.                         | Recline machine to turn brush roll on.                                                    |
|                              | Brush roll stalled by debris.                        | Unplug machine and remove brush window and brush roll to remove obstruction.              |
| Machine won't turn ON        | Brush roll stalled by debris.                        | Unplug machine and remove brush window and brush roll to remove obstruction.              |
|                              | Handle not inserted properly into body of machine.   | Reinsert handle and push down until it clicks in to place.                                |
| Machine is leaking           | Cap of clean water tank is not closed properly.      | Remove the clean water tank and reapply the cap.                                          |

**Note:** Any other servicing should be performed by an authorized service representative.

## Warranty

Limited 2-year warranty may vary by state. Visit [support.BISSELL.com](https://support.BISSELL.com) or call 1-800-237-7691 for complete warranty information.

### ♥ Every Purchase Saves Pets™

BISSELL proudly supports BISSELL Pet Foundation® and its mission to help save homeless pets. When you buy a BISSELL® product, you help save pets, too. We're proud to design products that help make pet messes, odors and pet homelessness disappear.

Visit [BISSELLsavespets.com](https://BISSELLsavespets.com) to learn more.



©2023 BISSELL Inc. All rights reserved.  
Part Number 1635667 12/22 RevB