



CROSSWAVE® CORDLESS

Quick Start Usage Instructions

⚠ WARNING Refer to the enclosed user guide for complete instructions and important safety notices.

1

First, insert the handle at the top of the body of the machine until you hear a "click".

2

Place your CrossWave Cordless onto the 3-in-1 Docking Station to charge. For maximum run time, charge unit for 4 hours prior to use.

3

Small Area Cleaning
For small area cleaning (less than 350 sq ft), fill the Clean Water Tank with warm tap water to the first water fill line. Then add formula to the first formula fill line.

Large Area Cleaning
For large area cleaning (up to 700 sq ft), fill the Clean Water Tank with warm tap water to the second water fill line. Then add formula until you get to the second formula fill line. Screw the cap back onto the Clean Water Tank.

4

On the back of the machine, align Clean Water Tank with the grooves and slide tank into place until you hear a "click".

5

HARD FLOOR BUTTON

RUG BUTTON

Turn machine ON by selecting the type of floor you will be cleaning. For hard floors, choose the HARD FLOOR button and for area rugs push the RUG button.

6

Each time you use the product, hold the solution trigger for 10 seconds to prime the system with cleaning solution before you begin cleaning. When you hold the trigger, LED lights will illuminate.

When solution is flowing, you will see bubbles forming at the edges of the brush roll window.

You are ready to start cleaning with your BISSELL CrossWave Cordless!

QUICK START GUIDE


For further instructions
reference the User Guide or visit
www.BISSELL.com

Getting the Best Clean from Your CrossWave® Cordless

For *everyday* Cleaning:

HARD FLOORS & RUGS


Choose the setting that matches the floor type you will be cleaning. Prime the system by holding the solution spray trigger for 10 seconds. Then, hold the trigger on both the forward and backward pass for great cleaning results.

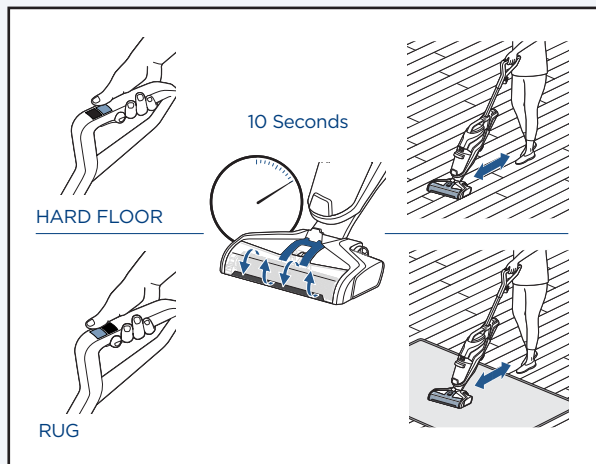

Dirty Machine?

EASY CLEANUP

For the best results, flush the unit by using the 3-in-1 Docking Station and holding down the Clean Out Cycle button on the carry handle. Then, rinse the Dirty Water Tank, Strainer, Brush Roll, and Brush Chamber. Allow your machine and components to dry completely, then reassemble, making sure the machine's brush window is secure for next use.

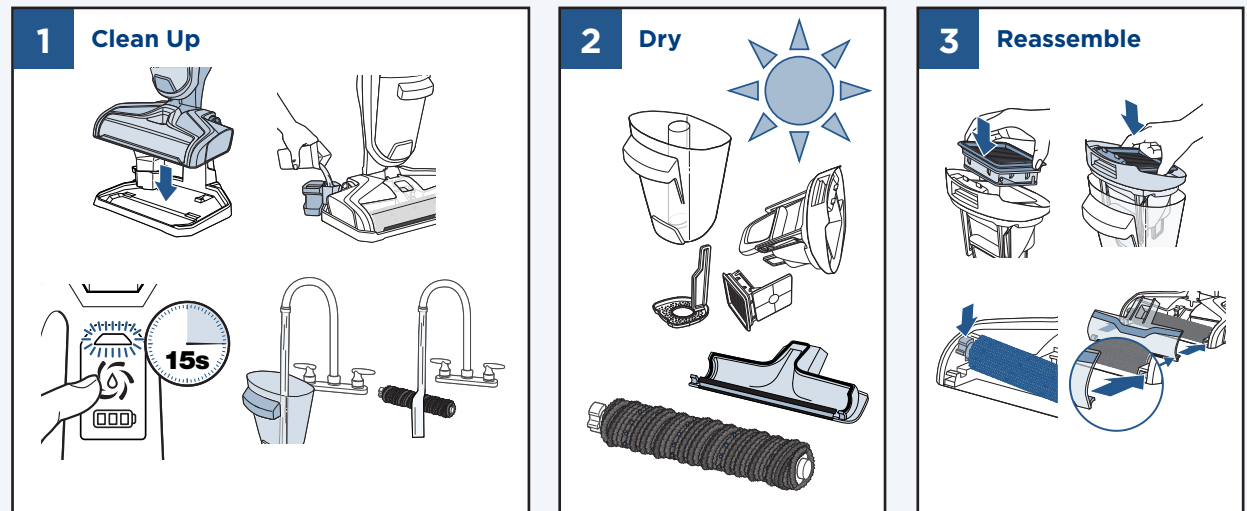

Tips & Tricks

- » On hard floors, there is no need to vacuum before using CrossWave Cordless. This machine vacuums and washes at the same time.
- » To dry floors faster, release the trigger and run the machine over the floor without dispensing solution.
- » When cleaning area rugs, remove any excessive mud from your area rug prior to using your CrossWave Cordless.
- » When cleaning excessively dirty or muddy hard floors, or if the Brush Roll looks dirty, use the 3-in-1 Docking Station to rinse the Brush Roll before cleaning your area rugs.
- » For overly challenging and stuck-on messes on hard floors, activate the RUG mode and hold your CrossWave Cordless over the mess. Using short passes while holding the trigger allows the multi-surface brush to go to work.