

Bissell®

ICONpet™ EDGE CORDLESS VACUUM 2894 SERIES



Go online for a comprehensive walkthrough of your product!

This guide has everything you need to get ready for first use, including setting up, using and maintaining your machine, but online you'll find additional resources like tips and troubleshooting, videos, product registration, parts, and more. Go to **support.BISSELL.com**.

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK OR INJURY:

- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts. Brush Roll continues to rotate when in use.
- » Brush Roll continues to turn while product is turned ON and handle is in use. To avoid damage to carpet, rugs, furniture and flooring, avoid tipping cleaner or setting it on furniture, fringed area rugs, or carpeted stairs during tool use.
- » With Brush Roll on, do not allow cleaner to sit in one location for an extended period of time, as damage to floor can result.
- » Do not expose to rain. Store indoors.
- » Do not use on wet surfaces.
- » Do not allow to be used as a toy.
- » Close attention is necessary when used by or near children.
- » Children should be supervised to ensure that they do not play with the appliance.
- » Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- » Do not use for any purpose other than described in this user guide.
- » Use only manufacturer's recommended attachments.
- » Do not charge the machine outdoors.
- » Do not incinerate the appliance even if it severely damaged. The batteries can explode in a fire.
- » Do not put any object into opening.
- » Do not use with any opening blocked.
- » Keep openings free of dust, lint, hair, and anything that may reduce airflow.
- » Use extra care when cleaning stairs.
- » Do not pick up flammable materials (lighter fluid, gasoline, kerosene, etc.) or use in the presence of explosive liquids or vapors.
- » Always turn OFF this appliance before connecting or disconnecting the motorized nozzle.
- » Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- » Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- » Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- » Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- » Do not use without Dirt Tank or filters in place.
- » Keep appliance on a level surface.
- » If the charger supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- » Do not pull or carry charger by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners.
- » Keep charger cord away from heated surfaces.
- » To unplug, grasp the charger plug, not the cord.

- » Do not handle charger plug or appliance with wet hands.
- » Battery pack, charging port on the hand vac and charger output are not to be short-circuited.
- » The appliance must be disconnected from the battery charger when removing the battery.
- » The battery is to be disposed of safely.
- » Do not recharge, disassemble, heat above 60°C/140°F, or incinerate.
- » Keep batteries out of reach of children.
- » Dispose of used batteries promptly.
- » This appliance contains batteries that are only replaceable by skilled persons.
- » Prevent unintentional starting. Ensure the switch is in the OFF-position before picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- » Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- » Do not use appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- » Do not expose appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C/266°F may cause explosion.
- » Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- » Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- » Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.
- » Keep the temperature range of between 4-40°C/40-104°F when charging battery, storing machine or during use.
- » Use only with charger provided by manufacturer SIL, Model SSC-320110US.
- » Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- » Unplug charger from electrical socket when not in use, before cleaning, maintaining or servicing the appliance, and if your appliance has an accessory tool with a moving brush, before connecting or disconnecting the tool.
- » This appliance contains batteries that are non-replaceable.
- » The battery must be removed from the appliance before it is scrapped.
- » Do not use with damaged cord or charger. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at a service center.
- » Turn OFF all controls before unplugging.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

WARNING

This product contains Lithium-Ion rechargeable batteries. DO NOT mix Lithium-Ion batteries with general household waste. According to Federal and State regulations, removal and proper disposal of Lithium-Ion batteries is required. For specific battery disposal instructions please contact Call2Recycle at 877-723-1297 or visit www.call2recycle.org.





 
 
 
 
We're so happy you chose the ICONpet™ EDGE High-Powered Cordless Vacuum. We put this guide together to help you set up, use and maintain your cordless vacuum. We've also included some tips we think will come in handy when you first start using your cordless vacuum, so let's get started!

For a comprehensive walkthrough of your product, go to **support.BISSELL.com**.

What's in the Box?	4	Emptying the Dirt Tank.....	8
Product View	4	Cleaning & Replacing the Filters	9
Assembly	5	Maintaining the Brush Roll	10
Installing the Wall Storage & Charging Station	5	Troubleshooting.....	11
Charging the Battery	6	Warranty.....	11
Using the Vacuum.....	7		

What's in the Box?

Standard accessories may vary by model. To identify what should be included with your purchase, please refer to the "Carton Contents" list located on the underside of the insert inside the carton.


						
Hand Vacuum Assembly	Extension Wand	Motorized Floor Cleaning Foot	Battery Charger	Wall Storage & Charging Station	Lighted Crevice Tool & Dusting Brush	Lighted Motorized TurboBrush® Tool

Product View

➤ For additional support videos and information about your vacuum, visit support.BISSELL.com.


Product View

1. Hand Vacuum Assembly
2. Power Button
3. Cleaning Mode Button
4. Tank Release Button
5. Dirt Tank
6. Hand Vacuum Release Button
7. Extension Wand
8. Foot Release Button
9. Tangle-Free Brush Roll
10. LED Headlights
11. Motorized Floor Cleaning Foot
12. Charging Port
13. Post-Motor Filter
14. Foot Hose

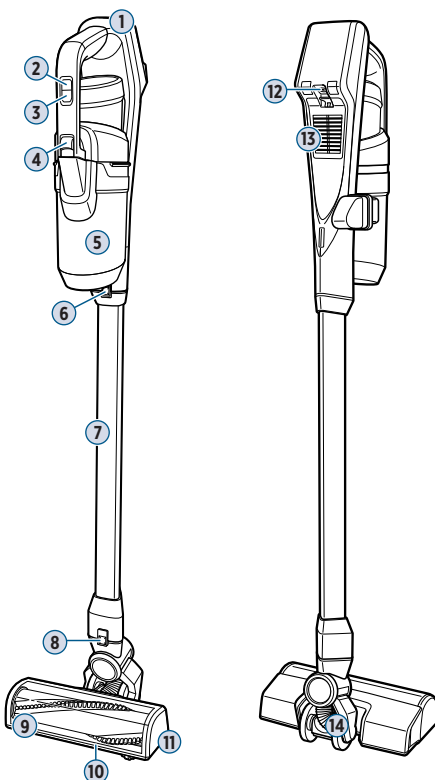


Assembly


➤ Go to support.BISSELL.com for assembly videos.

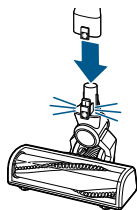

 1. Connect the Extension Wand to Motorized Floor Cleaning Foot. You'll hear a "click" when they're connected.




2. Connect the Hand Vacuum Assembly to the Extension Wand. You'll hear a "click" when they're connected.

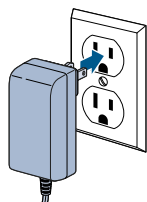


3. Make sure to charge your stick vacuum before first use. Refer to page 6, "Charging the Battery" for instructions.

Installing the Wall Storage & Charging Station


➤ Go to support.BISSELL.com for more tips and video instructions.

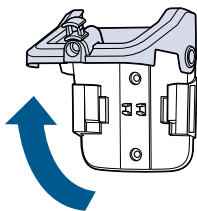


1. Install the Wall Mount & Charging Station near a wall outlet. Open the Wall Storage & Charging Station, use the bubble level to ensure it is level.

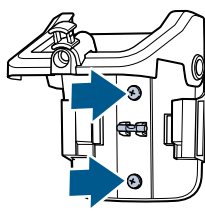


2. Insert two screws to secure to wall.

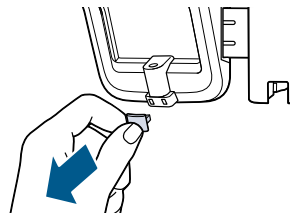


3. Insert the tool holder into the side of the Wall Storage & Charging Station. Remove the power cord clip.

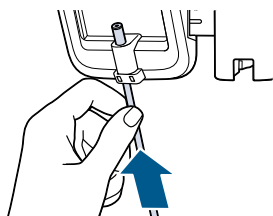

4. Insert the charging cord.

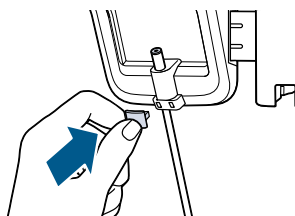

5. Secure with the charging cord clip.

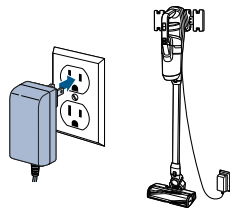

6. Plug the power adapter into the wall and place the machine on the station for charging. Refer to page 6, "Charging the Battery" for instructions.




Charging the Battery


➔ Go to support.BISSELL.com for additional how-to videos.

Before first use, make sure to fully charge your stick vacuum for 4 hours to get a full charge.


Charging with the Hand Vacuum

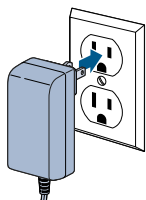

 1. Plug the Battery Charger into the wall.




2. Plug the charger into the charging port on the back of the hand vacuum.

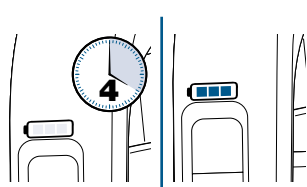


3. Let the hand vacuum charge for 4 hours or until all three sections of the battery charge icon are illuminated.

 Charging with the Wall Storage & Charging Station



1. Follow instructions on page 5 for installing the Wall Storage & Charging Station. Once installed, hang the vacuum onto the station.

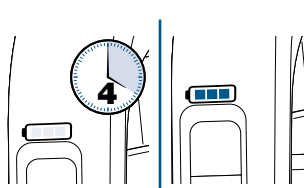


2. Let the vacuum charge for 4 hours or until all three sections of the battery charge icon are illuminated.




Using the Vacuum

Looking for more guidance? Go to support.BISSELL.com for tips and 24-7 support.

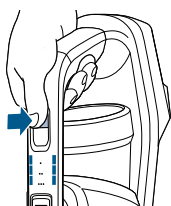

1. Press the Power Button to begin cleaning and to turn OFF the machine when finished cleaning.

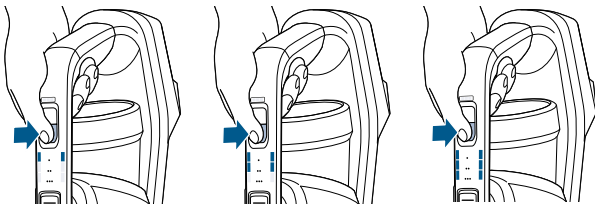


2. Press the Cleaning Mode Button to toggle between the three settings:


- Recommended for maximum suction. It's the most powerful setting which is great for cleaning carpets, however it has the shortest run time. This is the default suction mode when the vacuum is turned ON.
- Recommended for everyday cleaning. It's great for hard floors, low pile carpets and area rugs. It balances power and run time.
- Recommended for the longest run time. It's great for hard floors and offers the quietest sound.

Attaching Tools for Hand Vac Use


Clean stairs or furniture easily with the tools provided. Pair your desired tool with the hand vacuum or extension wand. Go to support.BISSELL.com for tips on using the above floor cleaning tools.

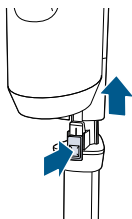

1. Press the release button to disconnect the Extension Wand.

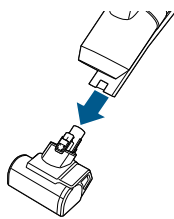

2. Attach your chosen tool.

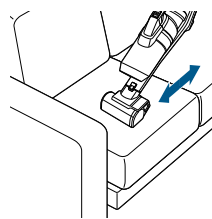


3. Use the tool to clean furniture, stairs or other surfaces in your home.

⚠ WARNING Do not use your vacuum until you are familiar with all instructions and operating procedures.




Emptying the Dirt Tank


➤ More of a video person? Go to support.BISSELL.com for additional how-to videos.

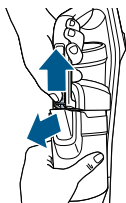


1. Turn OFF your machine. Remove the Dirt Tank from the hand vacuum by sliding the latch on the front of the tank.

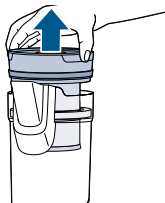


2. Grab the top of the tank and pull up. This will activate a wiping feature to remove debris from the mesh filter screen.

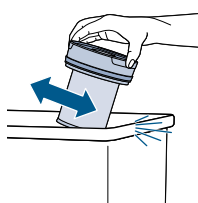


3. Fully remove the separator from the tank and tap the mesh screen on the side of the trash bin.

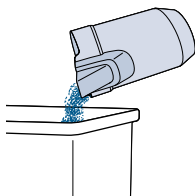

4. Dump dirt from the tank into the trash bin.

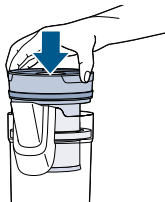

5. Slide the separator back into the tank, ensuring the notch is seated into the tank correctly.

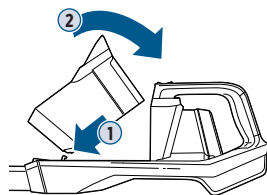

6. Put the whole tank into the hand vacuum by guiding the notched out area on the bottom of the tank onto the hook on the hand vacuum. Push into place.

⚠ WARNING




» Before using your vacuum, make sure that the Dirt Tank is in locked position and that all filters, both pre and post-filters, are in place. DO NOT operate your vacuum without these filters.

Cleaning & Replacing the Filters



Go to support.BISSELL.com for tips on maintaining and replacing your vacuum filters.

Pre-Motor Filters

For best cleaning performance, always clean your pre-motor filter after each use.

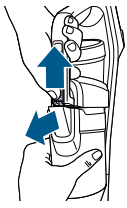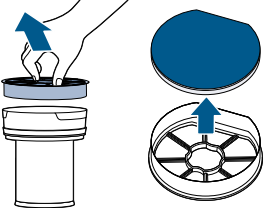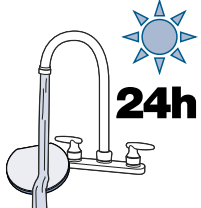		
1. To clean the pre-motor filter, turn OFF machine and remove Dirt Tank from the hand vacuum.	2. Pull filter from the top of the tank. Remove the filter from the filter frame housing. Tap the filter against the side of a trash bin to remove dust and debris.	3. To clean, rinse under warm water and squeeze to remove dirt. Lay out for 24 hours, until completely dry. Make sure to replace your filter in the frame with the tag side down (touching the frame) before using your machine.

Post-Motor Filter

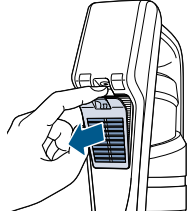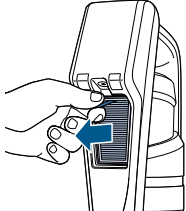		
1. To clean your Post-Motor Filter, turn OFF machine and press the latch on the back of the hand vacuum.	2. Remove the Post-Motor Filter from the vacuum.	3. If there's debris on the filter, tap it on a trash bin and rinse under warm water. Let dry for at least 24 hours before putting it back in the vacuum and replacing the filter cover.


⚠ WARNING

- » Do not use your vacuum until you are familiar with all instructions and operating procedures.
- » Before using your vacuum, make sure that the Dirt Tank is in locked position and that all filters, both pre and post-filters, are in place. DO NOT operate your vacuum without these filters.




Maintaining the Brush Roll


➤ Go to support.BISSELL.com for tips on maintaining and replacing your Brush Roll.

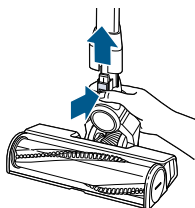


1. Turn the machine OFF and press the Foot Release Button to disconnect the Motorized Floor Cleaning Foot from the Extension Wand.

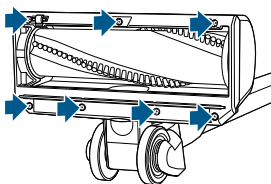


2. Remove the sole plate from the bottom of the foot by unscrewing the seven screws with a Phillips-head screw driver.

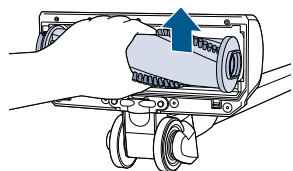

3. Pull the Brush Roll straight up and out of the chamber to remove.

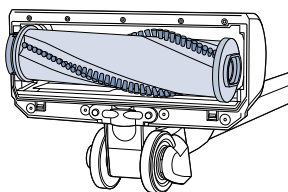

4. To reinsert, push the Brush Roll straight down into the chamber with the flat side of the Brush Roll against the flat side of the chamber wall.

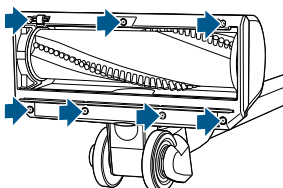

5. Reattach the sole plate to the bottom of the foot by reinserting all seven screws and securing with a Phillips-head screwdriver.





Troubleshooting

For a comprehensive walkthrough of your product and support visit support.BISSELL.com.

This guide has everything you need to get ready for first use, including setting up, using and maintaining your machine, but online you'll find additional resources like tips and troubleshooting, videos, product registration, parts, and more.

Problem	Possible Cause	Remedies
Vacuum won't pick up dirt	Filters are dirty.	Remove and rinse Pre- and Post-Motor Filters. Allow enough time for them to dry properly before reinserting.
	There is a clog in the vacuum.	Remove the foot and Extension Wand from the hand vacuum. Check for debris buildup or clogs in each of these sections. Clear any debris or clogs before reassembling.
	Dirt Tank is not seated correctly.	Remove the tank and reseal properly.
Dirt is escaping from the vacuum	Dirt Tank is full.	Empty the tank.
	Filters are missing or dirty.	Check to see if the Pre- and Post-Motor Filters are in place and clean. Clean filters if necessary.
	There is a clog in the vacuum.	Remove the foot and Extension Wand from the hand vacuum. Check for debris buildup or clogs in each of these sections. Clear any debris or clogs before reassembling.
Vacuum won't charge	Wrong charger is being used.	Use only the charger that comes with the machine.
	Charger is not plugged into the machine properly.	Remove the charger and reinstall into the hand vacuum.

Errors

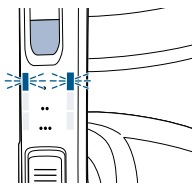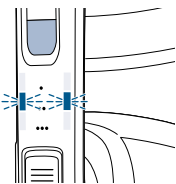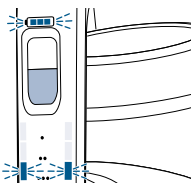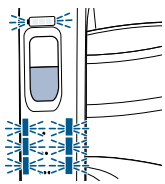			
Cause: Suction motor fault. Remedy: Turn machine OFF. Check and clean filters. Check for and clear any clogs. If this doesn't solve the problem, contact Consumer Care.	Cause: Brush Roll stall. Remedy: Turn machine OFF. Check for and clean any debris from the Brush Roll. Turn machine ON.	Cause: Battery issue. Remedy: Contact Consumer Care.	Cause: Air flow issue. Remedy: Turn machine OFF. Check and clean filters. Check for and clear any clogs. If this doesn't solve the problem, contact Consumer Care.

Warranty

2-Year limited warranty, may vary by state. Visit support.BISSELL.com or call 1-800-237-7691 for complete warranty information.



We're Waggin' Our Tails!

BISSELL® proudly supports BISSELL Pet Foundation® and its mission to help save homeless pets. When you buy a BISSELL product, you help save pets, too. We're proud to design products that help make pet messes, odors and pet homelessness disappear. Visit **[BISSELLsavespets.com](https://www.bissell.com/savespets)** to learn more.

But wait, there's more!

Join us online for a complete guide to your new product, including troubleshooting, product registration, parts and more.

Go to [support.BISSELL.com](https://support.bissell.com).



REGISTER



INFO



VIDEOS



PARTS



SUPPORT



©2020 BISSELL Inc. All rights reserved.
Part Number 1622065 04/20 RevC