




POWERGLIDE® PET SLIM 3070 SERIES

CLEANVIEW® PET SLIM 2831, 3925 SERIES

PET HAIR ERASER® SLIM 3875 SERIES

CORDED VACUUM CLEANER

Important Safety Instructions.....	2
What's in the Box?	3
Assembly	3
Using the Vacuum	3
Attaching Tools for Hand Vac Use.....	4
Emptying the Dirt Tank.....	4
Cleaning & Replacing the Filter.....	5
Maintaining the Brush Roll.....	5
Troubleshooting.....	6
Warranty.....	6

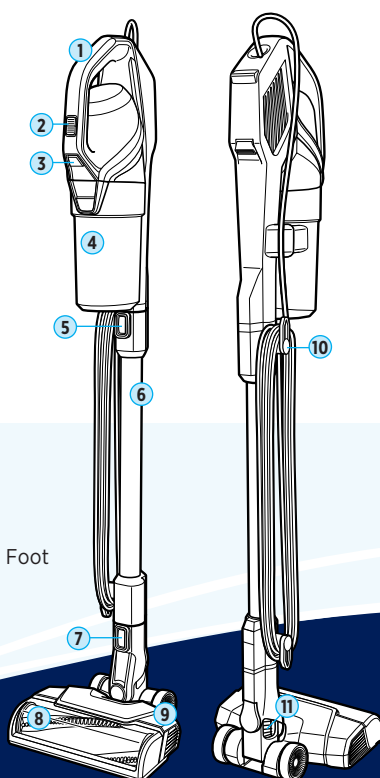

Product Overview

- | | |
|-------------------------------|----------------------------------|
| 1. Hand Vacuum | 7. Foot Release Button |
| 2. Power Switch | 8. Tangle-Free Brush Roll |
| 3. Tank Release Button | 9. Motorized Floor Cleaning Foot |
| 4. Dirt Tank | 10. Cord Wrap |
| 5. Hand Vacuum Release Button | 11. Foot Hose |
| 6. Extension Wand | |



Meet your new BISSELL® product!

Go to **[support.BISSELL.com](https://support.bissell.com)** for a comprehensive walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not leave vacuum cleaner when it is plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn OFF all controls before plugging or unplugging vacuum cleaner.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without filters in place.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Use only on dry, indoor surfaces.
- Keep appliance on a level surface.
- Do not carry the vacuum cleaner while it is running.
- Unplug before connecting or disconnecting the TurboBrush® Tool.
- Always connect to a polarized outlet (one slot is wider than the other). Unplug from outlet when not in use and before conducting maintenance. Do not modify the polarized plug to fit a non-polarized outlet or extension cord.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Any servicing other than what is recommended in this instruction manual should be performed by an authorized service facility.

THIS APPLIANCE HAS A POLARIZED PLUG.

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

COMMERCIAL USE OF THIS UNIT voids THE MANUFACTURER'S WARRANTY.


What's in the Box?

Standard accessories may vary by model. To identify what should be included with your purchase, please refer to the "Carton Contents" list located on the carton top flap.

				
Hand Vacuum	Extension Wand	Foot	Crevice Tool	Dusting Brush

Assembly



 
▶ Go to support.BISSELL.com for assembly videos.

		
1. Connect extension wand to motorized floor cleaning foot until it clicks into place.	2. Connect hand vacuum to extension wand until it clicks into place.	3. Wrap cord on cord clips.

Using the Vacuum


🔊 Looking for guidance? Go to support.BISSELL.com for tips and 24-7 support while cleaning.

Your machine can be used as a stick vacuum, hand vacuum or for extended reach with the hand vacuum and extension wand.

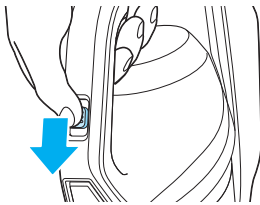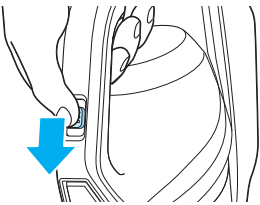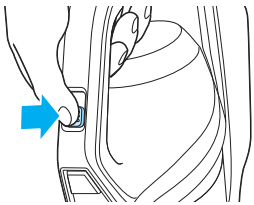
		
1. Slide power switch down to begin cleaning and back up to turn OFF when finished cleaning.	2. Choose your cleaning mode: Hard Floor Mode Slide power switch down 1 notch. This mode is great for hard floors, low pile carpets and area rugs and provides a quieter sound. Brush roll does not spin in hard floor mode.	Carpet Cleaning Mode Slide power switch down 2 notches. This is recommended for maximum suction and provides the most powerful clean. This mode is perfect for high, medium and low pile carpet.

Attaching Tools for Hand Vac Use

 
➔ Go to **support.BISSELL.com** for tips on tools.



1. To use as a hand vacuum, press release button to disconnect from extension wand.

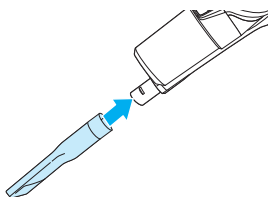


2. Attach your chosen tool.

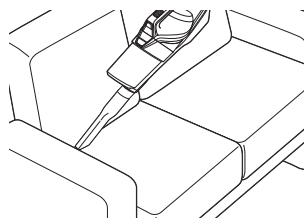

3. Use tool to clean furniture, stairs or other surfaces in your home.

Emptying the Dirt Tank


▶ More of a video person? Go to **support.BISSELL.com** for additional how-to videos.

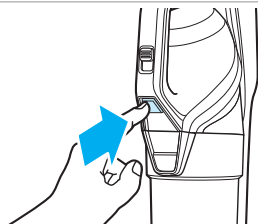


1. Turn OFF your machine. Remove dirt tank from hand vacuum by pressing tank release button on front of tank and sliding tank out.




2. Grab middle grip from filter and pull up. Twist grip to remove filter only.

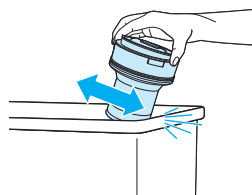


3. Fully remove separator from tank and tap mesh screen on side of a trash bin.

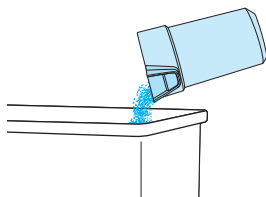

4. Dump dirt from tank into trash bin.

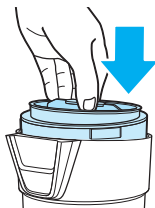

5. Slide separator back into tank, ensuring notch is seated into tank correctly.

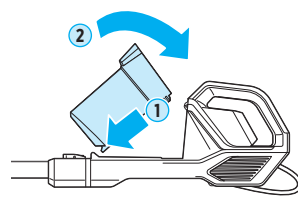


6. Put whole tank into hand vacuum by guiding notched area on the bottom of tank onto hook on hand vacuum. Push until it clicks into place.

⚠ WARNING


- Do not use vacuum until you are familiar with all instructions and operating procedures.
- Before using your vacuum, make sure dirt tank is in locked position and filter is in place. DO NOT operate vacuum without filter.

Cleaning & Replacing the Filter

 
➔ Go to support.BISSELL.com for tips on maintaining and replacing your vacuum filter.



1. For best cleaning performance, always clean filter after each use. Turn machine OFF. Remove dirt tank by pressing tank release button and sliding tank out.

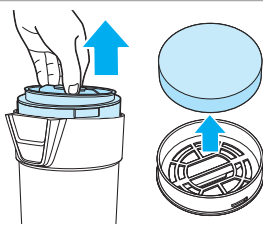


2. Twist top to remove filter frame from separator. Remove filter from filter frame housing. Tap filter against the side of a trash bin to remove dust and debris.

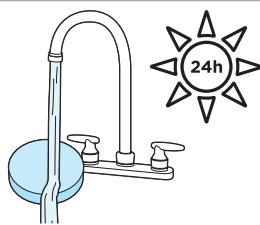


3. Rinse under warm water and squeeze to remove dirt. Lay out for 24 hours until completely dry. Reinstall filter into frame with tag side touching frame.

Maintaining the Brush Roll


➔ Go to support.BISSELL.com for tips on maintaining and replacing your vacuum.

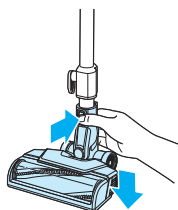


1. Turn machine OFF and press foot release button to disconnect motorized cleaning foot.

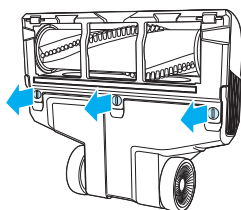


2. Twist bottom screws with a coin to remove bottom cover.

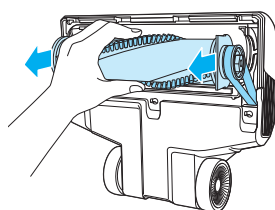

3. Remove brush roll cover and clear any debris from brush roll.

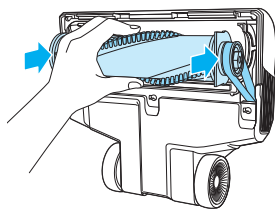

4. Reattach brush roll by inserting into belt and pressing into place.

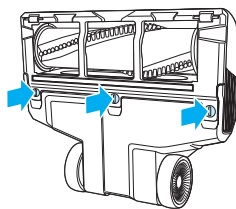

5. Attach and secure bottom cover.

Note: Any other maintenance or servicing not included in this manual should be performed by an authorized service representative.

⚠ WARNING Before using your vacuum, make sure dirt tank is in locked position and filter is in place. DO NOT operate vacuum without filter.

Troubleshooting

Below are some of the issues you may run into. If you don't see the issue you're experiencing below, visit support.BISSELL.com.

Problem	Possible Cause	Remedies
Vacuum won't pick up dirt	Filter is dirty.	Remove and rinse filters. Allow enough time to dry properly before reinserting.
	Vacuum is clogged.	Remove foot and extension wand from hand vacuum. Check for debris buildup or clogs in each of these sections. Clear any debris or clogs before reassembling.
	Dirt tank is not seated correctly.	Remove tank and reseal properly.
Dirt is escaping from vacuum	Dirt tank is full.	Empty tank.
	Filter is missing or dirty.	Check to see if filter is in place. Clean if necessary.
	Vacuum is clogged.	Remove foot and extension wand from hand vacuum. Check for debris buildup or clogs in each of these sections. Clear any debris or clogs before reassembling.
Brush roll doesn't rotate	Wrong power mode is being used.	Ensure switch is pushed all the way to carpet cleaning mode.
	Brush roll has lodged debris or other entanglements, keeping brush from rotating.	Unplug to reset brush motor, checking for and removing debris before turning ON. If problem persists, disconnect foot, remove bottom cover and clear debris & suction path.

**WARNING**

To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting. Other maintenance or service not included in this manual should be performed by an authorized service representative.

Warranty

Limited 2-year warranty, may vary by state. Visit support.BISSELL.com or call 1-800-237-7691 for complete warranty information.



We're Waggin' Our Tails!

BISSELL proudly supports BISSELL Pet Foundation® and its mission to help save homeless pets. When you buy a BISSELL® product, you help save pets, too. We're proud to design products that help make pet messes, odors and pet homelessness disappear.

Visit **BISSELLsavespets.com** to learn more.

But wait, there's more!

Join us online for a complete guide to your new product, including troubleshooting, product registration, parts, and more.

Go to support.BISSELL.com.



REGISTER



INFO



VIDEOS



PARTS



SUPPORT



©2023 BISSELL Inc. All rights reserved.
Part Number 1637985 06/23 v4