




READYCLEAN® CORDLESS XRT 2-IN-1 CORDLESS VACUUM MODEL 31927

Important Safety Instructions	2
What's in the Box?	3
Assembly and Charging	3
Using the Control Buttons	3
Using the 2-Way Folding Handle	4
Using the Hand Vacuum	4
Emptying the Dirt Tank	5
After-Cleaning Care	5
Troubleshooting	7
Warranty	7

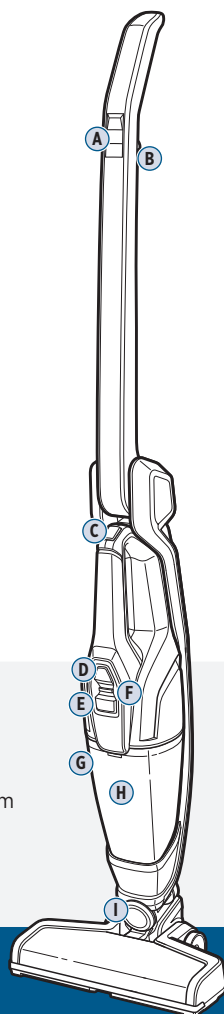

Product Overview

- | | |
|--|-----------------------------|
| A. Fingertip Controls | E. Dirt Tank Release |
| B. 2-Way Folding Handle
Release Trigger | F. Charging Light Indicator |
| C. Hand Vacuum Release Button | G. Detachable Hand Vacuum |
| D. Hand Vacuum Power Button | H. Dirt Tank |
| | I. Swivel Head |



Meet your new BISSELL® product!

Go to support.BISSELL.com for a walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- Do not put any object into opening.
- Do not use with any opening blocked.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle charger, including charger plug and charger terminal with wet hands.
- Do not charge the appliance outdoors.
- Use only the charger supplied by the manufacturer to recharge.
- Do not incinerate the appliance even if it is severely damaged. The batteries can explode in a fire.
- Keep openings free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Use extra care when cleaning stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without dirt tank or filters in place.
- Use only on dry, indoor surfaces.
- Always turn OFF this appliance before connecting or disconnecting the motorized nozzle.
- Do not pull or carry charger by the cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord.
- Prevent unintentional starting. Ensure the switch is in the OFF-position before picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C/265°F may cause explosion.
- Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.
- Keep the temperature range of between 40-104°F when charging battery, storing appliance or during use.
- Use only with charger E-TEK, Model ZD1ZD170080US.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Unplug charger from electrical socket when not in use, before
- cleaning maintaining or servicing the appliance.
- Risk of injury from moving parts. Brush may start unexpectedly. Turn OFF before cleaning or servicing.
- Turn OFF all controls, including the Power Switch and disconnect charger from electrical outlet before making any adjustments, performing maintenance, troubleshooting, changing accessories or storing appliance. Such preventative safety measures reduce the risk of starting the appliance accidentally.
- Battery pack, charging port on the appliance and charger output are not to be short-circuited.
- Do not turn your appliance ON until you are familiar with all instructions and operating procedures.
- This appliance contains batteries that are non-replaceable.
- The battery must be removed from the appliance before it is scrapped.
- Keep appliance on a level surface.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY. COMMERCIAL USE OF THIS UNIT voids THE MANUFACTURER'S WARRANTY.



WARNING

This product contains Lithium-Ion rechargeable batteries. DO NOT mix Lithium-Ion batteries with general household waste. According to Federal and State regulations, removal and proper disposal of Lithium-Ion batteries is required. For specific battery disposal instructions please contact Call2Recycle at 877-723-1297 or visit www.call2recycle.org. For full instructions on battery removal for recycling visit support.BISSELL.com.



SUPPLIER'S DECLARATION OF CONFORMITY 47 CFR SECTION 2.1077 COMPLIANCE INFORMATION

Charger adapter for BISSELL product.
CONTACT: BISSELL Homecare Inc., 2345 Walker Ave. NW, Grand Rapids, MI 49544. This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/TV technician for help.

What's in the Box?



Assembly and Charging

1. Insert foot into body of the vacuum until it clicks.

2. Insert charging adapter plug into the charging port on the back of the vacuum.

3. Plug the adapter into the wall outlet. Charge completely for 4 hours before first use.

LED Light Display Status

In Use

Battery Status	Light Status
In Use	Solid green
Low Power	Blinking red (0.5 sec)
No Power	Solid red (3 sec)
Brush Stall	Solid red, then machine shuts off

Charging

Battery Status	Light Status
Charging	Blinking red (1 sec)
Fully Charged	Green (on 10 min, then blinks every 1 minute)
Charger, Battery, or Motor Error	Red and green blinking, contact BISSELL Consumer Care

Using the Control Buttons


Power ON/OFF: Turns the vacuum on and off

Brush Roll ON/OFF: Turns the motorized brush roll off and on


Brush Speed HI/LO: Adjusts between HI and LO brush speeds

⚠ WARNING Do not plug in your machine until you are familiar with all instructions and operating procedures.

Using the 2-Way Folding Handle

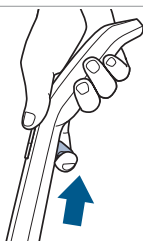

1. Pull the 2-Way Folding Handle Release Trigger under the handle.

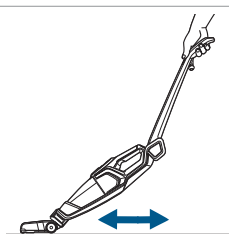


2. Fold the handle forward to easily clean underneath low places.




3. Fold the handle back for easy storage.

 Using the Hand Vacuum

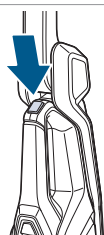


1. Press the button on top of the hand vacuum handle and lightly pull out to remove it from the machine.

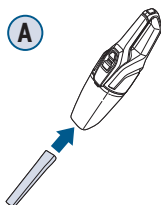


2. Insert the desired tool firmly into the hand vacuum nozzle.

A. Use the crevice tool to reach narrow spaces.

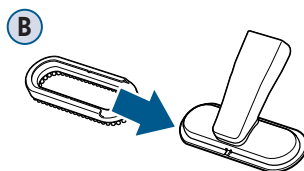


B. The upholstery tool has a felt strip that attracts pet hair while vacuuming upholstery. The dusting brush slides onto the upholstery tool for dusting on hard surfaces.

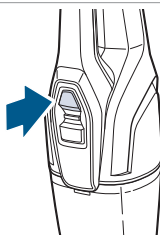

3. Press the power button to begin cleaning.

 Emptying the Dirt Tank

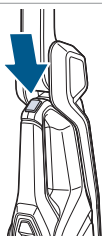


1. Make sure the vacuum is OFF. Remove the hand vacuum by pressing the release button on top of its handle.




2. Hold the hand vacuum vertically and press release button on the front to release the dirt tank.



3. Grasp filter tabs and pull vertically to remove filter assembly.

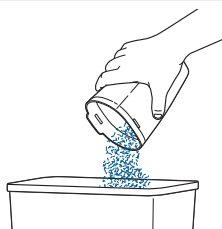

4. Empty dirt into waste container.

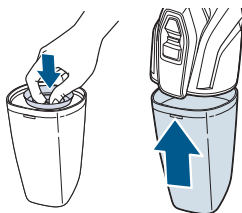


5. Replace filter assembly back into the dirt tank and attach dirt tank to hand vacuum until it snaps securely into place.

After-Cleaning Care

Cleaning the Filters

 
You may rinse the filter and screen in warm water to clean. The filter and screen need to be completely dry before reuse. The key to maximum performance is having a clean filter. Cleaning the filter after each use will help your vacuum operate at peak efficiency.

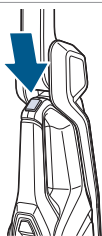

1. Turn power OFF and remove the dirt tank following steps in "Emptying the Dirt Tank" section.



2. Grasp filter tabs and lift up to remove the washable filter assembly from the dirt tank.


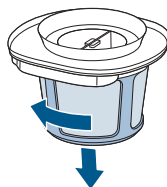


3. Grip the filter assembly and turn counter-clockwise and lift down to remove filter from filter screen.







CONTINUED ON NEXT PAGE ➡

⚠ WARNING To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.

After-Cleaning Care (continued)

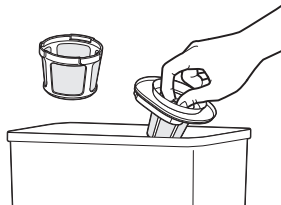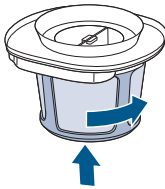		
4. Tap firmly against the inside of a waste container, removing any visible dirt.	5. Replace filter back into the filter screen then turn clockwise to lock into place.	6. Attach filter assembly back into the dirt tank and attach to hand vacuum until it snaps securely in place.

 Maintaining the Brush Roll

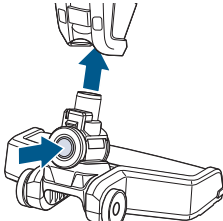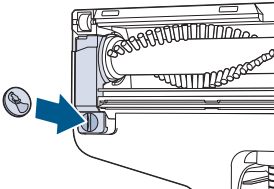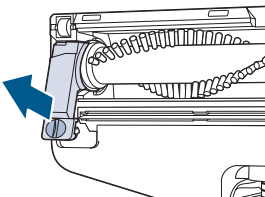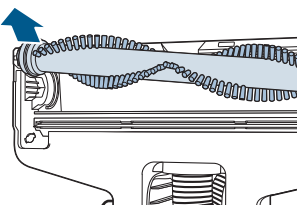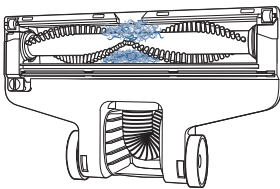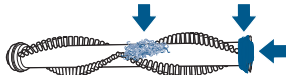		
1. Make sure the vacuum is OFF. Press the vacuum foot release button to disconnect it from the vacuum.	2. Turn the foot over and locate the brush roll cover tab. Use a coin to remove the brush roll, turning counter-clockwise to unlock.	3. Slide the tab down to unlock and lift the corner cover piece.
		
4. Grasp the brush roll and remove. Clean off hair or debris from brush. Place the cleaned brush roll back into the foot of the machine and use coin to turn lock clockwise to lock into place.	5. If the brush roll stops spinning due to debris, the LED light will turn solid red.	6. BRUSH ROLL RESET: Turn machine OFF and remove debris from brush roll and brush roll endcap area, following the steps above. Replace brush roll and turn machine ON to reset.

Note: Make sure the brush roll cover tab is locked back into place to prevent breaking or faulty brush roll.

Any other maintenance or servicing not included in this manual should be performed by an authorized service representative.

WARNING

- To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.
- Do not operate your machine with damp or wet filters or without filters in place.

Troubleshooting

Problem	Possible Cause	Remedies
Vacuum won't turn ON	Battery isn't fully charged.	Charge battery. Follow charging battery instructions on page 3.
	Wrong charger is being used.	Be sure to use only the charger supplied with your product. The label on the detachable hand vacuum will list which charger can be used.
Brush roll not turning	Brush roll is jammed.	Remove obstruction. Follow instructions on page 6.
	Brush roll needs to be reset.	Follow instructions on page 6.
	Broken brush roll belt.	Visit www.bissell.com or call 1-800-237-7691 to order replacement parts.
Vacuum cleaner has low suction	Dirt tank is full.	Empty dirt tank.
	Dirt tank isn't installed properly.	Position dirt tank correctly and snap firmly into place.
	Foot is loose.	Make sure foot is fully inserted into body of machine.
	Filters need cleaning.	Follow filter instructions on page 6.
	Filters need replacing.	Visit www.BISSELL.com or call 1-800-237-7691 to order replacement filters.
	Clog or obstruction in foot area.	Detach foot from main body and examine and remove clog from brush chamber.
Visible dirt escaping from cleaner	Dirt tank is full of debris.	Empty dirt tank.
	Filter assembly is missing or installed incorrectly.	Check filter for correct installation.
	Dirt tank installed incorrectly.	Position dirt tank correctly and snap firmly into place.
Vacuum won't charge	Wrong charger is being used.	Use only the charger that comes with the machine.
Vacuum won't turn on and LED light is solid RED	Hand vacuum may not be installed in place properly.	Remove the hand vacuum and install it properly.
	Brush roll stalled by debris.	Clear the brush roll and brush roll endcap area. Follow instructions on page 6.

Warranty

Limited 2-year warranty, may vary by state. Visit **support.BISSELL.com** or call 1-800-237-7691 for complete warranty information.

Terms and Conditions

Your purchase is subject to the BISSELL® Terms and Conditions, which includes dispute resolution through arbitration and class waiver. For complete terms or to opt out from arbitration or class waiver, visit BISSELL.com/terms-of-use or call 1-800-237-7691.

NOTICE Disconnecting the battery will destroy the appliance and invalidate the warranty.



Every purchase makes it possible for BISSELL to continue our support of BISSELL Pet Foundation® and its mission of saving pets in need. Since 2011, BISSELL has donated over \$26 million in support of BISSELL Pet Foundation®. When you purchase a BISSELL® product, you help save pets, too. Our products are engineered to clean even the toughest messes so pets can stay at home and out of shelters.

Visit **[BISSELLsavespets.com](https://www.bissellsavespets.com)** to learn more.

Need more support?

Head to **[support.BISSELL.com](https://support.bissell.com)** to troubleshoot, register your product, order spare parts, view your warranty, and more.



INFO



REGISTER



VIDEOS



PARTS



SUPPORT



©2025 BISSELL Inc. All rights reserved.
Part Number 1647098 11/24 v2