 




POWERFRESH® SLIM 3-IN-1 SANITIZING STEAM MOP & HANDHELD STEAMER 2075 SERIES

What's in the Box?	3
Setting up the Wall Mount (select models only)	3
Attaching the Toolbox	3
Accessories and Tools	4
Filling Your Water Tank	5
Using SmartSet Steam Control	6
Steam Cleaning & Sanitizing* Hard Floors	7
Steam Cleaning & Sanitizing* Above Floor	8
After-Cleaning Care	10
Storing Your Machine	10
Troubleshooting	11
Warranty	11

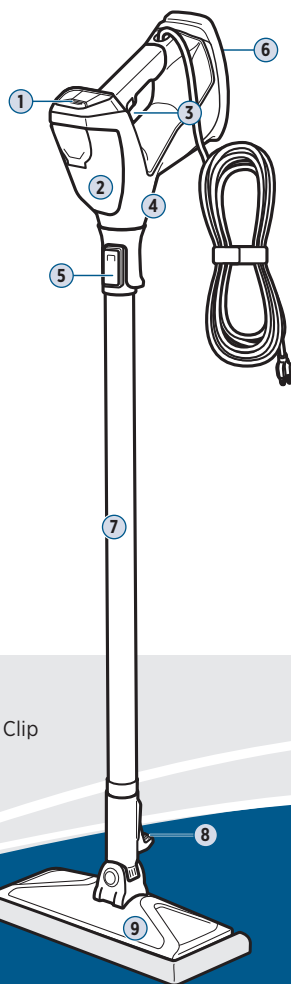

Product Overview

- | | |
|--------------------------------|------------------------------------|
| 1. SmartSet Steam Control | 6. Wall Mount/Toolbox Storage Clip |
| 2. Easy Fill Water Tank | 7. Extension Wand |
| 3. Steam Trigger | 8. Extension Wand Release Pedal |
| 4. Handheld Pod | 9. Mop Foot |
| 5. Handheld Pod Release Button | |



Meet your new BISSELL product!

Go to **support.BISSELL.com** for a comprehensive walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- This appliance can be used by children 8 years old and above, and persons with reduced physical, sensory and mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- If the cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Use extra care when cleaning on stairs.
- Do not use with damaged cord or plug.
- Do not expose this product to rain or moisture. Store indoors when not in use.
- Always turn OFF this appliance before connecting or disconnecting the nozzle. Do not direct steam at people, animals, or at electrical outlets.
- Unplug from outlet when not in use and before conducting maintenance or troubleshooting.
- Do not leave steam cleaner unattended.
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- Do not service steam cleaner when it is plugged in.
- Do not handle steam cleaner with wet hands.
- Do not use steam cleaner if it has been dropped, damaged, left outdoors or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, or expose cord to heated surfaces.
- Do not unplug by pulling on cord.
- Do not use appliance in an enclosed space filled with vapor given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not allow to be used as a toy.
- Do not use on leather, wax polished furniture or floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.
- Do not immerse in water or liquid.
- Not for space heating purposes.
- Do not use for any purpose other than described in this user guide.
- Use only manufacturer's recommended attachments – use of attachments not provided or sold by BISSELL® may cause fire, electric shock or injury.
- Never put descaling, aromatic, alcoholic, detergent or vinegar products into the steam cleaner, as this may damage it or make it unsafe for use.
- Unplug by grasping the plug, not the cord.
- Close attention is necessary when used by or near children.
- Keep the appliance out of reach of children when it is energized or cooling down.
- The foot surfaces are liable to get hot during use.
- Do not open the aperture during use.
- Extension cords (or longer detachable power-supply cords) are available and may be used if care is exercised in their use.
- If an extension cord (or a long detachable power-supply cord) is used: The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
- If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.
- The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- To reduce the risk of a leaking condition, do not store where freezing may occur. Damage to internal components may result.
- Keep appliance on a level surface.
- Always connect to a properly earthed electrical socket.
- Do not modify earthed plug.
- Surface may be hot. Avoid contact.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

COMMERCIAL USE OF THIS MACHINE VOIDS THE MANUFACTURER'S WARRANTY.



THESE SYMBOLS MEAN WARNING:


Any use of steam has the potential danger of scalding.

WARNING

Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you aren't sure if the outlet is properly grounded. DO NOT MODIFY THE PLUG. If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is designed for use on a nominal 120-volt circuit, and has a grounding attachment plug that looks like the plug in the illustration. Make certain that the appliance is connected to an outlet having the same configuration as the plug. No plug adapter should be used with this appliance.



GROUNDING INSTRUCTIONS

This appliance must be connected to a grounded wiring system. If it should malfunction or break down, grounding provides a safe path of least resistance for electrical current, reducing the risk of electrical shock. The cord for this appliance has an equipment-grounding conductor and a grounding plug. It must only be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.


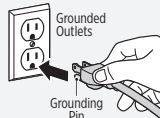


What's in the Box?

Standard accessories may vary by model. To identify what should be included with your purchase, please refer to the "Carton Contents" list located on the carton top flap.


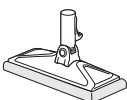
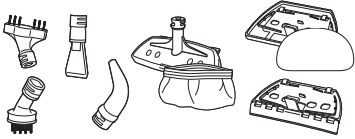
					
Handheld Pod	Extension Wand	Mop Foot	Soft Mop Pad	Scrubby Mop Pad	Water Cup
					
Wall Mount & Screws	Tool Bag	Toolbox	Tools (vary by model)		

Setting up the Wall Mount *(select models only)*

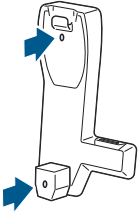
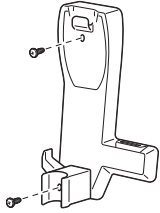
	
1. Place wall mount against wall in area where you would like to store your machine.	2. Place each screw through the two holes in the wall mount. Use a screwdriver or drill to attach to the wall.

Note: Machine does not stand up on its own. If the wall mount was not included with your model or you are not using wall mount, make sure your machine is stored in a safe place. Store in the upright position against a firm surface to prevent from falling over.

Attaching the Toolbox

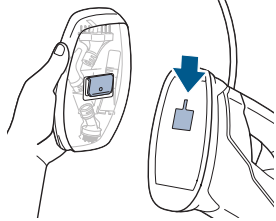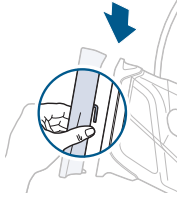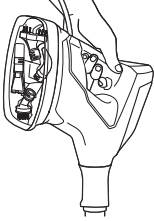		
1. Attach the toolbox to the handheld pod by aligning the clip on the back side of the toolbox to the opening on the bottom of the handheld pod and slide down into place.		

Accessories and Tools

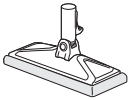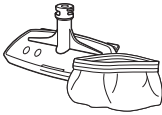
			
Extension Wand Connects to handheld pod. Use with mop foot to clean sealed hard floor surfaces or with attachments to clean high, low and hard-to-reach areas.	Mop Foot Connects to extension wand. Use with microfiber mop pads to clean and sanitize sealed hard floor surfaces.	Soft Mop Pad Attaches to mop foot. Use to clean everyday messes or more delicate floor surfaces. Made of microfiber material and machine washable.	Scrubby Mop Pad Attaches to mop foot. Use to clean tough, stuck-on messes or more durable floor surfaces**. Made of microfiber material and machine washable.
			
Colored Bristle Brushes Connects to extension wand or handheld pod. Provides scrubbing power. Red, green and black bristle brushes included so you can designate different colors for different rooms or messes.	Grout Tool Connects to extension wand or handheld pod. Provides focused scrubbing power for grout.	Flat Scraper Tool Connects to extension wand or handheld pod. Use to scrape off stuck-on messes.	Angle Concentrator Tool Connects to extension wand or handheld pod. Designed to focus steam in odd angles or areas.
			
Flat Surface Tool and Mop Pad Connects to extension wand or handheld pod. Attaches to Fabric Steamer (no Fabric Steamer Cloth attached). Use with Flat Surface Mop Pad to clean large, flat surfaces.	Fabric Steamer and Cloth Connects to extension wand or handheld pod. Use with Fabric Steamer Cloth to clean and refresh clothing, drapes and upholstered surfaces. Fabric Steamer Cloth is machine washable.	Fabric Steamer and Window Squeegee Connects to extension wand or handheld pod. Attaches to Fabric Steamer (no Fabric Steamer Cloth attached). Use to clean windows, glass and mirrors.	

*Kills 99.9% of Human Coronavirus (Strain 229E), Influenza A Virus (H1N1), Staphylococcus aureus, Klebsiella aerogenes, Aspergillus niger (mop pad), and Trichophyton interdigitale (handheld) when used as directed. Testing conducted in a third-party laboratory under controlled conditions. Results may vary.

**Test in a small, hidden area before use to ensure the surface with not damage with heavy duty scrubbing. If surface is not durable enough, do not use.

Filling Your Water Tank


Note: Use of distilled water in place of tap water is recommended for optimal steam performance and to prolong the life of your steamer. To add a fresh scent as you clean, try BISSELL® Demineralized Waters in scents like Citrus, Eucalyptus Mint and Spring Breeze. Do not use chemicals in the water tank of your machine. Other solutions may harm the machine.

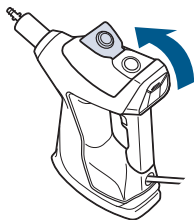


1. Pull water tank cap straight up to open.



2. Fill measuring cup with distilled water.

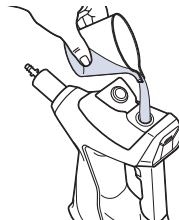


3. Fill water tank.

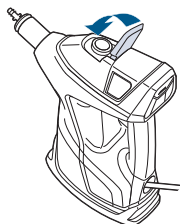

4. Close cap after filling.

Using SmartSet Steam Control


Note: You must wait until the STEAM READY light is a solid color before selecting your desired steam level. Upon the first use of your steamer or first use after refilling the Easy Fill water tank, the pump may make a “knocking” sound. This is normal and will diminish after a few seconds.

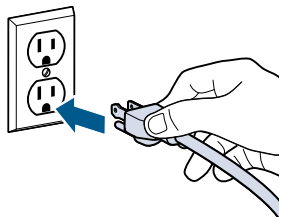

1. Plug machine into a properly grounded outlet.



2. The **STEAM READY** light will start to blink.

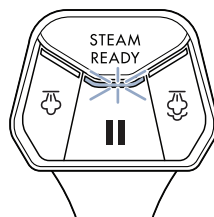

3. After 30 seconds, the **STEAM READY** light will turn to a solid light. Steamer is heated and ready to use.




4. Select a desired steam level based on your cleaning needs.



Push **HI STEAM** button once to turn ON. Use when cleaning durable surfaces, tough stains and stuck-on or sticky messes.



Push **LOW STEAM** button once to turn ON. Use for cleaning more delicate surfaces and lighter, everyday messes.

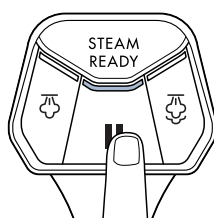

5. To turn steam OFF, press the PAUSE button once.

Steam Cleaning & Sanitizing* Hard Floors



Your steam cleaner was tested by third-party laboratories under controlled conditions to ensure it sanitizes and kills 99.9% of germs, bacteria and viruses*, including Coronavirus and Influenza viruses. Please use as directed; your results may vary.

CLEANING TIPS: Before cleaning and sanitizing*, thoroughly sweep or vacuum floor.

Your steam cleaner is designed to clean hard flooring such as ceramic tile, laminate, marble, stone, and sealed hardwood floors. Use of your steam cleaner on waxed or some unwaxed floors may result in a diminished glossiness. The steam cleaner is not for use on unsealed floors. For best results, test in an inconspicuous area and check the care instructions from your flooring manufacturer.




1. Attach mop pad by wrapping pad around bottom of mop foot. Ensure gray stitching is on front of foot and quick grip release tab is on back.	2. Attach extension wand to mop foot by clicking it into place. Insert handheld pod to the extension wand until it clicks into place.	3. Plug machine into a properly grounded outlet.
4. Make sure STEAM READY light is solid before selecting appropriate steam level based on your hard floor cleaning needs.	5. Step on side of mop foot to recline machine to begin cleaning.	6. Push steam trigger underneath handle of handheld pod to release steam.
7. Move mop foot back and forth to clean floors. Swivel to clean tight spaces.	8. To sanitize* use microfiber mop pad on mop foot. Slowly and evenly move back and forth at least three times using continuous steam. Remove pad after use and wash.	9. When finished, press PAUSE button to turn OFF. Unplug machine.


*Kills 99.9% of Human Coronavirus (Strain 229E), Influenza A Virus (H1N1), Staphylococcus aureus, Klebsiella aerogenes, Aspergillus niger (mop pad), and Trichophyton interdigitale (handheld) when used as directed. Testing conducted in a third-party laboratory under controlled conditions. Results may vary.

Steam Cleaning & Sanitizing* Above Floor

Before changing from mopping to the handheld feature or disconnecting a tool from the handheld pod or extension wand, make sure steam is no longer coming from the nozzle by releasing the trigger and pressing the PAUSE button.

Using the Extension Wand

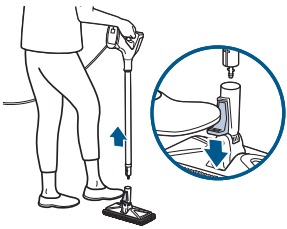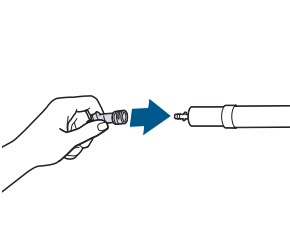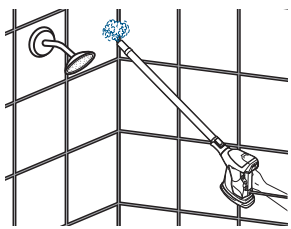
		
1. Remove extension wand from foot. Step down on pedal on back of steamer and lift up to release wand.	2. Attach desired tool to end of extension wand.	3. Press trigger under handle to release steam.

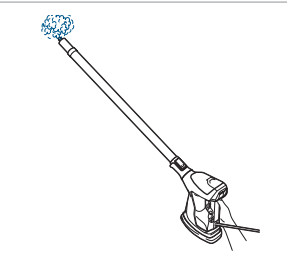	4. To sanitize a non-porous, hard surface, do not use tools on the end of the steam nozzle. Hold steam nozzle within one inch from the surface to be sanitized and apply steam for 45 seconds.
--	---

CAUTION

Let steam cool down before removing tools. The end of the extension wand or handheld pod will be hot.



Using the Handheld Pod

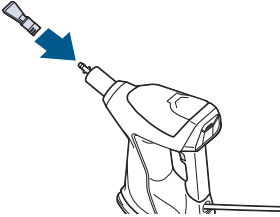		
1. Remove extension wand.	2. Attach desired tool to end of handheld pod.	3. Press trigger under handle to release steam.


4. To sanitize a non-porous, hard surface, do not use tools on the end of the steam nozzle. Hold steam nozzle within one inch from the surface to be sanitized and apply steam for 45 seconds.


*Kills 99.9% of Human Coronavirus (Strain 229E), Influenza A Virus (H1N1), Staphylococcus aureus, Klebsiella aerogenes, Aspergillus niger (mop pad), and Trichophyton interdigitale (handheld) when used as directed. Testing conducted in a third-party laboratory under controlled conditions. Results may vary.

Removing Tools

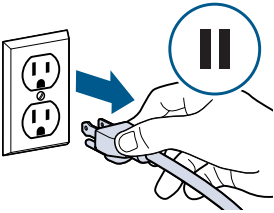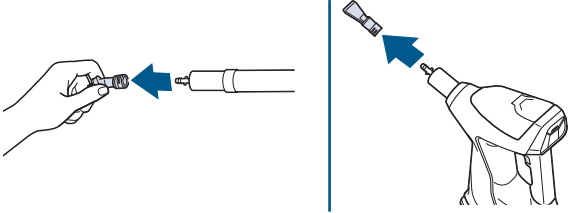
	
1. Press PAUSE button to turn OFF. Unplug machine.	2. Wait for steam to stop. Remove tools from extension wand and/or handheld pod before reassembling.

After-Cleaning Care

➤ For more helpful maintenance tips, check out support.BISSELL.com.

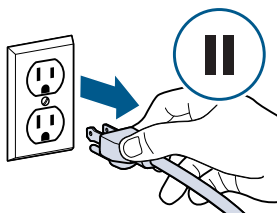


1. Press PAUSE button to turn OFF. Unplug machine.

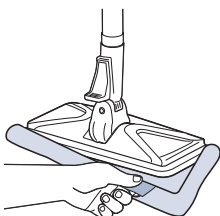

2. Carefully remove mop pad using Quick Grip Release tab.


NOTE: Mop pad and foot may be hot.

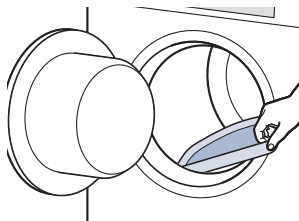

3. Mop pads can be machine washed in warm water. Use only non-bleach liquid detergents. Do not use fabric softeners or bleach. For best results, air dry.

Storing Your Machine


➤ For more helpful maintenance tips, check out support.BISSELL.com.

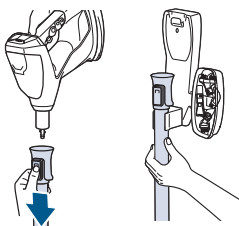


Optional: Detach extension wand from handheld pod. Clip extension wand into holder.




1. Rotate foot vertically.

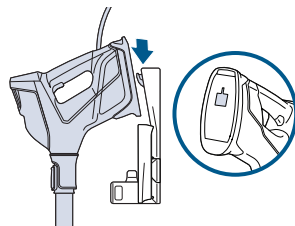


2. Find opening on back of handheld pod and hook onto wall mount.

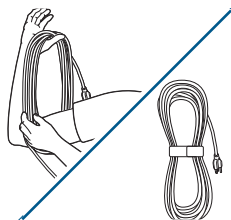

3. Wrap cord around palm of your hand into a circle. Attach wrap strap around cord to secure.

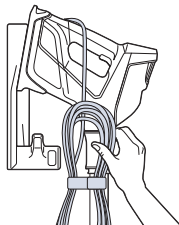

4. Hang power cord and tool bag on left-side hook.

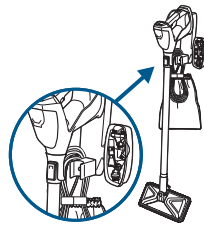

⚠ WARNING To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.

Troubleshooting

Below are some of the issues you may run into. If you don't see the issue you're experiencing below, visit support.BISSELL.com.

Problem	Possible Cause	Remedies
Reduced steam or no steam	Easy Fill water tank empty.	Refill tank.
	Steam level not selected.	Select steam level by pushing steam level button.
	Extension wand not installed properly.	Push wand all the way into handheld pod until it clicks into place.
	Mop foot not installed properly.	Insert extension wand into mop foot until it clicks into place.
	Pause button is pressed.	Once steam ready light is solid, select desired steam level (HI or LO) then press trigger under handle of handheld pod to release steam.
	Mineral deposits from hard water caused clog.	Contact BISSELL Consumer Care at support.BISSELL.com or call 1-800-237-7691.
Streaking	Dirty mop pad.	Remove and wash pad per instructions.
	Use on waxed or oiled floor.	If you have used floor polishes or wax on your floors, steam products may decrease glossiness. Refer to wax or polish manufacturer. If you don't wax or polish your floors, check floorcare instructions from your flooring manufacturer.
Leaking	Mop pad is too wet.	Remove and replace with dry mop pad and intermittently press steam trigger for less steam.
	Steam level is too high.	Lower steam level.
	Crack in machine or Easy Fill water tank.	Check to see if there are any cracks on machine or tank. Make sure rubber gasket on tank is still attached and seated properly in machine.
Knocking noise	First time use or Easy Fill water tank is empty.	Fill tank and knocking will diminish after a few seconds.
	Metal tube cannot reach water.	Shake pod to let tube reach water level.

⚠ WARNING To reduce the risk of fire, electric shock or injury, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting.

Warranty

Limited 2-year warranty, may vary by state. Visit support.BISSELL.com or call 1-800-237-7691 for complete warranty information.



We're Waggin' Our Tails!

BISSELL proudly supports BISSELL Pet Foundation® and its mission to help save homeless pets. When you buy a BISSELL® product, you help save pets, too. We're proud to design products that help make pet messes, odors and pet homelessness disappear.

Visit **[BISSELLsavespets.com](https://www.bissellsavespets.com)** to learn more.

But wait, there's more!

Join us online for a complete guide to your new product, including troubleshooting, product registration, parts, and more.

Go to [support.BISSELL.com](https://support.bissell.com).



REGISTER



INFO



VIDEOS



PARTS



SUPPORT



©2023 BISSELL Inc. All rights reserved.
Part Number 1632078 09/23 v2