



Welcome to BISSELL

air280MAX
A I R P U R I F I E R



Important Safety Instructions



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- » Use indoors only.
- » Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended accessories.
- » Do not operate appliance with a damaged cord or plug. Discard appliance or return to an authorized service facility for examination and/or repair.
- » Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliances over cord. Keep cord away from heated surfaces.
- » Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from high-traffic area and where it will not be tripped over.
- » Do not unplug by pulling cord. To unplug, grasp the plug, not the cord.
- » Do not handle plug or appliance with wet hands.
- » Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce airflow.
- » Keep hair, loose clothing and fingers away from openings.
- » Turn OFF device controls before unplugging the appliance.
- » Do not use appliance in an enclosed space filled with vapors given off by oil-based paint, paint thinner, moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- » Keep appliance on a level surface.
- » Do not immerse the appliance in water or other liquids, do not pour liquids into or around the appliance or openings.
- » Do not use the appliance near water or in a damp or wet location.
- » This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- » Suitable for use with solid state speed controls.
- » WARNING: Plastic bags can be dangerous. To avoid danger of suffocation, keep this bag away from babies and children.
- » This product contains a wireless device. Refer to FCC/IC Notice Document for regulatory information.

READ AND SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

IMPORTANT INFORMATION

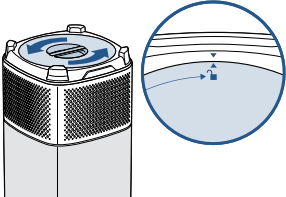
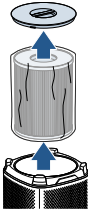
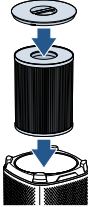
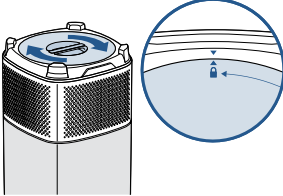
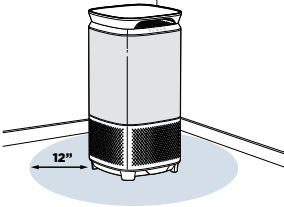
- » Do not turn ON your appliance until you are familiar with all instructions and operating procedures.
- » To reduce the risk of electrical shock, turn power OFF and disconnect polarized plug from electrical outlet BEFORE performing maintenance or troubleshooting checks.

Warranty

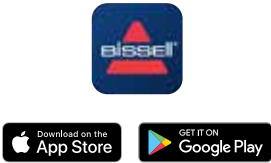
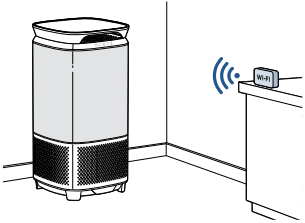
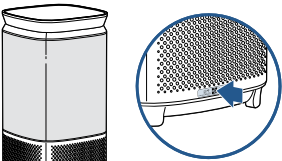
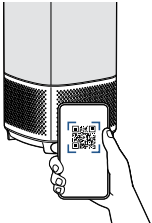
Limited 2-year warranty, may vary by state. Visit **support.BISSELL.com** or call 1-844-383-2630 for complete warranty information.

Getting Started

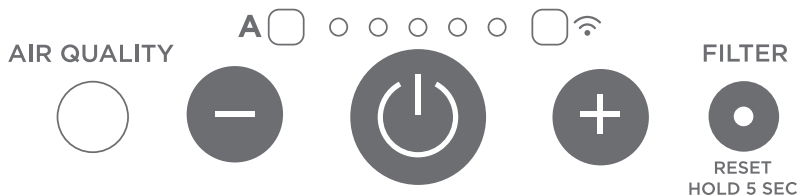
Your air purifier comes with a filter sealed in a plastic bag, remove it before use.

		
1. On carpet, remove the air purifier from its box, remove the table-top accessory, and flip the air purifier over. Twist the base cover counter-clockwise to the unlocked position.	2. Remove the base cover to access and remove the filter.	3. Remove the filter from its protective plastic bag.
		
4. Place the filter back into the air purifier with the Genuine BISSELL® Filter sticker facing up.	5. Reinstall the base cover so that the unlocked arrows are aligned. Then, twist the base cover clockwise until it clicks into the locked position.	6. Place your air purifier at least 12 inches from walls on all sides. Plug in and power on your new BISSELL air purifier!

Connecting to the BISSELL Connect App

		
1. In the App or Google Play Store, search “BISSELL Connect” and download.	2. Once downloaded, open the app to sign in or create a new login.	3. Make sure you are near a WiFi router during pairing.
		
4. Select your product.	5. The QR code for pairing is on the bottom back of the machine.	6. Once you find and scan the QR code, follow the instructions in the app to pair.

Control Panel



Power

Turns the air purifier ON/OFF.

Fan Speeds

Press the +/- buttons to adjust fan speed. There are 5 fan speeds ranging from low to high, plus an Auto Mode.

Filter Reset Button

Lights up red when the filters need to be changed (see page 9).

Auto Mode

Automatically adjusts fan speed based on indoor air quality readings. To set your air280 Max air purifier to auto mode, simply press the $\odot$ button until the A Light illuminates.

Air Quality Indicator

Provides a real-time, color coded indoor air quality reading when in Auto Mode.

cirQulate® System

Running your air280 Max air purifier in Auto Mode activates its CirQulate® System which monitors, reports and responds to changes in your indoor air quality.

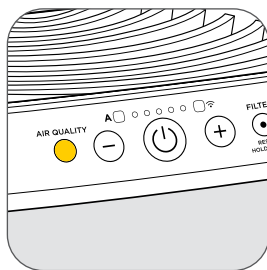
The air280 Max air purifier's CirQulate System continuously evaluates and calculates your indoor air quality using a VOC sensor.

Then, it provides a color-coded reading representing good, moderate or poor air quality and automatically adjusts the fan speed in response.

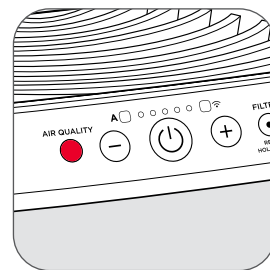
To set your air280 Max air purifier to auto mode, simply press the $\ominus$ button until the A Light illuminates.



Good Air Quality



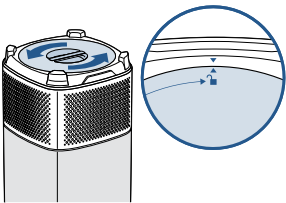
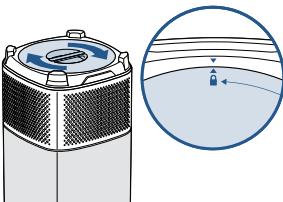
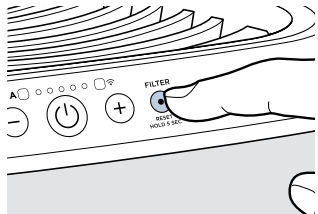
Moderate Air Quality



Poor Air Quality

Replacing the Filters

Filter life varies based on run time and existing air conditions. It is recommended to replace the filter once every 6-8 months.

		
1. On carpet, flip the air purifier over. Twist the base cover counter-clockwise to the unlocked position.	2. Remove the base cover to access the filter. Remove the dirty filter.	3. Remove your new filter from its protective plastic bag.
		
4. Insert the new filter with the Genuine BISSELL® Filter sticker facing up. The base cover will not fit back on unless the filter is inserted correctly.	5. Reinstall the base cover so that the unlocked arrows are aligned. Then, twist the base cover clockwise until it clicks into the locked position.	6. Plug in and turn the air purifier back ON. Press and hold the Filter Reset Button for 5 seconds until you hear a beep.

⚠ WARNING For your safety, always turn OFF and unplug your air purifier before replacing the filters.

Troubleshooting

Below are some of the issues you may run into. If you don't see the issue you're experiencing below, visit **support.BISSELL.com**.

Problem	Possible Cause	Remedies
Airflow is significantly reduced	Filter is in protective plastic bag.	Remove filter from plastic bag and reinstall. See page 5.
	Fan speed is low.	Press the + button to increase fan speed.
	Filter needs to be replaced.	Replace the filter. See page 9.
Air purifier is making unusual noise	Filter is in protective plastic bag.	Remove filter from plastic bag and reinstall. See page 5.
	Filter needs to be replaced.	Replace the filter. See page 9.
Strange smell coming from the air purifier	Filter needs to be replaced.	Replace the filter. See page 9.
Air purifier will not power ON	Power outlet is defective.	Plug the air purifier into a different outlet.
	Power cord is damaged.	Stop using the air purifier and contact Consumer Care. Do not attempt to repair.

Note: Any other servicing should be performed by an authorized service representative.





We're Waggin' Our Tails!

BISSELL proudly supports BISSELL Pet Foundation® and its mission to help save homeless pets. When you buy a BISSELL® product, you help save pets, too. We're proud to design products that help make pet messes, odors and pet homelessness disappear. Visit [BISSELLsavespets.com](https://www.bissellsavespets.com) to learn more.

Love your BISSELL® product?

Don't keep it a secret. Let us, and millions of others, know what you think!
Leave your star-rating on [BISSELL.com](https://www.bissell.com).



©2021 BISSELL Inc. All rights reserved. Part Number 1624915 09/21 RevC

please recycle

