



POWERFORCE® HELIX™ TURBO PET UPRIGHT VACUUM | 3332 SERIES

What's In The Box?



Handle &
Body



2 Screws (taped to
Upper Handle)



Hose



Lower Cord
Wrap



Dusting
Brush



Crevice
Tool




Extension
Wand



Pet TurboBrush®
Tool

Product Overview

- | | |
|-------------------------------|--------------------------|
| 1. Upper Handle | 9. Lower Cord Wrap |
| 2. Tank Release Button | 10. Hose Wand |
| 3. Washable Pre-Motor Filter | 11. Power Switch Pedal |
| 4. Dirt Tank | 12. Handle Recline Pedal |
| 5. Dirt Tank Empty Button | 13. Pet TurboBrush® Tool |
| 6. Washable Post-Motor Filter | |
| 7. Hose Clip | |
| 8. Power Cord | |

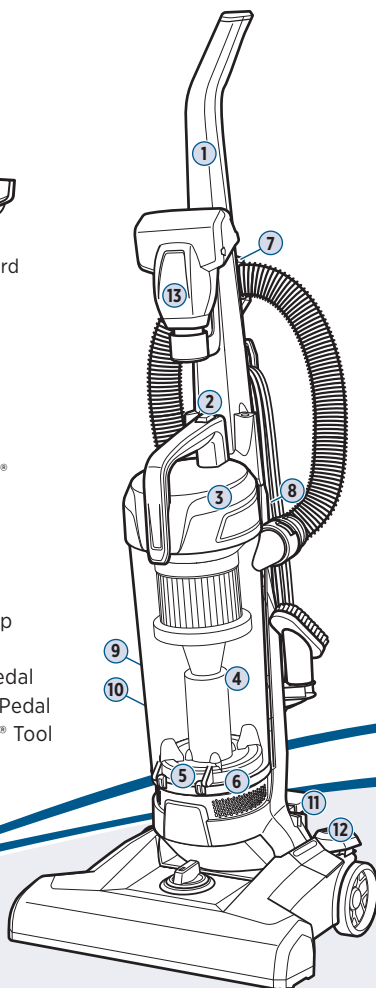

Meet your new BISSELL product!

Go to **support.BISSELL.com** for a comprehensive walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...



IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not leave vacuum when it is plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn OFF all controls before plugging or unplugging vacuum.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not use vacuum in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without filters in place.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Use only on dry, indoor surfaces.
- Keep appliance on a level surface.
- Do not carry the vacuum while it is running.
- Unplug before connecting or disconnecting the Pet TurboBrush® Tool.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY. COMMERCIAL USE OF THIS UNIT VOIDS THE MANUFACTURER'S WARRANTY.



WARNING

Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.

- Do not plug in your vacuum until you are familiar with all instructions and operating procedures.
- To reduce the risk of electrical shock, turn power OFF and disconnect polarized plug from electrical outlet BEFORE performing maintenance or troubleshooting checks.

THIS APPLIANCE HAS A POLARIZED PLUG

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.


Troubleshooting

For a comprehensive walkthrough of your product and support tips, visit support.BISSELL.com.


Warranty

Limited 2-year warranty, may vary by state. Visit support.BISSELL.com or call 1-800-237-7691 for complete warranty information.

Assembly

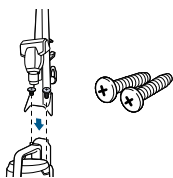


1. Place upper handle onto base and push down. Attach handle using two screws taped to the handle in a plastic bag.

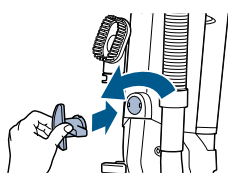


2. Insert lower cord wrap and turn counterclockwise to lock it into place.




3. Wrap cord. To easily unwrap, turn the Quick Release Cord Wrap down.

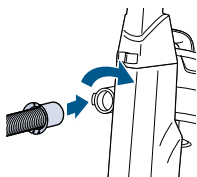

4. Insert end of hose into back of vacuum and twist to lock into place.

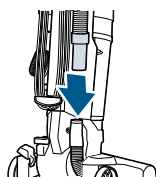


5. Wrap hose through hose clip and connect hose wand to the foot hose at the bottom of vacuum.

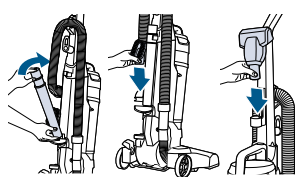


6. Attach desired tool.
The crevice tool is stored inside the extension wand.


Using Your Vacuum

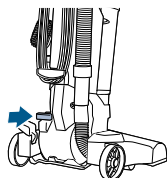

1. Turn ON (ⓘ) vacuum using power (ⓘ) pedal and lean back using recline pedal. When finished, press pedal switch again to turn OFF (ⓘ). Return to upright position.

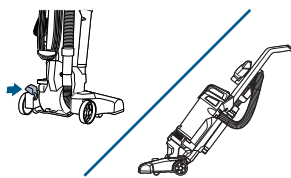


2. Press handle recline pedal to lean vacuum back. Press pedal a second time to recline further. When finished, lean all the way up to lock it into upright position.

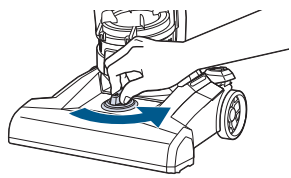


3. Vacuum can be raised or lowered to adjust to different types of flooring. Turn knob towards desired flooring type. If vacuum becomes difficult to push, move to a higher setting.

Emptying the Dirt Tank

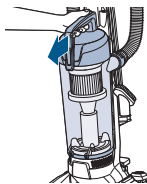


1. Press the tank release button and pull handle to lift dirt tank away from vacuum.

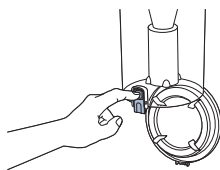


2. Holding dirt tank over a trash bin, press release button on back to open tank and dump debris.
Snap bottom back into place when empty.


Cleaning the Filters & Separator

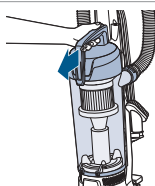


1. Remove dirt tank by pressing release button and lift tank away from vacuum.

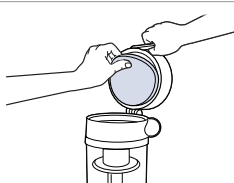


2. With dirt tank removed, press filter cover release button to access post-motor filter.

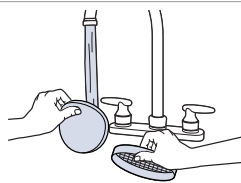


3. Clean filters with mild detergent, rinsing and squeezing to remove water. Allow filters to dry completely before reinserting.

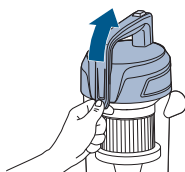

4. To access pre-motor filter, lift release latch on front of tank to lift lid.

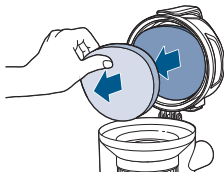

5. Remove pre-motor filter from tank lid. Clean with warm water and allow to dry completely before reinserting.

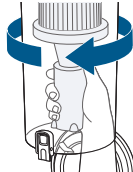

6. Remove separator from tank by twisting counterclockwise. Pull out through the bottom. Rinse and dry with a cloth.

Maintaining Your Vacuum

For more helpful maintenance tips, check out support.BISSELL.com.



Replacing the Brush and Belt

1. Unplug vacuum, turn over and unscrew five Phillips-head screws to remove bottom cover.
2. Lift brush roll straight out. Inspect belt and replace if it appears damaged.
3. Replace brush roll and belt by looping the belt over motor shaft and brush roll. Line up the endcaps and pull brush forward into place, stretching the belt. Replace cover and screws.

Clearing a Clog

1. Remove hose from back of vacuum by twisting to the left. Remove debris.
2. Check foot hose on the back of vacuum towards the bottom. If necessary, remove screw from foot hose and check for clogs.

3. Check air passageway on bottom of vacuum. Remove bottom cover and brush. Remove any debris.

Maintaining the TurboEraser® Tool

1. Twist gray collar counterclockwise until slot appears, separate faceplate and remove brush. Replace belt and brush if needed.
2. If paddle wheel is dislodged, align the two clips on each side and click into place.
3. The faceplate will not close if all parts are not aligned correctly.

♥ Every Purchase Saves Pets™

BISSELL proudly supports BISSELL Pet Foundation® and its mission to help save homeless pets. When you buy a BISSELL® product, you help save pets, too. We're proud to design products that help make pet messes, odors and pet homelessness disappear. Visit BISSELLsavespets.com to learn more.