



POWERFORCE® REWIND PET UPRIGHT VACUUM | 3333 SERIES

What's in the Box?



Handle &
Body



2 Screws (taped
to Upper Handle)



Hose



Wand Base



Dusting
Brush



Crevice
Tool




Extension
Wand



Pet TurboBrush®
Tool

Product Overview

- | | |
|---------------------------------|----------------------------|
| 1. Upper Handle | 8. Hose Wand |
| 2. Tank Release Button | 9. Power Switch Pedal |
| 3. Washable Pre-Motor Filter | 10. Recline Pedal |
| 4. Dirt Tank | 11. Height Adjustment Dial |
| 5. Dirt Tank Empty Button | 12. Pet TurboBrush® Tool |
| 6. Automatic Cord Rewind Button | |
| 7. Power Cord | |

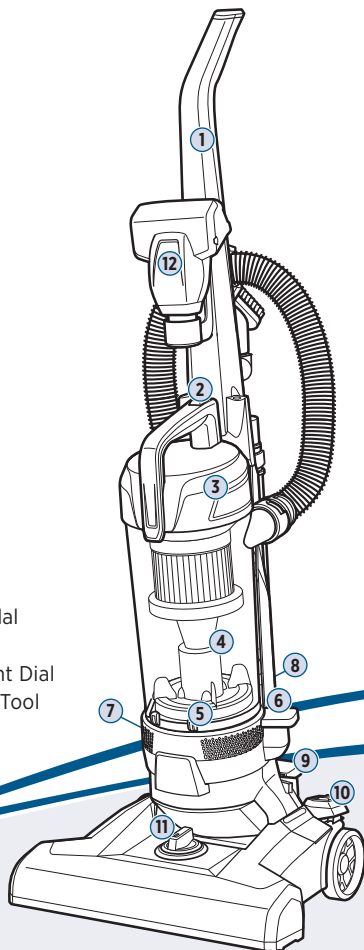

Meet your new BISSELL product!

Go to support.BISSELL.com for a comprehensive walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not leave vacuum unattended while plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn OFF all controls before plugging or unplugging vacuum.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not use vacuum in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors. Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without filters in place.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Use only on dry, indoor surfaces.
- Keep appliance on a level surface.
- Do not carry the vacuum while it is running.
- Unplug before connecting or disconnecting the Pet TurboBrush® Tool.
- Hold plug when rewinding into cord reel. Do not allow plug to whip when rewinding.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Do not plug in your vacuum until you are familiar with all instructions and operating procedures.
- To reduce the risk of electrical shock, turn power OFF and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY. COMMERCIAL USE OF THIS UNIT voids the MANUFACTURER'S WARRANTY.



WARNING

Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.

- Do not plug in your vacuum until you are familiar with all instructions and operating procedures.
- To reduce the risk of electrical shock, turn power OFF and disconnect polarized plug from electrical outlet BEFORE performing maintenance or troubleshooting checks.

THIS APPLIANCE HAS A POLARIZED PLUG

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.

Troubleshooting

For a comprehensive walkthrough of your product and support tips, visit support.BISSELL.com.


Warranty

Limited 2-year warranty, may vary by state. Visit support.BISSELL.com or call 1-800-237-7691 for complete warranty information.


Terms and Conditions

Your purchase is subject to the BISSELL Terms and Conditions, which includes dispute resolution through arbitration and class waiver. For complete terms or to opt out from arbitration or class waiver, visit BISSELL.com/terms-of-use or call 1-800-237-7691.


Assembly

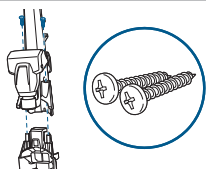

1. Place upper handle onto base and push down. Attach handle using 2 screws taped to the handle.

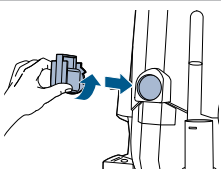


2. Insert wand base and turn left to lock into place.

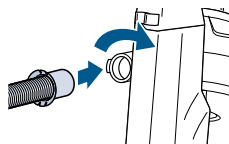


3. Insert end of hose into back of vacuum and twist to lock into place.



 
4. Wrap hose through hose clip and connect hose wand to foot hose at bottom of vacuum.




5. Attach desired tool. Remove extension wand from the base of machine and attach to end of hose. Extra tools can be stored on machine when not in use.

 


Using Your Vacuum

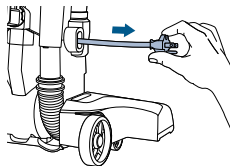

1. To plug in your vacuum, gently pull out cord. Do not pass mark on cord. Plug cord into an outlet.

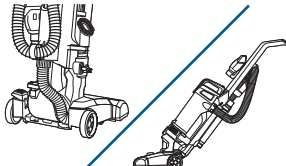


2. Press handle recline pedal to lean vacuum back. Press pedal a second time to recline further. When finished, lean all the way up to lock it into upright position.

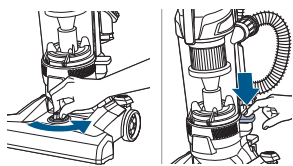


3. Use dial to adjust for floor types. If vacuum becomes difficult to push, adjust setting. When finished, unplug vacuum. Hold cord and press cord rewind button to retract.

When finished using the product, store unit indoors in a dry location in an area where the product is not likely to get damaged.

Emptying the Dirt Tank

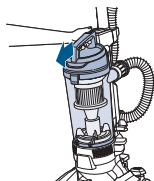


1. Empty dirt tank when debris reaches the "Full" line. Press the tank release button and pull handle to lift dirt tank away from vacuum.

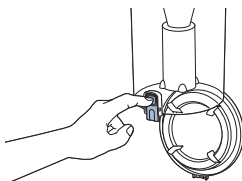

2. Hold dirt tank over a trash bin and press dirt tank empty button on back to open tank and empty.


Cleaning the Filters & Separator

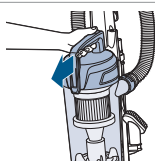


1. Remove dirt tank by pressing release button and lift tank away from vacuum.



2. To access pre-motor filters, lift release latch on front of tank to lift lid.

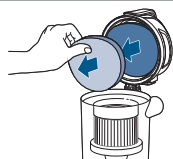


3. Remove pre-motor filters from tank lid.

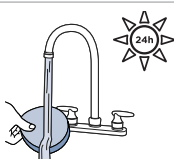

4. Hand wash in warm water and rinse well; mild detergent may be used if desired. Let dry for 24 hours before reinstalling.



 5. Reinstall pre-motor filter back into tank lid.



6. Remove separator from tank by twisting counterclockwise. Pull out through the bottom. Rinse and dry with a cloth.

Maintaining Your Vacuum

➤ For more helpful maintenance tips, check out support.BISSELL.com.



Maintaining the TurboBrush® Tool

- 1.** Twist gray collar counterclockwise until slot appears; separate faceplate and remove brush. Replace belt and brush if needed.
- 2.** If paddle wheel is dislodged, align two clips on each side and click into place.
- 3.** Faceplate will not close if all parts are not aligned correctly.

Clearing a Clog

- 1.** Remove hose from back of vacuum by twisting left. Remove any debris.
- 2.** Check foot hose on back of vacuum, towards the bottom. If necessary, remove screw from foot hose and check for clogs.
- 3.** Check air passageway on the bottom of vacuum. Remove bottom cover and brush. Remove any debris.

Replacing the Brush and Belt

- 1.** Unplug vacuum, turn over and unscrew six Phillips-head screws to remove bottom cover.
- 2.** Lift brush roll straight out. Inspect belt, replace if it appears damaged.
- 3.** If belt is not broken. Inspect brush roll by placing it on its end and spinning. Brush roll should spin freely, multiple times with one flick. Replace brush roll if it doesn't spin freely
- 4.** Replace brush roll and belt by looping belt over motor shaft and brush roll. Line up endcaps and pull brush forward into place. Belt will stretch.
- 5.** Once brush roll is installed, place bottom cover back on and replace screws.

Note: Other maintenance or service not included in this manual should be performed by an authorized service representative.

♥ Every Purchase Saves Pets™

BISSELL proudly supports BISSELL Pet Foundation® and its mission to help save homeless pets. When you buy a BISSELL® product, you help save pets, too. We're proud to design products that help make pet messes, odors and pet homelessness disappear. Visit BISSELLsavespets.com to learn more.