



PET HAIR ERASER[®]

ALLERGEN LIFT-OFF[®]


UPRIGHT VACUUM

MODEL 39883

Important Safety Instructions	2
What's in the Box?	2
Assembly	3
Using the Vacuum	3
Emptying the Dirt Tank	4
Maintaining the TurboEraser [®] Pet Tool	5
Cleaning and Replacing the Filters	5
Replacing the Brush Roll and Belt	6
Clearing a Clog	6
Protecting the Vacuum's Motor	7
Resetting the Brush Motor	7
Troubleshooting	7
Warranty	7

Product Overview

- | | |
|---------------------------------|-----------------------------|
| A. Carpet Type Control | F. Dirt Tank Release Button |
| B. Hose | G. Pre-Motor Filter |
| C. Quick Release Extension Wand | H. Dirt Tank |
| D. Wand Release Button | I. Post-Motor Filter |
| E. Power Switch | |

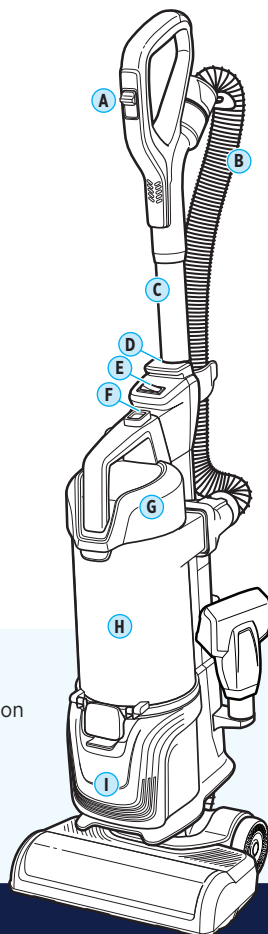

Meet your new BISSELL[®] product!

Go to support.BISSELL.com for a walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not leave vacuum cleaner when it is plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn OFF all controls before plugging or unplugging vacuum cleaner.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials

(lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.

- Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without filters in place.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Use only on dry, indoor surfaces.
- Keep appliance on a level surface.
- Do not carry the vacuum cleaner while it is running.
- Before using your vacuum, make sure the dirt tank is in locked position and that all filters, both pre- and post-filters, are in place. DO NOT operate your vacuum without these filters.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Do not plug in your vacuum UNTIL you are familiar with all instructions and operating procedures.
- To reduce the risk of electrical shock, turn power switch OFF and disconnect polarized plug from electrical outlet BEFORE performing maintenance or troubleshooting checks.
- Unplug before connecting or disconnecting the TurboBrush tool.
- Always turn off the appliance before connecting or disconnecting foot.



Do not wash the pleated filter. Replace with a new pleated filter every 6 months.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY. COMMERCIAL USE OF THIS UNIT VOIDS THE MANUFACTURER'S WARRANTY.

THIS APPLIANCE HAS A POLARIZED PLUG

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.

What's in the Box?



Foot



Lift-Off® Pod




Wand



Hose



2-in-1 Dusting
Brush and
Crevice Tool

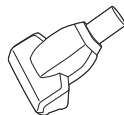


TurboEraser®
Pet Tool


Assembly




1. Insert handle into body until it clicks into place.

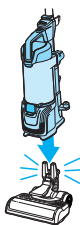


2. Attach Lift-Off® pod to foot.

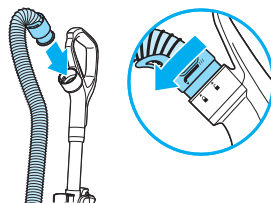


3. Attach hose to wand by twisting clockwise

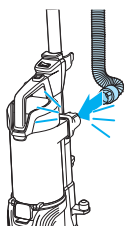

4. Insert hose connector into machine until it clicks.

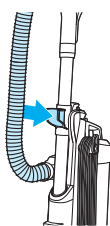


5. Insert hose into hose clip. The hose should sit on the vacuum without any twists.

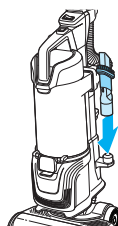


6. Attach tool to tool holder.

Using the Vacuum

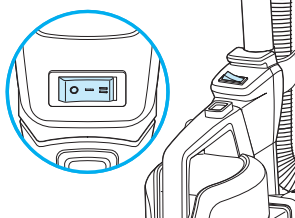


1. Power ON. Turn brush roll ON (I) for carpet cleaning and OFF (O) when vacuuming hard or delicate surfaces like hardwood, tile, small rugs, or frieze carpets with long fibers.

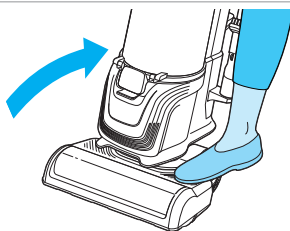

2. Step gently on base and pull the handle back to recline.

Note: The brush roll shuts OFF when vacuum is locked in upright position.



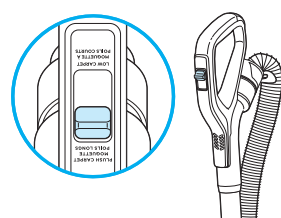


3. Use the carpet type control for optimized cleaning on high pile and low pile carpet. The control can be moved to the middle position for medium pile carpeting

Note: Certain carpets and low humidity conditions may generate small static discharges. Static discharges are entirely harmless and are not associated in any way with the main power supply.







CONTINUED ON NEXT PAGE ➡

Above Floor Cleaning

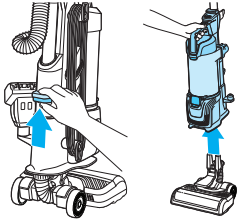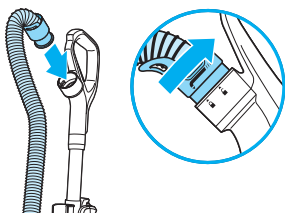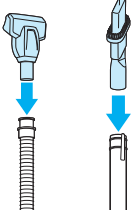		
1. Push the Lift-Off® Release Button and lift up to remove the pod from the foot.	2. The hose can be removed from the extension wand. Twist hose cuff counter-clockwise and remove from handle.	3. Attach desired tool. Note: For optimal use, attach the TurboEraser® Pet Tool to the hose instead of wand. Reinstall wand by sliding until it clicks into place. Reattach hose to handle if needed.


When finished using the machine, wrap cord around cord wrap for storage. Store unit indoors in a dry location in an area where the product is not likely to get damaged.

Emptying the Dirt Tank

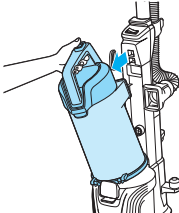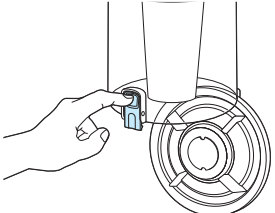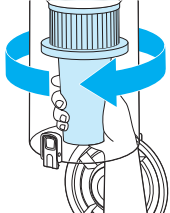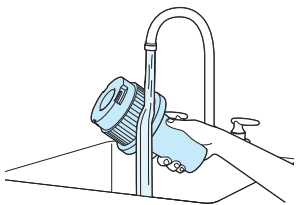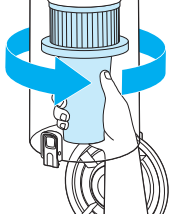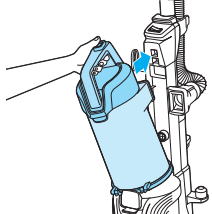
		
1. Press the dirt tank release button and pull out to remove dirt tank.	2. Hold the dirt tank over a trash bin. Press the bottom release button to empty.	3. Twist separator counter-clockwise and pull down to remove from tank.
		
4. Clean separator with warm water and mild detergent. Let dry for 24 hours before reinstalling.	5. Twist separator clockwise to reinstall.	6. Place dirt tank back on vacuum and press firmly until it clicks into place.

⚠ WARNING To reduce the risk of injury from moving parts while the vacuum is turned ON, always move the vacuum via the rolling wheels by using the upper handle at the back of the vacuum. Do not carry the vacuum while it is running. Always place vacuum on floor with handle in upright position when using tools.


Maintaining the TurboEraser® Pet Tool

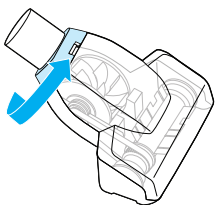

1. Twist gray collar counter-clockwise, until slot appears, then separate faceplate.

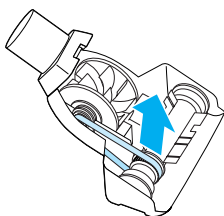

2. Remove brush roll, belt and paddle wheel. Inspect for damages and replace if necessary.

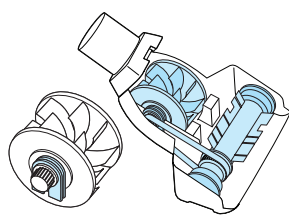


3. To reassemble, align two clips on each end of paddle wheel with belt on and pop back into place. Place brush roll with belt back in. Faceplate will not close properly if all parts are not aligned correctly.


Cleaning and Replacing the Filters

➤ Visit **BISSELL.com** to find replacement filters.


Pre-Motor Filter

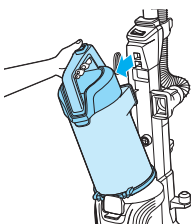


1. Press the dirt tank release button and pull out to remove dirt tank.

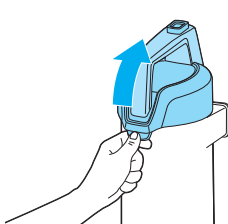


2. Lift release latch to access filter.

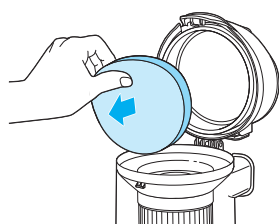


3. Remove foam filter from lid.

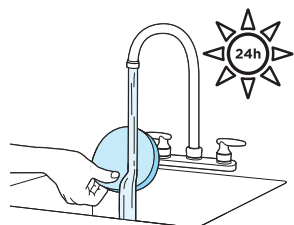

4. Hand wash in warm water and rinse well; mild detergent may be used if desired. Let dry for 24 hours before reinstalling.

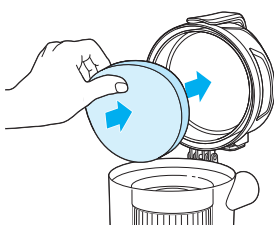

5. Reinstall foam filter and close lid.

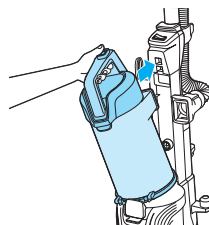

6. Place dirt tank back on vacuum and press firmly until it clicks into place.


⚠ WARNING

- To reduce the risk of electric shock, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.
- Do not operate vacuum with damp or wet filters or without all filters in place.


Cleaning and Replacing the Filters (continued)

Post-Motor Filter


For optimal performance, replace the filter every 6 months.

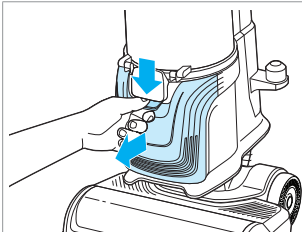

1. Press down on tab to remove post-motor filter cover and pull away from vacuum.

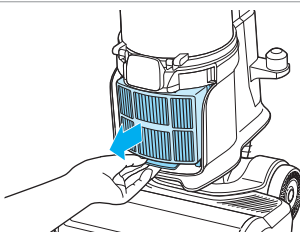


2. Press tab on bottom of filter and pull out to remove from vacuum. Remove debris from filter by tapping on the side of a trash container. This pleated filter should NOT be washed.

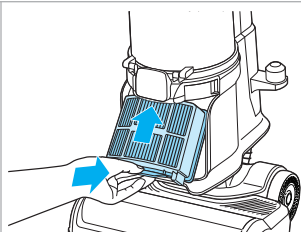


3. When reassembling, be sure to lock the filter back into place by aligning the top of the filter first, then clicking the bottom into place.


Replacing the Brush Roll and Belt

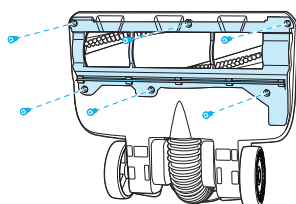

1. Unplug vacuum, turn over and unscrew six (6) Phillips-head screws to remove the bottom cover. Lift brush roll straight out and clean debris.

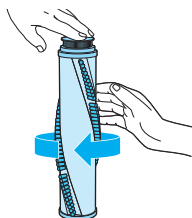


2. Inspect brush roll by placing on its end and spinning; it should spin freely multiple times with one flick. If not, replace it. Check belt for wear or cuts and replace if needed.

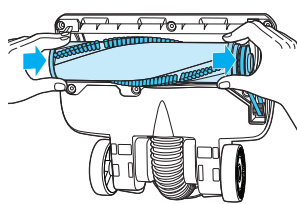


3. Replace brush roll and belt by looping belt over the gear and brush roll. Line up endcaps and pull brush forward into place. Return bottom cover back on and replace screws.


Clearing a Clog

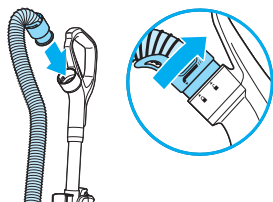

1. Twist hose counter-clockwise to remove from vacuum. Press hose release button on tank and clear any debris.

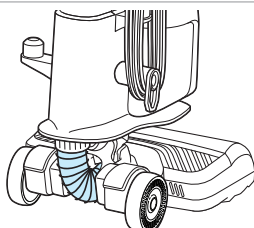

2. Check the foot hose on the back. If necessary, twist the hose cuff from the foot hose and check for clogs.

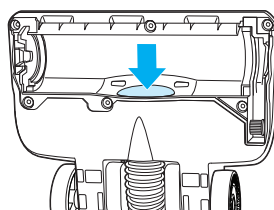

3. Check the air passageway on the bottom of your vacuum. Remove the bottom cover and the brush. Remove any debris.

Protecting the Vacuum's Motor

There is an internal thermal protector in your vacuum that protects it from overheating. It controls the main vacuum motor only, not the brush motor. When it activates, the main motor will stop. The front lights and brush roll will stay on but there won't be any suction. If this happens, follow these steps:

1. Turn vacuum OFF and unplug from electrical outlet.
2. Check for the source of overheating problem (full dirt tank, dirty filters or a clog) and fix by following the steps in the "Vacuum won't pick up dirt" troubleshooting section.
3. When the motor cools for approximately 60 minutes, the thermal protector automatically resets and cleaning may continue. If the vacuum will not turn ON or the thermal protector continues to activate, contact BISSELL® Consumer Care.

Resetting the Brush Motor

There is a circuit to protect the brush motor. If something becomes lodged in the foot and the brush shuts off, turn the cleaner off and unplug from the outlet. Remove the obstruction. The brush will automatically reset when the cleaner is plugged in and turned back on.

Note: Any other maintenance or servicing not included in this manual should be performed by an authorized service representative.

Troubleshooting

For a comprehensive walkthrough of your product and support tips visit support.BISSELL.com.

Problem	Possible Cause	Remedies
Noise change when vacuuming over hard or sharp object	Blockage/object caught in brush roll.	Clear object from brush roll.
Vacuum won't pick up dirt	Filters are dirty.	Clean filters. See page 5.
	There is a clog in the vacuum.	Remove the foot and extension wand from the vacuum. Check for clogs in each of these sections. Clear clogs before reassembling.
	Dirt tank is not seated correctly.	Remove the tank and reseal properly.

Warranty

Limited 5-year warranty, may vary by state. Visit support.BISSELL.com or call 1-800-237-7691 for complete warranty information.

Terms and Conditions

Your purchase is subject to the BISSELL Terms and Conditions, which includes dispute resolution through arbitration and class waiver. For complete terms or to opt out from arbitration or class waiver, visit BISSELL.com/terms-of-use or call 1-800-237-7691.



WARNING

To reduce the risk of electrical shock:

- Turn power switch OFF and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.
- Before using your vacuum, make sure that the dirt tank is in locked position and that all filters, both pre- and post-filters, are in place. DO NOT operate your vacuum without these filters.
- Do not operate vacuum with damp or wet filters. Allow components to dry before reassembling the dirt tank.
- Do not use without filters in place.



WARNING

To reduce the risk of electric shock, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.



Every purchase makes it possible for BISSELL to continue our support of BISSELL Pet Foundation® and its mission of saving pets in need. Since 2011, BISSELL has donated over \$26 million in support of BISSELL Pet Foundation®. When you purchase a BISSELL® product, you help save pets, too. Our products are engineered to clean even the toughest messes so pets can stay at home and out of shelters.

Visit **BISSELLsavespets.com** to learn more.

Need more support?

Head to **support.BISSELL.com** to troubleshoot, register your product, order spare parts, view your warranty, and more.



INFO



REGISTER



VIDEOS



PARTS



SUPPORT



©2025 BISSELL Inc. All rights reserved.
Part Number 1647552 10/24 v3