



CLEANVIEW®

UPRIGHT VACUUM


4438 SERIES

What's in the Box?	3
Assembly	3
Using the Vacuum	4
Emptying the Dirt Tank	5
Cleaning and Replacing the Filters	6
Maintaining the Pet TurboBrush® Tool	6
Maintaining the Brush Rolls and Belt	7
Clearing a Clog	7
Troubleshooting	7
Warranty	7

Product Overview

- A. Handle
- B. Dirt Tank Release Button
- C. Washable Pre-Motor Filter
- D. Dirt Tank
- E. Dirt Tank Empty Button
- F. Hose Clip

- G. Power Cord
- H. Hose Wand
- I. Power Switch Pedal
- J. Handle Recline Pedal
- K. Height Adjustment Dial
- L. Pet TurboBrush® Tool

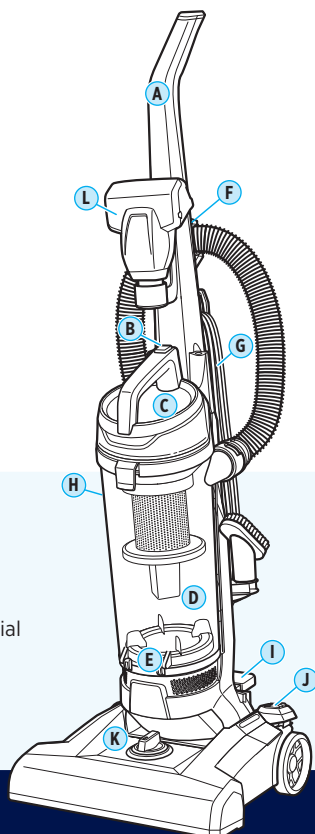

Meet your new BISSELL® product!

Go to support.BISSELL.com for a walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY. COMMERCIAL USE OF THIS UNIT voids the manufacturer's warranty.



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY

- Do not leave vacuum when it is plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired by an authorized repair technician.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn OFF all controls before plugging or unplugging vacuum.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not use vacuum in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without filters in place.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Use only on dry, indoor surfaces.
- Keep appliance on a level surface.
- Do not carry the vacuum while it is running.
- Risk of injury from moving parts. Brush may start unexpectedly. Unplug before cleaning or servicing.
- Unplug before connecting Pet TurboBrush Tool.
- If the appliance has a hand-held accessory like pet brush, motor driven head, etc. the user shall avoid entrapment.

IMPORTANT INFORMATION

- Brush roll continues to rotate while the product is turned ON and handle is in use. To avoid damage to carpet, rugs, furniture and flooring, avoid tipping cleaner or setting it on furniture, fringed area rugs, or carpeted stairs during tool use.
- With brush roll ON, do not allow cleaner to sit in one location for an extended period of time, as damage to floor can result.

THIS APPLIANCE HAS A POLARIZED PLUG

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a proper outlet. Do not change the plug in any way.



WARNING

Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.



- Do not plug in your vacuum until you are familiar with all instructions and operating procedures.
- To reduce the risk of electrical shock, turn power OFF and disconnect polarized plug from electrical outlet BEFORE performing maintenance or troubleshooting checks.




What's in the Box?

					
Body	Handle	2 Screws (taped to Handle)	Lower Cord Wrap	Hose	Extension Wand


		
Pet TurboBrush® Tool	Dusting Brush	Crevice Tool

Assembly

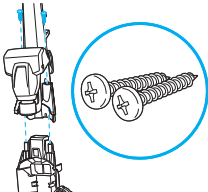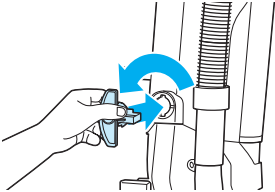
		
1. Place upper handle onto base and push down. Install handle using two screws taped to the handle in a plastic bag.	2. Install lower cord wrap and rotate to lock it into place.	3. Wrap cord. To remove, rotate the Quick Release Cord Wrap.

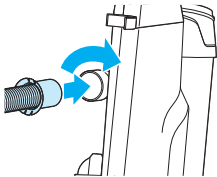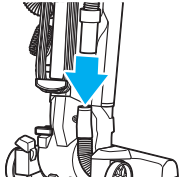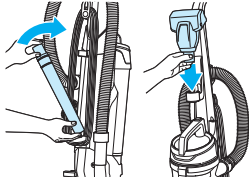		
4. Install hose and rotate to lock it into place.	5. Wrap hose around hose clip and connect to foot hose.	6. Attach tools to tool holders. The crevice tool is stored inside the extension wand.


Using the Vacuum

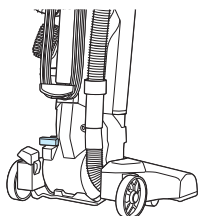

1. Plug machine into outlet. Press the power pedal to turn the machine ON(Ⓢ).

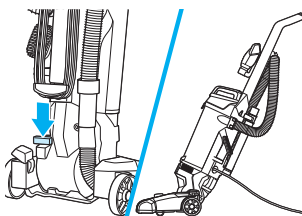

2. Press the detent pedal and pull the handle back to recline. Press detent pedal a second time to recline the machine further. Return the machine upright when finished.

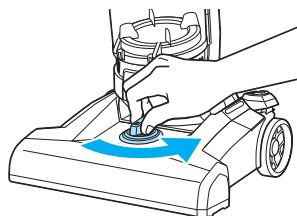


3. Turn dial on foot to desired height setting. If dial is difficult to turn, tilt the vacuum back slightly to take the weight off the foot while turning.


Tip: For best performance, adjust to the lowest practical setting. If your vacuum is difficult to push, adjust to the next higher setting.

Above Floor Cleaning


Clean hard-to-reach spaces with the hose or extension wand.

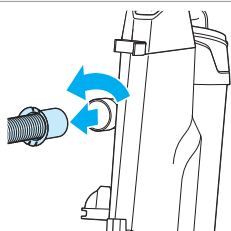

1. Rotate hose to remove from machine.

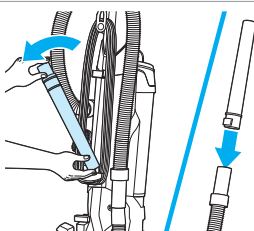

2. Connect the on board extension wand to the hose for extended cleaning.

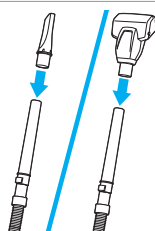


3. Attach desired tool.

Note: For optimal performance, attach the TurboEraser® Pet tool directly to the hose instead of the wand.


Note: When finished using the machine, wrap cord around cord wraps for storage. Store unit indoors in a dry location in an area where the product is not likely to get damaged.

⚠ WARNING To reduce the risk of injury from moving parts while the vacuum is turned ON, always move the vacuum via the rolling wheels by using the upper handle at the back of the vacuum. Do not carry the vacuum while it is running. Always place vacuum on floor with handle in upright position when using tools.


Emptying the Dirt Tank

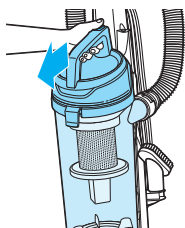


1. Press the dirt tank release button to remove dirt tank.

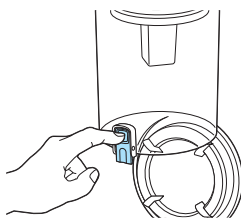


2. Hold the dirt tank over a trash bin. Press release button at the bottom of the tank to empty.

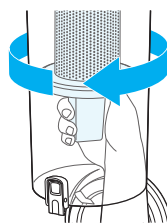


3. Rotate separator and pull down to remove from tank.

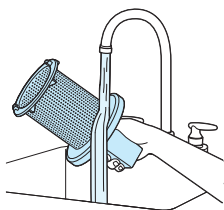

4. Clean separator with warm water and mild detergent. Let air dry completely before installing.

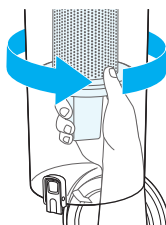

5. Rotate separator to install.

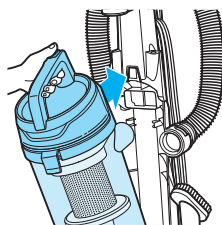


6. Install dirt tank onto machine and press firmly until it clicks into place.



WARNING To reduce the risk of electric shock, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.

Cleaning and Replacing the Filters


Visit **BISSELL.com** to find replacement filters.

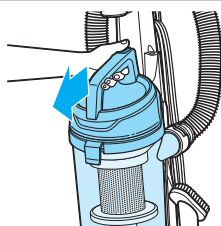


1. Press dirt tank release button to remove dirt tank.




2. To access pre-motor filters, lift release latch on front of tank.

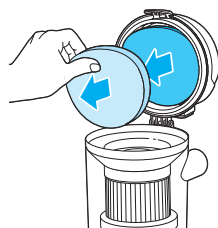


3. Remove pre-motor filters from tank lid.

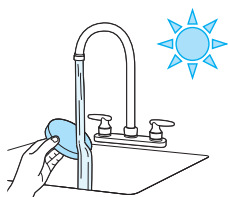

4. Hand wash in warm water and rinse well; mild detergent may be used if desired. Let air dry completely before installing.

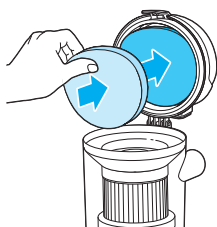


5. Install pre-motor filters into tank lid.

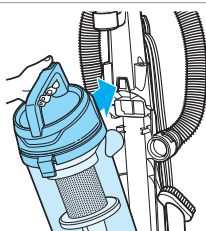


6. Install dirt tank onto machine and press firmly until it clicks into place.


Maintaining the Pet TurboBrush® Tool

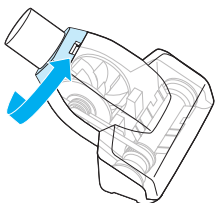

1. Twist gray collar counterclockwise, until slot appears, then separate faceplate.

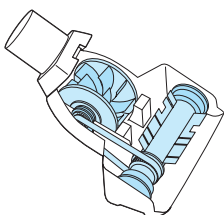

2. Remove brush roll, belt and paddle wheel. Inspect for damages and replace if necessary.

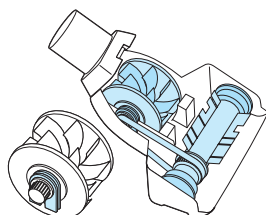


3. To reassemble, align two clips on each end of paddle wheel with belt on and pop back into place. Place brush roll with belt back in. Faceplate will not close properly if all parts are not aligned correctly.


⚠ WARNING

- To reduce the risk of electric shock, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.
- Do not operate vacuum with damp or wet filters or without all filters in place.


Maintaining the Brush Roll and Belt

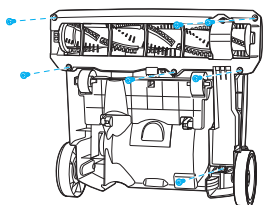

1. Unplug vacuum, turn over and unscrew six Phillips-head screws to remove bottom cover. Remove brush roll.

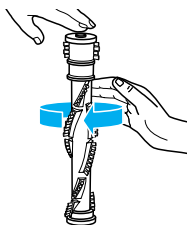


2. Clean debris from brush roll. Inspect by placing on its end and spinning. The brush roll should spin freely. If it doesn't, replace brush roll if damaged. Check belt for wear or cuts and replace if necessary.

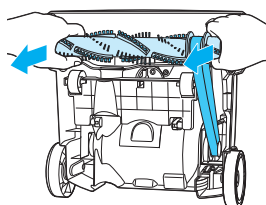


3. Install the brush roll and belt by looping the belt over the motor shaft and the brush roll. Line up the endcaps and pull the brush forward into place. This will stretch the belt. Return bottom cover back on and replace the screws.


Clearing a Clog

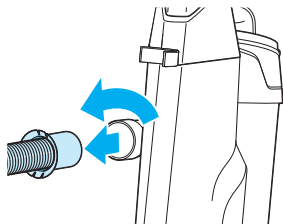

1. Rotate hose to remove from machine. Remove any debris.

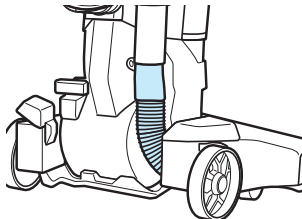

2. Check foot hose for clogs. Remove any debris.

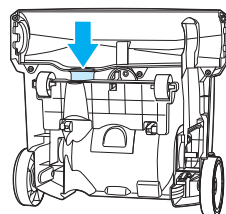

3. Check air passageway. Remove the 6 screws to release the bottom cover and brush. Remove any debris if necessary.

Note: Other maintenance or service not included in this manual should be performed by an authorized service representative.

Troubleshooting

For a comprehensive walkthrough of your product and support tips, visit support.BISSELL.com.

Warranty

Limited 2-year warranty, may vary by state. Visit support.BISSELL.com or call 1-800-237-7691 for complete warranty information.

Terms and Conditions

Your purchase is subject to the BISSELL® Terms and Conditions, which includes dispute resolution through arbitration and class waiver. For complete terms or to opt out from arbitration or class waiver, visit BISSELL.com/terms-of-use or call 1-800-237-7691.

⚠ WARNING

- To reduce the risk of electric shock, turn power OFF and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.
- Do not operate vacuum with damp or wet filters or without all filters in place.



Every purchase makes it possible for BISSELL to continue our support of BISSELL Pet Foundation® and its mission of saving pets in need. Since 2011, BISSELL has donated over \$26 million in support of BISSELL Pet Foundation®. When you purchase a BISSELL® product, you help save pets, too. Our products are engineered to clean even the toughest messes so pets can stay at home and out of shelters.

Visit **[BISSELLsavespets.com](https://www.bissellsavespets.com)** to learn more.

Need more support?

Head to **[support.BISSELL.com](https://support.bissell.com)** to troubleshoot, register your product, order spare parts, view your warranty, and more.



INFO



REGISTER



VIDEOS



PARTS



SUPPORT



©2026 BISSELL Inc. All rights reserved.
Part Number 1659279 12/25 v7