



Fig. A

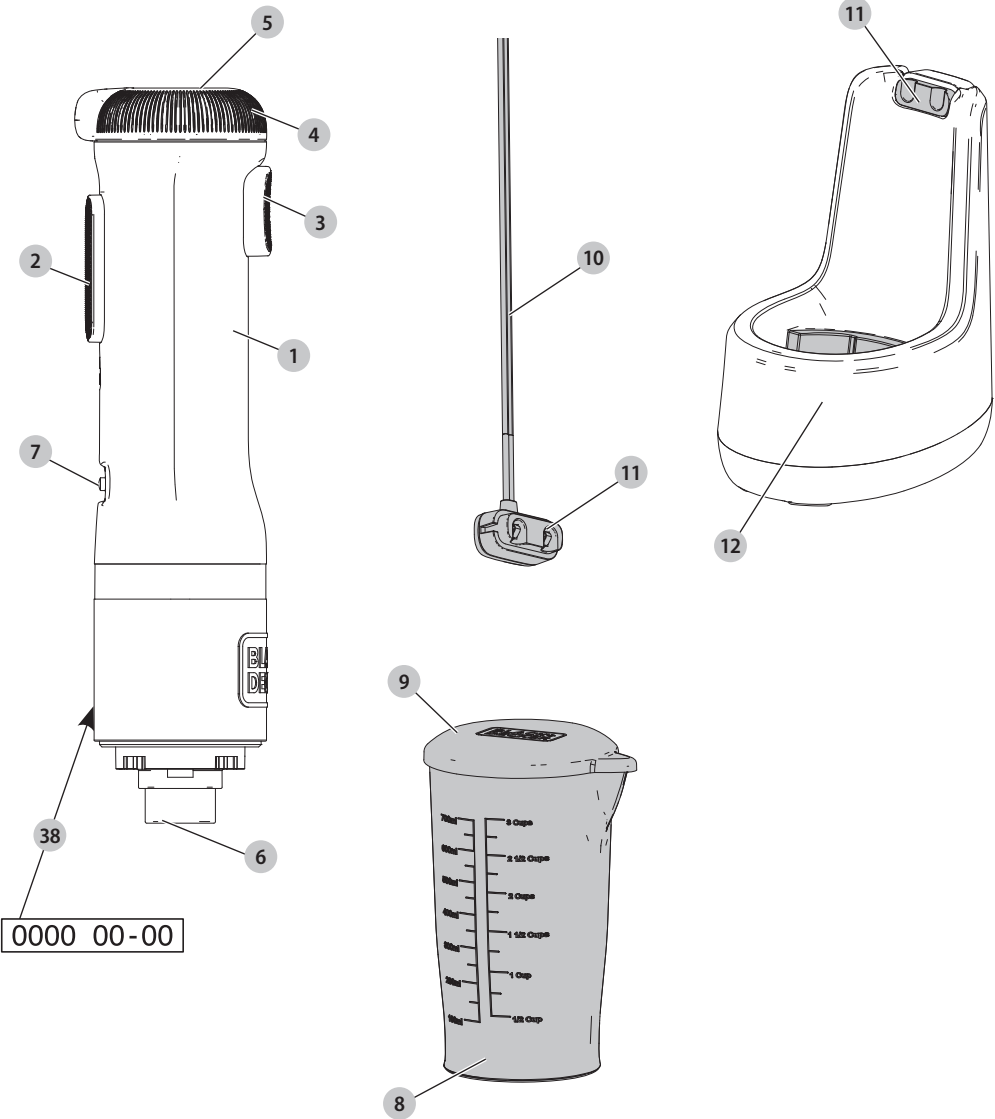 


Fig. B

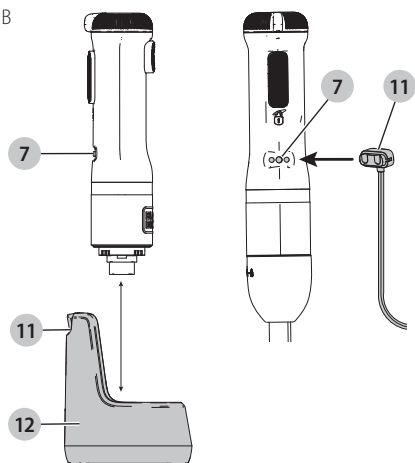 


Fig. C

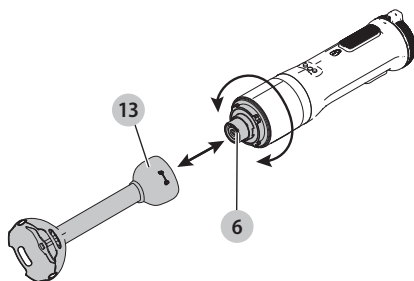 


Fig. D

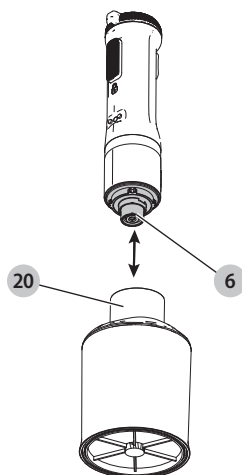 


Fig. E

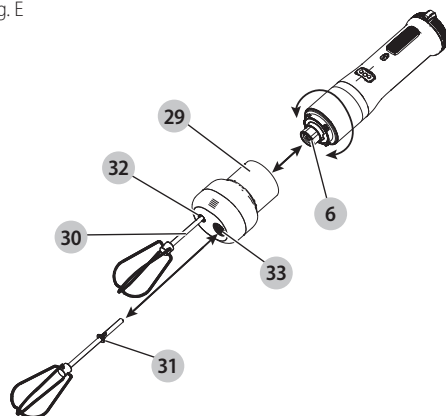 


Fig. F

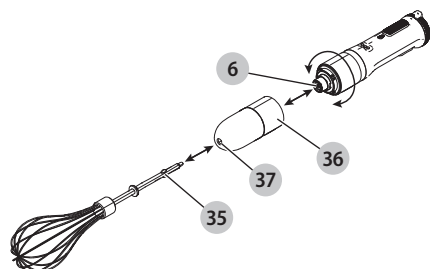 


Fig. G

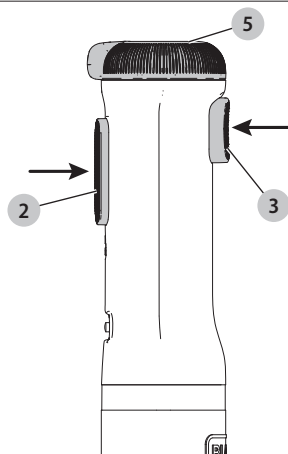 


Fig. H

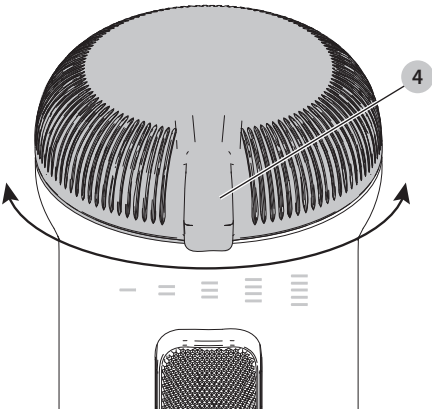 
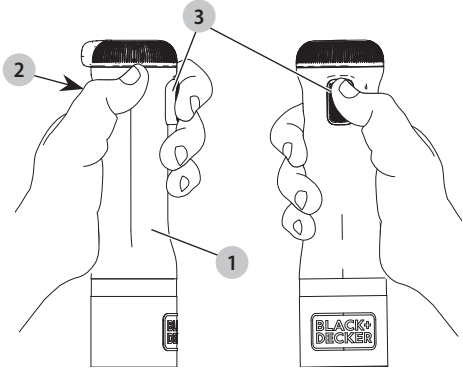 


Fig. I



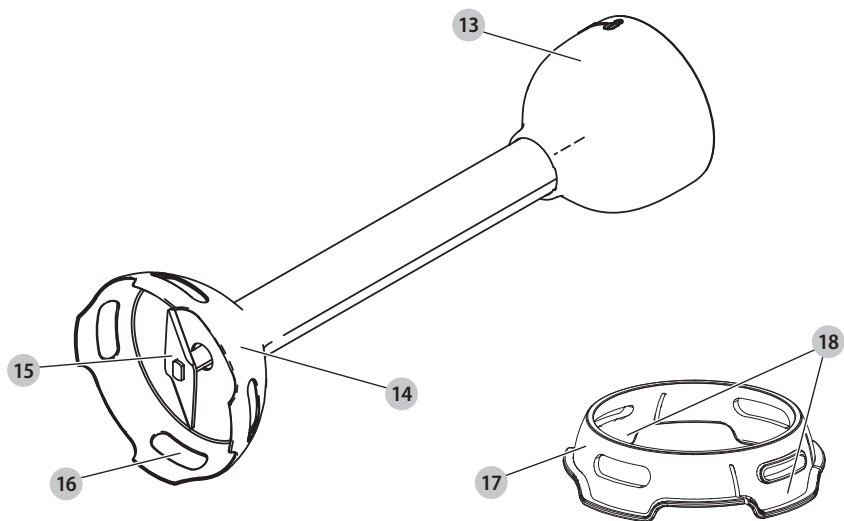 


Fig. J

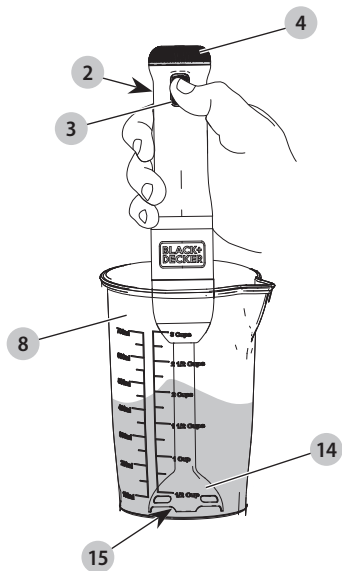 
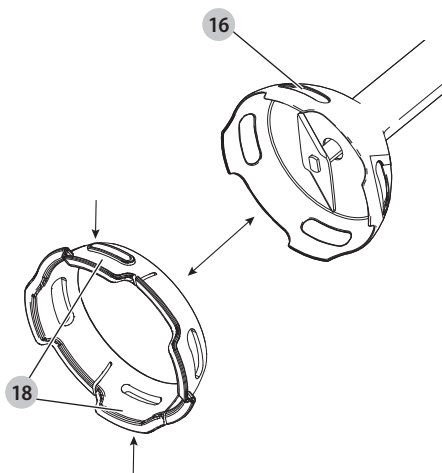 


Fig. K



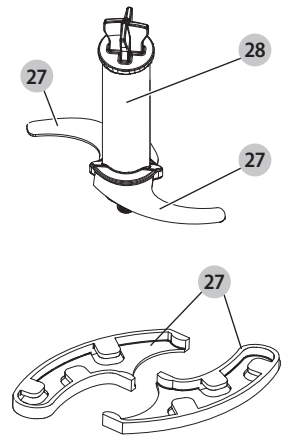 
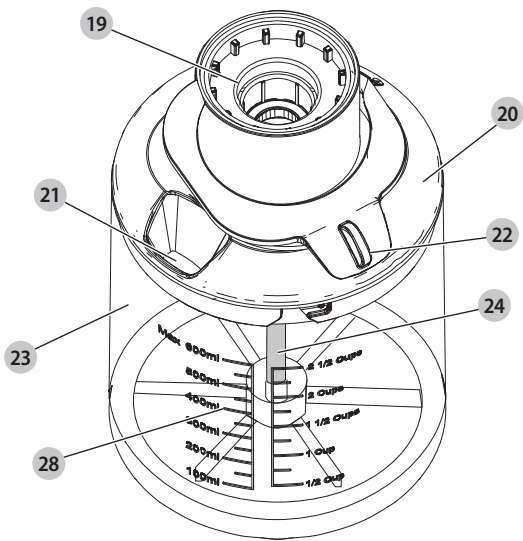 


Fig. L

Fig. M

Fig. N

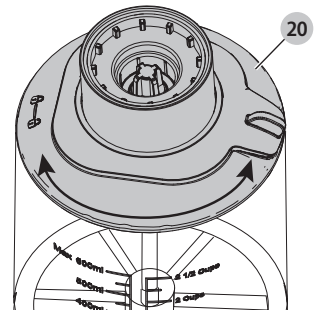 
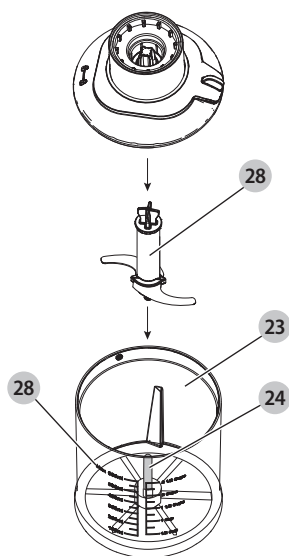 
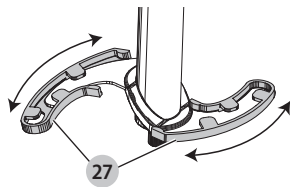 
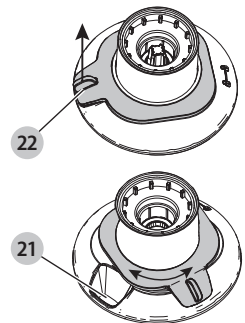 


Fig. O



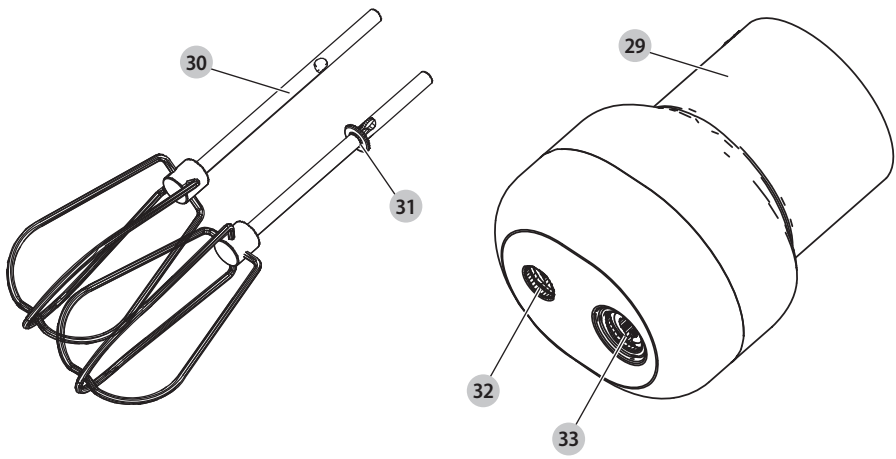 
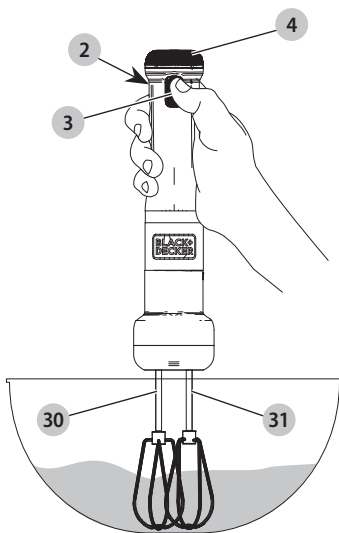 


Fig. P



 
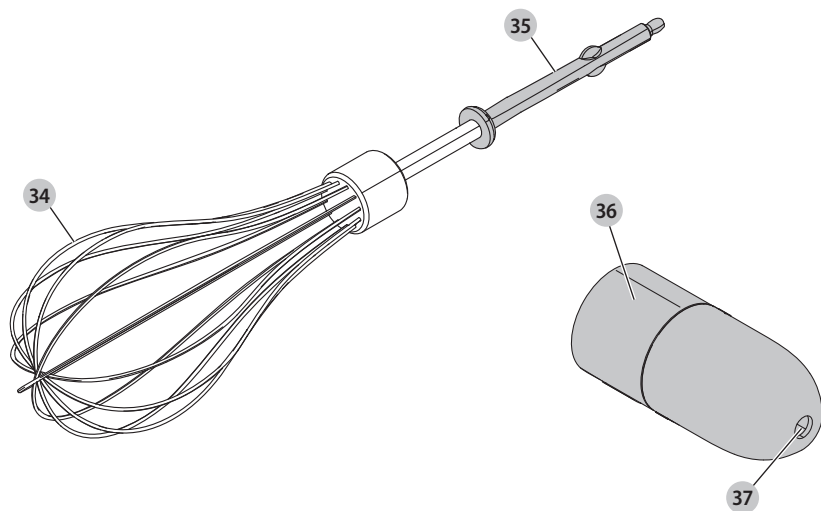 


Fig. Q

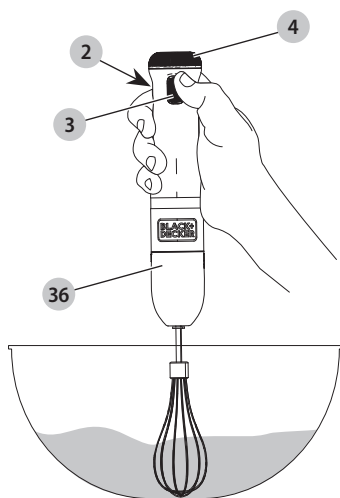

7.2V CORDLESS HAND BLENDER AND ATTACHMENTS

BCKM101

Congratulations!

You have chosen a BLACK+DECKER appliance. Years of experience, thorough product development and innovation make BLACK+DECKER one of the most reliable partners for users.

Technical Data

	BCKM101	
Type	H1	
Power source	DC	
Battery voltage	V _{DC}	7.2
Approximate charge time	h	5
Power	Wh	14.4
Weight (power unit only)	g	550



WARNING: To reduce the risk of injury, read the instruction manual.

Definitions: Safety Guidelines

The definitions below describe the level of severity for each signal word. Please read the manual and pay attention to these symbols.



DANGER: Indicates an imminently hazardous situation which, if not avoided, **will** result in **death or serious injury**.



WARNING: Indicates a potentially hazardous situation which, if not avoided, **could** result in **death or serious injury**.



CAUTION: Indicates a potentially hazardous situation which, if not avoided, **may** result in **minor or moderate injury**.

NOTICE: Indicates a practice **not related to personal injury** which, if not avoided, **may** result in **property damage**.



Denotes risk of electric shock.



Denotes risk of fire.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Read and save all instructions.
- To protect against risk of electrical shock, do not immerse appliance, motor, cord, or plug in water or other liquid. Do not use the appliance in the bathroom, near water, or outdoors.
- This appliance should not be used by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary

when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance.

- Do not operate in explosive atmospheres, such as in the presence of flammable liquids or gases
- Do not operate any appliance after the appliance malfunctions, or is dropped or damaged in any manner. Call the appropriate toll-free number in this manual.
- The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock, or injury; do not use attachments or appliances for anything other than intended use.
- This appliance is not intended for commercial, professional, or industrial use. It is designed and built exclusively for household use.
- Do not place appliance on, near, or in a hot item such as a stove, oven, pot, or container. Only use metal attachments with hot liquids or food items.
- Do not touch moving parts, disks or blades. The blades are sharp. Handle carefully with your hands away from cutting edge. Always store out of reach of children with cutting edge away from you.
- When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.
- Do not leave appliance unattended. Store away when not in use.
- Do not use the appliance with wet hands.
- Always operate appliance with attachment and/or lid locked securely in place.
- Do not attempt to override any lid interlock mechanism.
- Never blend hot oil or fat. Use care when working with other hot liquids to avoid splattering.
- Never add ingredients to a container or attachment compartment while the appliance is running.
- Do not operate the appliance continuously for more than 2 minutes. Allow the motor to rest for 1 minute between each use.
- Never mix dry, thick or heavy mixtures for more than 30 seconds. Stop the operation and stir the ingredients with a suitable utensil after the motor has stopped before continuing. Allow the motor to rest for 1 minute between each use.
- When used with heavy load, the appliance should not be operated for more than 15 seconds.
- Do not remove the appliance with attachment from ingredients during operation. Ensure the appliance is off and has stopped before removing to avoid contact with moving blades or whisk.
- Keep fingers, hands, hair, clothing, jewelry, and utensils away from any moving parts including blades and disks.

- Do not wear loose clothing or jewelry such as long necklaces that can dangle into the food preparation area.
- Turn appliance off, allow motor to stop, and keep away from the power button when adjusting, removing/installing, or cleaning attachments or accessories.
- Never modify the appliance, attachments, or any parts thereof.
- Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to sudden steaming.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE

Important Safety Instructions for All Battery Chargers

- Before using charger, read all instructions and cautionary markings on charger, and product.



WARNING: Shock hazard. Do not allow any liquid to get inside charger. Electric shock may result.



CAUTION: Burn hazard. To reduce the risk of injury, charge only BLACK+DECKER rechargeable batteries. Other types of batteries may burst causing personal injury and damage.

NOTICE: Under certain conditions, with the charger plugged into the power supply, the exposed charging contacts inside the charger can be shorted by foreign material. Foreign materials of a conductive nature such as, but not limited to, steel wool, aluminum foil or any buildup of metallic particles should be kept away from charger cavities. Always unplug the charger from the power supply

when there is no battery in the cavity. Unplug charger before attempting to clean.

- **Children are not allowed to use or play with this charger.** This charger can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Otherwise, there is a risk of injuries.
- **Children shall be supervised during cleaning to ensure that they do not play with the appliance.**
- **To reduce the risk of injury, charge only BLACK+DECKER rechargeable batteries.** Other types of batteries may burst causing personal injury and damage.
- **DO NOT attempt to charge the battery with any chargers other than the ones in this manual.** The charger and battery are specifically designed to work together.
- **These chargers are not intended for any uses other than charging BLACK+DECKER rechargeable batteries.** Any other uses may result in risk of fire, electrical shock or electrocution.
- **Do not expose charger to rain or snow.**
- **Pull by plug rather than cord when disconnecting charger.** This will reduce risk of damage to electric plug and cord

- **Make sure that cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.**
- **Do not use an extension cord unless it is absolutely necessary.** Use of improper extension cord could result in risk of fire, electric shock, or electrocution.
- **Do not place any object on top of charger or place the charger on a soft surface that might block the ventilation slots and result in excessive internal heat.** Place the charger in a position away from any heat source. The charger is ventilated through slots in the top and the bottom of the housing.
- **Do not operate charger with damaged cord or plug — have them replaced immediately.**
- **Do not operate charger if it has received a sharp blow, been dropped, or otherwise damaged in any way.** Take it to an authorised service centre.
- **Do not disassemble charger; take it to an authorised service centre when service or repair is required.** Incorrect reassembly may result in a risk of electrical shock, electrocution or fire.
- **In case of damaged power supply cord, the supply cord must be replaced immediately by the manufacturer, its service agent or similar qualified person to prevent any hazard.**
- **Disconnect the charger from the outlet before attempting any**

cleaning. This will reduce the risk of electric shock. Removing the battery will not reduce this risk.

- **NEVER attempt to connect 2 chargers together.**
- **The charger is designed to operate on standard 230V household electrical power. Do not attempt to use it on any other voltage.**
- **Take care to ensure that the charger dock is standing in a steady, secure position.** A falling battery or charger may present a risk of injury to yourself and/or others.
- The location in which the charger is used should be clean and dry. Use of a charger in a dirty or wet area could result in risk of fire, electric shock, or electrocution.

SAVE THESE INSTRUCTIONS

Charging a Battery (Fig. A, B)



WARNING: For use only with the supplied charger.

NOTE: Ensure the charging dock **12** is placed securely on a flat level countertop surface.

1. Plug the charger into any standard 230V electrical outlet. Do not use an extension cord.
2. Insert unit into the charging dock with the charging pegs **7** on the appliance aligned with the notches on the charger connector **11**. Ensure the charger connector is fully attached to the charging dock. To ensure charger connector is properly assembled, press on lower section of the connector with 2 thumbs to fully seat connector in correct position.

NOTE: The charger connector can be removed from the charging dock to charge the unit separately.

3. The LEDs **5** on the top of the appliance will illuminate while charging.

1 flashing LED	< 33% charged
First LED solid, second flashing	33 - 66% charged
2 solid LEDs, third flashing	66 - 99% charged
3 solid LEDs	100% charged

4. The LEDs will turn off upon completion of charging.

NOTE: While charging, the charger may get warm, this is perfectly normal and safe. It is safe to leave the appliance connected to the charger indefinitely. The charger automatically reduces power consumption when charging is complete.

5. When discharging:

1 LED	< 33% charged
2 LEDs	< 66% charged
3 LEDs	> 66% charged

Hot/Cold Delay

When the charger detects a battery that is too hot or too cold, it automatically starts a Hot/Cold Pack Delay, suspending charging until the battery has reached an appropriate temperature. The charger then automatically switches to the charging mode. This feature ensures maximum battery life.

A cold battery may charge at a slower rate than a warm battery. The hot/cold pack delay will be indicated by all 3 LEDs continuously flashing a short ON followed by a longer ON. Once the battery has reached an appropriate temperature, the charger will resume the charging procedure.

Electronic Protection System

Li-Ion tools are designed with an Electronic Protection System that will protect the battery against overloading, overheating or deep discharge. The tool will automatically turn off and the battery will need to be recharged.

Important Charging Notes

- Longest life and best performance can be obtained if the battery pack is charged when the air temperature is between 18 °C – 24 °C (65 °F – 75 °F). DO NOT charge when the battery pack is below +4.5 °C (+40 °F), or above +40 °C (+104 °F). This is important and will prevent serious damage to the battery.
- The charger and tool may become warm to the touch while charging. This is a normal condition and does not indicate a problem. To facilitate the cooling of the tool after use, avoid placing the charger or tool in a warm environment such as in a metal shed or an uninsulated trailer.
- If the battery does not charge properly:
 - Check operation of receptacle by plugging in a lamp or other appliance.
 - Check to see if receptacle is connected to a light switch which turns power off when you turn out the lights.
 - If charging problems persist, take the tool and charger to your local service centre.
- You may charge a partially used battery whenever you desire with no adverse effect on the battery.

Charger Cleaning Instructions



WARNING: Shock hazard. Disconnect the charger from the AC outlet before cleaning. Soiling may be removed from the exterior of the charger using a cloth or soft non-metallic brush. Do not use water or any cleaning solutions.

Labels on Charger

In addition to the pictographs used in this manual, the labels on the charger may show the following pictographs:



Read instruction manual before use.



 Use only with charger SSC-140040UK

Package Contents

Some attachments and parts listed may not be included:

- 1 Appliance unit
- 1 Adaptor
- 1 Mixing cup
- 1 Mixing cup lid
- 1 Charger
- 1 Charging dock
- 1 Immersion blender
- 1 Food chopper
- 1 Hand mixer
- 1 Whisk
- 1 Instruction manual
- Check for damage to the appliance, parts or accessories which may have occurred during transport.
- Take the time to thoroughly read and understand this manual prior to operation.

Date Code Position (Fig. A)

The production date code **38** consists of a 4-digit year followed by a 2-digit week and is extended by a 2-digit factory code.

Description (Fig. A)



WARNING: Never modify the appliance or any part of it. Damage or personal injury could result.

- 1 Appliance
- 2 Unlock button
- 3 Power button
- 4 Variable-speed dial
- 5 LEDs
- 6 Motor
- 7 Charging pegs
- 8 Mixing cup
- 9 Mixing cup lid
- 10 Charger cord
- 11 Charger connector
- 12 Charging dock
- 13 Immersion blender
- 14 Immersion blender head
- 15 Immersion blender blades

- 16 Immersion blender slots
- 17 Immersion blender guard
- 18 Immersion blender guard detents
- 19 Food chopper
- 20 Food chopper lid
- 21 Food chopper liquid port
- 22 Food chopper liquid port cover
- 23 Food chopper cylinder
- 24 Food chopper cylinder nub
- 25 Food chopper blade
- 26 Food chopper blade guards
- 27 Food chopper blade shaft
- 28 Food chopper measurement lines
- 29 Hand mixer adaptor
- 30 Hand mixer straight beater
- 31 Hand mixer ring beater
- 32 Hand mixer small adaptor hole
- 33 Hand mixer large adaptor hole
- 34 Whisk
- 35 Whisk pole
- 36 Whisk adaptor
- 37 Whisk adaptor hole
- 38 Date code

DO NOT use under wet conditions or in the presence of flammable liquids or gases.

DO NOT let children come into contact with the appliance. Supervision is required when inexperienced operators use this appliance.

ASSEMBLY AND ADJUSTMENTS

 **WARNING:** To reduce the risk of serious personal injury, turn unit off and keep away from the trigger before making any adjustments or removing/installing attachments or accessories. An accidental start-up can cause injury.

 **WARNING:** Use only the supplied BLACK+DECKER charger.

Installing and Removing Attachments

 **WARNING:** Ensure LEDs are off and the system is not on.

Blender (Fig. C)

1. To install, slide the immersion blender attachment **13** onto the motor **6** and turn clockwise (as viewed from the end of the attachment) until it securely locks in.
2. To remove, turn counterclockwise and pull attachment off.

Food Chopper (Fig. D)

- To attach, slide the motor into the food chopper lid **20**. It does not lock into the unit, but ensure the unit is fully seated into the attachment. Do not operate if unit is slightly raised out of attachment.
- To remove, turn off the unit and allow the blade to stop, then lift the unit off of the food chopper.

Hand Mixer (Fig. E)

1. To install, slide the straight beater **30** into the small adaptor hole **32** of the hand mixer adaptor **29** until it clicks into place and is secure.
2. Slide the ring beater **31** into the large adaptor hole **33** until it clicks into place and is secure.
3. Slide the hand mixer adaptor onto the motor **6** and turn clockwise (as viewed from the end of the attachment) until it locks in securely.
4. To remove, turn adaptor counterclockwise and pull it off, then pull the beaters from the adaptor.

Whisk (Fig. F)

1. To install, slide the whisk pole **35** into the whisk adaptor hole **37** until it clicks into place and is secure.
2. Slide the whisk adaptor **36** onto the motor **6** and turn clockwise (as viewed from the end of the attachment) until it locks in securely.
3. To remove, turn adaptor counterclockwise and pull it off, then pull the whisk from the adaptor.

OPERATION

 **WARNING:** To reduce the risk of serious personal injury, turn unit off and keep hands away from the switch before making any adjustments or removing/installing attachments or accessories. An accidental start-up can cause injury.

On / Off (Fig. G)

IMPORTANT: Never turn the motor on unless attachments are securely attached.

NOTE: Optimal temperature for use is between 50–104 °F (10–40 °C).

1. To turn unit on, either:
 - Press unlock button **2**, then press power button **3**.
 - Press power button, then press unlock button.
 - Press unlock and power buttons simultaneously.

NOTE: There is a slight delay between pressing both buttons and the appliance starting.

2. When the appliance is ready to use, the LEDs **5** will illuminate and remain solid. If they do not, refer to the Troubleshooting section.

NOTE: If LEDs go off during use, or don't light when starting unit, release buttons and go back to step 1.

3. Once the unit is on, the buttons may be released for up to 5 seconds. The motor will stop running after the buttons are released but the appliance remains active for 5 seconds. As long as the power button is pressed at least once within 5 seconds after releasing, the appliance will turn back on.
4. To turn off, release both buttons. The appliance will remain active for 5 seconds before turning off.

 **WARNING:** The LEDs will stay on after buttons are released. Ensure the LEDs are off and the unit has fully stopped before removing attachments.

Speed Control (Fig. H)

The appliance has a variable-speed dial **4**. Turn the dial to the appropriate speed for the attachment being used (1 is the lowest speed, 5 is the highest speed).

ATTACHMENT	SPEED
Immersion Blender	Start at 1, increase as needed
Food Chopper	Start at 1, increase as needed
Hand Mixer	Start at 1, increase as needed
Whisk	Start at 1, increase as needed

NOTE: With a 5-second delay before the unit turns off, you can

release the buttons and use your thumb to adjust speed without turning the unit off.

Proper Hand Position (Fig. I)



WARNING: To reduce the risk of serious personal injury, **ALWAYS** use proper hand position as shown.



WARNING: To reduce the risk of serious personal injury, **ALWAYS** hold securely in anticipation of a sudden reaction.

Hold the appliance **1** so your palm presses down the unlock button **2** and use your thumb or a finger to push down the power button **3**.

IMMERSION BLENDER BCKM101MB

Intended Use

This immersion blender is intended for residential use only. It blends liquids such as sauce, soup, and smoothies, mixes batters, and purees fruits and vegetables.

DO NOT let children come into contact with the appliance.



WARNING: Take precaution when handling the sharp cutting blades, emptying the bowl, and during use.

OPERATION



WARNING: To reduce the risk of serious personal injury, **turn unit off and keep away from the power button before making any adjustments or removing/installing attachments or accessories.** An accidental start-up can cause injury.



WARNING: Ensure the immersion blender attachment head is assembled to the motor as detailed in the Installing and Removing Attachments section.

NOTE: Do not use the immersion blender **13** with non-stick cookware as it may scratch or mark nonstick coatings.

Blending (Fig. J)

- Place food to be processed in mixing cup **8**. The container should only be 1/2 full or less when blending liquids or when making a puree of fruit and/or vegetables to prevent food from overflowing.
- Immerse the blender head **14** as deeply as possible into the mixing cup.
- Set the variable-speed dial **4** to 1 and increase speed by turning the dial. This will help avoid splattering and overprocessing.
- Turn the unit on as described in the On/Off section.
- Blend the ingredients by moving the appliance up and down and in circles. Do not pull immersion blender head out of food.

IMPORTANT: The continuous operating time must be less than 30 seconds. Never blend hot oil, fat, or meat.

- After you have completed blending, release the unlock button **2** and power button **3** to stop the motor **6**.
- If the immersion blender blade **15** becomes blocked:
 - Turn unit off while keeping the blender head submerged,
 - Allow the blade to stop,
 - Wait until the LEDs **5** turn off,
 - Lift the blender out of the container,
 - Disassemble the blender from the motor by turning the attachment counterclockwise,
 - Remove blockage,
 - Securely reattach the blender.

NOTE: Do not pull blender out quickly. Blending creates suction at the bottom of the cup, which can cause contents to splatter.

- Keep blender attachment inside the mixing cup to prevent dripping on counter.
- After processing, disassemble the immersion blender from the motor by turning the attachment counterclockwise.
- Clean the attachment as needed. For more information, refer to Cleaning section.

Immersion Blender Tips and Tricks

- The immersion blender blends foods and liquids rapidly, therefore, it is easy to overprocess. Stop the motor and check food throughout the operation to avoid overprocessing.
- When pureeing and blending, cut food into uniform sizes. This will ensure smooth and consistent results.
- Allow hot food to cool slightly before blending.

Attaching and Removing Blender Guard (Fig. K)



CAUTION: Do not attach or remove immersion blender guard **17** while the immersion blender attachment is installed to the motor. Avoid contact with the blade while attaching and removing the blender guard.

- To attach the blender guard, align the immersion blender guard detents **18** with the immersion blender slots **16** on

the immersion blender attachment. Slide the blender guard onto the immersion blender attachment. Ensure the guard clicks firmly into the detents.

2. To remove, depress the detents and slide the guard off.
3. Clean the blender guard as needed. For more information, refer to Cleaning section.

FOOD CHOPPER

BCKM101FP

Intended Use

This food chopper is intended for residential use only. It can be used for chopping, dicing, pureeing and mincing tomatoes, onions, garlic, crackers, ginger, and for grinding meat. **DO NOT** let children come into contact with the appliance.



WARNING: Take precaution when handling the sharp cutting blades, emptying the bowl, and during use.

OPERATION



WARNING: To reduce the risk of serious personal injury, turn unit off and keep away from the power button before making any adjustments or removing/ installing attachments or accessories. An accidental start-up can cause injury.



WARNING: Do not touch blade. It is sharp and may cause serious injury.



WARNING: Ensure the food chopper attachment head is assembled to the motor as detailed in the Installing and Removing Attachments section.

Using the Food Chopper (Fig. L - O)

1. Place the food chopper cylinder **23** on a flat surface.

NOTE: The ring around the bottom of the cylinder will help keep it from sliding while in use.

2. Remove blade guards **27** before use as shown in Fig. L.
3. Slide the blade guard **28** onto the cylinder nub **24** as shown in Fig. M.
4. Add ingredients to the cylinder. Do not fill past the top measurement line **28** marked "Max."
5. Place the food chopper lid **20** on the cylinder and twist clockwise until it securely locks as shown in Fig. N. You will feel the blade shaft and lid click into place.
6. Ensure the liquid port cover **22** is seated in the liquid port **21**. The cover should always be in place while using the food chopper, except when adding liquid ingredients.
7. Attach the motor **6** as described in the INSTALLING AND REMOVING ATTACHMENTS section.
8. Set the variable-speed dial **4** to 1 and increase speed as needed by turning the dial.
9. Turn the unit on as described in the On/Off section.
10. To add liquid ingredients,

- a. Lift the liquid port cover and turn it to either side as shown in Fig. O.

- b. Pour the liquid ingredients into the liquid port.
- c. Replace the liquid port cover.

11. After you have completed using the food chopper, release the unlock button **2** and power button **3** to stop the motor.
12. Remove the motor **6** as described in the Installing and Removing Attachments section.
13. Turn the lid counterclockwise and lift it off.
14. Pull the blade shaft out and empty the contents.
15. If the blades **27** become blocked:
 - Turn unit off,
 - Allow the blades to stop,
 - Wait until the LEDs **5** turn off,
 - Remove the motor and disassemble the food chopper,
 - Remove blockage,
 - Securely reassemble the food chopper.

16. Clean the attachment as needed. For more information, refer to Cleaning section.

Food Chopper Tips and Tricks

- Pulse the power button **3** to prevent over-chopping.
- Cut pieces to uniform size before placing in cylinder. This will help create a consistent chop/dice.
- Initially, add less liquid than what you think is needed. Pour more liquid into the lid hole **21** as you use the chopper to adjust the consistency of the food.
- Use measurement lines in cylinder to save time.

HAND MIXER

BCKM101HM

Intended Use

This hand mixer is intended for residential use only.

It can be used for mixing batter, mashed potatoes, and other wet and dry ingredients.

DO NOT let children come into contact with the appliance.

OPERATION



WARNING: To reduce the risk of serious personal injury, turn unit off and keep away from the power button before making any adjustments or removing/ installing attachments or accessories. An accidental start-up can cause injury.



WARNING: Ensure the hand mixer beaters are assembled to the adaptor and the adaptor is assembled to the motor as detailed in the Installing and Removing Attachments section.

Mixing (Fig. P)

1. Place food to be mixed into a bowl. The container should only be 1/2 full or less to prevent food from overflowing.
2. Immerse the beaters, **30** and **31**, completely in the ingredients, to the bottom of the container.
3. Set the variable-speed dial **4** to 1 and increase speed by turning the dial as desired.

NOTE: If selecting a higher speed, it is recommended that you start on low speed and then increase to high speed to avoid splattering and overprocessing.

4. Turn the unit on as described in the On/Off section. Do not remove mixer from bowl while motor **6** is running.
5. Mix the ingredients by slowly moving the appliance around the bowl.

NOTE: Do not pull beaters out of the food while mixing. This can cause contents to splatter.

6. If the beaters become blocked:
 - Turn unit off while keeping the beaters submerged,
 - Lift mixer out of the container,
 - Disassemble the beaters and hand mixer adaptor **29** from the motor by turning the adaptor counterclockwise,
 - Remove blockage,
 - Securely reattach the beaters and mixer adaptor.

IMPORTANT: The continuous operating time must be less than 2 minutes. Never mix hot oil, fat, or meat.

7. After you have completed mixing, release the unlock button **2** and power button **3** to stop the motor.
8. Ensure the motor has completely stopped before lifting the mixer out of the container.
9. After use, pull the beaters from the mixer adaptor and remove the adaptor from the motor by turning the adaptor counterclockwise.
10. Clean the attachment as needed. For more information, refer to Cleaning section.

Hand Mixer Tips and Tricks

- Start on speed 1 and increase speed as the mixture becomes more consistent.
- Move beaters slowly throughout the mixture to allow for even consistency.
- Adjust the angle of the motor to allow beaters to get all ingredients mixed.
- Use the shape of the beaters to mirror the contour of the bowl.

WHISK BCKM101WH

Intended Use

This whisk is intended for residential use only. It can be used to beat eggs, mix batters, and make meringue and whip cream.

DO NOT let children come into contact with the appliance.



WARNING: Take precaution when handling the sharp cutting blades, emptying the bowl, and during use.

OPERATION



WARNING: To reduce the risk of serious personal injury, turn unit off and keep away from the power button before making any adjustments or removing/installing attachments or accessories. An accidental start-up can cause injury.



WARNING: Ensure the whisk pole is assembled to the adaptor and that the adaptor is assembled to the motor as detailed in the Installing and Removing Attachments section.

NOTE: Do not use the whisk **34** with nonstick cookware as it may scratch or mark nonstick coatings.

Whisking (Fig. Q)

1. Place ingredients to be whisked into a bowl.

NOTE: To incorporate air into the ingredients when whisking, use a deep and wide container and move the whisk **34** in gentle up-and-down and side-to-side motions.

2. Immerse the whisk completely in the ingredients, to the bottom of the container.
3. Set the variable-speed dial **4** to 1 and increase speed by turning the dial as desired.

NOTE: If selecting a higher speed, it is recommended that you start on low speed and then increase to high speed to avoid splattering and overprocessing.

4. Turn the unit on as described in the On/Off section. Do not remove whisk from bowl while motor **6** is running.
5. Whisk ingredients by moving the appliance slowly up and down and in circles. Do not remove whisk from food.
6. If your whisk becomes blocked:
 - Turn unit off while keeping the whisk submerged,
 - Lift whisk out of the container,
 - Disassemble the whisk and whisk adaptor **36** from the motor by turning the adaptor counterclockwise,
 - Remove blockage,
 - Securely reattach the whisk and adaptor.

IMPORTANT: The continuous operating time must be less than 2 minutes. Never whisk hot oil, fat, or meat.

7. After you have completed whisking, release the unlock button **2** and power button **3** to stop the motor.
8. Ensure the motor has completely stopped before lifting the whisk out of the container.
9. After use, pull the whisk from the adaptor and remove the adaptor from the motor by turning the adaptor counterclockwise.
10. Clean the attachment as needed. For more information, refer to Cleaning section.

Whisk Tips and Tricks

- For whipping cream, always use fresh chilled cream.

- For egg whites, whisk fresh, room temperature eggs in a glass bowl to achieve greater and more stable volume.
- It is recommended to use the highest speed when whisking egg whites and cream.

Troubleshooting

Unit not running: Place the appliance on the charger until all LEDs are on and solid. Then try using the unit again.

Spatters food outside container: Adjust the variable-speed dial. Start with the speed on the lowest setting to prevent making a mess and adjust to higher speeds as ingredients become well mixed, and as you feel more comfortable with the speed.

If unit is not charging:

- Ensure the charger is plugged in.
- Wipe down the charging pegs on the appliance as well as the charger connector. Use a cloth dampened only with water and mild soap.
- Temperature fault or overcurrent conditions may have occurred.
 - Temperature fault: LEDs will blink in the following pattern - . - . (250 ms ON, 250 ms OFF, 10 ms ON, 250 ms OFF).
 - Overcurrent: unit will shut down with no flashing.
 - Refer to the Hot/Cold Delay section for more information.

MAINTENANCE



WARNING: *To reduce the risk of serious personal injury, turn unit off and and remove the battery pack before making any adjustments or removing/installing attachments or accessories. An accidental start-up can cause injury.*

Your BLACK+DECKER appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper appliance care and regular cleaning.



Cleaning



WARNING: *Never use solvents or other harsh chemicals for cleaning the non-metallic parts of the tool. These chemicals may weaken the plastic materials used in these parts. Use a cloth dampened only with water and mild soap. Never let any liquid get inside the tool; never immerse any part of the tool into a liquid.*



CAUTION: *Blender guard, food chopper cylinder, food chopper blade shaft, food chopper liquid port cover, whisk, hand mixer beaters, mixing cup, and mixing cup lid are top rack only, dishwasher safe using "normal" dishwasher setting. It is recommended that you manually rinse before placing them in the top rack of the dishwasher.*

1. Remove the attachment from the motor ⑥ as detailed in the INSTALLING AND REMOVING ATTACHMENTS section.

2. Blender guard, food chopper cylinder, food chopper blade shaft, food chopper liquid port cover, whisk, hand mixer beaters, mixing cup, and mixing cup lid are dishwasher safe (top rack only) using "normal" dishwasher setting. All other attachments and components, clean by hand with a cloth and warm, soapy water.
3. Ensure the attachment or component is dry before reinstalling.

Optional Accessories



WARNING: *Since accessories, other than those offered by BLACK+DECKER, have not been tested with this product, use of such accessories with this appliance could be hazardous. To reduce the risk of injury, only BLACK+DECKER recommended accessories should be used with this product.*

Consult your dealer for further information on the appropriate accessories.

Repairs

The charger and internal battery are not serviceable. There are no serviceable parts inside the charger or product.

Protecting the Environment



Separate collection. Products and batteries marked with this symbol must not be disposed of with normal household waste.



Products and batteries contain materials that can be recovered or recycled reducing the demand for raw materials. Please recycle electrical products and batteries according to local provisions. Further information is available at www.2helpU.com.

Rechargeable Battery

This long life battery must be recharged when it fails to produce sufficient power on jobs which were easily done before. At the end of its technical life, discard it with due care for our environment:

- Run the battery down completely.
- Li-Ion cells are recyclable. Take them to your dealer or a local recycling station. The collected products will be recycled or disposed of properly.

Guarantee

Black & Decker is confident of the quality of its products and offers an outstanding guarantee. This guarantee statement is in addition to and in no way prejudices your statutory rights. The guarantee is valid within the territories of the Member States of the European Union, the European Free Trade Area, and United Kingdom.

If a Black & Decker product becomes defective due to faulty materials, workmanship or lack of conformity, within 24 months from the date of purchase, Black & Decker guarantees to replace defective parts, repair products subjected to fair wear and tear or replace such products to ensure minimum inconvenience to the customer unless:

- The product has been used for trade, professional or hire purposes;
- The product has been subjected to misuse or neglect;
- The product has sustained damage through foreign objects, substances or accidents;
- Repairs have been attempted by persons other than authorised repair agents or Black & Decker service staff.

To claim on the guarantee, you will need to submit proof of purchase to the seller or an authorised repair agent. You can check the location of your nearest authorised repair agent by contacting your local Black & Decker office at the address indicated in this manual. Alternatively, a list of authorised Black & Decker repair agents and full details of our aftersales service and contacts are available on the Internet at: **www.2helpU.com**

Please visit our website www.blackanddecker.co.uk to register your new Black & Decker product and to be kept up to date on new products and special offers. Further information on the Black & Decker brand and our range of products is available at www.blackanddecker.co.uk

België/Belgique/Luxembourg www.blackanddecker.be enduser.be@sbdinc.com	Stanley Black & Decker Belgium BVBA Egide Walschaertsstraat 16 2800 Mechelen	Tel. NL Tel. FR Fax.	+32 15 47 37 65 +32 15 47 37 66 +32 15 47 37 99
Danmark	Black & Decker Roskildevej 22 2620 Albertslund	kundeservice.dk@sbdinc.com www.blackanddecker.dk	
Deutschland www.blackanddecker.de infobfge@sdbinc.com	Stanley Black & Decker Deutschland GmbH Black & Decker Str. 40, D - 65510 Idstein	Tel. Fax	06126 21-0 06126 21-2980
Ελλάδα www.blackanddecker.gr greece.service@sbdinc.com	Stanley Black & Decker (ΕΛΛΑΣ) Ε.Π.Ε ΓΡΑΦΕΙΑ: Σπυρίδωνος 7 & Βουλιαγμένης 166 74 Γλυφάδα - Αθήνα	Τηλ. Φαξ	210-8981616 210-8983570
SERVICE:	Ημερος Τόπος 2 - Χάνι Αδάμ 193 00 Ασπρόπυργος - Αθήνα	Τηλ. Service Φαξ	210-8985208 210-5597598
España www.blackanddecker.es respuesta.posventa@sbdinc.co	Stanley Black & Decker Ibérica, S.C.A. Parc de Negocis "Mas Blau" Edificio Muntadas, c/Bergadá, 1, Of. A6 08820 El Prat de Llobregat (Barcelona)	Tel. Fax	934 797 400 934 797 419
France www.blackanddecker.fr	Black & Decker (France) S.A.S. 5 allée des Hêtres B.P. 30084 69579 Limonest Cédex	Tel. Fax	04 72 20 39 20 04 72 20 39 00
Helvetia www.blackanddecker.ch service@rofoag.ch	ROFO AG Gewerbezone Seeblick 3213 Kleinbödingen	Tel. Fax	026-6749393 026-6749394
Italia www.blackanddecker.it service.italia@sbdinc.com	Stanley Black & Decker Italia Via Energypark 6 20871 Vimercate (MB)	Tel. Fax Numero verde	039-9590200 039-9590313 800-213935
Nederland www.blackanddecker.nl enduser.nl@sbdinc.com	Stanley Black & Decker Netherlands BV Holtum Noordweg 35, 6121 RE BORN Postbus 83, 6120 AB BORN	Tel. Fax	+31 164 283 065 +31 164 283 200
Norge	Black & Decker Postboks 4613, Nydalen 0405 Oslo	kundeservice.no@sbdinc.com www.blackanddecker.no	
Österreich www.blackanddecker.at service.austria@sbdinc.com	Stanley Black & Decker Austria GmbH Oberlaaerstraße 248, A-1230 Wien	Tel. Fax	01 66116-0 01 66116-614
Portugal www.blackanddecker.pt resposta.posvenda@sbdinc.com	Black & Decker Limited SARL Quinta da Fonte - Edifício Q55 D. Diniz Rua dos Malhões, 2 e 2A - Piso 2 Esquerdo 2770 - 071 Paço de Arcos	Tel. Fax	214667500 214667580
Suomi	Black & Decker PL47 00521, Helsinki	asiakaspalvelu.fi@sbdinc.com www.blackanddecker.fi	
Sverige	Black & Decker AB Box 94, 431 22 Mölndal	kundservice.se@sbdinc.com www.blackanddecker.se	
Türkiye www.blackanddecker.com.tr	STANLEY BLACK & DECKER TURKEY ALET ÜRETİM SAN TİC. LTD. ŞTİ. AND Kozyatağı – İçerenköy Mah. Umut Sok. AND Ofis. Sit. No: 10-12/82-83-84 Ataşehir/İstanbul	Tel. Fax.	+90 216 665 29 00 +90 216 665 29 01 info-tr@sbdinc.com
United Kingdom & Republic Of Ireland www.blackanddecker.co.uk emeaservice@sbdinc.com	Black & Decker 270 Bath Road Slough, Berkshire SL1 4DX	Tel. Fax	01753 511234 01753 512365
Middle East & Africa www.blackanddecker.ae service.mea@sbdinc.com	Black & Decker P.O.Box - 17164 Jebel Ali Free Zone (South), Dubai, UAE	Tel. Fax	+971 4 8863030 +971 4 8863333