


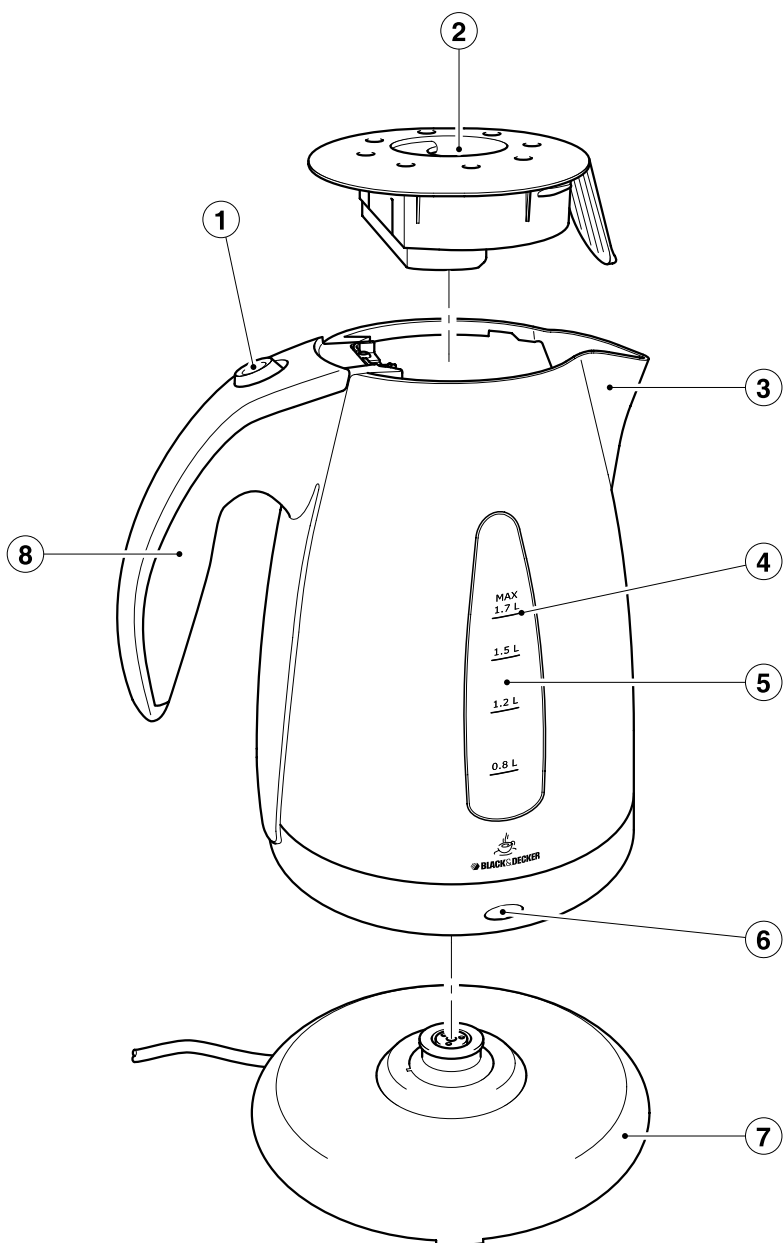



Intended use

Your Black & Decker concealed coil jug kettle has been designed for boiling water as described in this manual. Do not use this appliance for any other purpose. This product is intended for household use only.

Safety instructions

Warning! When using mains-powered appliances, basic safety precautions, including the following, should always be followed to reduce the risk of fire, electric shock, personal injury and material damage.

- ◆ Read all of this manual carefully before using the appliance.
- ◆ The intended use is described in this manual. The use of any accessory or attachment or the performance of any operation with this appliance other than those recommended in this instruction manual may present a risk of personal injury.
- ◆ Retain this manual for future reference.

Using your appliance

- ◆ Only use the kettle with the base provided.
- ◆ Do not use the base with any other kettle.
- ◆ Do not touch hot surfaces. Keep your hands away from the spout.
- ◆ Always take care when using the appliance.
- ◆ Never pull the power supply cord to disconnect the plug from the socket. Keep the power supply cord away from heat, oil and sharp edges. Do not allow the power supply cord to hang over the edge of your work top or table.
- ◆ Always place the appliance on a level surface with adequate free space on all sides.
- ◆ Do not place the appliance below a socket outlet. Do not place the appliance on a wet or slippery surface. Do not place the appliance on or near heat sources or in a heated oven.
- ◆ Do not use the appliance near flammable or explosive materials.
- ◆ Do not use the appliance outdoors.
- ◆ Always protect the appliance from water or excessive humidity.
- ◆ Do not place any utensils in the appliance.
- ◆ Do not move the appliance when in use.
- ◆ Operate the appliance only with dry hands.
- ◆ Do not use the appliance if you have bare feet.
- ◆ If the power supply cord is damaged during use, disconnect the appliance from the power supply immediately. Do not touch the power supply cord before disconnecting from the power supply.

- ◆ Disconnect the appliance from the power supply when not in use, before fitting or removing parts and before cleaning.
- ◆ Allow the appliance to cool before cleaning.

Safety of others

- ◆ Do not allow children or any person unfamiliar with these instructions to use the appliance.
- ◆ Do not allow children or animals to come near the work area or to touch the appliance or power supply cord. Close supervision is necessary when the appliance is used near children.
- ◆ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ◆ Children must be supervised to make sure that they do not play with the appliance.

After use

- ◆ Switch off and remove the plug from the socket before leaving the appliance unattended and before changing, cleaning or inspecting any parts of the appliance.
- ◆ When not in use, the appliance should be stored in a dry place. Children should not have access to stored appliances.

Inspection and repairs

- ◆ Before use, check the appliance for damaged or defective parts. Check for breakage of parts, damage to switches and any other conditions that may affect its operation.
- ◆ Do not use the appliance if any part is damaged or defective.
- ◆ Have any damaged or defective parts repaired or replaced by an authorised repair agent.
- ◆ Before use, check the power supply cord for signs of damage, ageing and wear.
- ◆ Do not use the appliance if the power supply cord or mains plug is damaged or defective.
- ◆ If the supply cord is damaged, it must be replaced by the manufacturer or an authorised Black & Decker Service Centre in order to avoid a hazard.
- ◆ Never attempt to remove or replace any parts other than those specified in this manual.

Electrical safety



This product must be earthed. Always check that the power supply corresponds to the voltage on the rating plate.

If the supply cord is damaged, it must be replaced by the manufacturer or an authorised Black & Decker Service Centre in order to avoid a hazard.

To avoid the risk of electric shock, do not immerse the cord, plug or appliance in water or other liquid.

Features

1. On/off switch
2. Lid
3. Spout
4. Maximum fill mark
5. Water level indicator
6. Power on indicator
7. Kettle base
8. Handle

Before first use

- ◆ Remove all packaging from the appliance,
- ◆ Clean the appliance before first use.
- ◆ Fill the kettle with cold water to the maximum fill mark (4). Do not over fill as described below.
- ◆ Close the lid (2). Boil the water as described below.
- ◆ Discard the boiled water and repeat the procedure.

Use

Warning! Always place the appliance on a flat, clean and non-slip surface before operating it.

Warning! Always check the water level while using the appliance. Never use the appliance without sufficient water.

Boiling water

- ◆ Place the kettle base (7) on a suitable surface.
- ◆ Take the kettle to a water outlet. Remove the lid (2).
- ◆ Fill the kettle with cold water to the desired level. Do not over fill.
- ◆ To prevent dry-boiling fill to at least 250 ml (one cup).
- ◆ Do not fill the kettle beyond the maximum fill mark (4). If the kettle is overfilled, boiling water may be ejected from the spout.
- ◆ Replace the lid (2) and make sure it snaps into place.
- ◆ Place the kettle on the kettle base (7).
- ◆ Insert the plug and switch the on/off switch (1) to the on position (I).
- ◆ The power on indicator (6) will light.
- ◆ The water will start boiling, making a rumbling noise. Do not open the lid when the water is boiling.
- ◆ As soon as the water has boiled, the appliance will switch off. power on indicator (6) will go out.
- ◆ To switch the appliance off during boiling, press the on/off switch (1) the off position (O).
- ◆ If you do not want to use the boiled water immediately, the kettle may be left on the base. If you want to bring

the water back to boil after a while, switch the on/off switch (1) to on again.

Pouring boiled water

- ◆ Make sure the appliance is switched off.
- ◆ Take the kettle off the base.
- ◆ To avoid scalding, tilt the kettle slowly to pour the boiled water.
- ◆ After pouring, place the kettle back on the base and remove the plug from the socket.

Cleaning and maintenance

Warning! Before cleaning and maintenance, switch the appliance off, remove the plug from the socket and allow the appliance to cool.

Warning! Do not immerse the appliance, the base, the cord set or the plug in water or any other liquid.

- ◆ Wipe the exterior with a damp cloth.
- ◆ Do not use scouring pads.
- ◆ If necessary, use a mild detergent to remove spots. Do not use any abrasive or solvent based cleaner.

Descaling the appliance

If the appliance is used in an area with hard water, it is advised to descale the appliance from time to time.

- ◆ Half fill the kettle with cold tap water.
- ◆ Add 30 ml of white vinegar.
- ◆ Boil the mixture and allow it to stand for 30 seconds.
- ◆ Repeat this procedure 2 or 3 times.
- ◆ Thoroughly rinse the kettle.

Protecting the environment



Separate collection. This product must not be disposed of with normal household waste.

Should you find one day that your Black & Decker product needs replacement, or if it is of no further use to you, do not dispose of it with household waste. Make this product available for separate collection.



Separate collection of used products and packaging allows materials to be recycled and used again. Re-use of recycled materials helps prevent environmental pollution and reduces the demand for raw materials.

Local regulations may provide for separate collection of electrical products from the household, at municipal waste sites or by the retailer when you purchase a new product.

Black & Decker provides a facility for the collection and recycling of Black & Decker products once they have reached the end of their working life. To take advantage of this service please return your product to any authorised repair agent who will collect them on our behalf.

You can check the location of your nearest authorised repair agent by contacting your local Black & Decker office at the address indicated in this manual. Alternatively, a list of authorised Black & Decker repair agents and full details of our after-sales service and contacts are available on the Internet at: **www.2helpU.com**.

Technical data

	DC75
Voltage	Vac 230
Capacity	l 1.7
Power input	W 2000
Weight (empty)	kg 0.75

EC declaration of conformity

DC75

Black & Decker declares that these products conform to:
EN60335-1, EN60335-2-15, 2006/95/EC

The undersigned is responsible for compilation of the technical file and makes this declaration on behalf of
Black & Decker



Kevin Hewitt
Director of Consumer Engineering
Spennymoor, County Durham DL16 6JG,
United Kingdom
07-11-2007

To claim on the guarantee, you will need to submit proof of purchase to the seller or an authorised repair agent. You can check the location of your nearest authorised repair agent by contacting your local Black & Decker office at the address indicated in this manual. Alternatively, a list of authorised Black & Decker repair agents and full details of our after-sales service and contacts are available on the Internet at:

www.2helpU.com

Please visit our website **www.blackanddecker.eu** to register your new Black & Decker product and to be kept up to date on new products and special offers. Further information on the Black & Decker brand and our range of products is available at **www.blackanddecker.eu**.

Guarantee

Black & Decker is confident of the quality of its products and offers an outstanding guarantee. This guarantee statement is in addition to and in no way prejudices your statutory rights. The guarantee is valid within the territories of the Member States of the European Union and the European Free Trade Area.

If a Black & Decker product becomes defective due to faulty materials, workmanship or lack of conformity, within 24 months from the date of purchase, Black & Decker guarantees to replace defective parts, repair products subjected to fair wear and tear or replace such products to make sure of the minimum inconvenience to the customer unless:

- ◆ The product has been used for trade, professional or hire purposes.
- ◆ The product has been subjected to misuse or neglect.
- ◆ The product has sustained damage through foreign objects, substances or accidents.
- ◆ Repairs have been attempted by persons other than authorised repair agents or Black & Decker service staff.

United Kingdom	Black & Decker	Tel.	01753 511234
	210 Bath Road	Fax	01753 551155
	Slough, Berkshire SL1 3YD	Helpline	01753 574277
Italia	Black & Decker Italia SpA	Tel.	039-23871
	Viale Elvezia 2	Fax	039-2387592/2387594
	20052 Monza (MI)	Numero verde	800-213935
España	Black & Decker Ibérica, S.C.A.	Tel.	934 797 400
	Parc de Negocis "Mas Blau"	Fax	934 797 419
	Edificio Muntadas, c/Bergadá, 1, Of. A6		
Portugal	08820 El Prat de Llobregat (Barcelona)		
	Black & Decker	Tel.	214667500
	Rua Egas Moniz 173	Fax	214667580
Ελλάδα	S. João do Estoril		
	2766-651 Estoril		
	Black & Decker (Ελλάς) Α.Ε.	Τηλ.	210 8981616
	Στράβωνος 7 & Λεωφ. Βουλιαγμένης 159	Φαξ	210 8983285
	166 74 Γλυφάδα - Αθήνα		
		www.blackanddecker.eu	