



PLAYER **PRO**

NEXT-LEVEL SOUND & SMARTS

USER MANUAL

TABLE OF CONTENTS

FEATURES	3
WHAT'S IN THE BOX	4
PRODUCT LAYOUT/OPERATIONS	5
PRODUCT SETUP	6
⦿ PAIRING VIA BLUETOOTH® – MUSIC/AUDIO	6
⦿ PAIRING VIA BLUETOOTH® LOW ENERGY (BLE) – GOLF	6
HOW TO USE	7
⦿ CHARGING THE DEVICE	7
⦿ BUILT-IN MAGNETIC STRIP	8
⦿ NAVIGATING UTILITY FEATURES	9
⦿ CLOCK – TIME/DATE	9
⦿ BATTERY AND DEVICE SETTINGS	10
⦿ LOW POWER MODE	10
⦿ GENERAL SETTINGS	11
⦿ CLOCK OPTIONS	12
⦿ MUSIC/AUDIO	13
⦿ AURACAST BROADCASTING	14
⦿ EQ MODES	14
⦿ NAVIGATING GOLF FEATURES	15
⦿ MAIN GPS	16
⦿ SCORING	16
⦿ AUTO SCORE REMINDER	16



TABLE OF CONTENTS

Ⓢ DRIVING DISTANCE	17
Ⓢ DYNAMIC HAZARDS	17
Ⓢ GAME APP DEVICE SETTINGS	18
○ ACTION BUTTON	18
○ DYNAMIC BUTTON	19
○ FIND MY DEVICE	19
CLEANING AND GENERAL CARE	20
FAQS & TROUBLESHOOTING	21
TECHNICAL SPECIFICATIONS	22
IMPORTANT SAFETY INSTRUCTIONS	23
WARNINGS	25
REGULATORY, COMPLIANCE, & LEGAL INFO	28
Ⓢ FCC CAUTION	28
Ⓢ IC CAUTION	30
Ⓢ RF WARNING FOR PORTABLE DEVICE	30
Ⓢ WEEE DIRECTIVE	31
Ⓢ DISPOSAL OF ELECTRIC AND ELECTRONIC EQUIPMENT	32
WARRANTY	33
NEED HELP	35

FEATURES

- **Vibrant full-color touchscreen** with intuitive controls for on-device GPS, scoring, and menu navigation.
- **True 360° studio-quality audio** with dual drivers that deliver rich, powerful sound.
- **Bluetooth® Low Energy (BLE)** connectivity for seamless integration with the Blue Tees GAME App and ecosystem.
- **True Distance™ yardages and details** with slope and environmental adjustments for more confident shot decisions.
- **Scout AI club recommendations** delivered directly on the device via the GAME App.
- **Front / Center / Back GPS distances** for over 42,000 courses
- **Full Hole, Green, and Heat Maps** for advanced visuals.
- **On-device scoring and digital scorecard** for tracking your round progress.
- **Dynamic hazard distances** to help plan smarter shots.
- **Shot distance calculator** to measure how far your shots go.
- **Fast USB-C rechargeable battery and power bank** with long on-course runtime and practical performance.
- **Heavy-duty magnetic strip** for secure mounting to carts, bags, or any metal surface.
- **IP67 water and dust resistance** for reliable performance in rain or shine.
- **Built-in round timer and clock** to keep you focused and on pace during play.

WHAT'S IN THE BOX

PLAYER PRO Touchscreen GPS Golf Speaker

USB-C to USB-C Braided Charging Cable (1m)

Quick Start Guide (English w/ translations)


Blue Tees GAME App Card

Blue Tees Golf® Brand Sticker

Desiccant



PRODUCT LAYOUT/OPERATIONS

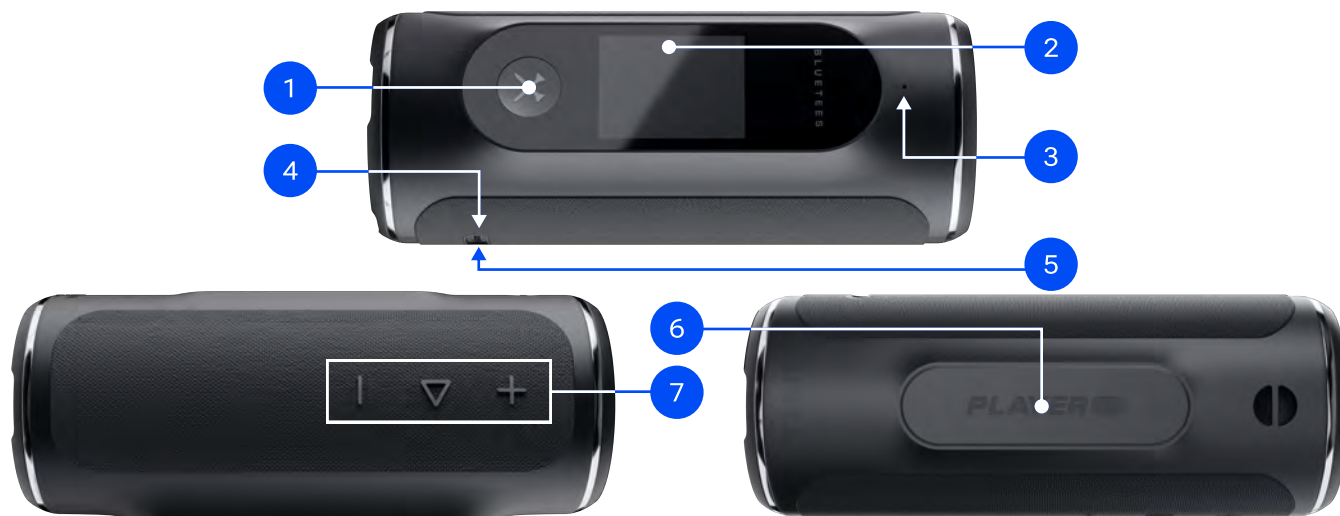

1. Power / Action Button

- Hold 5s = Power ON/OFF
- Short Press = 'Action Button' setting (via GAME App)

Once you have connected your Player Pro to both your phone and Blue Tees GAME app, go to Device Settings on the home screen of the app and navigate until you see "Choose Action Button".

2. Cover Glass & LCD

3. Microphone

4. USB Type-C Input/Output Port

5. Reset Button

6. Built-in Magnetic Strip

7. Playback Controls

- Play/Pause 
 - Short Press = Play/Pause audio
 - Long Press = Activate Auracast™ session
 - Double Press = Switch EQ Modes (Indoor/Outdoor)
- +/-
 - Individual Short Press = Single volume adjustment
 - Individual Long Press = Skip/Replay audio
 - Simultaneous Hold = Disconnect Classic Bluetooth® and BLE

PRODUCT SETUP

PAIRING VIA BLUETOOTH® – MUSIC/AUDIO

POWER ON & PAIRING TO MOBILE DEVICE via Bluetooth® (1st time)

1. Turn on the Player Pro Speaker by pressing and holding  for five (5) seconds until the LCD flashes on. You will hear a prompt tone indicating that the Player Pro Speaker has been turned on and will automatically enter into Bluetooth® pairing mode.
2. On your mobile device, turn on the Bluetooth® feature. Select “Player Pro Audio XXXX (Last 4 digits of SN)” from the list of available Bluetooth® devices. Keep the mobile device within three (3) feet or one (1) meter away from the Player Pro Speaker. Pairing via Bluetooth® Low Energy (BLE) – Golf

PAIRING VIA BLUETOOTH® LOW ENERGY (BLE) – GOLF

CONNECTING TO THE BLUE TEES GAME APP & PLAYING GOLF



1. Press and hold the  for five (5) seconds until the LCD flashes on.
2. Download/Launch the Blue Tees GAME App and follow the on-screen instructions to create an account or login.
3. Navigate to the ‘Devices’ section, add new device, connect/register the Player Pro Speaker to your Blue Tees GAME account.
4. Once connected, search the location or name of the golf course in the search bar to locate a specific golf course.
5. Select desired course and match details.
6. Press “Start Round”.

NOTE:

- This device requires both a Classic Bluetooth® connection for audio and Bluetooth® Low Energy (BLE) for GAME App golf experiences. Pairing via Bluetooth® – Music/Audio

HOW TO USE



CHARGING THE DEVICE

This device is powered by built-in lithium-ion batteries that can be charged using any standard USB port on your laptop/computer or an AC adapter.

Note: This device will not charge/operate outside of the approved temperature range (page 25)

1. Locate the USB-C charging port on the device.
2. Insert the one end (USB-C) of the provided charging cable into the USB-C input port.
3. Insert the other end (USB-C) of the provided charging cable into an external power source, such as a USB Type-C port on your laptop/ computer or an AC adapter (min. 5V/2A).
4. Remain inserted for ~3 hours or until device is fully charged before use.



Standby time: When there is no audio input and no user operation, within 20 minutes, unit will enter standby mode.

This product complies with Commission Regulation (EU) 2023/826 with regard to the eco-design requirements for household and office electrical and electronic equipment on standby, off mode, and networked standby.

Power consumption in networked standby mode: < 2W



WARNING

This product uses a lithium-based battery. Lithium batteries can overheat and cause damage if they are used incorrectly. Do not use batteries that are damaged or show signs of physical wear.



PLAYER PRO

ENGLISH

7

HOW TO USE



BUILT-IN MAGNETIC STRIP

ENHANCED STRENGTH MAGNET - ATTACHES TO THE CART OR MAGNETIC SURFACES

- The magnetic strip on the Player Pro Speaker is specifically designed to only fit on the vertical pole of the golf cart.
- Ensure the magnetic strip is securely flat, aligned, and free of debris when magnetically attaching to a vertical surface.



WARNING

Use caution when using the built-in magnetic strip to attach the Player Pro Speaker to the golf cart. Be careful driving over rough terrain, heavy bumps, potholes and/or curbs as this can cause the speaker to fall off, incurring damage that is not covered under the two-year limited warranty.

This device contains a neodymium magnet. Magnets could affect the functioning of pacemakers and implanted heart defibrillators. If you use these devices, keep sufficient distance from magnet. Warn others who wear these devices from getting too close to magnets.

- Magnet may lose part of its adhesive force permanently if exposed to temperatures above 175° F (80° C).
- Magnets produce far-reaching, strong magnetic field. They could damage TVs, laptops, computer hard drives, credit and ATM cards, data storage media, mechanical watches, hearing aids, and speakers. Keep the unit away from devices and objects that could be damaged by strong magnetic fields.
- Magnets have strong magnetic fields which can pinch skin and fingers. Use caution when attaching the unit to a magnetic, metal surface.



HOW TO USE



NAVIGATING UTILITY FEATURES

Swipe up and down to access the Time, Battery Status, Front / Center / Back Distances* and Music screens.

*Golf features are only available when Player Pro is paired with the GAME app, and a round of golf has been started.

Note: Speaker does not require connectivity to the Blue Tees GAME App for Utility features

CLOCK – TIME/DATE



Automatically updates when connected to Classic Bluetooth.

- *Select desired Clock Face and 12HR/24HR options in 'Settings -> Clock'*



HOW TO USE



BATTERY AND DEVICE SETTINGS



View current battery status, adjustable device settings, and product information.

Low Power Mode

- Reduce brightness to minimum
- Set volume limit to 70% of original
- Screen turns off after 5s of inactivity



HOW TO USE



GENERAL SETTINGS

Brightness: 1-5

Dark Mode: ON/OFF

Language: English (Default), Spanish, French, German, Japanese

Incoming Calls: ON/OFF

- *Controls ringtone audio playing through the speaker*

EQ Mode: Indoor/Outdoor

- *Indoor = optimized audio tuning for small, enclosed spaces by offering balanced, rich sound*
- *Outdoor = increased treble and enhanced bass to overcome open-air sound dissipation and ambient noise*

Audio Alerts: ON/OFF

- *Display audio controls pop-up screen during playback and volume changes.*




HOW TO USE




CLOCK OPTIONS

CLASSIC CLOCK

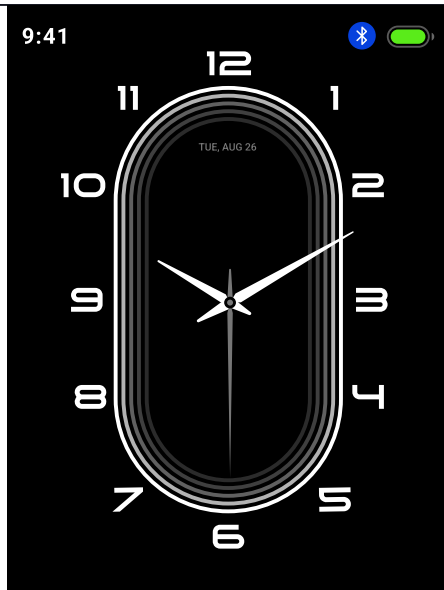

MODERN CLOCK

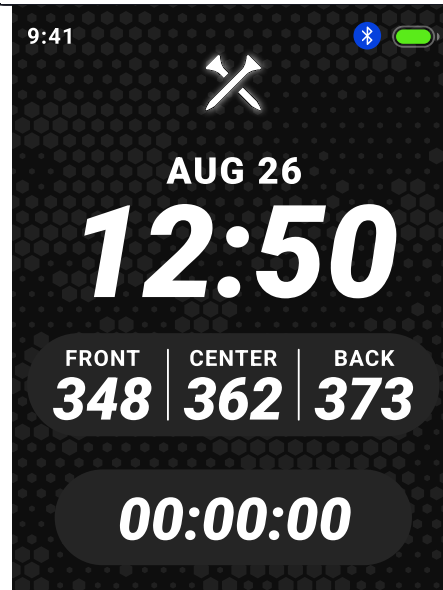

*Note: Golf data only
available via GAME App*

STANDARD CLOCK



24HR Option: **ON/OFF**



PLAYER PRO

 
ENGLISH

12

HOW TO USE



MUSIC / AUDIO

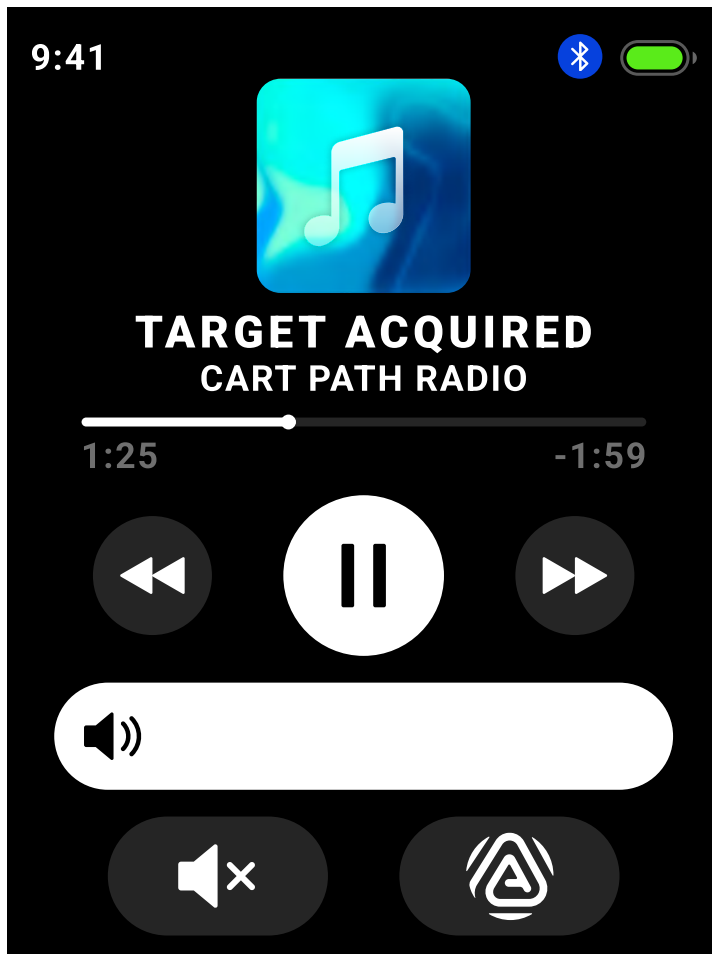

Control and view current audio details including:

- Artist name and song title
- Album Artwork (if available)
- Auracast session
- Playback controls (Play/Pause/Skip/Previous)
- Volume and Mute



PLAYER PRO

 
 
ENGLISH

13

HOW TO USE

AURACAST™ BROADCASTING

This device supports Auracast™ broadcast audio, a new Bluetooth® technology that allows you to share your audio with an unlimited number of nearby, compatible PLAYER-family speakers.

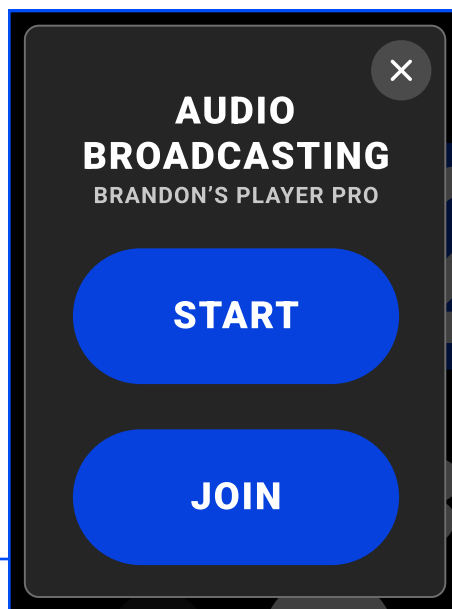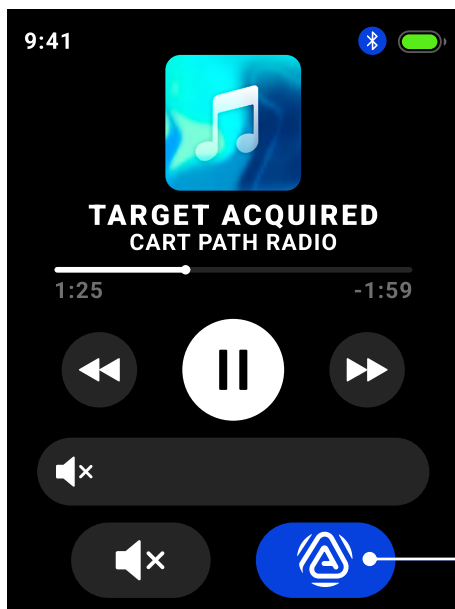

Tap the Auracast™ icon and select either 'Start' or 'Join' an audio session.

Start
Control audio being played

Join
Link with an active audio group

EQ Modes

Double Press the  Play/Pause button to switch between Indoor / Outdoor EQ modes.

Indoor Mode - Perfect for home or clubhouse use. Delivers clear, balanced sound at lower volumes without overwhelming bass.



Outdoor Mode - Built for the course. Boosts volume, bass, and clarity so music and callouts carry across open spaces.

HOW TO USE

NAVIGATING GOLF FEATURES



When connected to the GAME App and in an active round of golf, swipe left and right to access desired golf features.

*Premium membership/subscription required for Scoring, Driving Distance, Club Recommendations, and True Distance™.

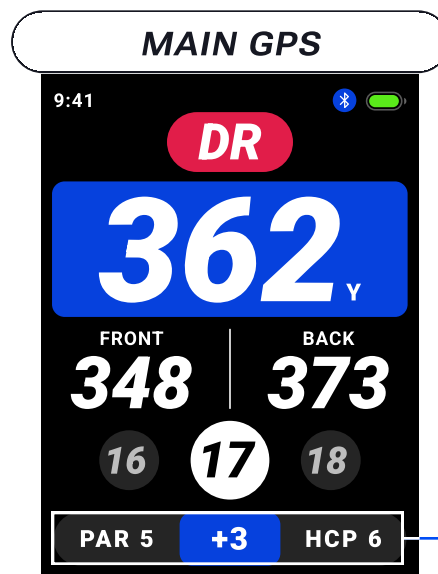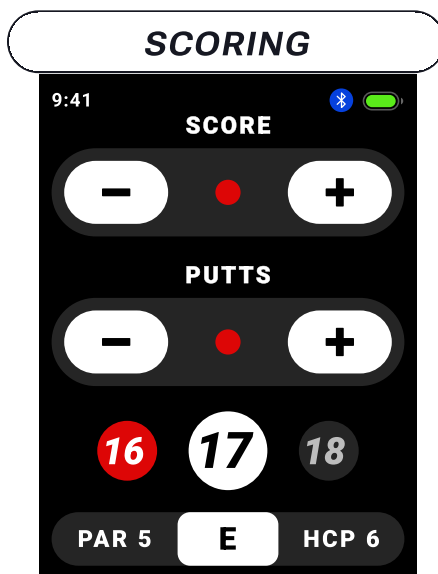


Tappable Area

Open scorecard view

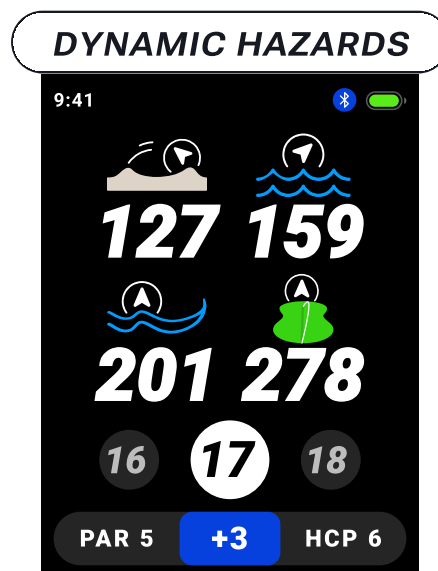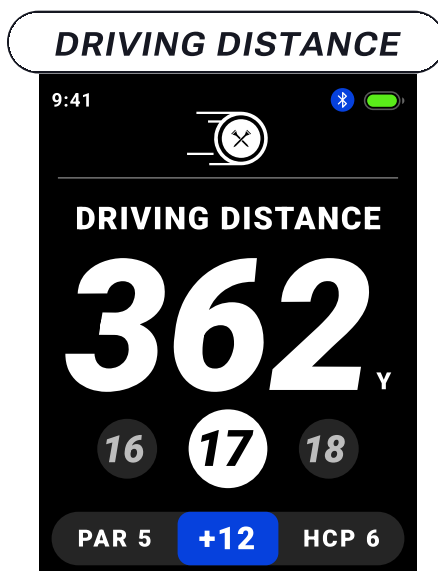

HOW TO USE

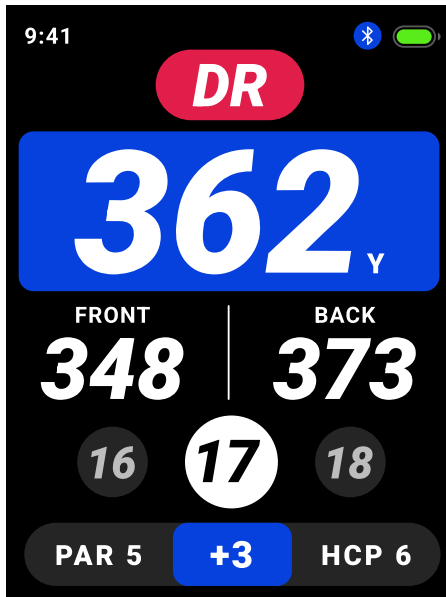


MAIN GPS

As default, displays Front/Center/Back distances to the green on the selected hole.

Mobile App Settings:

- TrueDistance: ON/OFF
- Center Only: Never/Past 250/Always
- Club Recommendations: ON/OFF

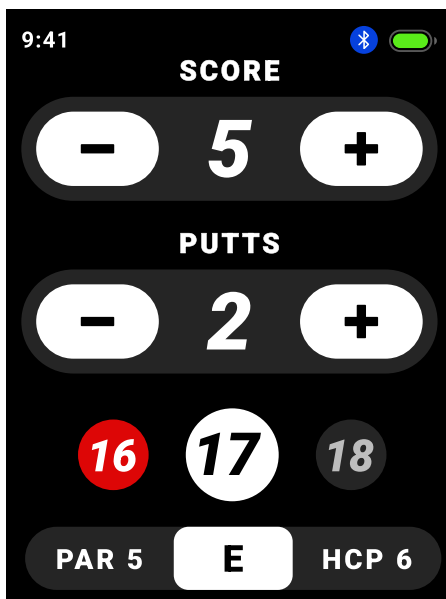

SCORING

Default Score = Par
Default Putts = 2

Auto Score Reminder

- Toggle ON/OFF (via GAME App) to be prompted with the scoring screen after each hole.




PLAYER PRO

ENGLISH

16


HOW TO USE

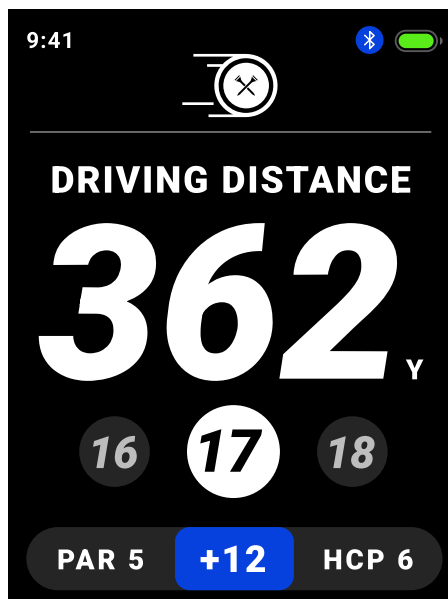

DRIVING DISTANCE

Driving Distance

 Based on the tee box selection chosen at the beginning of the round, automatically calculates the distance from that location.

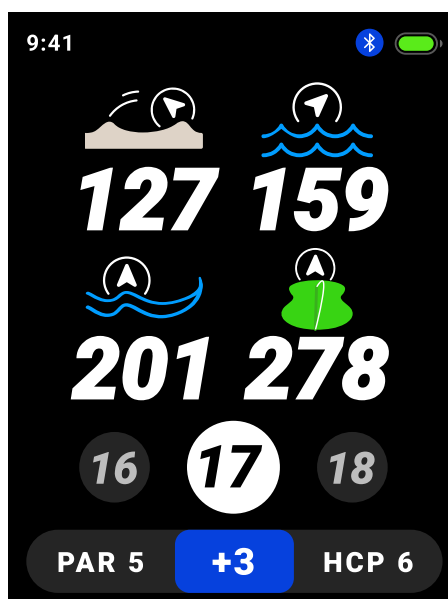

DYNAMIC HAZARDS

Intelligently selects up to 4 of the most important hazards and course landmarks to highlight while displaying distances to these locations.



HOW TO USE

GAME App Device Settings

ACTION BUTTON

Customize a single-press shortcut for golf mode in your Blue Tees GAME app device settings.

The Action Button gives you the choice to create a shortcut to your favorite screen or utilize audible announcements.

Actions:

- Main GPS
- Dynamic Hazard
- Driving Distance
- Scoring
- Date/Time
- Battery
- Audible
 - Scout Ai Caddie
 - Front / Center / Back
 - Center Only
 - Center w/ Club
 - Club Recommendation
 - Driving Distance
 - Current Score
 - Round Timer
 - Dynamic Hazard



HOW TO USE

DYNAMIC AUDIO


An intelligent sound feature designed to automatically adapt your listening experience based on the golf cart movement. Using the active speed detected from your mobile phone, the speaker recognizes when your cart is accelerating or coming to a stop.

- **While moving quickly:** The volume increases slightly to ensure audio remains clear and easy to hear over background noise.
- **When slowing or stopped:** The volume decreases for a more comfortable listening level.

This hands-free adjustment provides a seamless balance between awareness on the course and enjoying your music, without needing to manually change the volume.

Note: You can easily turn this feature ON/OFF in Device Settings within the app.

FIND MY DEVICE

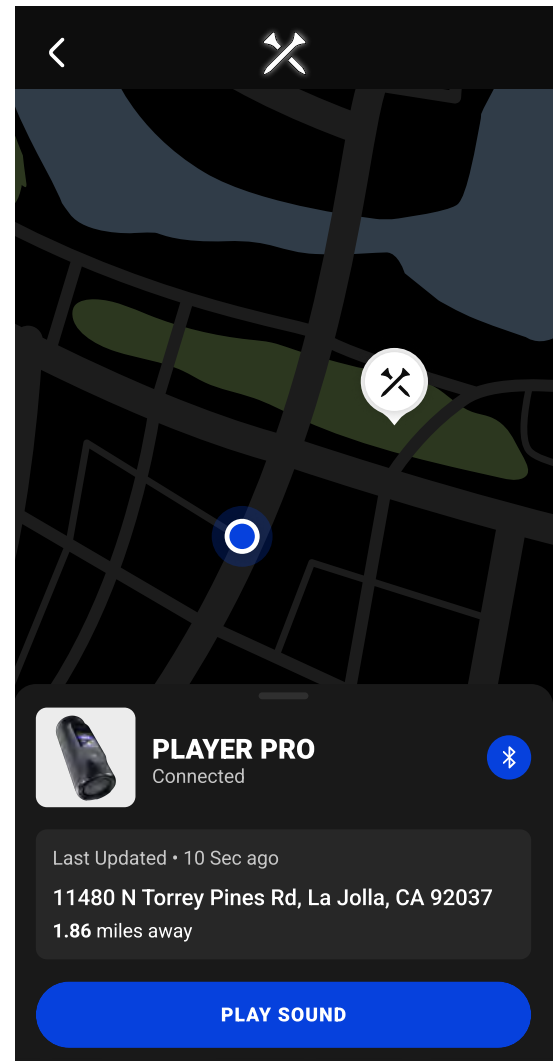

Displays map with last known Bluetooth connection.

If connected, user can tap 'Play Sound' for audio notification

CLEANING & GENERAL CARE

Follow these tips for proper cleaning and maintenance:

1. Blow away any excess dust or debris on exterior (or use a soft brush).
2. Clean the device occasionally with a soft, damp cloth.
3. DO NOT expose the device to strong chemicals such as gasoline and alcohol. They will damage it.
4. To remove dirt or fingerprints, clean with a micro-fiber cloth. The Player Pro speaker is waterproof but should not be exposed to submersion in water or other liquids unless necessary.
5. When you are not using the speaker, please store it in a secure, dry indoor location for additional protection.

FAQ & TROUBLESHOOTING

If speaker does not power on:

- Firmly press the  Power/Action button for five (5) seconds
- Ensure your unit is fully charged, if power button does not respond after being fully charged, contact customer support

If speaker turns off while being used:

- Battery charge level is low, recharge battery for 3-4 hours
- OR Bluetooth is not connected and device has auto powered off.

FAQ & TROUBLESHOOTING

If speaker audibly turns on but LCD touchscreen does not turn on or respond:

- Firmly press the  Power/Action button for five (5) seconds to turn OFF, keep speaker power OFF for five (5) seconds, firmly press the  Power/Action button for five (5) seconds to turn ON
- If LCD screen does not respond after restarting, contact customer support

If speaker does not display golf mode:

- Register and connect to the Blue Tees GAME mobile app via Bluetooth
- Once connected, start a round on the mobile app to enable golf mode on the speaker.

If speaker has no sound:

- Ensure the speaker is connected via Bluetooth to your desired mobile device
- Ensure the volume on your speaker and mobile device are at audible levels
Firmly press the  Power/Action button for five (5) seconds to turn OFF, keep speaker power OFF for five (5) seconds, firmly press the  Power/Action button for five (5) seconds to turn ON
- If speaker still has no sound, contact customer support

If speaker has poor sound:

- Move speaker and mobile device within 15 feet or 3 meters of each other

If speaker will not pair via Bluetooth:

- Move speaker and mobile device within three (3) feet or one (1) meter of each other
- On your speaker settings and mobile device settings, turn Bluetooth ON and ensure your speaker is in pairing mode

If my speaker is playing music, but not displaying yardages:

- Ensure your device is registered and connected to the Blue Tees GAME mobile app. After connecting to the mobile app, select 'Start Round'



TECHNICAL SPECIFICATIONS



GENERAL

Bluetooth Version	5.3
Bluetooth Name	Classic: Player Pro Audio XXXX BLE: Player Pro
Auracast Compatible	Yes
Audio Package	2 X 15W (max.) Full Range Drivers 2 X Passive Radiators
Display Type	High-Contrast, Full Color 2.4" Display with Responsive Capacitive Touch
Dimensions	8.35" H x 3.29" W x 3.29" D (21.2 x 8.35x 8.35 cm)
Weight	1.87lbs/30oz (0.85KG)
Materials	• ABS+PC+TPU • Polyester • Aluminum + Steel • Glass • Neodymium Magnet • Silicone
IP Rating	IP67
Waterproof	Yes
Operating Temperature	-5°C~+40°C
Standby Temperature	-20°C~+60°C
Storage Temperature	-20°C~+65°C



ELECTRICAL

Battery Type	Cylindrical, Rechargeable Lithium-ion (Li-ion)
Battery Nominal Voltage	7.3V total
Input & Output Voltage/Current	5V/0.5A~2A
Power Bank Compatible	Yes
Working Time	10+ hours
Charging Time	~3 hours
Charging Temperature	0°C~+45°C



IMPORTANT SAFETY INFORMATION

Note: Important instructional step

PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

To help ensure reliable operation, the following care and maintenance guidelines are recommended:

1. Do not disassemble or repair this device. It might cause product damage or personal injury.
2. Do not use it in a dusty, humid, dry, or high-temperature environment.
3. To reduce the risk of fire, do not cover this product with newspapers, tablecloths, curtains, etc., during use.
4. If the device is damaged (e.g. liquid enters or objects fall into the device, it is unable to operate normally or falls, etc.) it must be repaired.
5. When the device is fully charged, do not connect it to the charger for further long-time charging.
6. Use a certified adapter that has passed the national safety certification.
7. Be sure to fully charge the device once a month to maintain its performance.
8. Do not use this device in an extremely cold or hot environment. If used beyond the temperature range, the product might stop automatically to protect the internal circuit.

IMPORTANT SAFETY INFORMATION

9. Avoid exposing the unit to extreme environmental conditions for a prolonged period.
10. The device has an IP67 waterproof rating, and it is dustproof; however, it should not be submerged in any liquids.
11. Avoid severe impacts on the unit.
12. Use caution when using the built-in magnetic strip to attach the Player Pro Speaker to the golf cart. Be careful driving over rough terrain, heavy bumps, potholes and/or curbs can cause the speaker to fall off, incurring damage that is not covered under the two-year limited warranty.
13. The magnetic strip on the Player Pro Speaker is specifically designed to only fit on the vertical golf cart pole.
14. Ensure the magnetic strip is securely flat, aligned, and free of debris when magnetically attached to a surface.

WARNINGS



This device contains a neodymium magnet. Magnets could affect the functioning of pacemakers and implanted heart defibrillators. If you use these devices, keep sufficient distance from magnet. Warn others who wear these devices from getting too close to magnets.

- *Magnet may lose part of its adhesive force permanently if exposed to temperatures above 175° F (80° C).*
- *Magnets produce far-reaching, strong magnetic field. They could damage TVs, laptops, computer hard drives, credit and ATM cards, data storage media, mechanical watches, hearing aids, and speakers. Keep the unit away from devices and objects that could be damaged by strong magnetic fields.*
- *Magnets have strong magnetic fields which can pinch skin and fingers. Use caution when attaching the unit to a magnetic, metal surface.*



Use caution when using the built-in magnetic strip to attach the Player Pro Speaker to the golf cart. Be careful driving over rough terrain, heavy bumps, potholes and/or curbs as this can cause the speaker to fall off, incurring damage that is not covered under the two-year limited warranty.



This product uses a lithium-based battery. Lithium batteries can overheat and cause damage if they are used incorrectly. Do not use batteries that are damaged or show signs of physical wear.



Do not attempt to open, disassemble or service the internal battery, the battery is not replaceable.



WARNINGS



Do not expose to the Player Pro to temperatures above 140°F (60°C).



Do not charge the battery when the temperature is above 113°F (45°C).



Do not store the device in temperatures above 149°F (65°C) or below -4°F (-20°C).



Properly recycle or dispose of the battery. Do not dispose of it in fire or water.



Danger to life for children from suffocation! Unsupervised children could swallow small parts of the product, accessories or packaging material. The product is not a toy.



Do not allow children to play with the product, accessories or packaging material.



Do not allow children to carry out cleaning and maintenance.



Danger of death through electric shock! A voltage of up to 230 V could be present at the charging socket of the product and the charger. Touching live parts could cause life-threatening injuries.



Do not use or charge the product in the rain, in order to prevent fires and electric shocks.



Protect the product from dripping or splashing liquids.



Do not place any containers filled with liquids (e.g. vases) on the product or near the product.



Disconnect the product from the power supply during a thunderstorm or when unused for long periods.



WARNINGS

-  *Lay the charging cable and connection cable in such a way that they cannot be stepped on or pinched, particularly at plugs, sockets or the device itself.*
-  *Do not use the power supply in damp environments.*
-  *Disconnect the charging cable from the product to ensure complete disconnection from the mains.*
-  *Risk of fire or explosion in lithium-ion batteries! Lithium batteries can catch fire or explode if handled incorrectly.*
-  *Only charge batteries at an ambient temperature of 0 ~ +45 °C.*
-  *Do not expose batteries to excessive heat, e.g. direct sunlight, for extended periods of time.*
-  *Protect batteries from extremely low temperatures.*

REGULATORY, COMPLIANCE, & LEGAL INFO

FCC ID: 2BNCJ-PLYRPRO
IC: 28315-PLYRPRO

Regulatory certification

CAN ICES-3B/NMB-3B

Go to Device Settings -> About



MADE IN CHINA



The Bluetooth® work mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Blue Tees Golf is under license.



 **FCC CAUTION**

a、 § 15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

b、 § 15.21 Changes or modification warning.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

c、 § 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

IC CAUTION

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. l'appareil ne doit pas produire de brouillage, et
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

RF WARNING FOR PORTABLE DEVICE

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Radiation Exposure Statement:

This device complies with the Industry Canada portable RF exposure limit set forth for an uncontrolled environment and is safe for the intended operation as described in this manual.

REGULATORY, COMPLIANCE, & LEGAL INFO

Further RF exposure reduction can be achieved if the product can be kept as far as possible from the user's body or if the device is set to a lower output power if such function is available.

The EIRP power of the device at maximal case is below the exempt condition, 20mW specified

in EN62479: 2010. RF exposure assessment has been performed to prove that this unit will not generate the harmful EM emission above the reference level as specified in EC Council Recommendation(1999/519/EC)

CE Products with the CE marking comply with the Radio Equipment Directive (2014/53/EU) – issued by the Commission of the European. 

This product and, if applicable, the supplied accessories are marked with "CE" and

comply therefore with the applicable harmonized European standards listed under the Radio Equipment Directive 2014/53/EU, the EMC Directive 2014/30/EU, the RoHS Directive 2011/65/EU.

The full text of the EU declaration of conformity is available at blueteesgolf.com

WEEE DIRECTIVE

2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.





DISPOSAL OF ELECTRIC AND ELECTRONIC EQUIPMENT

(Applicable in the EU and other European countries with separate collection systems)

This equipment contains electric and/or electronic parts and must therefore not be disposed of as normal household waste. Instead, it should be disposed at the respective collection points for recycling provided by the communities. For you, this is free of charge.

If the equipment contains exchangeable (rechargeable) batteries, these too must be removed before and, if necessary, in turn be disposed of according to the relevant regulations (see also the respective comments in this unit's instructions).

Further information about the subject is available at your community administration, your local waste collection company, or in the store where you purchased this equipment.



WARRANTY

Your Blue Tees Golf® speaker is warrantied to be free of defects in materials and workmanship for two years after the date of purchase. In the event of a defect under this warranty, we will, at our option, repair or replace the product, provided that you return the product postage prepaid. This warranty does not cover damages caused by misuse, improper handling, installation, or maintenance provided by someone other than a Blue Tees Golf® Authorized Service Department.

The Player Pro battery has a warranty of six (6) months. During the warranty period, if a product is delivered with manufacturing defects, Blue Tees Golf® stands by its products and will commit to either repair or replace the device. For this, simply return the product using our prepaid postage labels, to ensure a hassle-free experience. Retain your proof of purchase for warranty validation.

In an effort to offer extended coverage, the warranty now includes the glass screen. It does not include any damage that results from product misuse, improper handling of the device or incorrect installation. For all maintenance needs, we recommend our Blue Tees Golf® Authorized Service Department to maintain the warranty's validity.

WARRANTY

Do not use polish or buffing compounds on the screen. They could damage the factory surface. The usage of such materials will void the warranty. Instead, consult our customer service team or any authorized service centers for questions.

At Blue Tees Golf®, we're committed to quality and your overall satisfaction. Trust our enhanced warranty for your Player Pro speaker.

REGISTER YOUR SPEAKER WARRANTY

Scan the QR code below to register your two-year limited warranty or visit us at [**www.blueteesgolf.com/pages/register**](http://www.blueteesgolf.com/pages/register)





B L U E T E E S

NEED HELP?

Questions or concerns about your Player Pro?
Reach out to us at **support@blueteesgolf.com**

WWW.BLUETEESGOLF.COM



@blueteesgolf

DESIGNED IN CALIFORNIA

MADE IN CHINA