

PLAYMAKER+

TOUCHSCREEN GPS GOLF WATCH



USER MANUAL

TABLE OF CONTENTS

FEATURES	4
GENERAL	5
GET TO KNOW THE PLAYMAKER+	5
WHAT'S IN THE BOX?	6
CHARGING THE DEVICE	7
GENERAL NAVIGATION	8
PRODUCT SETUP	8
SATELLITE ACQUISITION	8
TIME & DATE SETUP	9
CONNECT/REGISTER YOUR DEVICE	10
DEVICE SETTINGS	11
PRODUCT FIRMWARE UPDATES	12
COURSE UPDATES & DOWNLOADS	13
ACTION BUTTON	14
MAIN MENU	15
GOLF	15
WATCH/CLOCK	15
WATCH FACE OPTIONS	15
ACTIVITY	16
MUSIC CONTROL	17
WEATHER	17
TIMER	18
ALARM	18



TABLE OF CONTENTS

SETTINGS	19
DEVICE	19
MOBILE APP	19
BATTERY	19
PLAYING GOLF	20
GOLF MENU – FAVORITES CAROUSEL	20
MAIN GPS DISTANCES	20
DYNAMIC SHOT TRACKING	20
SIMPLE / ADVANCED SCORING	21
ENTER/SAVE SCORE	21
GREEN COMPASS	21
ADVANCED GREEN VIEW	22
DYNAMIC HAZARDS	22
ROUND SUMMARY	23
ROUND ACTIVITY	24
CHANGE HOLES	24
END ROUND SYNC	24
FAQ / TROUBLESHOOTING	25
PRODUCT SPECIFICATIONS	25
CLEANING & CARE	26
LEGAL DISCLAIMER	26
IMPORTANT SAFETY INSTRUCTIONS	27
ENHANCED WARRANTY	28
COMPLIANCE/REGULATORY	29



FEATURES



**BUILT-IN GPS
DISTANCES**



**DYNAMIC SHOT
TRACKING**



**AMOLED
TOUCH SCREEN**



**ADVANCED
GREEN VIEW**



**MUSIC
CONTROL**



**ADVANCED
SCORING**



**IP67
WEATHERPROOF**



**ACTIVITY
TRACKER**

SUPPORTED BY



THE ULTIMATE GPS GOLF APP

Get access to 40K global course maps, track your shots, analyze your stats and unlock new features in your **PLAYMAKER+** to take your game to the next level.

Download the Blue Tees
GAME Mobile App



Download on the
App Store



GET IT ON
Google Play



PLAYMAKER+

ENGLISH

4




GET TO KNOW THE PLAYMAKER+

1. Power/Action Button
2. Touchscreen Display
3. Logo Cover Glass
4. 4-Pin Magnetic Charge & Data Pad
5. Custom Blue Tees Golf® Watch Band
 - o Band
 - o Buckle
 - o Band-keeper
6. Screen OFF




WHAT'S IN THE BOX?

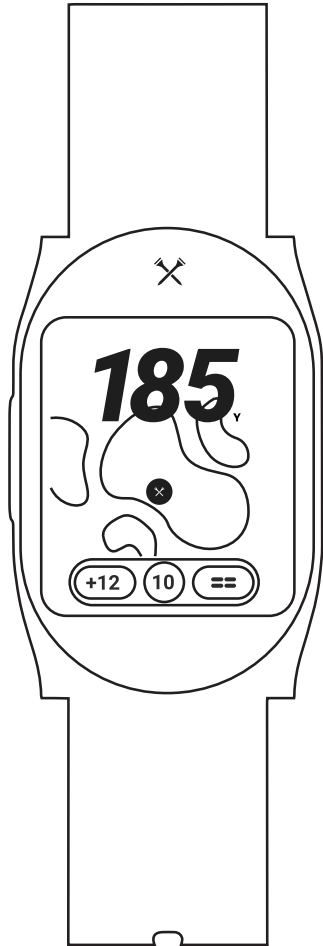


PLAYMAKER+
Touchscreen GPS Golf
Watch




Product Quick-Step Guide
(with translations)

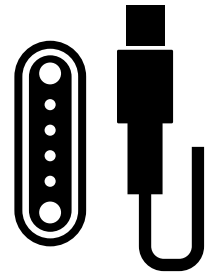

USB-C to Custom 4-Pin
Magnetic Charge & Data
Cable

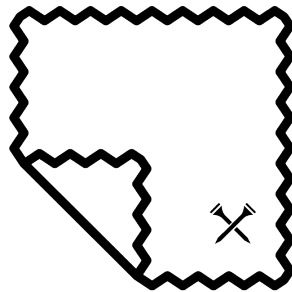

Blue Tees Golf®
Cleaning Cloth

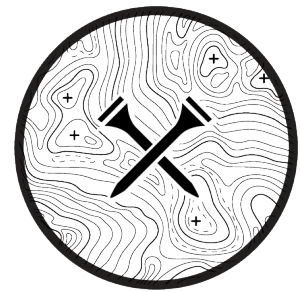

Blue Tees Golf®
Logo Sticker



CHARGING THE DEVICE

This device is powered by a non-removable, built-in lithium-ion battery that can be charged using any standard USB-C port on a laptop, a desktop computer or an AC adapter.



WARNING

This product uses a lithium-based battery. Lithium batteries can overheat and cause damage if they are used incorrectly. Do not use batteries that are damaged or show signs of physical wear.



1. Place the 4-pin magnetic end of the charging cable provided with the device onto the charging pad.
2. Insert the USB Type-C end of the charging cable into an external power source, such as a USB port, on a laptop, desktop computer or an AC adapter.
3. Keep the charging cable inserted in the charging pad until the device is fully charged.

Note:

- This device will not charge or operate outside of the approved temperature range (page 27).
- This device uses a voltage-based battery estimation system to determine the remaining charge.



Active Charge




Critical Power Level



GENERAL NAVIGATION

- Swipe/scroll up and down to navigate the menu.
- Select the back button or swipe right (left to right) on each screen to return.

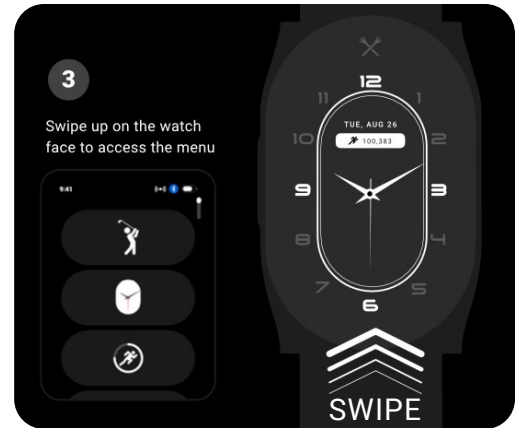

PRODUCT SETUP

SATELLITE ACQUISITION

When playing golf, or any other type of activity, the watch will begin searching for available Global Navigation Satellite System (GNSS) satellites. The watch supports multi-GNSS for faster and more reliable positioning. A progress bar will appear on the screen while the watch is accessing satellite systems.

For best performance:

- Be outdoors in an open area with a clear view of the sky.
- Remain still until the watch locks onto satellite signals.
- Once the satellite lock is achieved, the location is confirmed. The golf/activity features will be enabled.



TIME & DATE SETUP

To ensure your GPS golf watch displays the correct time and date:

AUTOMATIC UPDATE VIA GPS IS REQUIRED:

1. Enable GPS mode – turn on the watch and select the 'Golf' mode.
2. Connect to satellite – allow the watch to access a GPS signal. This can take a few minutes depending upon the location.
3. Time sync – once connected, the watch will automatically update the time and date based on the current location.



Update 12HR/24HR or Daylight Savings Time (DST) format in the device settings.



CONNECT/REGISTER YOUR DEVICE




THE ULTIMATE GPS GOLF APP

Get access to 40K global course maps, track your shots, analyze your stats and unlock new features in your **PLAYMAKER+** to take your game to the next level.

To connect and register the **PLAYMAKER+** device to the Blue Tees Game® mobile app:

1. Download, launch and/or log in to the mobile app.
2. Swipe left/right for the appropriate device. Select 'Connect' then 'Register.' It can take up to 30 seconds for a Bluetooth® search.

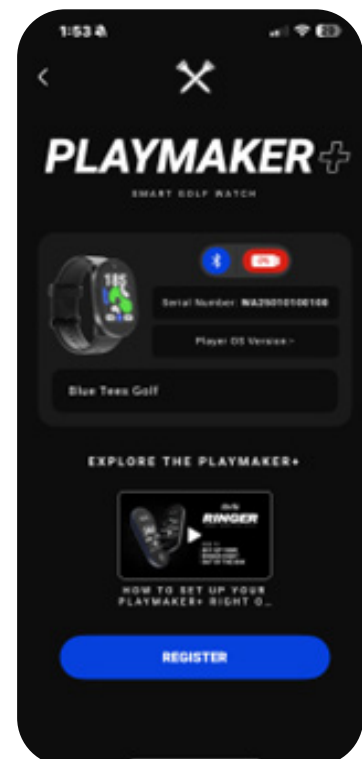

PLAYMAKER+

ENGLISH

10

DEVICE SETTINGS

Open the menu and swipe to the bottom for 'Settings.'

GENERAL

- Brightness – Levels 1 through 5
- Daylight Savings Time – Toggle on/off
- Bluetooth® – Reset the pairing code by toggling on/off
- 24HR Clock – Toggle to set the desired time format
- Language – See the device for a list of languages
- Height – Feet and inches or meters
- Weight – Pounds or kilograms
- Gender – Male, female, or prefer not to say. (Gender allows for the most accurate golf and activity data)
- Units – Standard or metric

GOLF

- Advanced Scoring – Toggle on/off for advanced statistics (fairway and green)
- Club Suggestions – Toggle on/off to display recommendation(s)


ABOUT

- Find the desired device specifications
- Enter 'Demo Mode' for functionality of 'Golf' mode without GPS satellite acquisition

ACTION (SAVE SHORTCUTS WITH THE ACTIVATION OF A BUTTON)

- | | |
|-----------------|------------------|
| • Menu | • Summary |
| • GPS Distances | • Green View |
| • Shot Tracking | • Music Control |
| • Enter Score | • Round Activity |
| • Green Compass | • Weather |
| • Hazards | |

WATCH

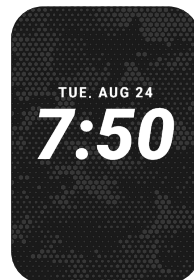


PRODUCT FIRMWARE UPDATES

Connect and register your device on the Blue Tees Game® app. Once connected, check 'Devices' for product firmware updates and course downloads.

- **FIRMWARE UPDATES:** To update the **PLAYMAKER+** device to the latest firmware, ensure you are connected via Bluetooth® to the mobile app and select 'Update' in the 'Devices' section. Updates can take up to 15 minutes to complete.

Note: Blue Tees Golf® reserves the right to deliver the best products currently available. Ongoing engineering enhancements might not be shown in the images and specifications until new firmware updates are available.

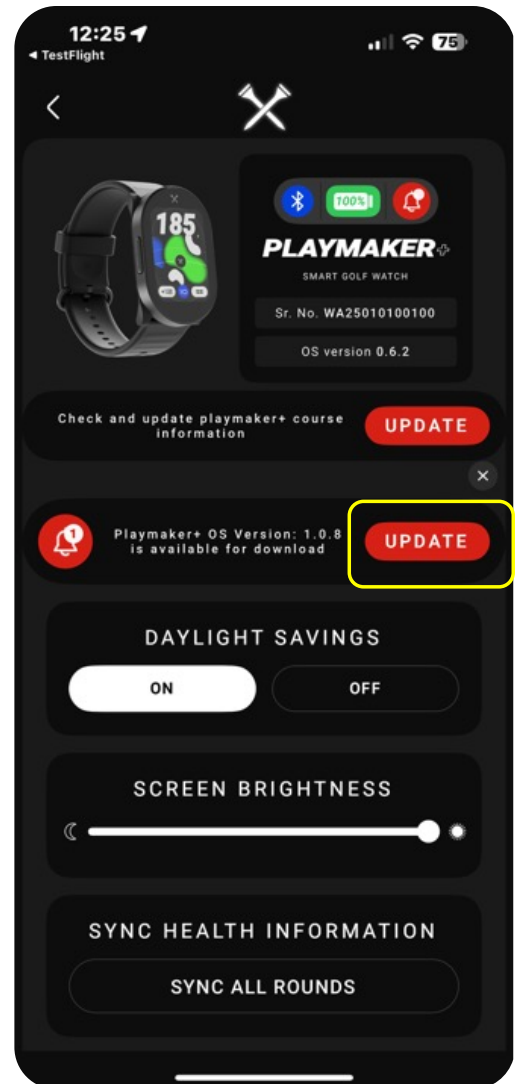


COURSE UPDATES & DOWNLOADS


Connect and register your device on the Blue Tees Game® app. Once connected, check 'Devices' for product firmware updates and course downloads.

- **COURSE UPDATES:** To update the course database, select the desired golf course to check for updates in the mobile app. Updates can take up to three minutes to complete.

Note: Blue Tees Golf® reserves the right to deliver the best products currently available. Ongoing engineering enhancements might not be shown in the images and specifications until new firmware updates are available.

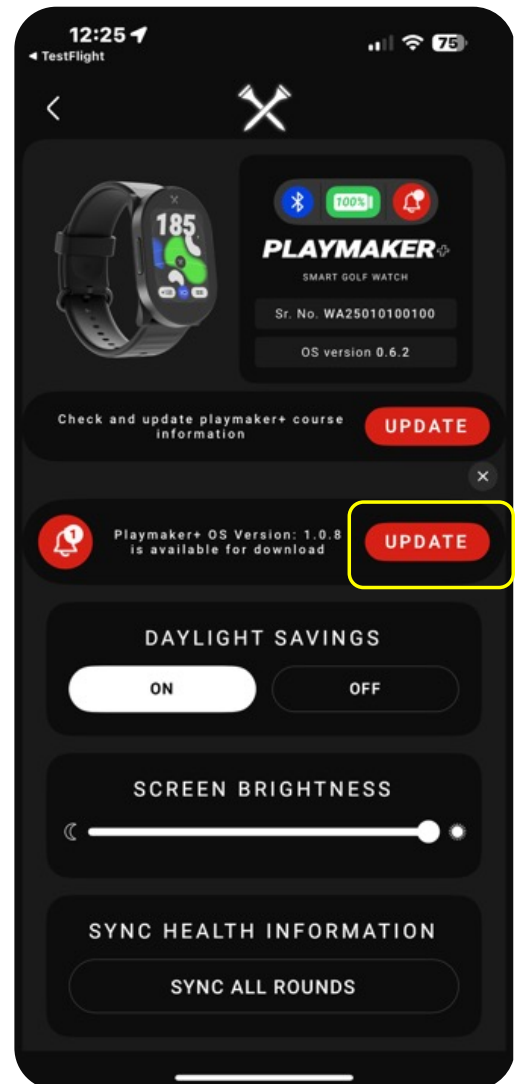

ACTION BUTTON

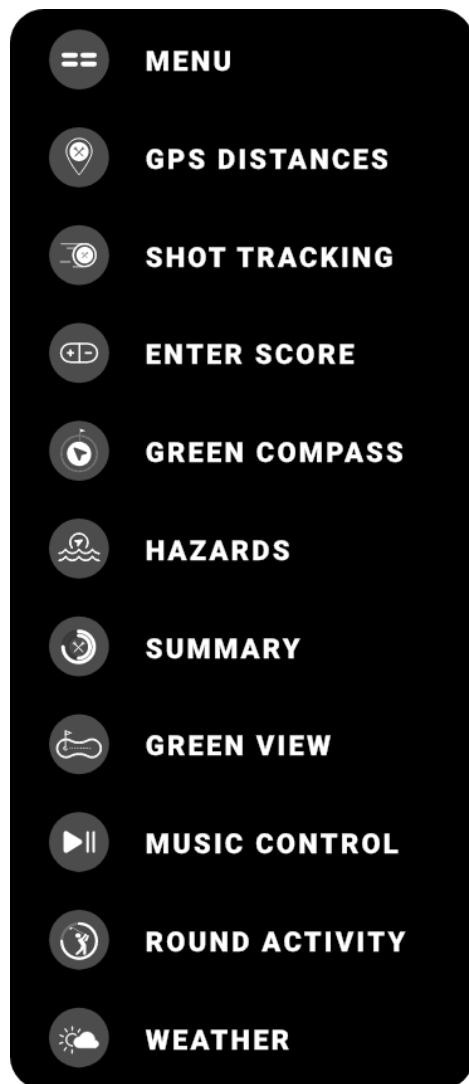

The **PLAYMAKER+** provides customizable actions designed to enhance your golf experience by providing shortcut access to your favorite features while in 'Golf Mode.'


To select a desired setting:

1. Connect/register your **PLAYMAKER+** watch to the Blue Tees Game® app.
2. Navigate to 'Device Settings' within the app.
3. Scroll down and select 'Choose Action Button' to assign a preferred feature.

Or select (Settings > Action) on the watch.




MAIN MENU

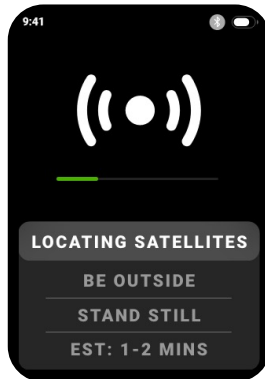

To start a round of golf, select the 'Golf' menu item to initiate GPS satellite search.

- Allow 1-2 minutes for the device to access a GPS location.
- Stand in an open air/sky area without surrounding obstacles for the fastest results.

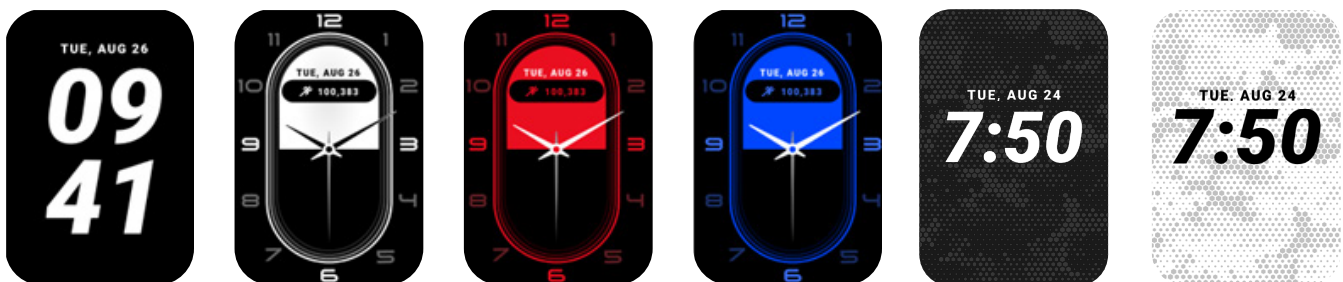




Select in the 'Device Settings' or the mobile app.



MAIN MENU







To start an activity, select from the options (Walk, Run, Golf) to initiate the GPS satellite search.

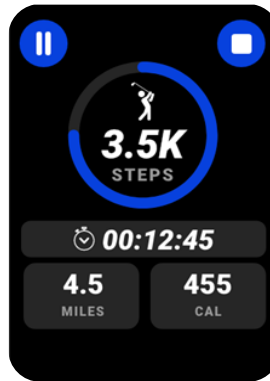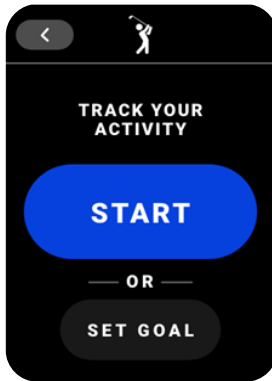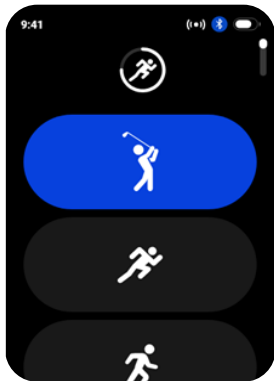

- Allow 1-2 minutes for the device to access a GPS location.
- Stand in an open air/sky area without surrounding obstacles for the fastest results.
- For the most accurate data, enter your height, weight, and gender into the device or mobile app settings.

To set a goal, select the desired option and value to begin.

The device will vibrate to notify you that the goal has been achieved during the workout.

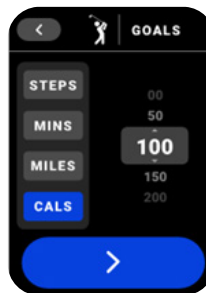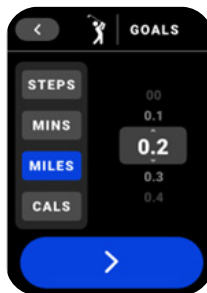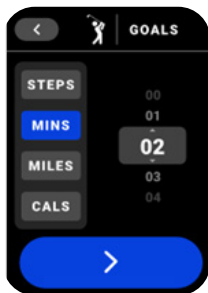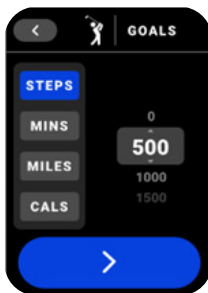


- This device uses a combination of GPS location-based services and motion sensors to record data.



MAIN MENU



MUSIC CONTROL

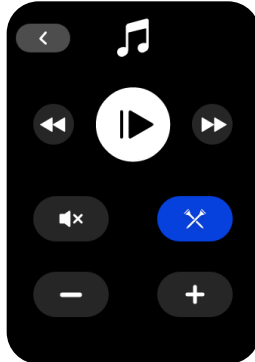

Control music or any other audio playlist.


Tap the blue 'Crossed Tees' button to provide current GPS distance on a connected speaker (Player+ or PlayerGO).





WEATHER



View weather forecasts when connected to the Blue Tees Game® mobile app.

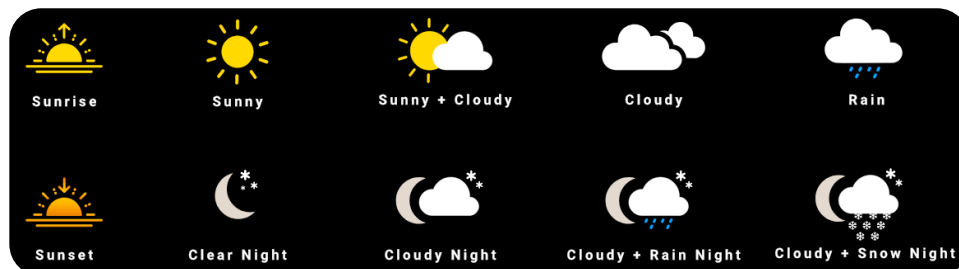


MAIN MENU

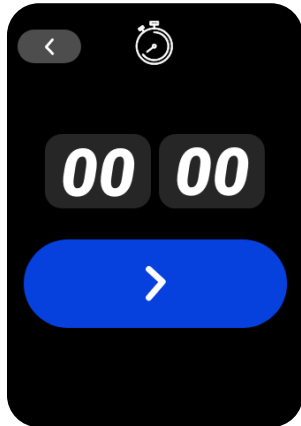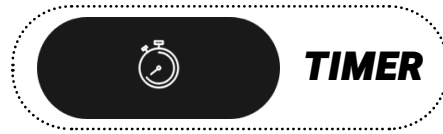


Track specific time intervals during a round, such as breaks in play or the pace of play.

- Swipe up or down to set the desired number of minutes and seconds.

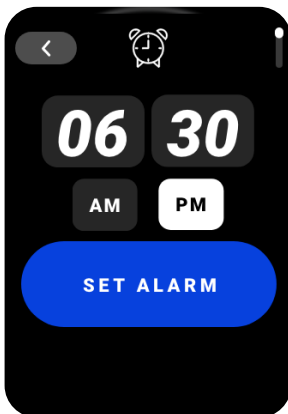

Set reminders for tee times, warm-ups, or other important events during the day.


- Swipe left to see previous alarm(s) to delete them.

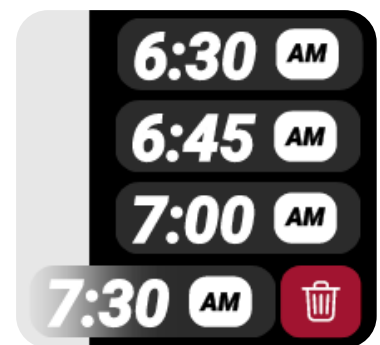

MAIN MENU




SETTINGS DEVICE/MOBILE APP

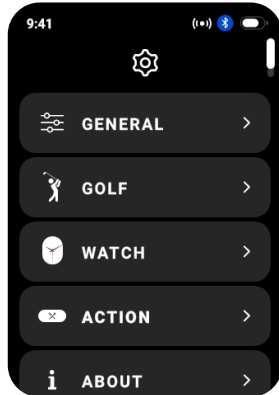

See 'Product Setup – Device Settings'
(page 11) for more details




BATTERY

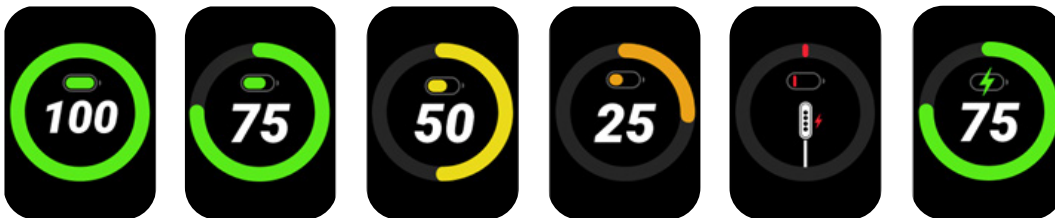


This device estimates up to two full rounds of golf on a fully charged battery.

Note:

- This device will not charge or operate outside of the approved temperature range (page 27).
- This device uses a voltage-based battery estimation system to determine the device's remaining charge.

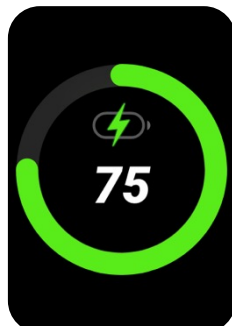

Active Charge

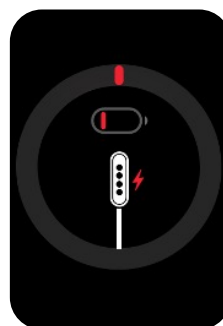

Critical Power Level




PLAYING GOLF


GOLF MENU - FAVORITES CAROUSEL

The Blue Tees Golf® watch has been designed to easily display your favorite items in a simple swipe left-right motion. When you open the Golf menu, blue highlights around certain items are designated as 'Favorites.' As many as six favorite items can be selected.

- To select or deselect, tap and hold on the desired menu item until the action displays.

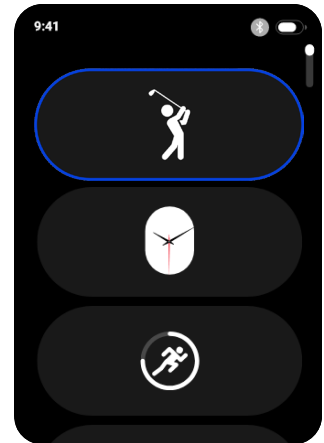


MAIN GPS DISTANCES

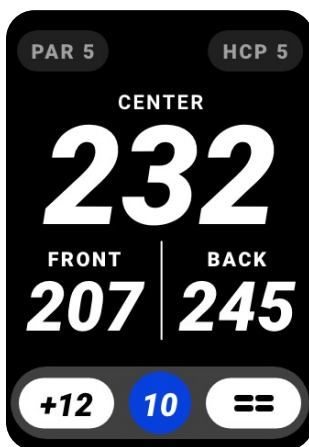

Current Hole Par + Handicap

- To change the male/female handicap, navigate in 'Settings > General.'

DYNAMIC SHOT TRACKING

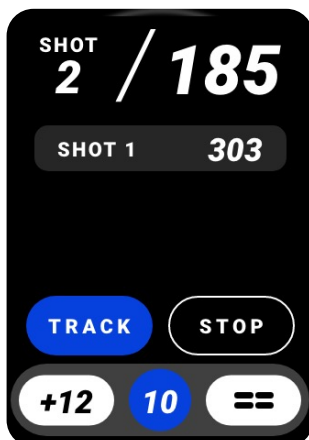

Select Track to start/continue shot tracking.


Select Stop to stop tracking the current shot.



PLAYING GOLF

SIMPLE/ADVANCED SCORING

ENTER/SAVE SCORE

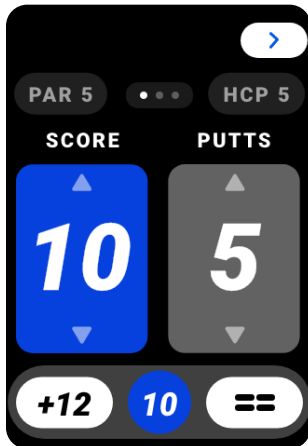


Tap on the desired section to enter values by scrolling up or down.

Select > to advance to next step.

Select the 'checkmark' at the end to save your score and advance to the next hole.

GREEN COMPASS

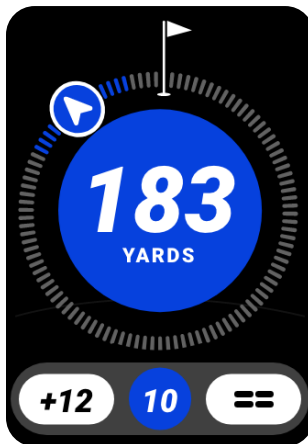


Point the top of the watch towards the target for the most accurate results.

Note: Compasses use electromagnetic fields and can be disrupted by metal objects and/or other electronics.

PLAYING GOLF


ADVANCED GREEN VIEW

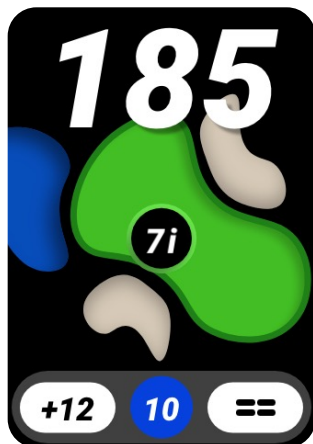

SURROUNDING HAZARDS

Tap anywhere on the green, or surrounding area, to adjust the precise location.

DYNAMIC HAZARDS

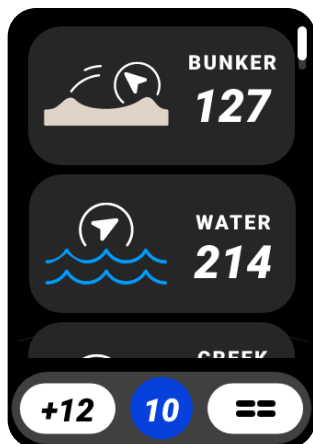

View the distance of up to four of the most important hazards on each hole.



PLAYING GOLF

ROUND SUMMARY

+10

45

WOLF RUN
GOLF CLUB

END ROUND

302 | LONGEST DRIVE

SCOREBOARD

0	0	0
ACES	ALBATROSS	EAGLES
2	3	2
BIRDIES	PARS	BOGEY
0	0	0
DOUBLE	TRIPLE	OVER

AVERAGE FAIRWAYS

17%	73%	10%

AVERAGE GREENS

15% LEFT	10% LONG 40% GREENS	10% RIGHT
	25% SHORT	

HOLE	PAR	S	P
1	4	5	2
2	5	7	3
3	3	4	2
4	4	4	1
5	4	4	2

Scroll down to view a detailed summary of the current round, including the scoreboard, average fairways/greens, and the scorecard.



Tap on the left icon (+12) from any 'Favorite' item to view.

PAR 5

HCP 6

CENTER

232

FRONT | BACK

207 | 245

+12

10

==



PLAYING GOLF

ROUND ACTIVITY




Actively track the current duration and estimated health data of your round.

CHANGE HOLES



Tap on the center blue icon (current hole #10) to select a different hole.

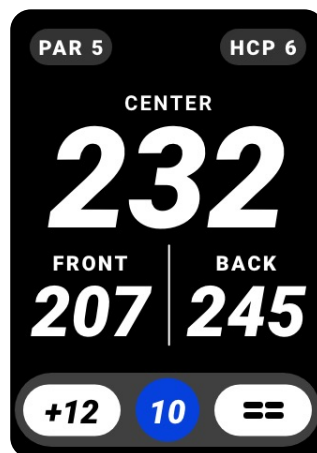

END ROUND SYNC

Connect to the Blue Tees Game® app via Bluetooth® to download round and activity data onto your profile.



FAQ/TROUBLESHOOTING

PRODUCT SPECIFICATIONS

FAVORITES	
GPS Embedded	Yes, 42,000+ golf courses worldwide
Display type	Color Touchscreen AMOLED (Raise-to-Wake)
IP Rating	IP67 (dust and waterproof)
GENERAL	
Strap Material	Silicone
Quick Release Bands	Yes, 22mm (standard)
Display Size	1.74 inches (44.2mm) diagonal
Display Resolution	336 x 480 pixels
Lens Material	Corning Gorilla Glass 3
Bezel Material	Soft Touch ABS
Physical Size	54 x 34 x 11.6 mm
Weight	42g (with band)
Battery Type (Input Voltage)	Rechargeable lithium-ion battery - 340 mAh (5V)
Battery Life	Up to 2 rounds of golf
Charging Solution	Blue Tees 4-pin magnetic cable
Bluetooth	Yes (v5.2)
Bluetooth Range	30 feet (~10m)
RF Carrier Frequency	Bluetooth Low Energy (2400MHz~2483.5MHz) GNSS (1559MHz-1660MHz)
Bluetooth Maximum RF Power	2.7dBm
Firmware Updates	Yes, via Blue Tees Game® Mobile App
Accelerometer/Gyroscope	Yes
Vibration	Yes
Compass	Yes
WATCH FEATURES	
Weather	Yes
Music Remote Control	Yes, update via mobile app
Activity Tracker	Yes
Alarm/Timer	Yes
Watch Faces	6 options



CLEANING & CARE

1. Clean the device occasionally with a soft, damp cloth.
2. DO NOT expose the device to strong chemicals such as gasoline and alcohol. They will damage it.
3. Store the device in a dry place when it is not in use.

LEGAL DISCLAIMER

By using this product, you agree that Blue Tees Enterprises, LLC Products will not be held legally responsible for any injury or damage to you or any person or property caused by the user's improper operation and/or poor judgment while using this product.

Note: See Enhanced Warranty for other limitations to our liability.

Blue Tees Golf Website www.blueteesgolf.com is the best online resource for all our golf GPS product owners, including product support, FAQs, etc. Registering your Blue Tees **PLAYMAKER+** via the Blue Tees Game® app is not required but will ensure you have access to the latest updated GPS course data.



IMPORTANT SAFETY INSTRUCTIONS

NOTE: IMPORTANT INSTRUCTIONAL STEP

Important Safety Instructions:

PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

To help ensure reliable operation, the following care and maintenance guidelines are recommended:

1. Do not disassemble or repair this device. It might cause product damage or personal injury.
2. Do not use it in a dusty, humid, dry, or high-temperature environment.
3. Do not place the **PLAYMAKER+** near mechanical vibration, a heat source, in direct sunlight, or in a dusty area.
4. To reduce the risk of fire, do not cover this product with newspapers, tablecloths, curtains, etc., during use.
5. If the device is damaged (e.g. liquid enters or objects fall into the device, it is unable to operate normally or falls, etc.) it must be repaired.
6. When the device is fully charged, do not connect it to the charger for further long-time charging.
7. The maximum ambient temperature should not exceed 113°F (45°C).
8. Read this manual carefully before use and store it for reference.
9. For the first use, fully charge the **PLAYMAKER+**.
10. Use a certified adapter that has passed the national safety certification.
11. Be sure to fully charge the device once a month to maintain its performance.
12. Do not use this device in an extremely cold or hot environment. The temperature range is 41°F-104°F or 5°C-40°C. If used beyond the temperature range, the product might stop automatically to protect the internal circuit.
13. If the **PLAYMAKER+** device is being charged in a high-temperature environment, it might automatically stop charging to protect the battery. The charging indicator will quickly flash to indicate that the ambient environmental temperature or the device's internal temperature is too high.
14. Storage environment temperature is 23°F ~ 95°F (-5°C ~ 35°C) RH<70% (recommended 25°C± 5).
15. Avoid exposing the unit to extreme environmental conditions for a prolonged period.
16. The device has an IP67 waterproof rating, and it is dustproof; however, it should not be submerged in any liquids.
17. Avoid severe impacts on the unit.



WARNINGS

- Do not attempt to open the PlayMaker+. Unit contains a lithium ion battery.
- Do not attempt to open, disassemble or service the internal battery; the battery is not replaceable.
- Do not crush, puncture or short the battery's external contacts.
- Do not expose to temperatures above 140°F (60°C)
- Do not charge battery when temperature is over 113° F (45°C).
- Do not store unit in temperatures above 113°F (45°C) or below 32°F (0°C).
- Properly recycle or dispose of the battery. Do not dispose in fire or water.

ENHANCED WARRANTY

Enhanced Warranty: **PLAYMAKER+** Handheld GPS:

At Blue Tees Golf®, we offer our enhanced extended two-year (2) warranty on the **PLAYMAKER+** handheld GPS. The warranty covers defects in materials and workmanship from the date of purchase.

The **PLAYMAKER+** battery has a warranty of six (6) months. During the warranty period, if a product is delivered with manufacturing defects, Blue Tees Golf® stands by its products and will commit to either repair or replace the device. For this, simply return the product using our prepaid postage labels, to ensure a hassle-free experience. Retain your proof of purchase for warranty validation.

In an effort to offer extended coverage, the warranty now includes the glass screen. It does not include any damage that results from product misuse, improper handling of the device or incorrect installation. For all maintenance needs, we recommend our Blue Tees Golf® Authorized Service Department to maintain the warranty's validity.

Do not use polish or buffing compounds on the screen. They could damage the factory surface. The usage of such materials will void the warranty. Instead, consult our customer service team or any authorized service centers for questions or any repair needs.

At Blue Tees Golf®, we're committed to quality and your overall satisfaction. Trust our enhanced warranty for your **PLAYMAKER+** handheld GPS.



COMPLIANCE/REGULATORY

FCC CAUTION

a. § 15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

b. § 15.21 Changes or modification warning.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

c. § 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC CAUTION

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. *l'appareil ne doit pas produire de brouillage, et*
2. *l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement*

COMPLIANCE/REGULATORY



RF Warning for Portable Device

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



The Bluetooth® word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Blue Tees Golf is under license.

Radiation Exposure Statement:

This device complies with the Industry Canada portable RF exposure limit set forth for an uncontrolled environment and is safe for the intended operation as described in this manual. Further RF exposure reduction can be achieved if the product can be kept as far as possible from the user's body or if the device is set to a lower output power if such function is available.

CE Products with the CE marking comply with the Radio Equipment Directive (2014/53/EU) – issued by the Commission of the European.

Compliance with these directives implies conformity to the following European Standards:

EN IEC 62368-1:2020+A11:2020	EN 301 489-1 V2.2.3	EN 300 328 V2.2.2
EN 55032:2015+A1:2020	EN 301 489-17 V3.3.1	EN 303 413 V1.2.1
EN 55035:2017+A11:2020	EN 301 489-19 V2.2.1	EN 62479:2010

Disposal of Electric and Electronic Equipment:

(Applicable in the EU and other European countries with separate collection systems)

This equipment contains electric and/or electronic parts and must therefore not be disposed of as normal household waste. Instead, it should be disposed at the respective collection points for recycling provided by the communities. For you, this is free of charge.

If the equipment contains exchangeable (rechargeable) batteries, these too must be removed before and, if necessary, in turn be disposed of according to the relevant regulations (see also the respective comments in this unit's instructions).

Further information about the subject is available at your community administration, your local waste collection company, or in the store where you purchased this equipment.

FCC ID: 2BNCJ-PMP
IC: 28315-PMP
KC ID: R-C-FLG-BT563PMP
TELEC ID: 201-250250
ICASA: TA-2025/3035
IMDA: ESER/25/2803

Regulatory certification

Go to Device Settings -> About



TA-2025/0345
APPROVED

Complies with
IMDA Standards
ESER/25/2803

MADE IN TAIWAN



WARNING: This device contains a neodymium magnet. Magnets could affect the functioning of pacemakers and implanted heart defibrillators. If you use these devices, keep sufficient distance from the magnet. Warn others who wear these devices from getting too close to magnets. Magnet may lose part of its adhesive force permanently if exposed to temperatures above 175°F (~79°C). Magnets produce far-reaching, strong magnetic fields. They could damage TVs and laptops, computer hard drives, credit and atm cards, data storage media, mechanical watches, hearing aids and speakers. Keep unit away from devices and objects that could be damaged by strong magnetic fields.



PLAYMAKER+

ENGLISH

30



Need Help?

Questions or concerns about your **PLAYMAKER+**?
Reach out to us at support@blueteesgolf.com

www.blueteesgolf.com

[@blueteesgolf](https://www.instagram.com/blueteesgolf)



DESIGNED IN CALIFORNIA

MADE IN TAIWAN