



RAINMAKER

INDOOR/OUTDOOR PORTABLE LAUNCH MONITOR

USER MANUAL

TABLE OF CONTENTS

FEATURES	4
WHAT'S IN THE BOX	5
PRODUCT LAYOUT/OPERATIONS	6
⊙ RAINMAKER DEVICE	6
⊙ RAINMAKER REMOTE	6
PRODUCT SETUP	7
⊙ FIRST-TIME POWER ON	7
⊙ PAIRING VIA BLUETOOTH®	7
⊙ DEVICE PLACEMENT AND ALIGNMENT	8
HOW TO USE	9
⊙ CHARGING THE DEVICE	9
⊙ NAVIGATING USING THE RAINMAKER REMOTE	10
⊙ UNDERSTANDING THE INTERFACE	11
⊙ SESSION TYPES	12
⊙ PRACTICE SESSION	12
⊙ SPEED SESSION	14
⊙ TARGET DISTANCE SESSION	15
⊙ PLAYER PROFILES	15
⊙ CLUB SELECTION	16
⊙ DEFAULT CLUB BAG	16
⊙ CUSTOM MY BAG (P1 ONLY)	16
⊙ SELECTING A CLUB DURING A SESSION	16
⊙ OFFLINE DATA STORAGE AND SESSION HISTORY	17
⊙ DEVICE SETTINGS	17



TABLE OF CONTENTS

BLUE TEES LAUNCH APP	18
⦿ DOWNLOADING AND CREATING AN ACCOUNT	18
⦿ CONNECTING THE RAINMAKER	18
⦿ SYNCING SHOTS FROM RAINMAKER	18
⦿ WHEN THE RAINMAKER IS CONNECTED	19
⦿ THIRD-PARTY SIMULATION SOFTWARE	19
⦿ SESSION TYPES IN THE BLUE TEES LAUNCH APP	19
⦿ PRACTICE SESSION	20
⦿ SPEED SESSION	20
⦿ TARGET DISTANCE SESSION	20
⦿ DATA SUMMARY AND ACHIEVEMENTS	21
⦿ SESSION HISTORY	22
⦿ MY BAG	23
⦿ DEVICE SETTINGS VIA THE APP	24
⦿ FIRMWARE UPDATES (OVER-THE-AIR)	24
⦿ CLEANING AND GENERAL CARE	25
⦿ FAQs & TROUBLESHOOTING	25
⦿ TECHNICAL SPECIFICATIONS	27
⦿ IMPORTANT SAFETY INFORMATION	29
⦿ WARNINGS	30
⦿ BATTERY	30
⦿ ELECTRICAL	30
⦿ GENERAL SAFETY	31
⦿ LITHIUM BATTERY FIRE / EXPLOSION RISK	31



TABLE OF CONTENTS

⦿ REGULATORY, COMPLIANCE & LEGAL INFO	32
⦿ FCC COMPLIANCE STATEMENT	32
⦿ FCC INTERFERENCE STATEMENT	32
⦿ FCC CAUTION	33
⦿ RF WARNING FOR PORTABLE DEVICE	35
⦿ CE DECLARATION	36
⦿ WEEE DIRECTIVE	37
⦿ DISPOSAL OF ELECTRIC AND ELECTRONIC EQUIPMENT	37
⦿ PRIVACY AND SENSOR DATA DISCLOSURE	38
WARRANTY	39
NEED HELP	40



FEATURES

- Phased Array Doppler radar captures professional-grade shot data directly on the device and in the Blue Tees LAUNCH App.
- Vivid 4.3" full-color LCD display with 800+ nits brightness for easy viewing in any lighting.
- • Three metric tile display modes — Single Tile, 4-Tile, & 9-Tile — so you control how much data you see after every shot.
- Three standalone session types: Practice, Speed, and Target Distance.
- Bluetooth® Low Energy (BLE) connectivity to the Blue Tees LAUNCH App for a full virtual range experience, including 3D ball flight, dispersion view, and shot history.
- Offline shot storage for up to 1,000 shots; syncs automatically to your account when connected to the app.
- Multi-player support: track shots independently for multiple players to ensure clean data.
- Rainmaker Remote for club selection, player switching, and session control.
- Approximately 7-hour battery life on a single charge.
- IPX4 splash-resistant design built for real on-course and driving range conditions.
- Protective carry case included for safe storage and transport between sessions.

WHAT'S IN THE BOX

RAINMAKER LAUNCH Monitor

Rainmaker Remote

Protective Carry Case

USB-C to USB-C Charging Cable

Quick Start Guide

App Download Flyer

Blue Tee Golf Sticker



RAINMAKER

ENGLISH

5

PRODUCT LAYOUT/OPERATIONS



RAINMAKER DEVICE

1. 4.3" LCD Full-Color Display

2. Power / Action Button



- Long Press (3 seconds): Power ON / OFF
- Short Press: Activates the Action Button shortcut (customizable via settings menu on Rainmaker)
- Very Long Press (10 seconds): Hardware reset.


3. Settings Button



- Short Press: Cycles through metric tile screen views (Single Tile, 4-Tile, 9-Tile) when in Practice mode.

4. USB-C Charging Port

Note: The Rainmaker Remote uses infrared (IR) and requires a direct, unobstructed line of sight with the Rainmaker. The remote's built-in magnets allow it to attach to the back of the Rainmaker for convenient storage. The remote is powered by a coin cell battery; replacement requires a small screwdriver (not included). Replacement remotes are available at www.blueteesgolf.com.

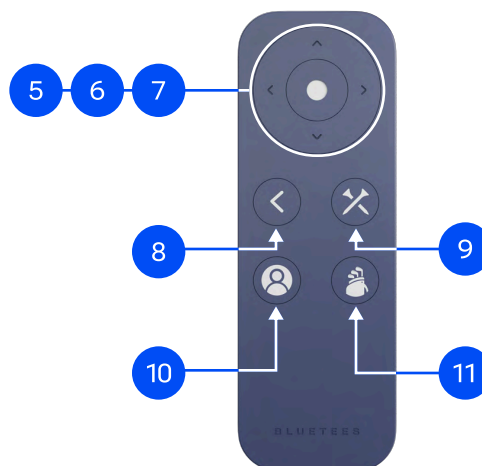

RAINMAKER REMOTE

5. Up / Down Arrows



- Navigate menus; cycle through available metrics in Casual mode during a Practice session

6. Left / Right Arrows



- Cycle between display modes (Single Tile, 4-Tile, 9-Tile)

7. Select Button



- Confirm menu selections

8. Back Button



- Go back to previous screen

9. Action Button



- Customizable shortcut to your favorite screen/mode

10. Player Button



- Open the player selection menu

11. Club Button



- Open the club selection menu



RAINMAKER

ENGLISH

6

PRODUCT SETUP

FIRST-TIME POWER ON

1. Press and hold the  Power / Action Button for 3 seconds until the Blue Tees Golf logo appears on screen.
2. A QR code will display on screen. Scan it with your phone to be directed to the Blue Tees LAUNCH App in the Apple App Store or Google Play Store.
 - This QR code screen only appears on first power-on out of the box.
 - For subsequent connections, Rainmaker will always broadcast BLE to connect.
3. Download and install the Blue Tees LAUNCH App.
4. Create a new account or log in with your existing Blue Tees credentials.

PAIRING VIA BLUETOOTH®

CONNECTING TO THE BLUE TEES LAUNCH APP & PLAYING GOLF



1. Power on the Rainmaker by pressing and holding the  Power / Action Button for 3 seconds.
2. Download/open the Blue Tees LAUNCH App on your mobile device.
3. Navigate to the Hamburger menu in the upper left corner and select “Add Device.”
4. Select your Rainmaker from the list of available devices.
5. When prompted, enter the pairing code shown on the Rainmaker display and confirm the connection in the app.



6. Once successfully connected, the Rainmaker is ready to use.

NOTE:


- Keep your phone or tablet within 3 ft. of the Rainmaker during initial pairing.

PRODUCT SETUP

DEVICE PLACEMENT AND ALIGNMENT

Proper placement is critical for accurate shot data. Follow these steps every time you set up the Rainmaker.

1. Place the Rainmaker on a flat, level surface behind your hitting area.
2. Position the device exactly 5 ft (1.5m) directly behind the ball.
3. The Rainmaker must be at the same height as the ball. Use the included case if needed to increase the height of the Rainmaker.
4. Align the device so it is directly in line with your intended target.
5. Confirm there are no obstructions between the Rainmaker and the ball's flight path.

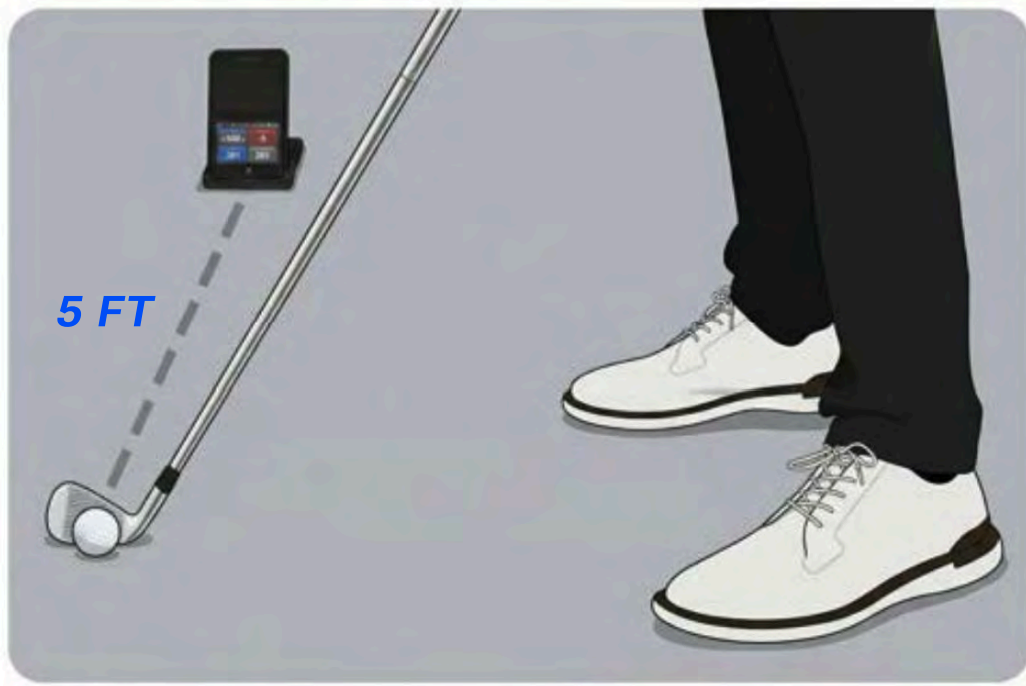

Tips

1. In scenarios where you are hitting off of a mat, we recommend placing the Rainmaker on top of the included case so that the unit and ball are on the same hitting level.
2. To help with alignment, use a ball marker or place a tee in the ground to ensure that your ball is always placed centered in relation to the Rainmaker.



WARNING

Incorrect placement or misalignment will directly affect the quality of your shot data. Always verify your setup before starting a session.



RAINMAKER

ENGLISH

8

HOW TO USE

SET-UP STEPS

1. Hold cross tees button on right side of unit for 3 seconds to power unit on
2. Place the unit exactly 5 feet behind the golf ball. Ensure the ball is aligned with the center of the unit and unit is pointed directly at the target line.
3. The unit will immediately begin the calibration. At this time BLE is NOT broadcasting.
4. Once the unit has passed the calibration step, it will now broadcast BLE for connection.

CHARGING THE DEVICE

The Rainmaker is powered by a built-in lithium-ion battery that charges via the USB-C port.

1. Locate the USB-C charging port on the right side of the Rainmaker.
2. Insert the USB-C end of the provided charging cable into the port.
3. Connect the other end to a power adapter with a 5V/2A power source.
4. Allow approximately 3 hours to charge from a fully discharged state.

NOTE:

- *The Rainmaker will not charge if plugged into a computer or power source that does not provide 5V/2A.*



WARNING

This product uses a lithium-based battery. Do not use a damaged battery or one showing signs of physical wear. See Warnings section for full battery safety information.




HOW TO USE



NAVIGATING USING THE RAINMAKER REMOTE

When using the Rainmaker in standalone mode, the remote must be used to navigate the screen. The Rainmaker offers three session types along with club selection, player selection, and session history management. Use the included remote to navigate the Rainmaker screens.

REMOTE OVERVIEW

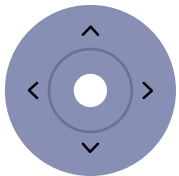

Navigation arrows – up, down, left, right

- Use the navigation arrows to browse through the screen

Selection button

- Use the selection button to select an option on the screen



Back button

- Use the back button to return to the previous screen



Crossed Tees Action button

- The Action button can be customized to your preference within the settings menu.



Player profile button

- The Player profile button can be used to select the active player



My Bag button

- The My Bag button can be used to select the active club



BLUETEES

NOTE:

- When connected to the Blue Tees LAUNCH App, only Casual and Pro modes are available. In Casual mode, press Up / Down on the remote to toggle between Total Distance and Carry Distance.



RAINMAKER

ENGLISH

10

HOW TO USE



UNDERSTANDING THE INTERFACE

1. User Profile

- Will show your initials if you are connected to the LAUNCH App. Otherwise it will just show P1.

2. Session Type selected

3. Selected Club you are using to hit with

4. Number of shots taken in that specific session


5. Radar Status

6. Bluetooth Status

- Blue means “connected to LAUNCH App” 
- Gray means “not connected to LAUNCH App” 

7. Battery Icon

- 0%-100%, in increments of 10%

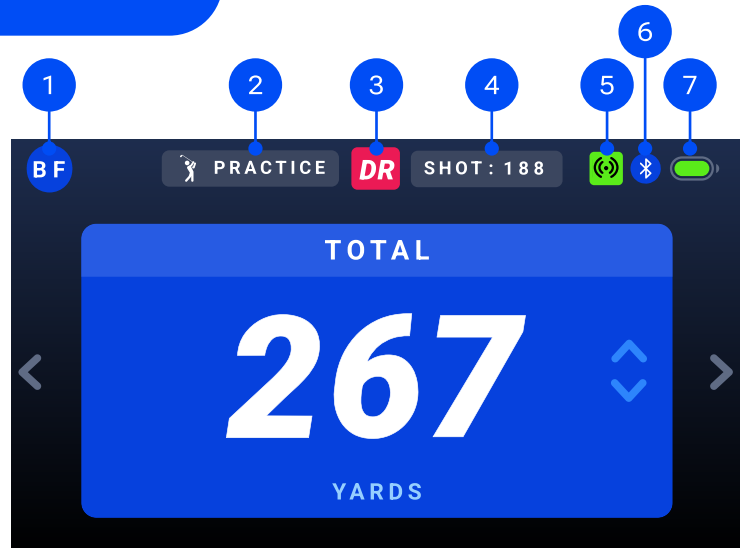


RECORDING A SHOT

1. Radar Status

- Green = RADAR READY to detect shot 
- Orange = Shot is detected and Radar is CALCULATING shot data 
- Red = Radar NOT ready to detect shot 
 - check that tilt angle is correct, or realign device to shot placement

2. Shot Calculation

- Orange will GLOW on bottom of screen, signifying that the device detected a shot and it's calculating the shot data

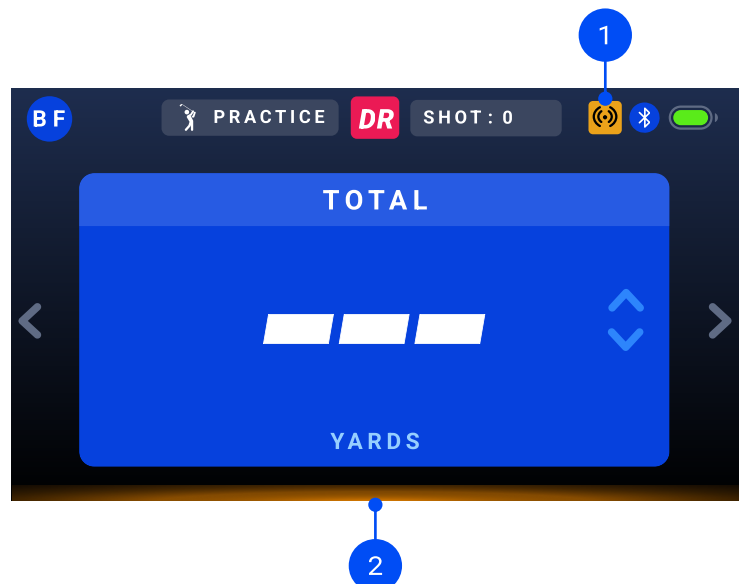

HOW TO USE



SESSION TYPES

The Rainmaker supports three session types in standalone mode. Start a session using the Rainmaker Remote from the main screen.

PRACTICE SESSION

Practice is the core standalone session type. After each shot, the Rainmaker displays your full data set across your chosen display mode.

- Use Left / Right Arrows on the remote to cycle between Casual, Pro, and Beast display modes.
- In Casual mode, use Up / Down Arrows to cycle through all 12 available metrics.
- Shot data for P1 and G1 is tracked and stored independently.
- All shots are stored in local memory and sync to the Blue Tees LAUNCH App when connected.



HOW TO USE

SINGLE TILE

Displays one metric prominently across the full screen. In practice sessions, press Up / Down on the Rainmaker Remote to cycle through 12 available metrics:



- Carry Distance
- Total Distance
- Ball Speed
- Club Speed
- LAUNCH Angle
- LAUNCH Direction
- Apex
- Attack Angle
- Club Path
- Total Spin
- Smash Factor
- Spin Axis

4-TILE



Displays four key metrics simultaneously:

- Total Distance
- Carry Distance
- Ball Speed
- Club Speed



HOW TO USE

9-TILE

Displays nine metrics simultaneously for a complete shot picture:



- *Total Distance*
- *Carry Distance*
- *Ball Speed*
- *Club Speed*
- *LAUNCH Angle*
- *Smash Factor*
- *Total Spin*
- *LAUNCH Direction*
- *Attack Angle*

SPEED SESSION



Speed mode focuses on swing speed. This session is optimized for Driver and a ball is not needed for this session type.

- The Swing speed tile will display the last recorded speed, while the Previous tile will display the prior swing speed that was recorded.



HOW TO USE

TARGET DISTANCE SESSION



Target Distance mode lets you set a carry distance goal and receive instant color-coded feedback after every shot.

- Default target distances are pre-loaded for each club type. You can use the left and right arrows on the remote to adjust to your desired target distance.
- After each shot, the feedback tile turns Blue when your carry meets or exceeds the target, and Red when your carry falls short.

PLAYER PROFILES

The Rainmaker supports two player profiles in standalone mode: Player 1 (P1) and Guest (G1). Only P1 shot data is tracked and stored on the unit. When the user is set to G1, shot data is not saved.

- To switch between players, press the Player Button on the Rainmaker Remote.
- The P1 tile can be adjusted to display your initials. Once synced to the LAUNCH app, the device will show your initials on screen instead of "P1."
- Guest (G1) shot data is automatically cleared at the start of each new session.

Note: Player switching via the Rainmaker Remote is only available in standalone mode. When connected to the Blue Tees LAUNCH App, player switching is managed in the app.



HOW TO USE



CLUB SELECTION

TARGET DISTANCE SESSION

The Rainmaker comes pre-loaded with a default 14-club bag for use when no custom bag has been synced (applies to both P1 before syncing and G1 at all times):



Driver

3 Wood

5 Wood

3 Iron – 9 Iron

Pitching Wedge

Gap Wedge

Sand Wedge

Lob Wedge

Note: It is important to always select the proper club on the Rainmaker when hitting shots

CUSTOM MY BAG (P1 ONLY)

P1 can customize a personalized club bag in the Blue Tees LAUNCH App with up to 30 clubs across four categories: Woods, Hybrids / Utilities, Irons, and Wedges. The custom bag syncs to the Rainmaker via BLE and persists across sessions.

SELECTING A CLUB DURING A SESSION

1. Press the Club Button on the Rainmaker Remote to open the club selection menu.
2. Use the directional arrows to navigate between club categories (Woods, Hybrids, Irons, Wedges).
3. Highlight your desired club and press Select to confirm.
4. The active player and selected club are displayed on screen throughout the session.

Note: Club selection via the Rainmaker Remote is only available in standalone mode. When connected to the Blue Tees LAUNCH App, club selection is managed in the app.



RAINMAKER

ENGLISH

16

HOW TO USE

OFFLINE DATA STORAGE AND SESSION HISTORY

The Rainmaker stores shot data locally so you can use the device without app connection at any time.

- The device stores up to 1,000 shots across all sessions. Rainmaker LAUNCH Monitor Product Manual Blue Tees Golf® Page 18
- At 75% storage capacity, the device will display a notification prompting you to connect to the Blue Tees LAUNCH App or manage your Session History.
- When storage reaches capacity (1,000 shots), a “Memory Full” notification appears. You will have the option to delete the oldest session to free space.
- When you connect to the Blue Tees LAUNCH App, all stored shot data syncs to your account automatically. After a successful sync, Rainmaker memory is cleared to make room for new shots

DEVICE SETTINGS

Access Device Settings from the main menu on the Rainmaker. Available settings include:

- **Units:** Switch between Imperial (yards, mph) and Metric (meters, m/s).
- **Language:** English (default), French, German, Swedish, Japanese.
- **Reset Data:** Clears all locally stored session data from the device.

The Rainmaker includes automatic sleep and power-off behavior to preserve battery life:

- After 5 minutes of inactivity, the screen dims to 30% brightness.
- After 10 minutes of inactivity, the device powers off automatically



BLUE TEES LAUNCH APP

The Blue Tees LAUNCH App is the companion app for the Rainmaker. It unlocks a full virtual range experience, long-term session history, personalized player profiles, and deeper performance insights beyond what is available in standalone mode.



DOWNLOADING AND CREATING AN ACCOUNT

- Download the Blue Tees LAUNCH App from the Apple App Store or Google Play Store.
- Create a free Blue Tees account or log in with your existing credentials.
- Compatible with devices running iOS 18+ and Android 15+.



CONNECTING THE RAINMAKER

1. Power on the Rainmaker.
2. Open the Blue Tees LAUNCH App on your mobile device.
3. Navigate to the Devices section and select “Add Device.”
4. Select “Rainmaker” from the list and follow the on-screen pairing instructions.
5. Once connected, any offline shot data stored on the device will sync to your account automatically.



SYNCING SHOTS FROM RAINMAKER

1. Power on the Rainmaker.
2. Open the Blue Tees LAUNCH App on your mobile or tablet device.
3. Connect to your Rainmaker from the Add Devices list in the hamburger menu.
4. Tap on the Notifications icon in the upper right corner of the screen.
5. Tap on the ‘Shots Ready to Sync’ tile.
6. Proceed through the options to sync shots from Rainmaker.



BLUE TEES LAUNCH APP



WHEN THE RAINMAKER IS CONNECTED

When the Rainmaker is connected to the Blue Tees LAUNCH App, certain controls shift from the remote to the app. This is important to understand before starting a session in :

- Player switching is managed in the app — not on the Rainmaker Remote.
- Club selection is managed in the app — not on the Rainmaker Remote.
- The Rainmaker Remote has limited functionality when connected to the LAUNCH app and can only be used to cycle metric tile screens when in Practice mode.
- The app is the primary interface for starting, managing, and ending sessions when connected to the Rainmaker.



THIRD-PARTY SIMULATION SOFTWARE

Rainmaker is compatible with certain third-party simulation software applications. You must have an existing subscription with the providers in order to use the simulation software.

Below are the supported applications:

GSPro - Platform

- Windows PC

E6 Connect & Apex

- Platform – Windows PC

Note: Connection to E6 software will be announced at a later date.



SESSION TYPES IN THE BLUE TEES LAUNCH APP

The Blue Tees LAUNCH App supports the same three session types as standalone mode, with enhanced features when connected.



BLUE TEES LAUNCH APP

PRACTICE SESSION

Practice session delivers a full virtual range experience:

- Shot data is displayed in real time on both the Rainmaker screen and the app.
- Three virtual camera views: Down the Line (DTL), Side View, and Free Roam — giving you a complete picture of every ball flight.
- Dispersion view shows your shot spread across the session to help identify patterns.
- Full shot-by-shot data log with all available metrics stored to your account.

SPEED SESSION

Speed sessions function the same as standalone mode, with the following additions:

- All swing speed data is automatically saved to your account for long-term tracking.
- View speed trends over time from the app's session history.

TARGET DISTANCE SESSION

Target Distance sessions include the following functionality:


- The Blue / Red color feedback on the Rainmaker screen remains active.
- All shots and accuracy results are saved to your account.
- Up to 5 shot tracers are rendered on screen simultaneously, with the most recent shots appearing with the highest opacity.
- Change target distance, active player, and club selection in the app.



BLUE TEES LAUNCH APP



DATA SUMMARY AND ACHIEVEMENTS

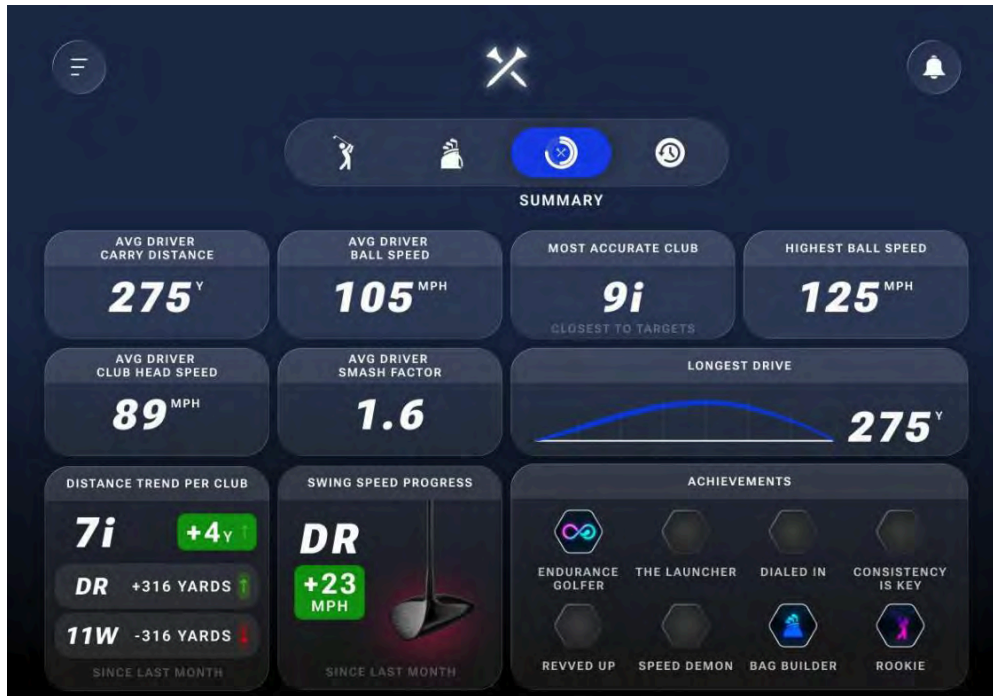

The Summary screen displays trends in your game and pulls historical data from your sessions that have been saved in the LAUNCH app.

The Achievements section provides visibility into the 8 achievements in the LAUNCH app:


- **Endurance Golfer** – Complete 50 sessions
- **The Launcher** – Hit a driver shot with 300 yards or more of total distance
- **Dialed in** – Hit 5 shots in a row within 10 yards of the target distance in a target distance session
- **Revved up** – In a speed session, take 5 consecutive swings within 1mph
- **Speed Demon** – swing speed over 100 MPH
- **Bag Builder** – Add 14 custom clubs to your bag
- **Rookie** – Log your first session in the LAUNCH app
- **Consistency is Key** – Log a session every day for 7 days in a row



BLUE TEES LAUNCH APP




SESSION HISTORY

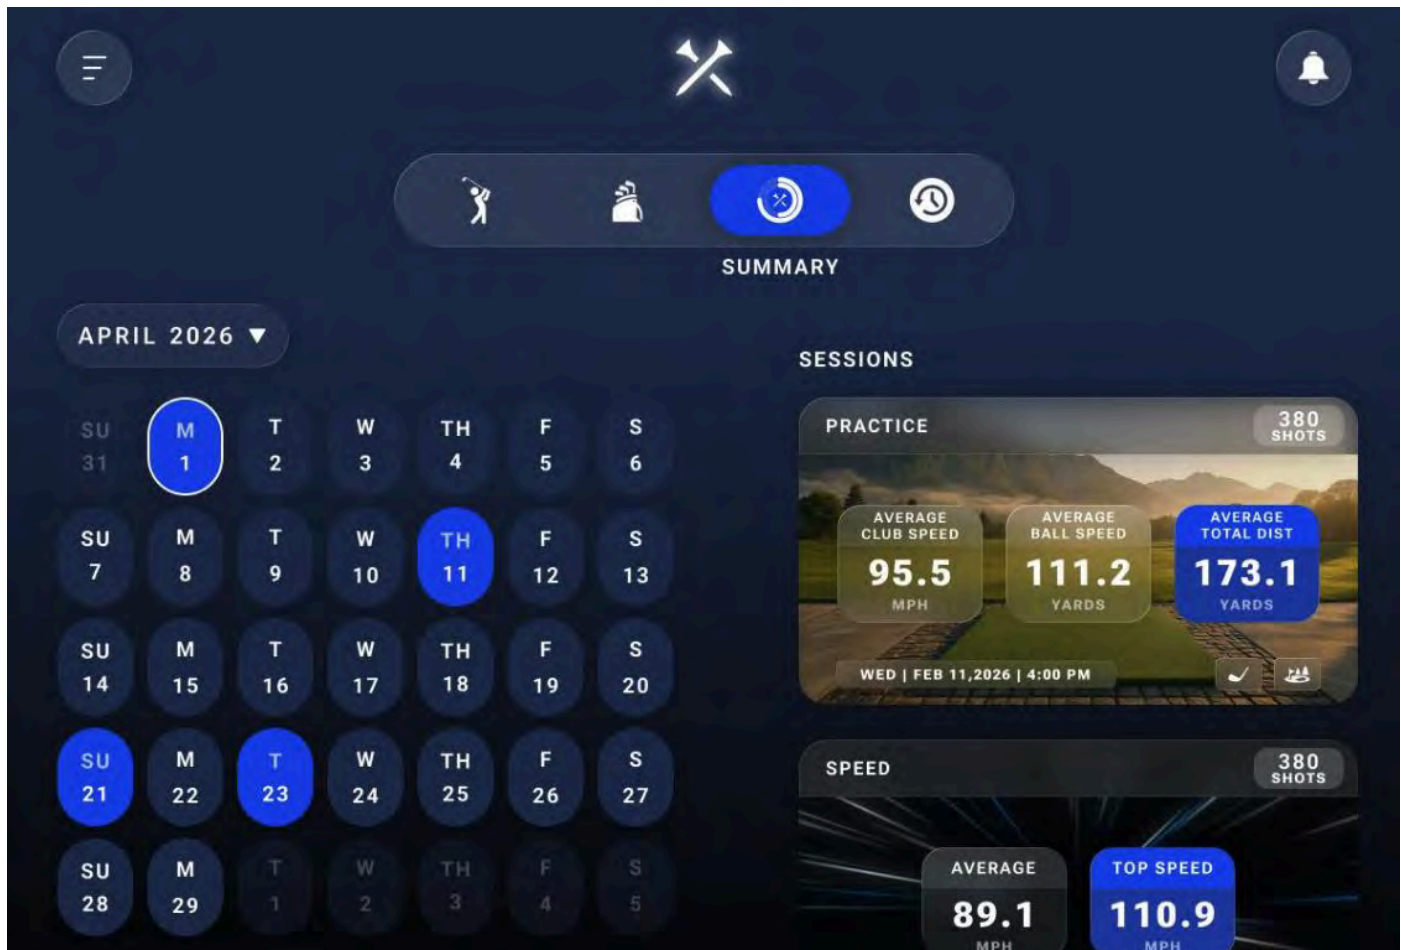

- Access your complete session data from the Session History screen.
- View individual shot metrics, averages per club type, and dispersion maps.
- Dates that are highlighted in blue indicate that a session was performed on that date.



BLUE TEES LAUNCH APP

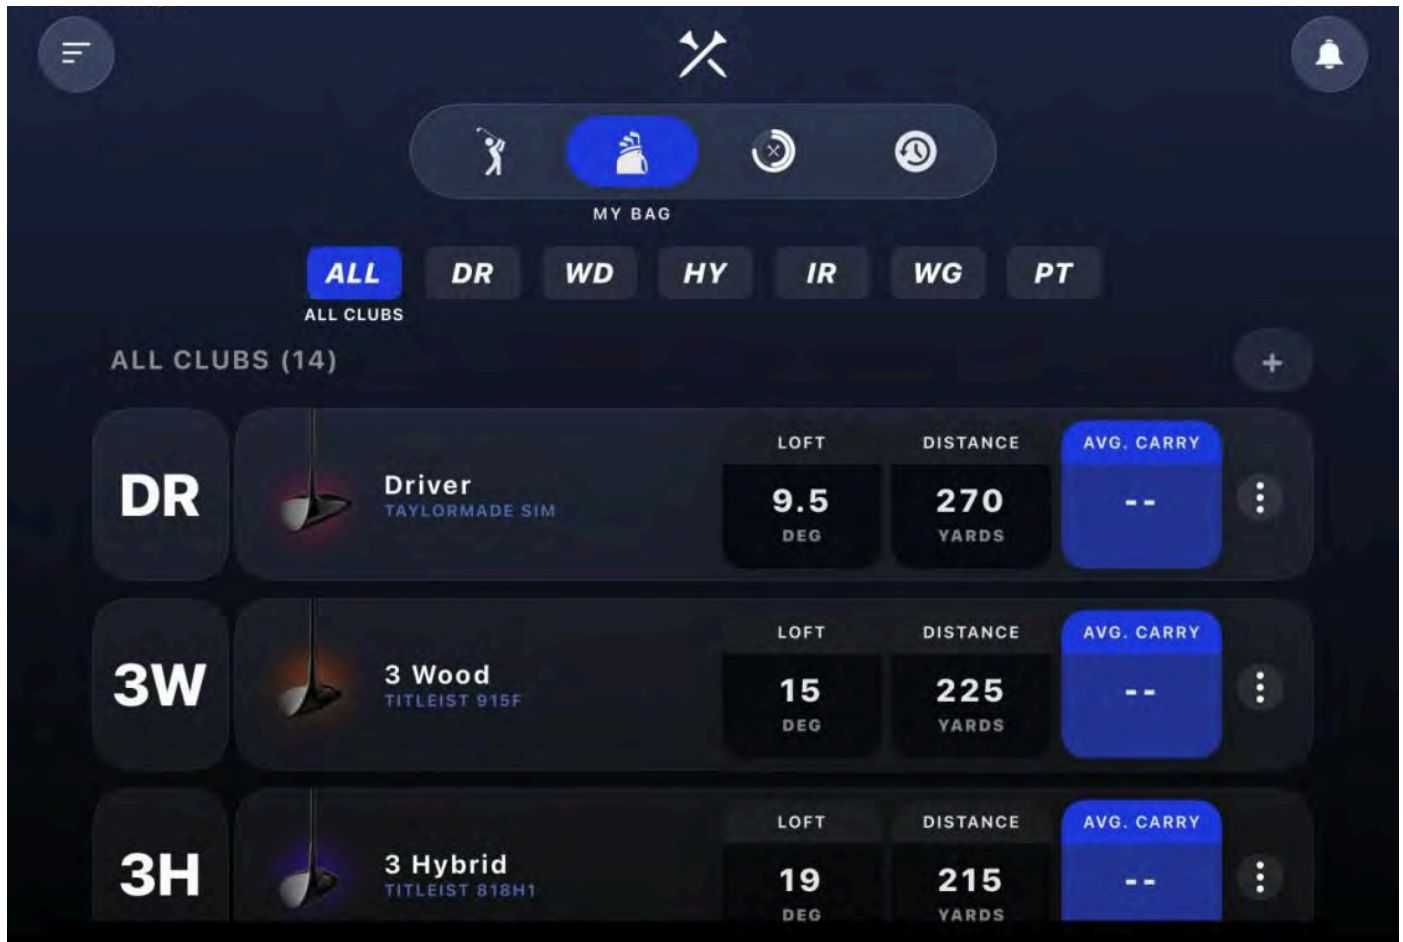

My Bag lets P1 define a personalized club set of up to 30 clubs. Your custom My Bag syncs to the Rainmaker via BLE and replaces the default club bag on device.

1. Open the Blue Tees LAUNCH App and navigate to My Bag.
2. Select clubs from four categories: Woods, Hybrids / Utilities, Irons, and Wedges.
3. Save your selection. The custom bag will sync to the Rainmaker the next time the device connects.

Note: My Bag is linked to P1 only. Guest players always use the default 14-club bag.

BLUE TEES LAUNCH APP



DEVICE SETTINGS VIA THE APP

Additional device customization is available through the Blue Tees LAUNCH App:

- **Units of Measurement:** Select from Imperial or Metric for velocity, height, and distance
- **RB Ball:** When on, this setting enables Rainmaker to track RCT golf balls for measured spin. When this setting is off, Rainmaker is set to track non-RCT golf balls.

Note: RCT enabled Firmware will be announced by Blue Tees at a later date.



FIRMWARE UPDATES (OVER-THE-AIR)

The Rainmaker supports Over-the-Air (OTA) firmware updates delivered wirelessly via BLE through the Blue Tees LAUNCH App.

- When a firmware update is available, a notification will appear in the Notification menu in the upper right corner of the screen.
- Ensure the Rainmaker is charged to at least 30% before beginning an update.
- Keep the app open and the Rainmaker within 2 feet during the update process.
- Do not power off the device while an update is in progress.



CLEANING & GENERAL CARE

Follow these guidelines to keep your Rainmaker in good working condition:

1. Blow away excess dust or debris from the exterior or use a soft brush.
2. Clean the device occasionally with a soft, damp cloth.
3. Do not expose the device to strong chemicals such as gasoline, solvents, or alcohol — these can damage the housing and finish.
4. Remove fingerprints or smudges from the display using a dry microfiber cloth.
5. The Rainmaker has an IPX4 splash-resistance rating and can handle rain and light splashing. Do not submerge the device in water or any liquid.
6. When not in use, store the Rainmaker in the included protective carry case in a dry indoor location.

FAQ & TROUBLESHOOTING

If the Rainmaker does not power on:

- Press and hold the  Power / Action Button for 3 seconds.
- Ensure the device is fully charged. If it does not respond after a full charge cycle, contact customer support.

If the Rainmaker powers off during a session:

- Battery may be low, charge the device for approximately 3 hours for a full charge.
- Check if the auto power-off activated due to 10 minutes of inactivity.



FAQ & TROUBLESHOOTING

If a shot is not detected:

- Verify the Rainmaker is positioned exactly 5 ft (1.5 m) behind the ball at the same height as the ball.
- Confirm the device is directly in line with your target with no obstructions in the radar's path.
- Ensure a session has been started on the device or in the app before hitting.
- If you are indoors, ensure that there are no HVAC fans blowing in the general direction of the Rainmaker or along your target line.

If the Rainmaker Remote is not responding:

- Ensure the remote has a clear, direct line of sight to the Rainmaker. The remote uses infrared (IR) and cannot transmit through obstructions.
- Check or replace the coin cell battery. Battery access requires a small screwdriver (not included).
- Move closer to the Rainmaker and try again.

If the device will not pair to the Blue Tees LAUNCH App:

- Ensure Bluetooth is enabled on your mobile device.
- Keep your phone within 3 ft (1 m) of the Rainmaker during pairing.
- Close and reopen the Blue Tees LAUNCH App, then try again.
- If pairing still fails, power the Rainmaker off and back on, then retry.

If offline data is not syncing to the app:

- Ensure the Rainmaker is connected to the app via BLE.
- Ensure you are starting the sync manually from within the LAUNCH App notification menu
- If sync does not complete, ensure your app is updated to the latest version.

If the display is showing unexpected data:

- Verify correct device placement: 5 ft (1.5 m) behind the ball, at the same height as the ball, directly in line with target.
- Ensure there are no reflective surfaces or obstructions near the device.
- Power cycle the Rainmaker and start a new session.

If the device screen is frozen or unresponsive:

- Press and hold the  Power / Action Button for 3 seconds to power off, wait 10 seconds, then power back on.
- If the issue persists after a reset, contact Blue Tees Golf customer support.



TECHNICAL SPECIFICATIONS



SENSOR

Sensor Type	Doppler Radar
Frequency	K-Band (24 GHz)
Measurement Range	15 – 340 m (16 – 372 yd) carry distance
Frequency Range	24 GHz ~ 24.25 GHz (CW)
Installation Position	1.5 m (5 ft) behind ball, same height as ball, directly in line with target



DISPLAY

Display Type	4.3" TFT LCD Full Color
Resolution	480 × 272 pixels
Brightness	800+ nits



CONNECTIVITY

Bluetooth Version	BLE 5.0
BLE	2402 MHz ~ 2480 MHz (GFSK)
Bluetooth Name	Rainmaker ##### (Last 4 digits of serial number)
Compatibility	iOS 14.0+ Android 10.0+



TECHNICAL SPECIFICATIONS

⚙️ POWER

Battery Type	Lithium-ion Rechargeable
Battery Capacity	5,100 mAh
Operating Time	Approx. 7 hours (may vary by usage)
Charging Time	Approx. 3 hours (from fully discharged)
Input Voltage / Current	5V/2A
CE Target Power	-2.5 dBm(BLE), -7 dBm(RADAR)
	Tolerance: ± 1 dB
	Max target EIRP: -1.5 dBm(BLE), -6 dBm(RADAR)
FCC Target Power	Target power: -4 dBm(BLE), -10 dBm(RADAR)
	Tolerance: ± 1 dB
	Max tune-up Power: -3 dBm(BLE), -9 dBm(RADAR)
Remote Battery Coin	CR2025

⚙️ PHYSICAL

Dimensions	130.2 mm × 231.5 mm × 27 mm 5.1" × 9.1" × 1.1"
Weight	719.7 g / 25.4 oz [TBD: device only vs. device + remote]
IP Rating	IPX4
Operating Temperature	0°C to 50°C 32°F to 122°F
Storage Temperature	Room temperature

⚙️ LANGUAGE & SETTINGS

Language	English, French, German, Swedish, Japanese
Units	Imperial (yards, mph) / Metric (meters, km/h)



IMPORTANT SAFETY INFORMATION

PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

To help ensure reliable operation and personal safety, the following care and maintenance guidelines are recommended:

1. Do not disassemble or attempt to repair this device. Doing so may cause product damage or personal injury.
2. Do not use the device in extremely dusty, humid, or high-temperature environments beyond the rated operating range.
3. If the device is damaged — for example, if liquid enters the unit, the device is dropped, or it is unable to operate normally — discontinue use and contact Blue Tees Golf customer support.
4. When the device is fully charged, disconnect it from the charger. Do not leave the device connected for extended periods after reaching a full charge.
5. Use a certified USB adapter that has passed the applicable national safety certifications.
6. Charge the device at least once per month when not in regular use to maintain battery performance.
7. Do not use the device outside of the approved operating temperature range. The device may stop automatically to protect internal components.
8. Avoid prolonged exposure to extreme environmental conditions.
9. The Rainmaker has an IPX4 splash-resistance rating. Do not submerge the device in water or any other liquid.
10. Avoid severe impacts to the unit.
11. Always position the Rainmaker at least 1.5 m (5 ft) behind the ball and outside the golfer's swing path.
12. Do not place the device where it could be struck by a golf ball, club, or other object during use.



WARNINGS

BATTERY

This product uses a lithium-based battery. Lithium batteries can overheat and cause damage if used incorrectly.

-  *Do not attempt to open, disassemble, or service the internal battery. The battery is not userreplaceable.*
-  *Do not expose the device to temperatures above 140°F (60°C).*
-  *Do not charge the battery when the ambient temperature is above 113°F (45°C).*
-  *Do not store the device at temperatures above 149°F (65°C) or below -4°F (-20°C).*
-  *Properly recycle or dispose of the battery in accordance with local regulations. Do not dispose of in fire or water.*

ELECTRICAL

-  *Do not use or charge the product in rain or wet conditions to prevent fire and electric shock.*
-  *Protect the product from dripping or splashing liquids.*
-  *Do not place containers filled with liquids on or near the product.*
-  *Disconnect the product from the power supply during thunderstorms or when unused for extended periods.*
-  *Route the charging cable so it cannot be stepped on or pinched at plugs, sockets, or the device itself.*

WARNINGS

GENERAL SAFETY

-  *Danger to life for children from suffocation. Unsupervised children could swallow small parts or packaging material. This product is not a toy.*
-  *Do not allow children to play with the product, accessories, or packaging material.*
-  *Do not allow children to perform cleaning or maintenance on this product.*

LITHIUM BATTERY FIRE / EXPLOSION RISK

-  *Lithium batteries can catch fire or explode if handled incorrectly.*
-  *Only charge the battery at an ambient temperature between 0°C and 45°C (32°F to 113°F).*
-  *Do not expose batteries to excessive heat such as direct sunlight for extended periods.*
-  *Protect the battery from extremely low temperatures.*

FCC ID **2BNCJLMRR**

IC **28315-LMRR**

Country of Manufacture **MADE IN KOREA**

Regulatory certification information is available on the device.
Navigate to **Settings** → **About** to view full certification details.



The Bluetooth® work mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Blue Tees Golf is under license.

FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.



FCC CAUTION

a、 § 15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

b、 § 15.21 Changes or modification warning.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



c. § 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

CAUTION: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. (추가)

EXPOSURE: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.





INDUSTRY CANADA STATEMENT

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

EXPOSURE: This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

DÉCLARATION D'EXPOSITION AUX RADIATIONS

Cet équipement est conforme aux limites d'exposition aux rayonnements ISED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.



The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

RADIATION EXPOSURE STATEMENT: This device complies with the FCC and Industry Canada portable RF exposure limits set forth for an uncontrolled environment and is safe for the intended operation as described in this manual.



CE DECLARATION

Products with the CE marking comply with the Radio Equipment Directive (2014/53/EU) issued by the Commission of the European Union.

This product and, if applicable, the supplied accessories are marked with "CE" and comply with the applicable harmonized European standards listed under the Radio Equipment Directive 2014/53/EU, the EMC Directive 2014/30/EU, and the RoHS Directive 2011/65/EU.

This product can be used in which EU members, in accordance with Article 10(10) or this product can be used in at least one EU country, in accordance with Article 10(2).

"This device is intended for use only in areas where children are not present."

"Risk of fire or explosion if the battery is replaced by an incorrect type"

The full text of the EU declaration of conformity is available at www.blueteesgolf.com.





WEEE DIRECTIVE

2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.



DISPOSAL OF ELECTRIC AND ELECTRONIC EQUIPMENT

(Applicable in the EU and other European countries with separate collection systems)

This equipment contains electric and/or electronic parts and must not be disposed of as normal household waste. It should be disposed of at the appropriate collection points for recycling provided by local communities at no charge to you.

Further information is available from your community administration, your local waste collection company, or the store where you purchased this equipment.





PRIVACY AND SENSOR DATA DISCLOSURE

Doppler Radar Sensor - Privacy Notice

The Rainmaker uses a Doppler radar sensor to measure golf ball and club flight characteristics, including ball speed, club speed, LAUNCH angle, spin rate, carry distance, and related shot metrics. This sensor data is used exclusively for golf performance measurement.

THE DOPPLER RADAR SENSOR DOES NOT:

- Collect biometric data or personally identifiable information
- Track, identify, or profile individual users based on physical characteristics
- Transmit sensor data to any third party without explicit user action

Shot data is associated only with user-assigned player profiles (e.g., "P1," "G1") that you define within the device or companion app. No connection is made between this data and your personal identity unless you voluntarily provide profile information through the app.

Data stored on-device is retained locally in non-volatile memory for up to 1,000 shots and is only transmitted to the Blue Tees Golf companion app via Bluetooth Low Energy (BLE) when you initiate a connection. You may delete stored session data at any time via Settings > Reset Data.



WARRANTY

Rainmaker is backed by a 1-year limited warranty from the date of delivery.

WHAT'S COVERED

- Defects in materials or workmanship under normal use
- Hardware issues with the Rainmaker device
- Issues with included accessories, including the remote

WHAT'S NOT COVERED

- Accidental damage (drops, impacts, water damage beyond intended use)
- Misuse or improper setup
- Cosmetic wear and tear (scratches, dents, etc.)
- Unauthorized modifications or repairs
- Lost remotes (replacement remotes available to purchase for \$30)

HOW TO START A CLAIM

You can start a warranty claim by:

- Contacting our support team at **support@blueteesgolf.com**, or
- Submitting a request through our returns & warranty portal

Our team may guide you through troubleshooting before approving a replacement.

OPTIONAL EXTENDED PROTECTION

For additional coverage, you'll have the option to add extended protection through Extend, which may include:

- Additional years of coverage
- Accidental damage protection
- Hassle-free replacements





B L U E T E E S

NEED HELP?

Questions or concerns about your Rainmaker?
Reach out to us at **support@blueteesgolf.com**

WWW.BLUETEESGOLF.COM



@blueteesgolf

DESIGNED IN CALIFORNIA

MADE IN CHINA