

POWER ON / OFF

1



Press and hold
for 5 seconds
to power
ON / OFF device

Action Button



 
CONNECT DEVICE

2a

Download the Blue Tees GAME
App and register your speaker



2b

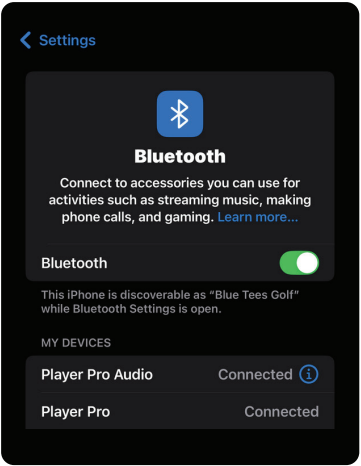


Connect to
your phone
via Bluetooth



START A ROUND

 3

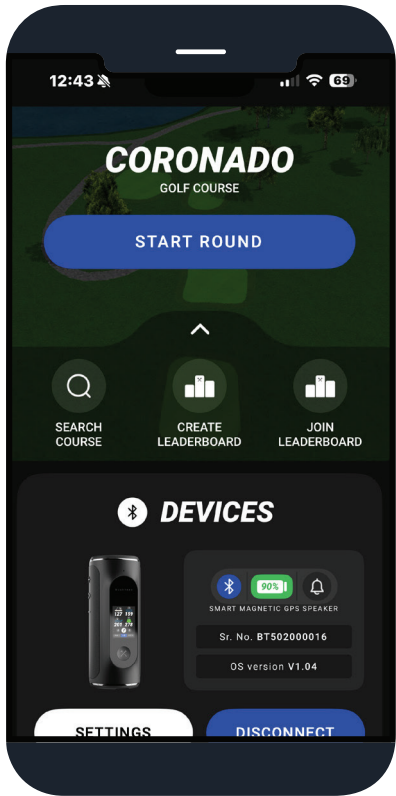

Select desired golf course to start
round with access to Golf Mode



 
MODES

GOLF MODE



SWIPE LEFT AND RIGHT
Live Scoring
Main GPS + Club
Driving Distance
Dynamic Hazards

UTILITY MODE


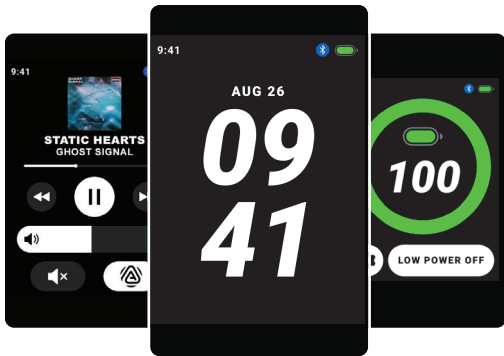


SWIPE UP AND DOWN
Music Control
Date, Time, Round Timer,
Battery + Settings

TRUE DISTANCE™

True Distance™ - delivers the most accurate yardages in golf by going beyond the straight-line GPS.

It dynamically adjusts distances to the target by factoring in real-time wind speed and direction, elevation changes, slope, humidity, and temperature, so golfers know how far the shot will truly play, not just how far it measures.

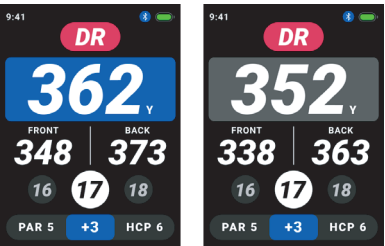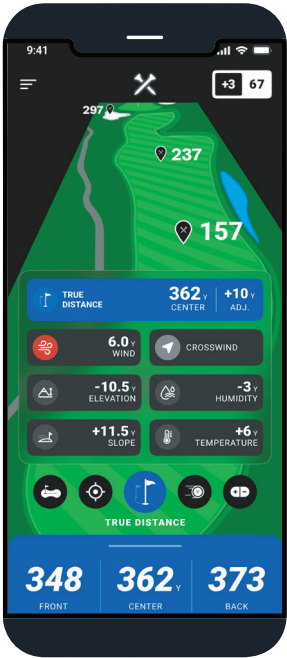

Toggle ON/OFF in the mobile app settings
Blue = ON Gray = OFF

SCOUT AI™

Scout AI™ is your on-course assistant, delivering real-time yardages, hazard calls, and club recommendations through your Player Pro.

Scout AI™ will play automatically whenever your speaker is paired with the GAME App. You can also assign Scout to the Player Pro action button inside the app for one-touch access during your round.

AI CADDIE ADVICE

"AIM OVER THE LEFT FAIRWAY BUNKER, BE AWARE OF OB LEFT"

CLUB SUGGESTIONS



DEFAULT	
Driver	230+
3 Wood	215 - 235
5 Iron	160 - 170
7 Iron	140 - 150
Pitching Wedge	105 - 120
Gap Wedge	90 - 110


Customize in the mobile app*

HAZARDS



(1) Left Bunker (2) Right Water
(3) Carry Creek (4) End of Fairway

LIVE SCORING

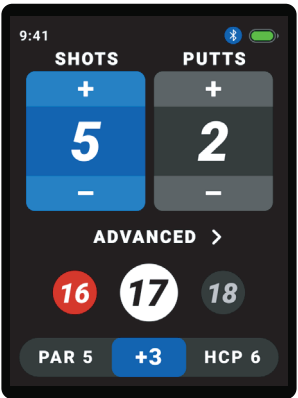

Tap +/- to enter and save your score or putts.
Select 'Advanced' for Fairway/Green

CONTROLS


- [+] Volume Up
Hold – Next song
- [-] Volume Down
Hold - Previous song
- [>] Play / Pause
2x Press – Toggle Indoor/Outdoor
Hold – Start Auracast™ Pairing



ACTION BUTTON

Visual or Audible
Section available in the mobile app*

ROUND TIMER

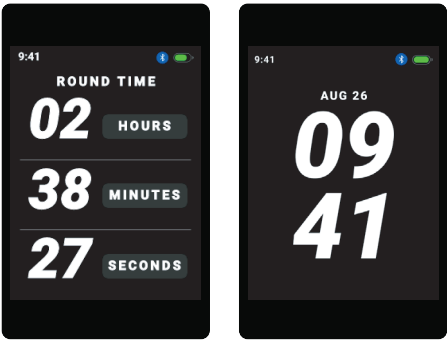

Tap to toggle between each view.

For more information, download here.

Pour plus d'informations, téléchargez ici.

Para más información, descargue aquí.

Für weitere Informationen laden Sie hier herunter.

获取更多信息
请在此下载。

詳しくは、こちらからダウンロードしてください。

자세한 정보는 여기에서 다운로드하세요.



Important Safety Instructions

Save these instructions for later use.

Follow all warnings and instructions marked on the audio equipment.

_ Read instructions - All the safety and operating instructions should be read before the product is operated.

_ Retain instructions - The safety and operating instructions should be retained for future reference.

_ Heed Warnings - All warnings on the product and in the operating instructions should be adhered to.

_ Follow Instructions - All operating and use instructions should be followed.

_ Cleaning - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.

_ Attachments - Do not use attachments not recommended by the product manufacturer as they may cause hazards.

_ Accessories - Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product.

_ Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.

Danger to life for children from suffocation!

Unsupervised children could swallow small parts of the product, accessories or packaging material. The product is not a toy.

► Do not allow children to play with the product, accessories or packaging material.

► Do not allow children to carry out cleaning and maintenance.

Danger of death through electric shock!

A voltage of up to 230 V could be present at the charging socket of the product and the charger. Touching live parts could cause life-threatening injuries.

► Do not use or charge the product in the rain, in order to prevent fires and electric shocks.

► Protect the product from dripping or splashing liquids.

► Do not place any containers filled with liquids (e.g. vases) on the product or near the product.

► Disconnect the product from the power supply during a thunderstorm or when unused for long periods.

► Lay the charging cable and connection cable in such a way that they cannot be stepped on or pinched, particularly at plugs, sockets or the device itself.

► Do not use the power supply in damp environments.

► Disconnect the charging cable from the product to ensure complete disconnection from the mains.

Risk of fire or explosion in lithium-ion batteries!

Lithium batteries can catch fire or explode if handled incorrectly.

► Only charge batteries at an ambient temperature of 0 ~ +45 °C.

► Do not expose batteries to excessive heat, e.g. direct sunlight, for extended periods of time.

► Protect batteries from extremely low temperatures.

FCC regulatory conformance:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF Exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment shall be installed and operated with a minimum distance 20cm between the radiator and body.

IC regulatory conformance

This device complies with CAN ICES-003 (B)/NMB-003(B).

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Cet appareil est conforme à la norme CAN ICES-003 (B)/NMB-003 (B).

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

RF Exposure

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment.

This equipment shall be installed and operated with a minimum distance 20cm between the radiator and body.

Cet équipement est conforme aux limites d'exposition aux radiations de la IC définies pour un environnement non contrôlé.

Cet équipement doit être utilisé avec une distance minimale de 20cm entre le radiateur et le corps.

This product and, if applicable, the supplied accessories are marked with

"CE" and comply therefore with the applicable harmonized European standards listed under the Radio Equipment Directive 2014/53/EU, the EMC Directive 2014/30/EU, the RoHS Directive 2011/65/EU. The full text of the EU declaration of conformity is available at the following internet address:www.blueteesgolf.com

Operation frequency (Max power)

Bluetooth:2402-2480MHz(8.4dBm)

RF exposure statement

RF exposure information: The EIRP power of the device at maximal case is below the exempt condition, 20mW specified in EN62479: 2010. RF exposure assessment has been performed to prove that this unit will not generate the harmful EM emission above the reference level as specified in EC Council Recommendation(1999/519/EC).

2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.

WARNING:

Replacement of a battery with an incorrect type that can defeat a safeuard (Model: 18650/2S)

Disposal of a battery into fire or a hot oven, or mechahically crushing or cutting of a battery, that can result in an explosion.

Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.

A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

The recommended operating ambient temperature range for product is -5 C to +40 C .

"the power delivered by the charger must be between min 2.5 Watts required by the radio equipment, and max 14 Watts in order to achieve the maximum charging speed"

Standby time

When there is no audio input and no user operation, within 20 minutes, unit will enter standby mode.

This product complies with Commission Regulation(EU) 2023/826 with regard to the ecodesign requirements for household and office electrical and electronic equipment on standby, off mode, and networked standby.

Power consumption in networked standby mode: < 2W

FRANÇAIS / CANADIAN

GUIDE RAPIDE

1

Maintenez enfoncé le bouton d'action "X" pendant 5 secondes pour allumer ou éteindre l'appareil.

2

Téléchargez l'application Blue Tees GAME, configurez votre profil et connectez Player Pro pour enregistrer votre appareil.

3

Sélectionnez le parcours de golf souhaité pour commencer une partie avec accès au Mode Golf.



AVERTISSEMENT : Le haut-parleur GPS Player Pro Golf possède de puissants champs magnétiques en raison de ses aimants en néodyme, qui peuvent endommager des objets tels que les stimulateurs cardiaques, les appareils auditifs, les implants électriques corporels, les cartes bancaires, les ordinateurs, etc. Maintenez les aimants à au moins un mètre (trois pieds) de ces appareils.

GUÍA RÁPIDA

1

Mantén presionado el botón de acción "X" durante 5 segundos para encender o apagar el dispositivo.

2

Descarga la aplicación Blue Tees GAME, configura tu perfil y conecta Player Pro para registrar tu dispositivo.

3

Selecciona el campo de golf deseado para comenzar una ronda con acceso al Modo Golf.



ADVERTENCIA: El altavoz GPS de golf Player Pro tiene campos magnéticos fuertes debido a imanes de neodimio, que pueden dañar objetos como marcapasos, audífonos, implantes eléctricos en el cuerpo, tarjetas bancarias, computadoras, etc. Mantenga los imanes al menos a un metro de distancia de estos dispositivos.

KURZANLEITUNG

1

Halten Sie die Aktionstaste „X“ 5 Sekunden lang gedrückt, um das Gerät ein- oder auszuschalten.

2

Laden Sie die Blue Tees GAME App herunter, richten Sie Ihr Profil ein und verbinden Sie Player Pro, um Ihr Gerät zu registrieren.

3

Wählen Sie den gewünschten Golfplatz aus, um eine Runde mit Zugriff auf den Golfmodus zu starten.



WARNUNG: Der Player Pro GPS Golf-Lautsprecher besitzt starke Magnetfelder durch Neodym-Magnete, die Gegenstände wie Herzschrittmacher, Hörgeräte, elektrische Körperimplantate, Bankkarten, Computer usw. beschädigen können. Halten Sie Magnete mindestens einen Meter von diesen Geräten entfernt.

クイックスタートガイド

1

「X」アクションボタンを5秒間長押しして、デバイスの電源をオン/オフします。

2

Blue Tees GAMEアプリをダウンロードし、プロフィールを設定して、Player Proを接続し、デバイスを登録してください。

3

希望のゴルフコースを選択し、ゴルフモードにアクセスしてラウンドを開始します。



警告: Player Pro GPS ゴルフスピーカーには強力なネオジム磁石が含まれており、ペースメーカー、補聴器、体内埋め込み型医療機器、銀行カード、コンピューターなどに損害を与える可能性があります。これらのデバイスから磁石を少なくとも3フィート（約90cm）離してください。



GAME

AI GOLF GPS APP



Download on the
App Store



GET IT ON
Google Play



**SCAN TO DOWNLOAD
GAME APP**

The Blue Tees GAME App
is required to use the golf features
on the Player Pro.

