

BODYCRAFT

BLU SERIES 200m



OWNERS MANUAL



WWW.BODYCRAFT.COM



800-990-5556



SERVICE@BODYCRAFT.COM

BEFORE YOU BEGIN

CONGRATULATIONS! And THANK YOU for selecting the BODYCRAFT BLU SERIES 200m Treadmill! Your choice reflects a wise investment in you and your family's health and wellness. We hope you use it for many healthy years!

For your safety and benefit, please read this entire manual. Please keep the manual in a convenient place for quick reference when needed.

BODYCRAFT offers a complete array of high quality fitness equipment. Please refer to our web site at BODYCRAFT.com to view more ways to enhance your lifestyle

Your BODYCRAFT BLU SERIES 200m has all the quality and design elements to make your workout extremely efficient and comfortable. Your console offers 3 display windows with easy to select programming buttons, plus a Polar® Compatible Heart Rate receiver. You can choose from 3 preset programs or the Quick Start option. Your new treadmill is a serious cardio fitness machine that will keep you motivated, challenged and within reach of your fitness goals.

The BODYCRAFT 200m will provide an efficient, low impact cardiovascular workout that will help improve energy levels and your quality of life. Cardiovascular training is vital for all ages and the BODYCRAFT 200m will provide an effective workout, producing results that will encourage you to reach your fitness goals and maintain the body you have always wanted. Spending 15 to 30 minutes a day, three times a week is all you need to start seeing the benefits of a regular exercise program.

If you have any questions or problems, please contact your local BODYCRAFT dealer, or us at:

Phone: 800-990-5556

Email: service@bodycraft.com

Mail: 7699 Green Meadows Dr. Lewis Center, OH 43035

Purchaser's Reference Information

IT IS IMPERATIVE THAT YOU FILL IN THE FOLLOWING INFORMATION AND REFER TO IT SHOULD THE NEED FOR SERVICE ARISE.

Product Name: BLU 200M Treadmill

Serial Number: TR _____



Proof of purchase must be supplied to validate warranty and the product must have been registered with BODYCRAFT via the included warranty card or online at www.BODYCRAFT.com.

TABLE OF CONTENTS

BEFORE YOU BEGIN	1
TABLE OF CONTENTS	2
IMPORTANT INFORMATION	3
ASSEMBLY INSTRUCTIONS	5
Step 1: Upright Posts Assembly	5
Step 2: Console Assembly	5
Step 3: Handrail Assembly	5
Step 4: Tighten all bolt and screws	6
Step 5: Handrail Cover Assembly	6
Step 6: Motor Cover Assembly	6
Step 7: Finish Up	6
HEART RATE MONITORING DEVICES	7
CONSOLE	8
CONSOLE LAYOUT	10
Displays	10
Function Keys	11
WORKOUT PROGRAMS	12
BELT START SEQUENCE	12
WARM UP	12
COOL DOWN	13
WORKOUT SUMMARY	14
QUICK START	15
CLASSIC PROGRAMS	16
MANUAL PROGRAM	16
HILL WALK	17
EASY JOG	18
WARRANTY	20
MAINTENANCE	21
SERVICE PARTS LIST	23
SERVICE PARTS DRAWING	24

IMPORTANT INFORMATION - PLEASE READ

Failure to read and follow the safety instructions below may result in serious injury.

This treadmill is built for optimum safety and is designed to meet or exceed all domestic and international standards. However, basic precautions need to be followed when operating any exercise equipment. **BE SURE TO READ THE ENTIRE OWNER'S MANUAL BEFORE OPERATING YOUR UNIT.**

CAUTION – FOR SAFE OPERATION

- Wear the safety cord and clip all times while using the treadmill.
- The safety key should never be left on the treadmill when not in use.
- Before beginning any exercise program on the treadmill, it is important to consult with your physician if you have any of the following: History of heart disease, high blood pressure, diabetes, chronic respiratory diseases, elevated cholesterol, or if you smoke cigarettes or experience any other chronic diseases or physical complaints.
- If over the age of 35 or overweight, consult with your physician before beginning any exercise program.
- Pregnant women should consult with their physician before beginning an exercise program.
- If you experience dizziness, nausea, chest pains or other abnormal symptoms during exercise, stop the exercise session immediately. Consult your physician before continuing.
- Drink fluids if you exercise for twenty or more minutes on the treadmill.
- Always follow the console instructions for proper operation.

WARNING – TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS:

- Unplug from outlet before servicing or moving the unit.
- Close supervision is necessary when using this treadmill around children, pets, invalids, or disabled persons. Keep children & pets away from the treadmill. Hands and feet may get caught in the moving parts which could result in serious injury.
- Never operate your treadmill if it has a damaged cord or plug, or if it is not working properly. Contact your authorized BODYCRAFT Fitness dealer for service and repair.
- Keep the power cord away from heated surfaces.
- Never insert any objects into openings. Keep hands and feet away from all moving parts.
- This treadmill is designed for home use only.
- Check the power requirement for your unit to see if it matches your local power outlet.
- Do not operate the heart rate monitor transmitter together with an electrical heart pacemaker. The transmitter may cause electrical disturbances.
- Inspect this treadmill prior to exercising to ensure it is working properly. Always make sure all components are fastened securely.
- This treadmill is intended for indoor use. Do not place the unit outdoors.
- Place your treadmill on a solid, level surface when it is in use. Adjust the leveler on the treadmill if necessary.
- Do not dismount the treadmill until it has come to a complete stop.
- Do not operate if oxygen equipment is being utilized or if aerosol (spray) products are being used in the area.

- Keep the treadmill away from walls to allow proper ventilation. Air should be able to circulate freely around the unit. Keep all air openings free of dirt and dust.
- To ensure proper functioning of your treadmill, do not install attachments or accessories not provided or recommended by BODYCRAFT.
- Place the treadmill in an area that will meet minimum clearance requirements: Front & Sides: 1 ft / 30 cm, Back 6 ft./ 180 cm
- Always wear proper clothing and shoes when exercising on the treadmill.
- Do not stand on the tread belt while performing auto-calibration.
- Never walk or jog or run backwards on the treadmill.
- Higher speed and higher incline is not for everyone. It is designed for occasional use of a skilled runner and may exceed many users' capabilities. Stop right away if you feel any discomfort.
- Use this treadmill only for its intended use as described in this manual. User weight is not to exceed 325 pounds / 148 kilograms.
- Use the handrails when getting on and off your treadmill.
- Do not remove the treadmill covers or other components. Only an authorized BODYCRAFT Fitness dealer should perform service.

GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. The treadmill is equipped with a cord having a grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER

To reduce the risk of electric shock, always unplug the treadmill from the electrical outlet if service is needed, and before cleaning.

Improper connection of the grounding conductor can result in risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the treadmill is properly grounded. Do not modify the plug provided with this product if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

Your treadmill is for use on a 120 volt circuit and has a grounding plug. Make sure the treadmill is connected to an outlet having the same configuration as the plug. Do not use an adapter with your treadmill.

SAFETY KEY CLIP & TETHER


- Your treadmill will not start unless the safety key is placed on the proper location of treadmill console.
- Attach the safety key clip properly onto your clothes before operating treadmill.
- In case of an emergency, pull the safety key off the treadmill, it will cut off the power to the console and stop the treadmill immediately.
- Place the safety key back in place, the treadmill will resume back to idle mode.
- Contact your dealer for a safety key replacement if you do not have one.

ASSEMBLY INSTRUCTIONS

Please take the assembly hardware out of the hardware package box. Lay all the hardware out and take note for its locations. Follow the assembly instruction step by step to complete the assembly. Do not tighten any screws until instructed.


Step 1: Upright Posts Assembly

1. Straighten out the main wire harness and insert it through the top of left upright post.
2. Slide the upright post onto its receptor and insert three M8 x55mm screws on the side and two M8 x 15mm screws on the front. Be careful not to pinch the main wire harness when inserting these screws.
3. Repeat procedure 2 for the Right upright post.
4. Do not tighten bolts until end of assembly.

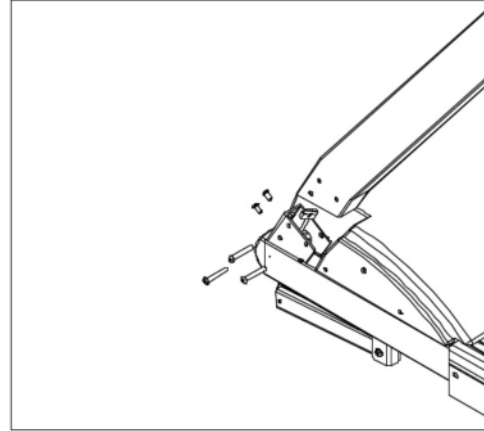


Step 2: Console Assembly

1. Hold the console next to the Left upright post and connect the main wire harness connectors together.
2. Insert the console U bracket into each side of upright post. Be careful not to pinch the wire harness while inserting the U bracket.
3. Insert three M8 x12mm screws each on inner and outer Left upright post (totally 6 screws on each upright post).
4. Repeat procedure for Right upright post.
5. Do not tighten bolts until end of assembly.

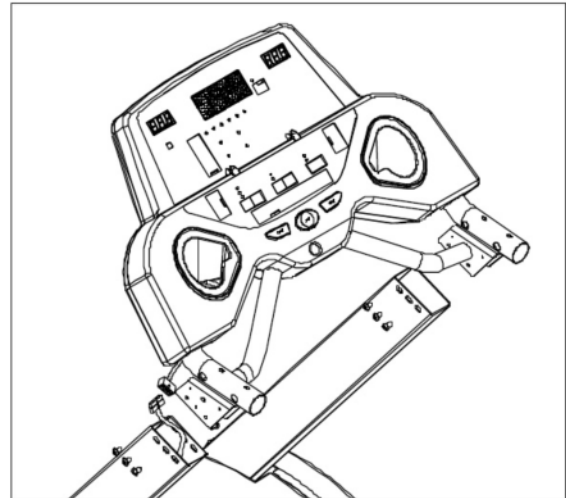

Step 3: Handrail Assembly


1. Insert Left handrail into Left handrail receptor.
2. Insert two M6 x12mm screws.
3. Repeat the procedure 1 & 2 for the Right handrail.
4. Do not tighten bolts until end of assembly.

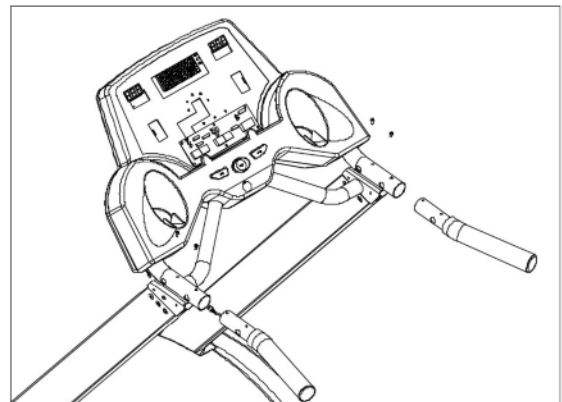

Step 4: Tighten all bolts and screws


Step 5: Handrail Cover Assembly

1. Place the Left inner handrail cover onto the Left handrail and tighten this cover with two M5 x12mm screws using Phillips screwdriver.
2. Now place the outer handrail cover through the handrail and onto inner cover. Insert four more M5 x12mm screws. Tighten all 6 screws now.
3. Repeat procedure 1 & 2 for the Right handrail covers.
4. Place the handrail cover inserts into the inner handrail covers.

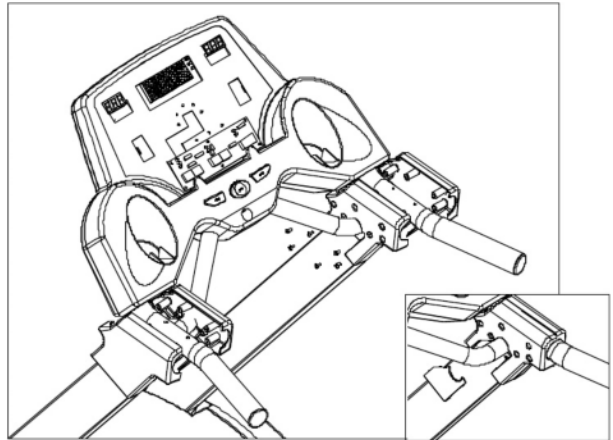


Step 6: Motor Cover Assembly

1. Place the Left motor cover onto the left side of frame.
2. Insert and tighten the selftap M5 x 10mm screw into the center and top mounting hole using Phillips screwdriver.
3. Insert and tighten two M5 x16 on front and rear end of the cover using Phillips screwdriver.
4. Repeat procedure 1, 2 & 3 for Right motor cover.

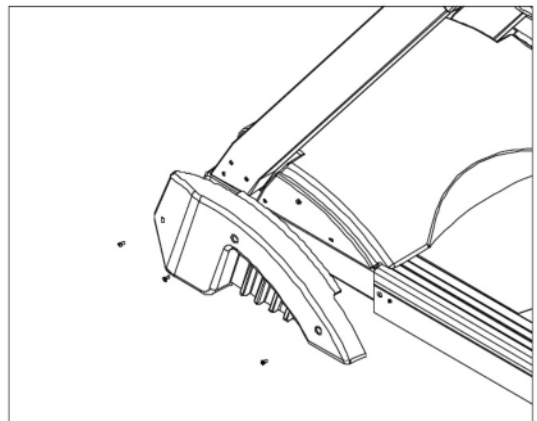

Step 7: Finish Up

1. Make sure the treadmill is leveled on the floor. Use a level tool, and adjust it if necessary.
2. Plug your power cord in and turn ON the treadmill.
3. Make sure your safety key is in place.

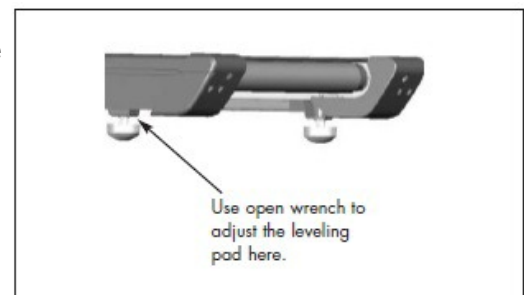

HEART RATE MONITORING DEVICES

Built in Wireless Heart Rate Receiver

Note: Chest strap transmitter does not come with this unit; contact BODYCRAFT or your dealer for purchase.

This treadmill is equipped with a built-in receiver for your heart rate monitoring. Any telemetry strap that transmits at 5Khz is compatible. To get an accurate reading using these devices, you will need to be within three feet of the console, and a minimum of four feet from others using a heart rate monitoring device.

(Note: The transmitter may fluctuate erratically if you are too close to other heart rate monitoring equipment or there is other electronics near by, such as TV, Radio...)

How to Wear Your Sensor/ Transmitter (Chest Strap)

1. Buckle one end of the chest strap onto the transmitter.
2. Adjust the band length so that the fit is snug, but not too tight.
3. Buckle the other end of the chest strap onto the transmitter.
4. Center the transmitter on your chest below the pectoral muscle (breasts).
5. Stretch the transmitter away from your chest and moisten the conductive electrode strips located next to the buckles with water.

(Note: The transmitter is on automatically when being worn. It is off when it is not connected to your body. However, as moisture may activate the transmitter, thoroughly dry the transmitter to prolong battery life.)

Erratic Heart Rate Readings:

Erratic readings on the receiver can be caused by electromagnetic disturbances. If the heart rate readings appear to be abnormal, check that your product is not within range of other strong electromagnetic signals. Common sources are televisions, computers, cars, cell phones, TV antennas and high voltage power lines (both above and below ground). Please note: Static electricity in clothing or a flapping shirt can cause electrical interference, so some items of clothing, i.e. manmade fibers, can also be the cause. Please try wetting the t-shirt in the area where the transmitter is.

If the battery of the transmitter is running low, the transmission range decreases and may cause errors similar to the ones listed above in this document.

CONSOLE

Glossary of Terms

- Idle mode = Console is reset and waiting for an entry. The display will turn into a clock and display current time if you have set up in the beginning.
Please see clock set up section for details. If no key input for 30 minutes, the console will enter sleep mode and the display will be shut off.
- Sleep mode = no key input during idle mode, the console display will be off.
You can press any key to wake up the console and return to idle mode.
- LED = The lights on the face of the console.
- Watts = The rate of energy currently being expended.
- Work = The amount of energy expended during exercise.

Default Values

- Age = 35 years
- Weight = 155 lb or 70kg for Metric system
- Program Time = 30 minutes
- Max program time = 4 hours. When continuous workout time reaches 4 hours, the treadmill will enter cool down mode.
- Speed default for Warm up and Cool down is 2.0mph.
- Incline default for Warm up and Cool down is 0%.


Note: Every time age or weight is changed, the default value setting will be updated to the last modification.

Operating Tips

- Power ON/OFF: Power ON/OFF switch is located in the front of the motor cover. Turn Power ON before use the treadmill and turn it OFF when not using treadmill.
 - In the power save mode, press any key to wake up the console and start operation.
 - Turn power off will reset the clock back to default and display 12:00.
- Program start sequence
 - Program selecting mode Press program selecting key to select a program, press "ENTER" to accept.
 - Program setting mode – console will prompt program setting for your adjustment, press UP/DOWN key to adjust the setting and ENTER to confirm.
 - Warm up mode – as soon as START key is pressed, Warm up mode will start, except Quick Start & Manual programs.
 - Program run mode – after warm up mode, the program run mode will start. The program time starts counting and workout data starts accumulating.
 - Cool down mode when program time is up, program will end and Cool down mode will begin.
 - Workout summary mode – after completing cool down mode, console will display your workout summary for your review.

- **Reset:** To reset a program during its operation, press and hold the “STOP” key for 2 seconds. When the program resets, the console returns to idle mode.
- **Pause a program:** You may interrupt or pause a program for up to 30 minutes during a work out before the console resets. To pause a program, simply press “STOP” key once.
 - The data window will display “PAUSE” during pause mode
 - The incline will stay where it is at; speed will return to 0mph.
 - Press “STOP” key one more time during Pause mode, the program will end and enter workout summary mode.
 - If no key is pressed after 30 minutes in Pause mode, the console will reset and return to idle mode.
- **Resume a program :** To resume a program back to the point of where you left off, press “START” key during pause mode.
- **Restart a program:** The user may restart a program after the program ends. Simply press “START” key during Cool Down or Workout Summary mode. The program will be started immediately without Warm up. The program default will remain the same as previous program; the calories and distance will continue accumulating.
- **Speed adjustment:** When speed adjustment is allowed by a program, you may adjust the speed from 0 mph to 10 mph by pressing SPEED UP/DOWN key.
- **Incline adjustment:** When incline adjustment is allowed by a program, you may adjust the incline from 0% to 10% by pressing INCLINE UP/DOWN key.
- **English / Metric setting:** The default Units is English system. To enter the systemswitching mode, press & hold “SPEED UP” & “SPEED DOWN” keys at the same time for 2 seconds during idle mode. The Data display will show “1” for English units or “2” for Metric units. To change it, press “UP/DOWN” key to switch the current Units. Press “ENTER” key to accept the setting and enter idle mode.
- **Beep Sound setting:** you have the option to turn the beeper on or off. To enter the beeper setting mode, press & hold “INCLINE UP” & “INCLINE DOWN” keys at the same time for 2 seconds during idle mode. The Data display will show “ON” or “OFF” to indicate current the beeper setting. Press “UP/DOWN” key to switch the setting. Press “ENTER” key to accept the setting and enter idle mode.

CONSOLE LAYOUT

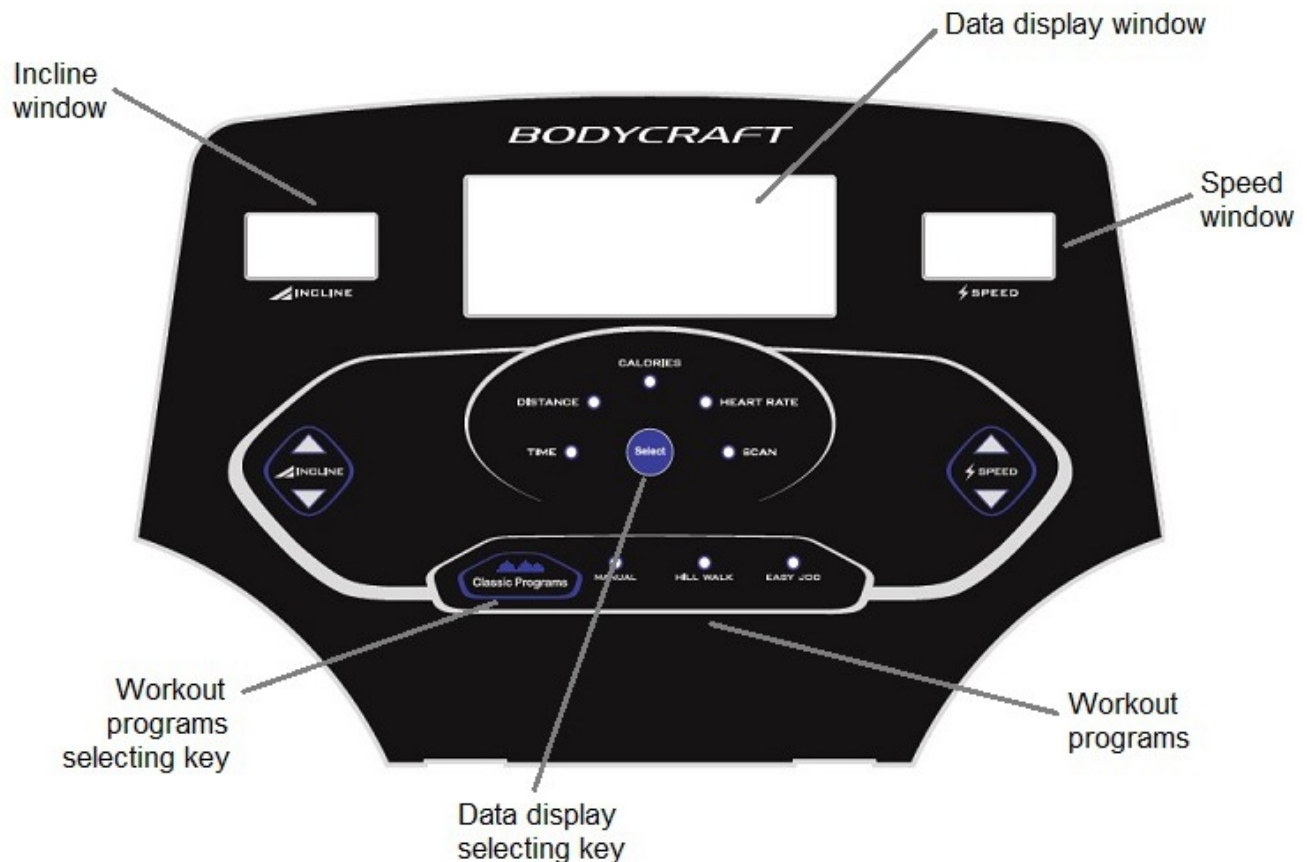

Displays:

• **Clock Set Up:**

The Data display acts as a clock during idle mode. Please run below procedures for initial or after power off to set up the clock function. Without going thru clock setting procedure, the display will stay showing "12:00" and clock function will not be activated.

- The initial Data display shows the default display of "12:00" when you first turn on the power.
- Press data display "SELECT" button once during idle mode will enter clock setting mode. And "12" will be blinking, press UP/DOWN key to adjust the hour setting from 012. Press "DOWN" key to adjust from 12:00 down if the current time is AM; and press "UP" key to adjust from 12:00 up if the current time is PM. Press "ENTER" to confirm.
- After ENTER pressed, "00" will be blinking and wait for an entry. Press UP/DOWN key to adjust the minute setting.
- Press ENTER to confirm the minute setting and start the clock function.

- **Workout Display:**

As soon as a program is started, it will start displaying the default workout data: time. You may select your favorite data displays by pressing the “SELECT” button, the LED indicator will light up to show which data is displaying.

- Time (hr: min or min: sec): The remaining of program time.
- Distance (mile or km): Total workout distance.
- Calories (kcal): Total workout calories
- Heart rate (bpm): Your current heart rate. If there is no pulse detected, it will display “ ” instead.
- Scan: if Scan function is selected, the display will show above data for 5 seconds each.

Function Keys:

- **Speed UP/DOWN keys:**

- During program setup, press Speed “UP/DOWN” key to adjust the following — age, weight & time setting.
- After program started, press Speed “UP/DOWN” key to adjust the speed.
- Speed increment = 0.1mph.

- **Incline Up/Down keys:**

- During program setup, press incline “UP/DOWN” key to adjust the following — age, weight & time setting.
- After program started, press Incline “UP/DOWN” key to adjust the incline.
- Incline increment = 0.5%.

- **Enter key:**

- After program selecting, press “ENTER” to accept the program and enter its setup mode.
- After age, weight, time.. adjustment, press “ENTER” key to accept your entry.

- **Start key:**

- Press “START” to start a program during program setup.
- Press “START” key to skip Warm up and enter program executing.
- Press “START” to restart a program during Cool Down, workout summary mode.
- Press “START” to resume a program from pause mode.

- **Stop key:**

- Press and hold “STOP” button for 2 seconds to reset the console.
- Press “STOP” to pause program run mode.
- Press “STOP” to enter workout summary during Cool Down.

- **Emergency key**

- Place the emergency clip onto your clothes properly before using treadmill.
- Treadmill will not start unless the emergency key is properly engaged.
- Pulling the emergency off the treadmill will result in power shut off and stop the treadmill immediately.
- When the emergency key is disengaged, the data display will show “SAFE” for indication.
- Pull the emergency key off the treadmill if you feel ill during use of treadmill or any other emergency occurs.



WORKOUT PROGRAMS

BELT START SEQUENCE

Belt start sequence is designed with your safety in mind. It is an indication to let you know that the treadmill motor is about to start and be prepared.

Anytime the treadmill is ready to start, the belt start sequence will appear as below:

- Data display will display “ 3, 2, 1”
- As soon as “1” appears, the belt will start at 0.5mph and slowly increase to appropriate setting and program timer will begin.

WARM UP

Getting Started

This treadmill automatically initiates a 3 minute Warm Up at the beginning of each program. It is designed to prepare your body for an intensive workout and to reduce the possibility of injury during workout.

Note: Warm Up is skipped for the Quick Start or Manual programs. Warm Up is skipped if it is a re-start program or switching from another program.

Beginning the Program

Warm Up is active as soon as the “START” key is pressed and a program is executed.

During the Program

Data Display

- Once it is started, the data display will display default Time display of “3:00” and count down. All data will start accumulating. Press “SELECT” button to switch the data displays.
- The time will display count down from 3:00.
- Speed display will show default speed of 2.0 mph.
- Incline display will show default incline of 0%.

Adjustment

- Speed = 2.0mph. Press Speed “UP/DOWN” key to adjust the speed from 0.5 — 3.5mph only.
- Incline = 0%. Press Incline “UP/DOWN” key to adjust the incline from 0 — 10%.
- “START” key can be pressed to skip the warm up and start the program immediately.

Ending the Program

- After 3 minutes, or when the Start key is pressed, Warm Up will end and the program will execute.
- There will be a beep sound to indicate the Warm up is over and the selected program begins.

Pause, Reset or Re-start a program

See Console Operating Tips section for details.

COOL DOWN

Getting Started

This treadmill is equipped with a 3minute Cool Down at the end of each program. It appears as soon as a program ends. Cool Down is designed to reduce muscle stiffness and allow your heart rate to recover.

Note: Cool Down is skipped for the Quick Start program.

Beginning the Program

Cool Down is active as soon as a program ends.

During the Program

Data Display

- Once it is started, the data display will display default Time display of “3:00” and count down. All data will continue accumulating. Press “SELECT” button to switch the data displays.
- The time will display “3:00” and start continuing down.
- Speed display will show default speed of 2.0 mph.
- Incline display will show default incline of 0%.

Adjustment

- Speed = 2.0mph. Press Speed “UP/DOWN” key to adjust the speed from 0.5 — 3.5mph only.
- Incline = 0%. Press Incline “UP/DOWN” key to adjust the incline from 0 — 10%.
- “START” key could be pressed to restart the previous program again.
- “STOP” key could be pressed to skip the cool down mode and active the Workout Summary immediately.

Ending the Program

- After 3 minutes, or when the Stop key is pressed, Cool Down will end and enter Workout Summary. See Workout summary for details.

Pause, Reset or Re-start a program

See Console Operating Tips section for details

WORKOUT SUMMARY

Getting Started

For your convenience, this treadmill incorporates a Workout Summary right after the completion of the Cool Down. It will display the total workout data for 30 seconds before the Console resets.

Beginning the Program

Workout Summary appears as soon as the Cool Down mode ends or a “STOP” key is pressed during Cool Down mode. The data display will stop counting and show the final data.

During the Program

Data Display

- Once this summary is started, the data window will default to Scan mode and display each data for 5 seconds.
 - Time display shows total Program time.
 - Distance display shows the total distance.
 - Calories display shows total calories accumulated for the workout.
 - The Heart Rate display shows average HR; if there is no HR, it will display “ ”.
 - The Incline Display shows the average incline
 - The Speed Display shows the average speed

Adjustment

- Incline setting will be the last setting; speed setting will be 0mph. Incline and speed can not be adjusted during workout summary mode.
- Press “START” key to restart this program.
- Press “STOP” key to end workout summary and enter idle mode.

Ending the Workout Summary

- After 30 seconds, or when the Stop key is pressed Workout Summary will end and console will reset.

Pause, Reset or Re-start a program

See Console Operating Tips section for details

QUICK START

Getting Started

A Quick Start program is for someone who wants to bypass the setup mode and start their workouts right away. By picking Quick Start program, you are accepting the default values for calculations. Be sure to include a Warm Up period during your workout since the Warm Up mode is skipped in the Quick Start program.

Beginning the Program

To begin this program, simply press “START” key once during idle mode.

Program Default Values

- Max program time = 4 hours
- Default Speed = 0.5mph
- Default Incline = 0%

During the Program

Data Display

- As soon as the “START” button is pressed during idle mode, this program will begin; the data display window will display the default workout data of “time”. Press “SELECT” button to switch the data displays.
- Time display will show 00:00 and count up.
- Speed display will show default speed of 0.5 mph.
- Incline display will show default incline of 0%.

Adjustment

- Press Speed “UP/DOWN” key to adjust the speed from 0 — 10mph. The speed display will update the current & future speed accordingly.
- Press Incline “UP/DOWN” key to adjust the incline from 0 10%. The incline display will update the current & future incline accordingly.

Ending Quick Start

- When the “STOP” key has been pressed twice during Quick Start, this program will end and enter workout summary mode. See workout summary mode for details.
- There will be a beep sound to indicate the program ended.

Pause, Reset or Re-start a program

See Console Operating Tips section for details.

CLASSIC PROGRAMS

MANUAL PROGRAM

Getting Started

You can build your own program with Manual program. Be sure to include a Warm Up period during your workout since the Warm Up mode is skipped in the Manual program.

Beginning the Program

To begin this program, press “Classic Programs” key during idle mode until “Manual” program LED indicator lights up

Accepting Default values or Entering the program setting mode

When the Manual program LED lights up, it indicates you are about to select the Manual program:

- Press “START” key to accept current default values and begin Manual program workout.
 - Default Time = 30 minutes
 - Default Speed = 0.5mph.
 - Default Incline = 0%.
- Or press “ENTER” to enter program setup mode. All three data windows will light up with default values. Please follow below steps to set up your personal data.

Entering Age (Incline display)

1. The Incline window will flash “35” or last entered value and wait for your entry.
2. You may press “UP/DOWN” key to adjust the age.
3. After age adjustment, press “ENTER” to accept and enter Weight adjustment.

Entering Weight (Speed display)

1. If Enter key is pressed after age adjustment, the Speed display will flash “155” or last entered value and wait for your entry.
2. You may press “UP/DOWN” key to adjust the weight.
3. After weight adjustment, press “ENTER” to accept and enter Time adjustment.

Entering Time (Data display)

1. If Enter key is pressed after weight adjustment, the Data window will flash “30:00” and wait for your entry.
2. You may press “UP/DOWN” key to adjust the time up to 4:00 (hr: min).
3. After time adjustment, press “ENTER” or “START” to accept and begin this program.

(Note: you may press START key anytime to skip the setup and begin the workout immediately.)

During the Program

As soon as the “ENTER” or “START” key is pressed, the Manual program will start.

Data Display

- When the program is started, the data display window will display Time as the default.
- Press “Select” button to switch the data displays.
- Time display will show the selected program time and count down.
- Speed display will show default speed of 0.5 mph.
- Incline display will show default incline of 0%.

Adjustment

- Press Speed “UP/DOWN” key to adjust the speed from 0 — 10mph. The speed display will update the current & future speed accordingly.
- Press Incline “UP/DOWN” key to adjust the incline from 0 10%. The incline display will update the current & future incline accordingly.

Ending the Program

- When selected program time is up, this program will end and Cool down will be active. See Cool down section for details.
- If STOP key is pressed twice during program run mode, the program run mode will end and enter workout summary mode.
- There will be a beep sound to indicate the program ended.

Pause, Reset or Re-start a program

See Console Operating Tips section for details.

HILL WALK

Getting Started

The Hill Walk program simulates a hill climb exercise with a preset hill profile and slow speed to walk. This preset exercise profile will take you through the up hill climb and down hill glide.

Beginning the Program

To begin this program, press “Classic Programs” key during idle mode until “Hill Walk” program LED indicator lights up.

Accepting Default values or Entering the program setting mode

When Hill Walk LED lights up, it indicates you are about to select the Hill Walk program:

- Press “START” key to accept current default values and begin Hill Walk program workout.
 - Default Time = 30 minutes
 - Default segment time: this program is preset with 15 segments. Each segment time = XX (program time) /15 or 1 minute if the selected program time is less than 15 minutes.
 - Default speed = 3.0mph
 - Default incline:

Segment	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Incline	0.0	1.0	2.0	2.5	0.5	2.0	4.0	2.5	2.0	1.0	2.5	4.0	2.0	1.0	0.0

- Or press “ENTER” to enter program setup mode. All three data windows will light up with default values. Please follow below steps to set up your personal data. (Same as Manual program setup)
 - Enter Age
 - Enter Weight
 - Enter Time

During the Program

As soon as the “ENTER” or “START” key is pressed, the Warm Up will be active. See Warm Up mode section for details.

Data Display

- When Warm Up mode is completed, this program will begin; the data display window will display Time as the default.
- Press “Select” button to switch the data displays.
- Time display will show the selected program time and count down.
- Speed display will start with speed of 3.0 mph.
- Incline display will start with incline of 0%.

Adjustment

- Press Speed “UP/DOWN” key to adjust the speed anytime during the program.
- Press Incline “UP/DOWN” key to adjust the incline anytime during the program. The incline of current segment will be updated to the new setting.

Ending the Program

- When selected program time is up, this program will end and Cool down will be active. See Cool down section for details.
- If STOP key is pressed twice during program run mode, the program run mode will end and enter workout summary mode.
- There will be a beep sound to indicate the program ended.

Pause, Reset or Re-start a program

See Console Operating Tips section for details.

EASY JOG

Getting Started

The Easy Jog program is designed for a beginner who just started running. It varies speed throughout the program to help you getting accustomed to running. You can gradually increase the speed or incline over time as you improve.

Beginning the Program

To begin this program, press “Classic Programs” key during idle mode until “Easy Jog” program LED indicator lights up.

Accepting Default values or Entering the program setting mode

When the Easy Jog LED lights up, it indicates you are about to select the Easy Jog program:

- Press “START” key to accept current default values and begin Easy Jog program workout.
 - Default Time = 30 minutes
 - Default segment time: this program is preset with 15 segments. Each segment time = XX (program time) /15 or 1 minute if the program time is less than 15 minutes.
 - Default incline = 0%
 - Default speed:

Segment	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
Speed	4.0	4.0	4.3	4.6	4.2	4.8	5.0	4.4	4.2	4.5	4.0	4.0	4.5	4.5	4.0

- Or press “ENTER” to enter program setup mode. All three data windows will light up with default values. Please follow below steps to set up your personal data. (Same as Manual program setup)
 - Enter Age
 - Enter Weight
 - Enter Time

During the Program

As soon as the “ENTER” or “START” key is pressed, the Warm Up will be active. See Warm Up mode section for details.

Data Display

- When Warm Up mode is completed, this program will begin; the data display window will display the default workout data of “time”. Press “Select” button to switch the data displays.
- Time display will show the selected program time and count down.
- Speed display will start with speed of 4.0 mph.
- Incline display will start with incline of 0%.

Adjustment

- Press Speed “UP/DOWN” key to adjust the speed anytime during the program. The speed of the current segment will be updated to the new setting.
- Press Incline “UP/DOWN” key to adjust the incline anytime during the program.

Ending the Program

- When selected program time is up, this program will end and Cool down will be active. See Cool down section for details.
- If STOP key is pressed twice during program run mode, the program run mode will end and enter workout summary mode.
- There will be a beep sound to indicate the program ended.

Pause, Reset or Re-start a program

See Console Operating Tips section for details.

THE BODYCRAFT 200M WARRANTY

BODYCRAFT warrants its products to be free of defects in material and workmanship for the time stated below to the original purchaser.

Residential Warranty: Lifetime* Frame and Drive Motor, 12 years Parts & Electronics and 1 years Labor.

This warranty is valid only in accordance with the following conditions:

- The warranty begins on the original date of purchase at retail and ends when the original owner disposes of it, either through sale, gift, or otherwise.
- This warranty is available only for purchases made within the USA and Canada, and currently residing in the USA or Canada.**
- In order for the warranty to be valid for the terms listed below, the product must be registered with BODYCRAFT within 30 days of purchase.
- The warranty is not transferable and does not cover normal maintenance.
- This warranty applies to Residential use only and is void when used in a Commercial environment.
- This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or owner's manual specifications, or failure to provide reasonable and necessary maintenance as outlined in the owner's manual.
- This warranty does not cover damage resulting from shipping, accident, misuse, water, tampering, unreasonable use, unauthorized or improper repairs and alterations.
- This warranty does not cover normal wear and tear.
- BODYCRAFT cannot guarantee that the heart rate system on its products will work for all users. Heart rate measurement accuracy varies based on a number of factors, including the user's physical condition, the heart rate measurement method is used, external interference, and other factors that may influence heart rate acquisition.
- If the item exhibits such a defect, BODYCRAFT will, at its option, repair or replace it without cost for parts. Shipping and handling charges may apply. (BODYCRAFT may request a return of the part(s) or photographic evidence of the damaged part(s) prior to replacement at the owner's expense).
- Proof of purchase must be supplied to validate warranty and the product must have been registered with BODYCRAFT via the included warranty card or online at www.BODYCRAFT.com.
- This warranty is in lieu of all warranties, expressed or implied, and/or all other obligations or liabilities on our part and we neither assume nor authorize any person to assume for us any other obligation or liability in connection with the sale of the BODYCRAFT 200M. Under no circumstances shall we be liable by virtue of this warranty or otherwise for damage to any person or property whatsoever for any special, indirect, incidental, secondary or consequential damage of any nature whatsoever arising out of the use or inability to use the BODYCRAFT 200M.

** Lifetime is defined as the period the original owner owns it, or 5 years after the product has been discontinued.*

*** If you do not reside within the USA or Canada, please contact your local BODYCRAFT distributor for details specific to you.*

MAINTENANCE

CAUTION – FOR SAFE OPERATION

Always inspect hardware prior to any exercise session. Turn power switch to the “OFF” position and unplug electrical cord from the outlet before attempting maintenance. Inspect unit for loose parts and frayed wires. Repair or replace any damaged or worn parts, tighten all loose hardware as necessary.

After training, always wipe down your treadmill. Perspiration that continuously settles on frame, pads or casing may eventually cause rust or damage to the unit. Damage resulting from lack of proper maintenance will not be covered under warranty.

A proper maintenance will extend the life and ensure a better performance of the treadmill. Below you will find our recommendations for the maintenance of your treadmill:

Overall Cleaning

Use a damp cloth to clean outer surface and console of the treadmill. **DO NOT USE PETROLEUM BASED PRODUCTS TO CLEAN ANY PART OF THE TREADMILL.** Use a clean, lint free, cloth to occasionally clean the deck surface.

Belt/Deck Maintenance

Lubrication to the deck is very important to your treadmill. It will reduce the wear of the deck and maintain the smooth running surface. Although this treadmill has been prelubed at the factory, periodic lubrication is still necessary. It is difficult to predict exactly when the belt will need lubrication, one of the most common symptoms is a hesitation or pause of the belt when you set your foot. Here are some of the tips for deck lubrication:

- Wipe entire deck surface with a clean, lint free cloth.
- Lubricate deck with the BODYCRAFT Lubrication Kit (which can be purchased through your BODYCRAFT website.)
- Follow the instructions as specified in the Lubrication Kit.
- Lubricate your treadmill approximately every 6 months of normal use

Belt Adjustment

Proper belt adjustment is important for smooth and safe operation of the treadmill. If the belt is too loose, you will feel a slight hesitation each time you take a step. (If this symptom occurs, first turn the treadmill off and try lubricating the deck/belt — see Belt/Deck Maintenance.)


The adjustment screws must be tightened evenly in order to adjust the belt properly. The adjustment screws are located at the rear of the treadmill in the end caps.

Both adjustment screws should be tightened 1/4 turn in a clockwise direction with a wrench and the belt checked for slipping after each adjustment. If the belt continues to slip, repeat this process until the belt stops slipping. Make sure to only turn the adjustment screws 1/4 turn each time until the slipping stops. This will insure that you do not over-tighten the rollers. Over-tighten the rollers may cause serious damage to the treadmill.

Belt Alignment

If the belt tracks too close to one side, loosen the adjustment screw on the opposite side, turning it counterclockwise 1/4 turn. Restart the treadmill and run it at 5 mph / 8 kph for 1 to 2 minutes to insure the belt will stay in the center. Repeat the procedure if necessary.


If noises develop or malfunctions occur, contact your authorized BODYCRAFT fitness dealer.

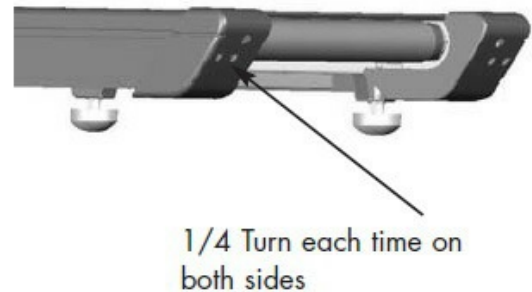

SERVICE PARTS LIST

ID CODE	DESCRIPTION
2MEN	LEAD WIRE ASS'Y, 200m
2HXG	WHEEL SET/pair, 200/400/800m
2SR3	END CAP SET (L & R), 200/400/800m
2SR5	FRONT COVER, 200/400/800m
2SR6	SIDE COVER, LEFT, 200/400/800m
2SR7	SIDE COVER, RIGHT, 200/400/800m
2SQX	CONSOLE MAST COVER ASS'Y, LEFT, 200m
2SQY	CONSOLE MAST COVER ASS'Y, RIGHT, 200m
2HX8	ELEVATION MOTOR, 200/400m
2HY3	ELASTOMERS (6pcs), 200/400/800m
2HY4	SIDERAIL GUIDE SCREWS (8PCS), 200/400/800m
2HY5	BELT TENSION SCREW, 200/400/800m
2HX6	FRONT ROLLER ASS'Y, 200/400/800m
2HX5	REAR ROLLER ASS'Y, 200/400/800m
2HXZ	REAR LEVELERS, 200/400/800m
3K45	CONTROL BOARD ASS'Y, 200m
3K44	DRIVE MOTOR ASSY W/BELT, 200m
3K4W	CONSOLE ASS'Y, 200m
2LKU	POWER CORD, 110V, 200/400/800m
0LSG	CIRCUIT BREAKER, 200/400/800m
2HY6	RPM SENSOR, 200/400/800m
26S4	POLY V DRIVE BELT, 200/400/800m
3K3G	OVERLAY, 200m
2GD6	SAFE KEY ASS'Y, 200/400/800m
3JQJ	RUNNING BELT, 200/400m
2FPC	RUNNING DECK, 200/400m
3KHN	DECAL ASSY, 200m
3KHG	MOTOR COVER W/DECALS, 200m
3KH8	STEP RAIL ASS'Y, LEFT, 200/400m
3KH9	STEP RIAL ASS'Y, RIGHT, 200/400m
3KHC	HAND RAIL, L & R, 200/400/800m
2SQP	UPPER CONSOLE COVER, 200m
2SQR	LOWER CONSOLE COVER, 200/400m
3K3H	UPPER DISPLAY BOARD, 200m
3KGK	KAY PAD BOARD, 200m
3K3J	KEY PAD, 200m
2LW5	MEMBRANE KEYS, 200m
2LW4	MEMBRANE KEYS, 200m
2FWN	UPPER CONSOLE WIRE HARNESS, 200m
2FTX	HANDLEBAR ASS'Y, 200m

SERVICE PARTS DRAWING

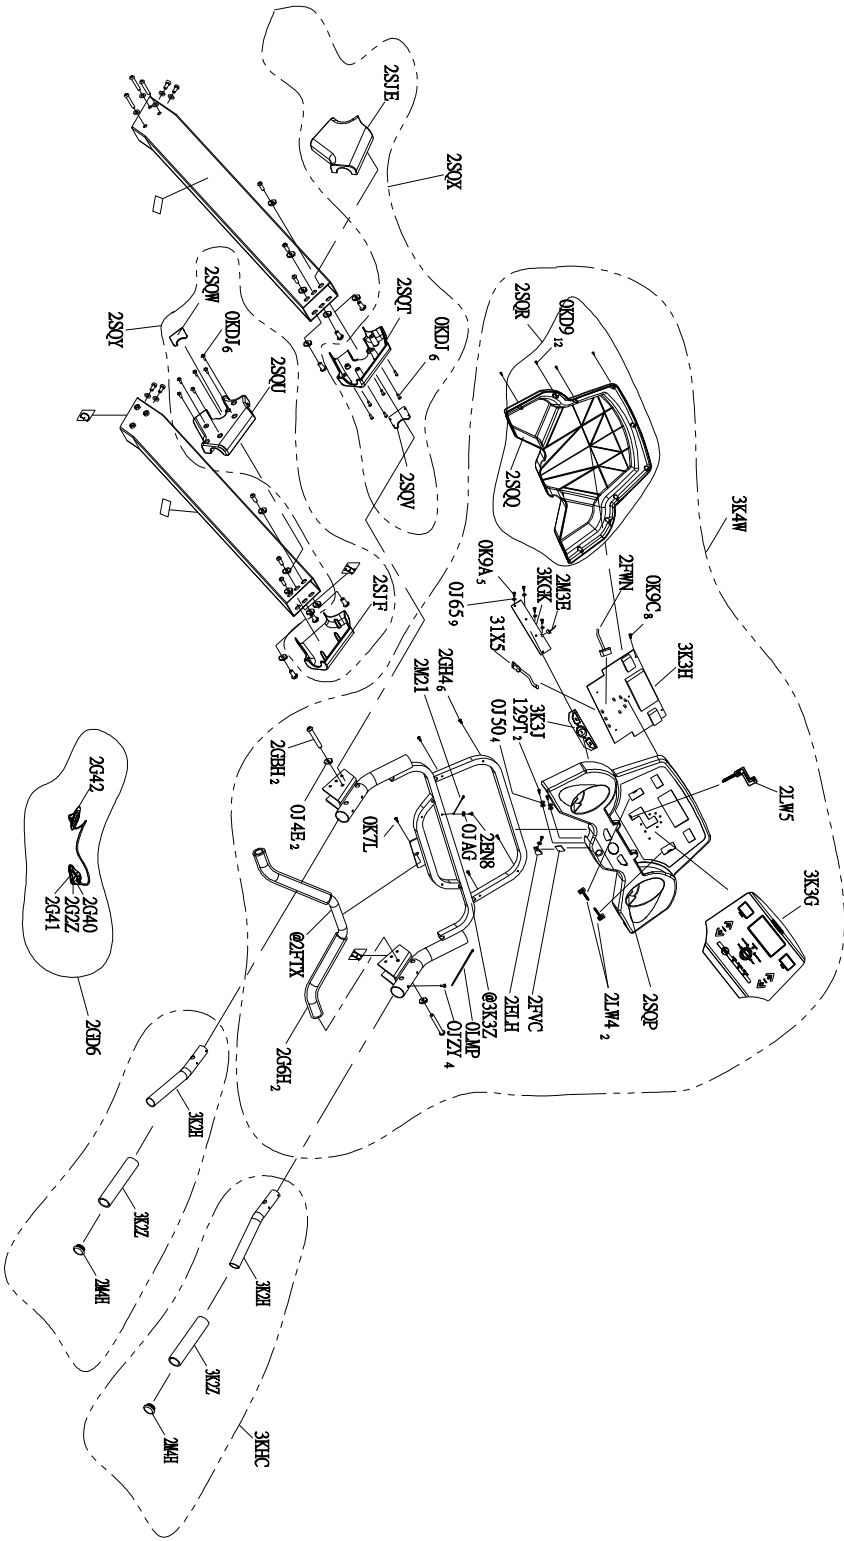

SERVICE PARTS DRAWING

