


BÖTE



MAGNEBOOM SURGE

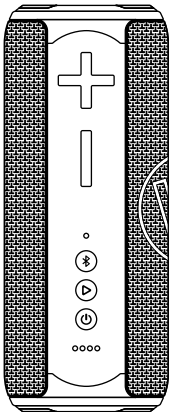


SAFETY INSTRUCTIONS

Read all instructions

Only charge with devices rated and marked with 5V to avoid damage to the speaker. Do not open up the speaker, it voids the warranty and may damage the product. Rechargeable batteries have a limited number of charge cycles. Battery life and number of charge cycles varies by use and settings. Never place the speaker close to high temperature heat sources. To keep the warranty valid, never try to repair the product yourself.

PARTS AND FUNCTIONS

1. Bluetooth indicator
2. +: Volume up button: next song, increase the volume
3. -: Volume down button: previous song, decrease the volume
4. Bluetooth button: switch the playing mode
5. Pause button: play, pause, answer call, TWS
6. Power button: power on/off, Siri, reset
7. Battery level indicator
8. TF card slot
9. AUX IN port
10. Type-C charging port
11. Microphone

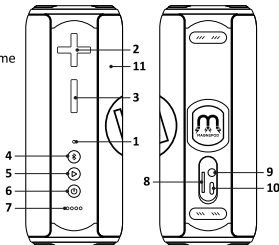

BATTERY

A built-in rechargeable lithium battery powers the speaker.

CHARGING

Connect charging cable to the charge input and to a USB port on your computer or a USB charger. The charging LED is red during charging. The LED turns off when fully charged. It is recommended to charge 10 minutes before powering on if not used in the last 7 days, then you can continue to use while charging.

POWER ON/OFF

Power on: Long press power button 3 seconds to power on the speaker, then the Bluetooth indicator light is on and you can connect Bluetooth devices.

Power off: Long press power button 3 seconds to power off the speaker, and then Bluetooth indicator will turn off.

SIRI FUNCTIONALITY

Short press power button to activate SIRI (IOS), also supports Huawei intelligent voice assistant.

CONNECT THE SPEAKER

Turn on the speaker, the Bluetooth indicator flashes white, on your device search for Bluetooth devices. Select the speaker from the list. It will give an indication sound when the connection is successful, the Bluetooth indicator will turn solid white. Only one Bluetooth device can be connected at the same time. If you want to connect another device to the speaker, then first disconnect the current one.

DISCONNECT THE SPEAKER

When it's connected via Bluetooth: long press Bluetooth button to disconnect.

RECONNECT THE SPEAKER

Some Bluetooth devices support automatic reconnection, with those devices the speaker will automatically reconnect. The speaker will not automatically reconnect on devices that do not support automatic reconnection. Long press Bluetooth button to connect to the last disconnected device.

PLAYING MODE

Short press Bluetooth button to switch between different playing mode: BT, AUX, TF.

PLAY MUSIC USING MICRO SD CARD

Connect a micro SD card and power cable to the speaker.

AUDIO CABLE CONNECTION

Power the speaker on. Connect a 3.5 mm audio cable to the speaker and your device.

PAUSE BUTTON FUNCTIONALITY

Short Press: 1) Music playback status: play, pause function

2) When there is an incoming call: answer the call

3) When you're receiving the call: hang up the phone call

Long Press: 1) When you're calling: Press 2 seconds to reject the call

2) Press 2 seconds to enter TWS connection, once connected, press 2 seconds to disconnect TWS connection

Double Press: When connected via Bluetooth: redials the last call

CHANGE VOLUME AND SONG

When listening to music

Increase Volume: Short press on the "+" button

Decrease Volume: Short press on the "-" button

Previous Song: Long press on the "⏮" button

Next Song: Long press on the "⏭" button

HANDS-FREE FUNCTIONALITY

1. While connected via Bluetooth, the speaker will function as a speaker phone.

2. Short press the pause button to answer a call on the speaker. After the call is ended, music will resume playing.

3. Long press the pause button to reject an incoming call.

4. When you connect your phone, press the pause button twice rapidly to call back the last contact called.

RESET FUNCTIONALITY

Hold the pause button for 8 seconds to automatically reset the speaker and turn it off.

AUTOMATICALLY TURN OFF FUNCTIONALITY

The speaker will automatically turn off in 10 minutes when no music is playing and Bluetooth is disconnected.

TECHNICAL PARAMETERS

- Model: Surge
- Speaker: Ø66mm 4Ω 18Wx1
Ø45mm 4Ω 6Wx2
- Charging Time: 3 hours
- Input: 5.0V=2.0A
- Product Weight: 974g
- Bluetooth: V5.0
- Built-in Rechargeable Battery: Li-on, 7.3V, 2600mAh
- Playing Time: 8 hours
- Product Size: 90 x 94.5 x 223.6mm
- Range: Up to 10m
- Waterproof Level: IPX7

INCLUDED ITEMS

- One (1) MAGNEBOOM™ Surge Speaker
- One (1) Product Manual
- One (1) USB-C Cable

TWS CONNECTION

- (1) Turn on both speakers.
- (2) Press and hold the Play/Pause-button on one of the speakers for about 2 seconds or until you hear a “beep” sound. This speaker will become the primary speaker.
- (3) Release Play/Pause button. It can take a few more seconds for both speakers connect to each other. Check the indicator lights to distinguish Left and Right Channels: The white light on the Left Channel will flash every 3 seconds (the primary speaker); the white light on the Left Channel will be solid.
- (4) Go into the Bluetooth menu on your smartphone and pair the speakers with your phone by selecting the speaker model number. Only 1 number is displayed, which is both speakers combined.

TWS DISCONNECTION

1. Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear a “beep” sound.

EXPLANATION

1.  this symbol indicates that this product is only suitable for non-tropical climates.
2. This product contains an internal lithium battery. Never expose lithium batteries to fire or excessive heat.
3. Note: If the battery is replaced, please use the same type or equivalent type of battery, otherwise an explosion may occur.

FAULT AND MAINTENANCE

First Fault: Connection Failed

Solution:

- (1) Please check whether the multifunction indicator light flashes white. Power on the speaker if the light is not on. Charge the speaker if the light is still not on.
- (2) Turn off the other Bluetooth devices in the surrounding area. This may result in Bluetooth search issues.
- (3) Restart speaker to restart Bluetooth search function.

Second Problem: Sound Breaks Up / Goes In and Out

Solution:

- (1) The playing device and the speaker may be too far apart, the effective Bluetooth connection distance is 8-12 meters / 24-36 feet.
- (2) Ensure there is not any obstacles between the playing device and speaker.
- (3) Be sure the playing device and/or speaker is not in a low state of charge.

NOTES BEFORE USE

This product is designed with full attention for safety performance. To ensure safe operation, please follow the following rules:

1. Place the speakers in a stable position to avoid it falling and causing damage or personal injury.
2. Do not drop, disassemble, open, crush, bend, puncture, or burn the speaker.

3. Do not place close to any heat source such as radiators, heating equipment, stoves, or other heat-generating equipment.
4. If damage does occur, only have the speaker professionally repaired.
5. Before cleaning the speaker (by wiping with a dry cloth), set the power switch to the off position and unplug the power cord from the power outlet.
6. For hearing health considerations, please adjust the sound to a suitable level.

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

TROUBLESHOOTING

The speaker does not turn on?

Recharge your speaker.

The speaker does not turn off or does not respond?

Reset your speaker: hold the power button for 6 seconds to automatically reset the speaker and turn it off.

There is no sound?

Adjust the volume. Make sure that your Bluetooth device is within range. Ensure there is no obstacles in the way that can block/disturb the signal. Check via the devices Bluetooth connection to confirm the speaker is connected to the device.

There is poor sound quality?

Move the device closer to the speaker or try removing obstacles between them.

Cannot connect the device with the speaker?

Disconnect other connected devices and try again. You can force a disconnection by moving out of Bluetooth range (10 m).

In order to avoid harming the product performance, please do charge your device each 3 months at least.

MAGNEBOOM™ WARRANTY INFORMATION

For the original retail purchaser ("Consumer"), BOTE® provides a limited 1 Year warranty from the date of purchase against material or manufacturing defects of parts, accessories, and gear.

This limited warranty does not apply to:

- Normal wear and tear and aging of product.
- Cosmetic flaws or variations in colors.
- Product purchased second-hand or used
- Use in excess of the manufacturers recommended maximum load capacity.
- Failure to comply with pressure recommendations, assembly / disassembly and handling procedures.
- Any puncture, cut or abrasion sustained in normal use or damage from unreasonable uses or improper storage.
- Product damaged by extreme weather or environmental conditions.
- Product damaged while in possession of a freight carrier, a dealer, Consumer, or any party other than BOTE®.
- Product damaged by accident, neglect, improper use or handling.
- Product designated as Prototypes.
- Product determined to have been used for any activity other than an activity which is customary for the product.
- Product that has been structurally or dimensionally altered or modified.
- Product used for commercial or rental purposes.
- Any product that has been lost or stolen

This limited warranty excludes all other warranties, expressed or implied, including implied warranties of merchantability and fitness for a particular purpose, with regard to the applicable part or accessory. Some state, country, or provincial laws do not allow the exclusion of certain implied warranties, so the above exclusion may not apply to you. This limited warranty excludes any incidental or consequential damages or expenses resulting from any defects. BOTE®'s aggregate liability shall be limited to an amount equal to Consumer's original purchase price paid for the defective product. Some state, country, or provincial laws do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion may not apply to you. To the extent any limitation or exclusion contained herein is contrary to any country, state, or provincial law, such limitation or exclusion shall be severable and all other terms herein shall remain in full force and effect and are valid and enforceable. This warranty gives you specific legal rights and you may also have other rights. For Consumers who are covered by state, country or provincial consumer protection laws or regulations, the benefits from this warranty are in addition to all rights conveyed by such consumer protection laws.



BOTEBOARD.COM

888.855.4450 | support@boteboard.com

12598 US Highway 98 W, Suite 200

Miramar Beach, FL 32550 USA

© BOTE LLC. All Rights Reserved // 081225