

BRAUN










90931955/IV-16



Type 2506

www.braun.com

       PT5090

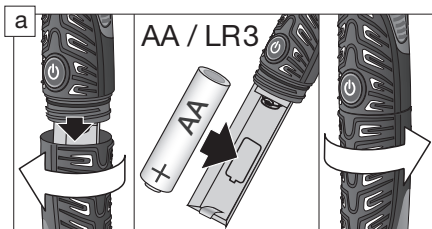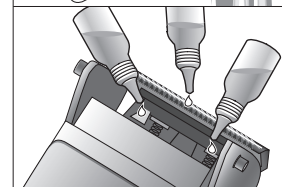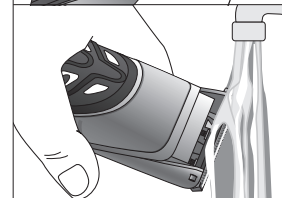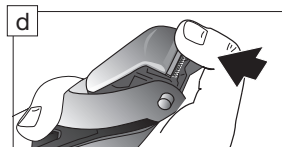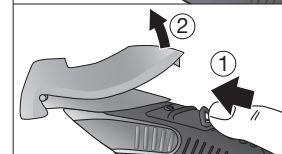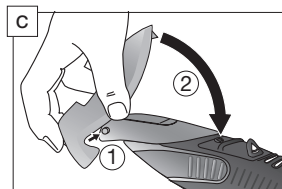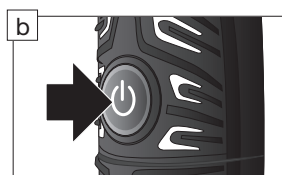

Thank you for purchasing a Braun product.

We hope you are completely satisfied with your new Braun product.

If you have any questions, please call:

US residents

1-800-BRAUN-11

1-800-272-8611

Please read the use instructions carefully and thoroughly before using the appliance.

Warning

- This appliance is not a toy. Keep the device out of reach of children and pets.
- Do not use the appliance on irritated or inflamed skin.
- Never use the appliance with a damaged cutting element.
- For hygienic reasons, do not share this appliance with other persons.
- Keep batteries away from children and pets. If swallowed, consult a physician at once. For information on treatment call (202) 625-3333.
-  This appliance is suitable for use in a bath or shower.

Batteries

This appliance operates with one AA 1.5 V battery. For best performance, use an alkaline manganese battery (type LR 6, MN 1500, AM 3, AA). Different types, brands, chargeable and non-rechargeable, new and used batteries are not to be used together.

When action (e.g. speed/vibration) reduces, change the battery promptly. Make sure the appliance is turned off.

Only replace batteries when the appliance is completely dry.

To insert/replace the battery turn trimmer end (3) counter clockwise and gently pull.

When replacing batteries, follow symbols (+/-). Insert AA battery with (-) pole up.

Replace trimmer end and gently turn clockwise until trimmer end is securely in place.

Batteries may explode or leak and cause burn injury if recharged, disposed of in fire, mixed with a different battery type, inserted backwards or disassembled.

If batteries leak, wipe device with a damp cloth and wash hands.

If any material gets in eyes, contact a physician immediately.

Remove the batteries before storing your device for extended periods.

Using your trimmer

The appliance can be used with or without trimming comb.

To turn power on, push button (2) to activate the appliance.

To attach one of the trimming combs (1 = 2 mm / 2 = 4 mm / 3 = 6 mm) (5) insert at 90°, then pivot and click.

To remove trimming comb slide release button (4) forward.

Cleaning and maintenance

For waterproof cleaning open the trimmer door (1) by pressing firmly against the trimmer teeth. Rinse teeth under warm running water after each use.

Put a few drops of hair trimmer oil (not included) to help maintain the trimmer performance at least after every battery change.

Subject to change without notice.

At the end of their life, empty batteries and the appliance should not be discarded with household waste. Please dispose of them according to national or local regulations.

FOR USA ONLY

2 year limited warranty

Braun warrants this Braun appliance to be free of defects in material and workmanship for a period of two years from the date of original purchase.

If the appliance exhibits such a defect, Braun will, replace it for the consumer without charge.

Please call 1-800-Braun 11 (800-272-8611) to be referred to the authorized Braun Service Center closest to you.

This warranty does not cover damage resulting from accident, misuse, abuse, dirt, water, tampering, unreasonable use, normal wear, servicing performed or attempted by unauthorized service agencies or failure to provide reasonable and necessary maintenance, including recharging.

ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO 2 YEARS FROM DATE OF ORIGINAL PURCHASE. IN NO EVENT WILL BRAUN BE RESPONSIBLE FOR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state.