

BRAUN

NEVO



21341408/VIII-25



Scan Me!




Type 5799
Type 5432
Type 5811

www.braun.com
www.service.braun.com


EN/ANZ



 - 1** Shaving head ———
NEVO-S/NEVO-B

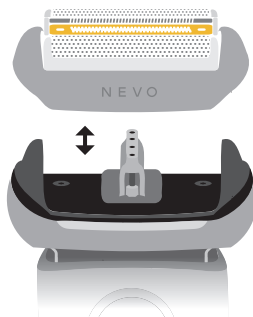

- 1a** NEVO Comfort Head 94PS

 


- 1b** NEVO Skin Care Head 94HY



- 2** Display ———

 - 3** On/off button ———

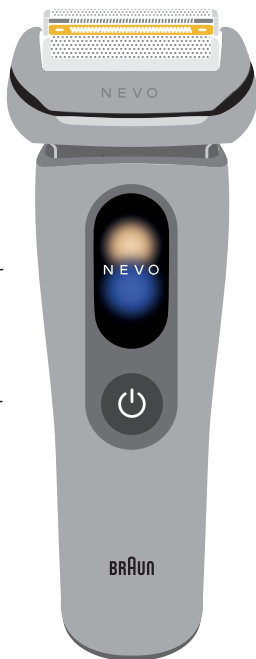

ⓘ Accessories, features and design may vary by model

2a Shaving head status



2b Shaving head replacement (G ► p.13)



2c Cleaning status



2d Cleaning in cleaning station (L ► p.17)



2e Battery status



2f Charging (A ► p.7)




2g Unplug before use (B ► p.8)



2h Travel lock (F ► p.12)



2i Overheat/Low temperature (H/I ► p.14)

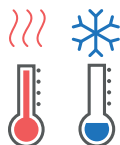

2j Replace cleaning cartridge (L.3 ► p.19)



4 Long hair trimmer

5 Contacts
for cleaning station (9) /
charging case (10) usage


6 Release button
(I) to lock the shaver head
(II) to extend the longhair
trimmer

7 Power socket

8 Power supply

9 Cleaning station
7in1 NEVO Care System
(► p. 6 / p. 17 - 19)

10 Charging case
NEVO Power Travel Case
(► p. 21 - 24)

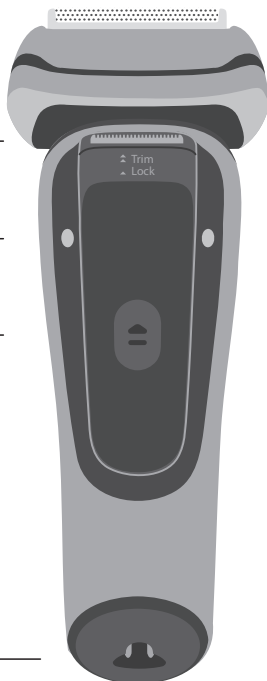

ⓘ Accessories, features and design may vary by model

9 Cleaning station
7in1 NEVO Care System

9.1 Station-to-shaver contacts
Need to align with the shaver contacts

9.2 Display



— Low level of cleaning fluid



— Status light



— Cleaning programs




9.3  Start button

9.4 Release button
for cleaning cartridge
exchange





9.5 Power socket









9.6 Cleaning cartridge (CCR)

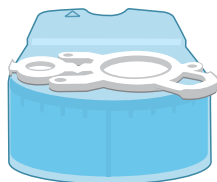


 Accessories, features and design may vary by model

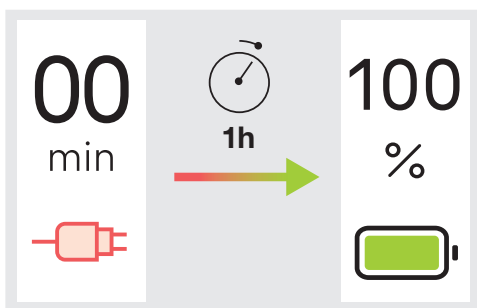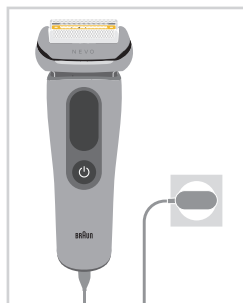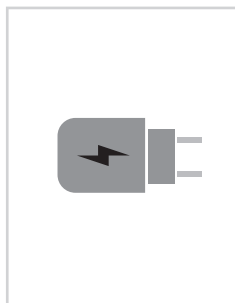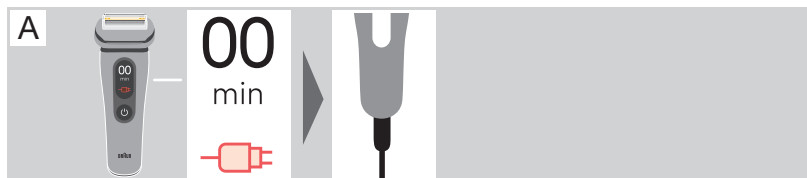




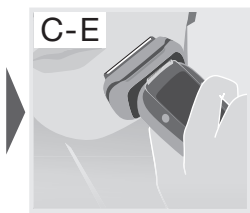
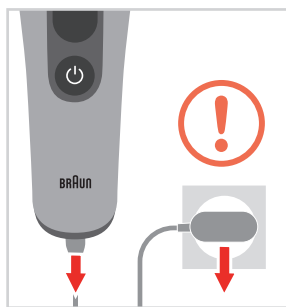
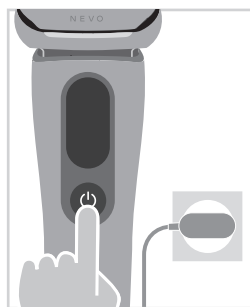


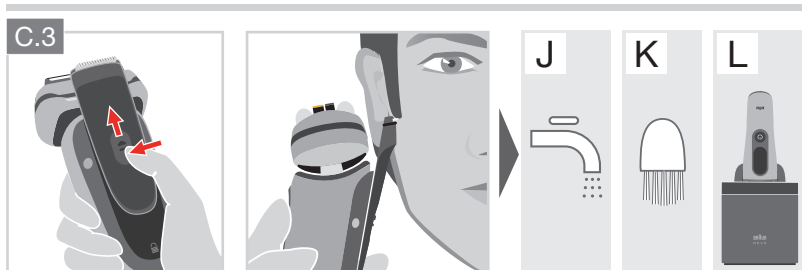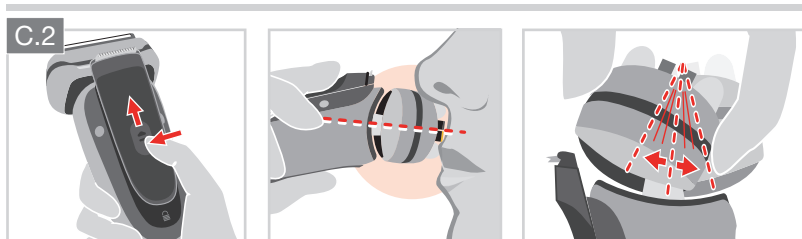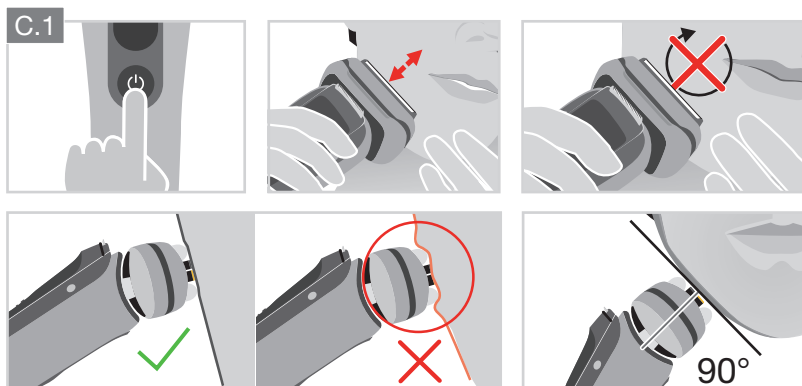

D

 








NEVO Comfort Head (1a)

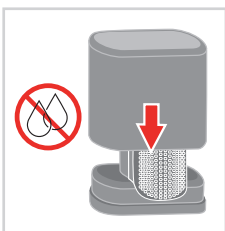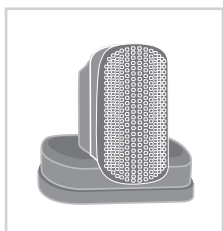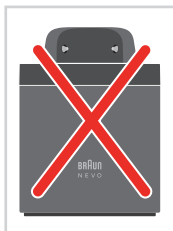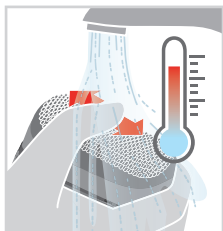    
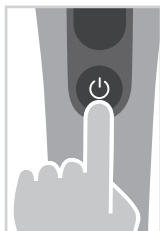 
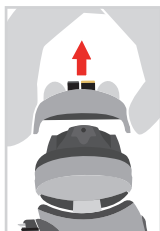 





E







                 NEVO Skin Care Head (1b)

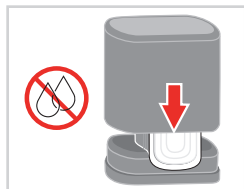
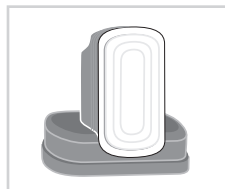
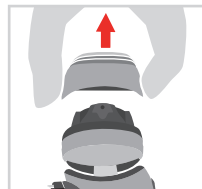
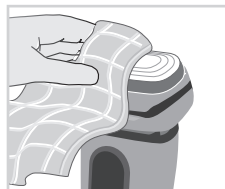
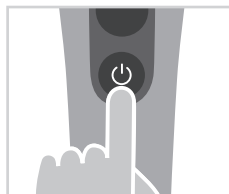
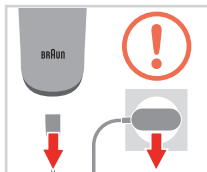
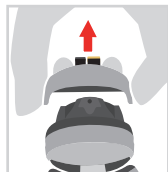


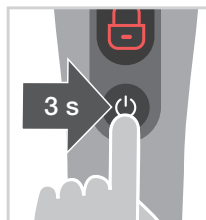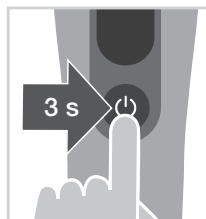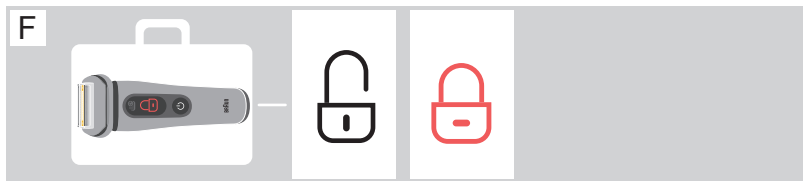


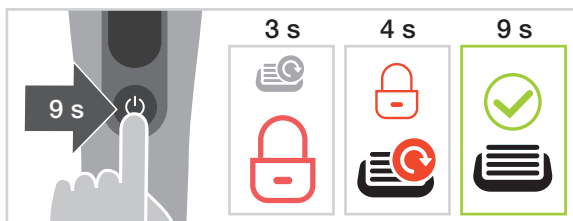
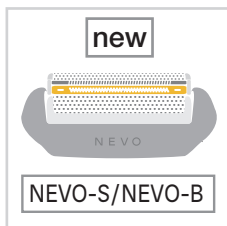
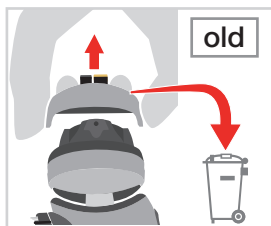




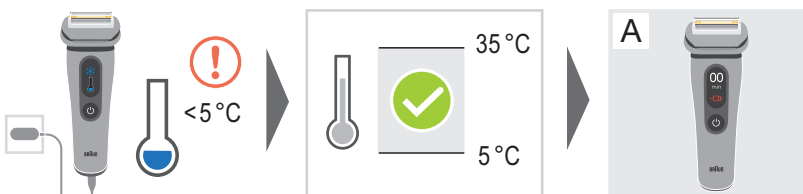
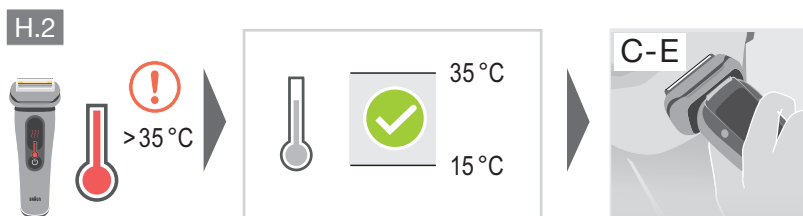
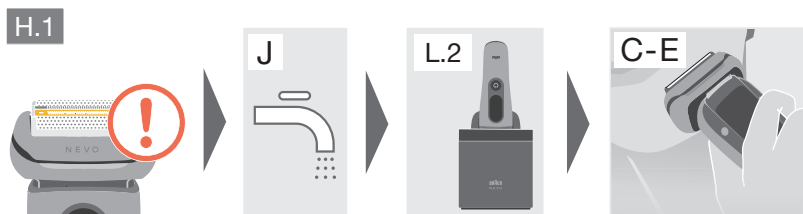
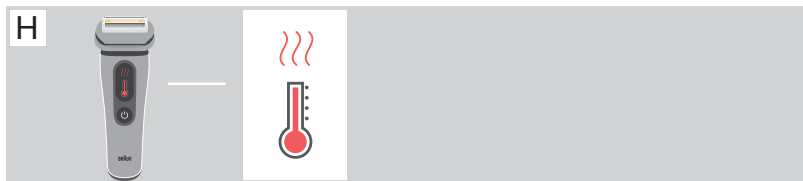


J

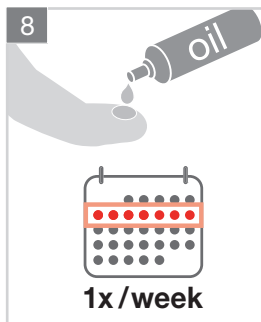 
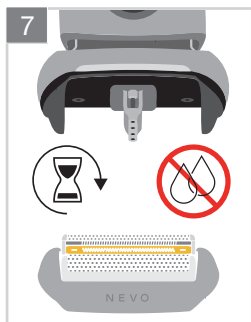 
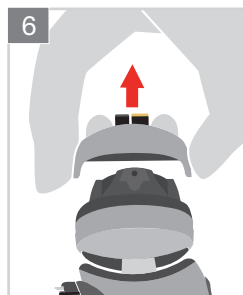 
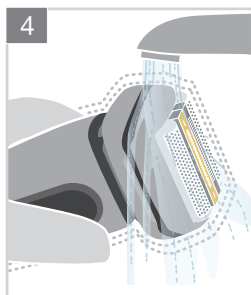 
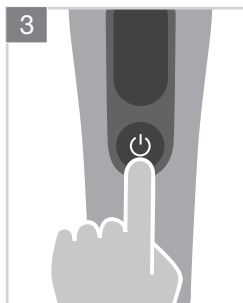 
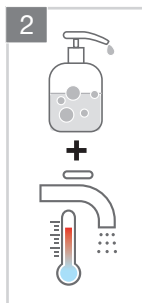 
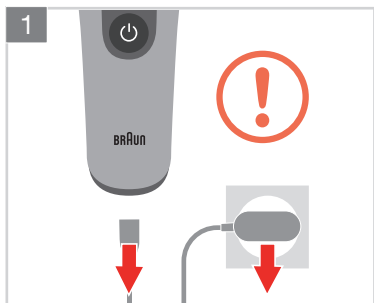 


K




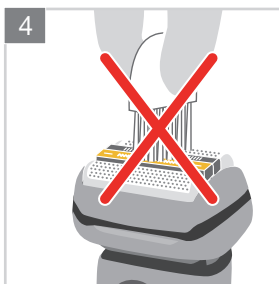 
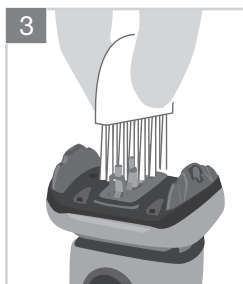 
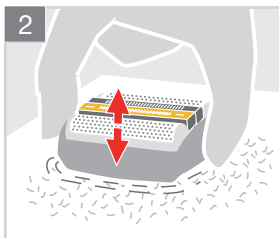 
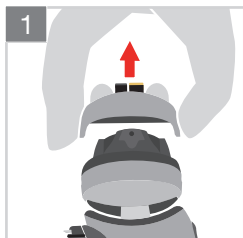 


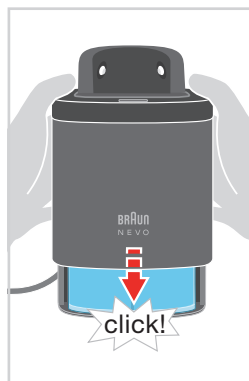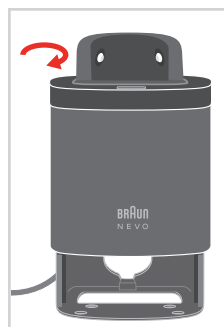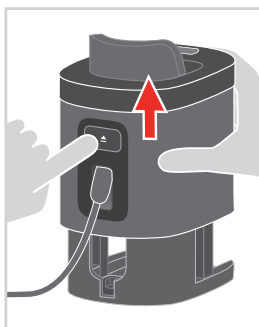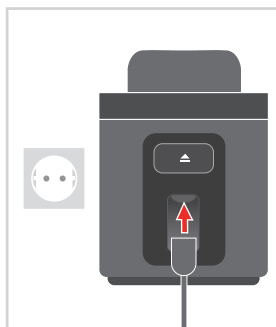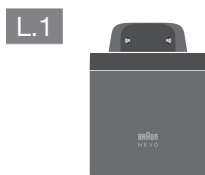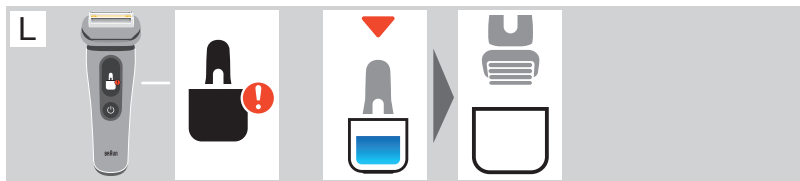      

L.2

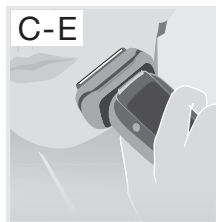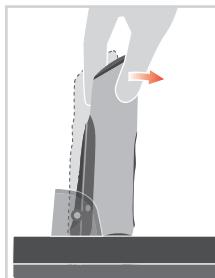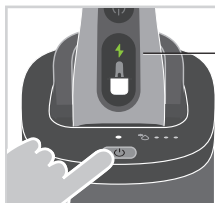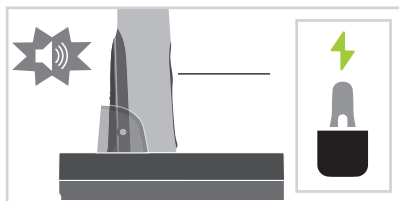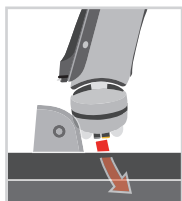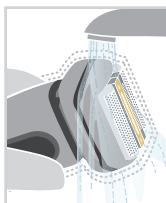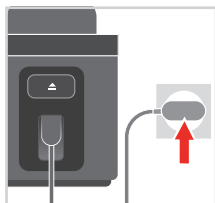       

L.3

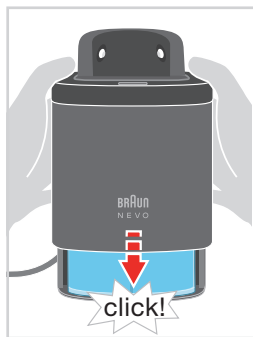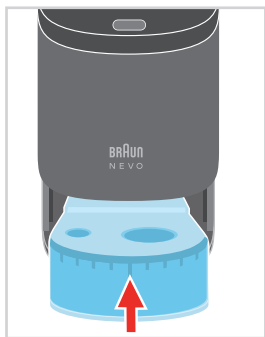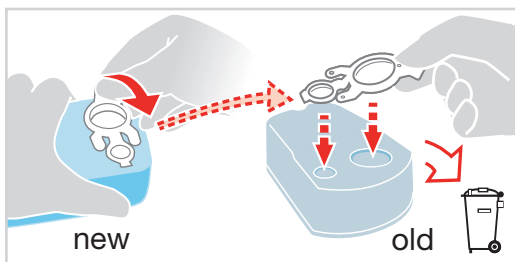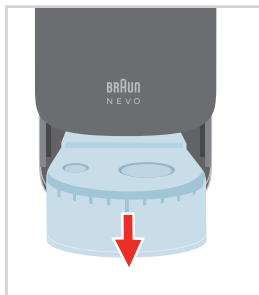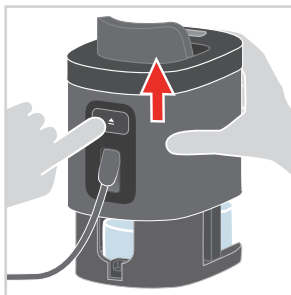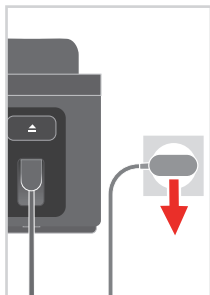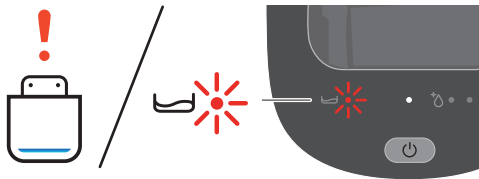       

M



www.service.braun.com



BRAUN
Service



old





new



C-E



10 Charging case
NEVO Power Travel Case

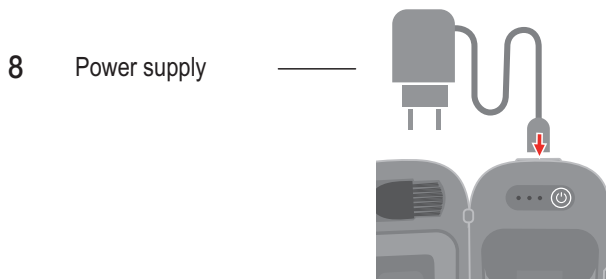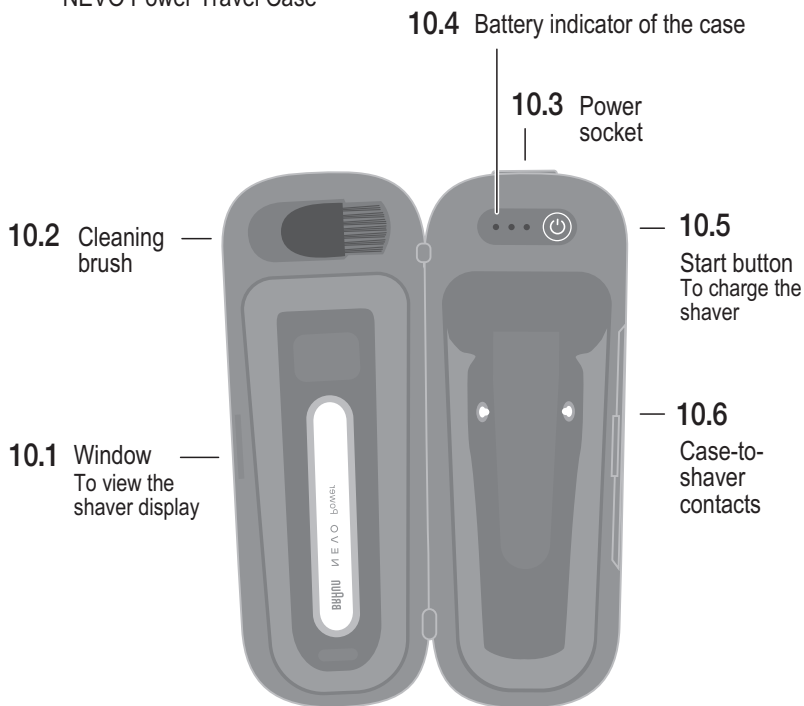




N

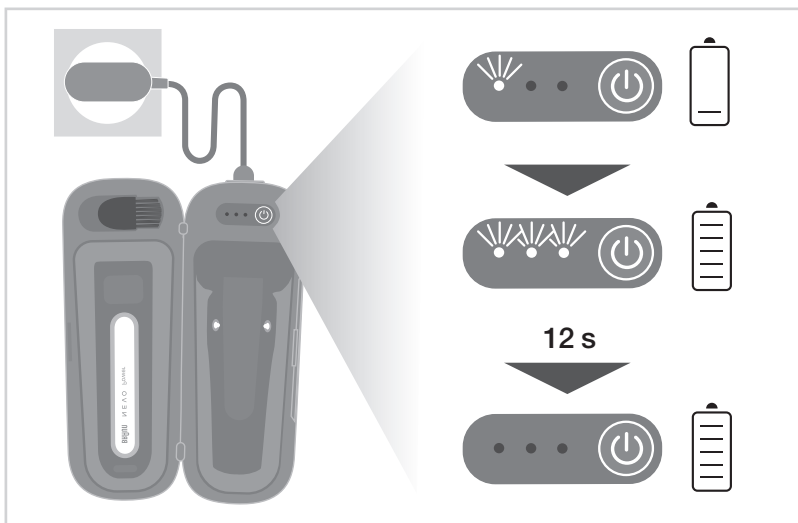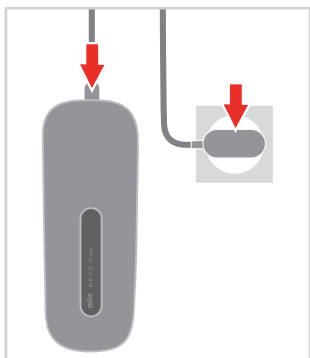


O



   O.1

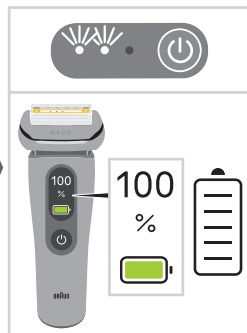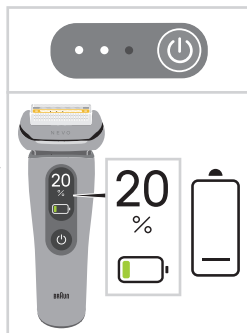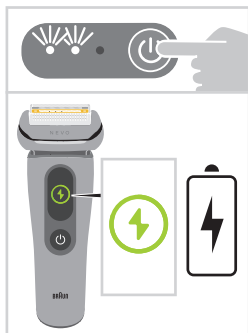

 0.2



English

**Read these instructions completely, they contain safety information.
Keep them for future reference.**

WARNING



This appliance is suitable for cleaning under running water and use in a bathtub or shower. For safety reasons, it can only be operated cordless. Detach the shaver from the power supply before using it with water.

Keep power supply, charging case and cleaning station dry.

This appliance is provided with a Safety Extra Low Voltage plug-in power supply. To avoid risk of electric shock, do not exchange or tamper with any part of it.

 Only use the provided Braun power supply type 492.

Do not use if the appliance or any attachment is damaged. Do not open the appliance!

The built-in rechargeable batteries can only be replaced by an authorized Braun Service center. This appliance can be used by children aged from 8 years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Cleaning station

To prevent the cleaning fluid from leaking, ensure that the cleaning station is placed on a flat surface.

When a cleaning cartridge is installed, do not tip, move suddenly or transport the cleaning station in any way as cleaning fluid might spill out of the cartridge.

Do not place the cleaning station inside a mirror cabinet, nor place it on a polished or lacquered surface.

The cleaning cartridge contains a highly flammable liquid so keep it away from sources of ignition.

Do not expose to direct sunlight and cigarette smoking nor store it over a radiator.

Do not get cleaning fluid in eyes!

Do not refill the cartridge and use only original Braun refill cartridges.

Before using the cleaning station the shaver needs to be dry and free from any foam, gel or soap residue!

The cleaning cartridge contains ethanol or isopropanol (specification see cartridge), which once opened will naturally evaporate slowly. Therefore, each cartridge, if not used daily, should be replaced after approximately 8 weeks. The used cartridge can be disposed of in the household waste, or via household hazardous waste programs if they exist in your province/municipality.

Make sure to close the openings using the lid of the new cartridge, since the used cartridge will contain contaminated cleaning solution.

Important

Recommended ambient temperature for charging is 5 °C to 35 °C, for storage and shaving it is 15 °C to 35 °C.

Do not expose the appliance to temperatures higher than 50 °C for extended periods of time. When the appliance is used for the first time or after a long storage, connect it to an electrical outlet, to deactivate the battery care mode. For hygienic reasons, do not share this appliance with other persons.

The appliance and its attachments must not be cleaned in the dishwasher.

Use the appliance and the attachments only for its intended purpose as shown in the user manual.

Shaver needs to be completely dry, when stored or charged in the charging case.

Wipe the charging case with a damp cloth from time to time.

For storage the charging case should be fully charged and recharged from time to time.

How to shave

Position the shaver head at 90° angle to your skin that all shaving elements have full skin contact. Shave against the direction of your beard growth in straight back and forth movements.

How to clean

The shaving head needs cleaning under hot running water after each foam or gel usage. Switch the shaver on and rinse until all residues have been removed.

With regular wet cleaning, apply a drop of light machine oil (not included) onto the shaving foil / trimmer once a week.

The handle should only be cleaned with a soft cloth and no chemicals or abrasive substances.

Product contains batteries and / or recyclable electric waste. For environment protection, do not dispose of in household waste, but for recycling take to electric waste collection points provided in your country.



Subject to change without notice.

Description Shaver & Accessories

- 1 Shaving head NEVO-S/NEVO-B
- 1a NEVO Comfort Head 94PS
- for pre-shave treatment
- 1b NEVO Skin Care Head 94HY
- for skin care treatment
- 2 Display
- 2a Shaving head status
- 2b Shaving head replacement (chapter G)
- 2c Cleaning status
- 2d Cleaning in cleaning station (chapter L)
- 2e Battery status
- 2f Charging (chapter A)
- 2g Unplug before use (chapter B)
- 2h Travel lock (chapter F)
- 2i Overheat / low temperature (chapter H/I)
- 2j Replace cleaning cartridge (chapter L.3)
- 3 On/off button
- 4 Long hair trimmer
- 5 Contacts for cleaning station / charging case usage
- 6 Release button
 - (I) to lock the shaver head
 - (II) to extend the long hair trimmer
- 7 Power socket

- 8 Power supply
- 9 Cleaning station
7in1 NEVO Care System
- 10 Charging case NEVO
Power Travel Case

Description cleaning station 7in1 NEVO Care System

- 9.1 Station-to-shaver contacts:
Need to align with the shaver contacts.
- 9.2 Display
 - Indicator for low level of cleaning fluid:
When it blinks, please replace the cleaning cartridge.
 - Status light
 - Indicator for automatic cleaning program selection
 - short / economical cleaning
 - normal cleaning
 - intensive cleaning
- 9.3 Start button to activate the automatic cleaning
- 9.4 Release button to uplift the housing for cleaning cartridge exchange
- 9.5 Power socket
- 9.6 Cleaning cartridge (CCR)

Description charging case NEVO Power Travel Case

- 10.1 Window to view the shaver display
- 10.2 Cleaning brush
- 10.3 Power socket
- 10.4 Battery indicator of the case
- 10.5 Start button to charge the shaver
- 10.6 Case-to-shaver contacts need to align with the shaver contacts

Note: Accessories, features and design may vary by model. Content / availability of attachments may vary by model / country.

Usage (see illustrations)

- A. Charging
- B. Unplug before use
- C. Shaving

- D. Pre-shave
- E. Skin care
- F. Travel lock
- G. Shaving head replacement
- H. Overheat
 - See chapter «Important»
- I. Low temperature
 - See chapter «Important»
- J. Wet cleaning / lubrication
- K. Dry cleaning
- L. Cleaning station usage
 - L.1 Preparation of cleaning station
 - L.2 Charging and cleaning in the station
 - L.3 Cleaning cartridge replacement
- M. Battery replacement
- N. Charging of the charging case
- O. Charging of the shaver in/from the charging case
 - O.1 Charging the shaver in the charging case
 - O.2 Charging the shaver from the charging case
- P. Battery removal for disposal only

For Australia & New Zealand only:

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits given by this warranty are in addition to other rights and remedies of the consumer law.

For warranty claims please contact:

Procter & Gamble Australia Pty Ltd
Level 4, 1 Innovation Road
Macquarie Park, NSW 2113

Telephone (AU): 1 800 641 820

Telephone (NZ): 0 800 108 909

Email (AU and NZ): Visit link

<https://pgconsumersupport.secure.force.com/ContactUs/emailus>

Our Warranty

This appliance is also covered by a 24 Month Replacement Warranty commencing on the date of purchase (**Our Warranty**).

Our Warranty applies in all States and Territories of Australia and in New Zealand and is in addition to any mandatory statutory obligations imposed on Procter & Gamble Australia Pty. Ltd., its distributors and its manufacturer. Our Warranty does not purport to exclude, restrict or modify any such mandatory statutory obligations.

Our Warranty only covers defects in the appliance resulting from faults in workmanship or materials. Therefore, if your appliance becomes faulty as a result of faults in workmanship or materials, it will be exchanged by your retailer, on presentation of proof of purchase.

Our Warranty only applies to domestic or household use of this appliance and the warranty will only apply if the correct operating instructions included with this product have been followed. For any appliance replaced under this warranty, Our Warranty ends on the expiry of the warranty period that applied to the original appliance.

Our Warranty does not cover:

- A. Damage arising from improper use or operation on incorrect voltages.
- B. Breakages to shaver foils, glass jars, etc.
- C. Normal wear due to moving parts.
- D. Repairs undertaken by unauthorised service personnel or use of non genuine parts.
- E. Appliances that are outside the warranty period or are not faulty.

This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

If the appliance is powered by a cord extension set or electrical portable outlet device these should be positioned so they are not subject to splashing or ingress of moisture.

To the extent permitted by the laws of the Commonwealth of Australia and New Zealand and applicable laws of a State or Territory of Australia, and without affecting any mandatory statutory obligations imposed by law, Our

Warranty is given in exchange for any other rights you may have against Procter & Gamble Australia Pty. Ltd. or its distributors or manufacturer, whether at law, in tort (including negligence), in equity or under statute.

Please retain proof of purchase of this appliance. If you have any questions in relation to Our Warranty, please call our Consumer Service line (see below for numbers).

If you intend to make a claim please telephone our Customer Service line on the numbers set out below to obtain information about your claim and any costs associated with claiming under Our Warranty. You will bear the cost of returning your product to us.

Repairs and service

If you are sending your appliance for repair under Our Warranty, please pack the appliance adequately and send it to your nearest Service Agent, at your expense. Should your Braun product require service, please call (free call) for













Australia 1800 641 820 or

New Zealand 0800 108 909

to be referred to the Authorized Braun Service Center closest to you or visit www.service.braun.com.




P

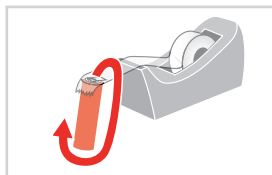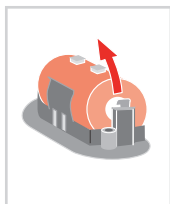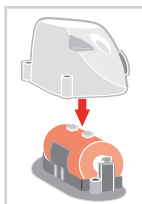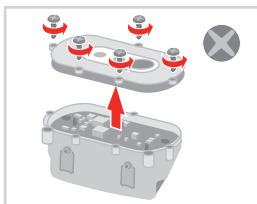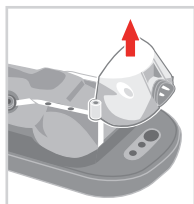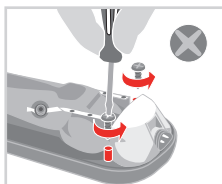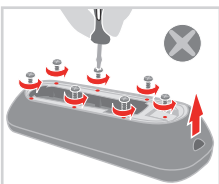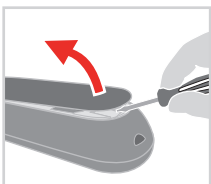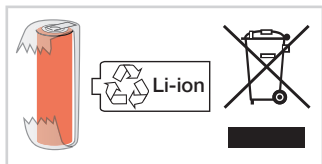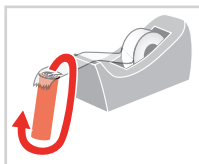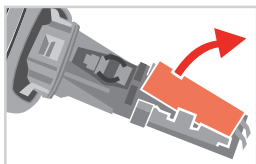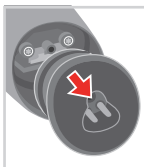

Only at the end of the product's useful life, disassemble the rechargeable battery for disposal reasons. This will destroy the appliance.

BRAUN

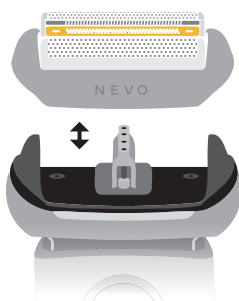

Please note down the suggested replacement date (in 18 months from now) below replacement part reference.

NEVO-S/NEVO-B

--

--

--	--	--	--

For guarantee, service, replacement parts and further product information, please refer to service.braun.com.



The first part of the paper discusses the importance of understanding the underlying structure of the data. This is particularly relevant in the context of machine learning, where the model's performance is heavily dependent on the quality and structure of the input data. We explore various techniques for data preprocessing and feature engineering, which are essential for improving the model's ability to generalize to new, unseen data.

In the second part, we delve into the theoretical foundations of the proposed method. We start by reviewing the relevant concepts in statistical learning theory, such as bias-variance tradeoff and the role of regularization. We then introduce our novel approach, which combines elements of both supervised and unsupervised learning to achieve better performance on complex tasks.

The third part of the paper presents the experimental results. We compare the performance of our method against several state-of-the-art baselines across a range of datasets and tasks. The results show that our method consistently outperforms the baselines, especially in scenarios where the data is noisy or the task is highly non-linear. We also provide a detailed analysis of the computational complexity and scalability of our method, demonstrating its suitability for large-scale applications.

Finally, we conclude the paper by summarizing the key findings and discussing the potential future directions of this research. We believe that the proposed method has the potential to be a valuable tool for researchers and practitioners alike, particularly in the field of machine learning.