




Parts Manual

Mfg. No: 10A902-2267-E1


Model Components	Page
Air Cleaner, Controls, Governor Spring, Ignition.	4
Blower Housing/Shrouds, Brake, Flywheel.	6
Camshaft, Crankcase Cover/Sump, Crankshaft, Piston/Rings/Connecting Rod.	10
Carburetor, Fuel Supply.	14
Cylinder, Cylinder Head, Gasket Set - Engine, Gasket Set - Valve, Lubrication, Operator's Manual, Warning	16
Exhaust System.	20
Replacement Engine - US & Canada.	22
Rewind Starter.	23

Not For
Reproduction

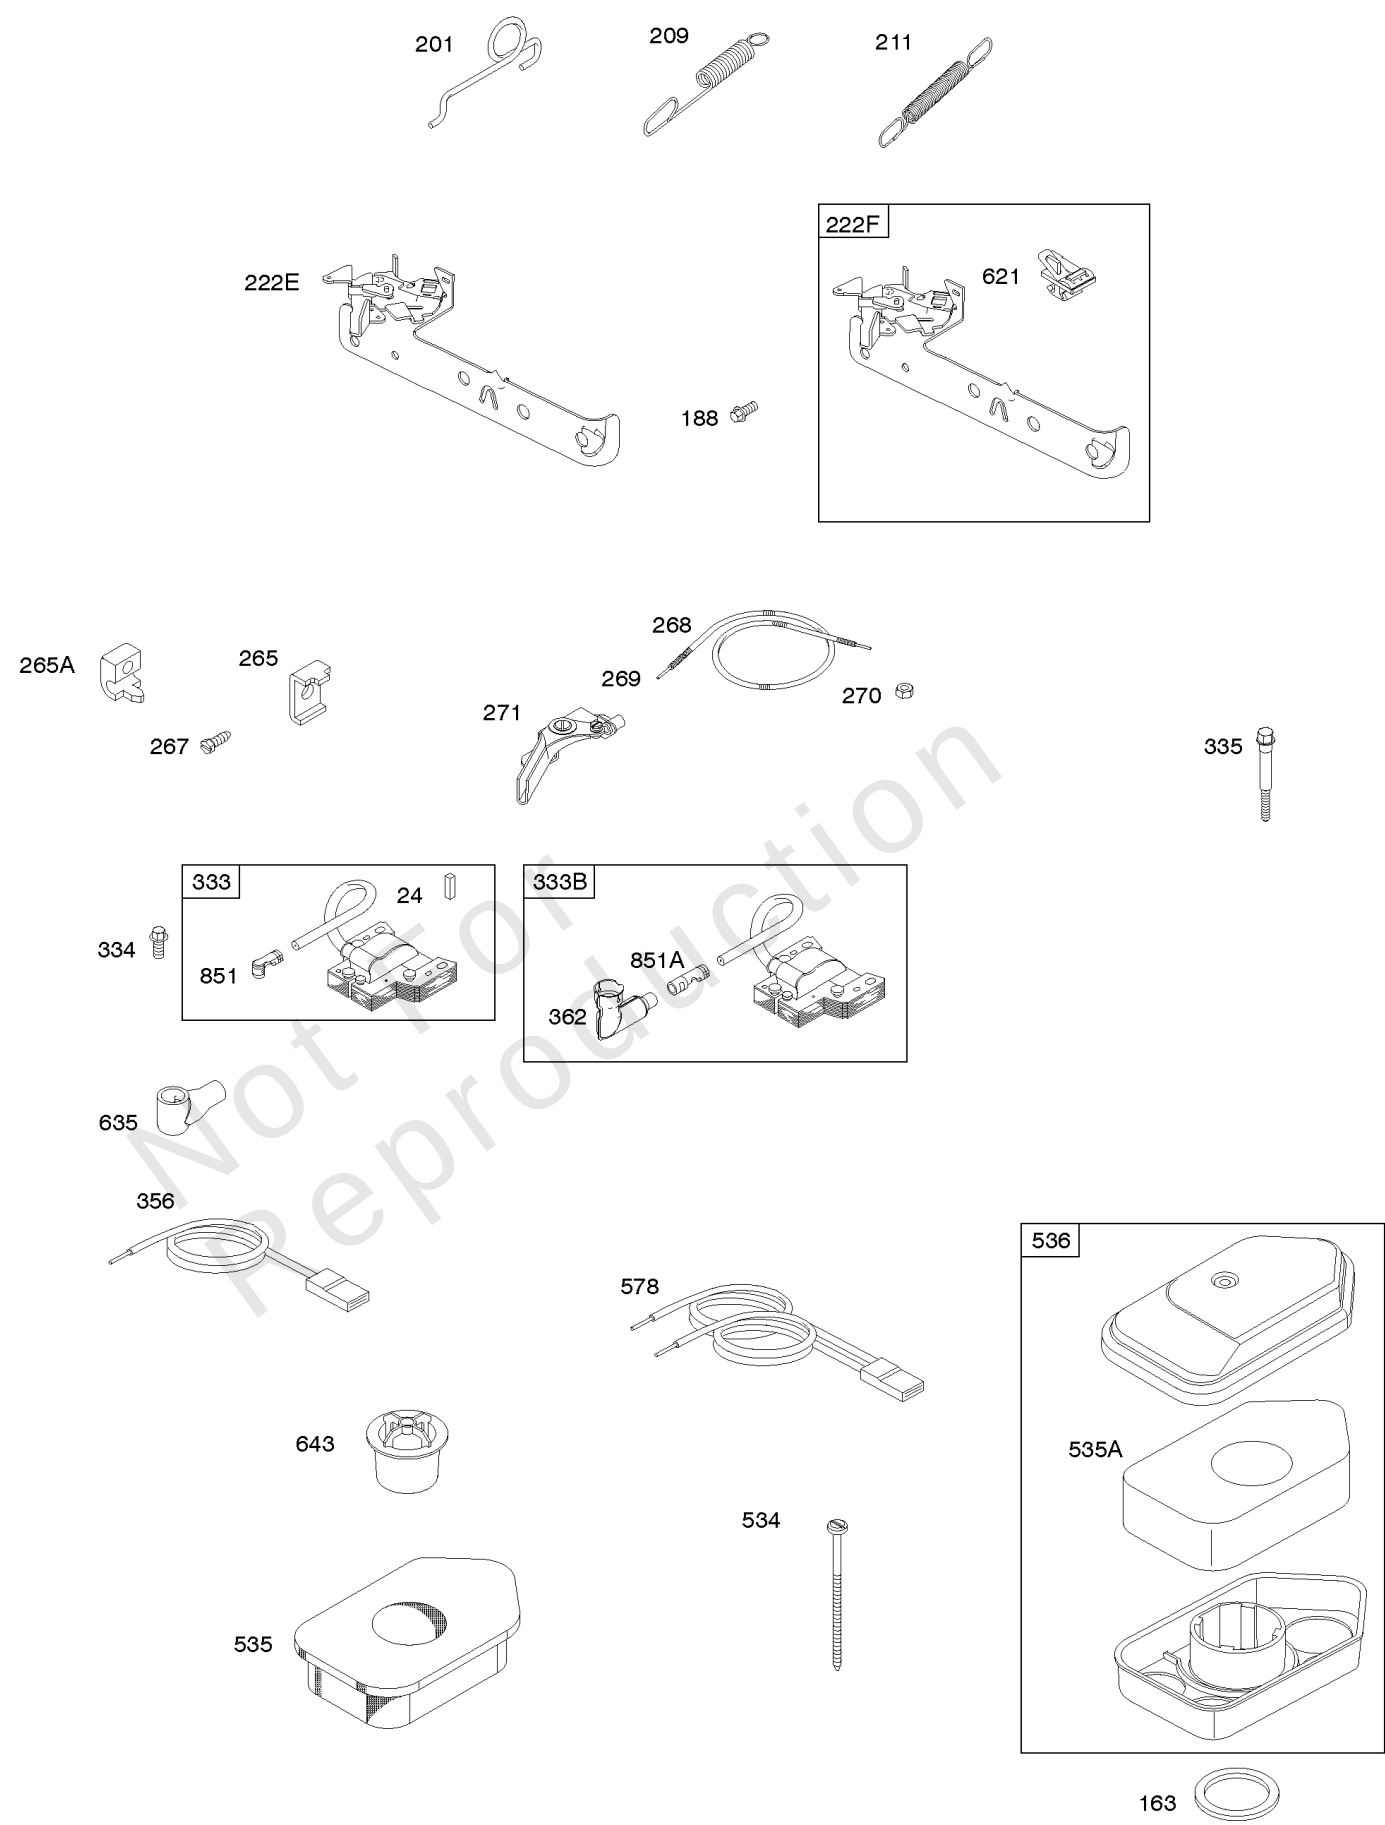


Air Cleaner, Controls, Governor Spring, Ignition

REF NO	PART NO	QTY	DESCRIPTION
24	222698S		KEY, Flywheel
163	271139S		GASKET, Air Cleaner -(Air Cleaner)
188	692198		SCREW -(Control Bracket)
201	690347		LINK, Air Vane
209	690251		SPRING-GOVERNOR -Used After Code Date 96051900
211	691859		SPRING, Governed Idle
222E	691446		BRACKET-CONTROL
222F	691445		BRACKET-CONTROL
265	691024		CLAMP, Casing
265A	690798		CLAMP, Casing
267	691044		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(72" Long)(Cut To Required Length)
269	691026		WIRE, Control -(78" Long)(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
333	793281		ARMATURE, Magneto
333B	793352		ARMATURE, Magneto
334	691061		SCREW -(Magneto Armature) (1" Long)
335	691107		SCREW -(Magneto Armature With Air Vane) (1 15/16)
356	692390		WIRE, Stop
534	691417		SCREW -(Air Cleaner)
535	272235S		FILTER, Air Cleaner Foam -Used Before Code Date 02090100
535A	698369		FILTER, Air Cleaner Foam -Used After Code Date 02083000
536	698472		CLEANER, Air
621	692310		SWITCH, Stop
635	66538S		BOOT, Spark Plug
643	691911		RETAINER, Air Filter -Used Before Code Date 97100600
851	493880S		TERMINAL, Spark Plug
851A	692424		TERMINAL, Spark Plug

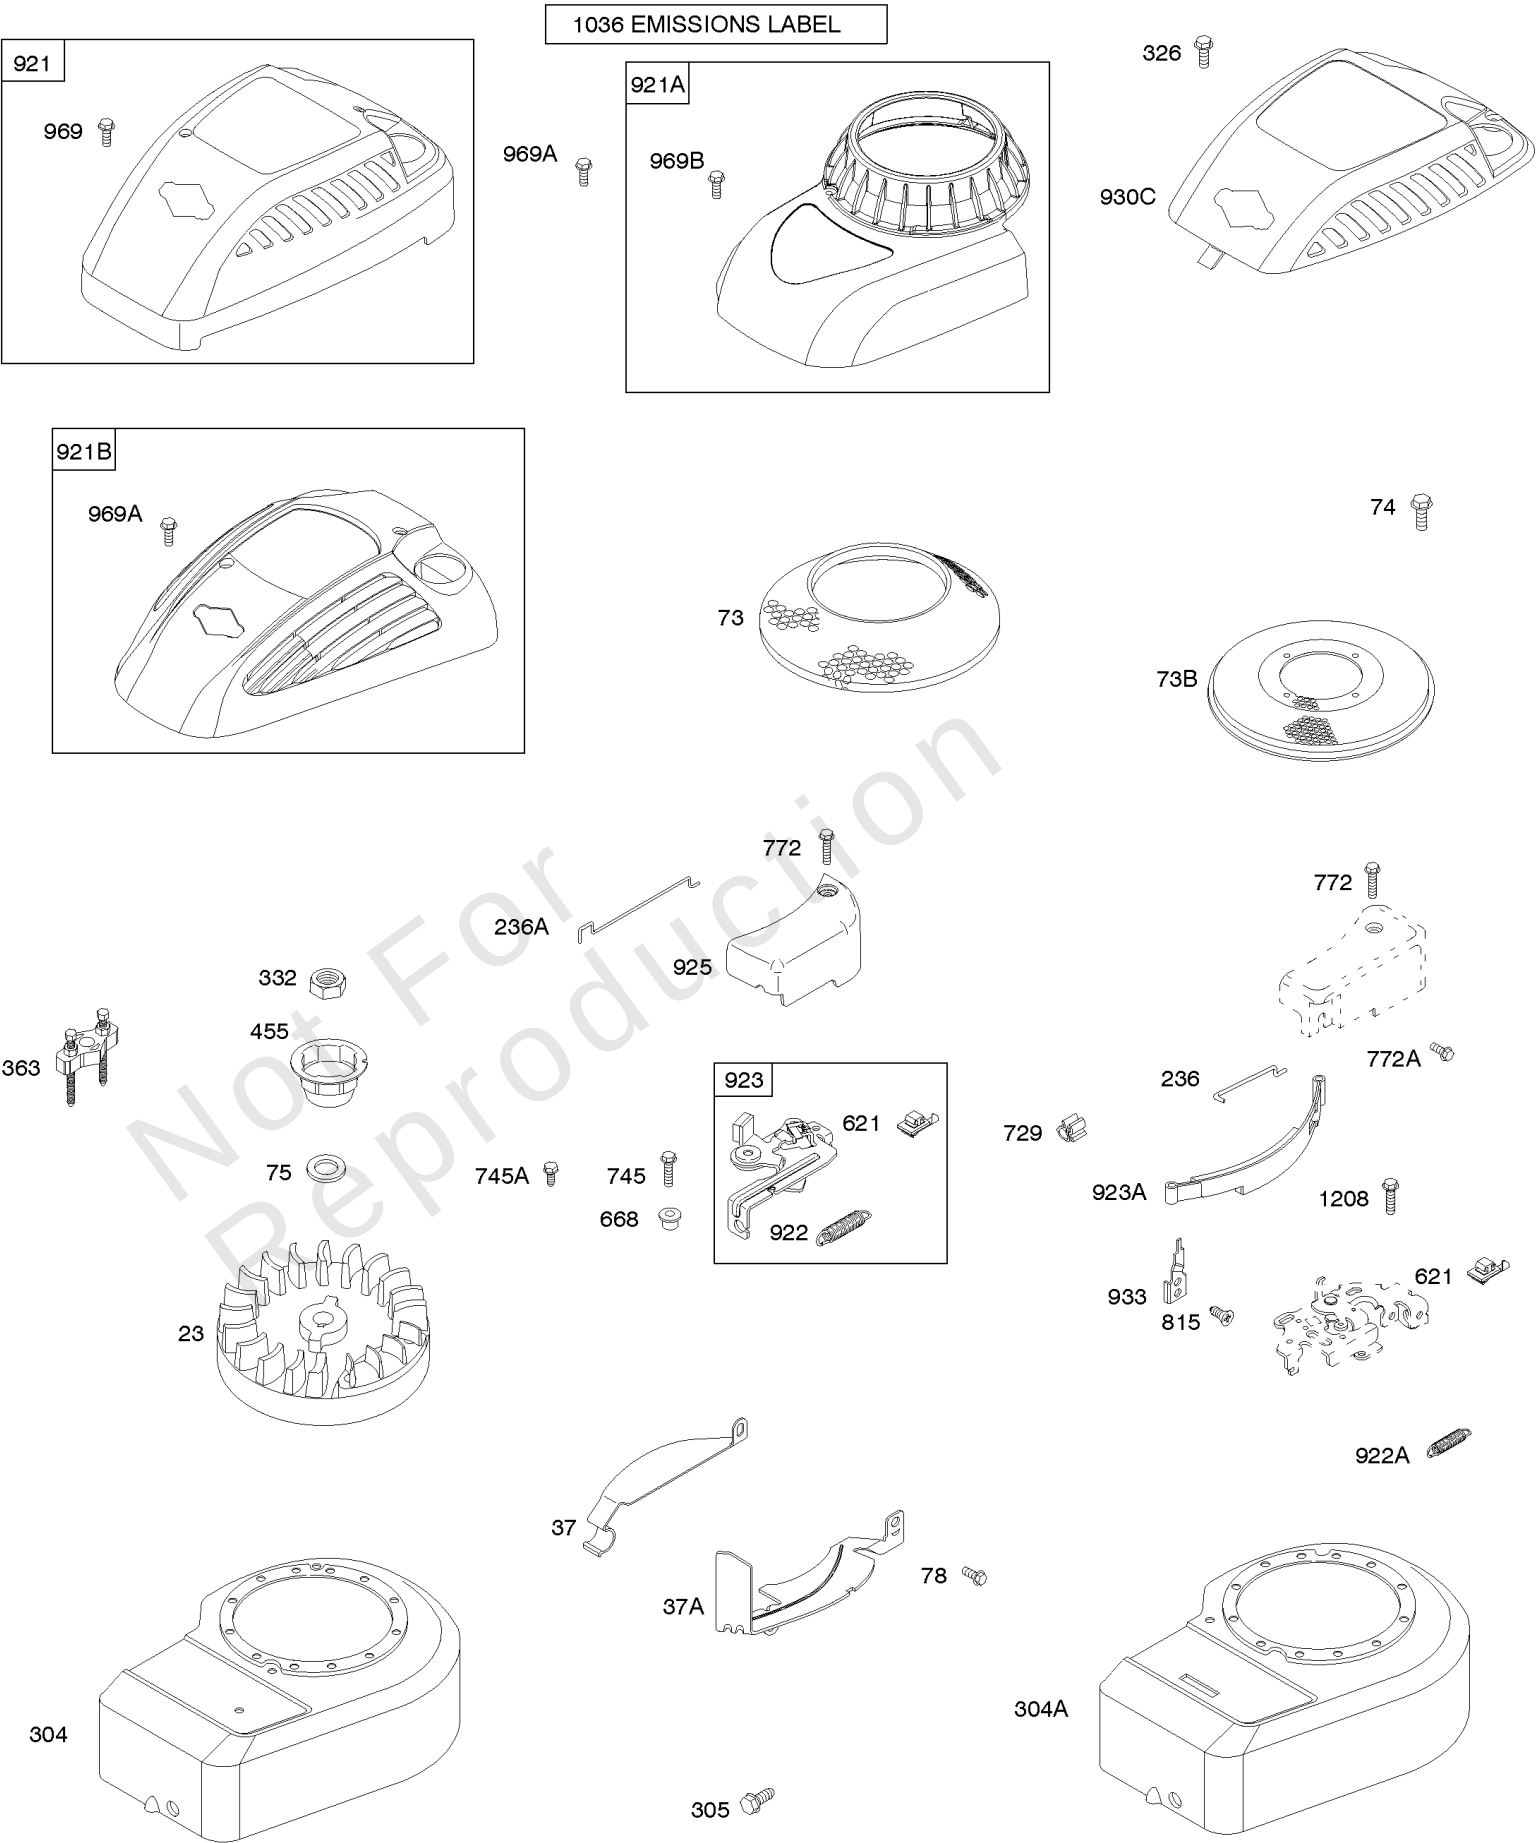


Blower Housing/Shrouds, Brake, Flywheel

REF NO	PART NO	QTY	DESCRIPTION
23	795549		FLYWHEEL
37	690482		GUARD, Flywheel -(Carburetor Side)
37A	691209		GUARD-FLYWHEEL -(Muffler Side)
73	699850		SCREEN, Rotating -Used After Code Date 97052500
73B	691725		SCREEN, Rotating -Used Before Code Date 97052600
74	690345		SCREW -(Rotating Screen)
75	691736		WASHER -(Flywheel)
78	692198		SCREW -(Flywheel Guard)
304	691484		HOUSING, Blower -(Compliance Engines) -Used Before Code Date 99010400
304	692536		HOUSING, Blower -(Non Compliance Engines) -Used Before Code Date 99010400
304A	694236		HOUSING-BLOWER -(Compliance Engines) -Used After Code Date 99010300
304A	694051		HOUSING-BLOWER -(Non Compliance Engines) -Used After Code Date 99010300
305	692198		SCREW -(Blower Housing)
326	694046		SCREW -(Rewind Guard) (2 1/4) -Used After Code Date 99010300
326	691141		SCREW -(Rewind Guard) (1/2) -Used Before Code Date 99010400
332	690662		NUT -(Flywheel)
363	19069		PULLER, Flywheel
455	691236		CUP, Flywheel
621	692310		SWITCH, Stop
668	692889		SPACER
729	690586		CLIP, Wire
745	691146		SCREW -(Brake) (7/8)
745A	690859		SCREW -(Brake) (1/2)
772	691111		SCREW -(Linkage Cover) (1 1/8)
772	691183		SCREW -(Linkage Cover) (3/4" Long)
772A	690345		SCREW -(Linkage Cover) (1/2)
815	690324		SCREW -(Band Brake Pivot)
921	694044		HOUSING, Blower
922	692135		SPRING, Brake -Used After Code Date 97071300
922A	691809		SPRING, Brake -Used Before Code Date 97071400
923	691487		BRAKE -Used After Code Date 97071300

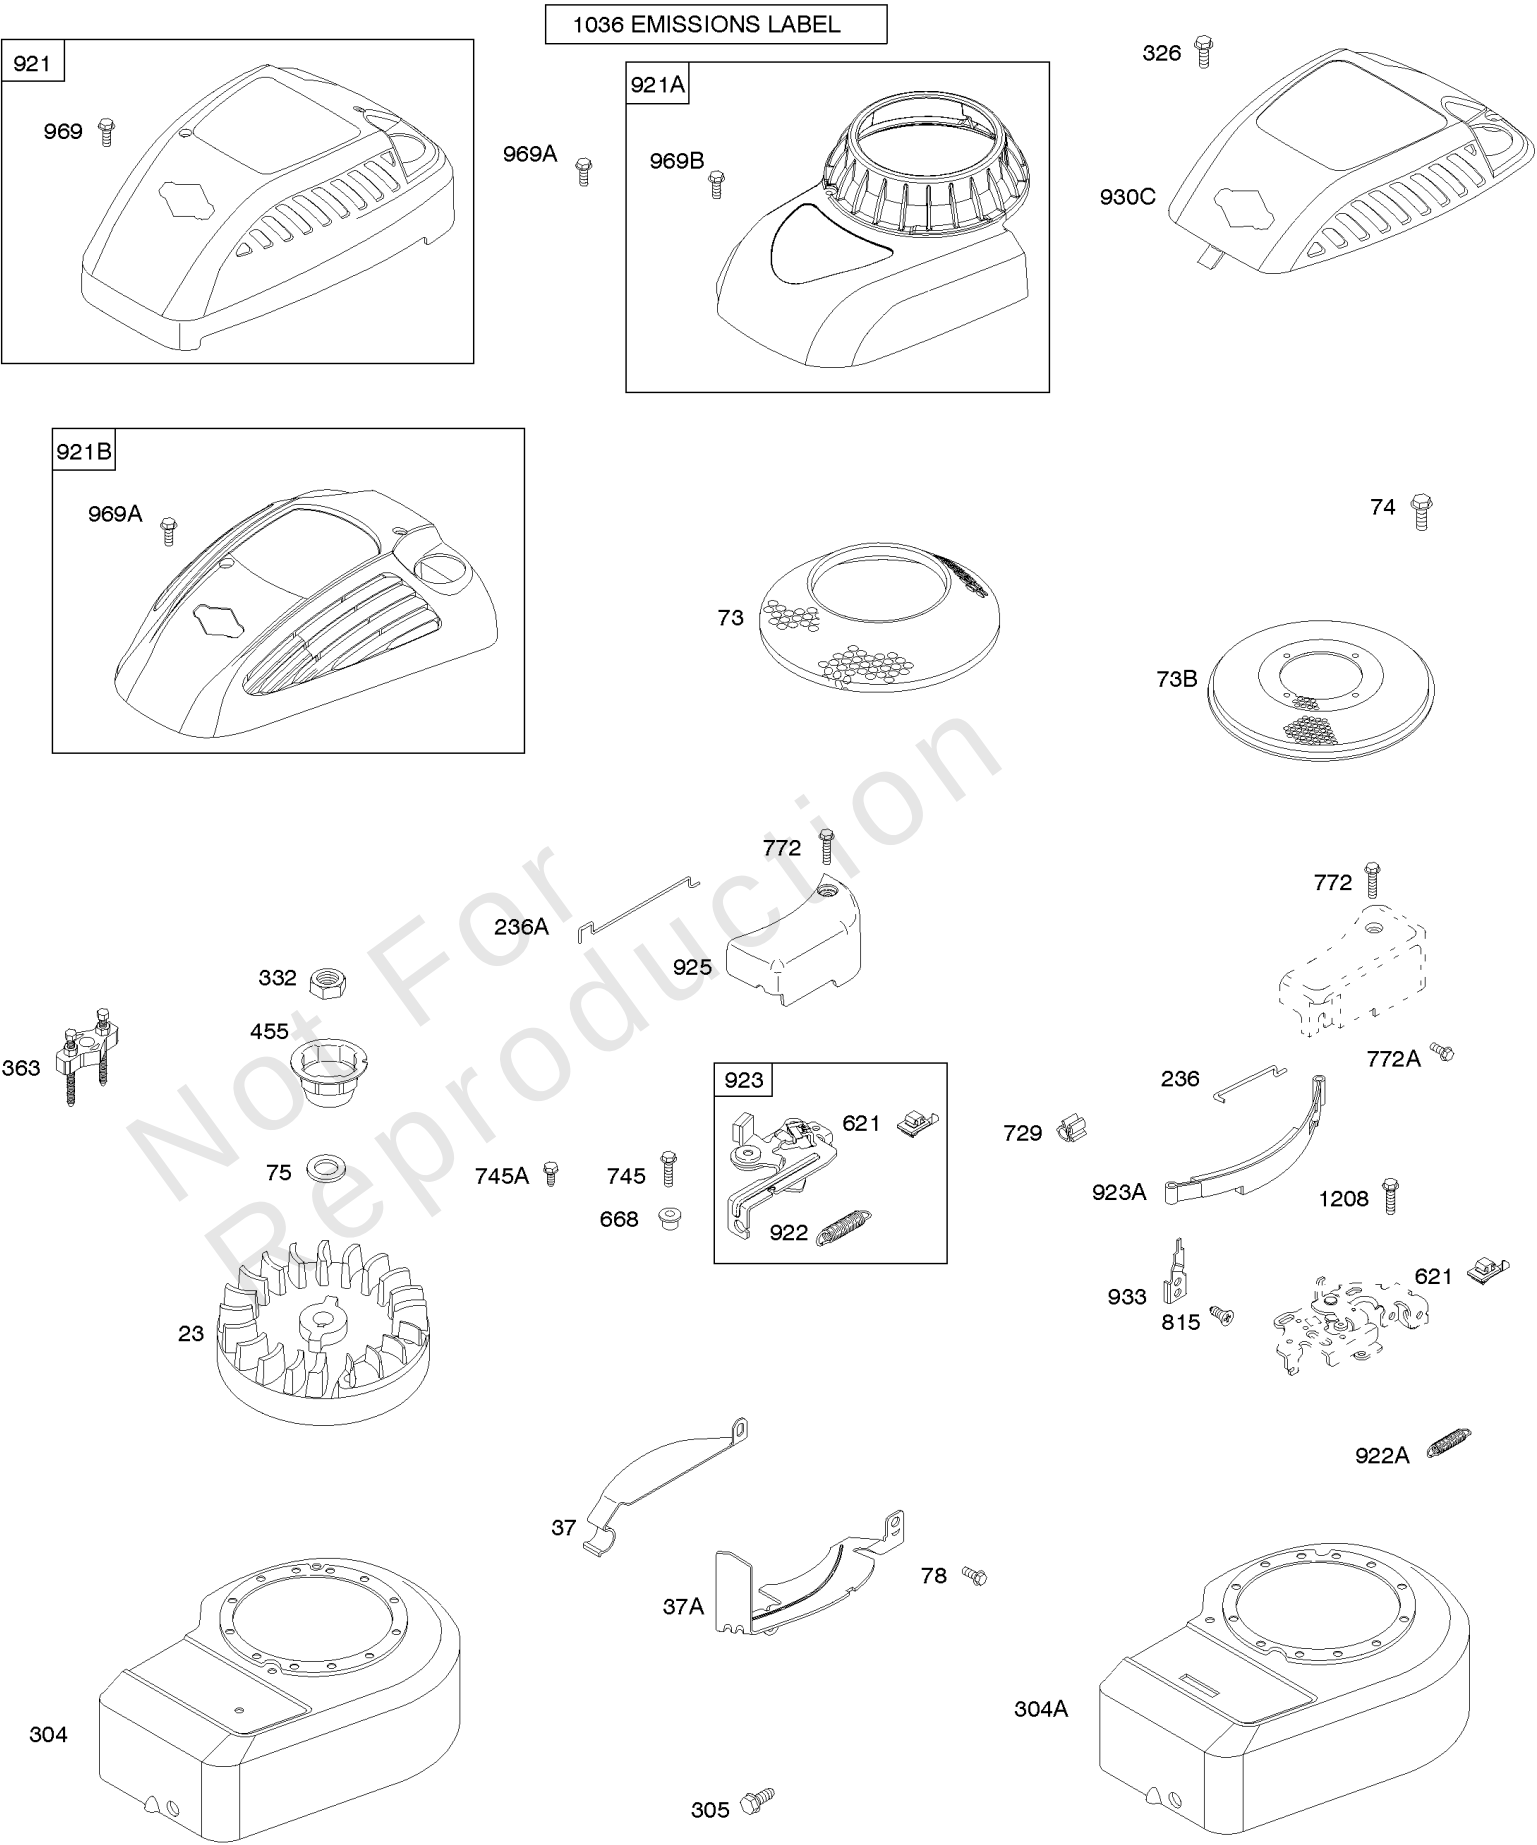


Blower Housing/Shrouds, Brake, Flywheel

REF NO	PART NO	QTY	DESCRIPTION
923A	394867		PIVOT, Band Brake -Used Before Code Date 97071400
930C	691932		GUARD-REWIND
933	690428		PIVOT, Band Brake
969	692198		SCREW -(Blower Housing) (1/2)
969A	694046		SCREW -(Blower Housing) (2 1/4)
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1208	690859		SCREW -(Brake Bracket)

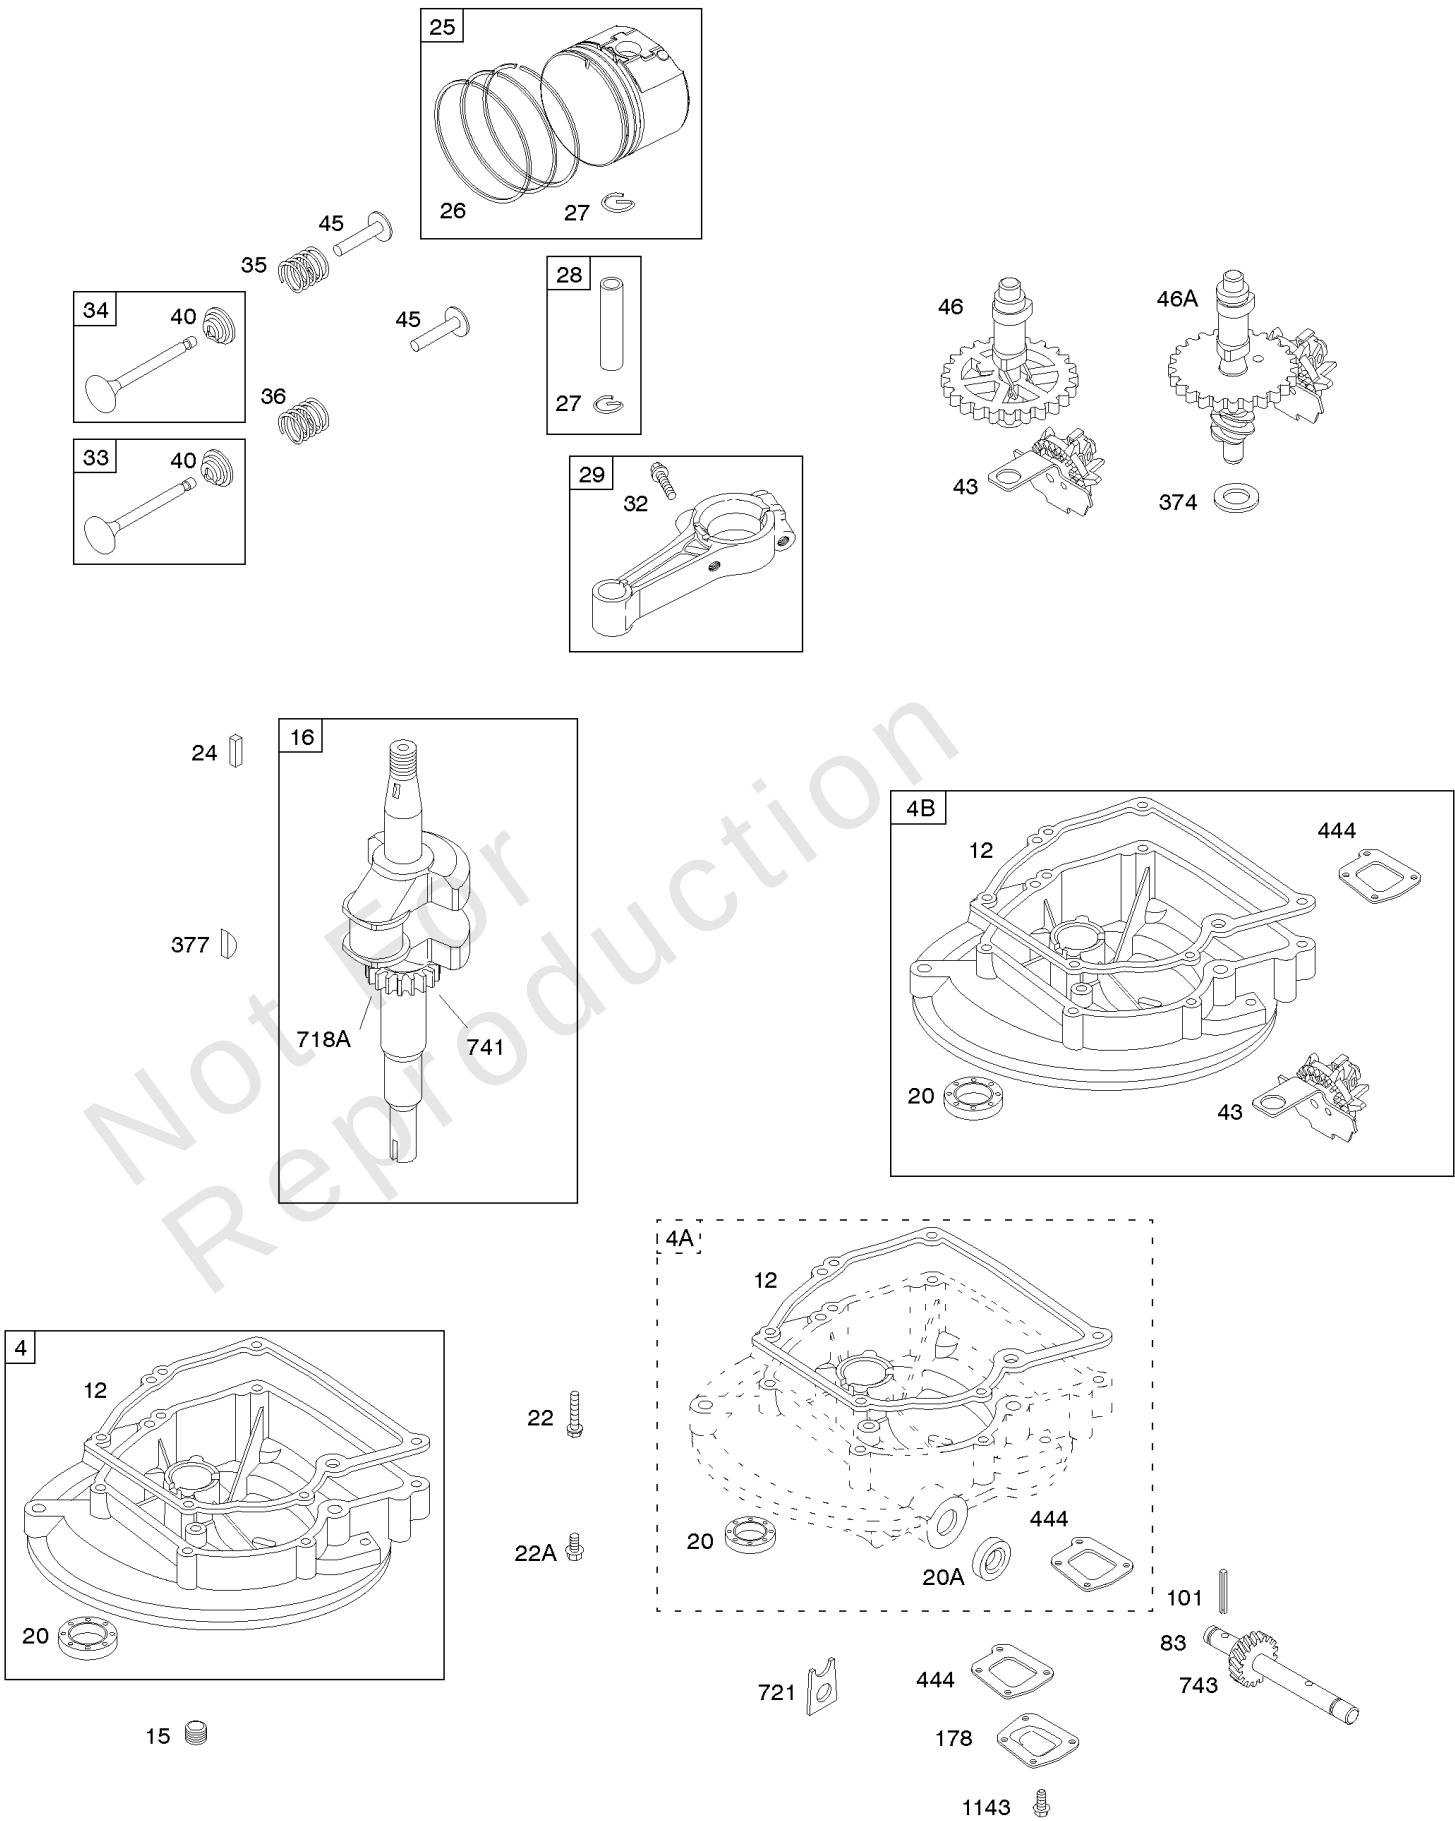


Camshaft, Crankcase Cover/Sump, Crankshaft, Piston/Rings/Connecting Rod

REF NO	PART NO	QTY	DESCRIPTION
4	395384		SUMP, Engine -Used Before Code Date 02111300
4	698691		SUMP, Engine -Used After Code Date 02111200
12	270895		GASKET, Crankcase -(.005)
12	270896		GASKET, Crankcase -(.009)
12	692218		GASKET, Crankcase -(.015)(Standard)
15	691680		PLUG, Oil Drain
16	691472		CRANKSHAFT
20	391483S		SEAL, Oil -(PTO Side)
20A	691952		SEAL, Oil -(PTO Side) (Auxiliary PTO)
22	692551		SCREW -(Crankcase Cover/Sump) (1 1/4)
22A	691108		SCREW -(Crankcase Cover/Sump) (3/4" Long)
24	222698S		KEY, Flywheel
25	792532		PISTON ASSEMBLY -(.020 Oversize) -Used After Code Date 96020500
25	298906		PISTON ASSEMBLY -(.020 Oversize) -Used Before Code Date 96020600
25	298907		PISTON ASSEMBLY -(.030 Oversize) -Used Before Code Date 96020600
25	699657		PISTON ASSEMBLY -(Standard) -Used Before Code Date 04111500
25	790908		PISTON ASSEMBLY -(Standard) -Used After Code Date 04111400
26	795134		SET, Ring -(.020 Oversize) -Used After Code Date 04111400
26	298982		RING SET-STD -(Standard) -Used Before Code Date 96020600
26	298984		RING SET-020 -(.020 Oversize) -Used Before Code Date 96020600
26	498680		RING SET-STD -(Standard) -Used After Code Date 96020500 -Used Before Code Date 03080400
26	498682		SET, Ring -(.020 Oversize) -Used After Code Date 96020500 -Used Before Code Date 04111500
26	498683		SET, Ring -(.030 Oversize) -Used After Code Date 96020500 -Used Before Code Date 04111500
26	699658		SET, Ring -(Standard) -Used After Code Date 03080300 -Used Before Code Date 04111500
26	790909		SET, Ring -(Standard) -Used After Code Date 04111400

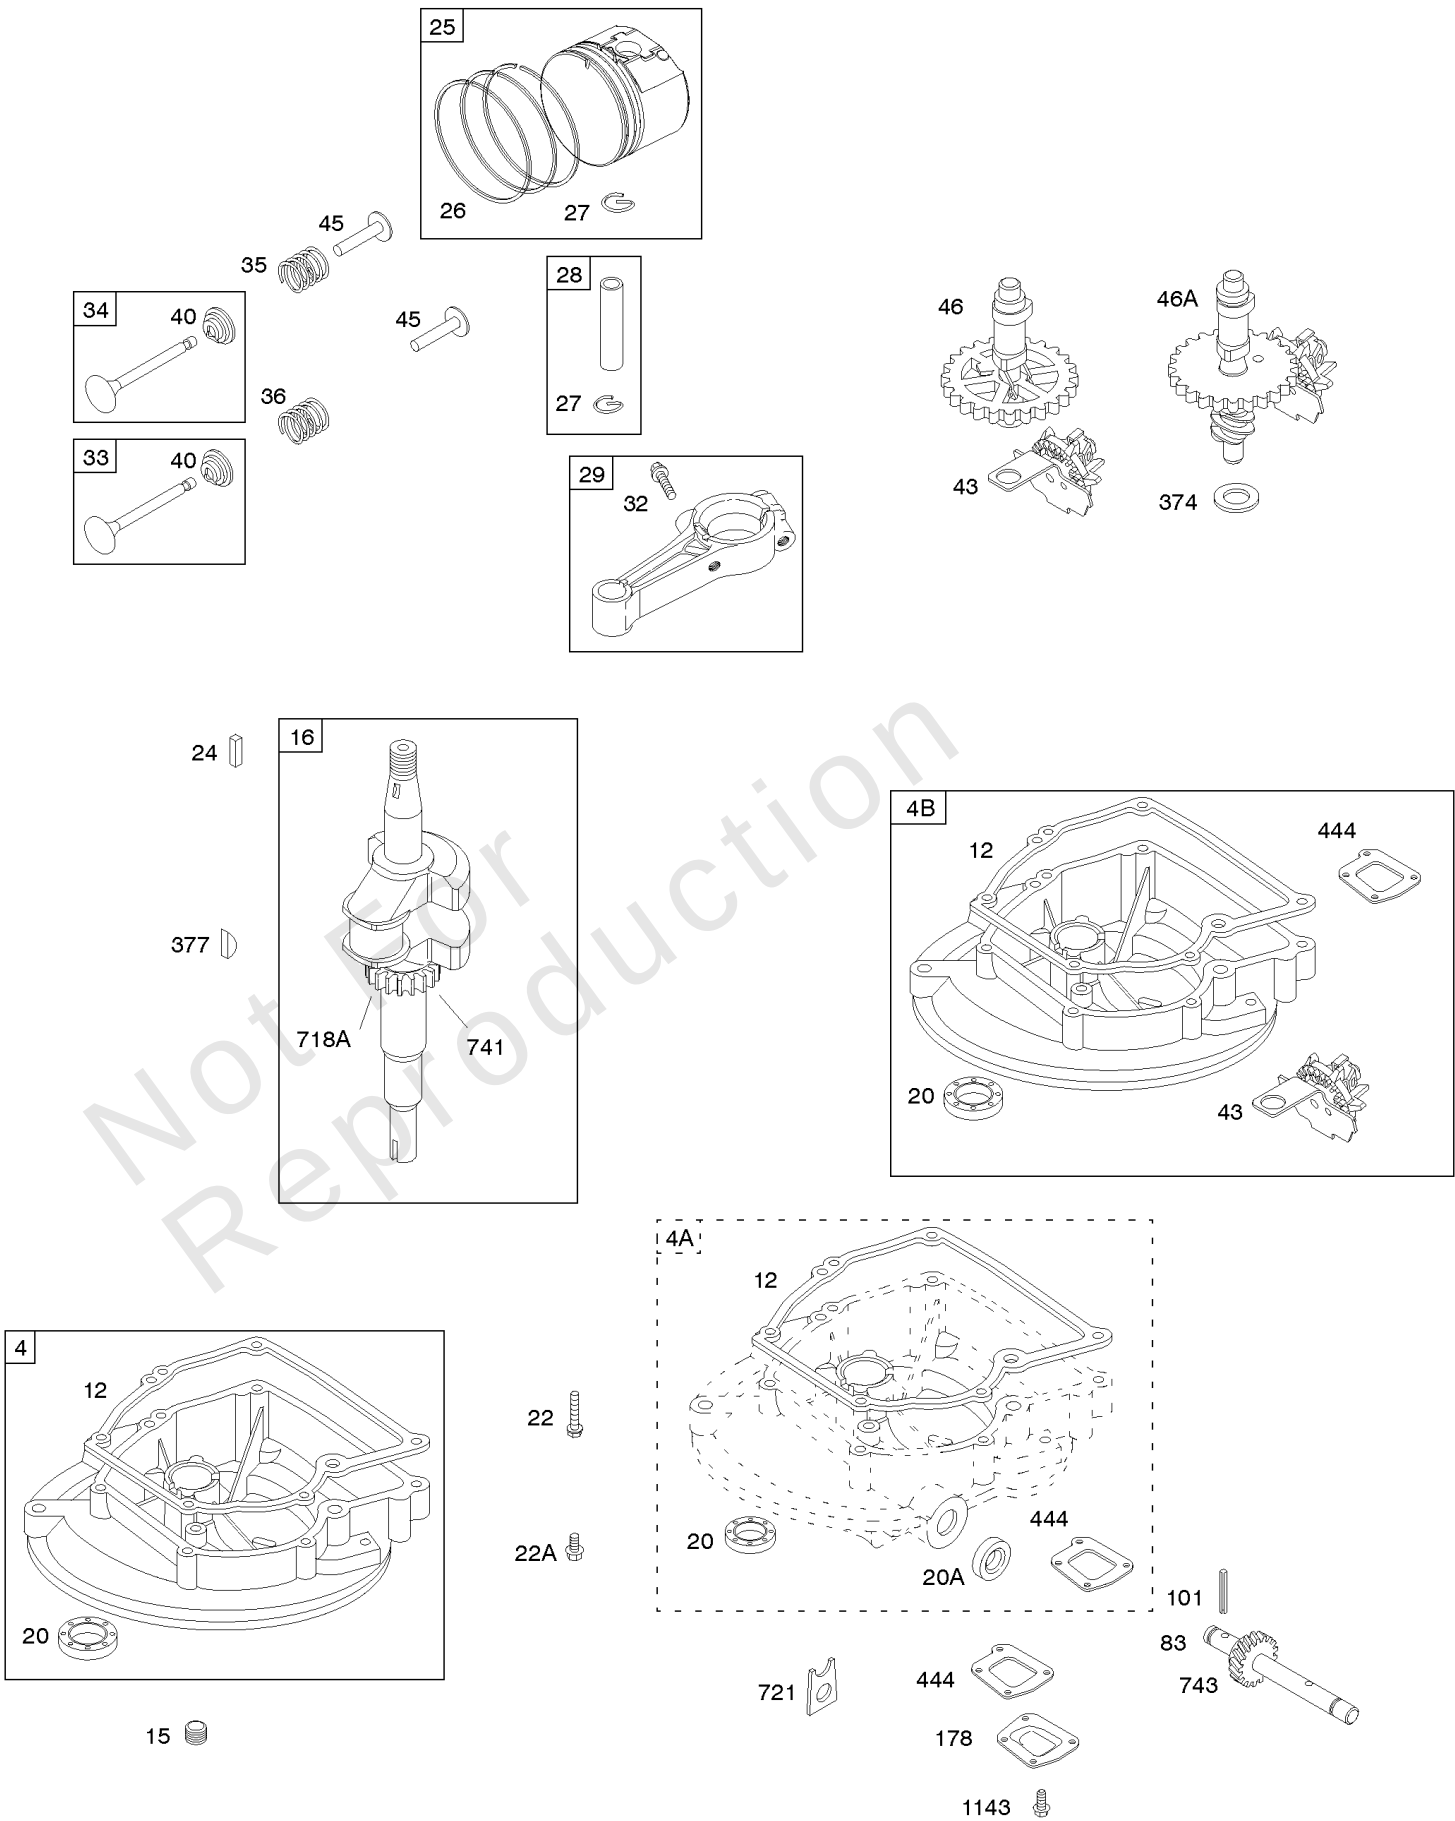









Camshaft, Crankcase Cover/Sump, Crankshaft, Piston/Rings/Connecting Rod

REF NO	PART NO	QTY	DESCRIPTION
27	691588		LOCK, Piston Pin
28	298908		PIN, Piston -(.005 Oversize) -Used Before Code Date 03100100
28	298909		PIN, Piston -(Standard) -Used Before Code Date 03100100
28	699659		PIN, Piston -(Standard) -Used After Code Date 03093000
29	699654		ROD-CONNECTING
32	691664		SCREW -(Connecting Rod)
33	296676		VALVE, Exhaust -(Grooved Stem-Includes Retainer)
34	296677		VALVE, Intake -(Grooved stem-includes Retainer)
35	690520		SPRING-VALVE -(Intake)
36	690520		SPRING-VALVE -(Exhaust)
40	692194		RETAINER, Valve
43	691983		SLINGER, Governor/Oil -Used Before Code Date 02110500
43	698690		SLINGER-GOVERNOR/OIL -Used After Code Date 02110400
45	691762		TAPPET, Valve
46	691998		CAMSHAFT
46A	690644		CAMSHAFT -(Counterclockwise)
101	691623		PIN, Shaft
178	690398		COVER, Drive Gear
374	691074		WASHER -(Camshaft)
444	691868		GASKET, Drive Gear Cover
718A	499047		PIN, Locating -(Crankshaft)
721	690397		STOP, Shaft
741	691805		GEAR, Timing
743	691772		GEAR, Drive -(Counterclockwise)
1143	691141		SCREW -(Drive Gear Cover)

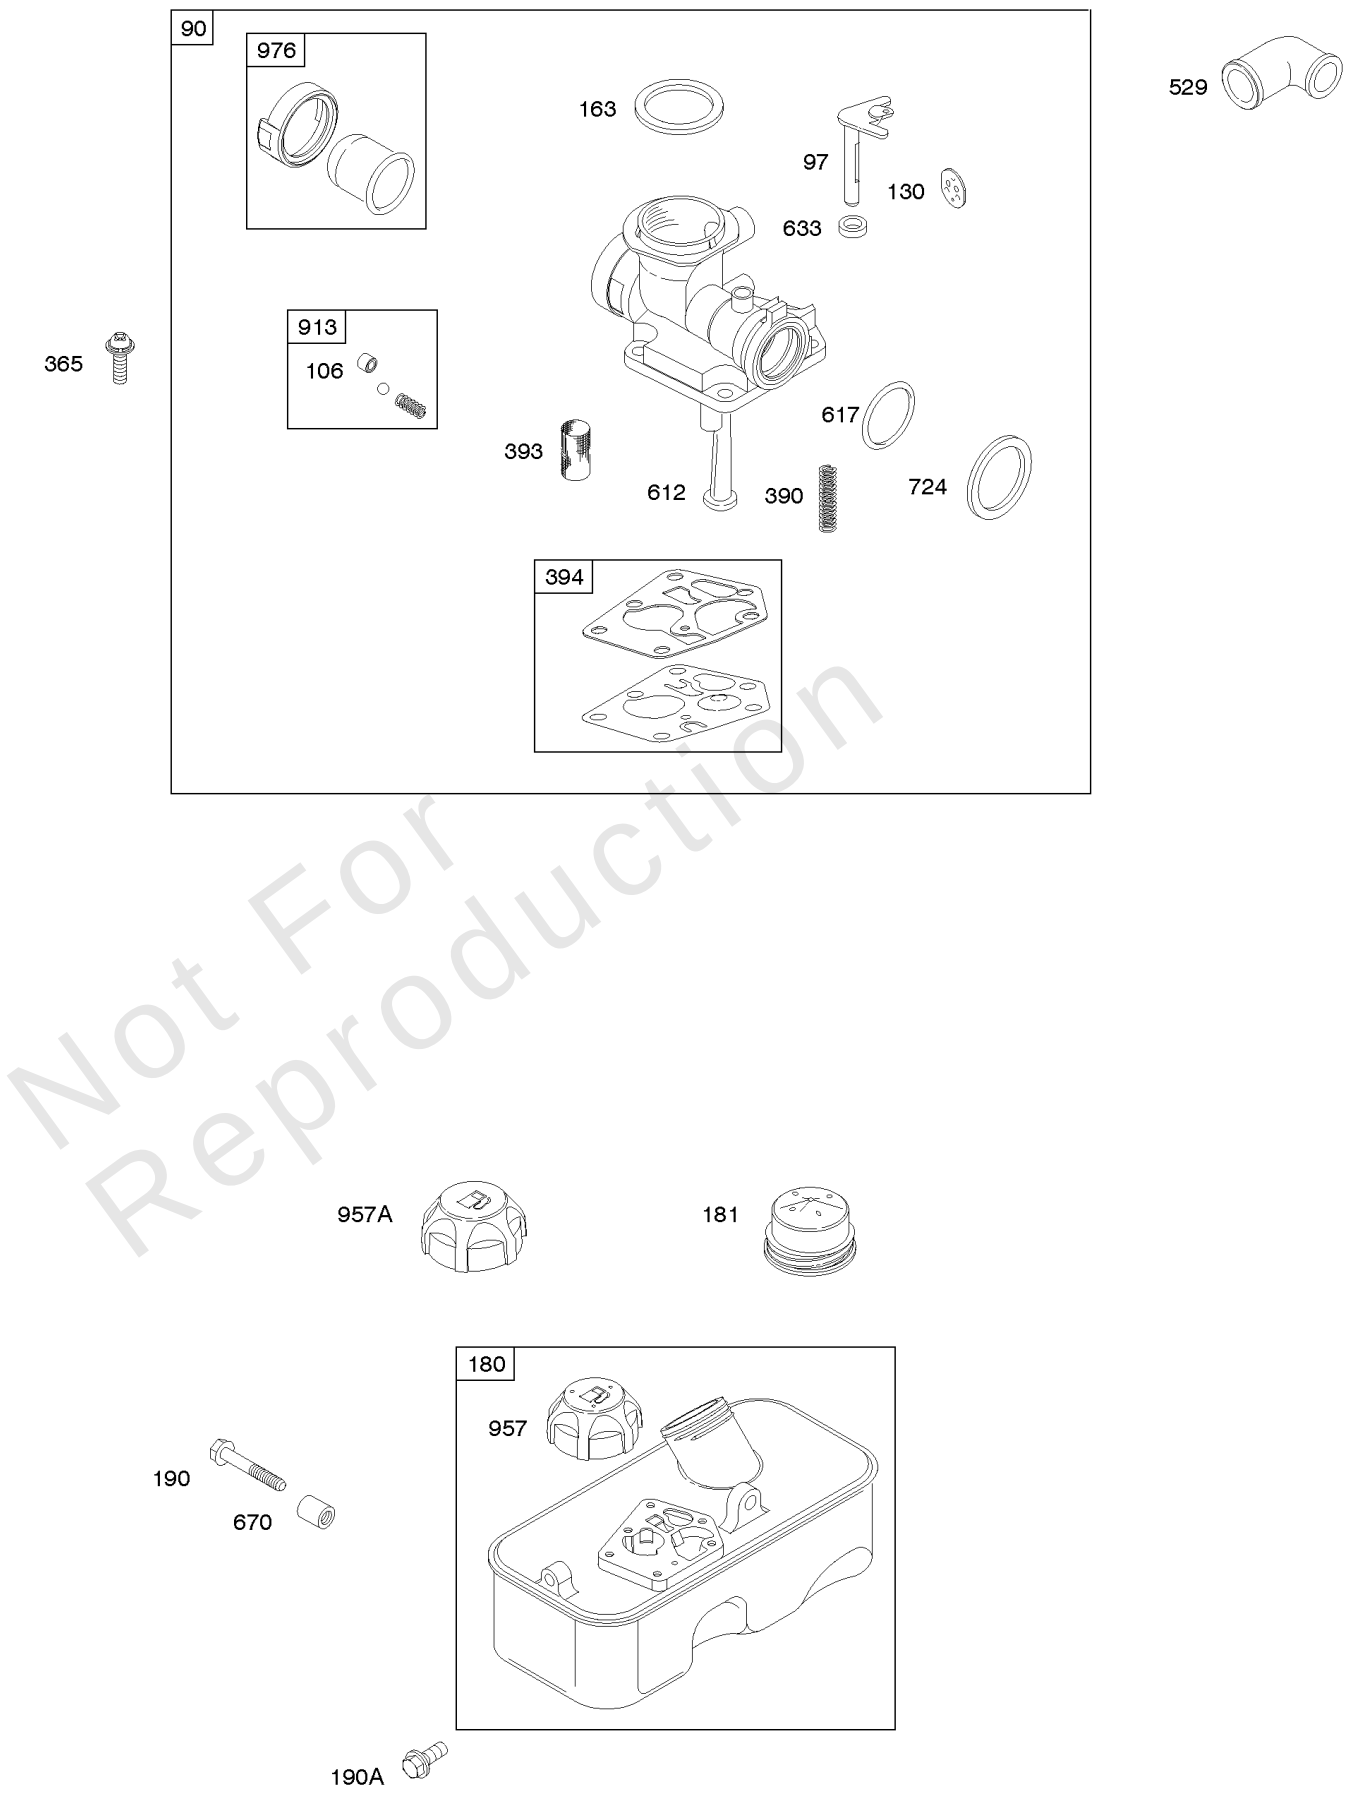

Carburetor, Fuel Supply


REF NO	PART NO	QTY	DESCRIPTION
90	497619		CARBURETOR -Used Before Code Date 96052000
90	794161		CARBURETOR -Used After Code Date 96051900
97	691931		SHAFT, Throttle
106	691901		SEAT, Inlet
130	691190		VALVE, Throttle
163	271139S		GASKET, Air Cleaner -(Air Cleaner)
180	494406		TANK, Fuel -(Metal)
181	493982S		CAP, Fuel Tank -(Metal)
190	691640		SCREW -(Fuel Tank) (1 3/4)
190A	691108		SCREW -(Fuel Tank) (9/16" Long)
365	790029		SCREW -(Carburetor)
390	691839		SPRING-CHOKE DIAPH
393	691837		SCREEN, Carburetor
394	795083		DIAPHRAGM, Carburetor -Used After Code Date 07080800
394	495770		GASKET, Carburetor Pump -Used Before Code Date 07080900
529	692189		GROMMET
612	496046S		TUBE-PICK UP
617	270344S		SEAL, O-Ring -(Intake Manifold)
633	691321		SEAL, Choke/Throttle Shaft -(Throttle)
670	691631		SPACER, Fuel Tank -Used Before Code Date 97071400
670	691633		SPACER, Fuel Tank -Used After Code Date 97071300
724	697478		RETAINER, Seal
913	494409		SEAT, Valve
957	497929S		CAP, Fuel Tank -(Plastic)
976	694394		PRIMER-CARBURETOR

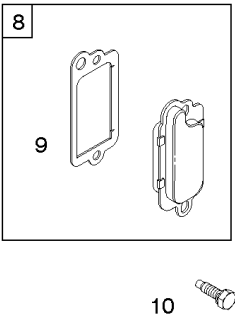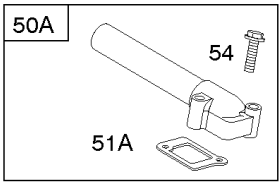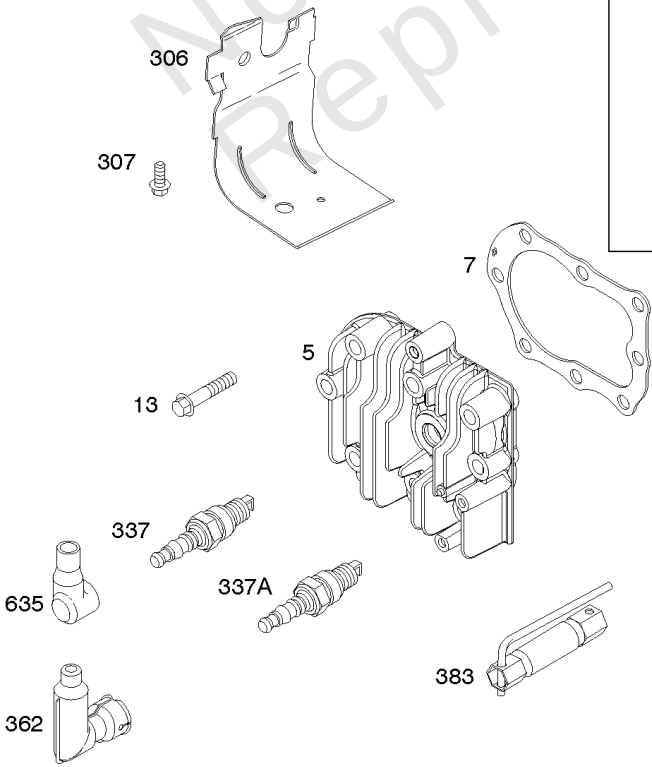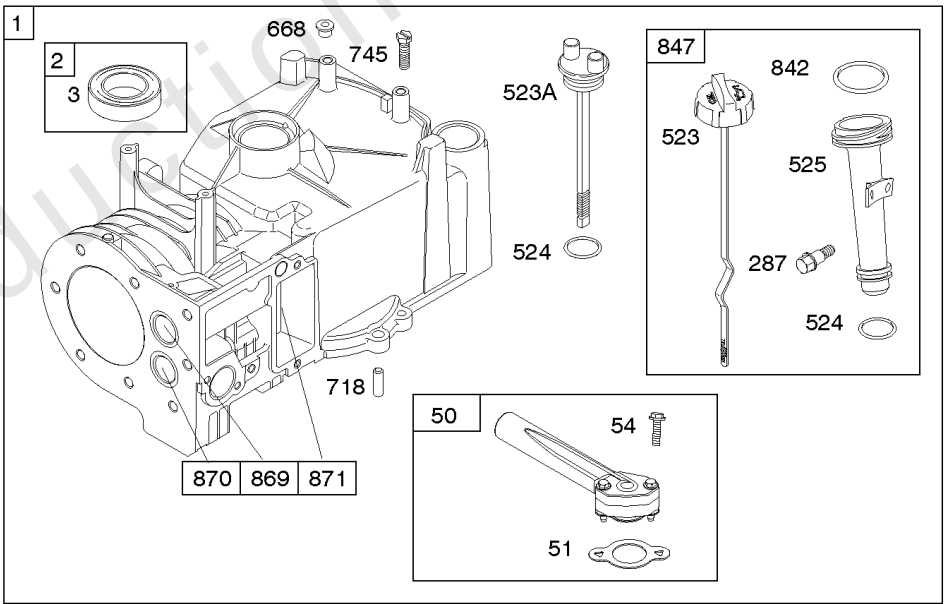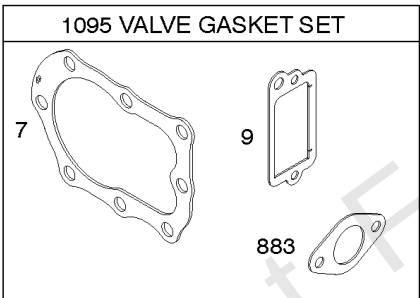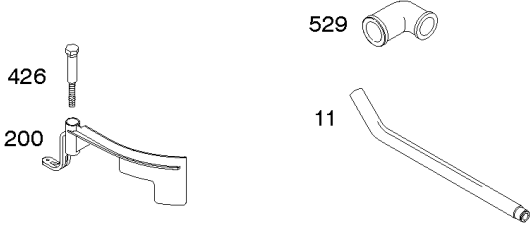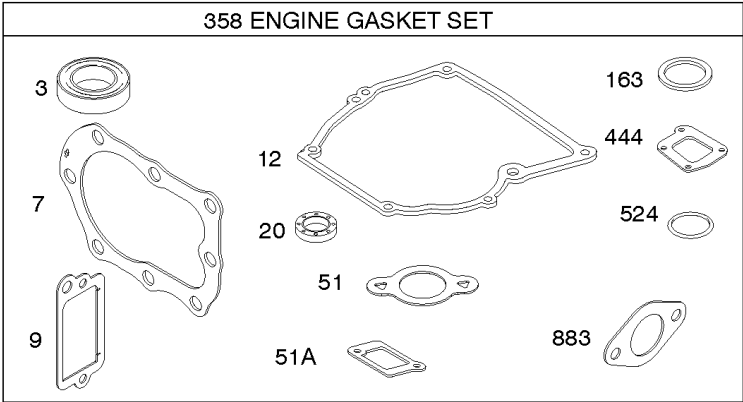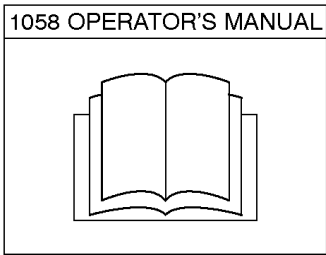


Cylinder, Cylinder Head, Gasket Set - Engine, Gasket Set - Valve, Lubrication, Operator's

REF NO	PART NO	QTY	DESCRIPTION
1	699653		CYLINDER ASSEMBLY
2	399269		KIT, Bushing/Seal -(Magneto Side)
3	299819S		SEAL, Oil -(Magneto Side)
5	790169		HEAD, Cylinder
7	698717		GASKET-CYL HD
8	791781		BREATHER ASSEMBLY
9	695890		GASKET-BREATHER
10	691666		SCREW -(Breather Assembly)
11	691245		TUBE, Breather
12	270896		GASKET, Crankcase -(.009)
12	692218		GASKET, Crankcase -(.015)(Standard)
12	270895		GASKET, Crankcase -(.005)
13	691640		SCREW -(Cylinder Head)
20	391483S		SEAL, Oil -(PTO Side)
50	699644		MANIFOLD, Intake -Used After Code Date 03080300
50A	693446		MANIFOLD-INTAKE -Used Before Code Date 03080400
51	699649		GASKET, Intake -Used After Code Date 03080300
51A	270345S		GASKET, Intake -Used Before Code Date 03080400
54	691111		SCREW -(Intake Manifold)
163	271139S		GASKET, Air Cleaner -(Air Cleaner)
200	691912		BLADE, Governor
287	691002		SCREW -(Dipstick Tube)
306	690400		SHIELD, Cylinder -Used Before Code Date 04071400
307	690345		SCREW -(Cylinder Shield) -Used Before Code Date 04071400
337	802592S		PLUG, Spark -(Resistor)
358	794209		GASKET SET, Engine
383	89838S		WRENCH, Spark Plug
426	691107		SCREW -(Governor Blade)
444	691868		GASKET, Drive Gear Cover
523	692040		DIPSTICK
524	691876		SEAL, O-Ring
525	691320		TUBE, Dipstick
529	692189		GROMMET
635	66538S		BOOT, Spark PLug
668	692889		SPACER
718	690959		PIN, Locating -(Cylinder)

1058 OPERATOR'S MANUAL

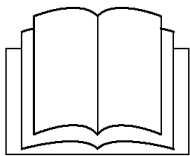

1330 REPAIR MANUAL


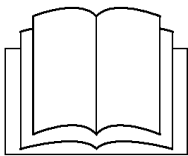


1319 WARNING LABEL









REQUIRED when replacing parts with warning labels affixed.

358 ENGINE GASKET SET










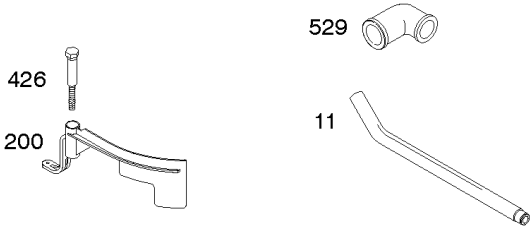
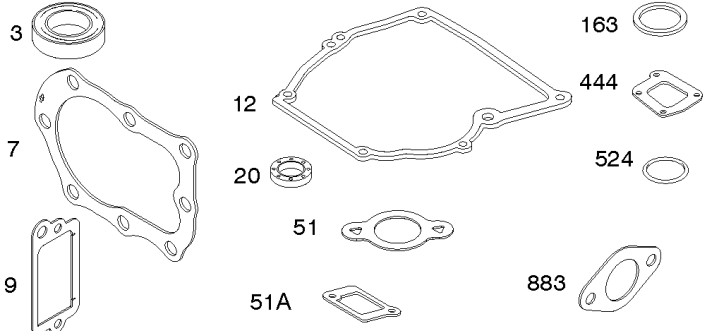


1095 VALVE GASKET SET

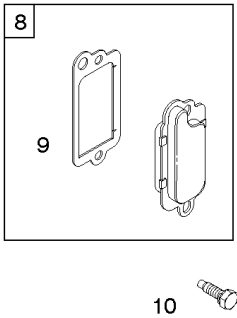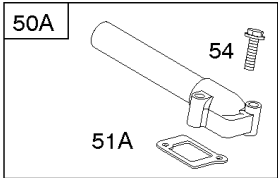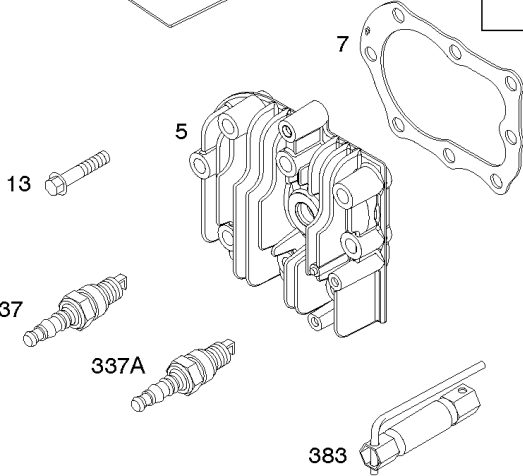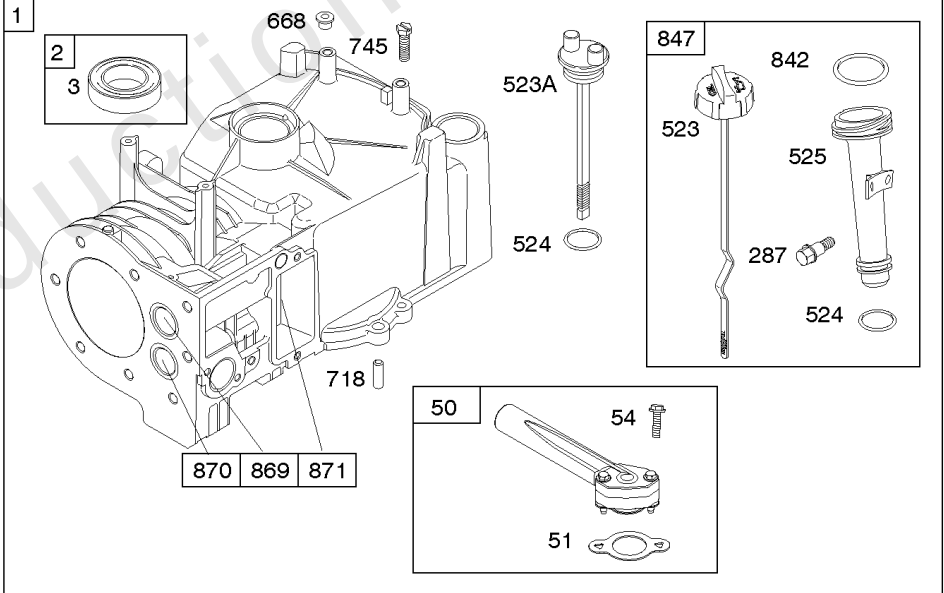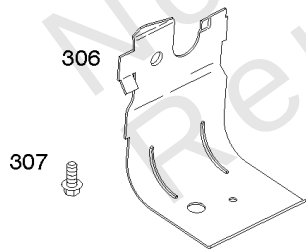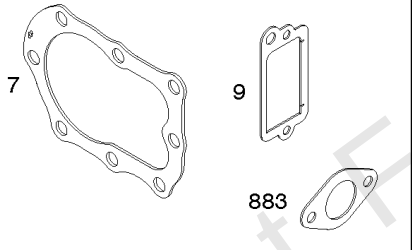

Cylinder, Cylinder Head, Gasket Set - Engine, Gasket Set - Valve, Lubrication, Operator's

REF NO	PART NO	QTY	DESCRIPTION
745	691146		SCREW -(Brake) (7/8)
842	691870		SEAL, O-Ring -(Dipstick Tube)
847	691440		DIPSTICK/TUBE ASSY
869	699641		SEAT, Valve -(Intake) -Used After Code Date 03080300
869	691701		SEAT-VALVE -(Intake) -Used Before Code Date 03080400
870	699642		SEAT, Valve -(Exhaust) -Used After Code Date 03080300
870	691702		SEAT, Valve -(Exhaust) -Used Before Code Date 03080400
871	231348		BUSHING-VALVE GUIDE -(Exhaust) -Used Before Code Date 03080400
871	699643		BUSHING, Valve Guide -(Exhaust) -Used After Code Date 03080300
871	63709		BUSHING, Valve Guide -(Intake)
883	691880		GASKET-EXHAUST
1058	277038		MANUAL, Operator's
1095	498526		GASKET SET, Valve
1319	794467		LABEL, Warning
1330	270962		REP MAN-1 CYL L-HD

 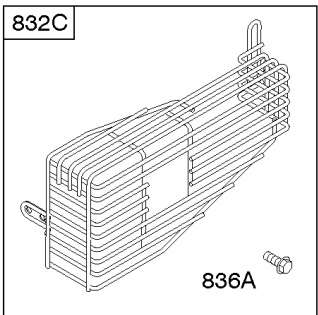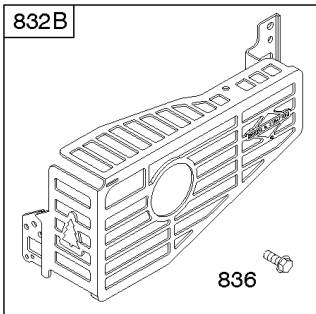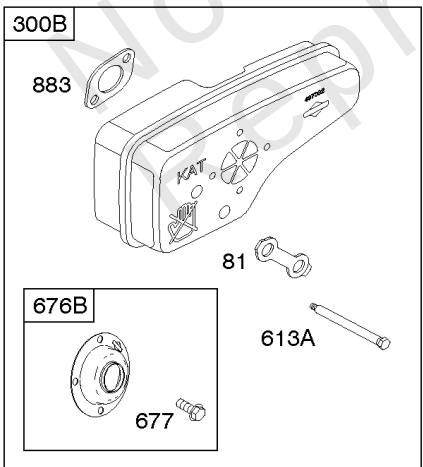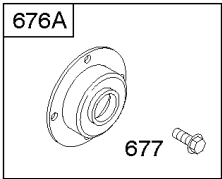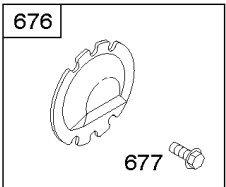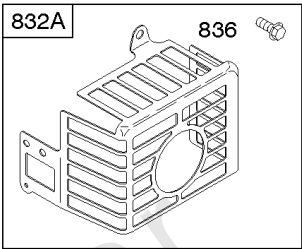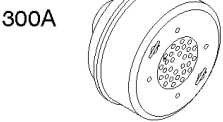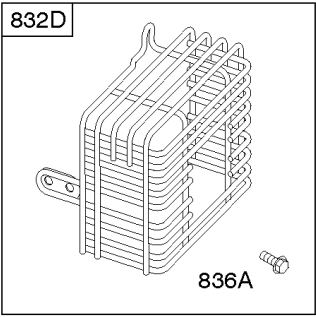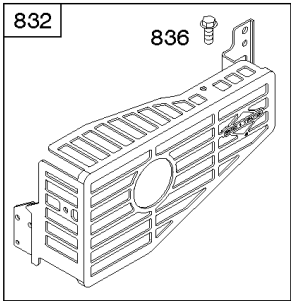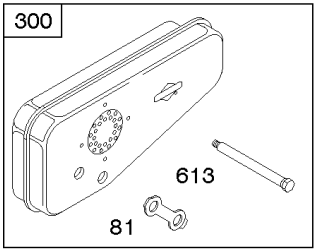


Exhaust System

REF NO	PART NO	QTY	DESCRIPTION
81	691179		LOCK, Muffler Screw
300	692307		MUFFLER -(Super Lo Tone)
300A	394569S		MUFFLER -(Round Lo Tone)
613	691413		SCREW -(Muffler) (Super Lo Tone)
676	393756		DEFLECTOR, Muffler -(Side Outlet)
677	690661		SCREW -(Muffler Deflector)
832	699299		GUARD, Muffler -(Super Lo Tone)
832A	699670		GUARD-MUFFLER -(Round Lo Tone)
836	690664		SCREW -(Muffler Guard) (13/32)
836A	790745		SCREW -(Muffler Guard) (1/2)
883	691880		GASKET-EXHAUST

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	10T8020015	1	Replacement Engine
	398210	1	Replacement Short Block
	-----		Top No-Load Speed: 3300 -Trim: ALL
	-----		Service Note: Replacement engine listed is not available in the State of California. Repair with Short Block and individual parts.

Not For Reproduction

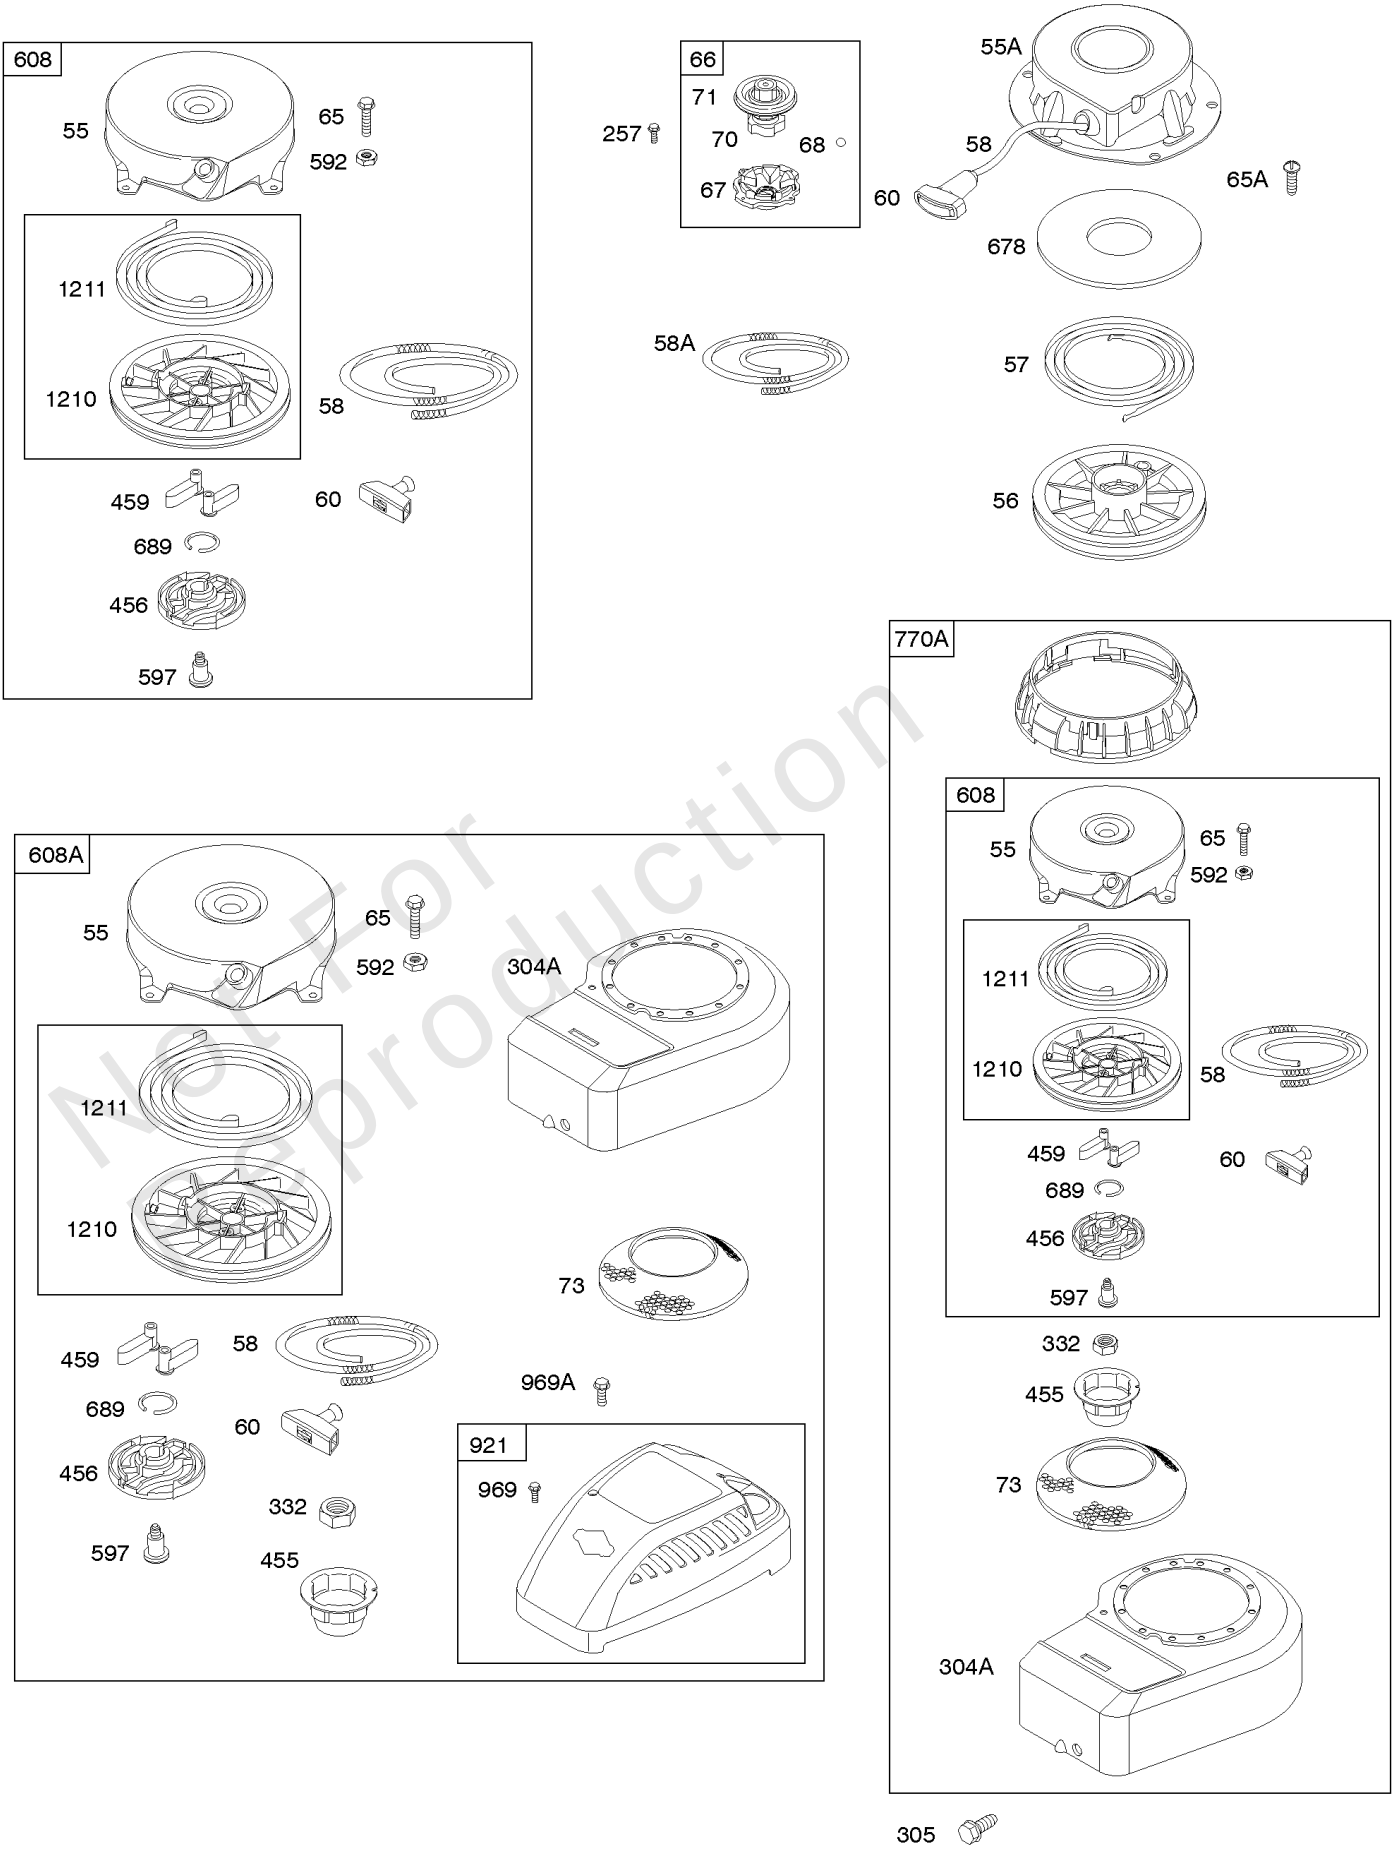

Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
55	692144		HOUSING, Rewind Starter
55A	393576		HOUSING, Rewind Starter
56	280439S		PULLEY, Rope Starter
57	490179		SPRING-REWIND STR
58	691921		ROPE, Starter -(70)
58A	697316		ROPE, Starter -(88 5/8)
60	691915		GRIP, Starter Rope
65	690837		SCREW -(Rewind Starter)
65A	690338		SCREW -(Rewind Starter) (3/8)
66	399671		CLUTCH-STARTER
67	394897		HOUSING, Clutch
68	691604		BALL, Clutch
70	691945		RATCHET-CLUTCH
71	691359		COVER, Ratchet
73	699850		SCREEN, Rotating -Used After Code Date 97052500
257	691660		SCREW -(Starter Clutch)
304A	694236		HOUSING-BLOWER -(Compliance Engines) -Used After Code Date 99010300
304A	694051		HOUSING-BLOWER -(Non Compliance Engines) -Used After Code Date 99010300
305	692198		SCREW -(Blower Housing)
332	690662		NUT -(Flywheel)
455	691236		CUP, Flywheel
456	692299		PLATE-PAWL FRICTION
459	281505S		PAWL-RATCHET
592	690800		NUT -(Rewind Starter)
597	691696		SCREW -(Pawl Friction Plate)
608	499706		STARTER, Rewind -(88 5/8 Rope) -Used After Code Date 97071300
608A	499926		KIT STARTER-REWIND -(Non Compliance Engines) (70 Rope)
678	490817		SPACER-REWIND -(Rewind)
689	691855		SPRING-FRICTION
770A	499915		KIT, Rewind/Blower Housing -(Compliance Engines) -Used Before Code Date 97100600
921	694044		HOUSING, Blower
969	692198		SCREW -(Blower Housing) (1/2)
969A	694046		SCREW -(Blower Housing) (2 1/4)
1210	499901		PULLEY/SPRING ASSY -(Pulley)
1211	499901		PULLEY/SPRING ASSY -(Spring)

