

 


Parts Manual

Mfg. No: 10G902-0125-B1

Model Components	Page
Air Cleaner, Controls, Governor Spring, Ignition.	4
Blower Housing/Shrouds, Flywheel, Rewind Starter.	6
Brake, Exhaust System.	8
Camshaft, Crankcase Cover/Sump, Crankshaft, Piston/Rings/Connecting Rod.	10
Carburetor, Fuel Supply.	12
Cylinder, Cylinder Head, Engine/Valve Gasket Sets, Lubrication, Operator's Manual, Warning Label.	14
Replacement Engine - US & Canada.	18






Not For
Reproduction

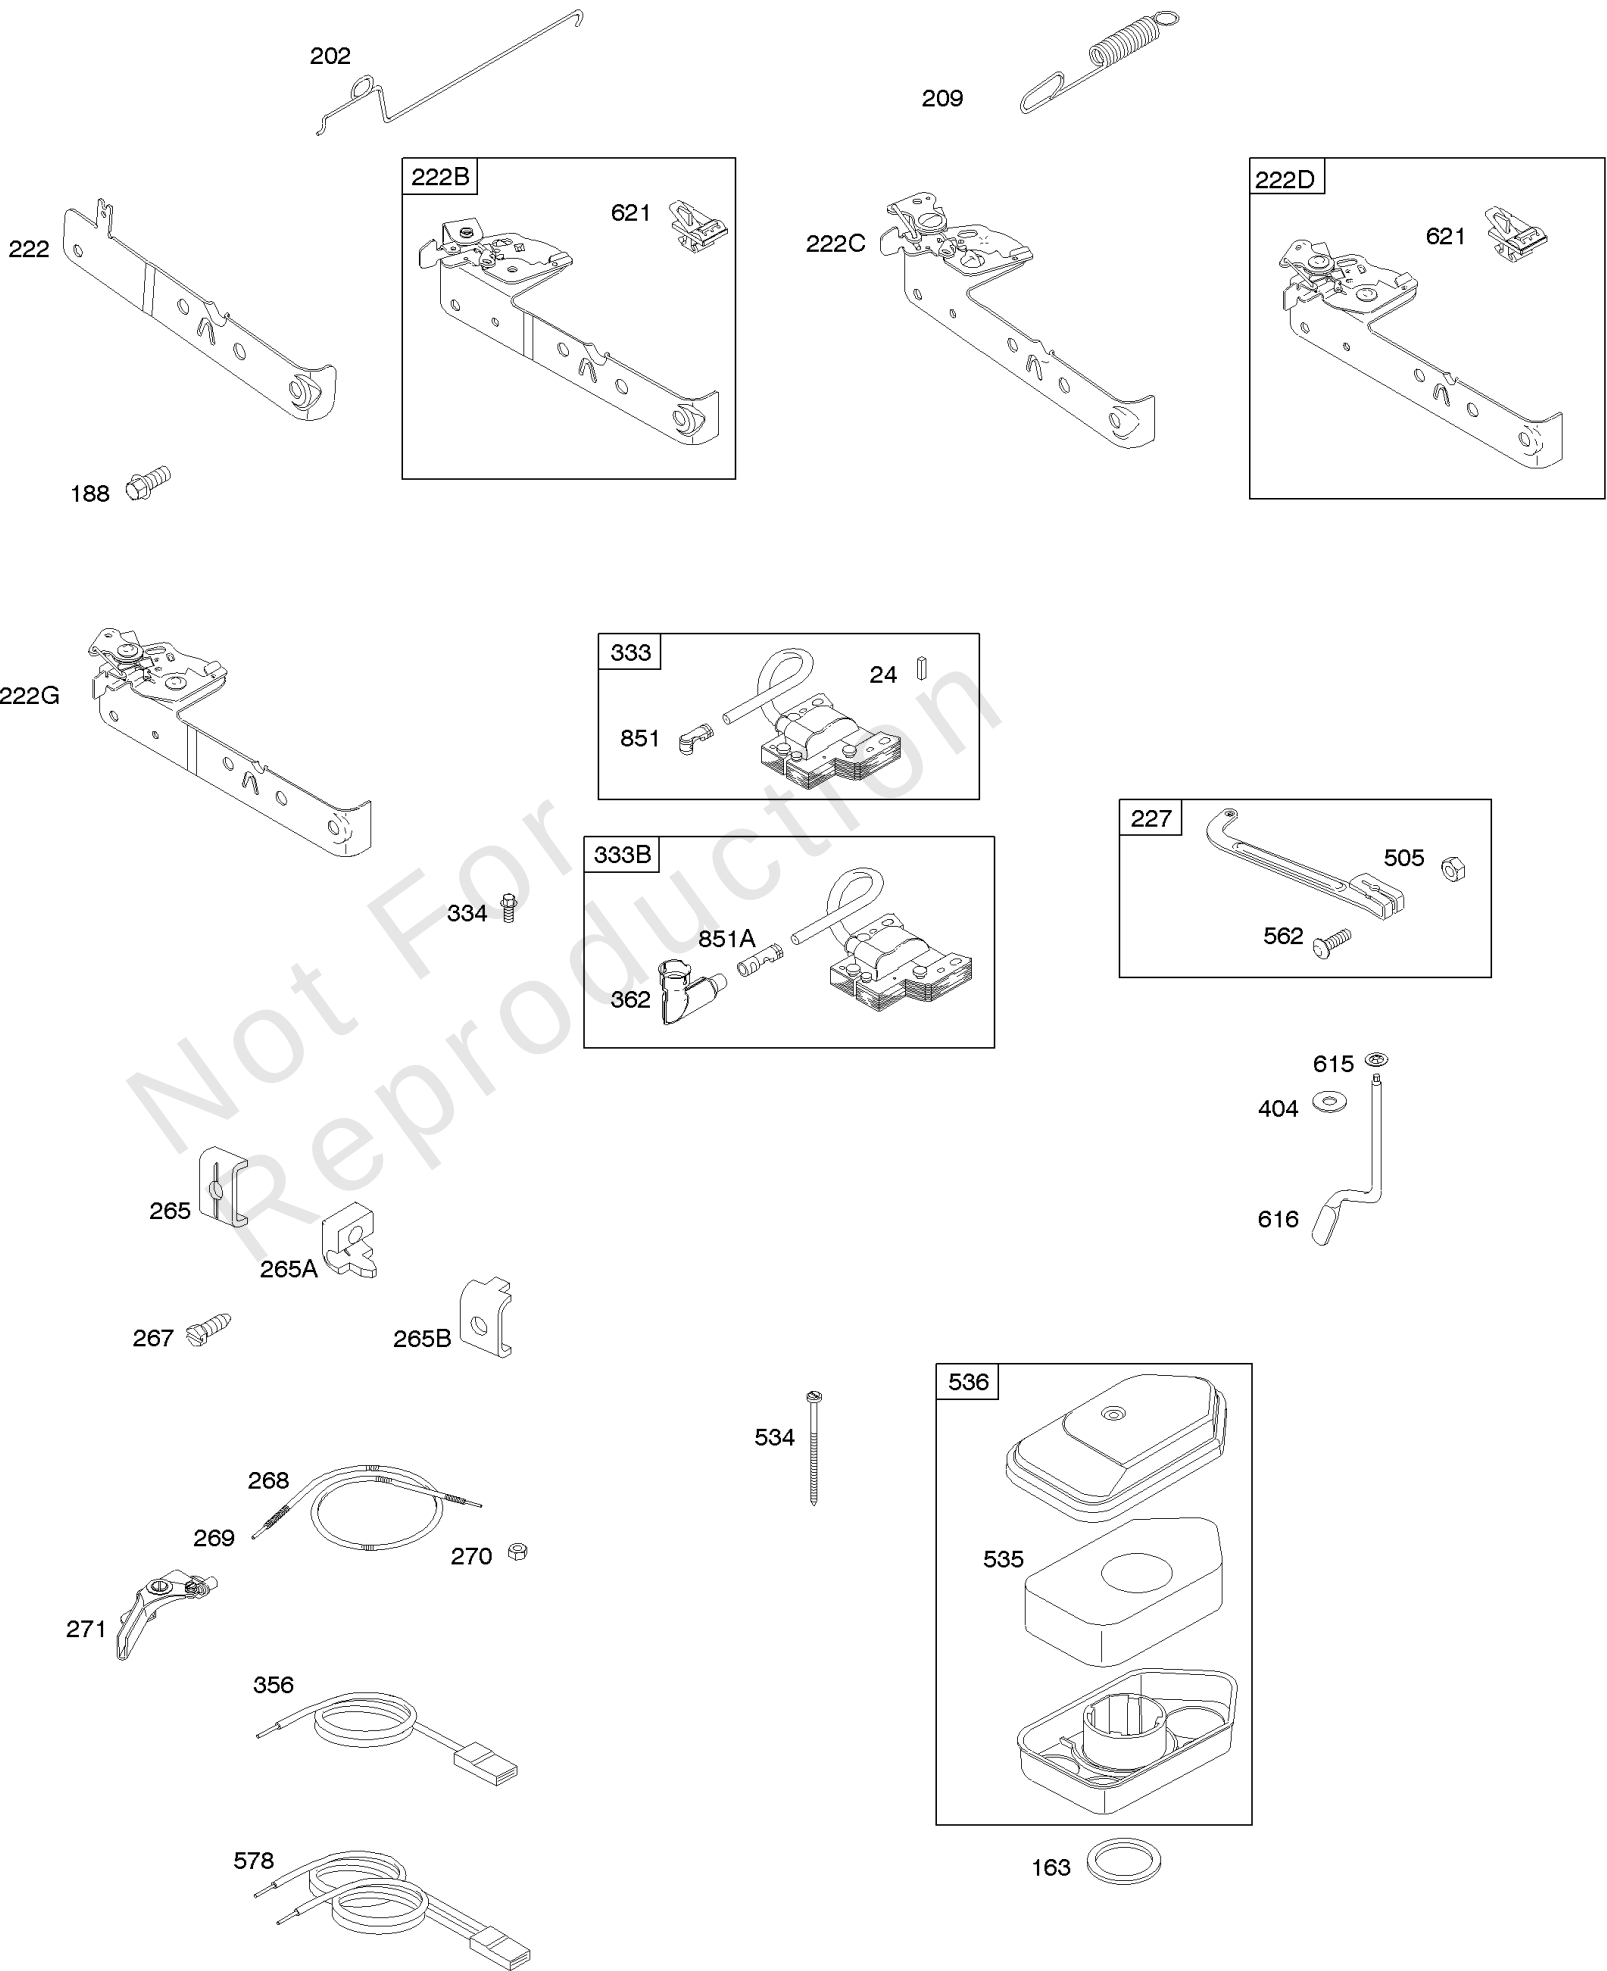

Air Cleaner, Controls, Governor Spring, Ignition











REF NO	PART NO	QTY	DESCRIPTION
24	222698S		KEY, Flywheel
163	271139S		GASKET, Air Cleaner -(Air Cleaner)
188	692198		SCREW -(Control Bracket)
202	698835		LINK, Mechanical Governor
209	698726		SPRING, Governor -(Pink)
222D	699577		BRACKET, Control
227	697402		LEVER, Governor Control
265A	690798		CLAMP, Casing
267	691044		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(72" Long)(Cut To Required Length)
269	691026		WIRE, Control -(78" Long)(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
333	793281		ARMATURE, Magneto
333B	793352		ARMATURE, Magneto -(Snap In Spark Plug Boot)
334	691061		SCREW -(Magneto Armature)
356	692390		WIRE, Stop
362	793351		SHIELD-SPARK PLUG
404	690272		WASHER -(Governor Crank)
505	691251		NUT -(Governor Control Lever)
534	691417		SCREW -(Air Cleaner)
535	698369		FILTER, Air Cleaner Foam
536	698472		CLEANER, Air
562	92613		BOLT -(Governor Lever)
615	690340		RETAINER, Governor Shaft
616	697405		CRANK, Governor
621	692310		SWITCH, Stop
851	493880S		TERMINAL, Spark Plug
851A	692424		TERMINAL, Spark Plug

     1036 EMISSIONS LABEL

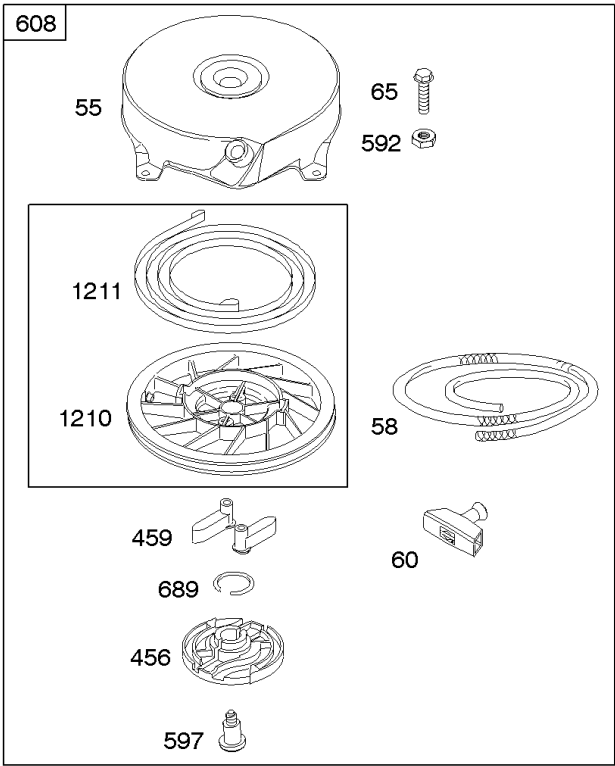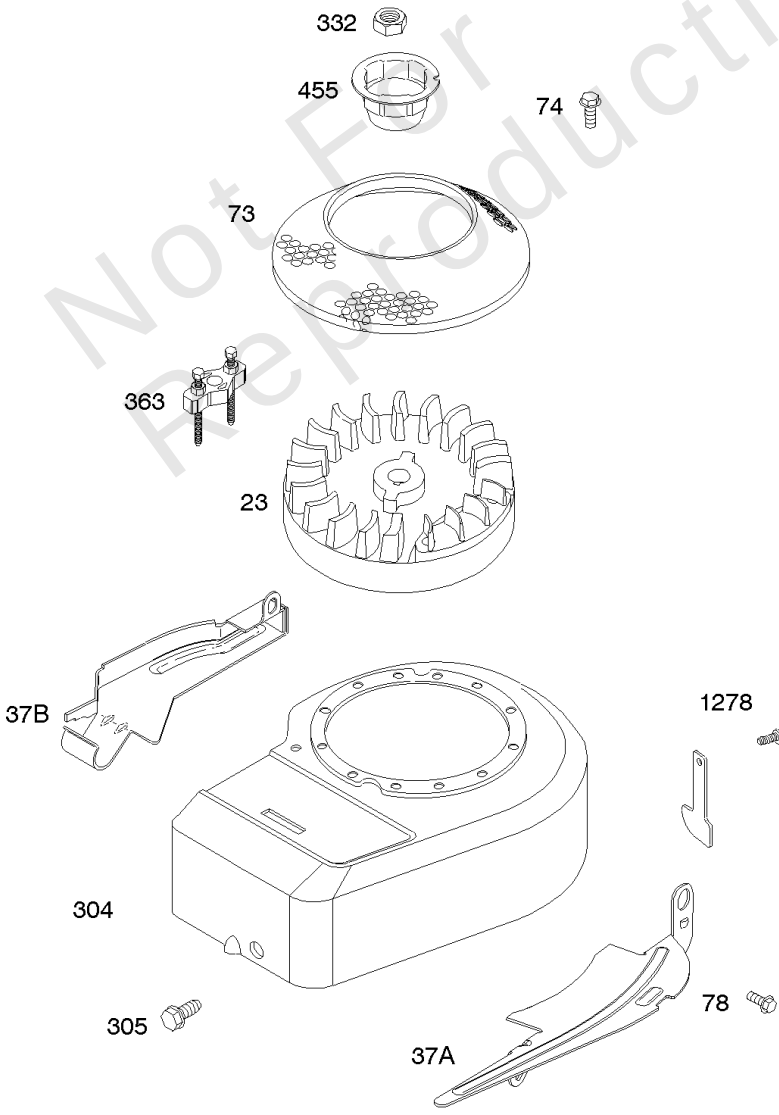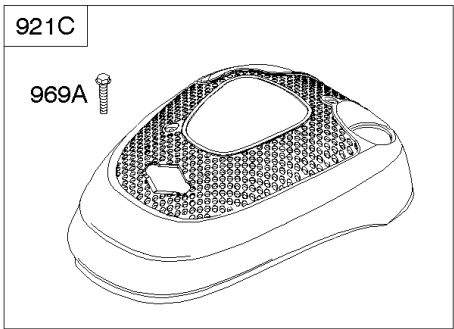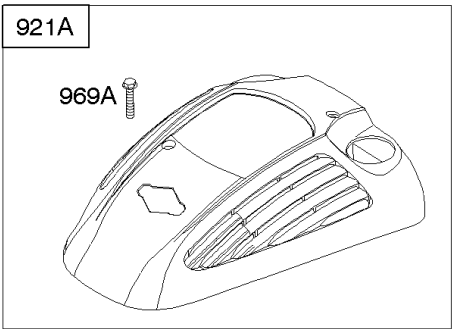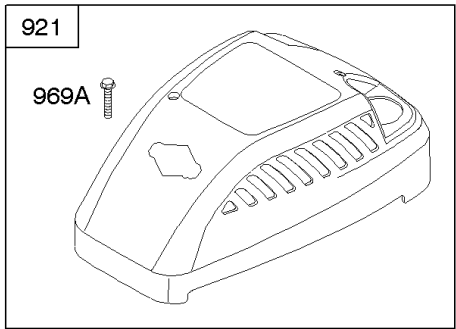

Blower Housing/Shrouds, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
23	795695		FLYWHEEL
37A	793748		GUARD, Flywheel -(Muffler Side)
37B	697403		GUARD, Flywheel -(Carburetor Side)
55	692144		HOUSING, Rewind Starter
58	697316		ROPE, Starter -(88 5/8)
60	691915		GRIP, Starter Rope
65	690837		SCREW -(Rewind Starter)
73	699850		SCREEN, Rotating
74	690345		SCREW -(Rotating Screen)
78	692198		SCREW -(Flywheel Guard)
304	790297		HOUSING, Blower -(Non Compliance Engines)
305	692198		SCREW -(Blower Housing)
332	690662		NUT -(Flywheel)
363	19069		PULLER, Flywheel
455	691236		CUP, Flywheel
456	692299		PLATE-PAWL FRICTION
459	281505S		PAWL-RATCHET
592	690800		NUT -(Rewind Starter)
597	691696		SCREW -(Pawl Friction Plate)
608	499706		STARTER, Rewind
689	691855		SPRING-FRICTION
921A	793973		HOUSING, Blower
969A	694046		SCREW -(Blower Housing) (2 1/3)
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1210	499901		PULLEY/SPRING ASSY -(Pulley)
1211	499901		PULLEY/SPRING ASSY -(Spring)
1278	691002		SCREW -(Governor Nut Guard) -Used Before Code Date 05121300

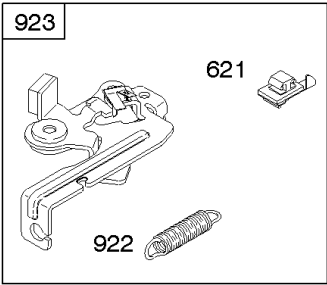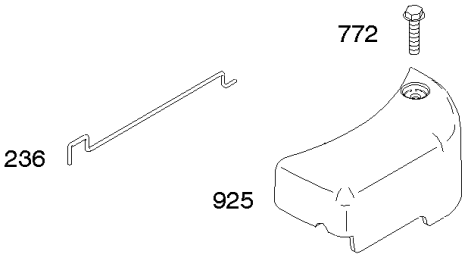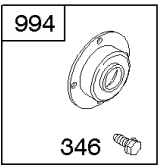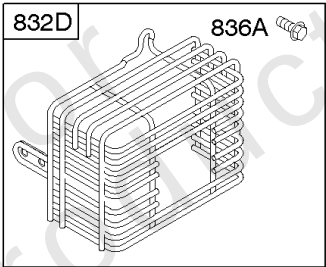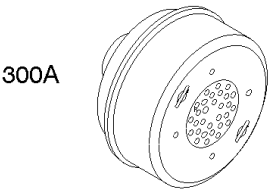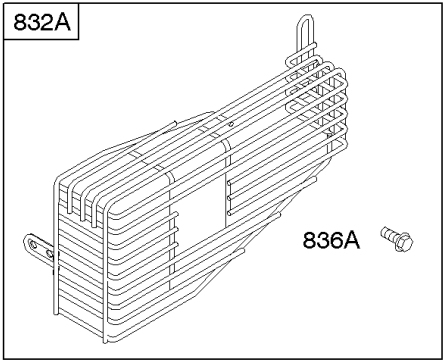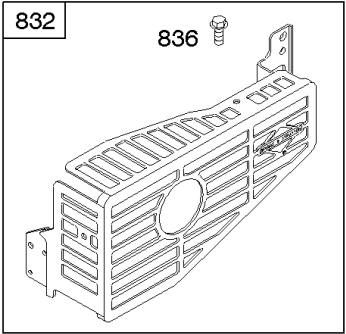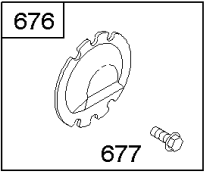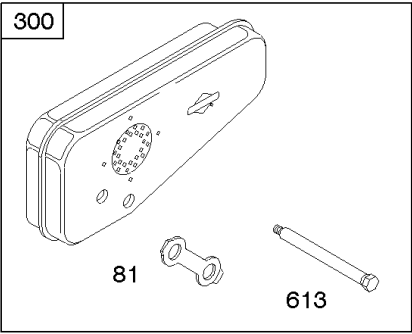          


Brake, Exhaust System

REF NO	PART NO	QTY	DESCRIPTION
81	691179		LOCK, Muffler Screw
300	692307		MUFFLER -(Super Lo Tone)
613	691413		SCREW -(Muffler)
621	692310		SWITCH, Stop
668	692889		SPACER
729	690586		CLIP, Wire
745	691146		SCREW -(Brake) (7/8)
745A	690859		SCREW -(Brake) (1/2)
772	691111		SCREW -(Linkage Cover)
832A	790743		GUARD, Muffler
836A	790745		SCREW -(Muffler Guard) (1/2)
836B	691125		SCREW -(Muffler Guard) (5/8)
922	692135		SPRING, Brake
923	691487		BRAKE


Camshaft, Crankcase Cover/Sump, Crankshaft, Piston/Rings/Connecting Rod

 Mfg. No: 10G902-0125-B1

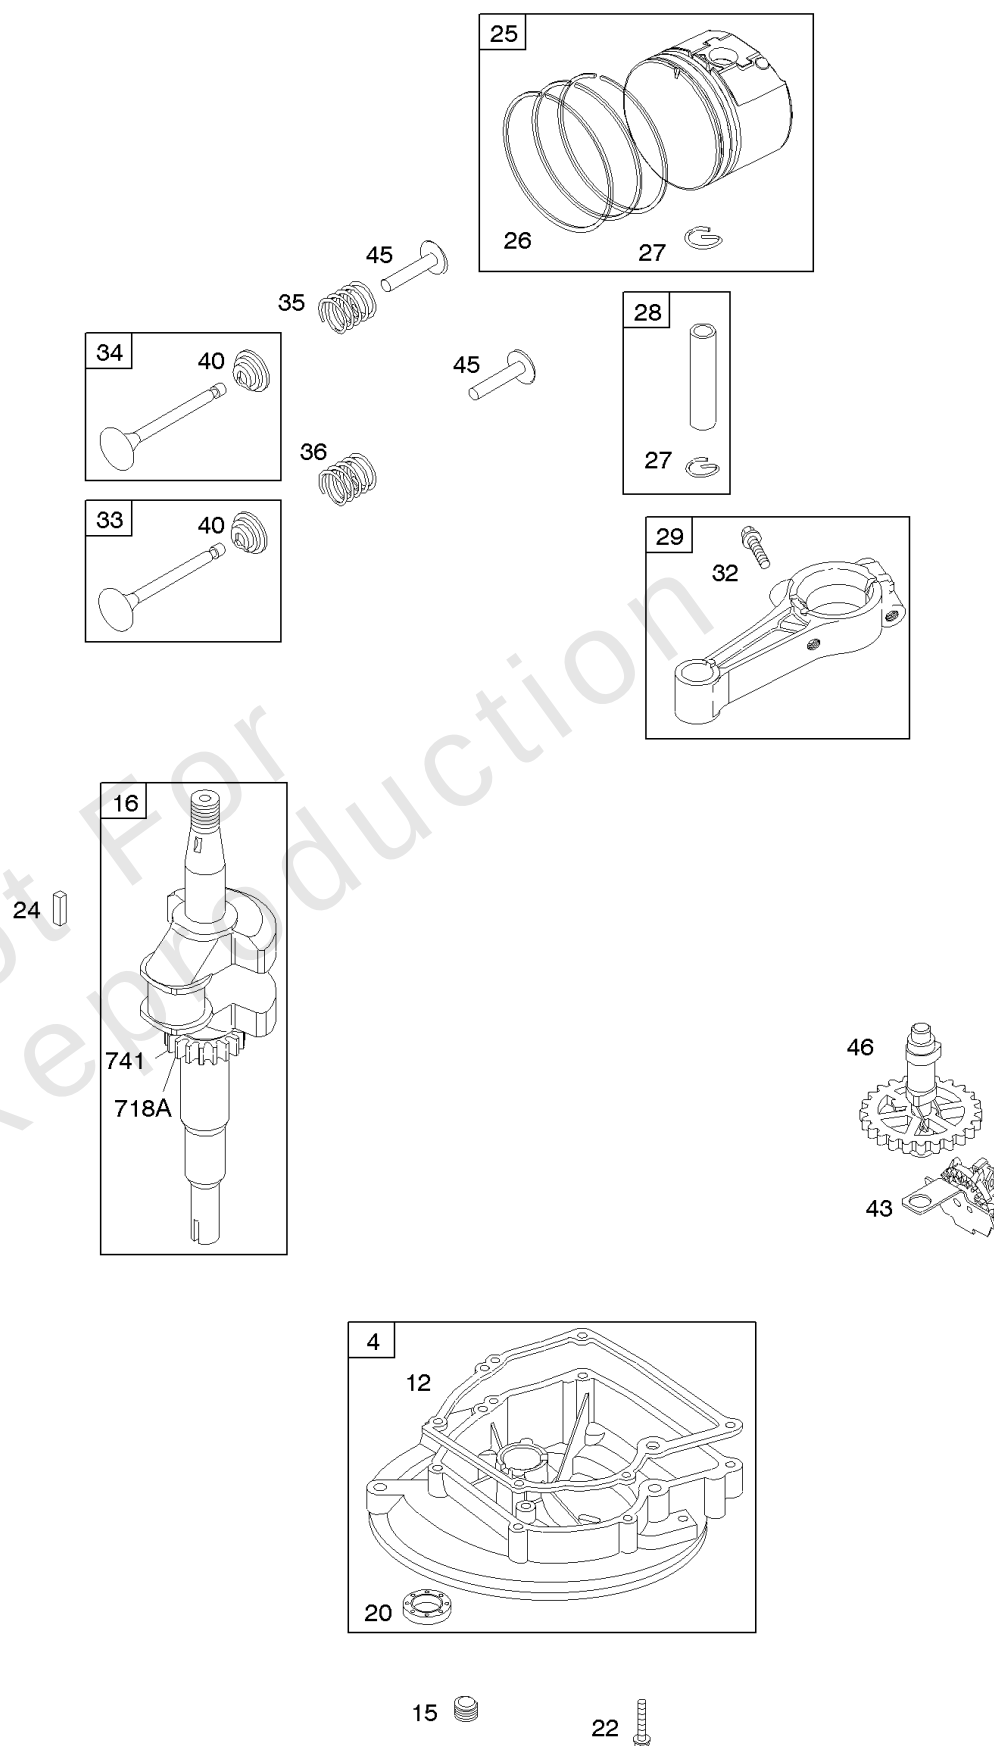

Camshaft, Crankcase Cover/Sump, Crankshaft, Piston/Rings/Connecting Rod


REF NO	PART NO	QTY	DESCRIPTION
4	798264		SUMP, Engine
12	270895		GASKET, Crankcase -(.005)
12	270896		GASKET, Crankcase -(.009)
12	692218		GASKET, Crankcase -(.015)(Standard)
15	691680		PLUG, Oil Drain
16	796216		CRANKSHAFT
20	391483S		SEAL, Oil -(PTO Side)
22	692551		SCREW -(Crankcase Cover/Sump)
24	222698S		KEY, Flywheel
25	795691		PISTON ASSEMBLY -(Standard)
25	795689		PISTON ASSEMBLY -(.020 Oversize) -Used After Code Date 04111400
26	498680		RING SET-STD -(Standard) -Used Before Code Date 03080400
26	498682		SET, Ring -(.020 Oversize) -Used Before Code Date 04111500
26	699658		SET, Ring -(Standard) -Used After Code Date 03080300 -Used Before Code Date 04111500
26	795688		SET, Ring -(.020 Oversize) -Used After Code Date 04111400
26	795690		SET, Ring -(Standard) -Used After Code Date 04111400
27	691588		LOCK, Piston Pin
28	699659		PIN, Piston -(Standard) -Used After Code Date 03080300
28	298909		PIN, Piston -(Standard) -Used Before Code Date 03080400
29	699654		ROD-CONNECTING
32	691664		SCREW -(Connecting Rod)
33	296676		VALVE, Exhaust -(Grooved Stem-Includes Retainer)
34	296677		VALVE, Intake -(Grooved stem-includes Retainer)
35	690520		SPRING-VALVE -(Intake)
36	690520		SPRING-VALVE -(Exhaust)
40	692194		RETAINER, Valve
43	697799		SLINGER, Governor/Oil
45	691762		TAPPET, Valve
46	691998		CAMSHAFT
718A	499047		PIN, Locating -(Crankshaft)
741	691805		GEAR, Timing

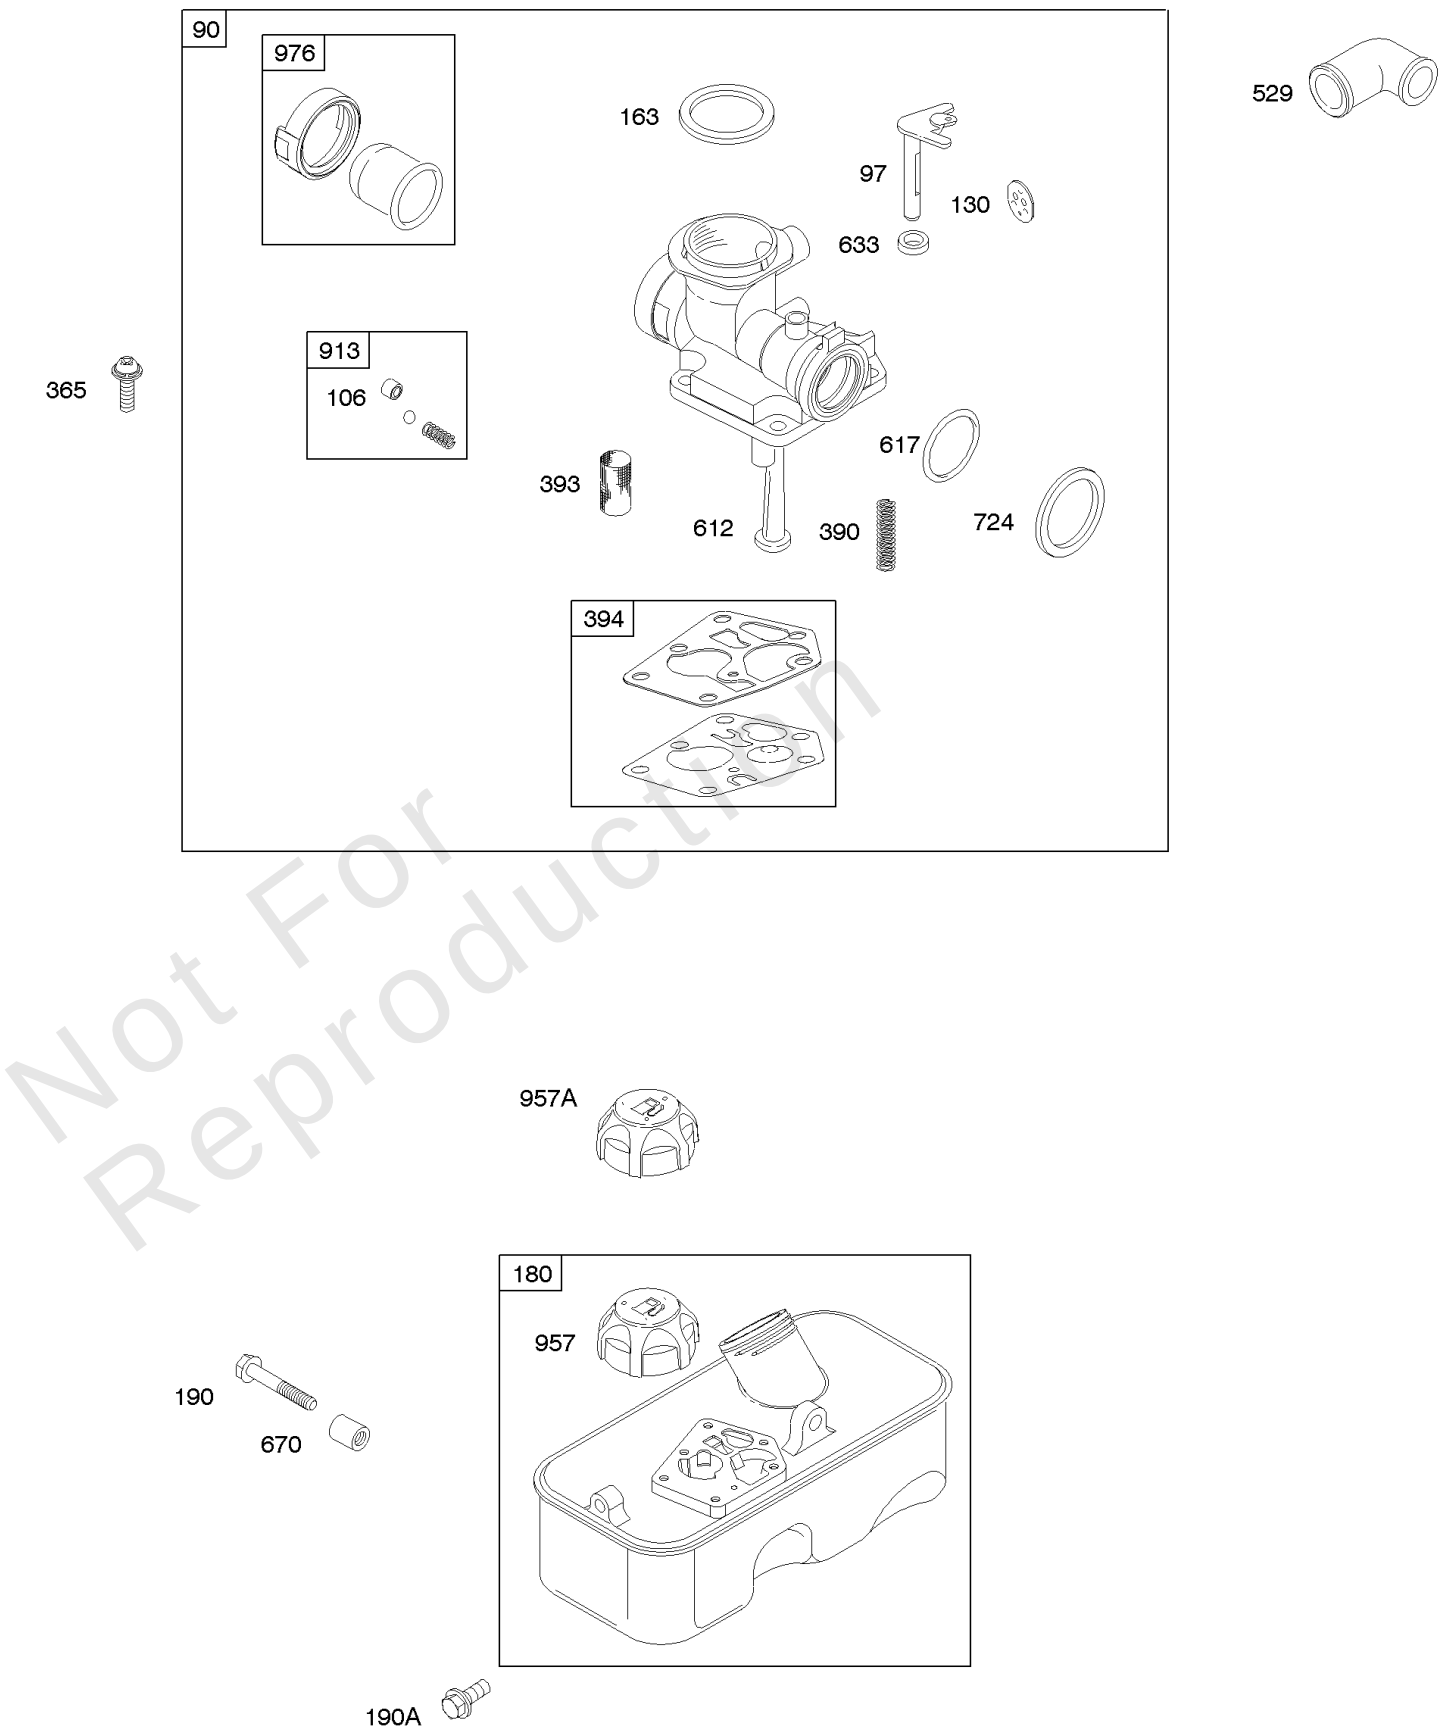 


Carburetor, Fuel Supply

REF NO	PART NO	QTY	DESCRIPTION
90	697415		CARBURETOR
97	697414		SHAFT, Throttle
106	691901		SEAT, Inlet
130	691190		VALVE, Throttle
163	271139S		GASKET, Air Cleaner -(Air Cleaner)
180	494406		TANK, Fuel -(Metal)
190	691640		SCREW -(Fuel Tank) (1 3/4)
190A	691108		SCREW -(Fuel Tank) (9/16" Long)
365	790029		SCREW -(Carburetor)
390	691839		SPRING-CHOKE DIAPH
393	691837		SCREEN, Carburetor
394	795083		DIAPHRAGM, Carburetor
529	692189		GROMMET
612	496046S		TUBE-PICK UP
617	270344S		SEAL, O-Ring -(Intake Manifold)
633	691321		SEAL, Choke/Throttle Shaft -(Throttle)
670	691633		SPACER, Fuel Tank
724	697478		RETAINER, Seal
913	494409		SEAT, Valve
957	497929S		CAP, Fuel Tank -(Plastic)
976	694394		PRIMER-CARBURETOR

 1058 OPERATOR'S MANUAL

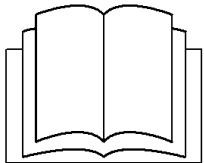

1330 REPAIR MANUAL

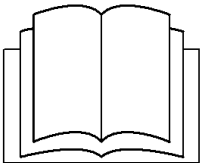 

1319 WARNING LABEL

WARNING

Read and follow Operating Instructions before running engine.

 
Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.

Engines emit carbon monoxide, **DO NOT** run in enclosed area.









Muffler area temperature may exceed 150°F. Do not touch hot parts.

REQUIRED when replacing parts with warning labels affixed.

358 ENGINE GASKET SET

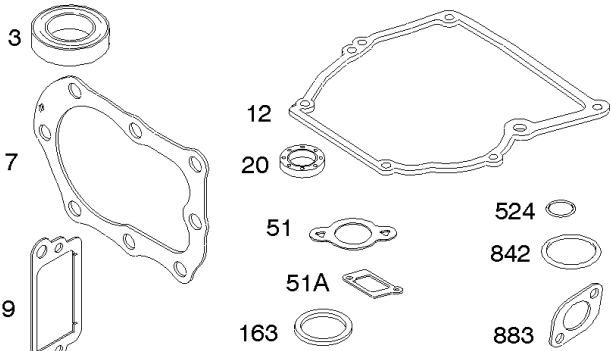


1095 VALVE GASKET SET

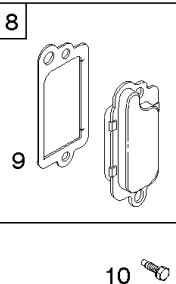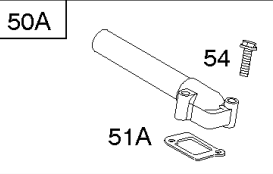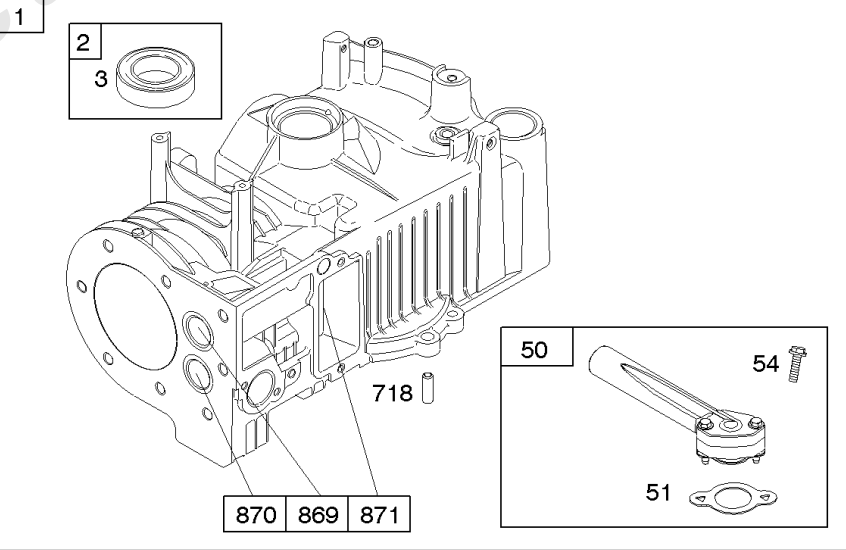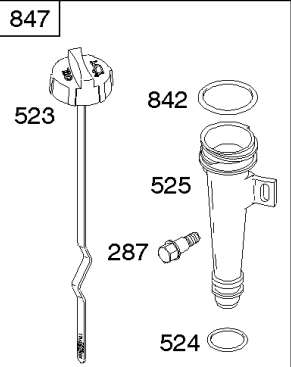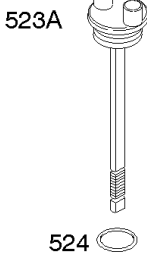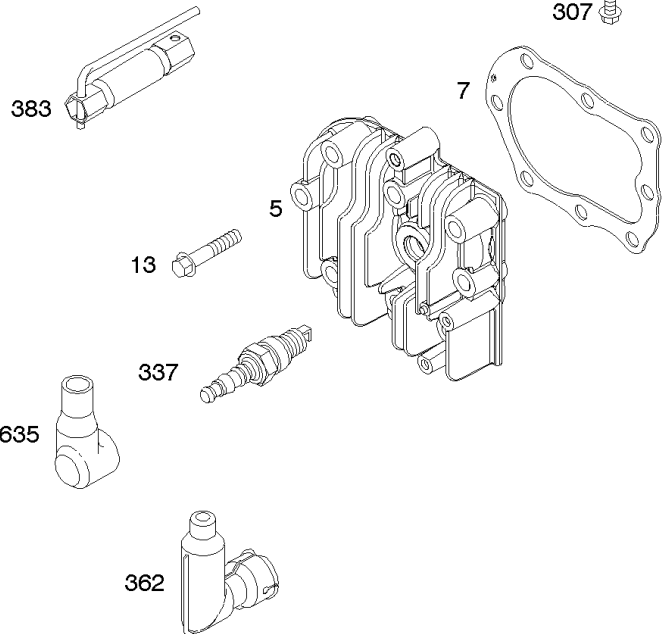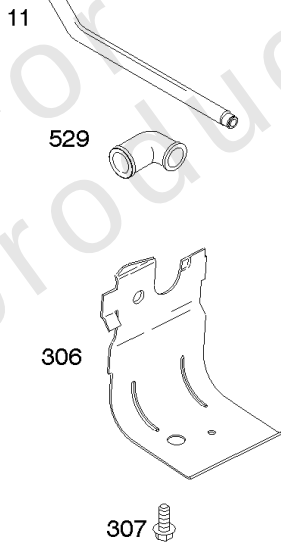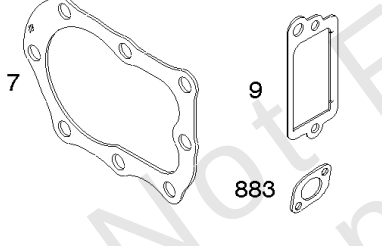        


Cylinder, Cylinder Head, Engine/Valve Gasket Sets, Lubrication, Operator's Manual,

REF NO	PART NO	QTY	DESCRIPTION
1	699650		CYLINDER ASSEMBLY
2	796961		KIT, Bushing/Seal -(Magneto Side)
3	299819S		SEAL, Oil -(Magneto Side)
5	790169		HEAD, Cylinder
7	698717		GASKET-CYL HD
8	791781		BREATHER ASSEMBLY
9	695890		GASKET-BREATHER
10	691666		SCREW -(Breather Assembly)
11	691245		TUBE, Breather
12	270896		GASKET, Crankcase -(.009)
12	692218		GASKET, Crankcase -(.015)(Standard)
12	270895		GASKET, Crankcase -(.005)
13	691640		SCREW -(Cylinder Head)
20	391483S		SEAL, Oil -(PTO Side)
50	699644		MANIFOLD, Intake -Used After Code Date 03080300
50A	693446		MANIFOLD-INTAKE -Used Before Code Date 03080400
51	699649		GASKET, Intake -Used After Code Date 03080300
51A	270345S		GASKET, Intake -Used Before Code Date 03080400
54	691111		SCREW -(Intake Manifold)
163	271139S		GASKET, Air Cleaner -(Air Cleaner)
287	691002		SCREW -(Dipstick Tube)
306	690400		SHIELD, Cylinder -Used Before Code Date 04071400
307	690345		SCREW -(Cylinder Shield) -Used Before Code Date 04071400
337	697451		PLUG, Spark
358	794209		GASKET SET, Engine
362	793351		SHIELD-SPARK PLUG
383	89838S		WRENCH, Spark Plug
523	692040		DIPSTICK
524	691876		SEAL, O-Ring
525	691320		TUBE, Dipstick
529	692189		GROMMET
635	66538S		BOOT, Spark PLug
668	692889		SPACER
718	690959		PIN, Locating -(Cylinder)
745	691146		SCREW -(Brake) (7/8)
842	691870		SEAL, O-Ring -(Dipstick Tube)

 1058 OPERATOR'S MANUAL

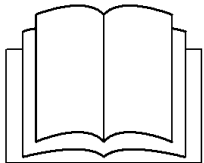

1330 REPAIR MANUAL

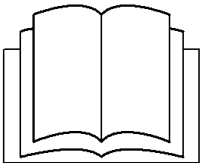 

1319 WARNING LABEL

WARNING

Read and follow Operating Instructions before running engine.

 
Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.

Engines emit carbon monoxide, **DO NOT** run in enclosed area.









Muffler area temperature may exceed 150°F. Do not touch hot parts.

REQUIRED when replacing parts with warning labels affixed.

358 ENGINE GASKET SET

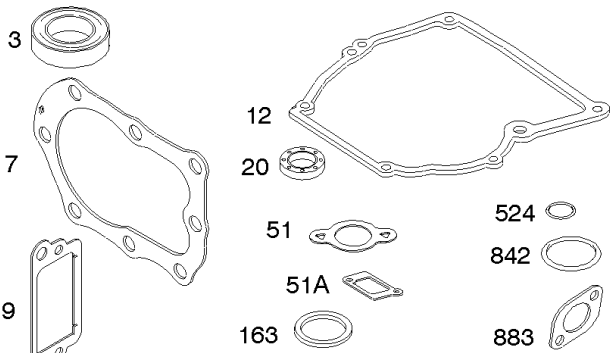

1095 VALVE GASKET SET

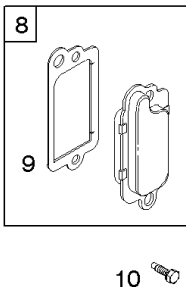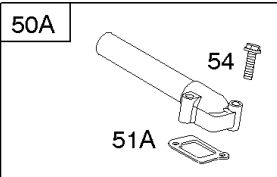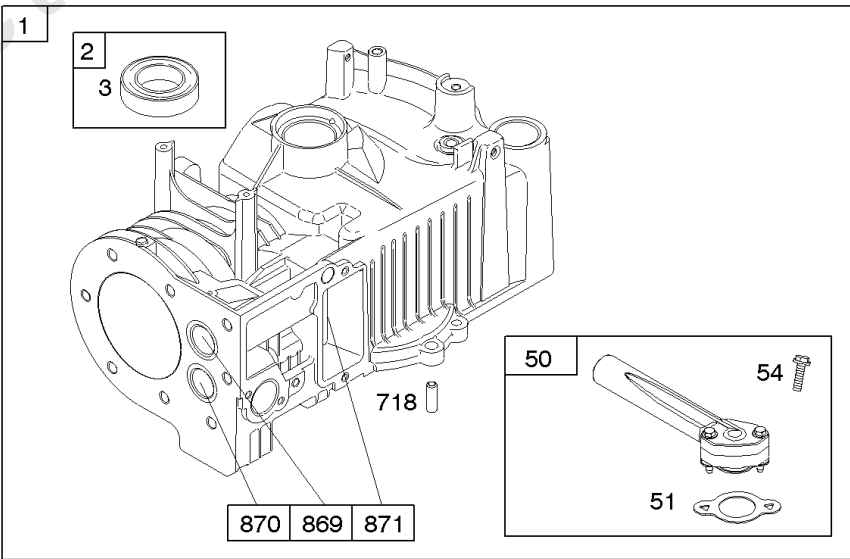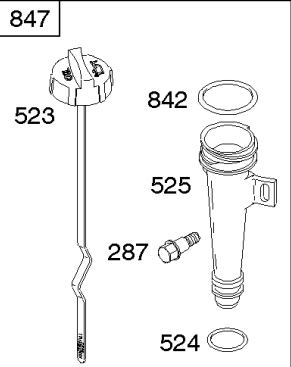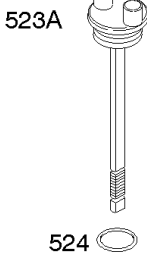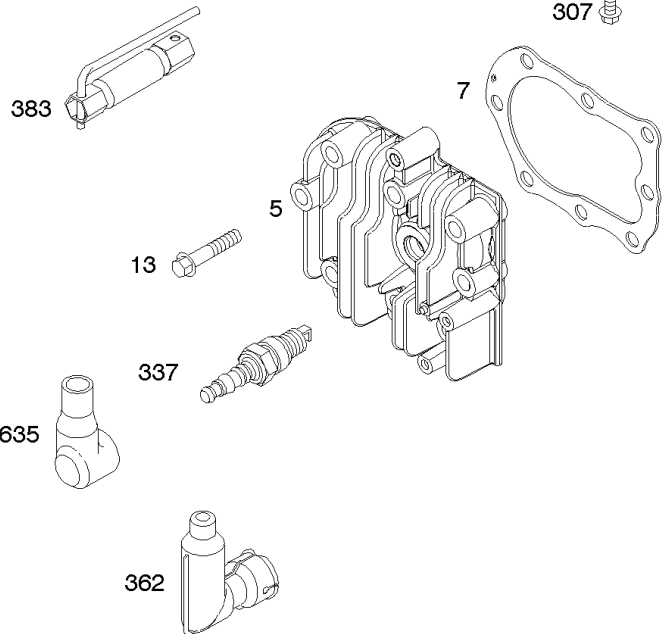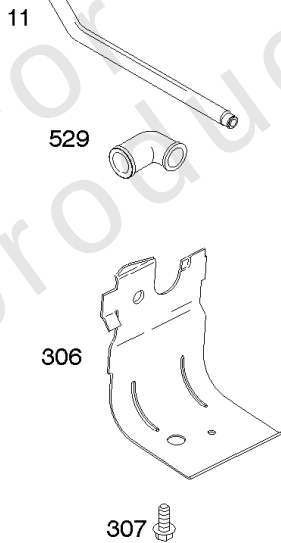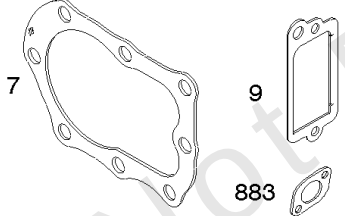        

Cylinder, Cylinder Head, Engine/Valve Gasket Sets, Lubrication, Operator's Manual,

REF NO	PART NO	QTY	DESCRIPTION
847	691440		DIPSTICK/TUBE ASSY
869	699641		SEAT, Valve -(Intake) -Used After Code Date 03080300
869	691701		SEAT-VALVE -(Intake) -Used Before Code Date 03080400
870	699642		SEAT, Valve -(Exhaust) -Used After Code Date 03080300
870	691702		SEAT, Valve -(Exhaust) -Used Before Code Date 03080400
871	231348		BUSHING-VALVE GUIDE -(Exhaust) -Used Before Code Date 03080400
871	699643		BUSHING, Valve Guide -(Exhaust) -Used After Code Date 03080300
871	63709		BUSHING, Valve Guide -(Intake)
883	691880		GASKET-EXHAUST
1058	277038		MANUAL, Operator's
1095	498526		GASKET SET, Valve
1319	794467		LABEL, Warning
1330	270962		REP MAN-1 CYL L-HD

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	10T8020016	1	Replacement Engine
	-----		Top No-Load Speed: 3000 -Trim: ALL
	-----		Service Note: Replacement engine listed is not available in the State of California. Repair with individual parts.
	-----		Service Note: Transfer Muffler and/or Spark Arrester Assembly from the original engine if suitable for additional service or add new parts as required
	-----		Service Note: Transfer Flywheel Assembly to the replacement engine.

