

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 


Parts Manual

Mfg. No: 121602-0155-E2


Model Components	Page
Air Cleaner, Exhaust System.	4
Blower Housing/Shrouds, Electric Start, Flywheel, Rewind Starter.	6
Brake, Controls, Governor Spring, Ignition.	10
Camshaft, Crankshaft, Cylinder, Engine Sump, Lubrication, Piston Group.	14
Carburetor, Fuel Supply.	20
Cylinder Head.	24
Kits/Gasket Sets.	26
Replacement Engine - US & Canada.	28

Not For
Reproduction

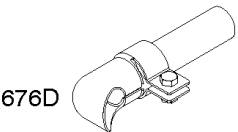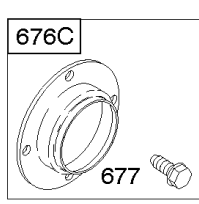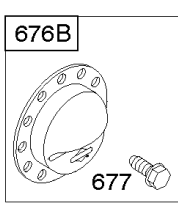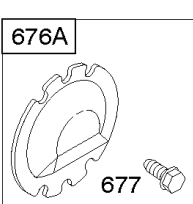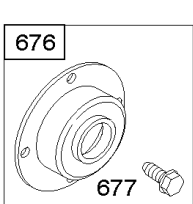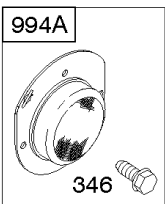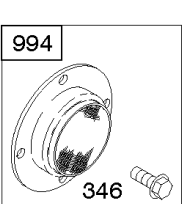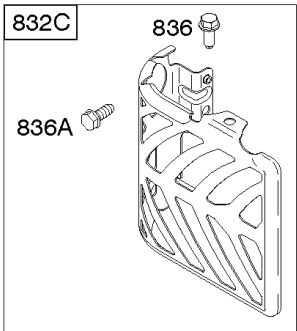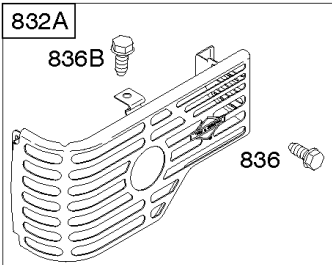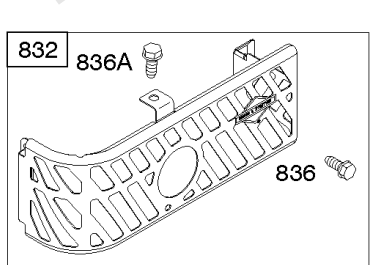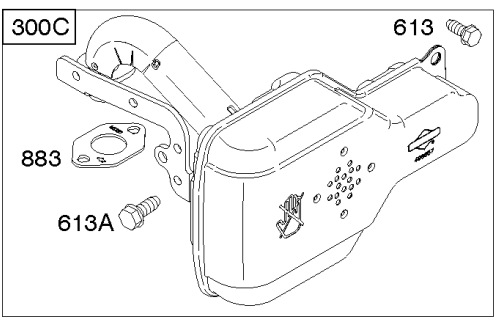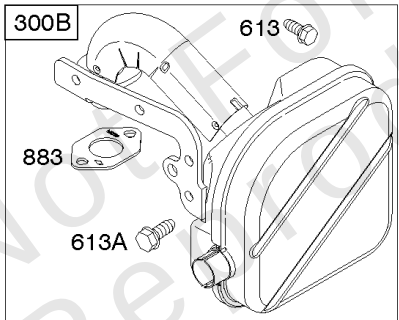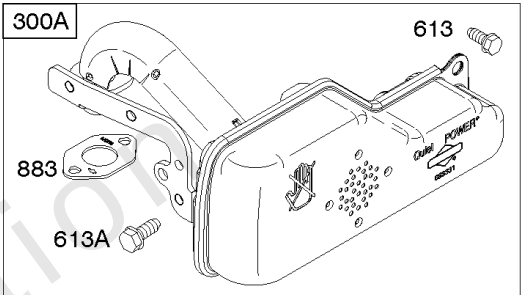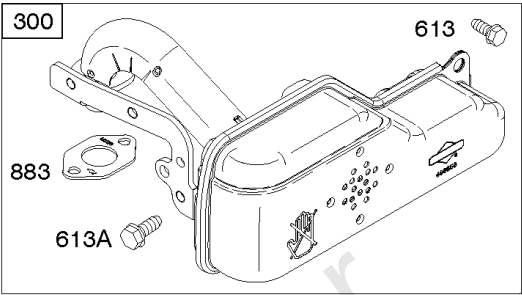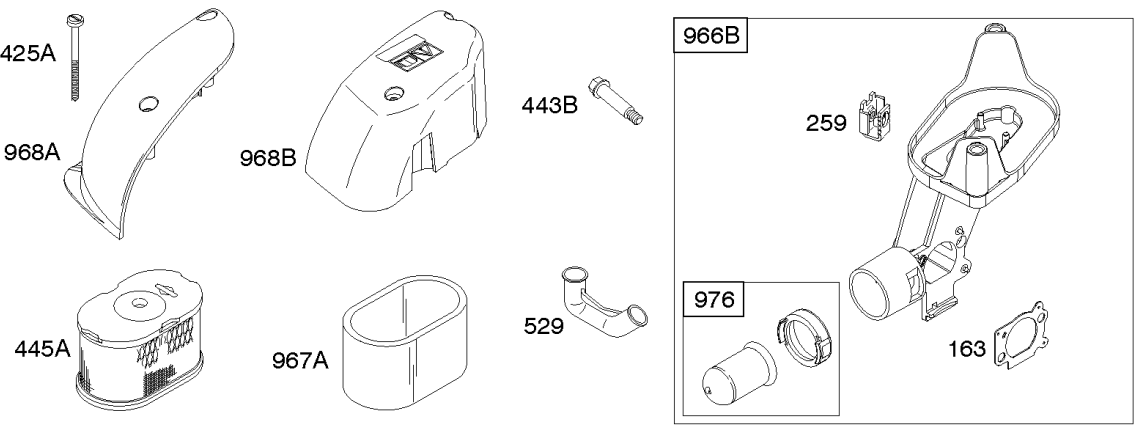


Air Cleaner, Exhaust System

REF NO	PART NO	QTY	DESCRIPTION
163	691894		GASKET, Air Cleaner -(Air Cleaner)
259	691189		BRACKET, Casing Clamp
300	692275		MUFFLER -(Super Quiet Lo Tone)
300A	692276		MUFFLER -(Quiet Lo Tone)
300C	694248		MUFFLER -(Super Quiet Power Lo Tone)
300B	699769		MUFFLER -(Square Lo Tone)
346	690661		SCREW -(Spark Arrestor)
425A	690244		SCREW -(Air Cleaner Cover)
443B	690255		SCREW -(Air Cleaner Primer Base)
445A	697029		FILTER-A/C CARTRIDGE
529	692937		TUBE, Breather
613	691108		SCREW -(Muffler)
613A	691140		SCREW -(Muffler)
676	397931		DEFLECTOR, Muffler -(Direct Out)(3/4 Diameter)
676A	393756		DEFLECTOR, Muffler -(Side Outlet)
676B	396548		DEFLECTOR, Muffler -(Single Louver)
676C	497682		DEFLECTOR, Muffler -(Direct Out)(1 3/16 Diameter)
676D	697915		DEFLECTOR, Muffler -(Square Lo Tone)
677	690661		SCREW -(Muffler Deflector)
832	691466		GUARD-MUFFLER -(Super Lo Tone)
832A	692984		GUARD, Muffler -(Quiet Lo Tone)
832C	695593		GUARD, Muffler -(Square Lo Tone)
836	691147		SCREW -(Muffler Guard)
836A	697551		SCREW -(Muffler Guard)
836B	692198		SCREW -(Muffler Guard)
883	691893		GASKET-EXHAUST
966B	690243		BASE-A/C PRIMER -(Primer)
967A	273356S		FILTER-A/C FOAM
968A	691342		COVER, Air Cleaner
968B	692435		COVER-AIR CLEANER
976	694395		PRIMER, Carburetor
994	692957		ARRESTOR-SPARK
994A	398067		ARRESTOR, Spark

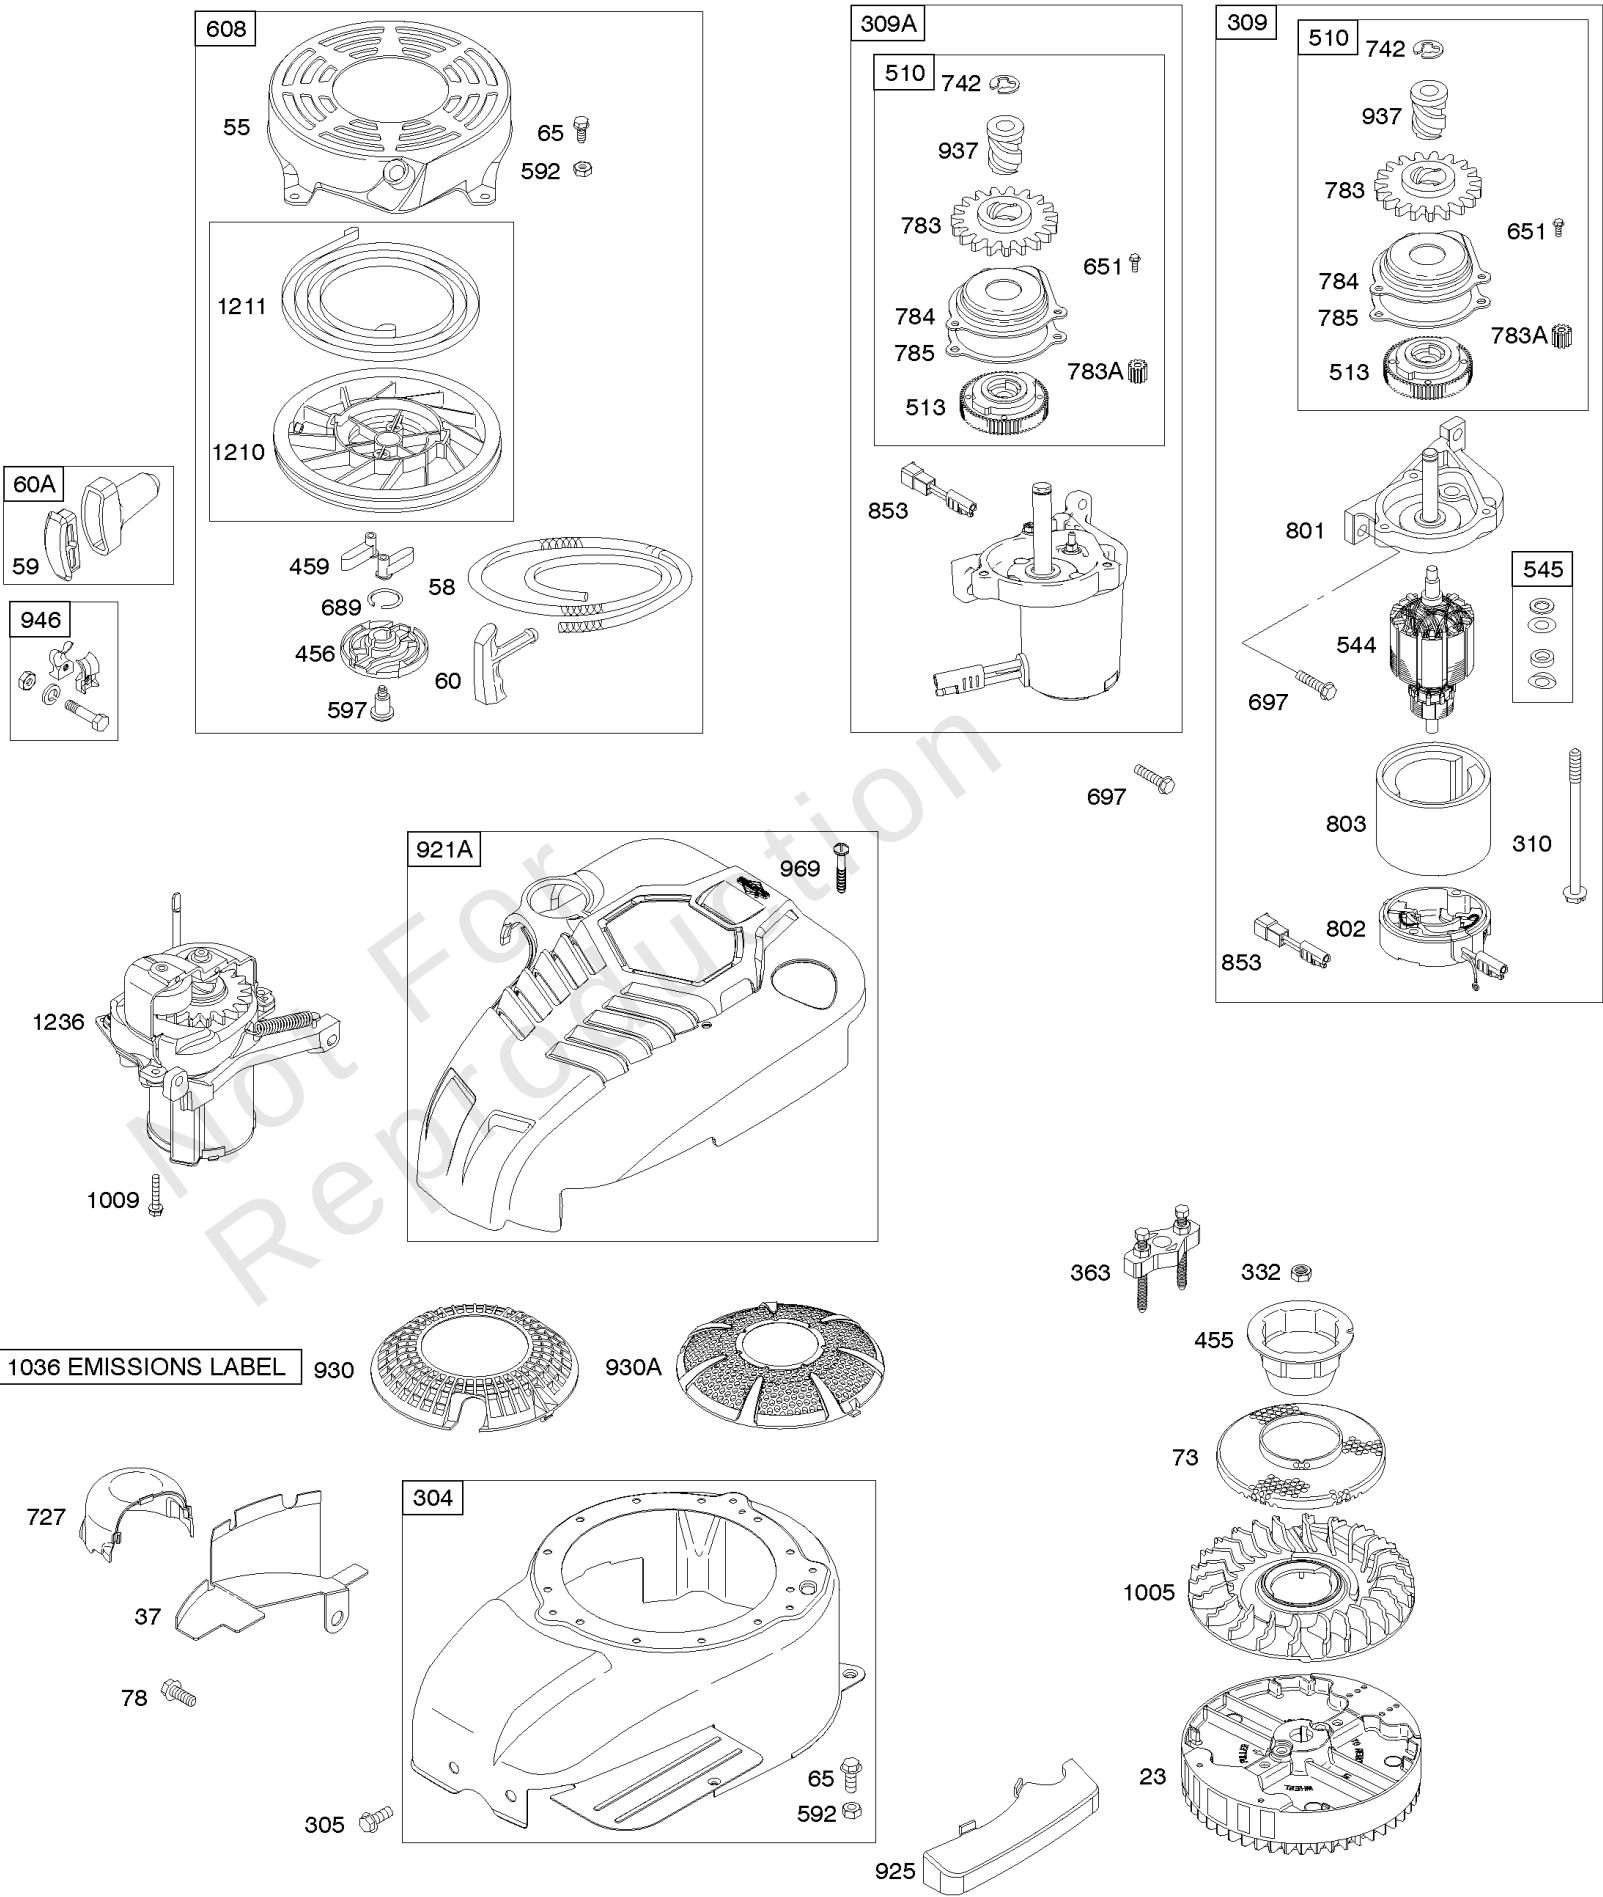 


Blower Housing/Shrouds, Electric Start, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
23	697610		FLYWHEEL
37	694086		GUARD, Flywheel
55	691421		HOUSING, Rewind Starter
58	697316		ROPE, Starter -(Cut To Required Length)
59	396892		INSERT-GRIP
60	281434S		GRIP, Starter Rope
60A	393152		GRIP-STARTER ROPE
65	690837		SCREW -(Rewind Starter)
73	691221		SCREEN, Rotating
78	691108		SCREW -(Flywheel Guard)
304	499677		HOUSING, Blower
305	691108		SCREW -(Blower Housing)
309	695550		MOTOR, Starter -Used Before Code Date 07052900
309A	795092		MOTOR, Starter -Used After Code Date 07052800
310	692327		SCREW -(Starter Motor)
332	690662		NUT -(Flywheel)
363	19069		PULLER, Flywheel
455	791960		CUP, Flywheel
456	692299		PLATE-PAWL FRICTION
459	281505S		PAWL-RATCHET
510	795093		DRIVE, Starter
513	692358		CLUTCH, Drive
544	690786		ARMATURE, Starter
545	492919		WASHER -(Starter Motor)
592	690800		NUT -(Rewind Starter)
597	691696		SCREW -(Pawl Friction Plate)
608	497680		STARTER, Rewind
651	691660		SCREW -(Starter Gear Cover)
689	691855		SPRING-FRICTION
697	691127		SCREW -(Drive Cap)
727	692934		COVER, Starter Drive
742	93941		RETAINER, E Ring
783	691918		GEAR, Pinion -(19 Teeth)(Starter Drive)
783A	691269		GEAR, Pinion -(12 Teeth)
784	795095		COVER, Starter Gear
785	692352		GASKET-STARTER COVER
801	690782		CAP, Drive
802	695267		CAP, End -Used After Code Date 00040600
802	695975		HOUSING, Starter -Used Before Code Date 00040700

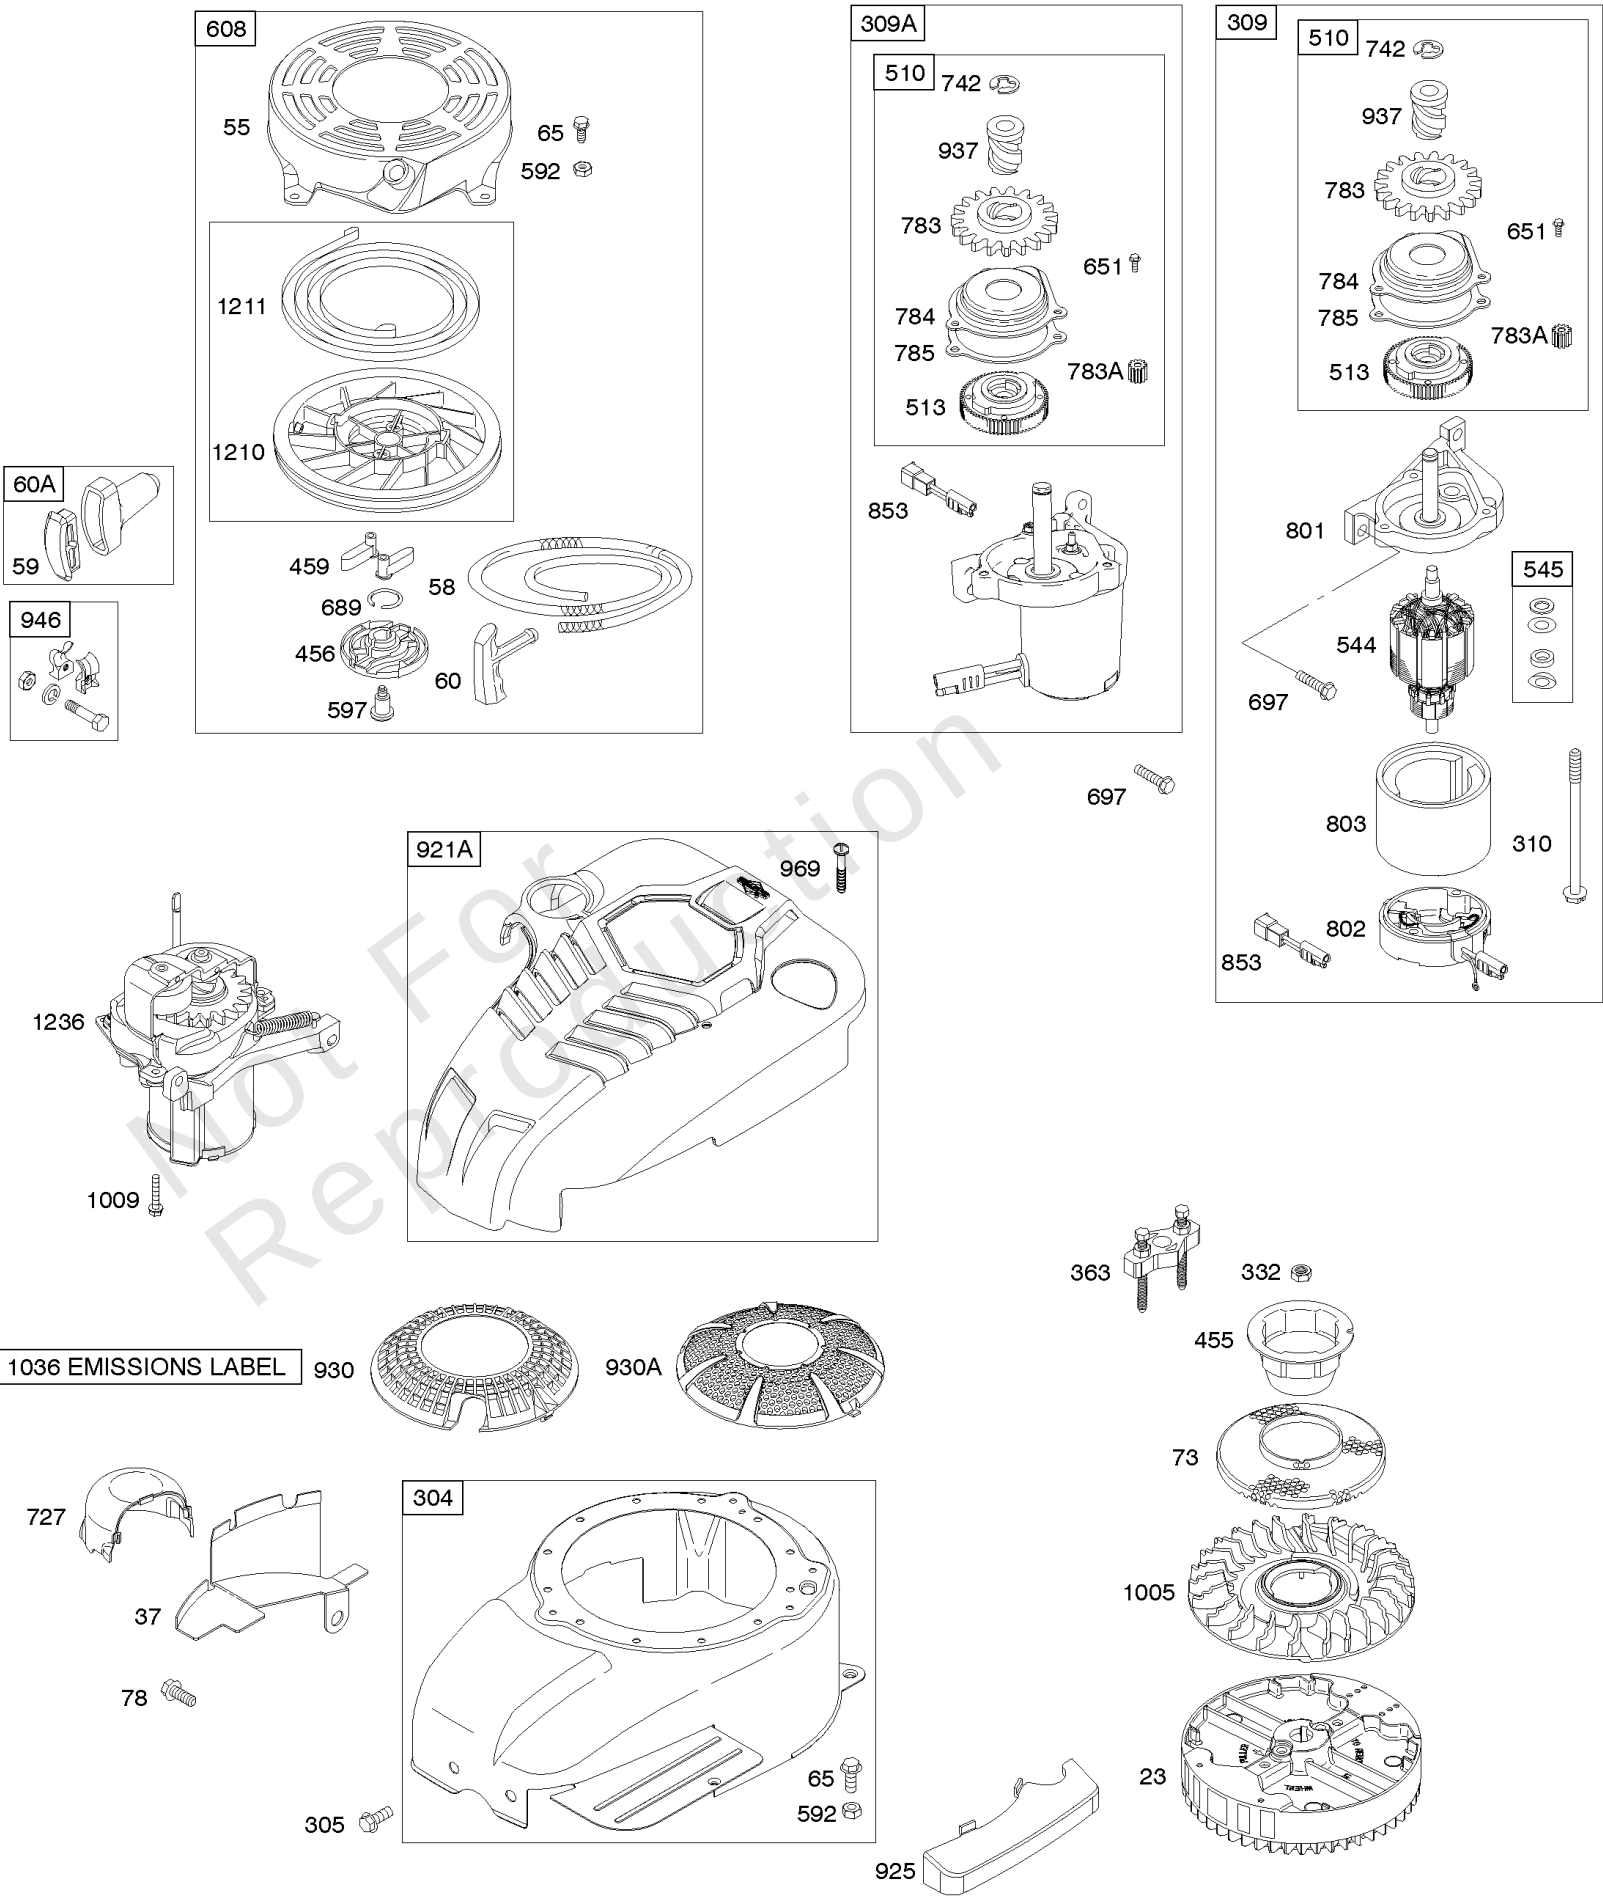 


Blower Housing/Shrouds, Electric Start, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
803	695266		HOUSING, Starter -Used After Code Date 00040600
803	695975		HOUSING, Starter -Used Before Code Date 00040700
853	695268		ADAPTER, Wire
921A	699633		COVER-BLOWER HSG
925	690595		COVER, Linkage -Used Before Code Date 07072300
925	795403		COVER-LINKAGE -Used After Code Date 07072200
930	691919		GUARD, Rewind
930A	692675		GUARD, Rewind
937	691325		SPLINE, Starter
946	396526		GUIDE, Rope
969	691138		SCREW -(Blower Housing)
1005	691346		FAN, Flywheel
1009	696255		SCREW -(Starter Motor)
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1210	498144		PULLEY/SPRING ASSY -(Pulley)
1211	498144		PULLEY/SPRING ASSY -(Spring)
1236	695959		STARTER, Mechanical

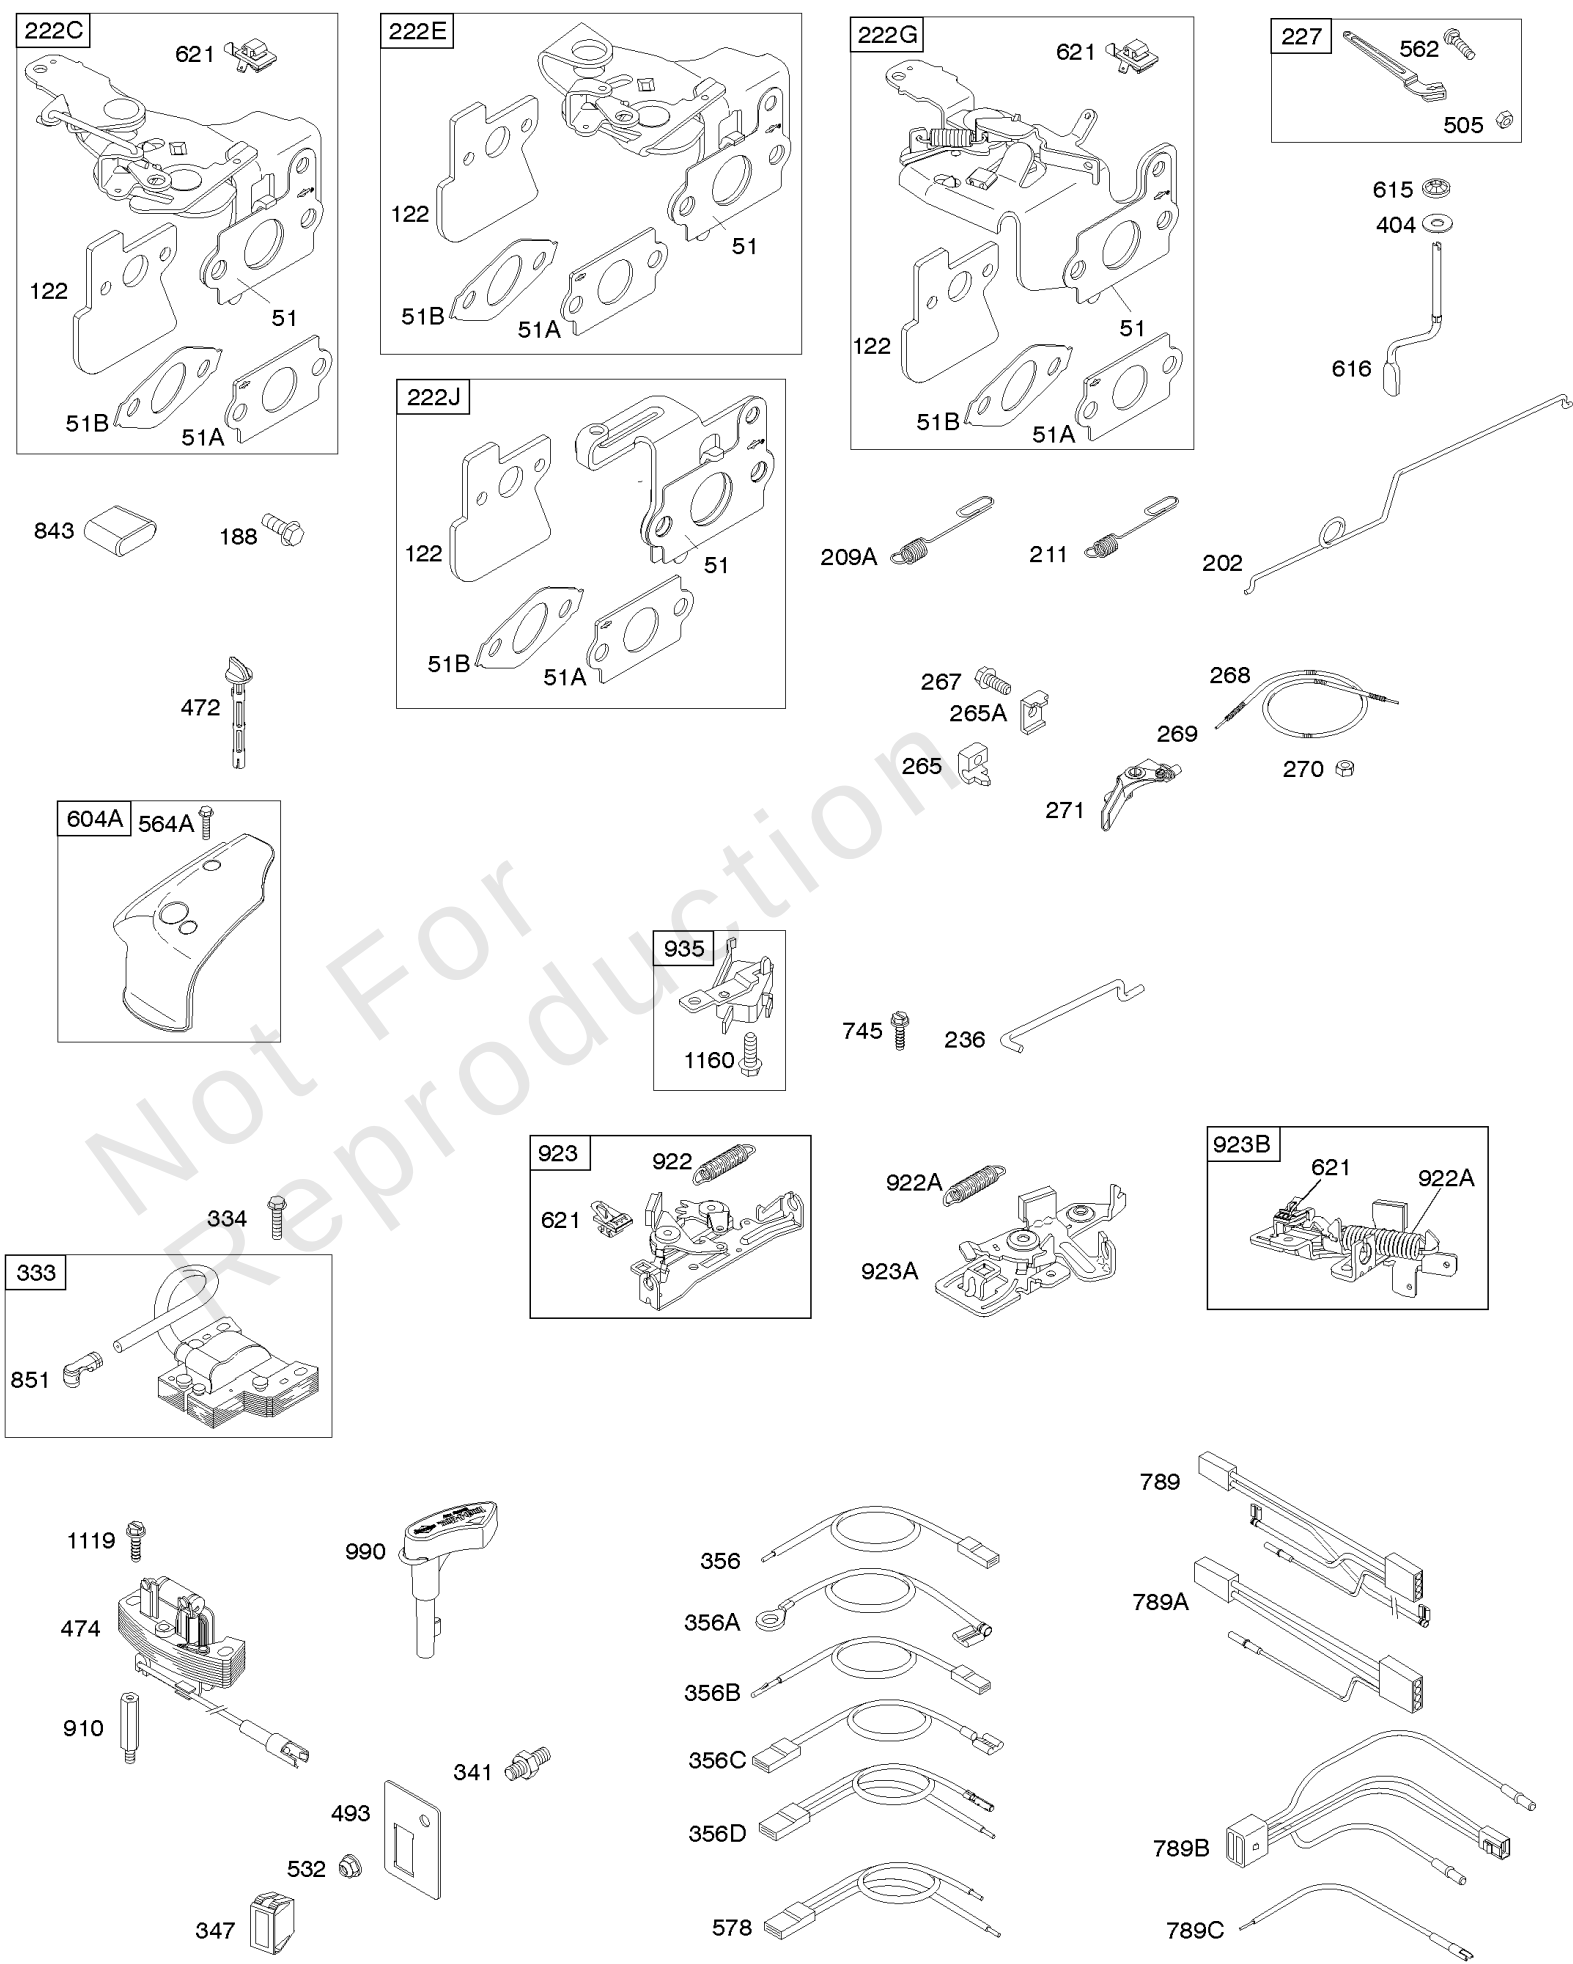 


Brake, Controls, Governor Spring, Ignition

REF NO	PART NO	QTY	DESCRIPTION
51	692668		GASKET, Intake
51A	697735		GASKET, Intake
51B	692555		GASKET, Intake -(2 Required)
122	692799		SPACER, Carburetor
188	693168		SCREW -(Control Bracket)
202	691303		LINK, Mechanical Governor
209A	691291		SPRING, Governor
211	692434		SPRING-GOVERNED IDLE
222C	792397		BRACKET, Control -Used After Code Date 05110100
222C	692618		BRACKET, Control -Used Before Code Date 05110200
222E	692723		BRACKET, Control
222J	697614		BRACKET, Control -Used Before Code Date 05110200
222G	792399		BRACKET, Control -Used After Code Date 05110100
222J	792404		BRACKET, Control -Used After Code Date 05110100
222G	692615		BRACKET, Control -Used Before Code Date 05110200
227	691467		LEVER, Governor Control
236	691826		LINK, Lockout
265	690798		CLAMP, Casing
265A	691024		CLAMP, Casing
267	691044		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
333	802574		ARMATURE, Magneto
334	691061		SCREW -(Magneto Armature)
341	690368		STUD -(Mounting Bracket)
347	691396		SWITCH, Rocker
356	692390		WIRE, Stop
356A	499690		WIRE-STOP
356B	692151		WIRE, Stop
356C	693010		WIRE, Stop
356D	695283		WIRE ASSEMBLY
404	690272		WASHER -(Governor Crank)
472	693809		KNOB, Choke Shaft
474	691991		ALTERNATOR
493	692877		BRACKET, Mounting
505	691251		NUT -(Governor Control Lever)
532	692851		NUT -(Mounting Bracket)

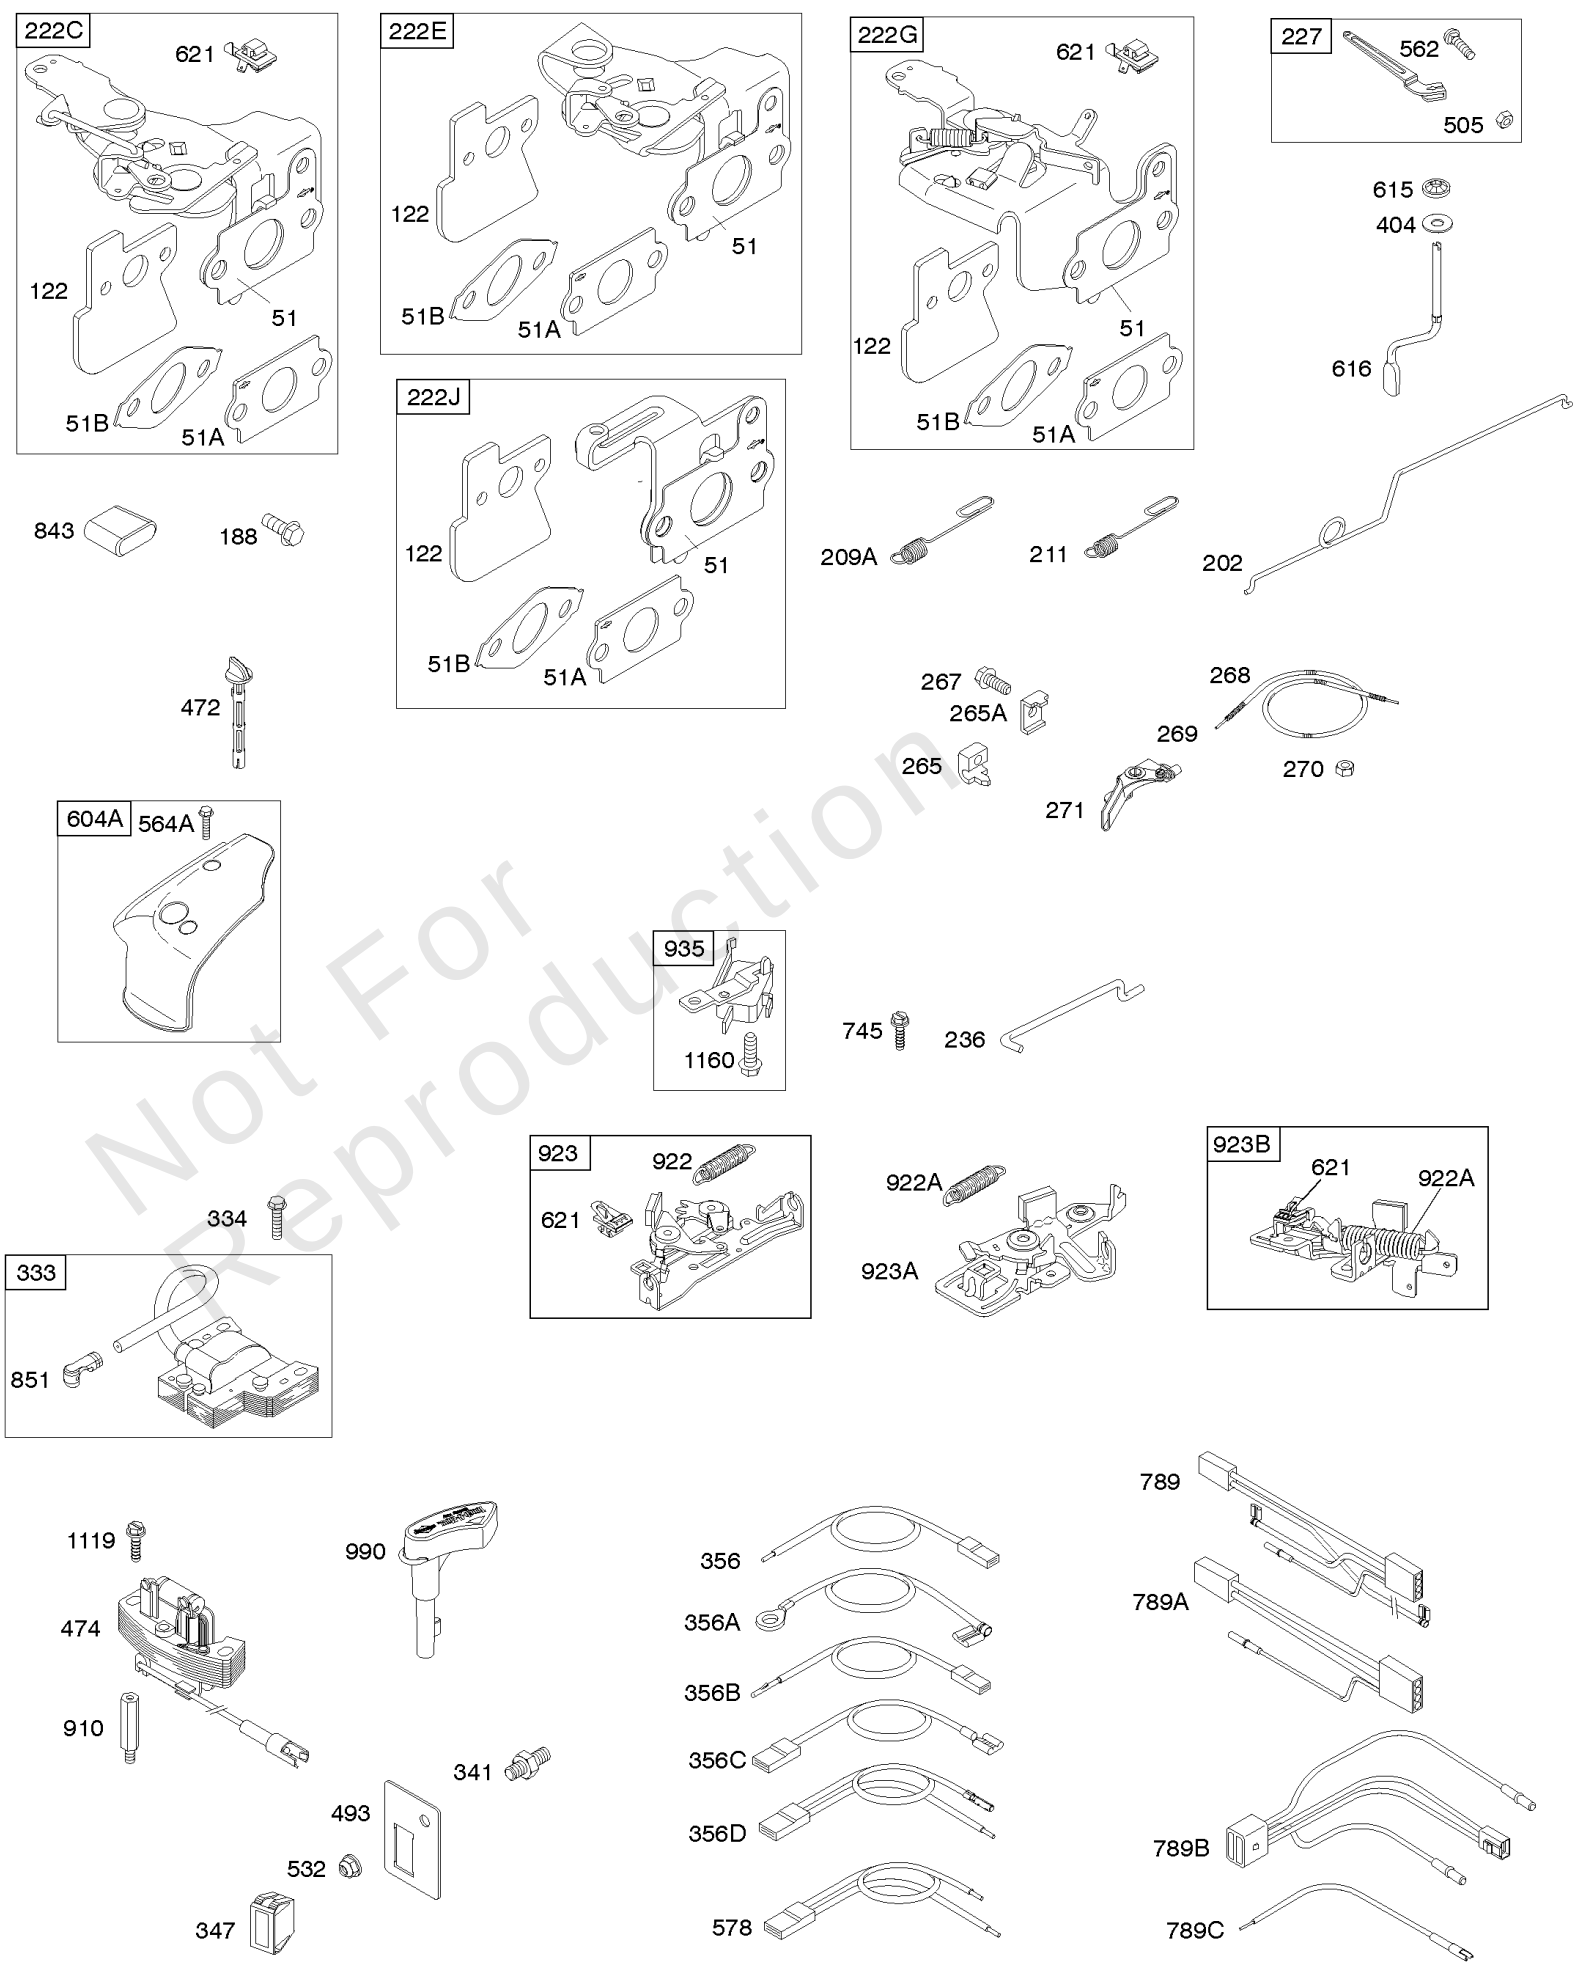 


Brake, Controls, Governor Spring, Ignition

REF NO	PART NO	QTY	DESCRIPTION
562	691119		BOLT -(Governor Control Lever)
564A	693808		SCREW -(Control Cover)
578	398153		WIRE ASSEMBLY
604A	693807		COVER, Control
615	690340		RETAINER, Governor Shaft
616	698801		CRANK, Governor
621	692310		SWITCH, Stop
745	691648		SCREW -(Brake)
789	696547		HARNESS, Wiring -Used After Code Date 00040600
789	691372		HARNESS, Wiring -Used Before Code Date 00040700
789A	690790		HARNESS, Wiring -Used Before Code Date 00040700
789A	696546		HARNESS, Wiring -Used After Code Date 00040600
843	691884		SLEEVE, Lever
851	493880S		TERMINAL, Spark Plug
910	691094		STUD -(Alternator)
922	691831		SPRING-BRAKE
922A	692135		SPRING, Brake
923	796387		BRAKE -Used After Code Date 08043000
923A	695891		BRAKE
935	499421		SWITCH, Interlock -Used Before Code Date 08050100
990	695951		SET, Key -(Touch N Mow)
1119	692979		SCREW -(Alternator)
1160	690345		SCREW -(Interlock Switch)

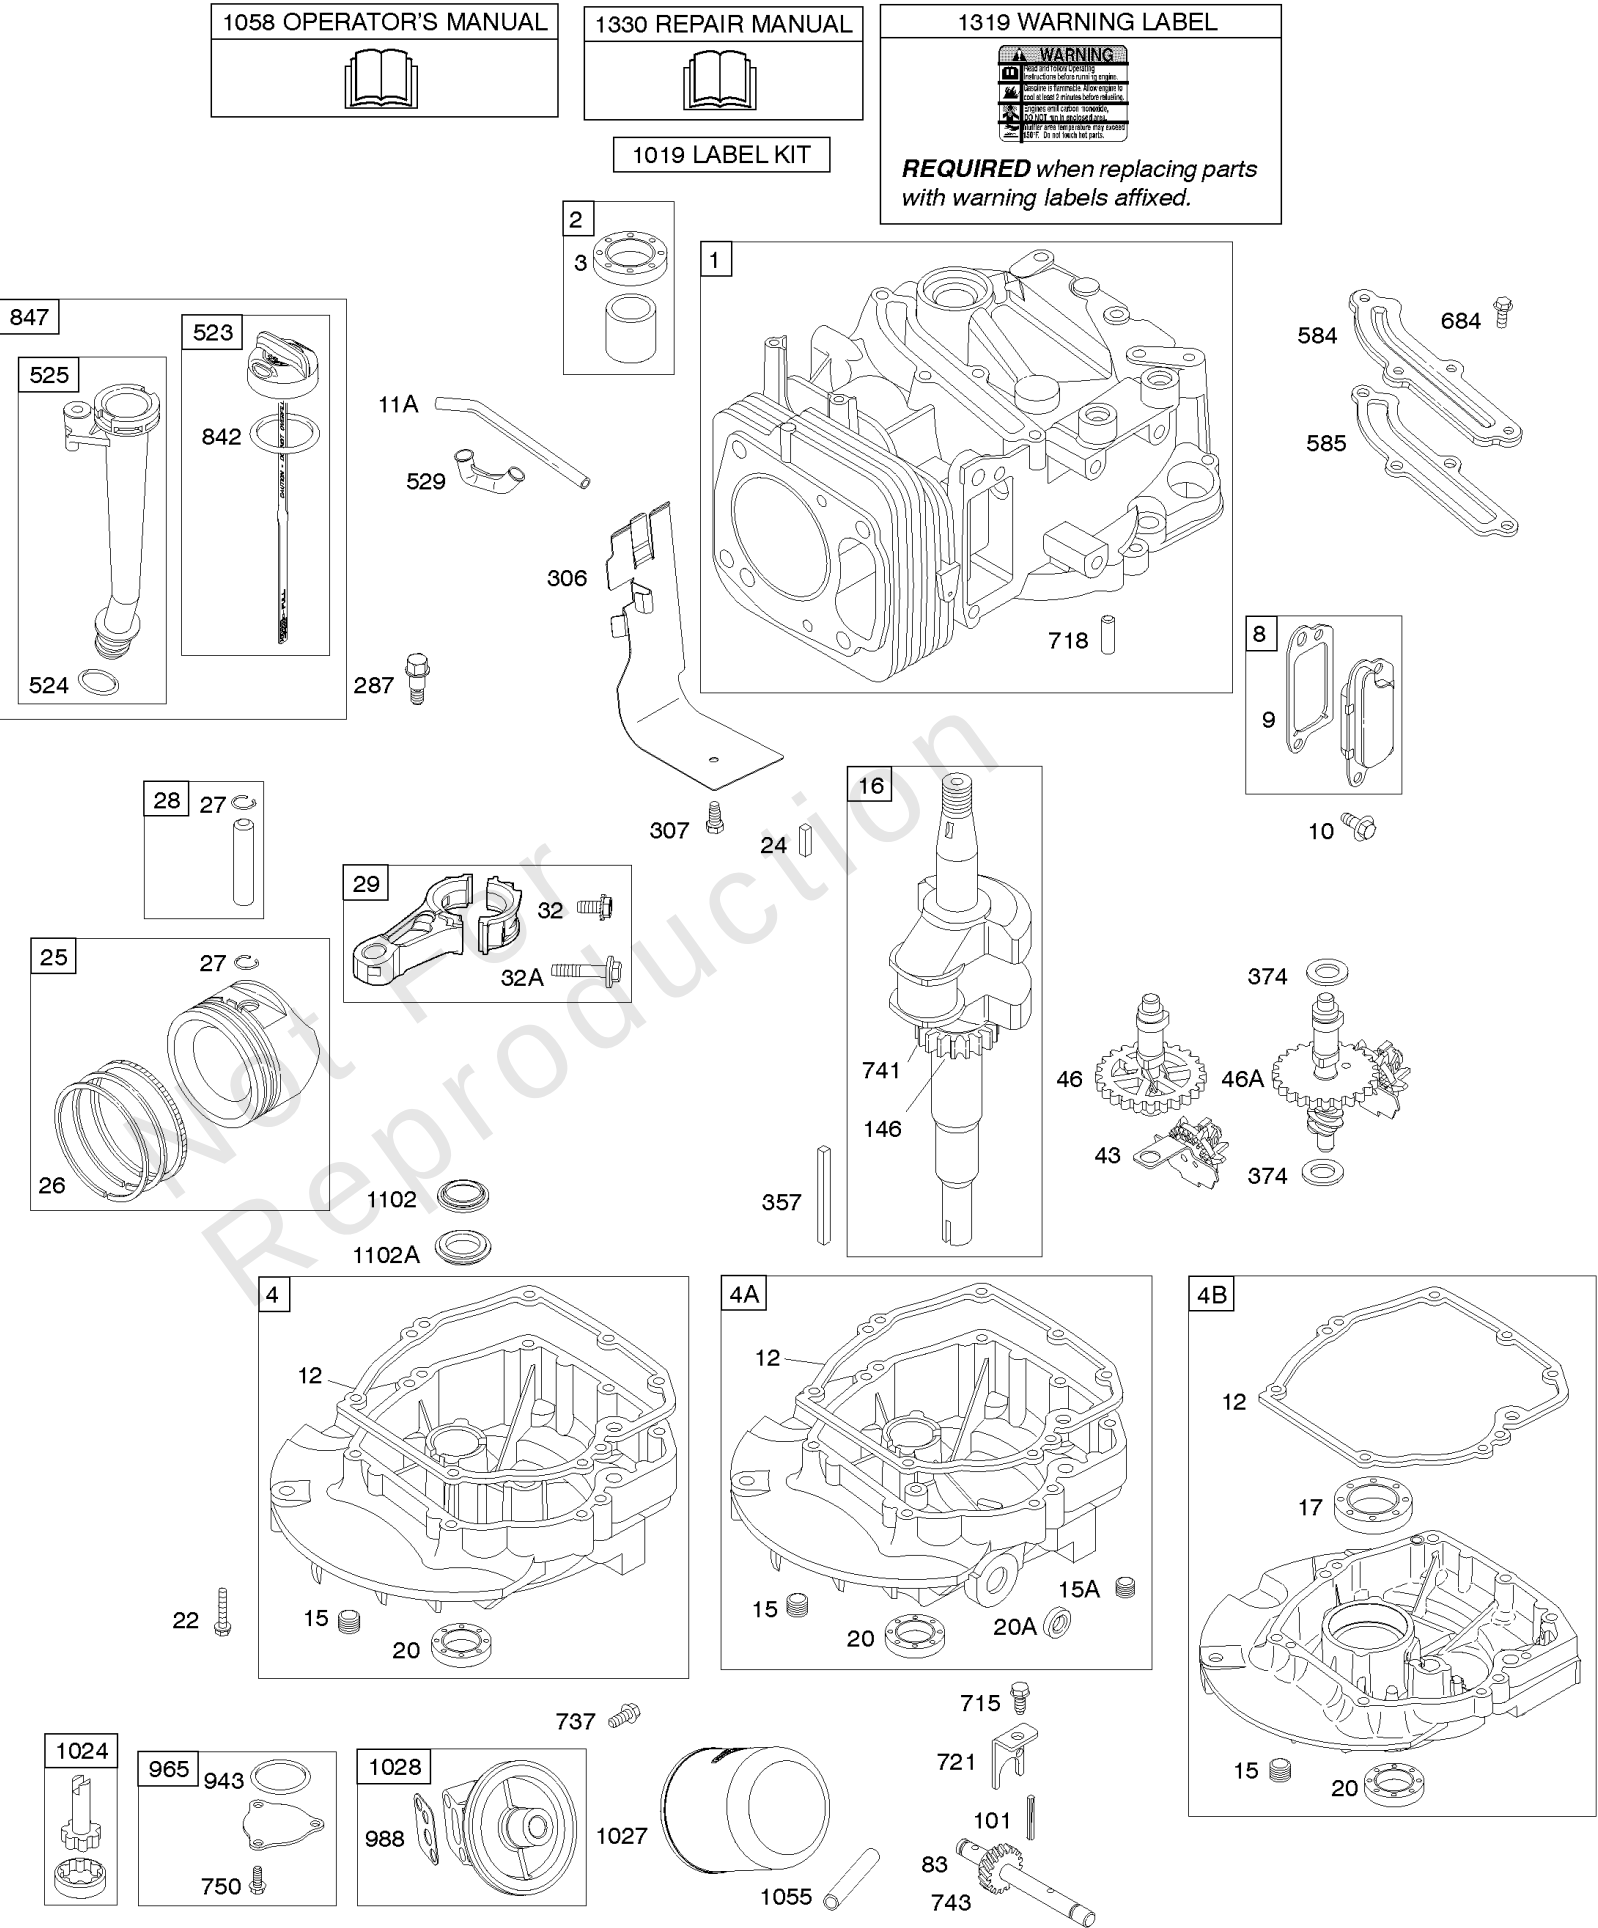 


Camshaft, Crankshaft, Cylinder, Engine Sump, Lubrication, Piston Group

REF NO	PART NO	QTY	DESCRIPTION
1	499678		CYLINDER ASSEMBLY -Used Before Code Date 04040500
1	790363		CYLINDER ASSEMBLY -Used After Code Date 04040400
2	399269		KIT, Bushing/Seal -(Magneto Side)
3	299819S		SEAL, Oil -(Magneto Side)
4	493279		SUMP, Engine
4A	493365		SUMP, Engine -(Auxiliary PTO)
8	495786		BREATHER ASSEMBLY
9	699833		GASKET-BREATHER
10	691125		SCREW -(Breather Assembly)
11A	499675		TUBE, Breather
12	692232		GASKET, Crankcase
15	691680		PLUG, Oil Drain -(Square Socket)
15A	691093		PLUG, Oil Drain -(Hex Socket)
16	691457		CRANKSHAFT
17	692517		BEARING, Ball
20	399781S		SEAL, Oil -(PTO Side)
20A	691952		SEAL, Oil -(PTO Side) (Auxiliary PTO)
22	691092		SCREW -(Crankcase Cover/Sump)
24	222698S		KEY, Flywheel
25	791325		PISTON ASSEMBLY -(.020 Oversize) -Used Before Code Date 07090400
25	792004		PISTON ASSEMBLY -(Standard) -Used Before Code Date 07090400
25	795429		PISTON ASSEMBLY -(Standard) -Used After Code Date 07090300
25	795430		PISTON ASSEMBLY -(.020 Oversize) -Used After Code Date 07090300
26	795432		SET, Ring -(.020 Oversize) -Used After Code Date 07090300
26	795431		RING SET -(Standard) -Used After Code Date 07090300
26	692786		SET, Ring -(.020 Oversize) -Used Before Code Date 05030800
26	791324		SET, Ring -(.020 Oversize) -Used After Code Date 05030700 -Used Before Code Date 07090400
26	791969		SET, Ring -(Standard) -Used After Code Date 05030700 -Used Before Code Date 07090400
26	499631		SET, Ring -(Standard) -Used Before Code Date 05030800

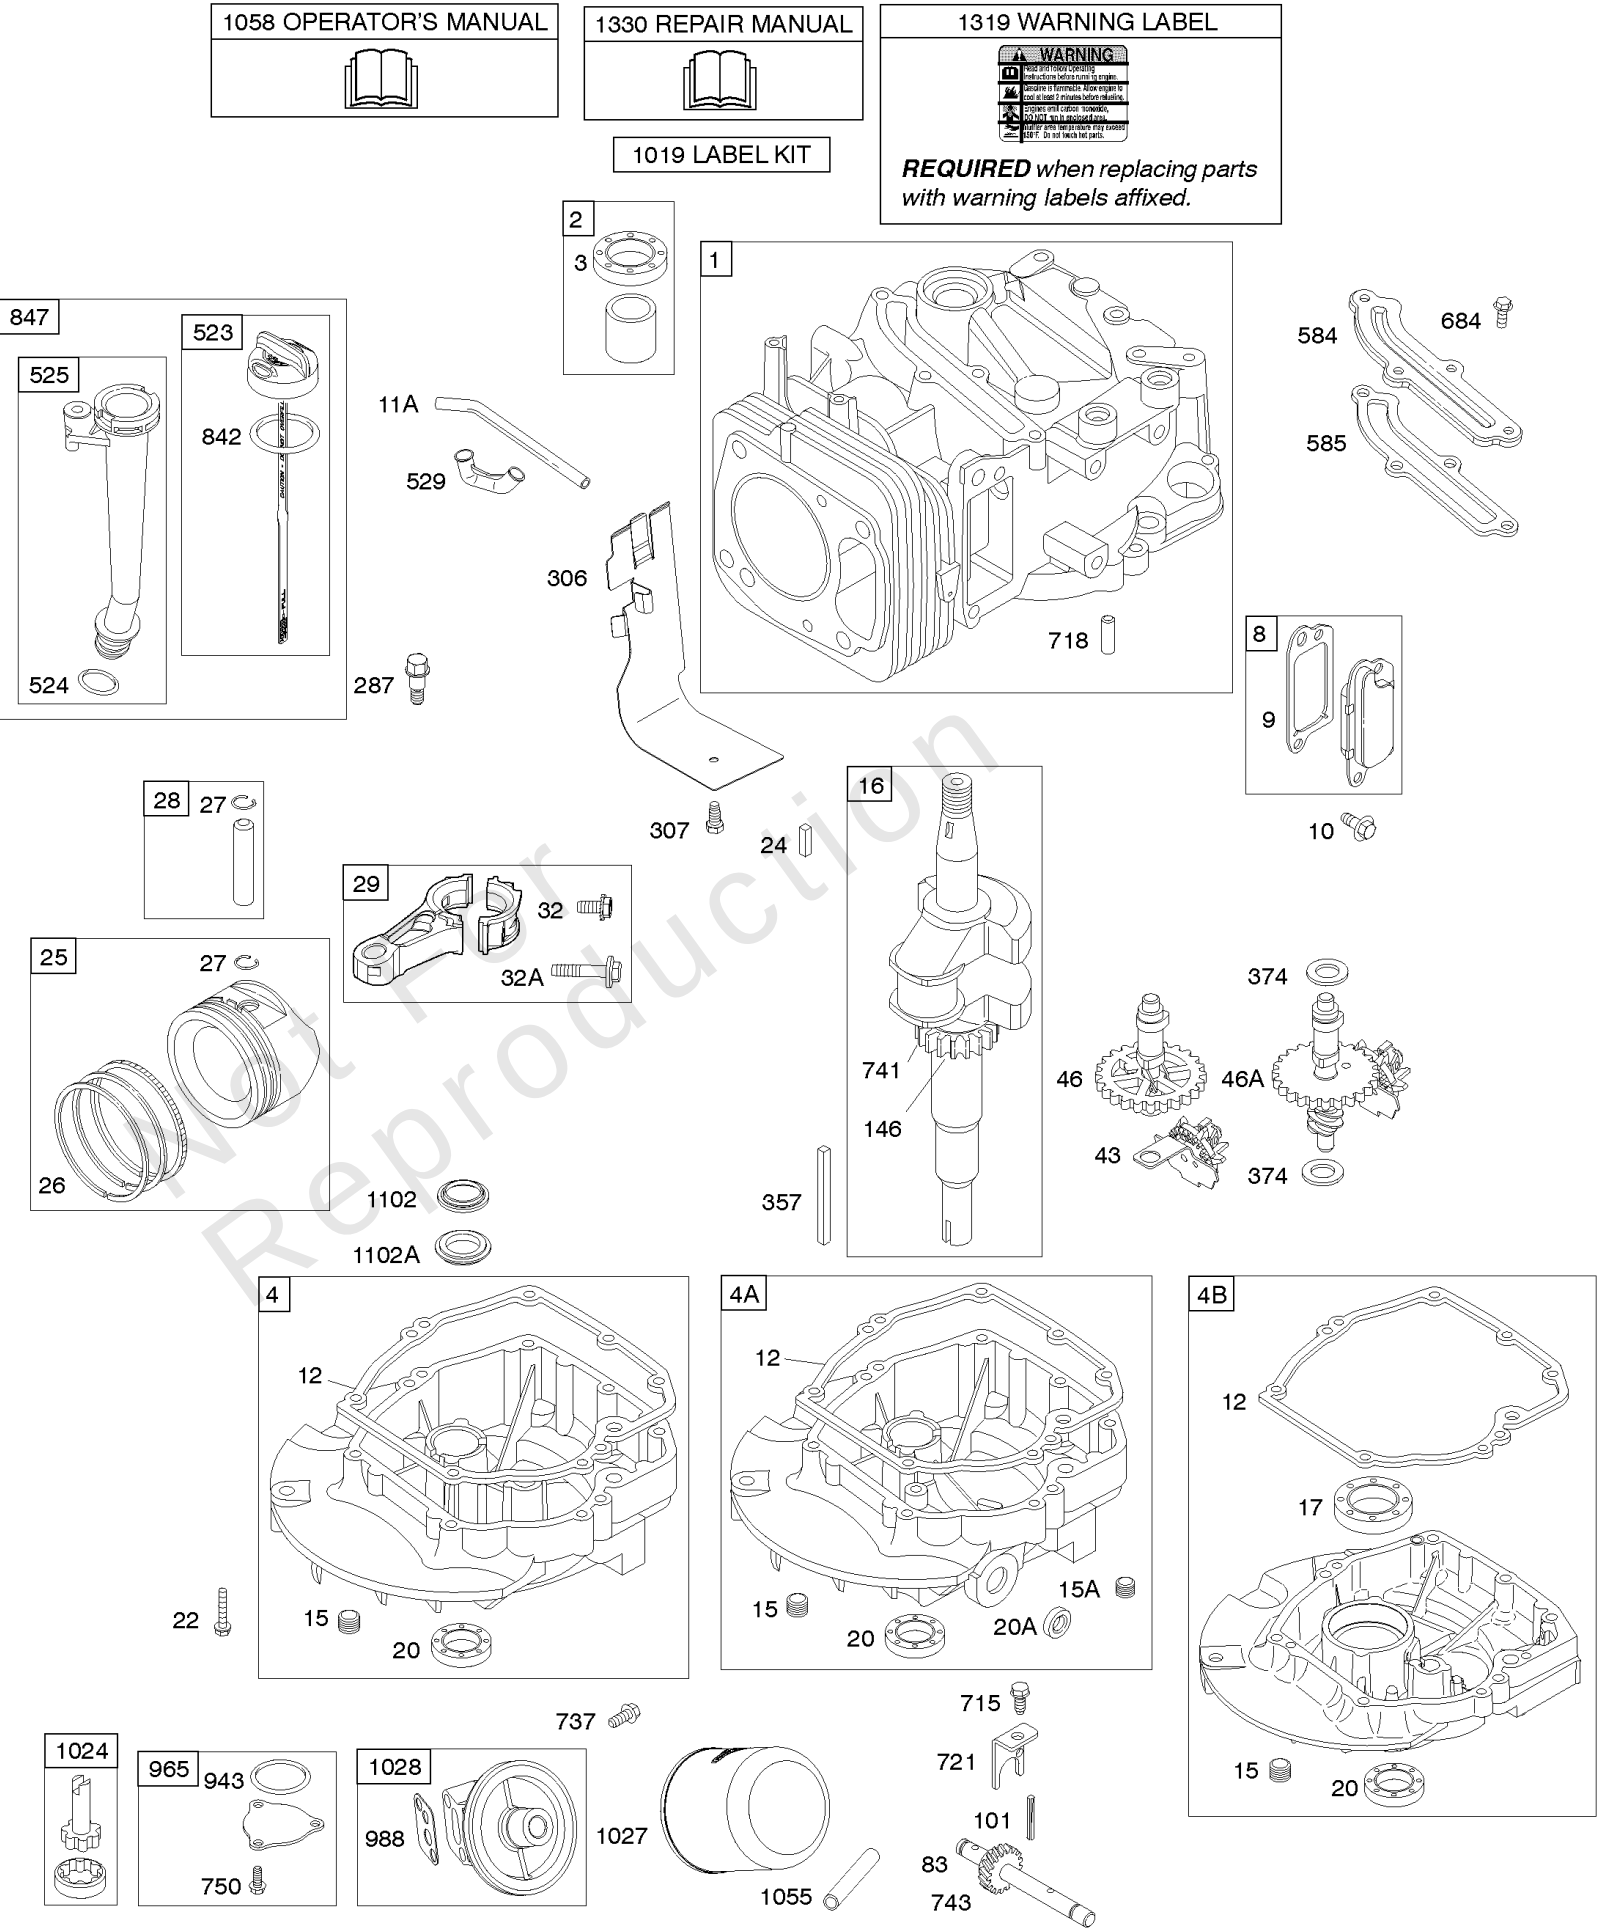 


Camshaft, Crankshaft, Cylinder, Engine Sump, Lubrication, Piston Group

REF NO	PART NO	QTY	DESCRIPTION
27	691866		LOCK-PISTON PIN
28	499423		PIN-PISTON/STD -(Standard)
29	499424		ROD, Connecting -(Standard)
32	691664		SCREW -(Connecting Rod)
32A	695759		SCREW -(Connecting Rod) -Used After Code Date 00042200
43	691997		SLINGER, Governor/Oil
46	694039		CAMSHAFT -Used After Code Date 99030700
46	694035		CAMSHAFT -Used Before Code Date 99030800
46A	694034		CAMSHAFT -(Clockwise) -Used Before Code Date 99030800
46A	694033		CAMSHAFT -(Counterclockwise) -Used Before Code Date 99030800
46A	694038		CAMSHAFT -(Clockwise) -Used After Code Date 99030700
46A	694037		CAMSHAFT -(Counterclockwise) -Used After Code Date 99030700
83	691778		SHAFT, Auxiliary Drive
101	691623		PIN, Shaft
146	690979		KEY, Woodruff
287	690940		SCREW -(Dipstick Tube)
306	691232		SHIELD-CYLINDER
307	690345		SCREW -(Cylinder Shield)
357	692191		KEY, Drive Pulley
374	691074		WASHER -(Camshaft)
523	499621		DIPSTICK
524	692296		SEAL-DIPSTICK TUBE -(Dipstick Tube)
525	495265		TUBE, Dipstick
529	692937		TUBE, Breather
584	697734		COVER-BREA PASSAGE
585	691879		GASKET-BREA PASSAGE
684	690345		SCREW -(Breather Passage Cover)
715	691147		SCREW -(Stop Shaft)
718	690959		PIN, Locating
721	690449		STOP, Shaft
737	692511		SCREW -(Oil Filter Adapter)
741	794388		GEAR, Timing -(Use Without Woodruff Key) -Used After Code Date 07093000
741	691830		GEAR-TIMING -(Uses Woodruff Key)

 


Camshaft, Crankshaft, Cylinder, Engine Sump, Lubrication, Piston Group

REF NO	PART NO	QTY	DESCRIPTION
741	790345		GEAR, Timing -(Use Without Woodruff Key) -Used Before Code Date 07100100
743	690516		GEAR, Drive -(Clockwise)
750	691683		SCREW -(Oil Pump Cover)
842	691031		SEAL, O-Ring -(Dipstick Tube)
847	692047		DIPSTICK/TUBE ASSY
943	692514		SEAL, O-Ring -(Oil Pump Cover)
965	692507		COVER, Oil Pump
988	692515		GASKET, Oil Adapter
1019	499691		KIT, Label
1019	790231		KIT, Label -(Touch N Mow)
1024	692508		PUMP, Oil
1027	692513		FILTER-OIL
1028	692516		ADAPTER, Oil Filter
1055	692623		TUBE, Oil Pump
1058	277102		MANUAL, Operator's
1058	276347		MANUAL, Operator's -(Touch N Mow)
1319	794467		LABEL, Warning
1330	272147		MANUAL, Repair

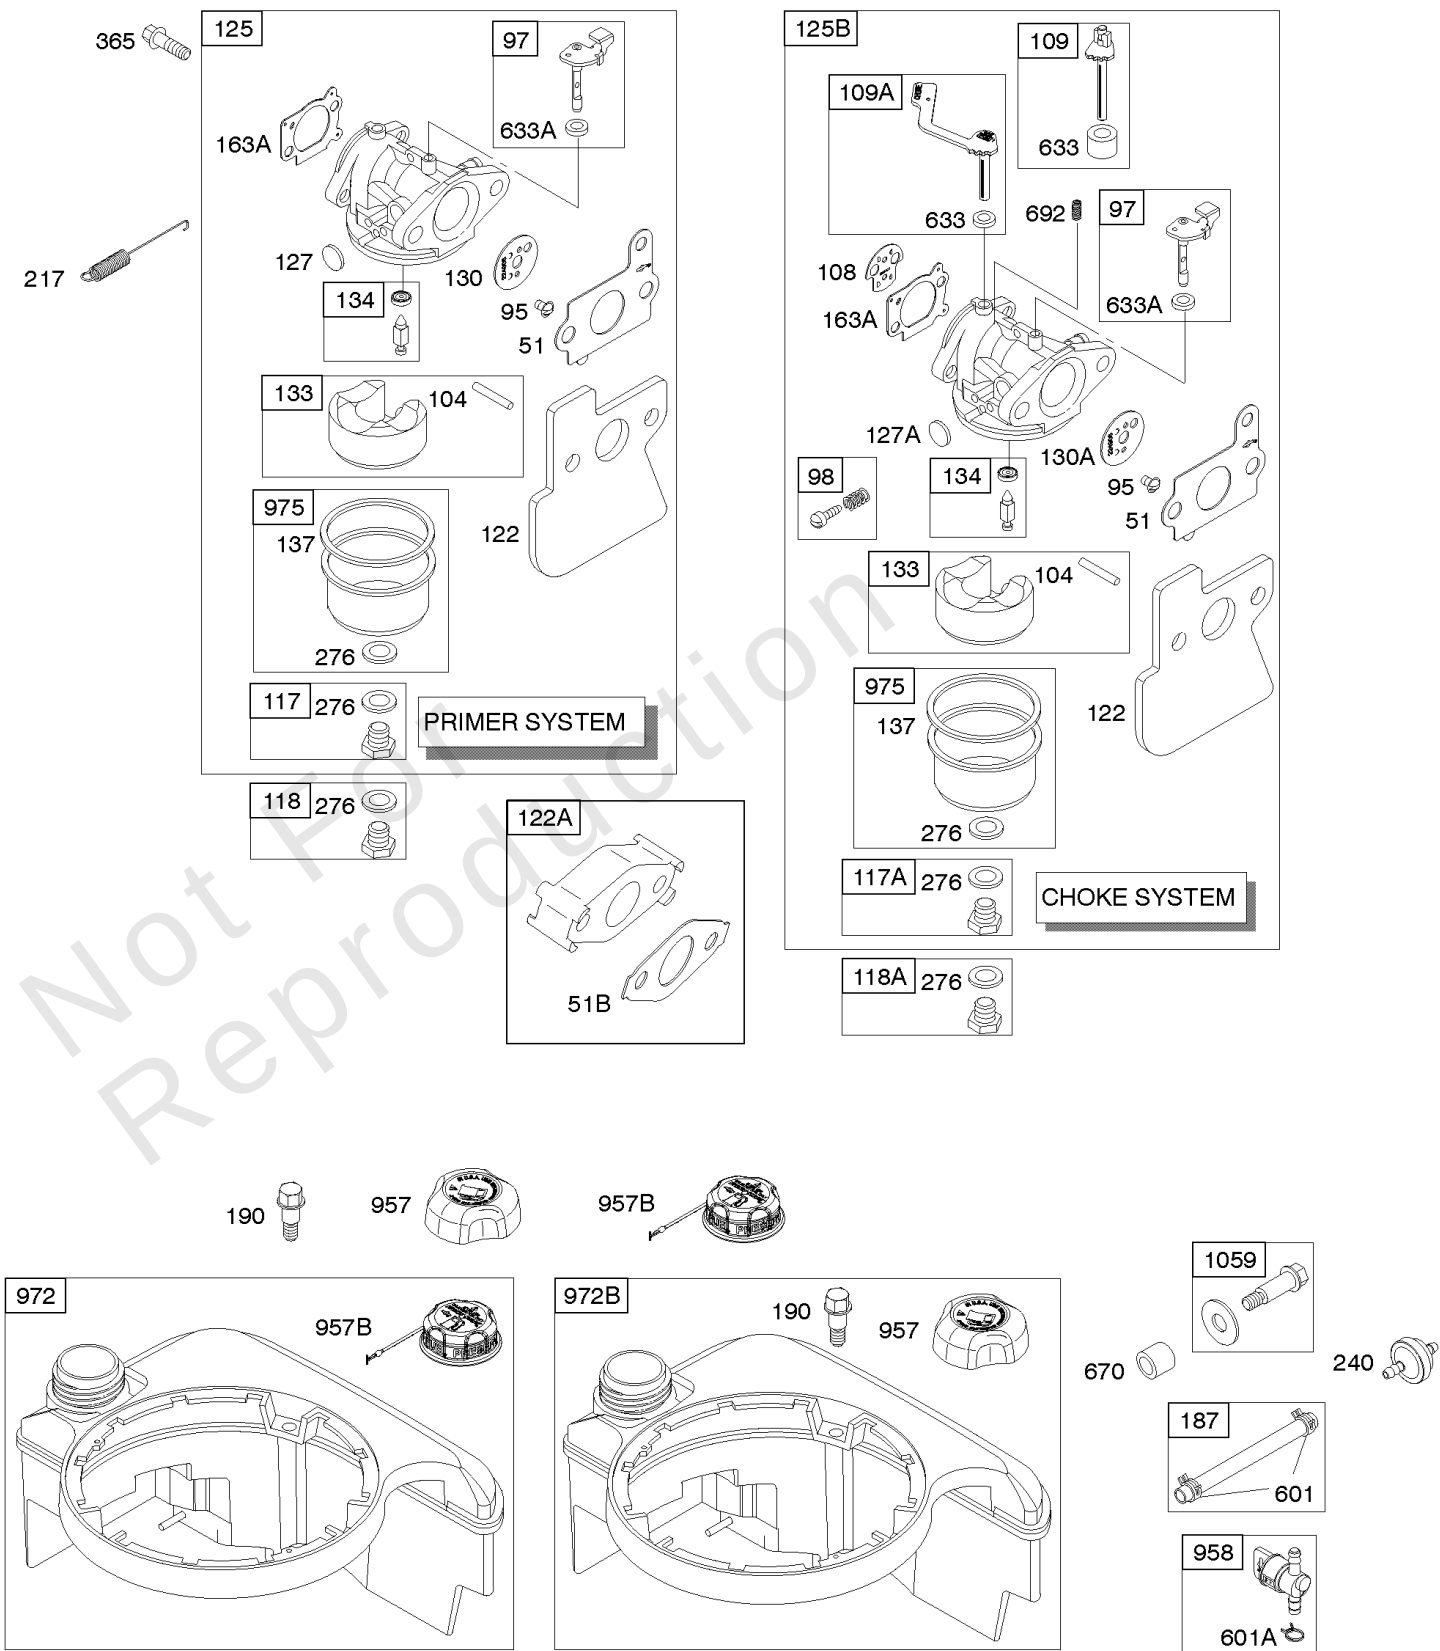 


Carburetor, Fuel Supply

REF NO	PART NO	QTY	DESCRIPTION
51	692668		GASKET, Intake
51B	692555		GASKET, Intake -(2 Required)
95	691636		SCREW -(Throttle Valve)
97	499682		SHAFT, Throttle -(Metal)
97	790121		SHAFT, Throttle -(Plastic)
98	398185		KIT-IDLE SPEED -(Idle Speed) (Lmt 26, 27, 28, 31)
104	691242		PIN, Float Hinge
108	691182		VALVE-CHOKE
109	499779		SHAFT, Choke
109A	499681		SHAFT, Choke
117	498978		JET, Main -(Standard) -Used After Code Date 99030700 -Used Before Code Date 03110700
117	498981		JET, Main -(Standard) -Used After Code Date 03110600
117	692677		JET, Main -(Standard) -Used Before Code Date 99030800
117A	498978		JET, Main -(Standard) -Used Before Code Date 02050600
117A	694250		JET, Main -(Standard) -Used After Code Date 02050500
118	498975		JET, Main -(High Altitude) -Used After Code Date 99080300 -Used Before Code Date 03110700
118	497315		JET, Main -(High Altitude) -Used Before Code Date 99080800
118	497466		JET, Main -(High Altitude) -Used After Code Date 03110600
118A	498975		JET, Main -(High Altitude) -Used Before Code Date 02050600
118A	497466		JET, Main -(High Altitude) -Used After Code Date 02050500
122	692799		SPACER, Carburetor
122A	792382		SPACER, Carburetor
125	790120		CARBURETOR -(Primer)
127	694468		PLUG, Welch -(Bowl Vent)
127A	691739		PLUG-WELCH
130	691203		VALVE, Throttle
130	696564		VALVE, Throttle -(Used With Plastic Throttle Shaft)
130A	691181		VALVE-THROTTLE
133	398187		FLOAT-CARBURETOR
134	398188		KIT-NEEDLE/SEAT

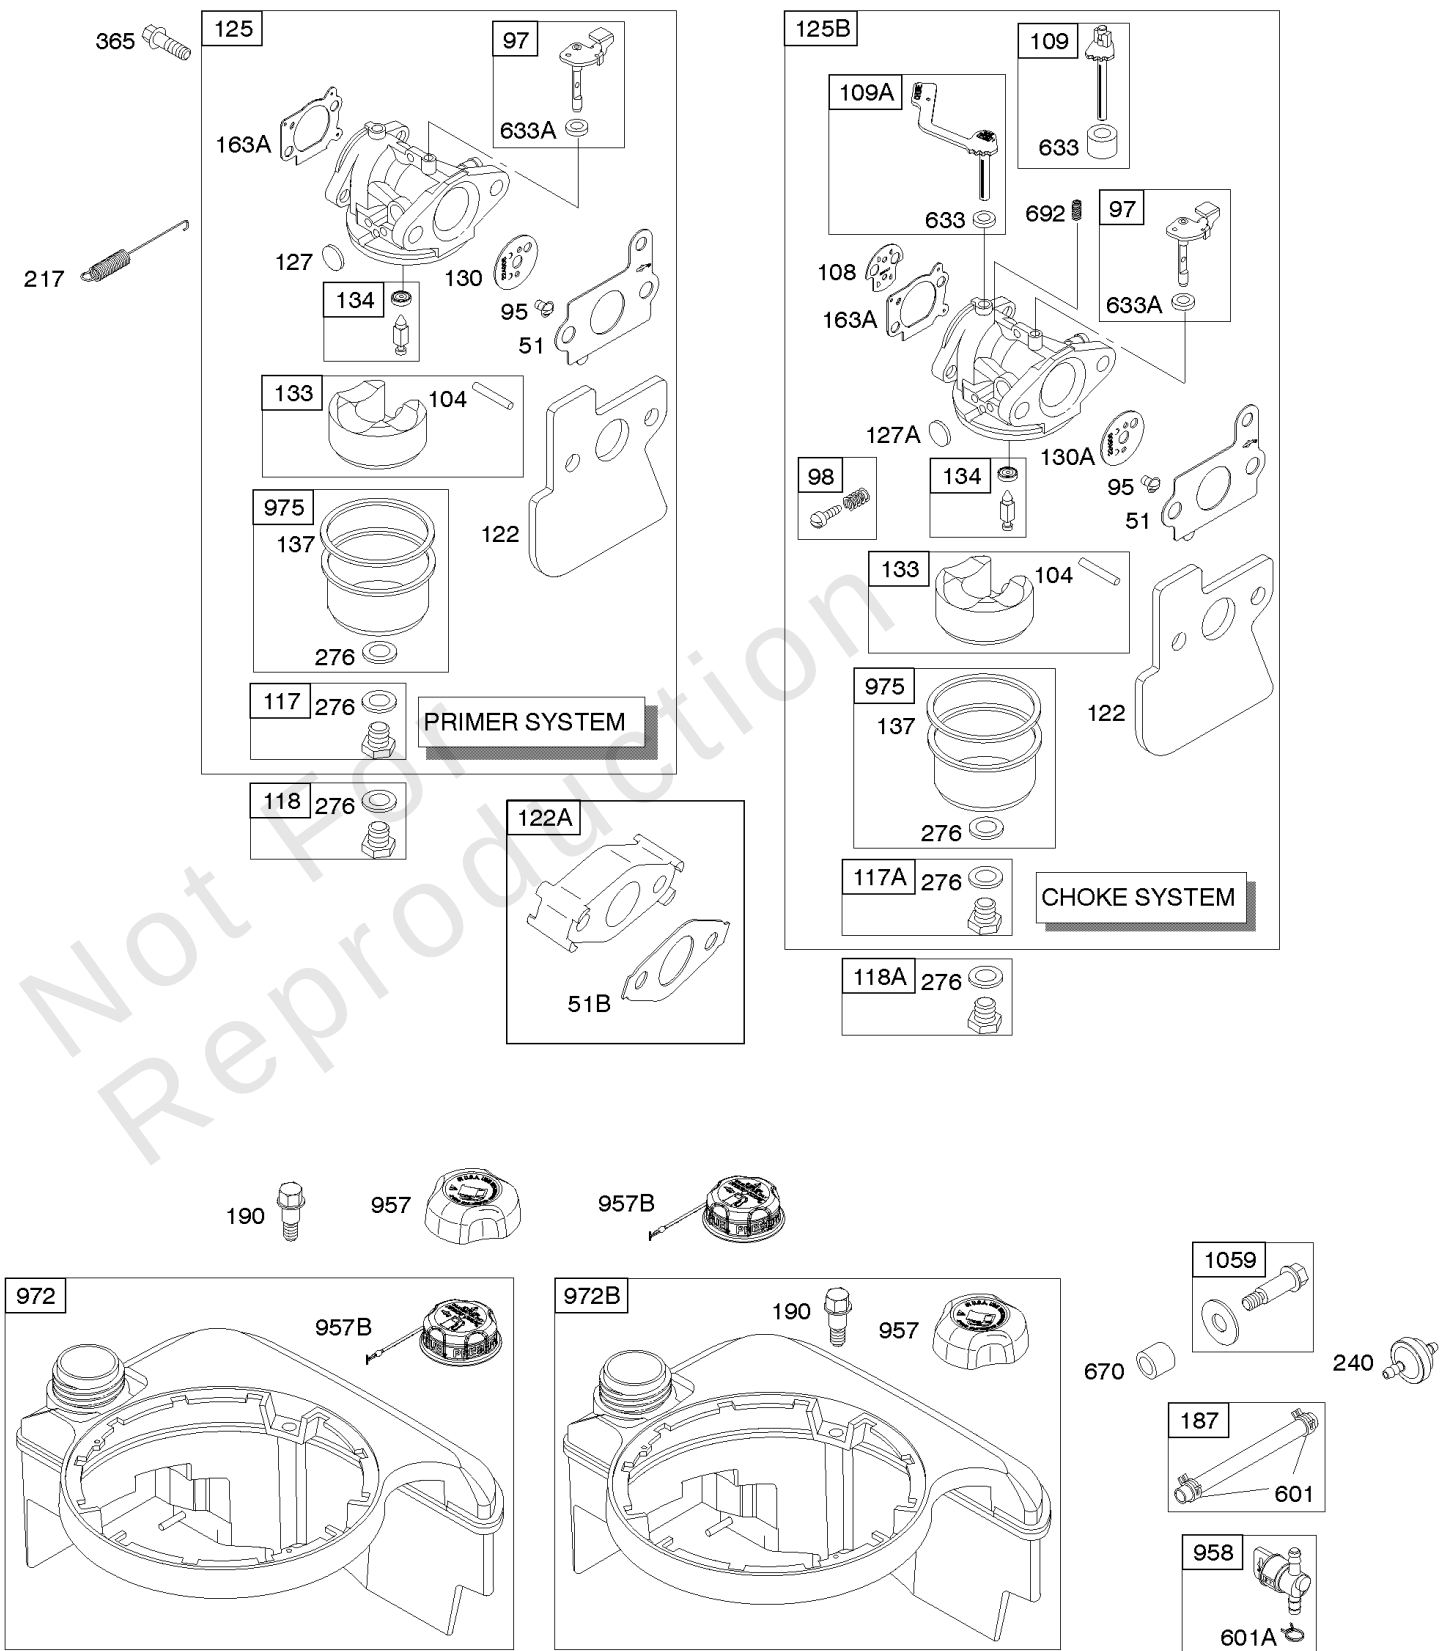 





Carburetor, Fuel Supply

REF NO	PART NO	QTY	DESCRIPTION
137	693981		GASKET-FLOAT BOWL
163A	692667		GASKET, Air Cleaner -(Air Cleaner)
187	791766		LINE, Fuel -(Cut To Required Length)
190	690940		SCREW -(Fuel Tank)
217	690354		SPRING, Choke Return
240	298090S		FILTER, Fuel
276	271716		WASHER-SEALING
365	691129		SCREW -(Carburetor) -Used After Code Date 05110100
365	691136		SCREW -(Carburetor) -Used Before Code Date 05110200
601	791850		CLAMP, Hose
601A	691038		CLAMP, Hose
633	693867		SEAL, Choke/Throttle Shaft
633A	691321		SEAL, Choke/Throttle Shaft -(Throttle Shaft)
670	692294		SPACER, Fuel Tank
692	690572		SPRING, Detent
957	692046		CAP, Fuel Tank -(Plastic)
957B	699985		CAP, Fuel Tank -(Plastic)
958	698183		VALVE, Fuel Shut Off -(Plastic)
972	699374		TANK, Fuel -(Plastic)
975	493640		BOWL, Float
1059	696293		KIT, Screw/Washer -(Touch N Mow)
1059	692311		KIT, Screw/Washer

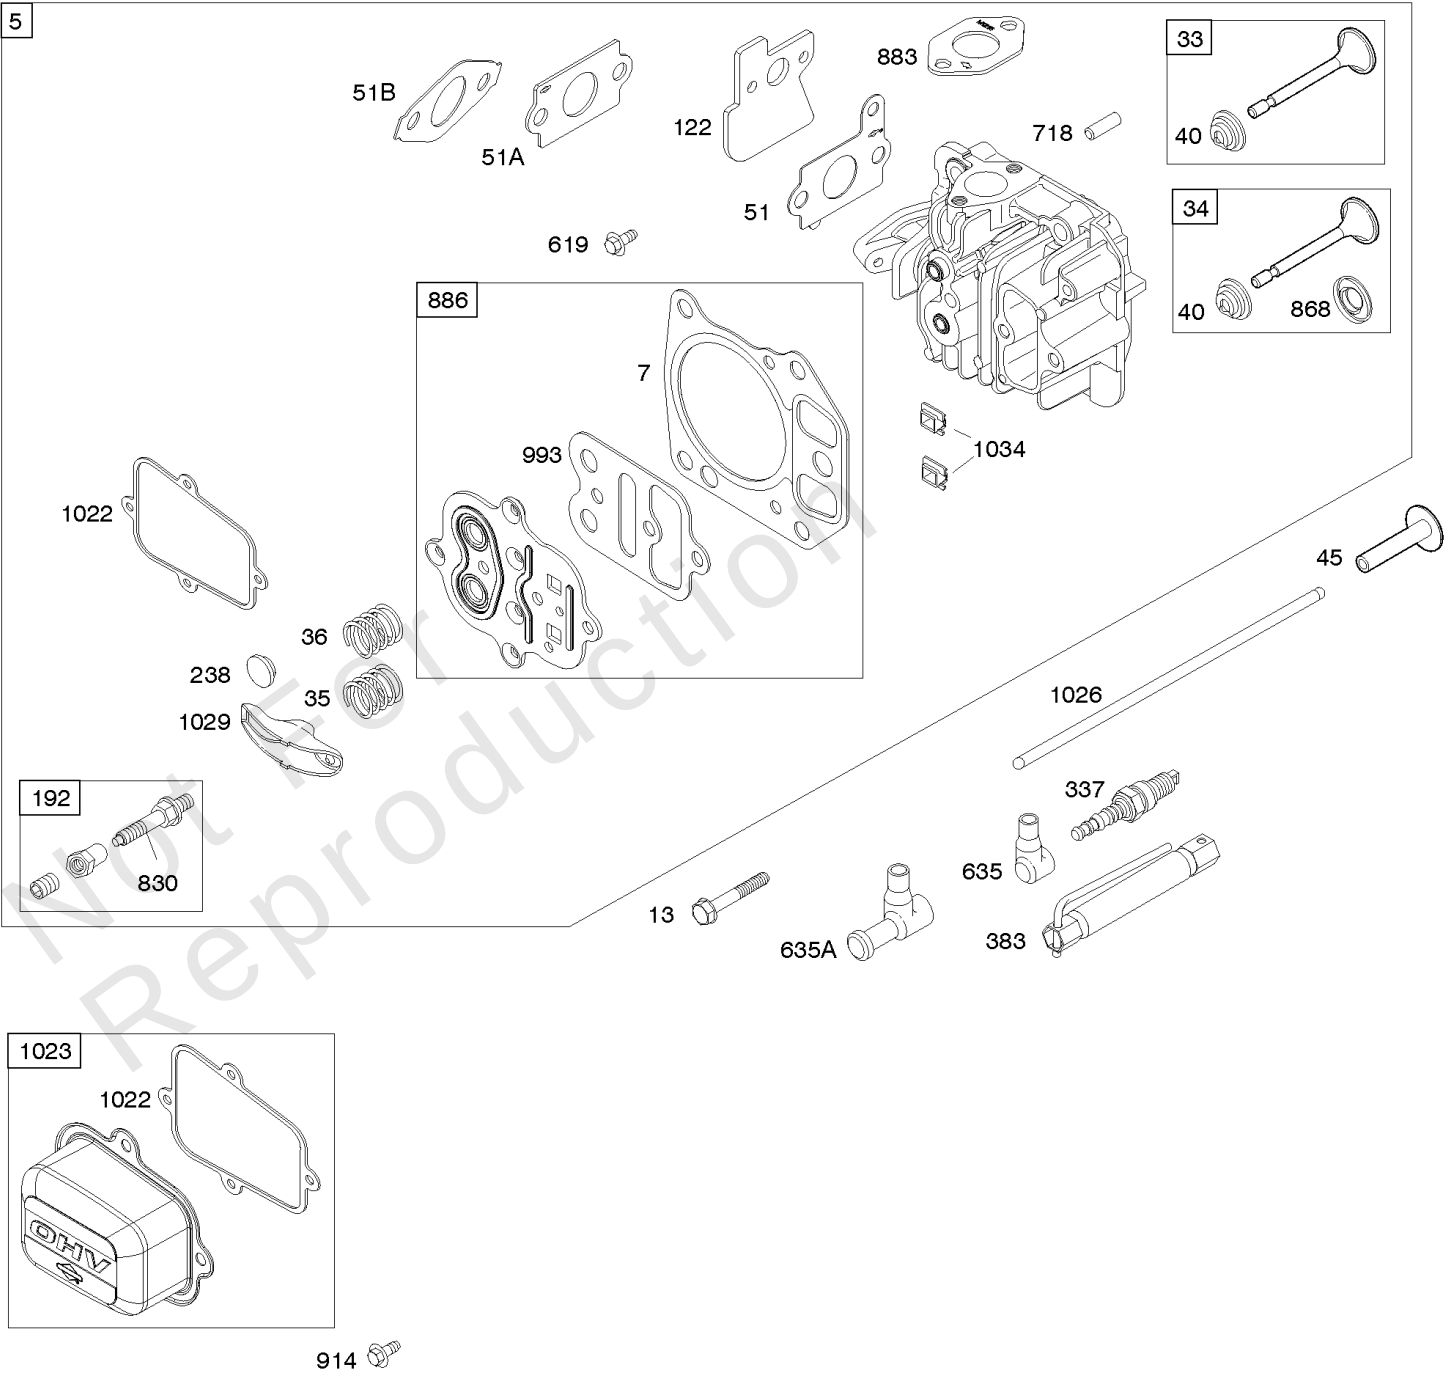 

Cylinder Head

REF NO	PART NO	QTY	DESCRIPTION
5	795501		HEAD, Cylinder -Used After Code Date 05110100
5	695276		HEAD, Cylinder -Used Before Code Date 05110200
7	697230		GASKET-CYLINDER HEAD
13	691137		SCREW -(Cylinder Head)
33	499642		VALVE, Exhaust
34	499641		VALVE, Intake
35	691304		SPRING, Valve -(Intake)
36	691304		SPRING, Valve -(Exhaust)
40	692194		RETAINER, Valve
45	690977		TAPPET, Valve
51	692668		GASKET, Intake
51A	697735		GASKET, Intake
51B	692555		GASKET, Intake -(2 Required)
122	692799		SPACER, Carburetor
192	694543		ADJUSTER-ROCKER ARM
238	691300		CAP, Valve
337	692720		PLUG, Spark -(EMS)
337	692051		PLUG, Spark -(Resistor)
383	19374S		WRENCH, Spark Plug
619	691108		SCREW -(Cylinder Head Plate)
635	66538S		BOOT, Spark PLug
635A	692927		BOOT, Spark Plug
718	690959		PIN, Locating
830	694544		STUD-ROCKER ARM -(Rocker Arm)
868	692044		SEAL, Valve
883	691893		GASKET-EXHAUST
886	696268		KIT, Cylinder Head/Plate Gasket
914	691108		SCREW -(Rocker Cover)
993	694088		GASKET, Cylinder Head Plate
1022	691890		GASKET-ROCKER COVER
1023	499624		COVER, Rocker
1026	692045		ROD, Push
1029	691230		ARM, Rocker
1034	691343		GUIDE, Push Rod

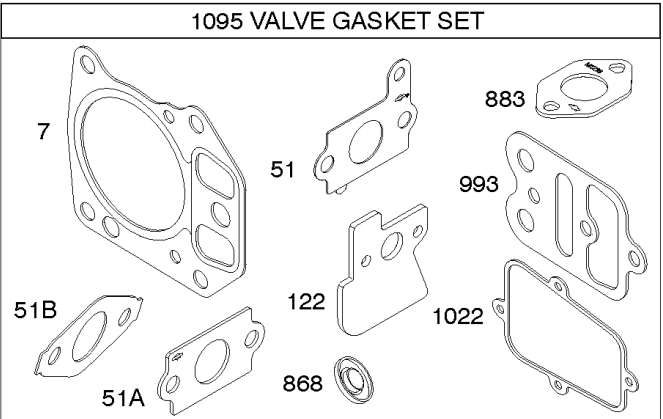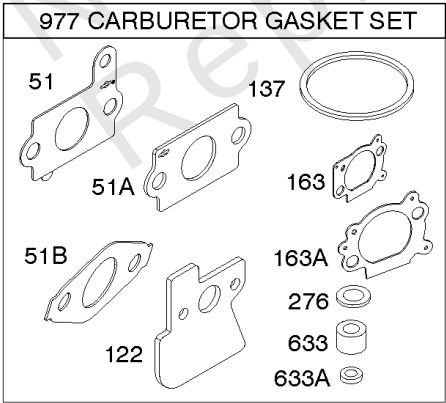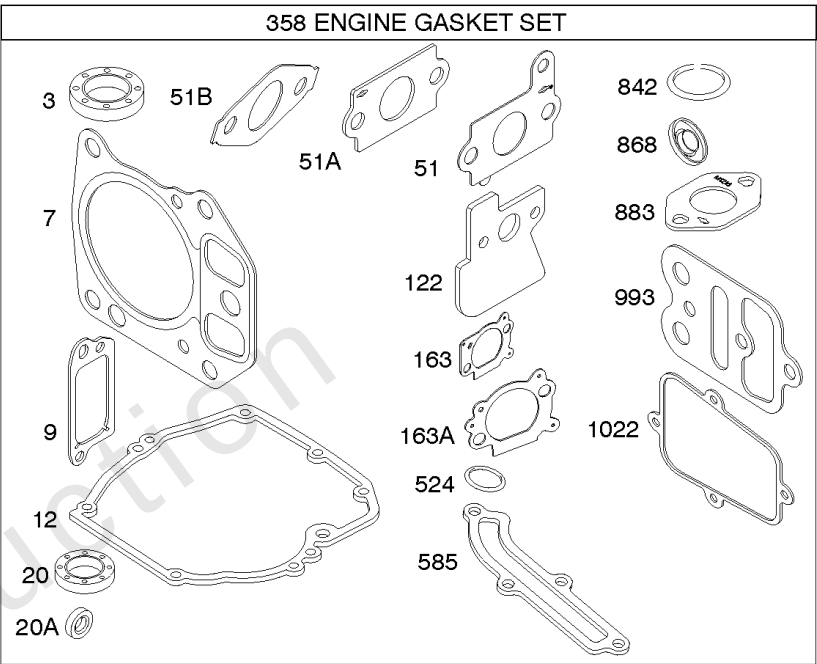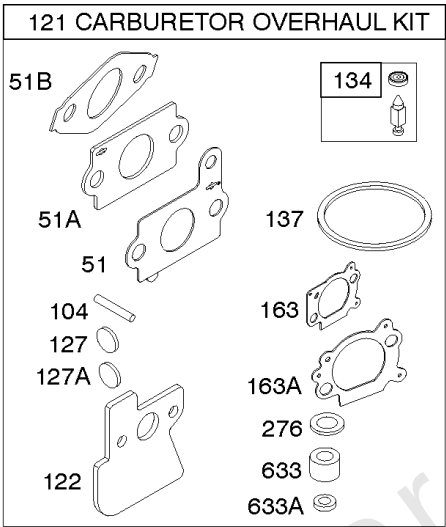    

Kits/Gasket Sets

REF NO	PART NO	QTY	DESCRIPTION
3	299819S		SEAL, Oil -(Magneto Side)
7	697230		GASKET-CYLINDER HEAD
9	699833		GASKET-BREATHER
12	692232		GASKET, Crankcase
20	399781S		SEAL, Oil -(PTO Side)
20A	691952		SEAL, Oil -(PTO Side) (Auxiliary PTO)
51	692668		GASKET, Intake
51A	697735		GASKET, Intake
51B	692555		GASKET, Intake -(2 Required)
104	691242		PIN, Float Hinge
121	792383		KIT, Carburetor Overhaul
122	692799		SPACER, Carburetor
127	694468		PLUG, Welch -(Bowl Vent)
127A	691739		PLUG-WELCH
134	398188		KIT-NEEDLE/SEAT
137	693981		GASKET-FLOAT BOWL
163	691894		GASKET, Air Cleaner -(Air Cleaner)
163A	692667		GASKET, Air Cleaner -(Air Cleaner)
276	271716		WASHER-SEALING
358	792384		GASKET SET, Engine
524	692296		SEAL-DIPSTICK TUBE -(Dipstick Tube)
585	691879		GASKET-BREA PASSAGE
633	693867		SEAL, Choke/Throttle Shaft
633A	691321		SEAL, Choke/Throttle Shaft -(Throttle Shaft)
842	691031		SEAL, O-Ring -(Dipstick Tube)
868	692044		SEAL, Valve
883	691893		GASKET-EXHAUST
977	792385		SET, Carburetor Gasket
993	694088		GASKET, Cylinder Head Plate
1022	691890		GASKET-ROCKER COVER
1095	792386		GASKET SET, Valve

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	121S022015	1	Replacement Engine
	692745	1	Replacement Short Block
	-----		Top No-Load Speed: 3300 -Trim: ALL
	-----		Service Note: If the replacement engine supersedes to or is a Model 120000 series engine, refer to the illustrations located after the conversion data for this model series. the overall dimensions that differ, are shown in the illustrations.
	-----		Service Note: If after making a visual inspection and it is determined the Model 120000 series engine cannot be used because of equipment interference, the original engine should be repaired with individual parts.

