




Parts Manual

Mfg. No: 121S07-0024-F1

Model Components	Page
Air Cleaner.	4
Alternator, Electric Starter, Ignition.	6
Blower Housing, Cover, Rewind Starter.	8
Camshaft, Crankshaft, Cylinder, Piston/Rings/Connecting Rod, Warning Label.	10
Carburetor, Carburetor Overhaul Kit.	12
Controls, Governor Spring, Thermostat.	14
Cylinder Head, Gasket Set-Valves, Valves.	16
Exhaust System.	18
Flywheel/Guards.	20
Fuel Supply, Lubrication.	22
Gasket Set-Engine, Sump.	24
Replacement Engine - US & Canada.	26

Not For
Reproduction

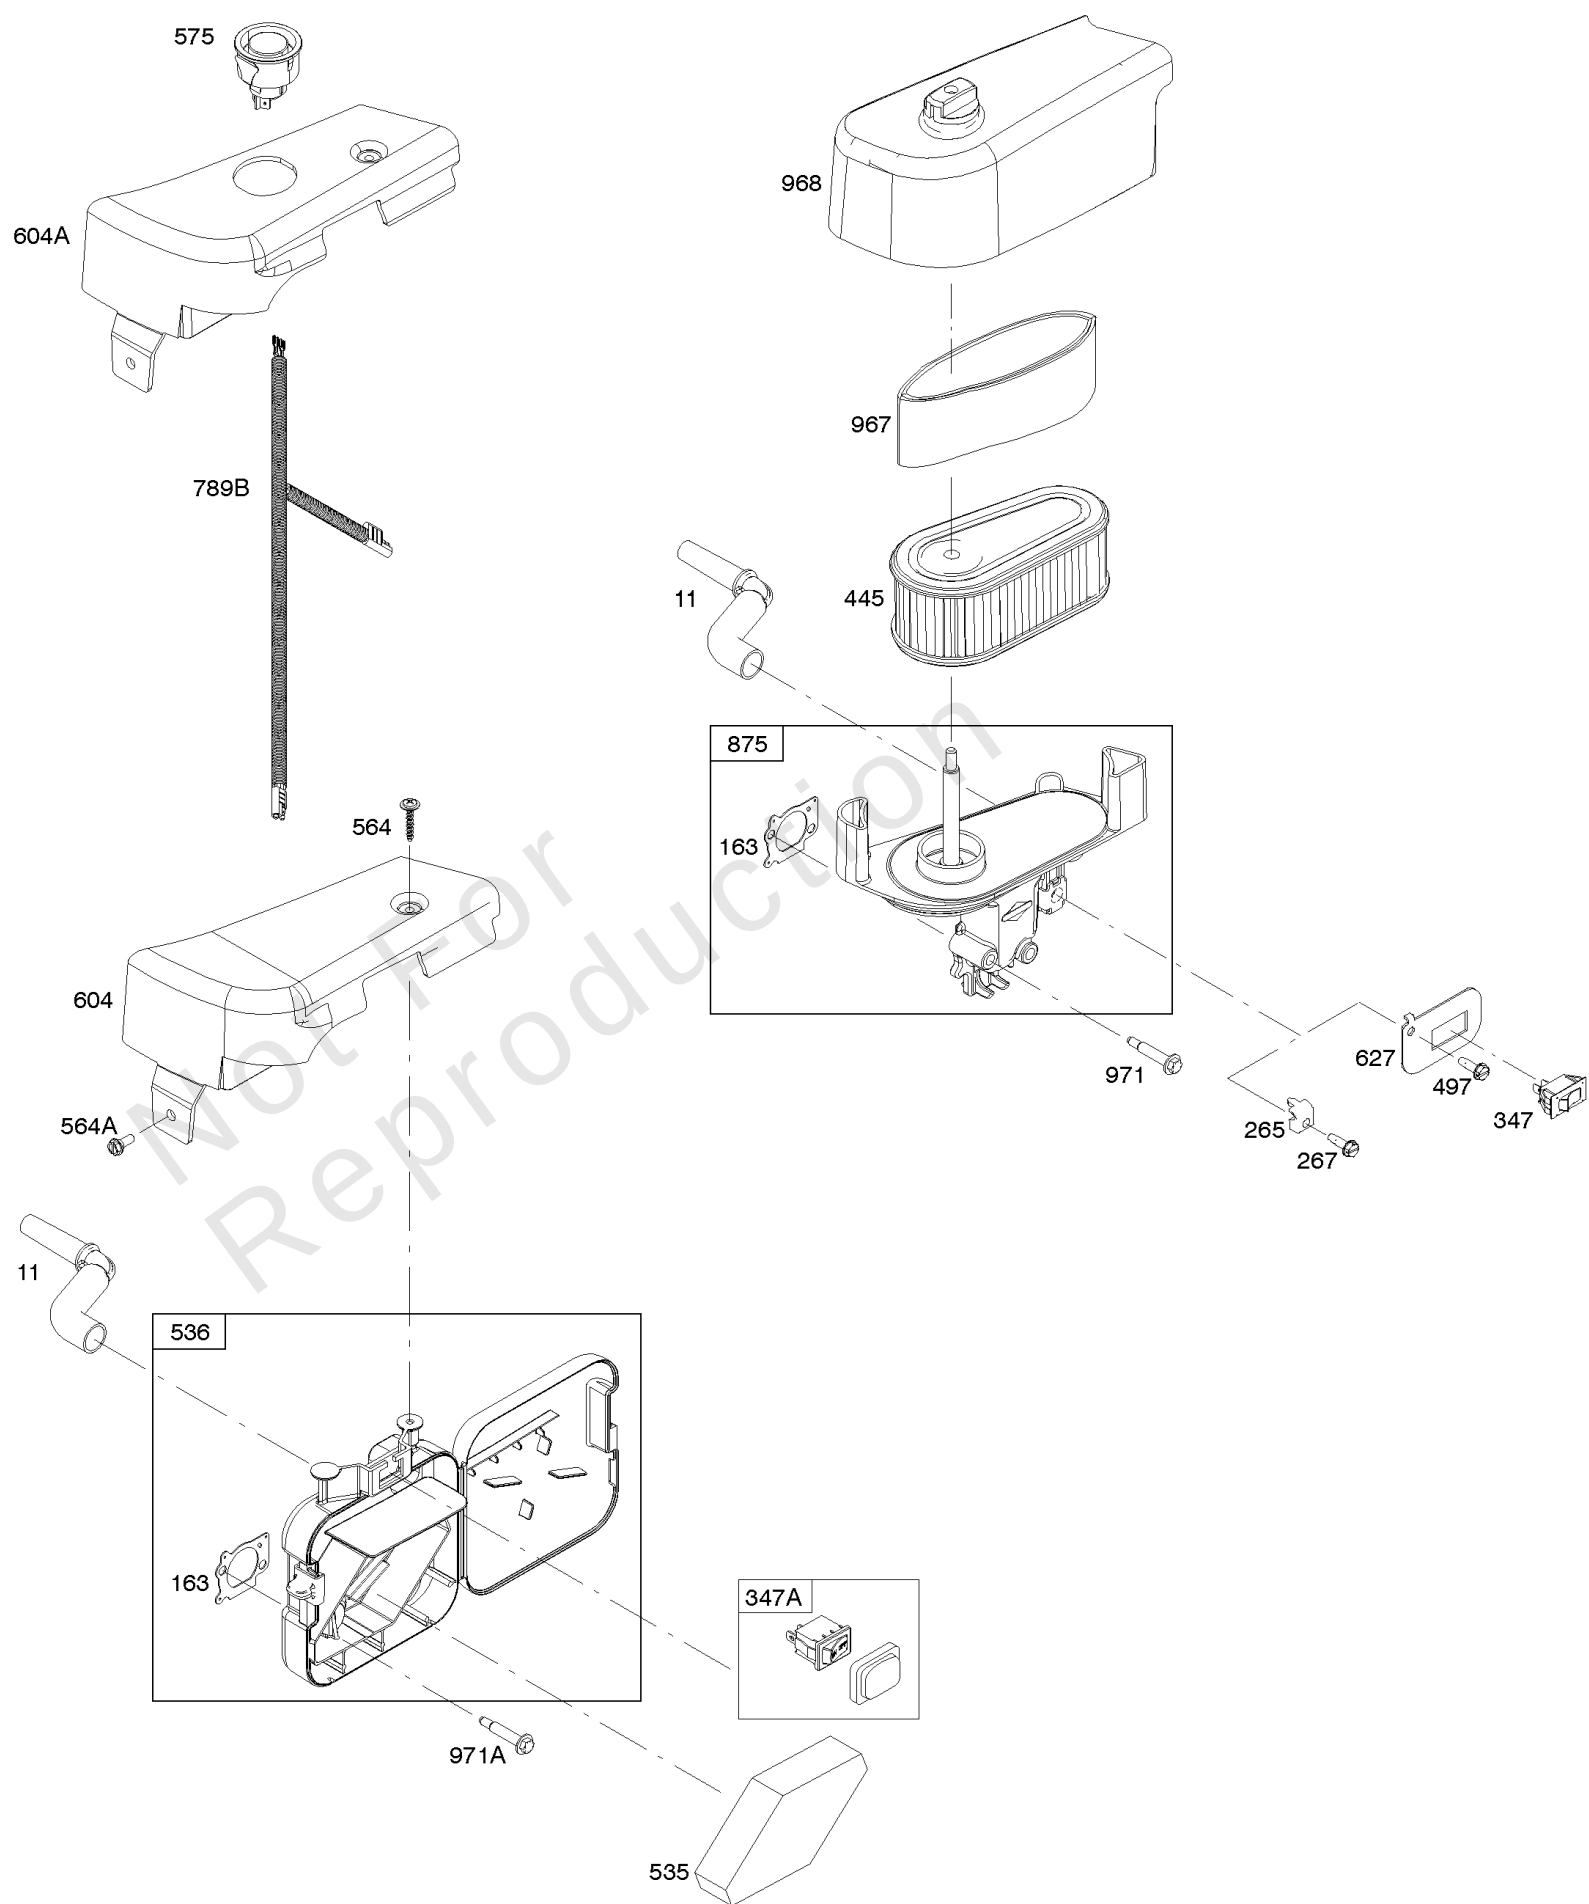


Air Cleaner

REF NO	PART NO	QTY	DESCRIPTION
11	796478		TUBE, Breather
163	691894		GASKET, Air Cleaner -(Air Cleaner)
265	690798		CLAMP, Casing
267	691044		SCREW -(Casing Clamp)
445	795066		FILTER, A/C Cartridge
535	797301		FILTER, Air Cleaner Foam
536	799025		CLEANER, Air
789B	593589		HARNESS, Wiring
875	796492		BASE, Air Cleaner
967	796254		FILTER, Pre Cleaner
968	796493		COVER, Air Cleaner
971	690349		SCREW -(Air Cleaner Base to Carburetor/Throttle Body)


Alternator, Electric Starter, Ignition

Mfg. No: 121S07-0024-F1

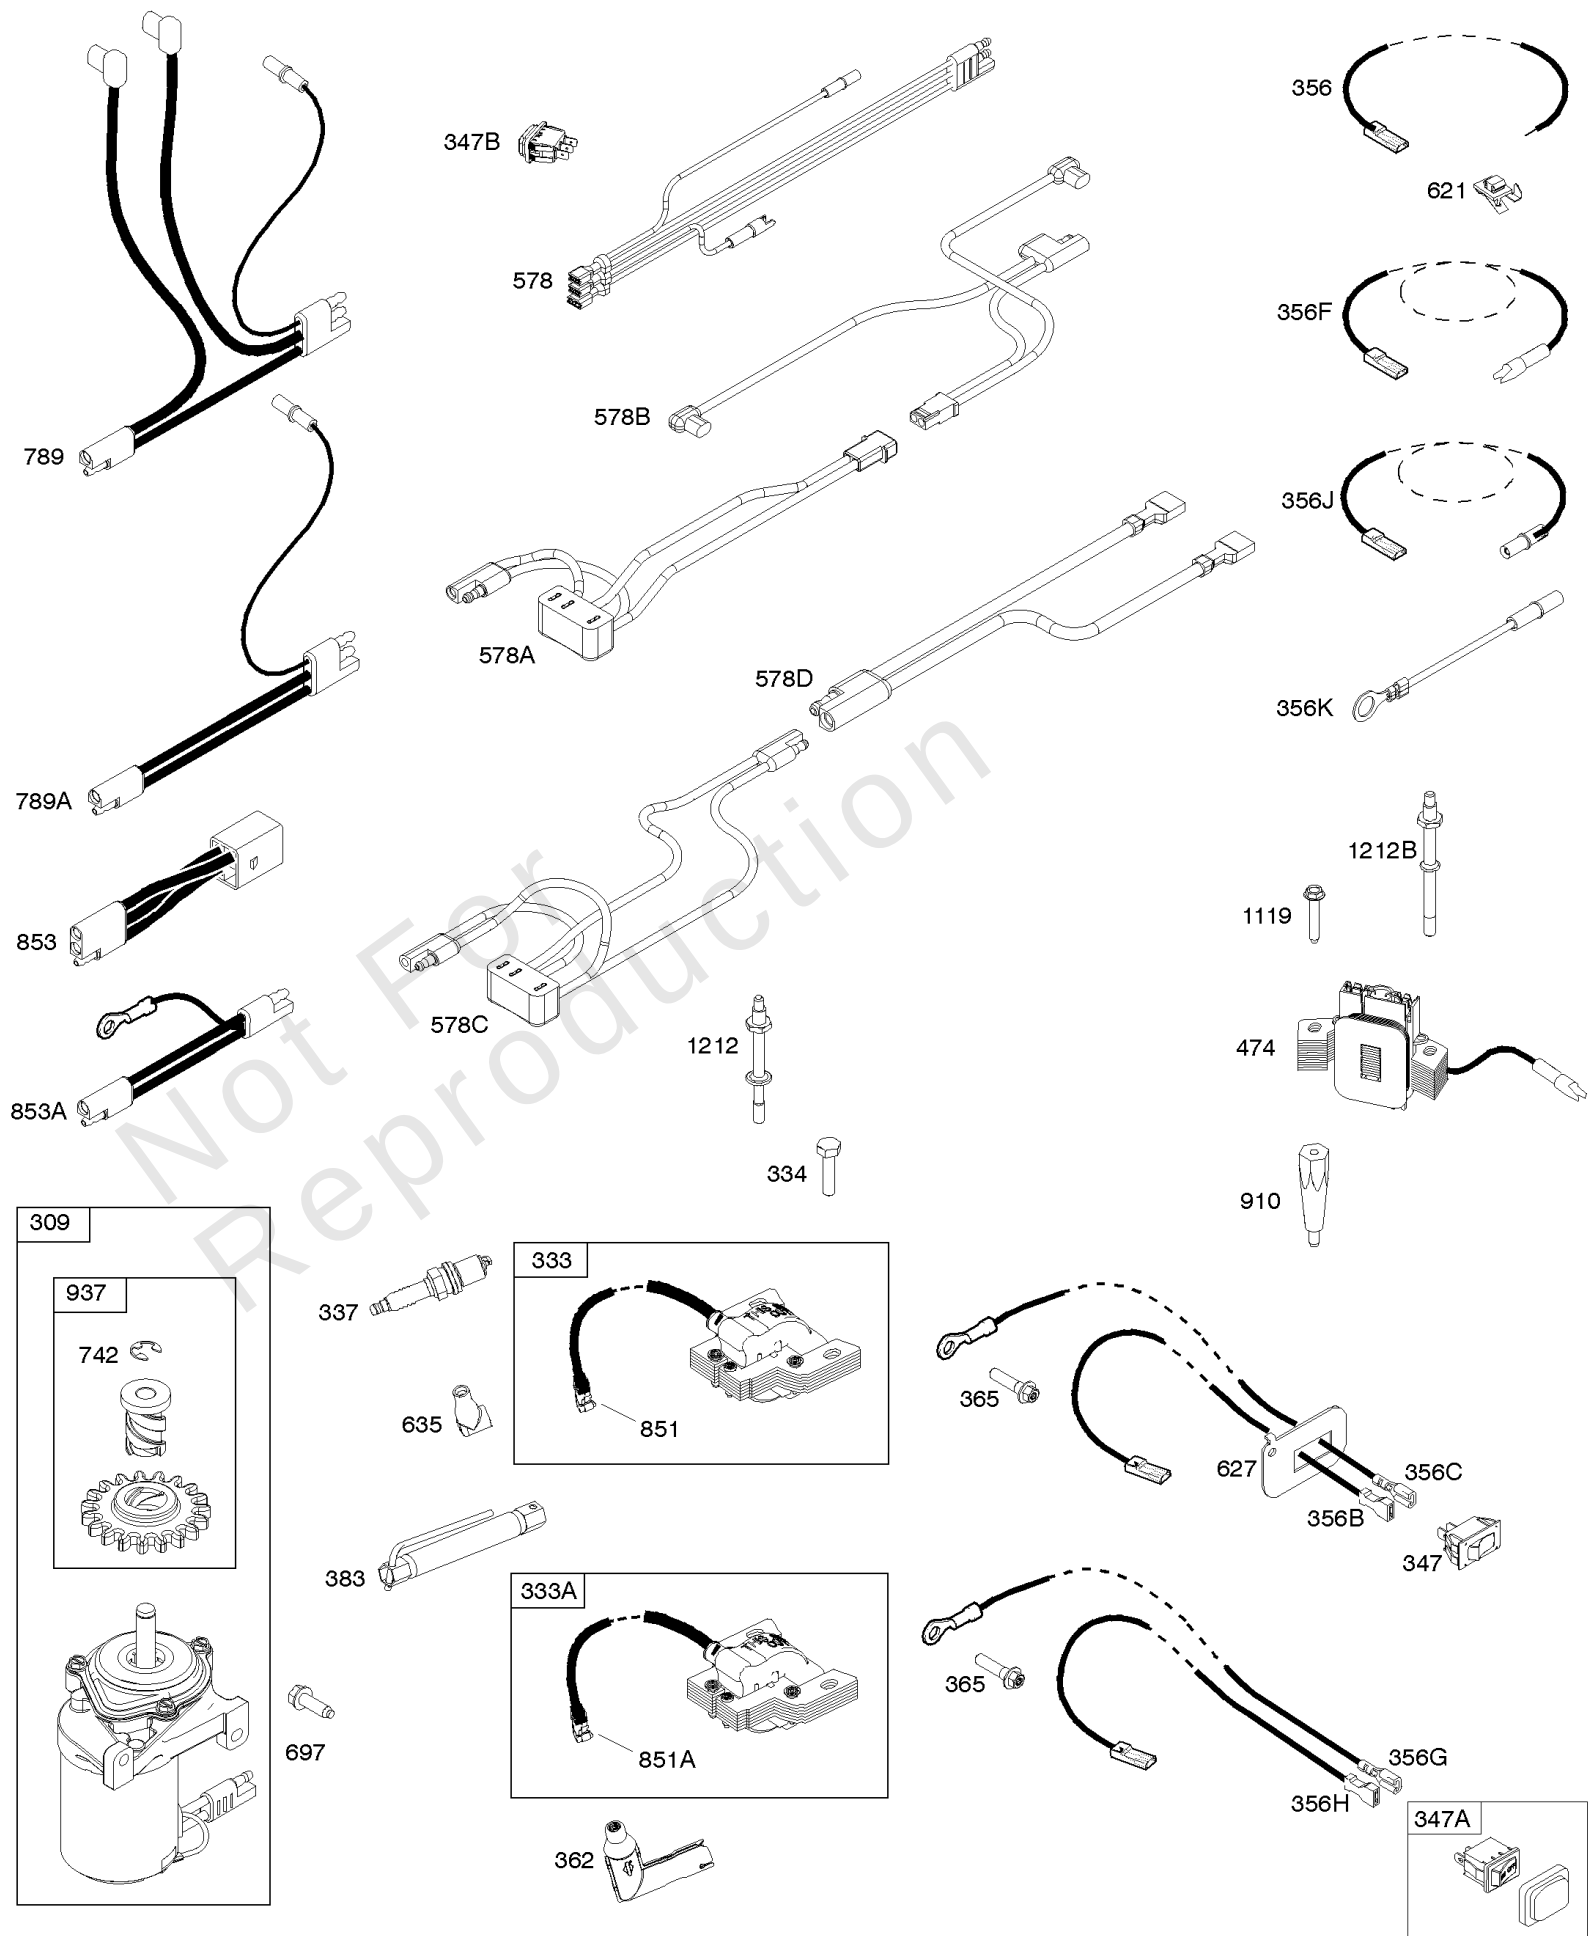


Alternator, Electric Starter, Ignition

REF NO	PART NO	QTY	DESCRIPTION
309	799241		MOTOR, Starter
333	796500		ARMATURE, Magneto -(90 Degree Ignition Terminal)
334	793454		SCREW -(Magneto Armature)
337	692051		PLUG, Spark -(Resistor)
337	692720		PLUG, Spark -(EMS)
356F	593324		WIRE, Stop
362	799646		SHIELD, Spark Plug
365	793458		SCREW -(Carburetor)
383	19576S		WRENCH, Spark Plug
474	794103		ALTERNATOR
578	593322		WIRE ASSEMBLY
578A	594367		WIRE ASSEMBLY -(Instart)
578B	594368		HARNESS, Wiring -(Instart)
578C	595147		WIRE ASSEMBLY -(Instart)
621	692310		SWITCH, Stop
635	66538S		BOOT, Spark PLug
697	691127		SCREW -(Starter Motor) (Drive Cap)
742	93941		RETAINER, E Ring
789	792685		HARNESS, Wiring
789A	696546		HARNESS, Wiring
851	493880S		TERMINAL, Spark Plug
851A	692424		TERMINAL, Spark Plug
853	696842		ADAPTER, Wire
853A	695897		ADAPTER, Wire
910	796498		STUD -(Alternator)
1119	794100		SCREW -(Alternator)
1212	796537		STUD -(Blower Housing)
1212B	797002		STUD -(Blower Housing) (Used With Alternator Only)

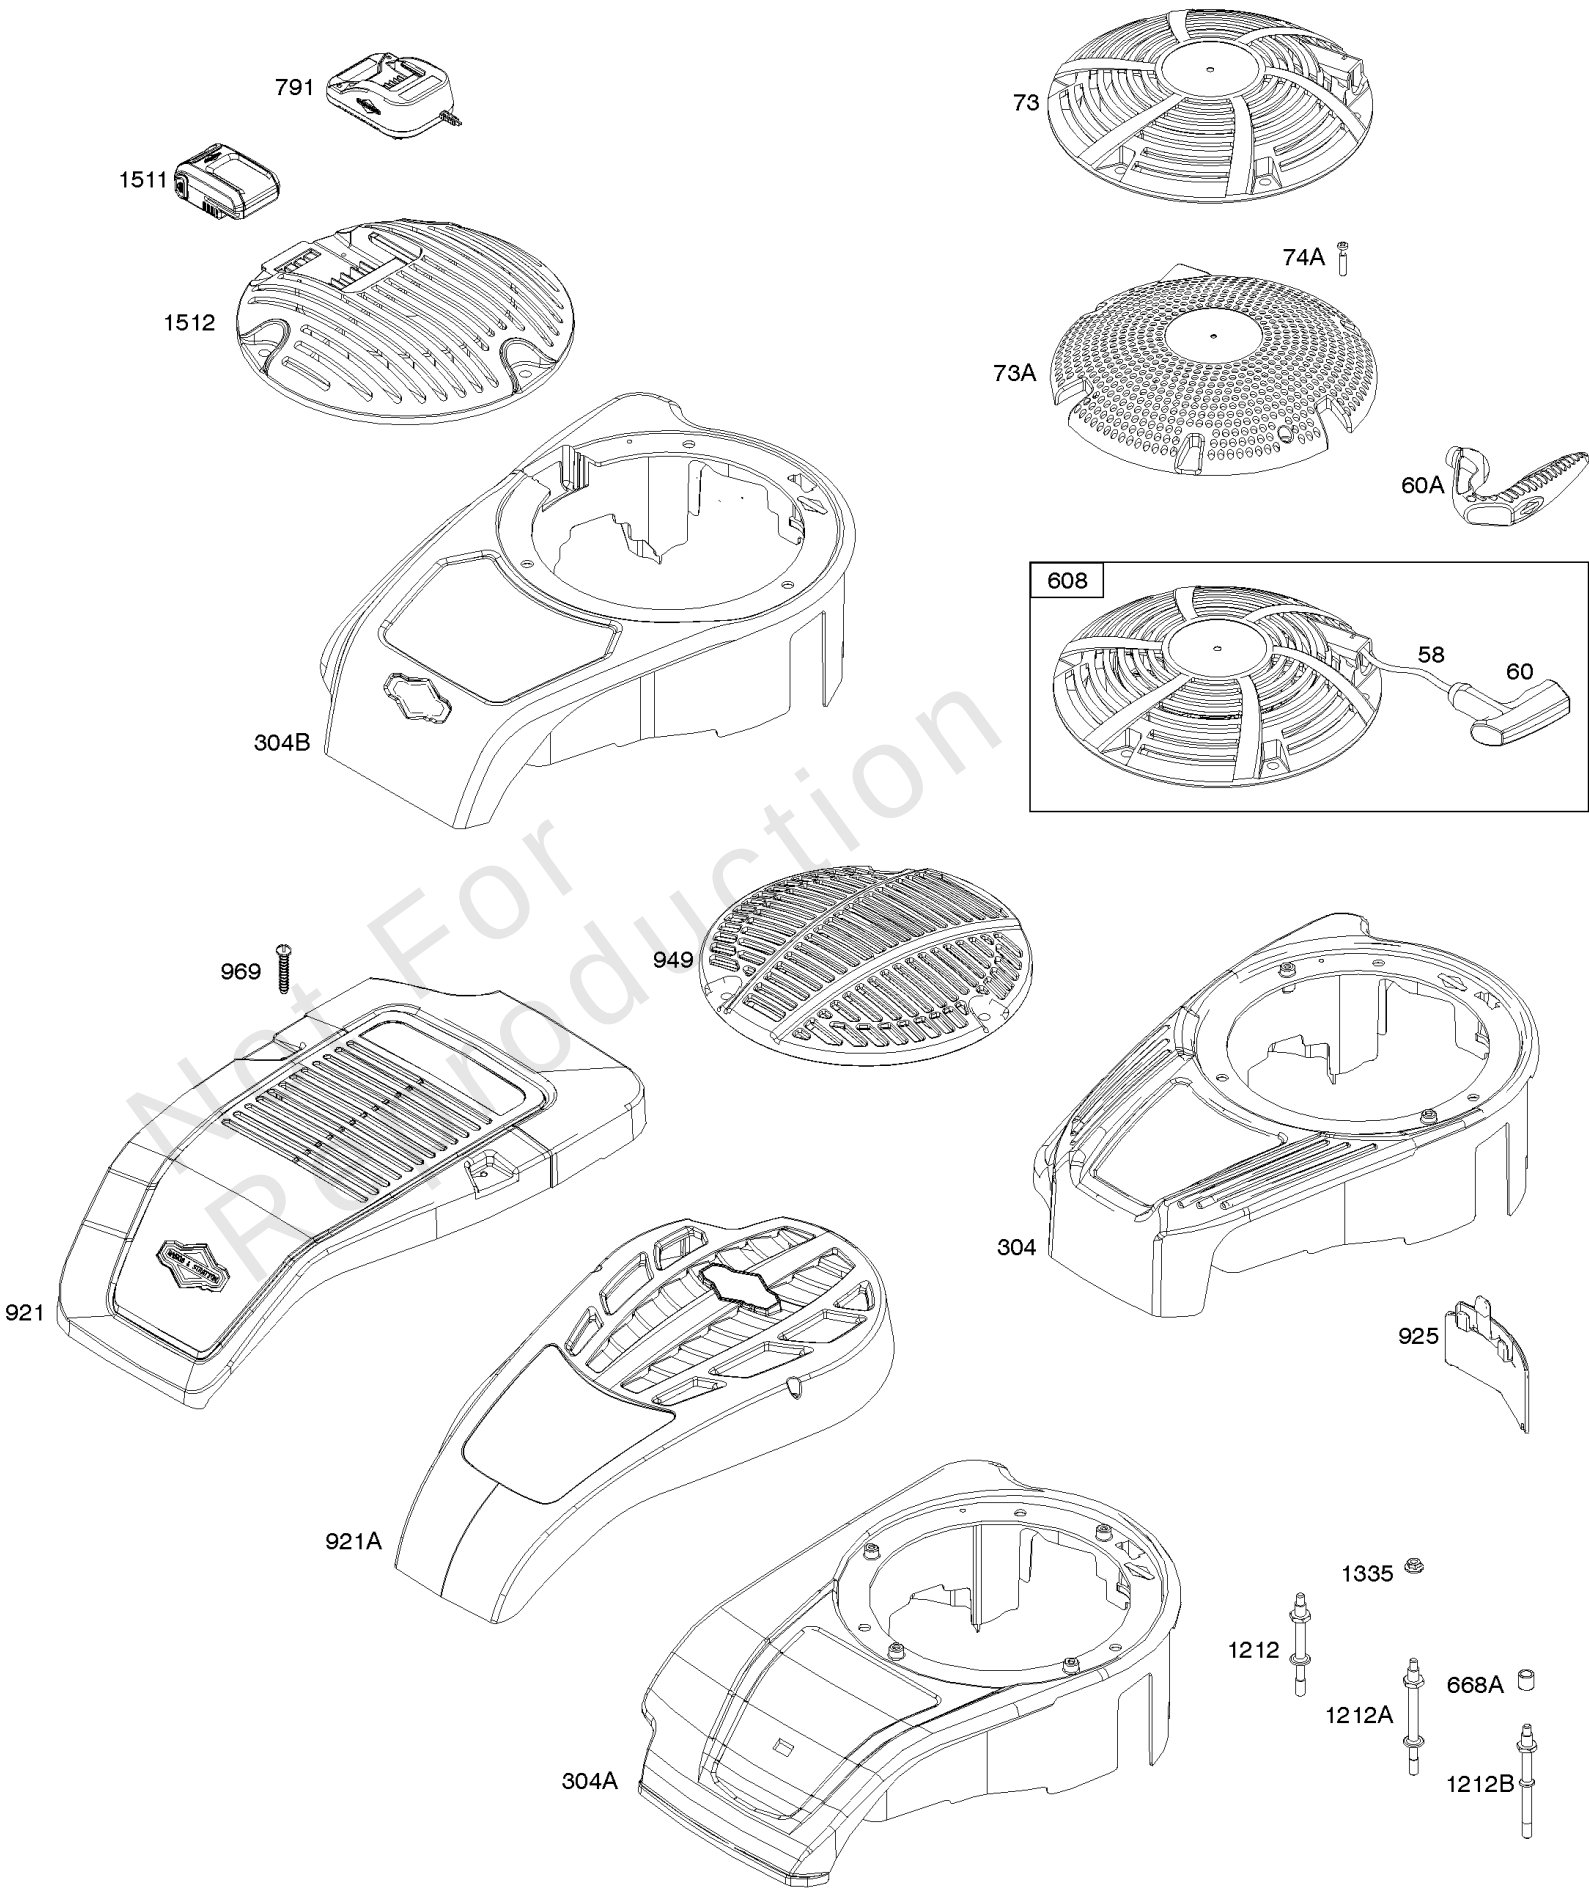


Blower Housing, Cover, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
58	697316		ROPE, Starter -(Cut To Required Length)
60	281434S		GRIP, Starter Rope
60A	799716		GRIP, Starter Rope
73	798337		SCREEN, Rotating
73A	591333		SCREEN, Rotating
74A	691138		SCREW -(Rotating Screen)
304	798945		HOUSING, Blower -(Electric Start)
608	796497		STARTER, Rewind
668A	797383		SPACER
791	593561		CHARGER, Battery -(InStart)(North America)
921	799692		HOUSING, Blower
921A	799648		HOUSING, Blower
925	796531		COVER, Linkage
1212	796537		STUD -(Blower Housing)
1212A	793479		STUD -(Blower Housing)
1212B	797002		STUD -(Blower Housing) (Used With Alternator Only)
1335	793481		NUT -(Blower Housing)
1511	596088		BATTERY -(InStart)(North America/Argentina)
1512	594366		SCREEN -(Instart)

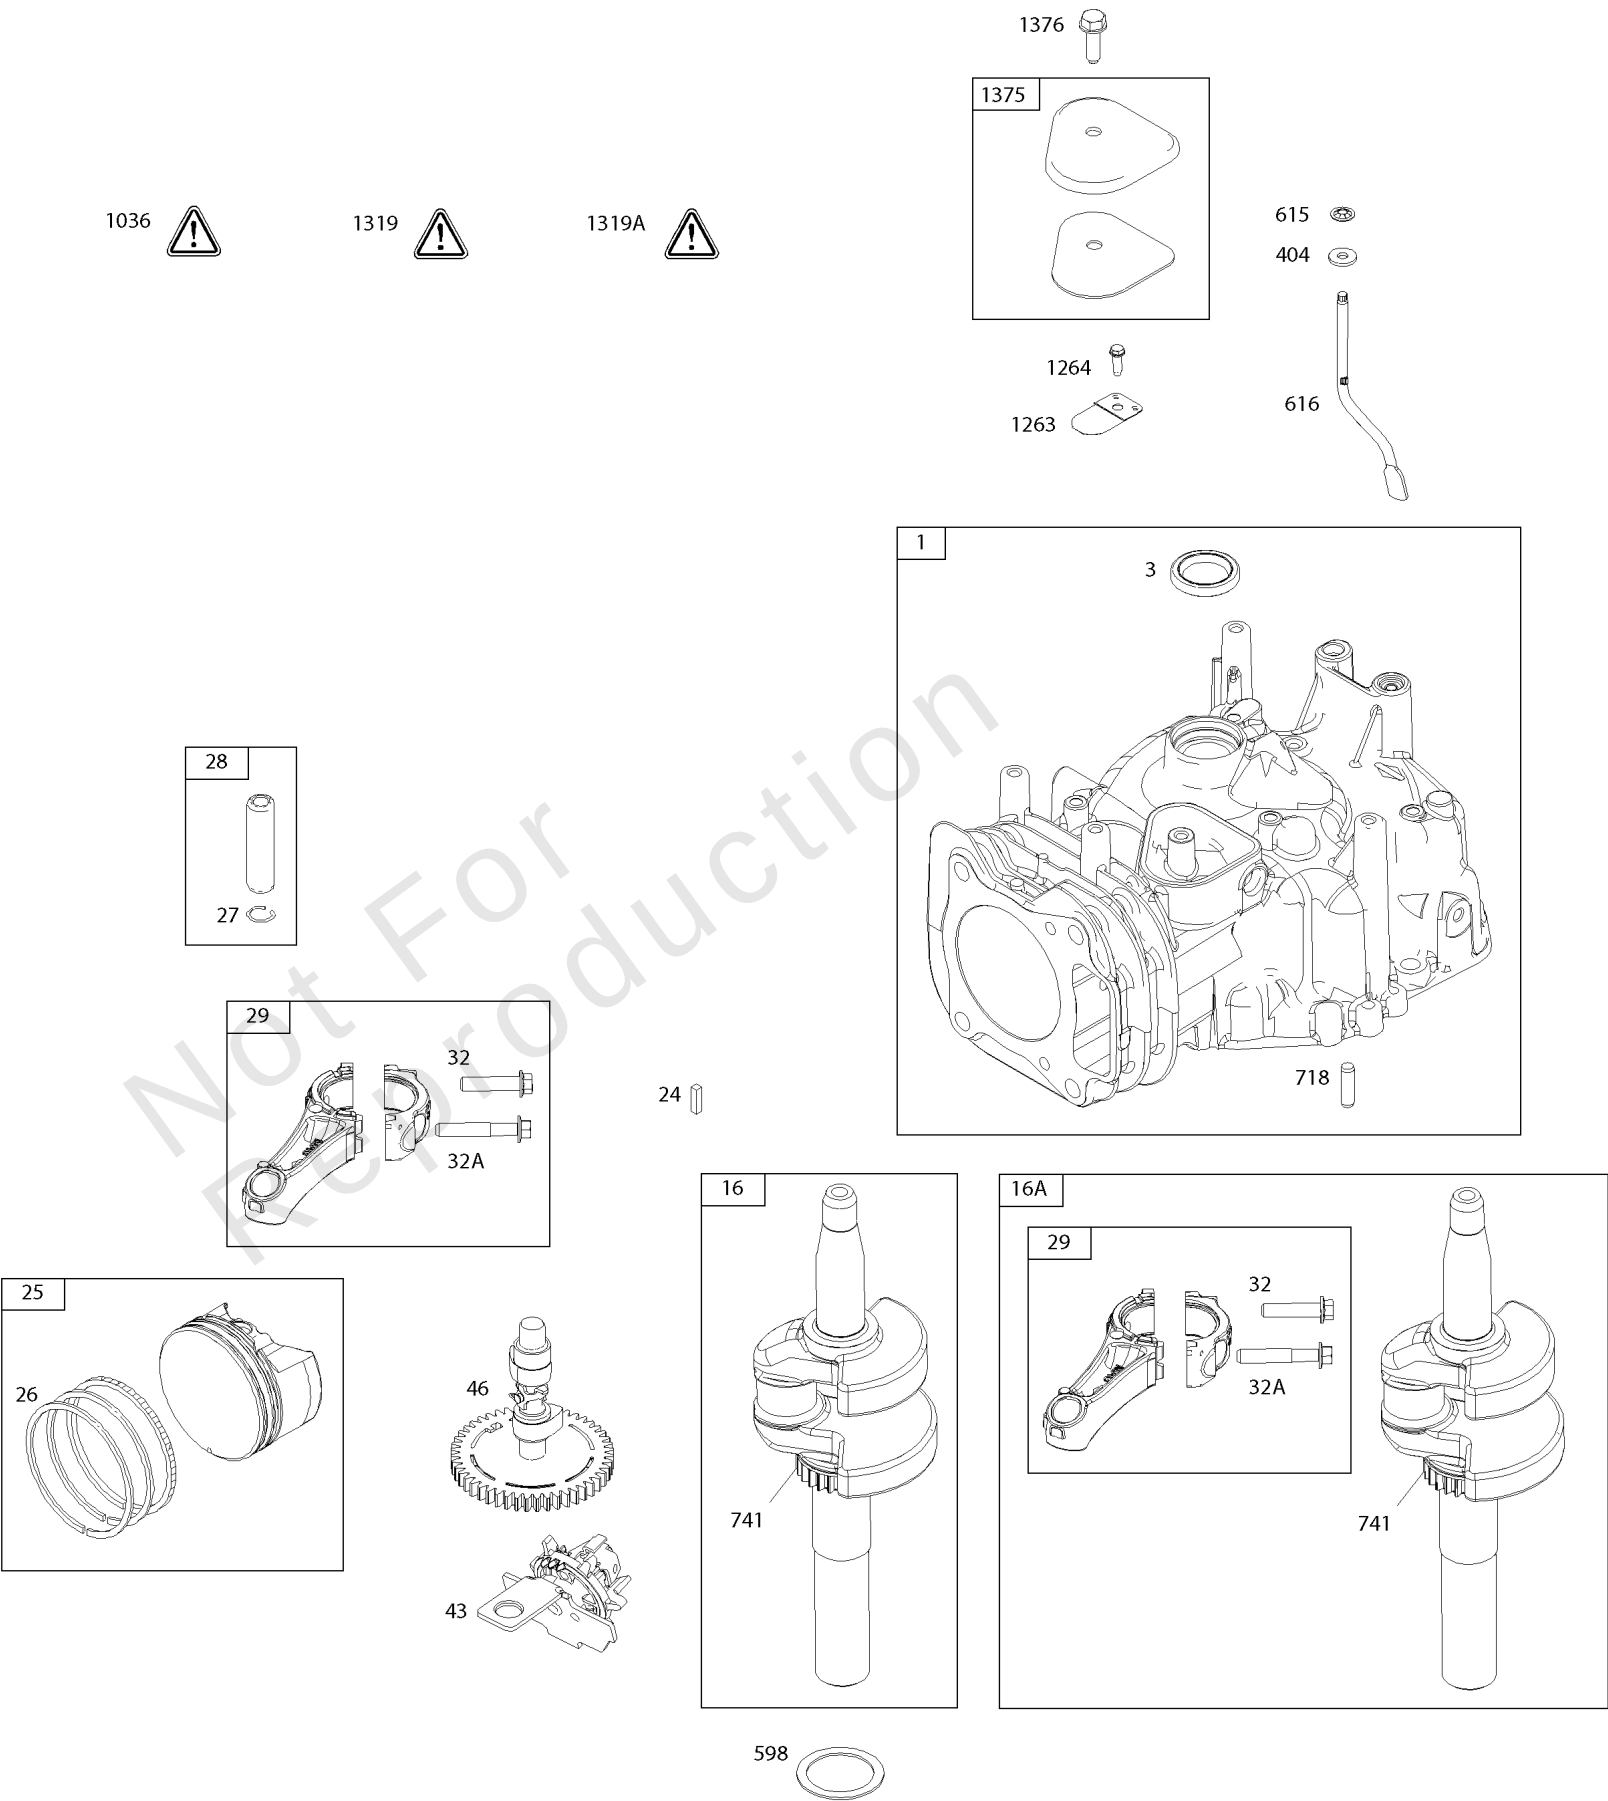


Camshaft, Crankshaft, Cylinder, Piston/Rings/Connecting Rod, Warning Label

REF NO	PART NO	QTY	DESCRIPTION
1	798947		CYLINDER ASSEMBLY
3	299819S		SEAL, Oil -(Magneto Side)
16	597173	1	CRANKSHAFT -(Use After Date Code 18031900)
16A	84002266	1	CRANKSHAFT -(Use Before Date Code 18032000)
24	222698S		KEY, Flywheel
25	590404		PISTON ASSEMBLY -(Standard)
25	590405		PISTON ASSEMBLY -(.020 Oversize)
26	797305		SET, Ring -(.020 Oversize) -Used After Code Date 09041900 -Used Before Code Date 11070100
26	590402		SET, Ring -(Standard) -Used After Code Date 11063000
26	590403		SET, Ring -(.020 Oversize) -Used After Code Date 11063000
26	796641		SET, Ring -(Standard) -Used Before Code Date 09042000
26	796642		SET, Ring -(.020 Oversize) -Used Before Code Date 09042000
26	797304		SET, Ring -(Standard) -Used After Code Date 09041900 -Used Before Code Date 11070100
27	691588		LOCK, Piston Pin
28	298909		PIN, Piston
29	796470		ROD, Connecting
32	691664		SCREW -(Connecting Rod)
32A	695759		SCREW -(Connecting Rod)
43	796650		SLINGER, Governor/Oil
46	694039		CAMSHAFT
404	690272		WASHER -(Governor Crank)
598	592587		SHIM, End Play -(Crankshaft or Camshaft Bearing)
615	690340		RETAINER, Governor Shaft
616	798327		CRANK, Governor
718	690959		PIN, Locating
741	797521		GEAR, Timing
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1263	697124		REED, Breather
1264	793453		SCREW -(Breather Reed)
1319	794467		LABEL, Warning
1319A	797669		LABEL, Warning
1375	796476		COVER, Breather Reed
1376	794451		SCREW -(Breather Reed Cover)

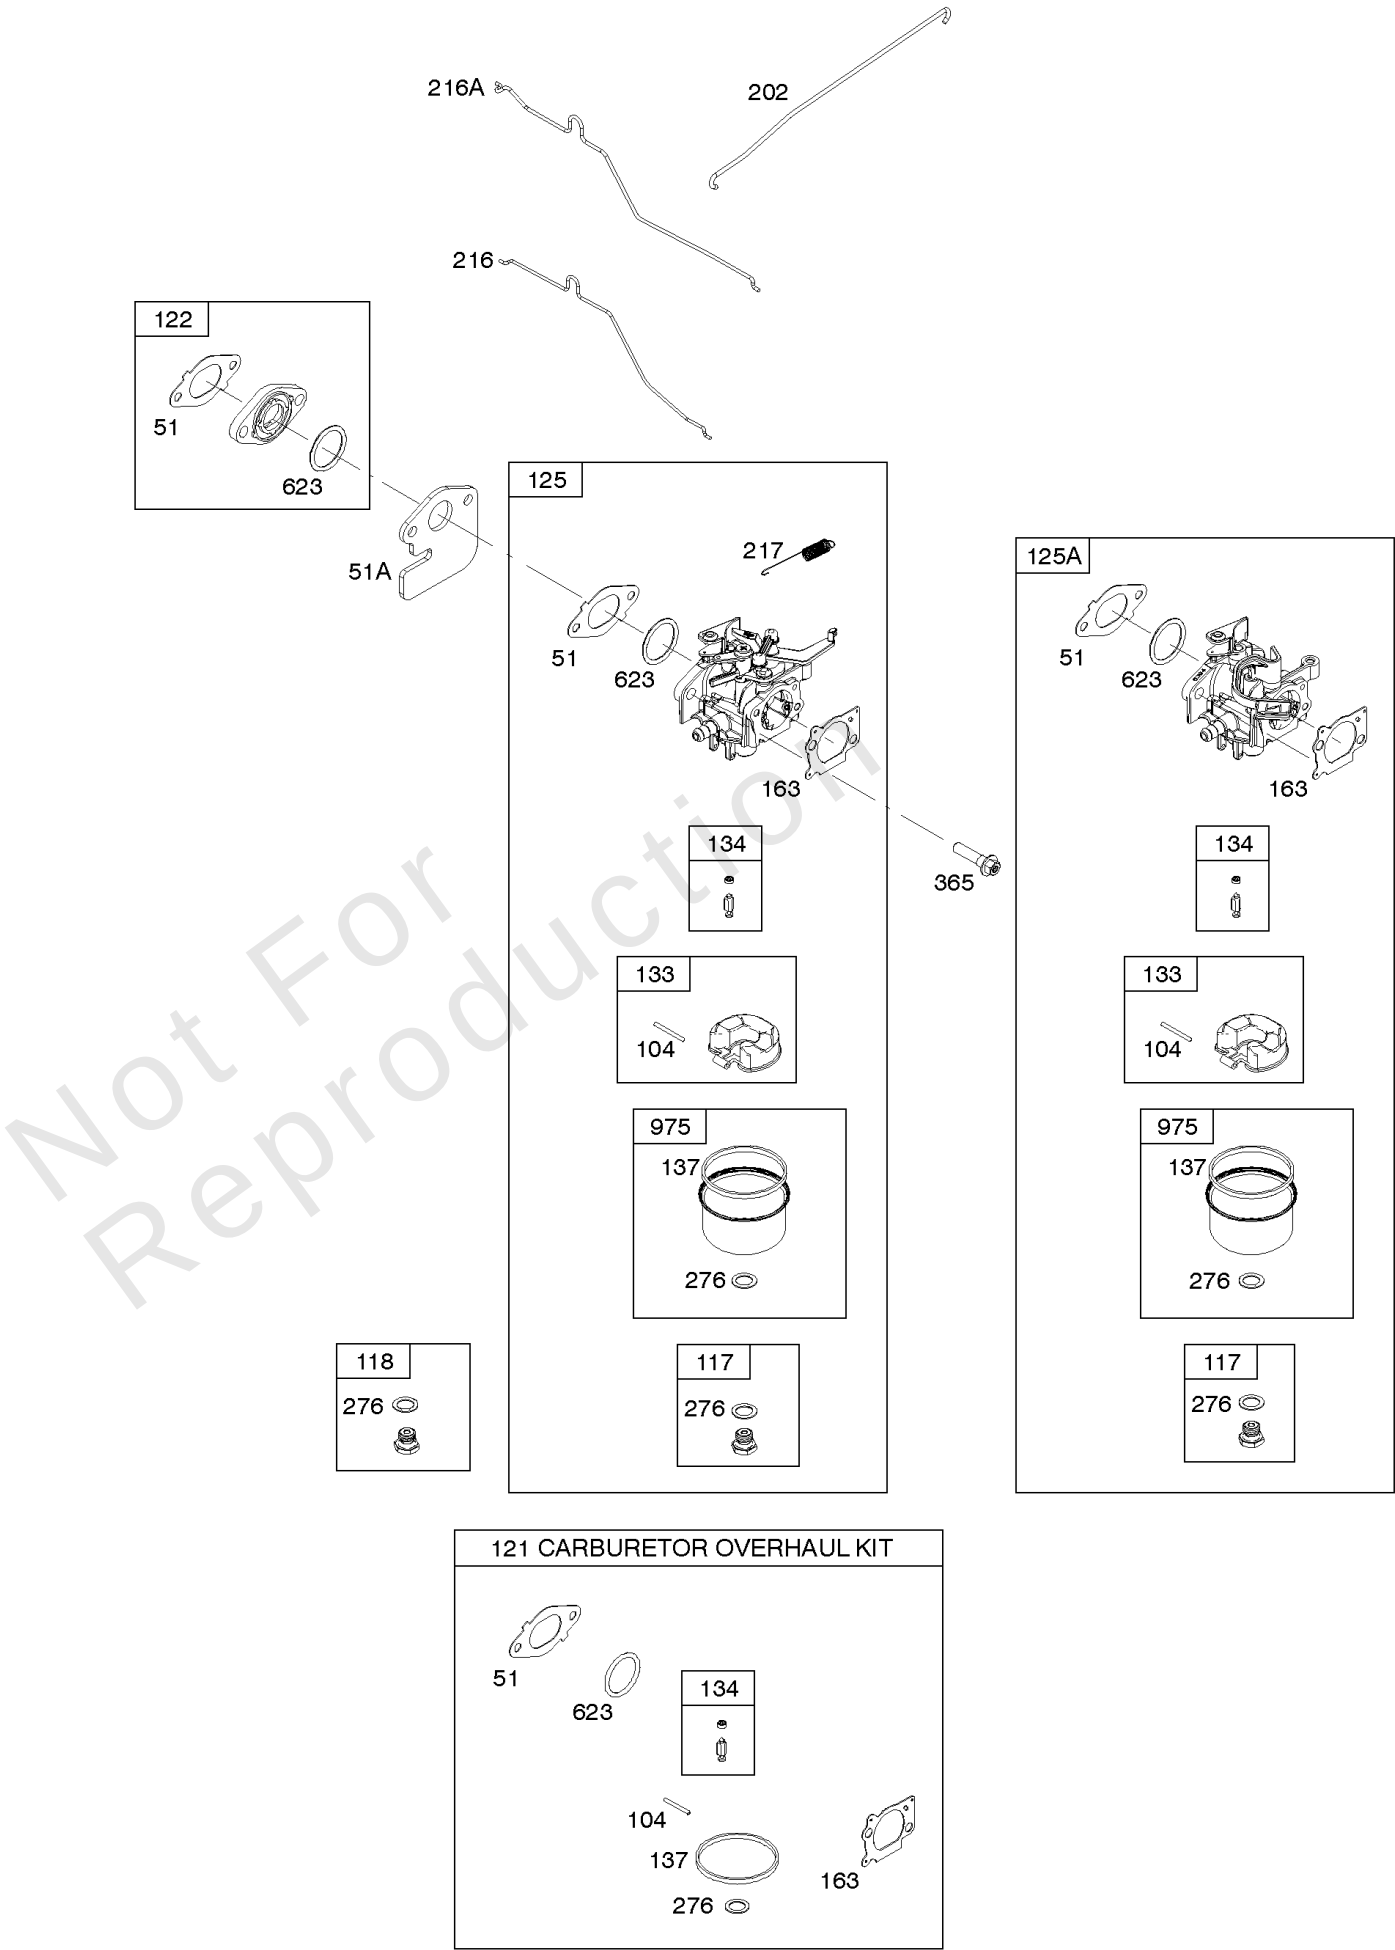


Carburetor, Carburetor Overhaul Kit

REF NO	PART NO	QTY	DESCRIPTION
51	796596		GASKET, Intake
51A	590398		GASKET, Intake
104	797622		PIN, Float Hinge
117	798661		JET, Main -(Standard)
118	799605		JET, Main -(High Altitude)
121	592172		KIT, Carburetor Overhaul
122	796595		SPACER, Carburetor
125	591137		CARBURETOR
133	797626		FLOAT, Carburetor
134	799177		KIT, Needle/Seat
137	797625		GASKET, Float Bowl
163	691894		GASKET, Air Cleaner -(Air Cleaner)
202	796657		LINK, Mechanical Governor
216A	798944		LINK, Choke
217	799179		SPRING, Choke Return
276	797632		WASHER, Sealing
365	793458		SCREW -(Carburetor)
623	793628		SEAL, O-Ring -(Carburetor Spacer)
975	797631		BOWL, Float

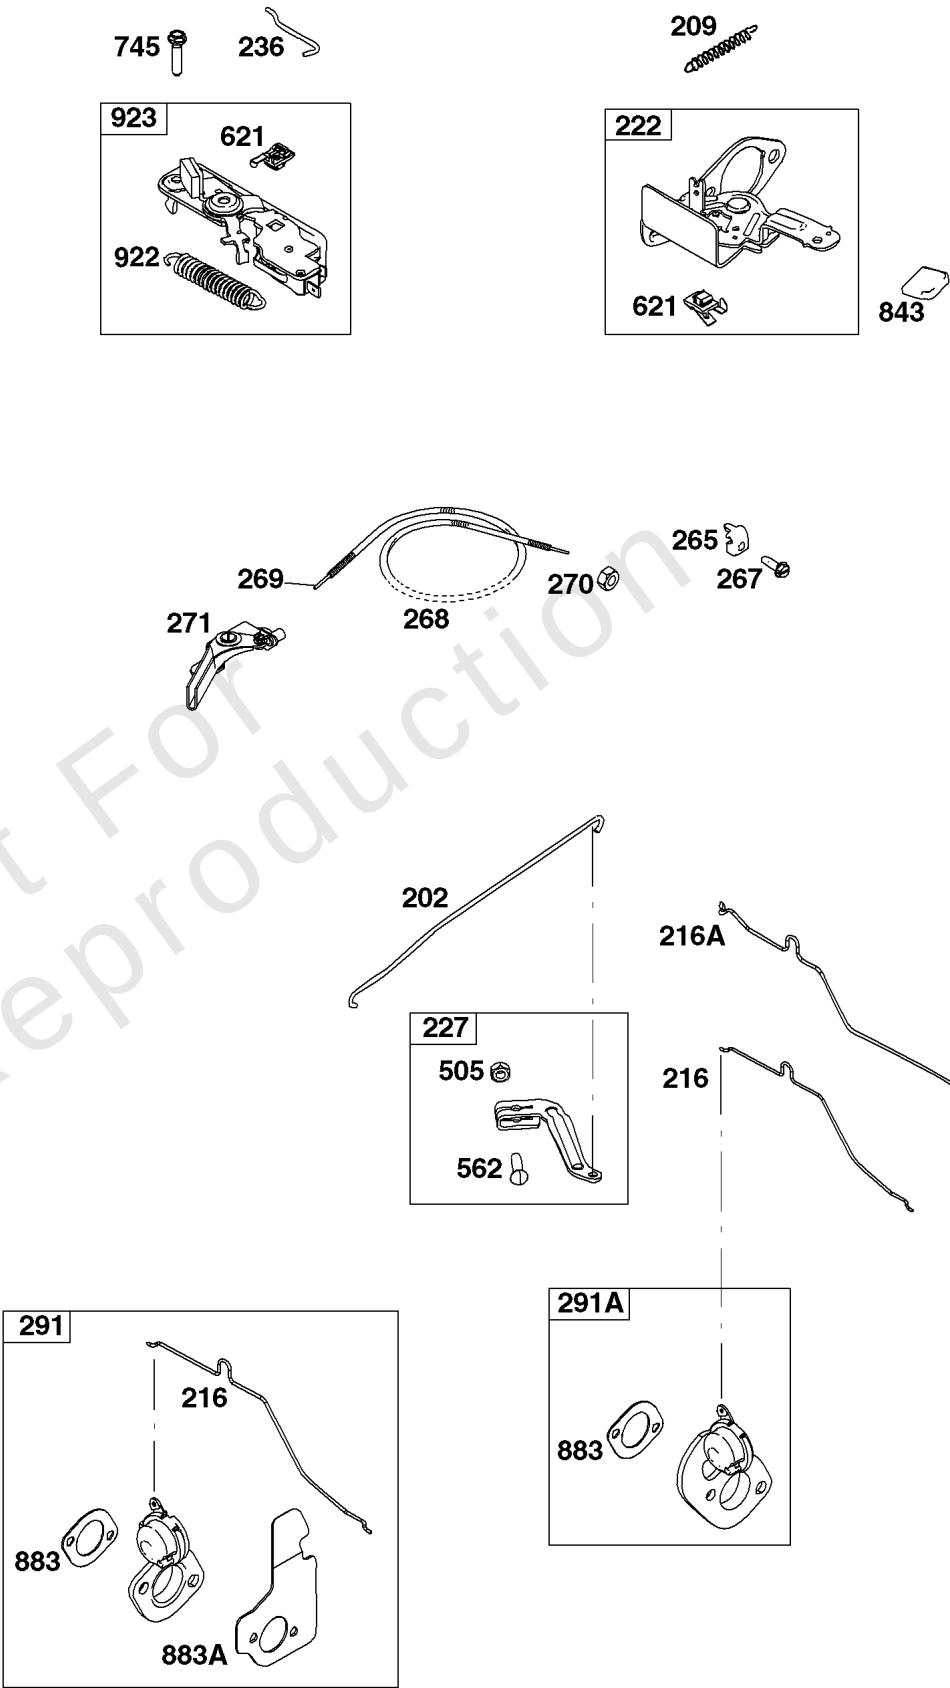







Controls, Governor Spring, Thermostat

REF NO	PART NO	QTY	DESCRIPTION
202	796657		LINK, Mechanical Governor
209	796484		SPRING, Governor
216A	798944		LINK, Choke
222	796482		BRACKET, Control -(Manual Friction, Remote, & Fixed Speed Control)
227	796487		LEVER, Governor Control
236	691826		LINK, Lockout
265	690798		CLAMP, Casing
267	691044		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
291A	798938		THERMOSTAT
505	793515		NUT -(Governor Control Lever)
562	793514		BOLT -(Governor Lever)
621	692310		SWITCH, Stop
745	793491		SCREW -(Brake)
843	691884		SLEEVE, Lever
883	793497		GASKET, Exhaust
883A	796677		GASKET, Exhaust
922	692135		SPRING, Brake
923	796635		BRAKE

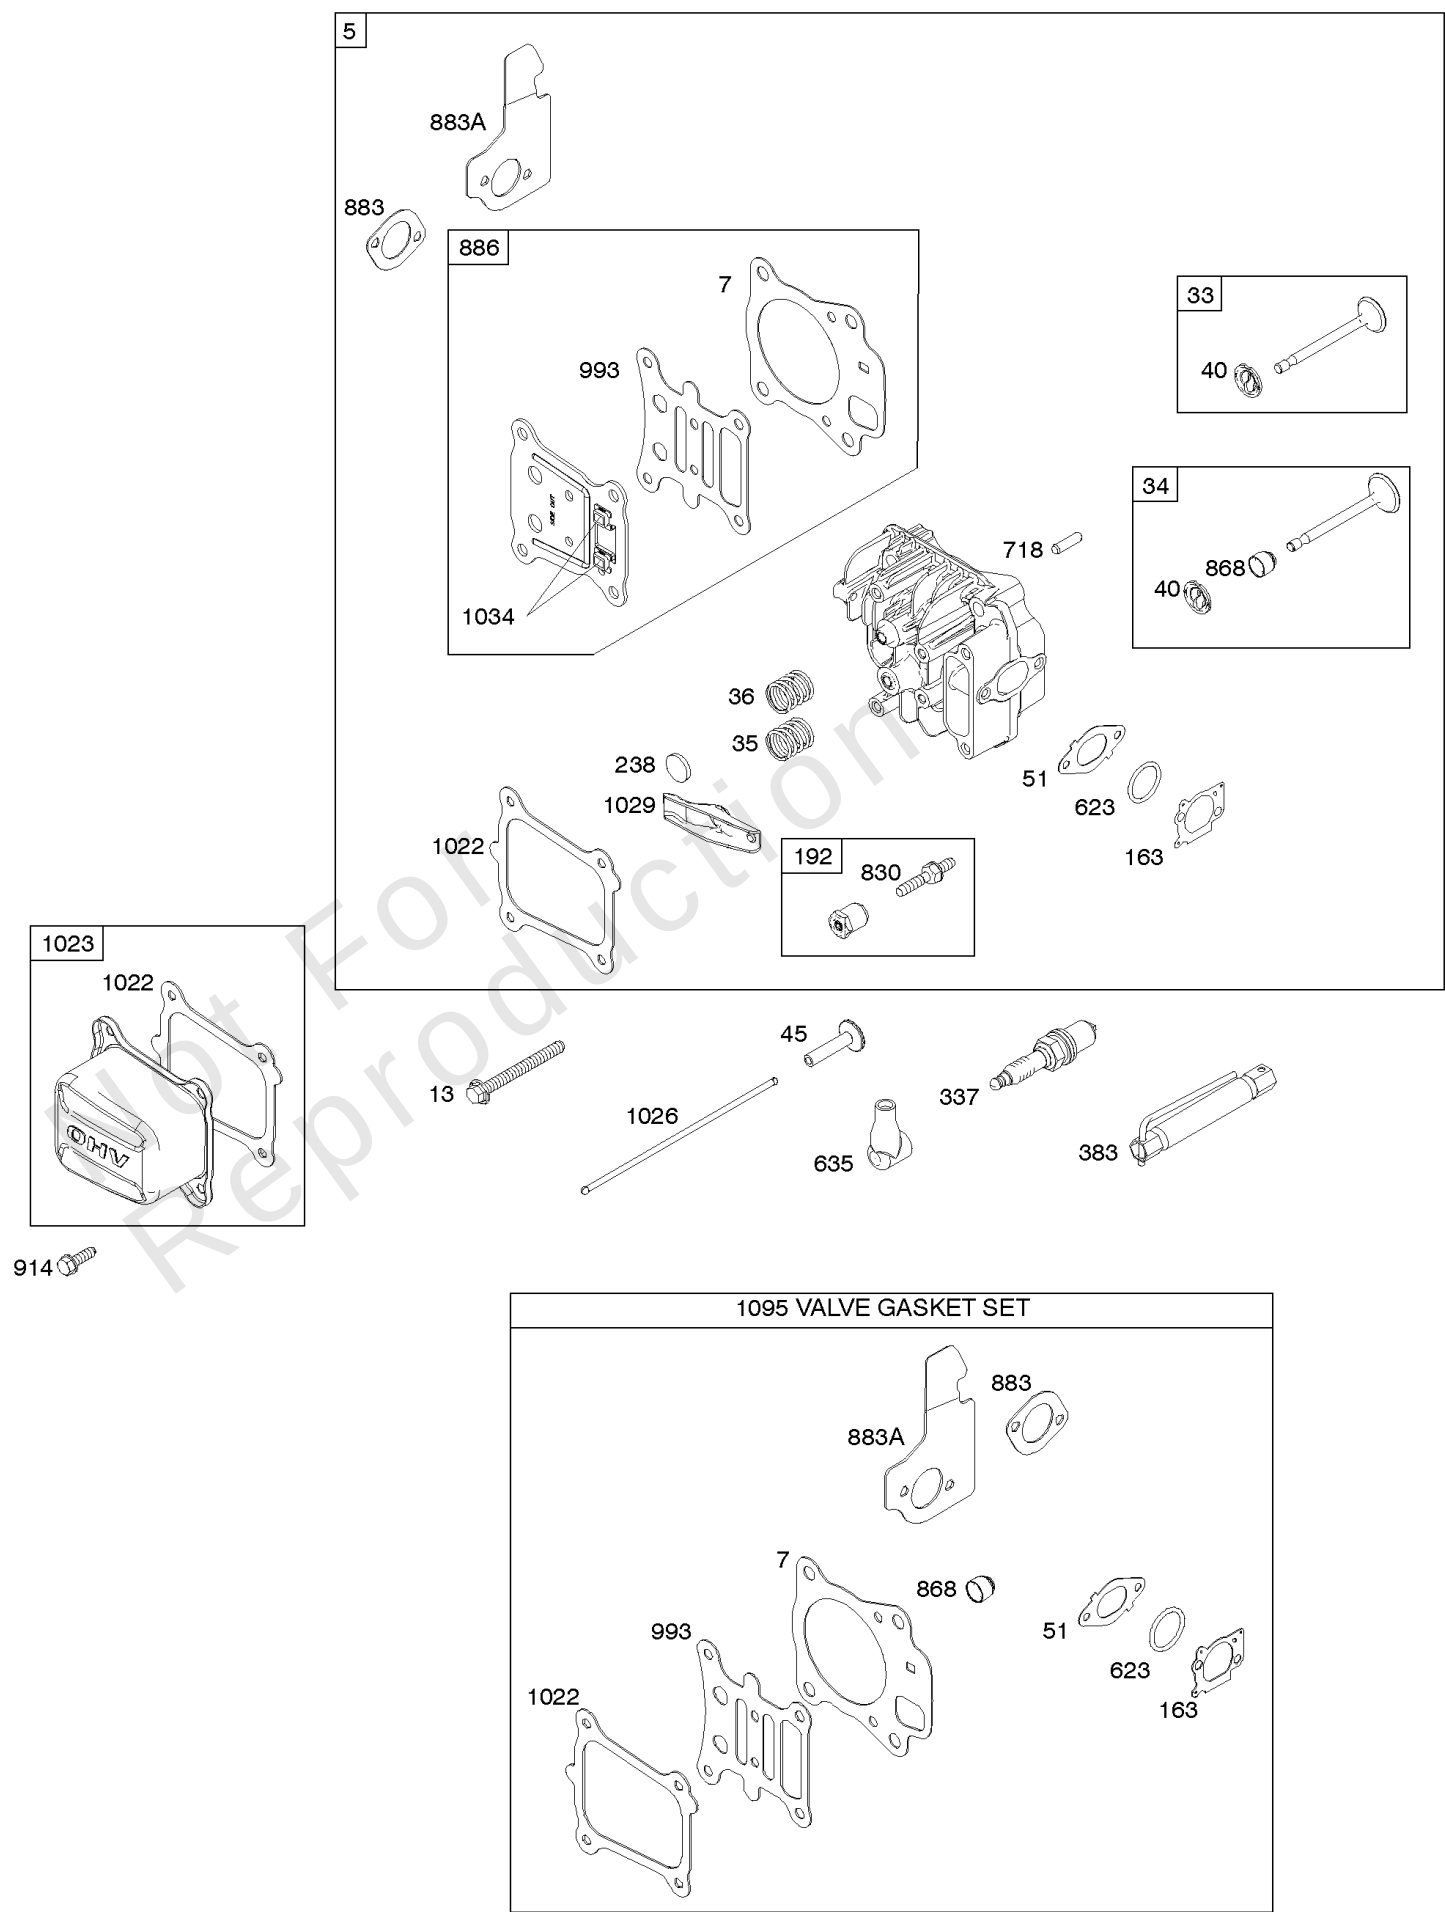


Cylinder Head, Gasket Set-Valves, Valves

REF NO	PART NO	QTY	DESCRIPTION
5	796471		HEAD, Cylinder
7	796475		GASKET, Cylinder Head
13	799277		SCREW -(Cylinder Head)
33	499642		VALVE, Exhaust
34	795443		VALVE, Intake
35	691304		SPRING, Valve -(Intake)
36	691304		SPRING, Valve -(Exhaust)
40	692194		RETAINER, Valve
45	690977		TAPPET, Valve
51	796596		GASKET, Intake
163	691894		GASKET, Air Cleaner -(Air Cleaner)
192	796631		ADJUSTER, Rocker Arm
238	691300		CAP, Valve
337	692051		PLUG, Spark -(Resistor)
337	692720		PLUG, Spark -(EMS)
383	19576S		WRENCH, Spark Plug
623	793628		SEAL, O-Ring -(Carburetor Spacer)
635	66538S		BOOT, Spark PLug
718	690959		PIN, Locating
830	796472		STUD, Rocker Arm -(Rocker Arm)
868	795440		SEAL-VALVE
883	793497		GASKET, Exhaust
883A	796677		GASKET, Exhaust
886	799492		KIT, Cylinder Head/Plate Gasket
914	794451		SCREW -(Rocker Cover)
993	796473		GASKET, Cylinder Head Plate
1022	796480		GASKET, Rocker Cover
1023	796479		COVER, Rocker
1026	796481		ROD, Push
1029	691230		ARM, Rocker
1034	691343		GUIDE, Push Rod
1095	592174		GASKET SET, Valve

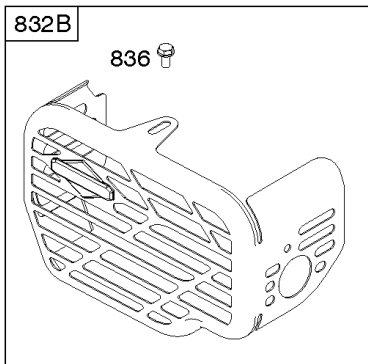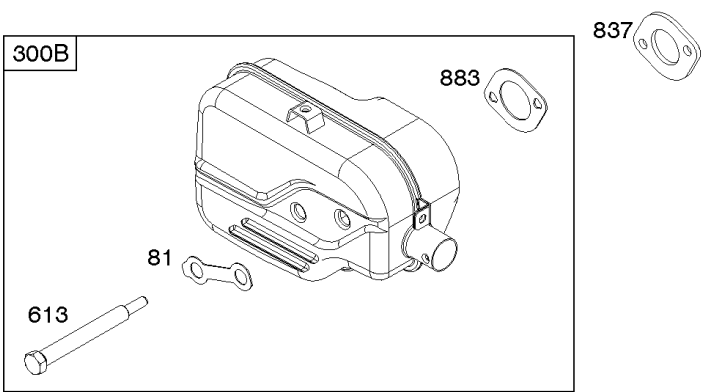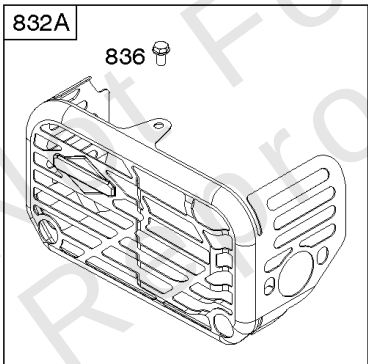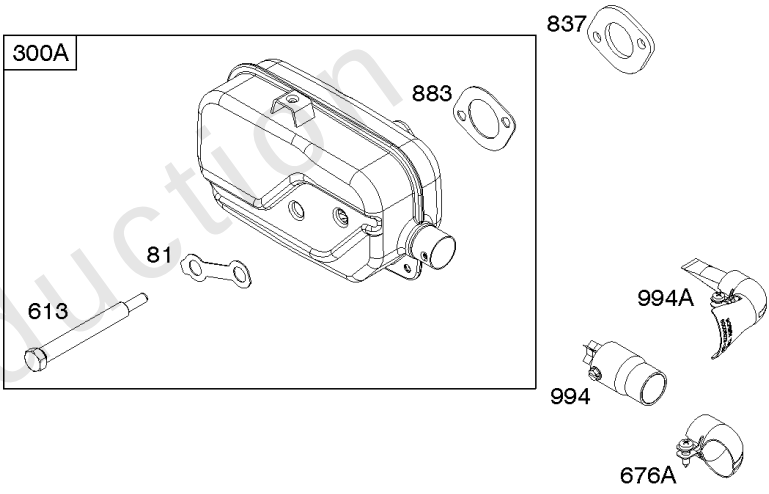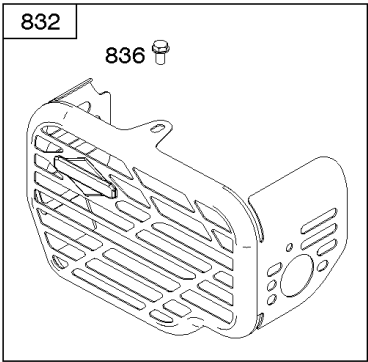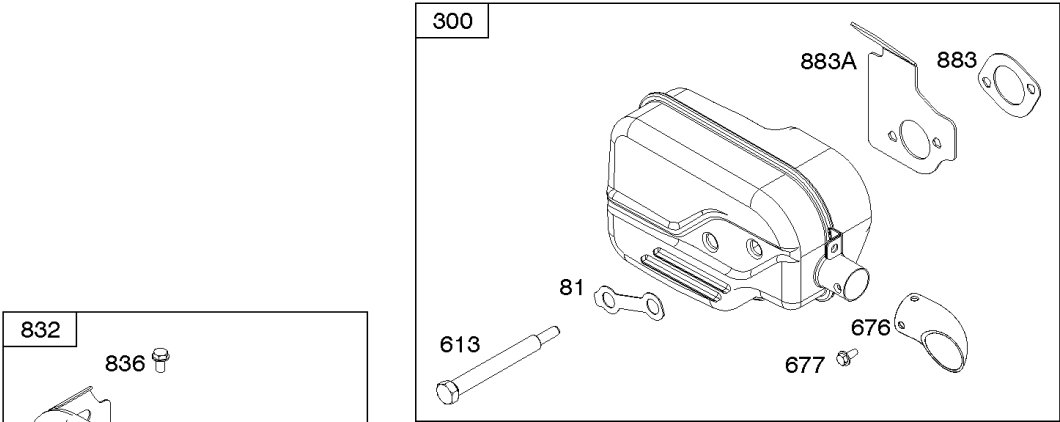








Exhaust System

REF NO	PART NO	QTY	DESCRIPTION
81	691740		LOCK, Muffler Screw
300B	592552		MUFFLER
613	799260		SCREW -(Muffler)
676	692010		DEFLECTOR, Muffler
676A	799187		DEFLECTOR, Muffler
677	690661		SCREW -(Muffler Deflector)
832B	799262		GUARD, Muffler
836	793500		SCREW -(Muffler Guard)
837	799261		SPACER -(Muffler)
883	793497		GASKET, Exhaust
883A	796677		GASKET, Exhaust
994	690813		ARRESTOR, Spark

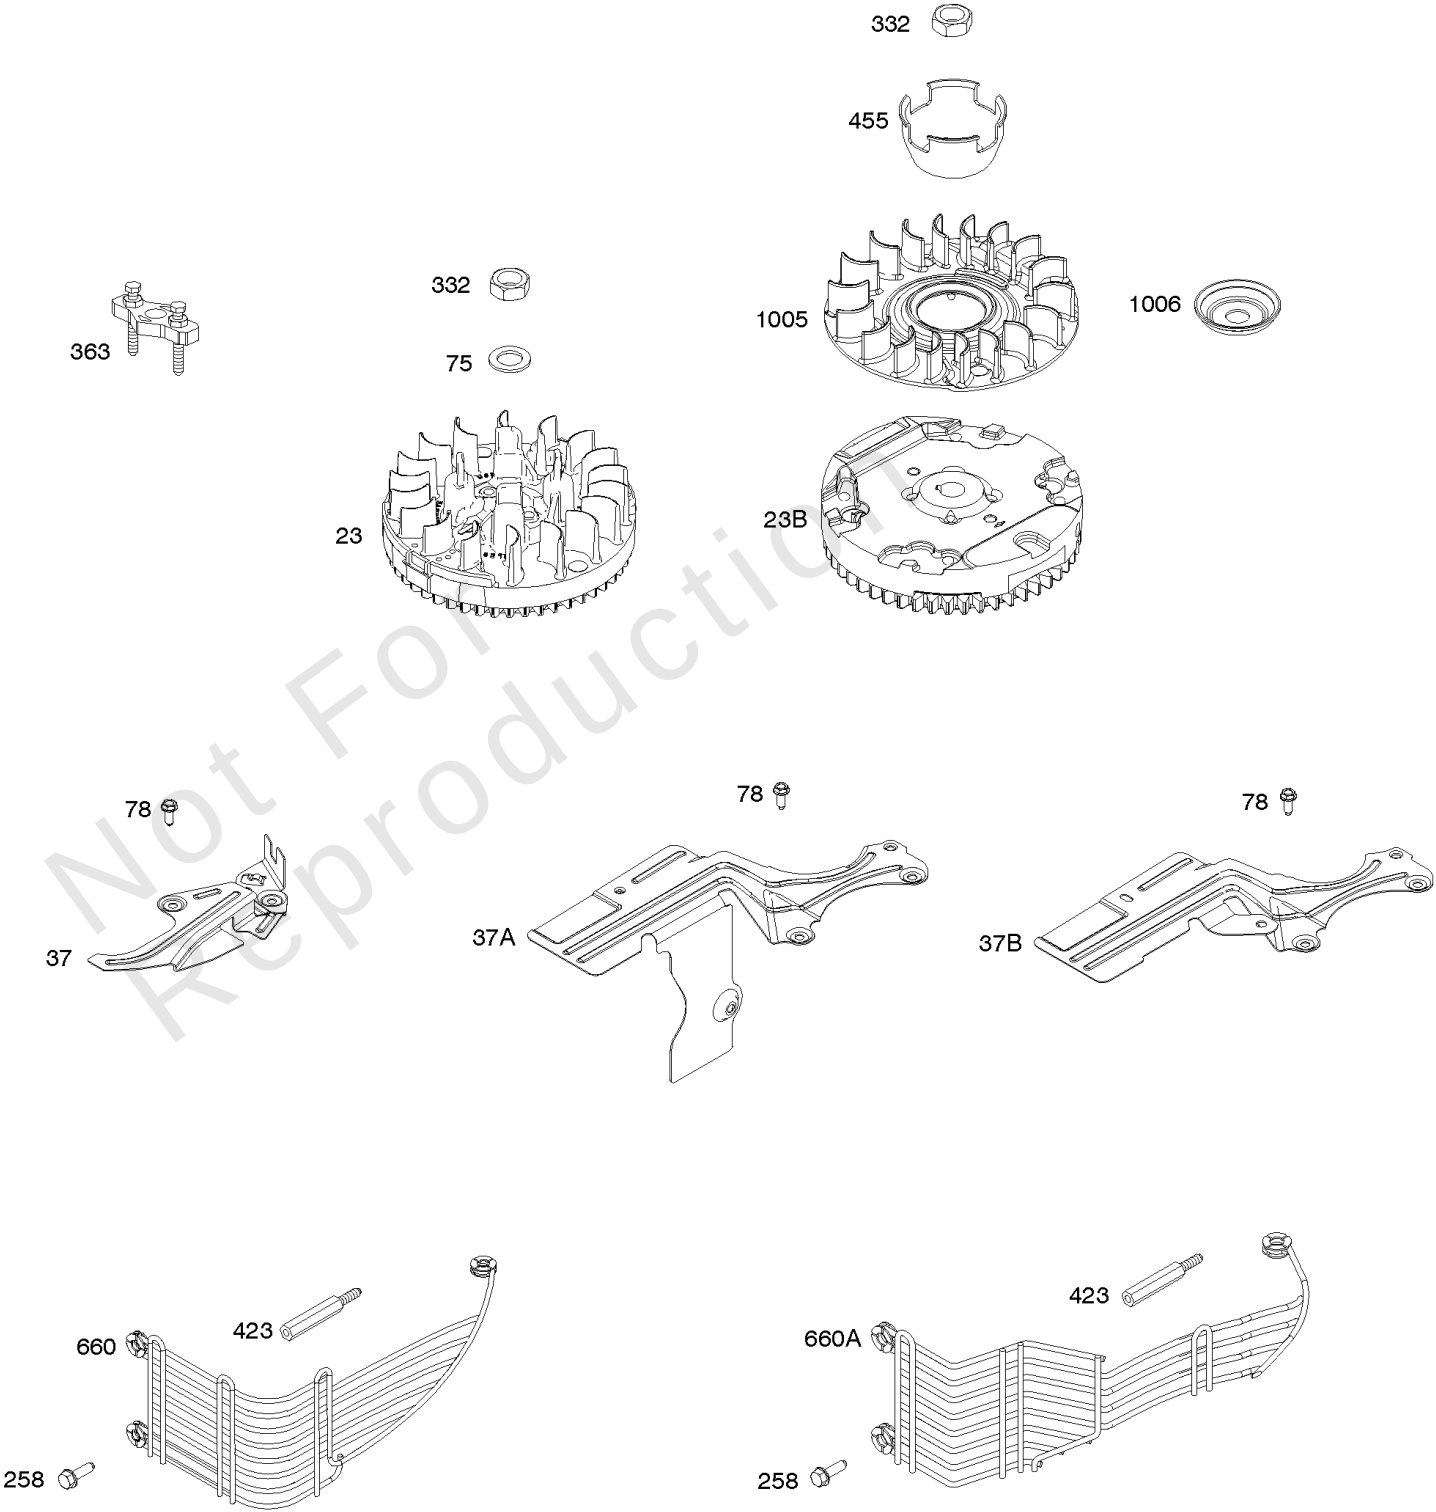


Flywheel/Guards

REF NO	PART NO	QTY	DESCRIPTION
23	797386		FLYWHEEL -(Zinc)
37B	799242		GUARD, Flywheel
75	691736		WASHER -(Flywheel)
78	793480		SCREW -(Flywheel Guard)
258	794451		SCREW -(Control Guard)
332	690662		NUT -(Flywheel)
363	19069		PULLER, Flywheel
423	798322		STUD -(Control Guard)
455	796615		CUP, Flywheel
660	798323		GUARD, Control
660A	593287		GUARD, Control
1005	796614		FAN, Flywheel
1006	799264		RETAINER, Fan

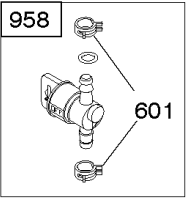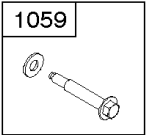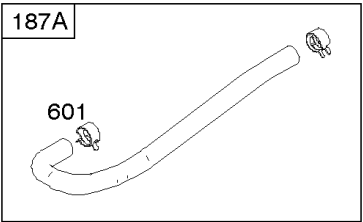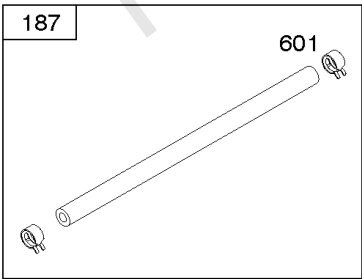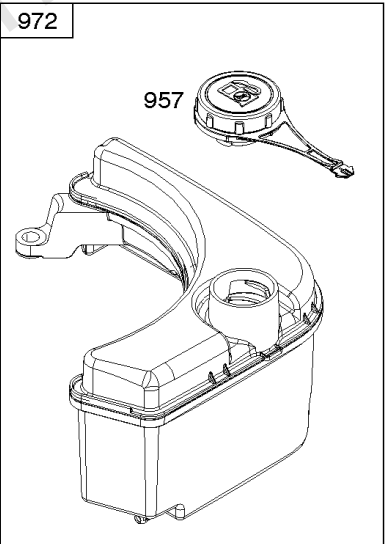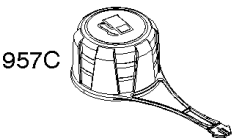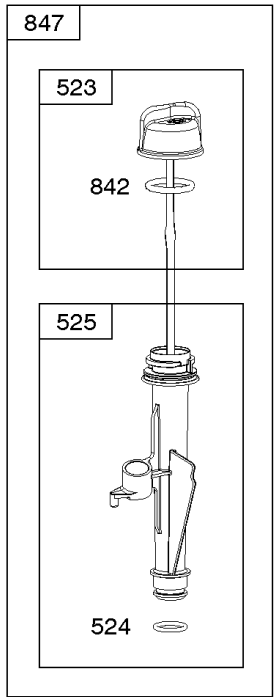

Fuel Supply, Lubrication

REF NO	PART NO	QTY	DESCRIPTION
187	791766		LINE, Fuel -(Cut To Required Length)
187A	796491		LINE, Fuel -(Formed Hose)
240A	84001895		FILTER, Fuel
523	796503		DIPSTICK
524	692296		SEAL-DIPSTICK TUBE -(Dipstick Tube)
525	796502		TUBE, Dipstick
601	791850		CLAMP, Hose
670	793485		SPACER, Fuel Tank
842	691031		SEAL, O-Ring -(Dipstick Tube)
847	796501		DIPSTICK/TUBE ASSEMBLY
957	799585		CAP, Fuel Tank
957C	796577		CAP-FUEL TANK
958	698183		VALVE, Fuel Shut Off
972	595123		TANK, Fuel
1059	793471		KIT, Screw/Washer

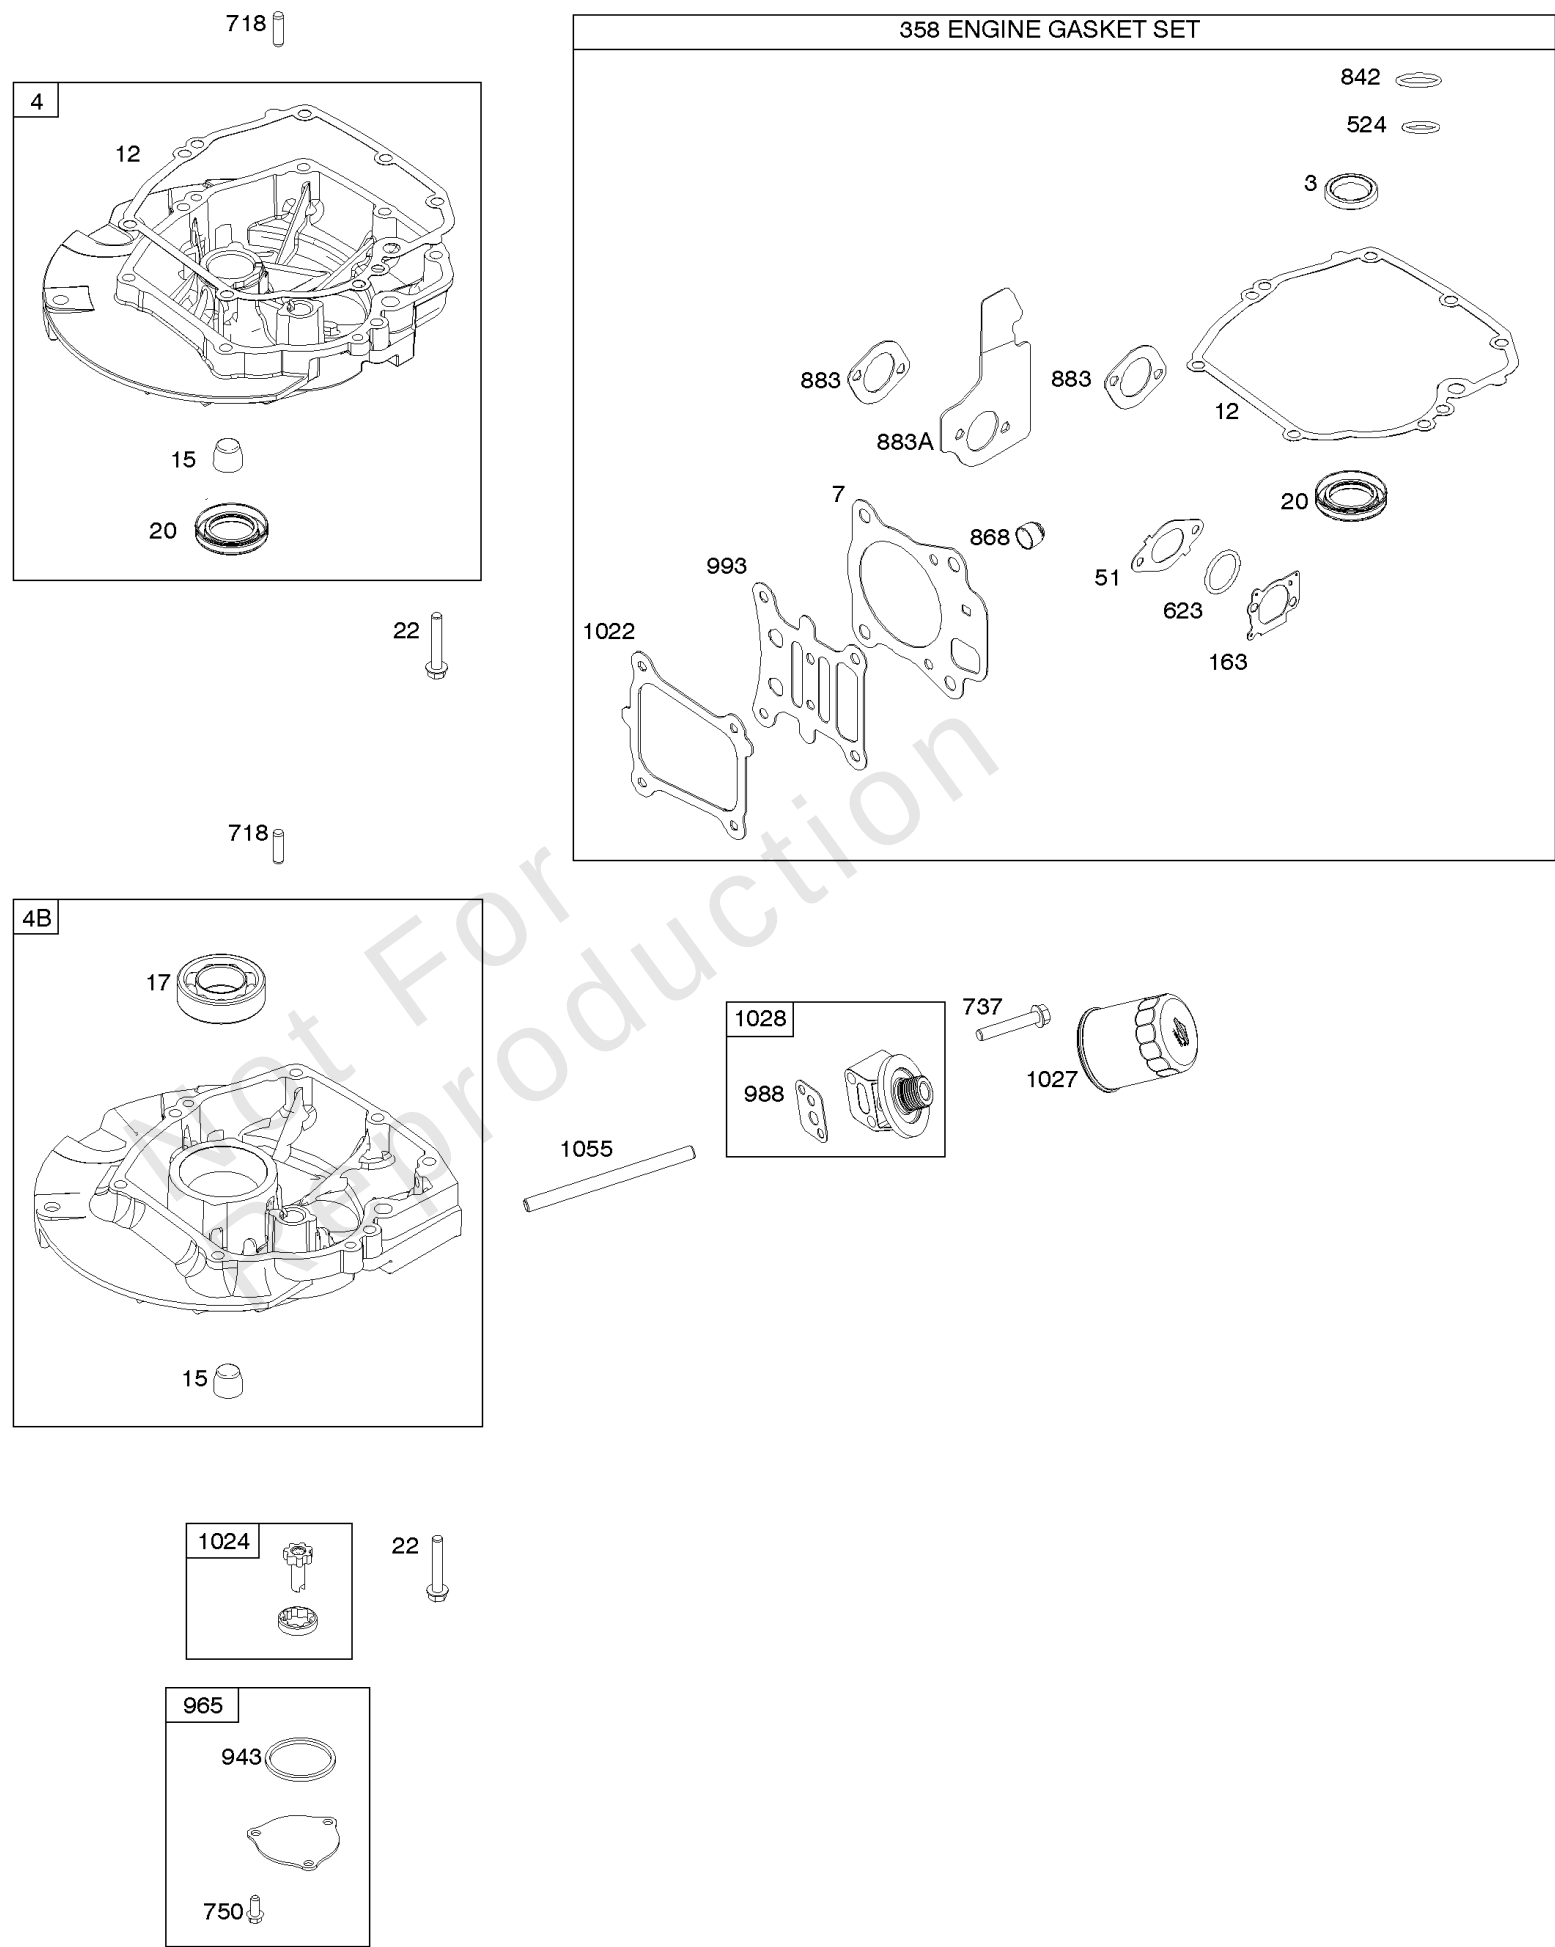

Gasket Set-Engine, Sump

REF NO	PART NO	QTY	DESCRIPTION
3	299819S		SEAL, Oil -(Magneto Side)
4	493279		SUMP, Engine
7	796475		GASKET, Cylinder Head
12	692232		GASKET, Crankcase
15	691680		PLUG, Oil Drain -(Square Socket)
17	798538		BEARING, Ball
20	399781S		SEAL, Oil -(PTO Side)
22	691092		SCREW -(Crankcase Cover/Sump)
51	796596		GASKET, Intake
163	691894		GASKET, Air Cleaner -(Air Cleaner)
358	592173		GASKET SET, Engine
524	692296		SEAL-DIPSTICK TUBE -(Dipstick Tube)
623	793628		SEAL, O-Ring -(Carburetor Spacer)
718	690959		PIN, Locating
737	692511		SCREW -(Oil Filter Adapter)
750	691147		SCREW -(Oil Pump Cover)
842	691031		SEAL, O-Ring -(Dipstick Tube)
868	795440		SEAL-VALVE
883	793497		GASKET, Exhaust
883A	796677		GASKET, Exhaust
943	692514		SEAL, O-Ring -(Oil Pump Cover)
965	692507		COVER, Oil Pump
988	692515		GASKET, Oil Adapter
993	796473		GASKET, Cylinder Head Plate
1022	796480		GASKET, Rocker Cover
1024	692508		PUMP, Oil
1027	795990		FILTER, Oil
1028	796522		ADAPTER, Oil Filter
1055	796524		TUBE, Oil Pump

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	125P070047F1	1	Replacement Engine
	-----		Top No-Load Speed: 3000 -Trim: ALL

Not For Reproduction

