

 


Parts Manual

Mfg. No: 150112-0533-B9


Model Components	Page
Air Cleaner, Exhaust System.	4
Blower Housing, Electric Starter, Flywheel, Rewind Starter.	8
Camshaft, Crankcase Cover, Crankshaft, Cylinder, Lubrication, Piston Group.	12
Carburetor, Fuel Supply.	16
Controls, Governor Spring, Ignition.	20
Cylinder Head.	24
Replacement Engine - US & Canada.	28

Not For
Reproduction

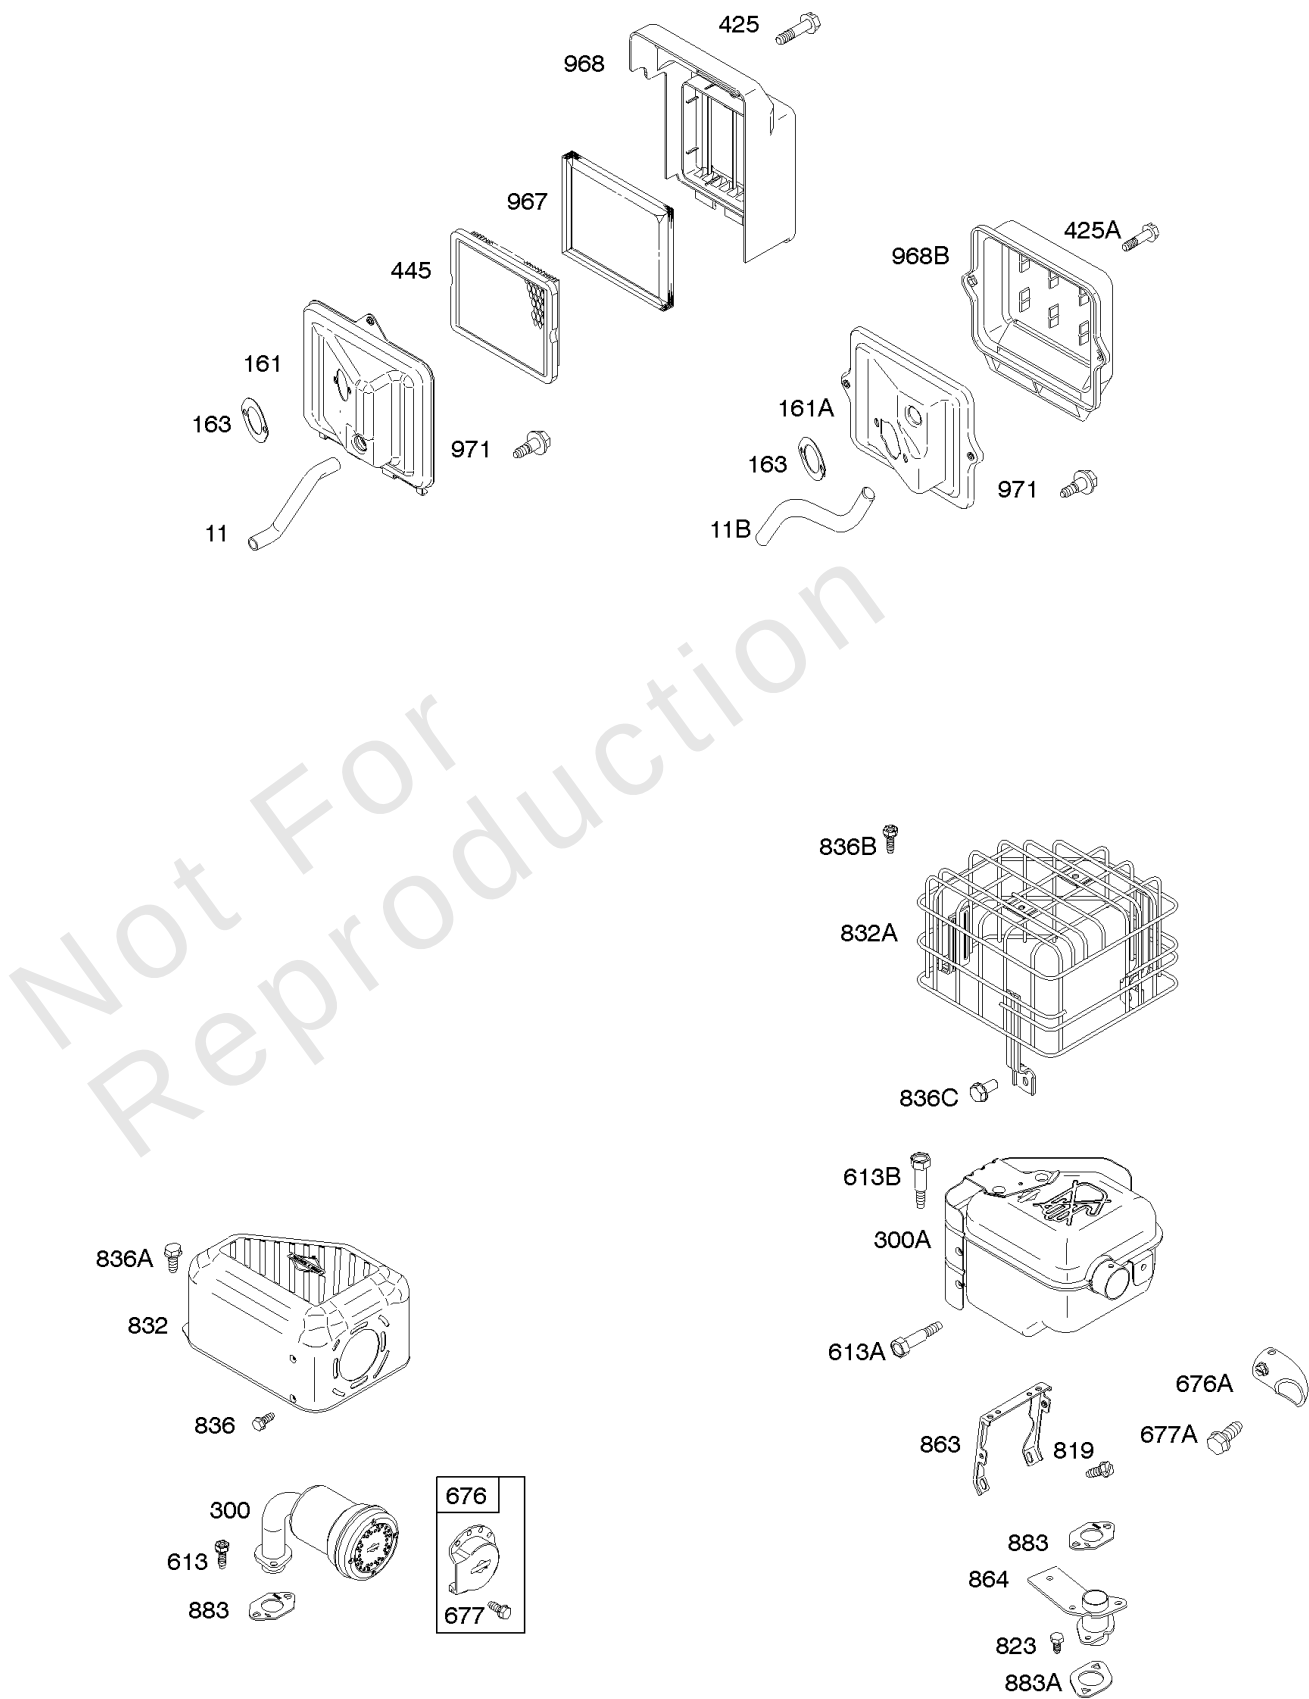

Air Cleaner, Exhaust System





REF NO	PART NO	QTY	DESCRIPTION
11	692600		TUBE, Breather -(Flat Panel Air Cleaner)
11B	790632		TUBE, Breather -(Ultra Low Mount Air Cleaner)
161	699207		BASE-AIR CLEANER -(Metal) (Flat Panel Air Cleaner)
161A	790631		BASE, Air Cleaner -(Metal) (Ultra Low Mount Air Cleaner)
163	696024		GASKET, Air Cleaner -(Flat Panel Air Cleaner)
300	693593		MUFFLER
300A	699231		MUFFLER
425	699208		SCREW -(Air Cleaner Cover)
425A	699492		SCREW -(Air Cleaner Cover)
445	491588S		FILTER, A/C Cartridge
613	699209		SCREW -(Muffler)
613A	699481		SCREW -(Muffler)
613B	697812		SCREW -(Muffler) (SAE)
613B	799081		SCREW -(Muffler) (Metric)
676	393757		DEFLECTOR, Muffler -(Side Outlet)
676A	697816		DEFLECTOR, Muffler
677	690661		SCREW -(Muffler Deflector) (SAE)
677	699203		SCREW -(Muffler Deflector) (Metric)
677A	699776		SCREW -(Muffler Deflector)
819	699233		SCREW -(Muffler Bracket)
823	699209		SCREW -(Muffler Adapter)
832	693583		GUARD, Muffler
832A	697818		GUARD, Muffler
836	699203		SCREW -(Muffler Guard)
836A	699632		SCREW -(Muffler Guard)
836B	699209		SCREW -(Muffler Guard)
836C	699234		SCREW -(Muffler Guard)
863	699229		BRACKET, Muffler
864	699232		ADAPTER, Muffler
883	691893		GASKET-EXHAUST -(Between Adapter And Cylinder)
883A	692237		GASKET-EXHAUST
967	493537S		FILTER, Air Cleaner Foam -(Flat Panel)
968	692584		COVER, Air Cleaner -(Flat Panel Air Cleaner)
968B	791082		COVER, Air Cleaner -(Ultra Low Mount Air Cleaner)

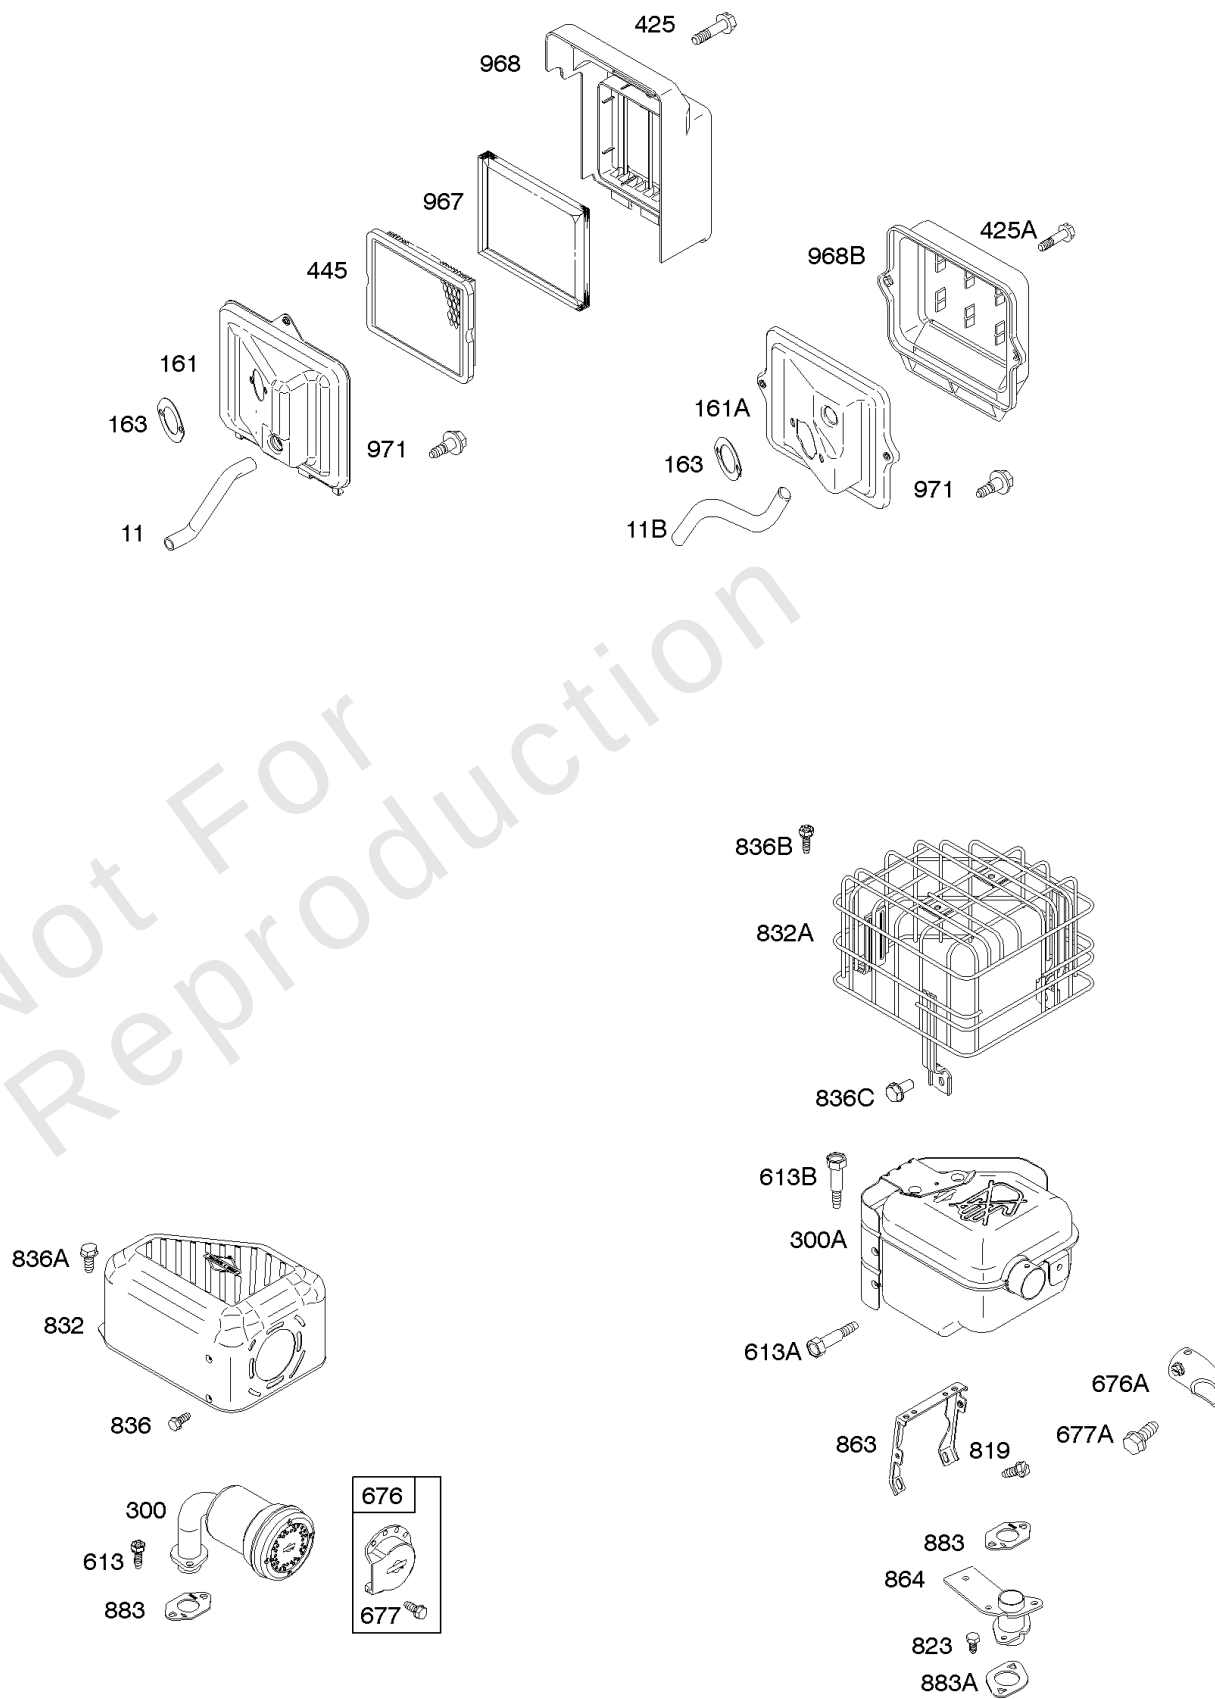 



Air Cleaner, Exhaust System

REF NO	PART NO	QTY	DESCRIPTION
971	690370		SCREW -(Air Cleaner Base to Carburetor) (SAE)
971	798649		SCREW -(Air Cleaner Base to Carburetor) (Metric)

    Not For Reproduction

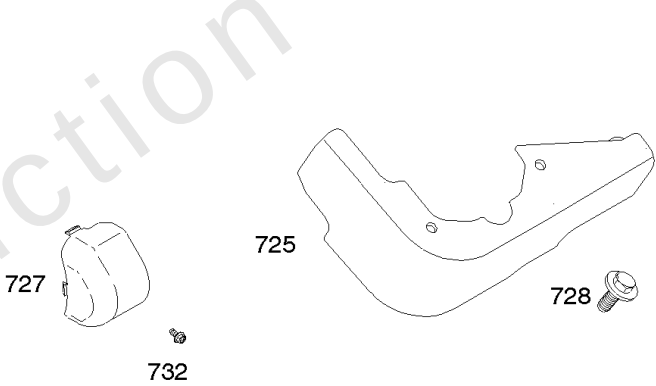
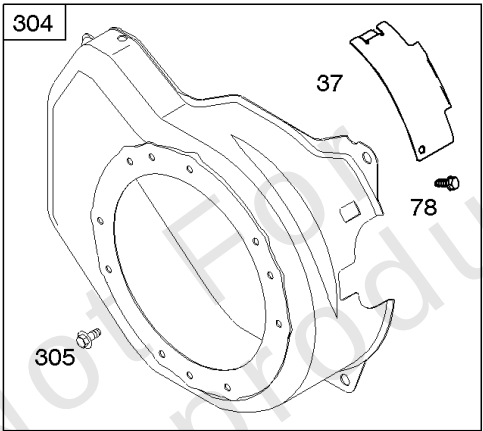
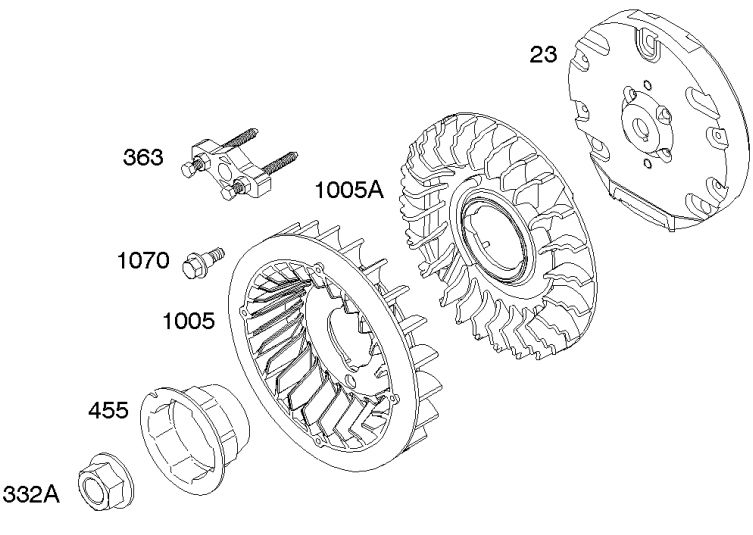
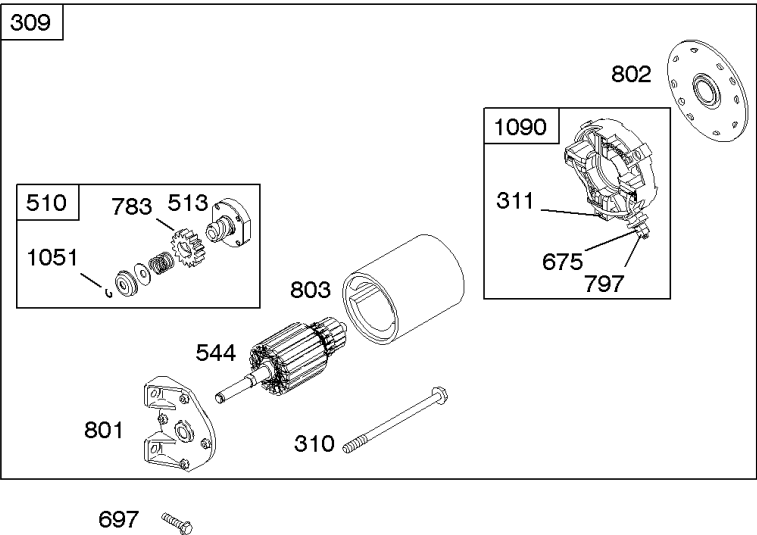


1036 EMISSIONS LABEL

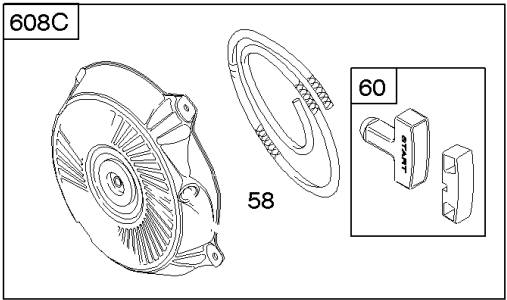 
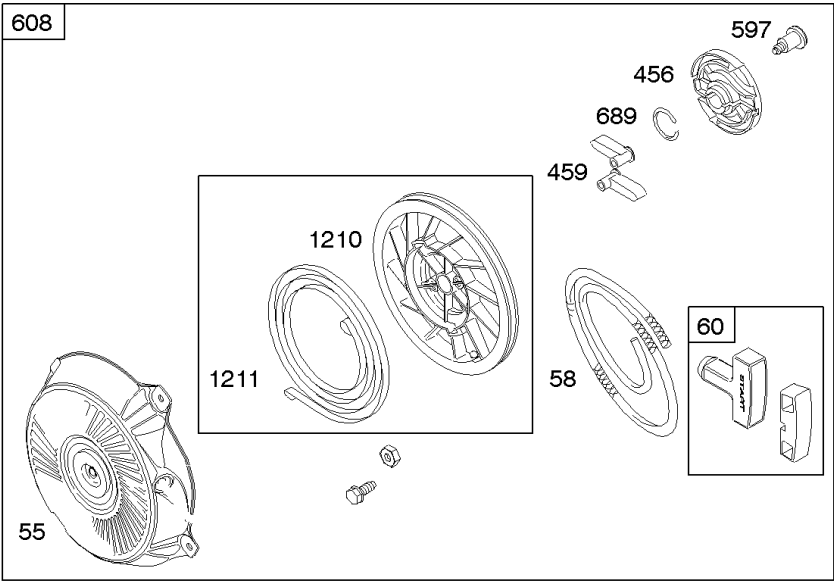 


Blower Housing, Electric Starter, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
23	699488		FLYWHEEL
37	699661		GUARD, Flywheel
55	691422		HOUSING, Rewind Starter -(Rewind Starter Parts Used With 3MM Diameter Starter Rope) -Used Before Code Date 08030300
55	791848		HOUSING, Rewind Starter -Used After Code Date 08030200
55	791848		HOUSING, Rewind Starter -(Rewind Starter Parts Used With 5MM Diameter Starter Rope) -Used Before Code Date 08030300
58	693389		ROPE, Starter -(Cut To Required Length) -Used After Code Date 08030200
58	66574		ROPE, Starter -(Rewind Starter Parts Used With 5MM Diameter Starter Rope) -Used Before Code Date 08030300
58	693389		ROPE, Starter -(Cut To Required Length) (Rewind Starter Parts Used With 3MM Diameter Starter Rope) -Used Before Code Date 08030300
60	490652		GRIP-STARTER ROPE -(2 Piece)
78	699205		SCREW -(Flywheel Guard)
304	699598		HOUSING, Blower
305	699481		SCREW -(Blower Housing)
309	694504		MOTOR, Starter
310	690323		SCREW -(Starter Motor)
311	497608		SET, Brush
332A	792723		NUT -(Flywheel)
363	19203		PULLER, Flywheel
455	692591		CUP, Flywheel -Used Before Code Date 12010100
455	591302		CUP, Flywheel -Used After Code Date 11123100
456	692299		PLATE-PAWL FRICTION
459	281505S		PAWL-RATCHET
510	499308		DRIVE-STARTER
513	692024		CLUTCH, Drive
544	692966		ARMATURE, Starter
597	691696		SCREW -(Pawl Friction Plate)
608	693394		STARTER, Rewind -(Rewind Starter Parts Used With 3MM Diameter Starter Rope) -Used Before Code Date 08030300
608	791670		STARTER, Rewind -(Rewind Starter Parts Used With 5MM Diameter Starter Rope) -Used Before Code Date 08030300
608	795930		STARTER, Rewind -Used After Code Date 08030200 -Used Before Code Date 12010100
608C	591301		STARTER, Rewind -Used After Code Date 11123100
675	691261		WASHER -(Brush Retainer)
689	691855		SPRING-FRICTION -(Rewind Starter)

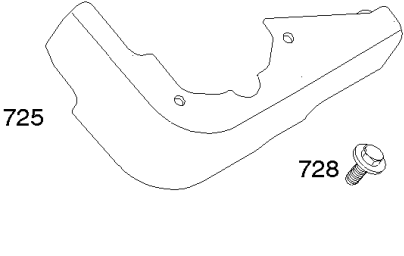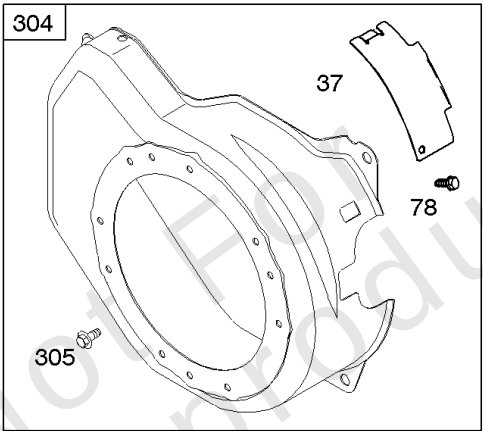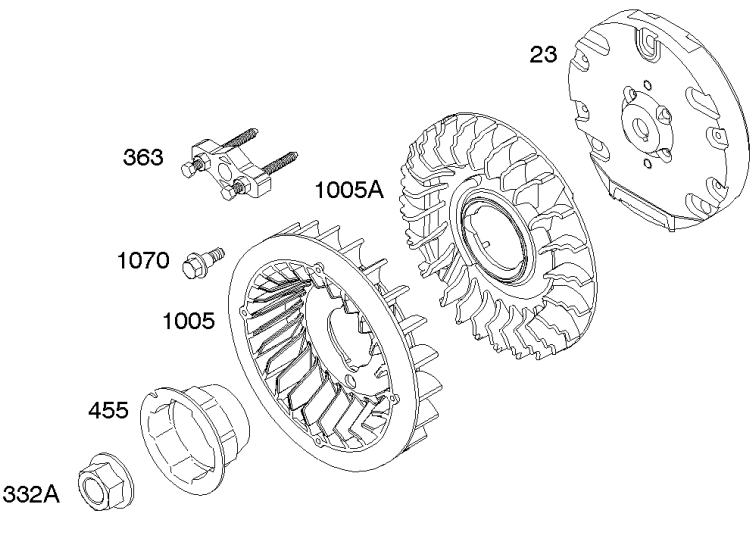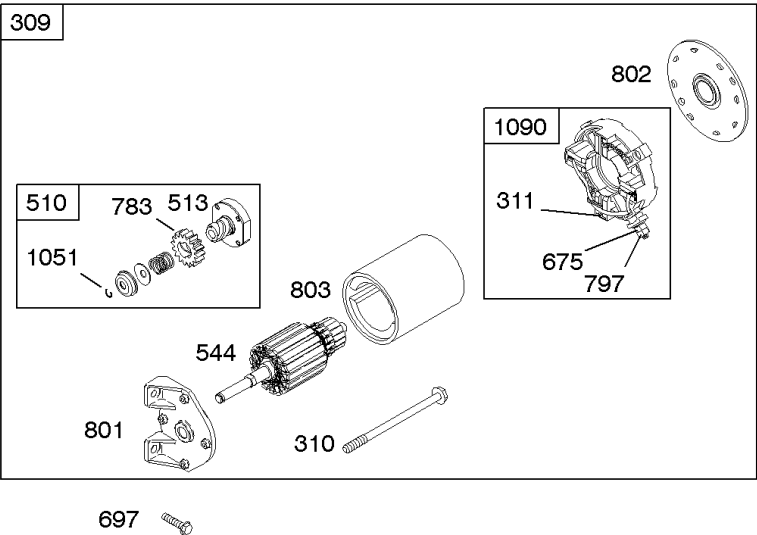    

1036 EMISSIONS LABEL

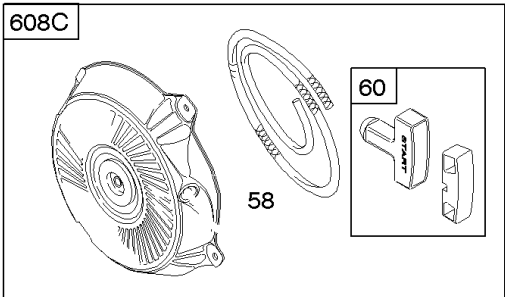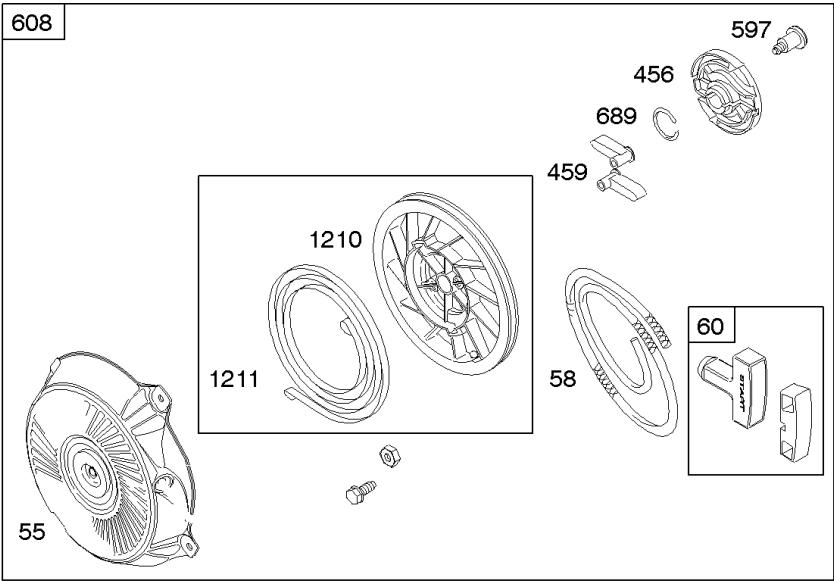  

Blower Housing, Electric Starter, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
697	790537		SCREW -(Drive Cap)
725	792874		SHIELD, Heat
727	698039		COVER-STARTER DRIVE
728	699632		SCREW -(Heat Shield)
732	699200		SCREW -(Starter Drive Cover)
783	692353		GEAR-PINION
797	691029		NUT -(Brush Retainer)
801	694482		CAP-DRIVE
802	691286		CAP, End
803	693757		HOUSING, Starter -(3 5/8 Housing)
1005	692592		FAN, Flywheel
1005A	794273		FAN, Flywheel
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1051	691265		RING, Retaining
1070	699201		SCREW -(Flywheel Fan)
1090	691293		RETAINER, Brush
1210	498144		PULLEY/SPRING ASSY -(Pulley) (Rewind Starter Parts Used With 3MM Diameter Starter Rope) -Used Before Code Date 08030300
1210	791849		PULLEY/SPRING ASSEMBLY -(Pulley) (Rewind Starter Parts Used With 5MM Diameter Starter Rope) -Used Before Code Date 08030300
1210	791849		PULLEY/SPRING ASSEMBLY -(Pulley) -Used After Code Date 08030200
1211	791849		PULLEY/SPRING ASSEMBLY -(Spring) -Used After Code Date 08030200
1211	498144		PULLEY/SPRING ASSY -(Spring) (Rewind Starter Parts Used With 3MM Diameter Starter Rope) -Used Before Code Date 08030300
1211	791849		PULLEY/SPRING ASSEMBLY -(Spring) (Rewind Starter Parts Used With 5MM Diameter Starter Rope) -Used Before Code Date 08030300

1319 WARNING LABEL

WARNING

Do not start the engine until the oil level is checked and the oil is topped up. Do not start the engine until the oil level is checked and the oil is topped up.

Do not start the engine until the oil level is checked and the oil is topped up. Do not start the engine until the oil level is checked and the oil is topped up.

Do not start the engine until the oil level is checked and the oil is topped up. Do not start the engine until the oil level is checked and the oil is topped up.

Do not start the engine until the oil level is checked and the oil is topped up. Do not start the engine until the oil level is checked and the oil is topped up.

REQUIRED when replacing parts with warning labels affixed.

1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL

1019 LABEL KIT












Copyright © Briggs & Stratton. All Rights reserved

12

22-Jun-2026













Camshaft, Crankcase Cover, Crankshaft, Cylinder, Lubrication, Piston Group

REF NO	PART NO	QTY	DESCRIPTION
1	794188		CYLINDER ASSEMBLY
2	399269		KIT, Bushing/Seal -(Magneto Side)
3	299819S		SEAL, Oil -(Magneto Side)
7B	791716		GASKET, Cylinder Head
12	699485		GASKET, Crankcase
15	691686		PLUG-OIL DRAIN -(Square Head)(1/4" Diameter)
15A	691682		PLUG-OIL DRAIN -(Hex Socket)(1/4 Diameter)
16	792978		CRANKSHAFT
17	692517		BEARING, Ball
18	699804		COVER, Crankcase
18A	699672		COVER, Crankcase
18C	699677		COVER, Crankcase
20	692550		SEAL-OIL -(PTO Side)
20A	691952		SEAL, Oil -(PTO Side)
21	281658S		CAP, Oil Fill
22	699478		SCREW -(Crankcase Cover/Sump)
24	796335		KEY, Flywheel
25	791791		PISTON ASSEMBLY -(.020 Oversize)
25	791786		PISTON ASSEMBLY -(Standard)
26	791787		SET, Ring -(Standard)
26	791792		SET, Ring -(.020 Oversize)
27	690975		LOCK, Piston Pin
28	690229		PIN, Piston -(Standard)
29B	791783		ROD, Connecting
32	791784		SCREW -(Connecting Rod)
46	693404		CAMSHAFT
46A	695285		CAMSHAFT
51	791718		GASKET, Intake
146	690979		KEY, Woodruff
163	696024		GASKET, Air Cleaner -(Flat Panel Air Cleaner)
219	693578		GEAR, Governor
220	691724		WASHER -(Governor Gear)
286	794185		MODULE, Oil Sensor
287	699629		SCREW -(Dipstick Tube)
306	693610		SHIELD, Cylinder
307	699234		SCREW -(Cylinder Shield)
332A	792723		NUT -(Flywheel)
358B	791797		GASKET SET, Engine

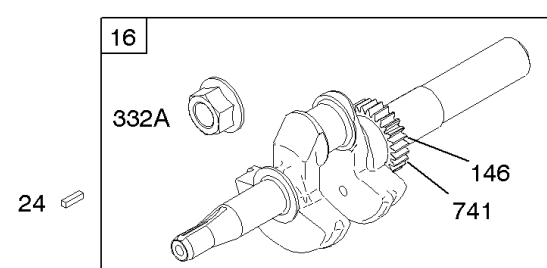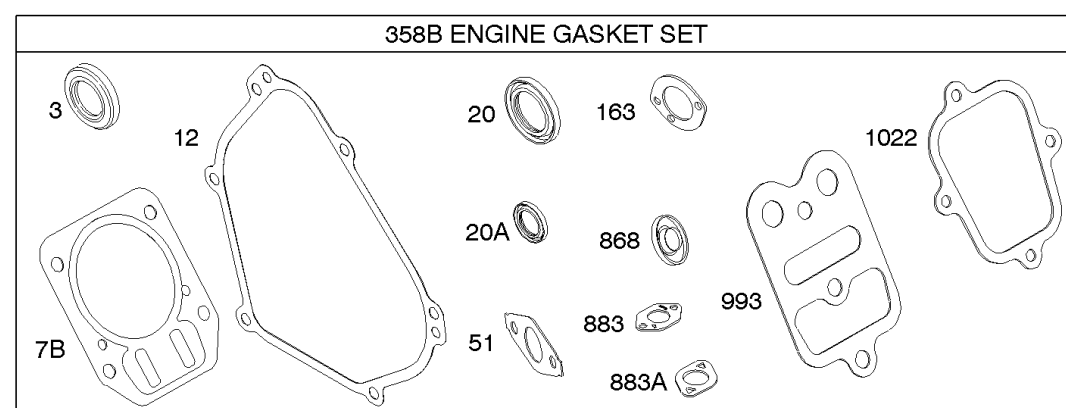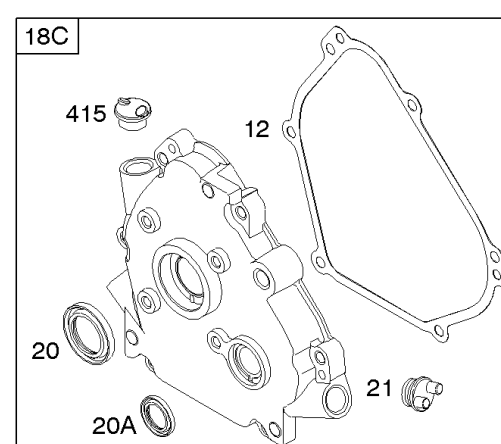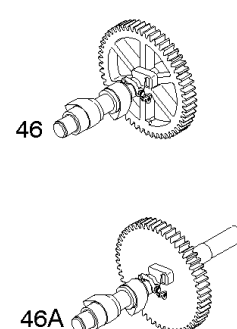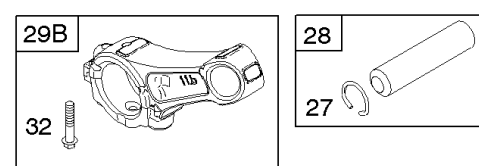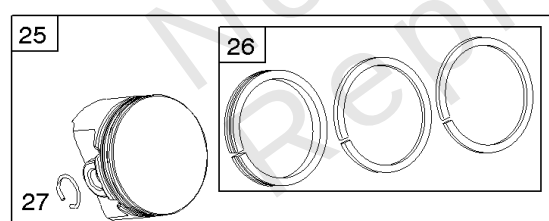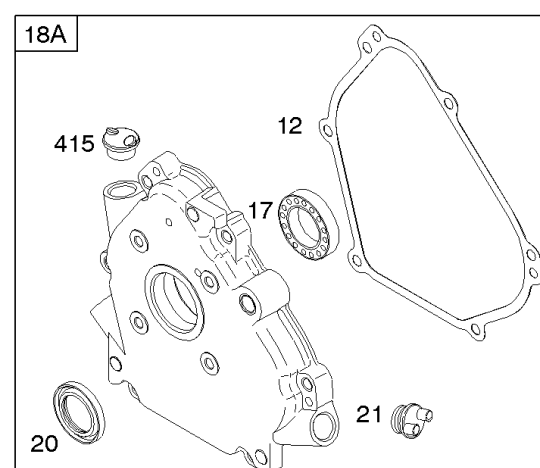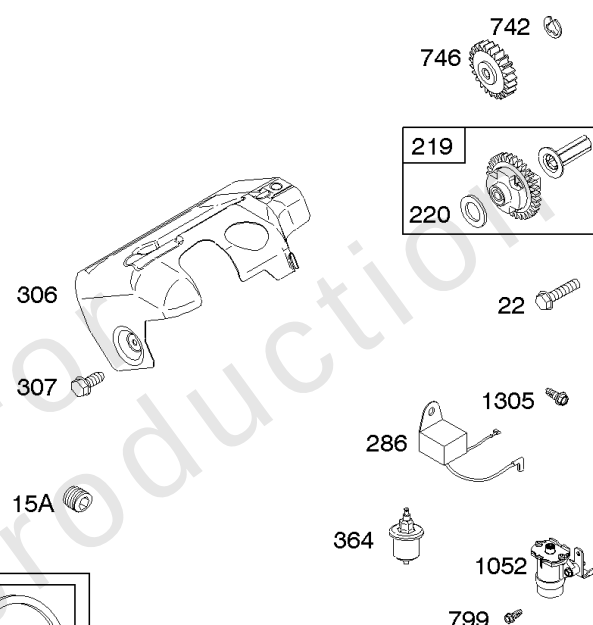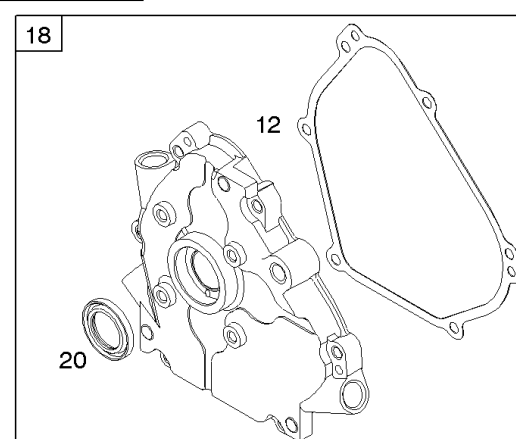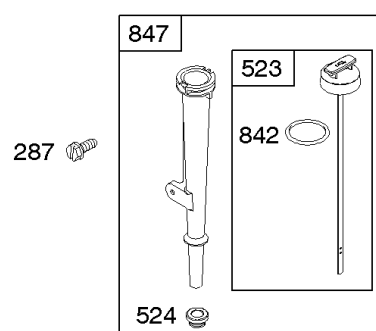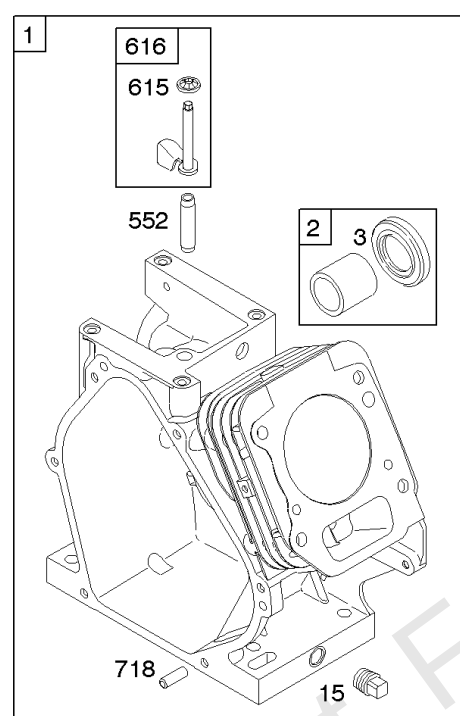           













Camshaft, Crankcase Cover, Crankshaft, Cylinder, Lubrication, Piston Group

REF NO	PART NO	QTY	DESCRIPTION
364	695693		TERMINAL, Oil Plug
415	693463		PLUG -(Crankcase Cover/Sump)
523	693618		DIPSTICK
524	281370S		SEAL, Dipstick Tube -(Dipstick Tube)
552	692346		BUSHING, Governor Crank
615	692576		RETAINER, Governor Shaft
616	692547		CRANK, Governor
718	690959		PIN, Locating
741	695087		GEAR, Timing
742	692564		RETAINER, E Ring -(Idler Gear)
746	790278		GEAR-IDLER
799	699202		SCREW -(Oil Sensor)
842	691031		SEAL, O-Ring -(Dipstick Tube)
847	693617		DIPSTICK/TUBE ASSEMBLY
868	692044		SEAL, Valve
883	691893		GASKET-EXHAUST -(Between Adapter And Cylinder)
883A	692237		GASKET-EXHAUST
993	694088		GASKET, Cylinder Head Plate
1019	791811		KIT, Label
1022	691890		GASKET-ROCKER COVER
1052	790141		SENSOR, Oil
1058	277040		MANUAL, Operator's
1305	699691		SCREW -(Oil Sensor Module)
1319	794467		LABEL, Warning
1330	272147		MANUAL, Repair

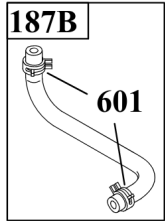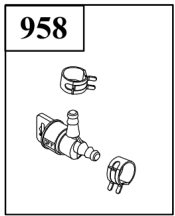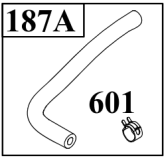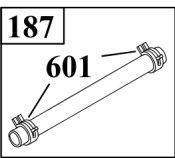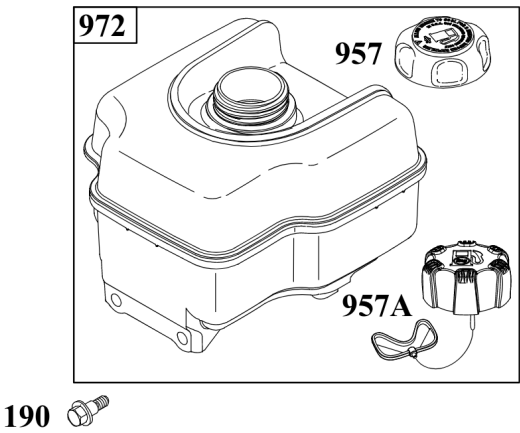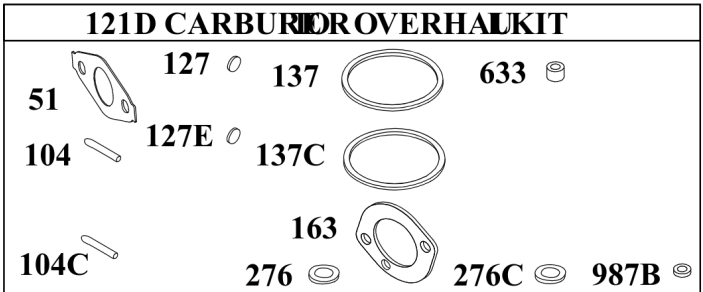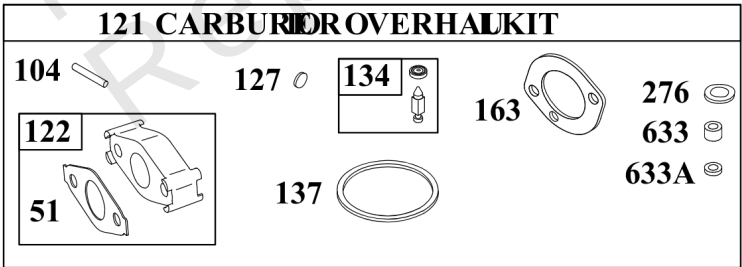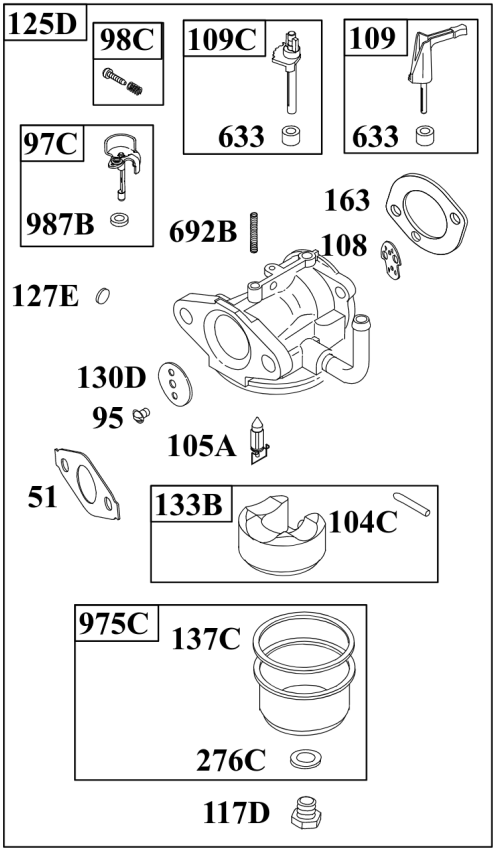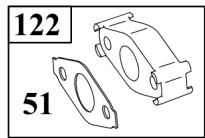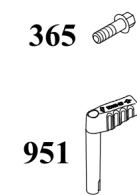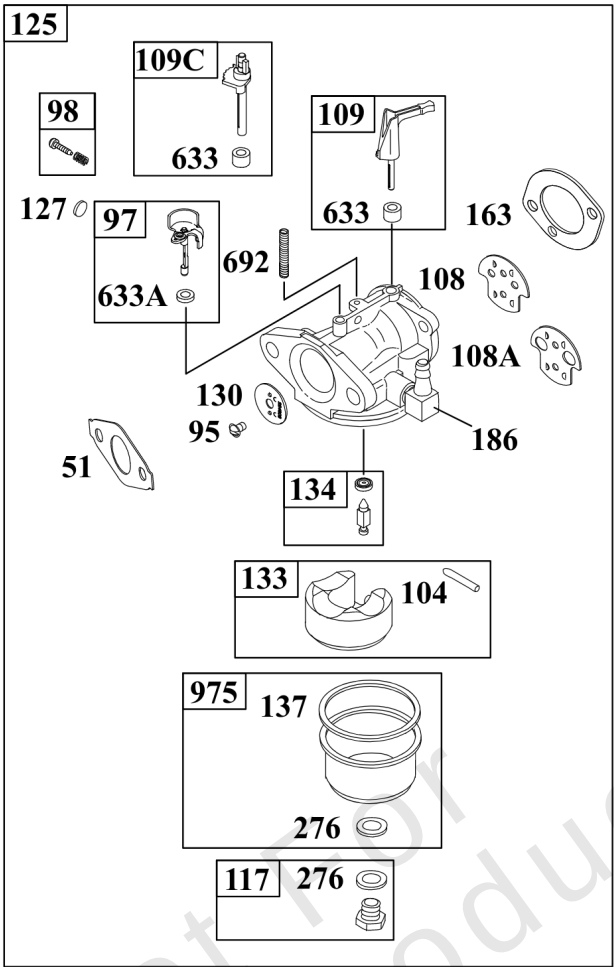            













Carburetor, Fuel Supply

REF NO	PART NO	QTY	DESCRIPTION
51	791718		GASKET, Intake
95	691636		SCREW -(Throttle Valve)
97	690024		SHAFT, Throttle
97C	797628		SHAFT, Throttle
98	398185		KIT-IDLE SPEED -(Carburetor)
98C	797156		KIT, Idle Speed
104	691242		PIN, Float Hinge
104C	797622		PIN, Float Hinge
105A	797139		VALVE, Float Needle
108	692567		VALVE-CHOKE
108A	695807		VALVE, Choke
109	690023		SHAFT, Choke
109C	790624		SHAFT, Choke
117	690048		JET, Main -(Standard)
117D	798652		JET, Main -(Standard)
118	497315		JET, Main -(High Altitude)
118D	798651		JET, Main -(High Altitude)
121	792006		KIT, Carburetor Overhaul
121D	797634		KIT, Carburetor Overhaul
122	791717		SPACER, Carburetor
125	792970		CARBURETOR -Used Before Code Date 10032500
125D	798654		CARBURETOR -Used After Code Date 10032400
127	691739		PLUG-WELCH
127E	797633		PLUG, Welch
130	691181		VALVE-THROTTLE
130D	797630		VALVE, Throttle
133	398187		FLOAT-CARBURETOR
133B	797136		FLOAT, Carburetor
134	398188		KIT-NEEDLE/SEAT
137	693981		GASKET-FLOAT BOWL
137C	797625		GASKET, Float Bowl
163	696024		GASKET, Air Cleaner -(Flat Panel Air Cleaner)
186	692317		CONNECTOR-HOSE
187	791766		LINE, Fuel -(Cut To Required Length)
187A	791867		LINE, Fuel -(Molded)
187B	791874		LINE, Fuel -(Molded)
190	699220		SCREW -(Fuel Tank)
276	271716		WASHER-SEALING
276C	797632		WASHER, Sealing
365	699484		SCREW -(Carburetor)
601	791850		CLAMP, Hose

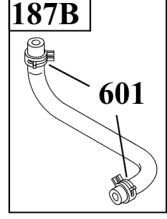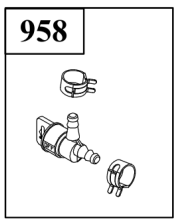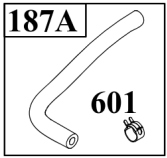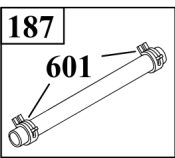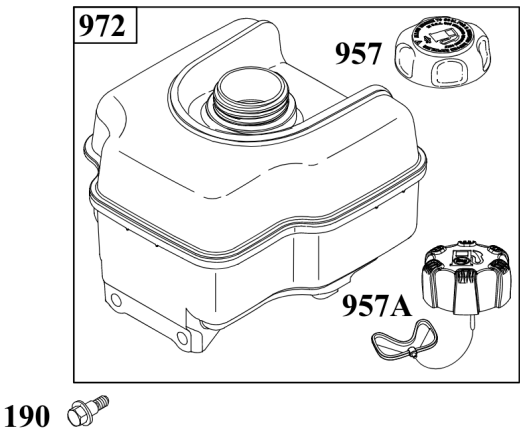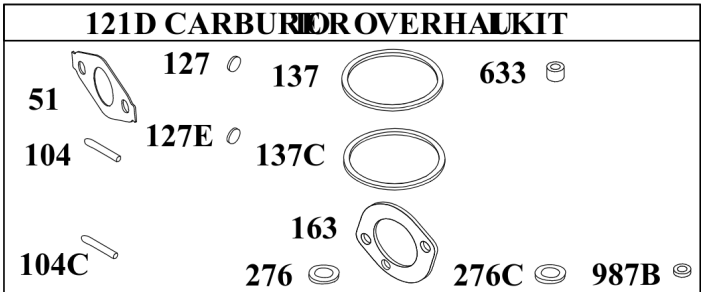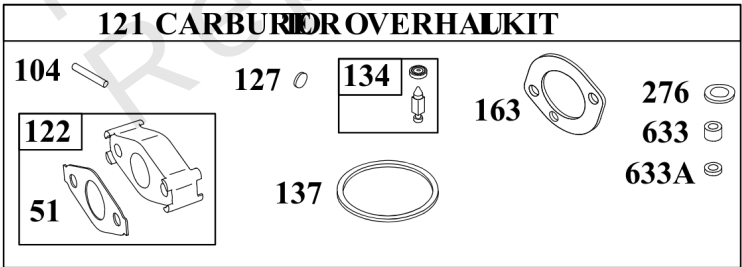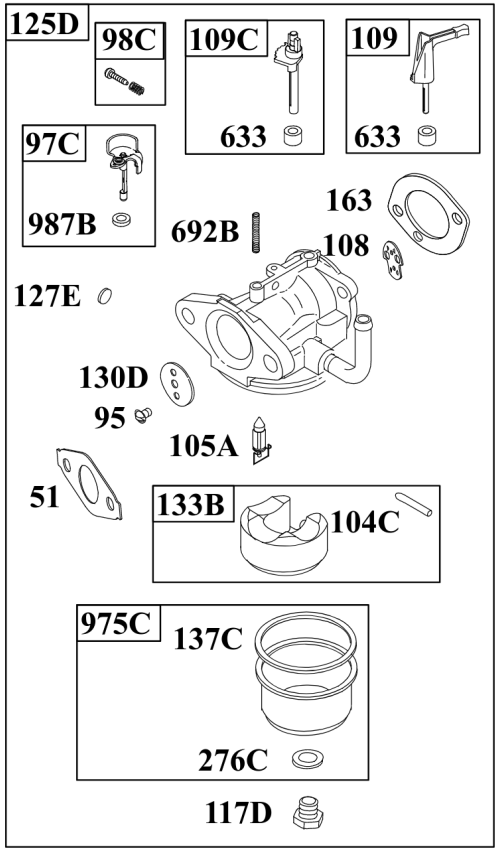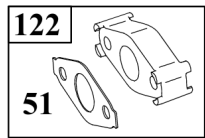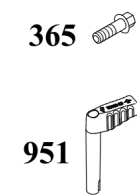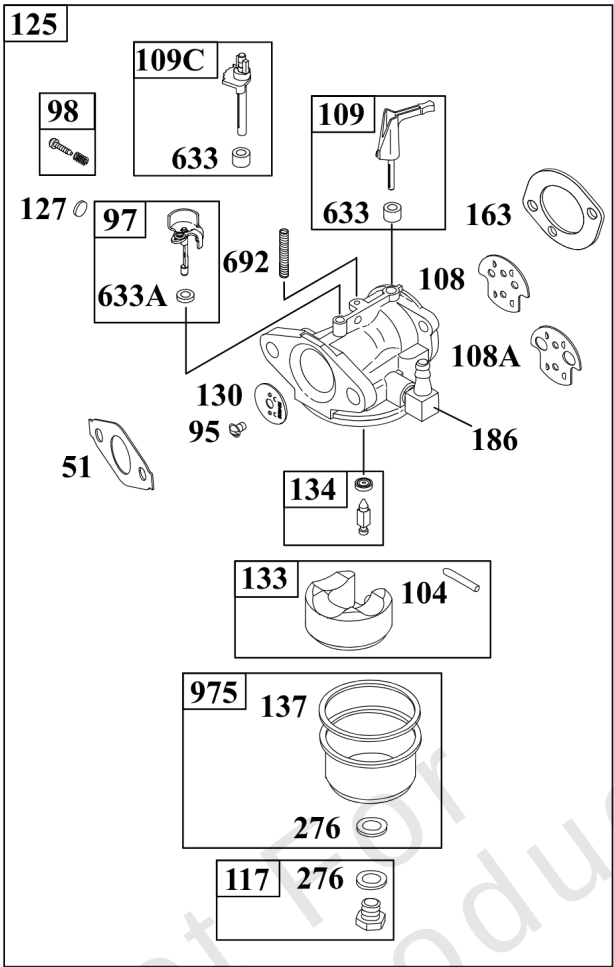            














Carburetor, Fuel Supply

REF NO	PART NO	QTY	DESCRIPTION
633	693867		SEAL, Choke/Throttle Shaft
633A	691321		SEAL, Choke/Throttle Shaft -(Throttle Shaft)
692	690572		SPRING, Detent -(Carburetor)
692B	797624		SPRING, Detent
951	790630		LEVER, Choke
957	795027		CAP, Fuel Tank -(Plastic) (Text Free)
957	792647		CAP, Fuel Tank -(Plastic) (Fresh Start)
957A	799719		CAP, Fuel Tank -(Plastic) (Carbon In Cap)
958	698180		VALVE, Fuel Shutoff -(Plastic)
972	694260		TANK, Fuel -(Plastic)
975	493640		BOWL, Float
975C	797631		BOWL, Float
987B	797629		SEAL, Choke/Throttle Shaft

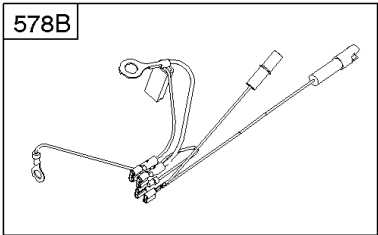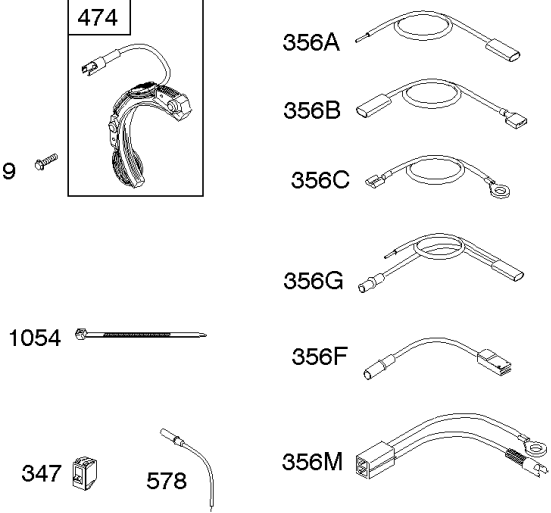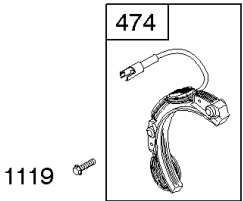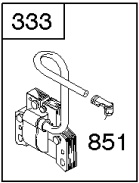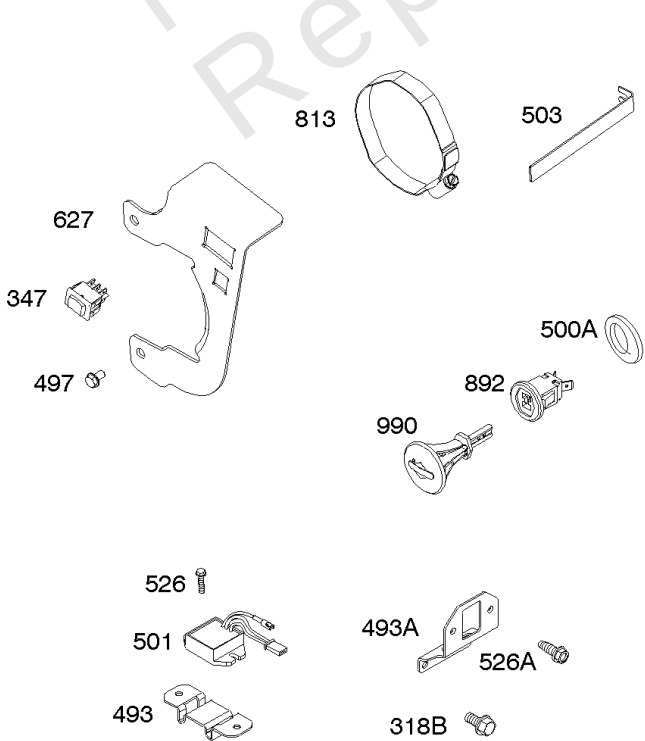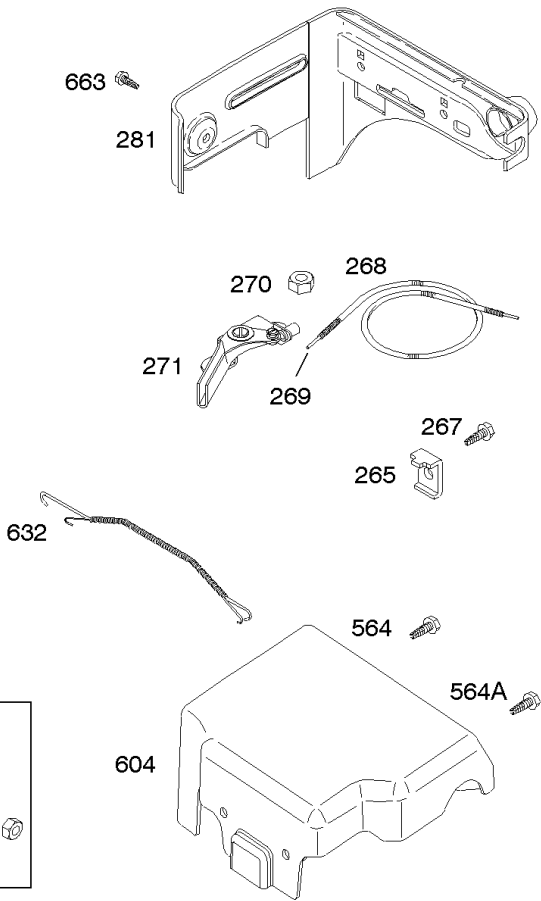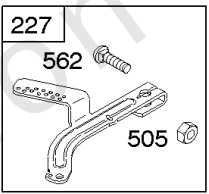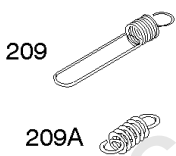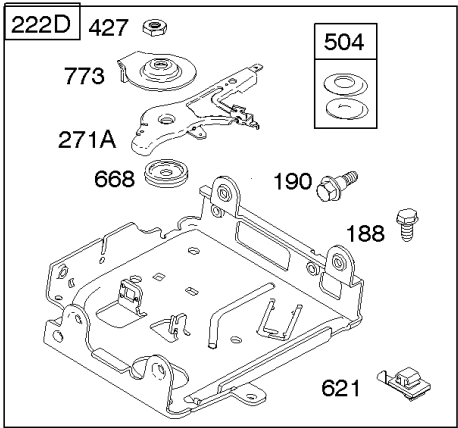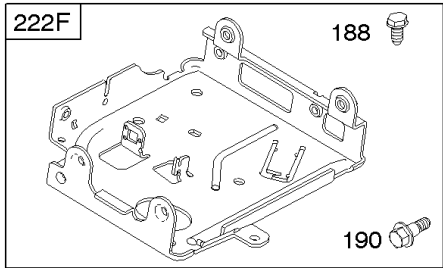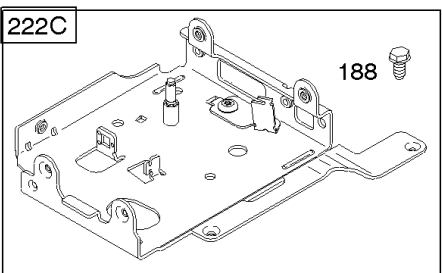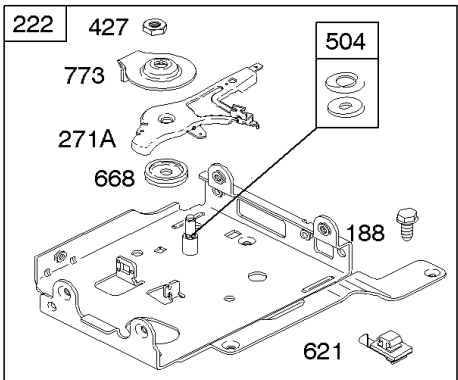            


Controls, Governor Spring, Ignition

REF NO	PART NO	QTY	DESCRIPTION
188	699479		SCREW -(Control Bracket)
190	699220		SCREW -(Fuel Tank)
209	692571		SPRING, Governor
222	699589		BRACKET, Control -Used Before Code Date 06051500
222C	699493		BRACKET, Control -Used Before Code Date 06051500
222F	793100		BRACKET, Control -Used After Code Date 06051400
222D	793107		BRACKET, Control -Used After Code Date 06051400
227	692573		LEVER, Governor Control
265	691024		CLAMP, Casing
267	699492		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
271A	694256		LEVER, Control
281	793122		PANEL, Control
318B	790537		SCREW -(Mounting Bracket)
333	695711		ARMATURE, Magneto
334	699477		SCREW -(Magneto Armature)
347	698338		SWITCH, Rocker
356A	692390		WIRE, Stop
356F	697397		WIRE, Stop
356M	792609		WIRE, Stop
356B	692602		WIRE-STOP
356C	695630		WIRE, Stop
356G	695814		WIRE, Stop
427	694255		NUT -(Control Bracket) (SAE)
427	798458		NUT -(Control Bracket) (Metric)
474	694457		ALTERNATOR
493	691177		BRACKET, Mounting
493A	699048		BRACKET, Mounting
497	691693		SCREW -(Stopswitch Bracket)
500A	792613		WASHER -(Key Switch)
503	691532		STRAP, Starter
504	694254		SET, Friction Washer
505	691251		NUT -(Governor Control Lever)
526	690297		SCREW -(Regulator)
526A	690326		SCREW -(Regulator)

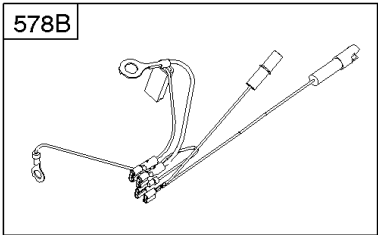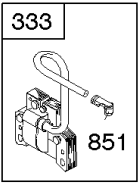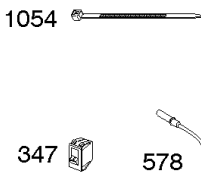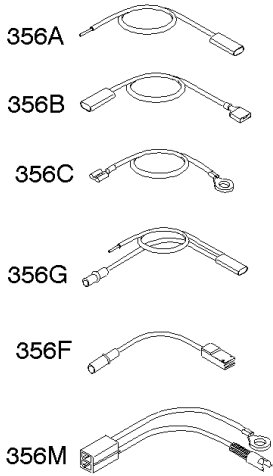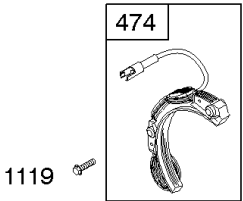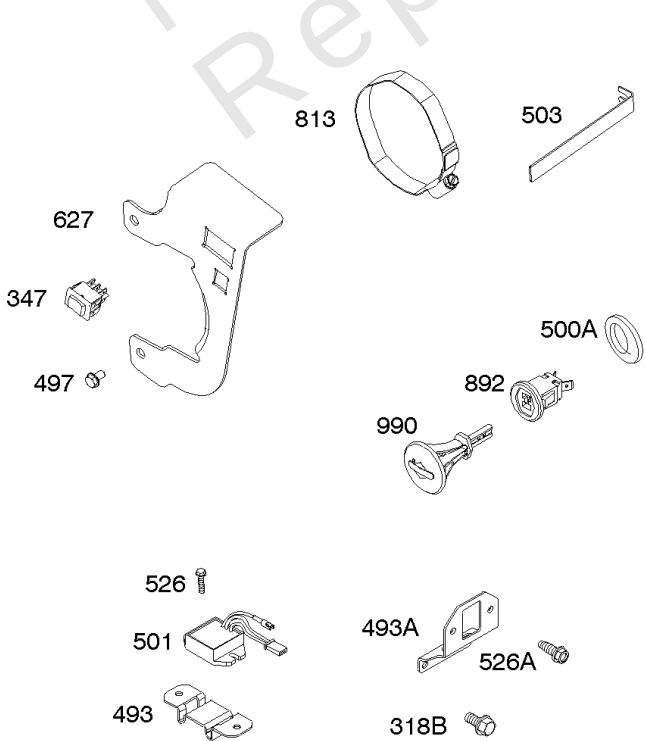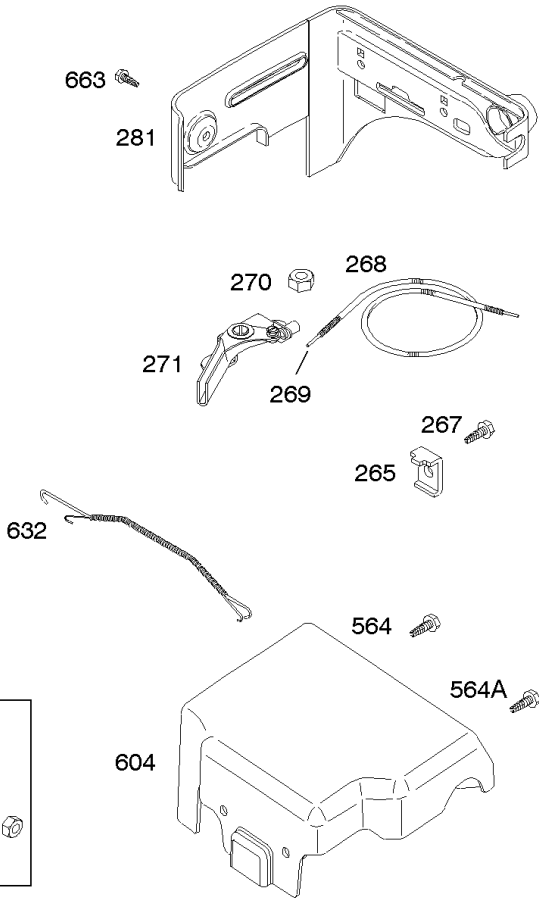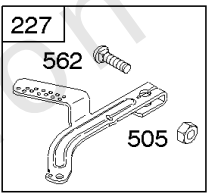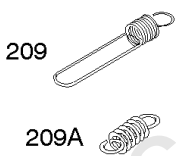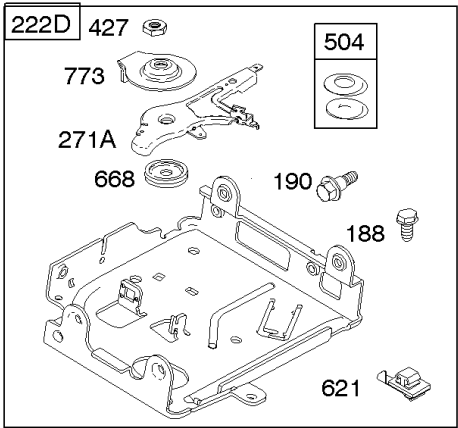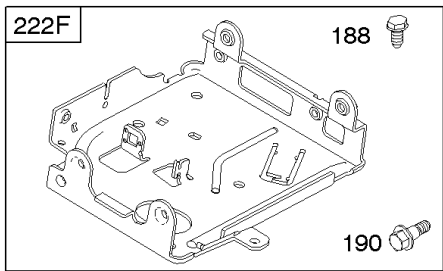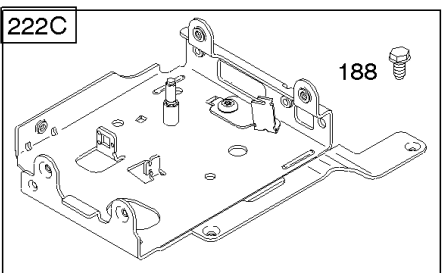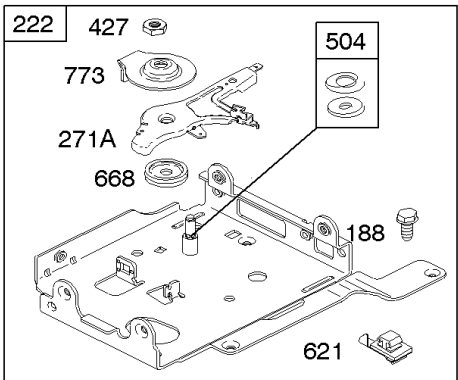             


Controls, Governor Spring, Ignition

REF NO	PART NO	QTY	DESCRIPTION
562	691119		BOLT -(Governor Control Lever)
564	699491		SCREW -(Control Cover)
564A	699206		SCREW -(Control Cover)
577	690795		CABLE, Starter
578	692306		WIRE ASSEMBLY
578B	790948		WIRE ASSEMBLY
579	691029		NUT -(Starter Cable)
604	697326		COVER-CONTROL
621	692310		SWITCH, Stop
627	792608		BRACKET, Stopswitch
632	693408		SPRING/LINK, Mechanical Governor
663	699206		SCREW -(Control Panel)
668	694257		SPACER
773	694258		RETAINER -(Control Bracket)
813	690635		CLAMP
851	493880S		TERMINAL, Spark Plug
892	791944		SWITCH, Key
920	691656		SOLENOID, Starter
990	695756		SET, Key
1054	280275		TIE, Cable
1119	699772		SCREW -(Alternator)

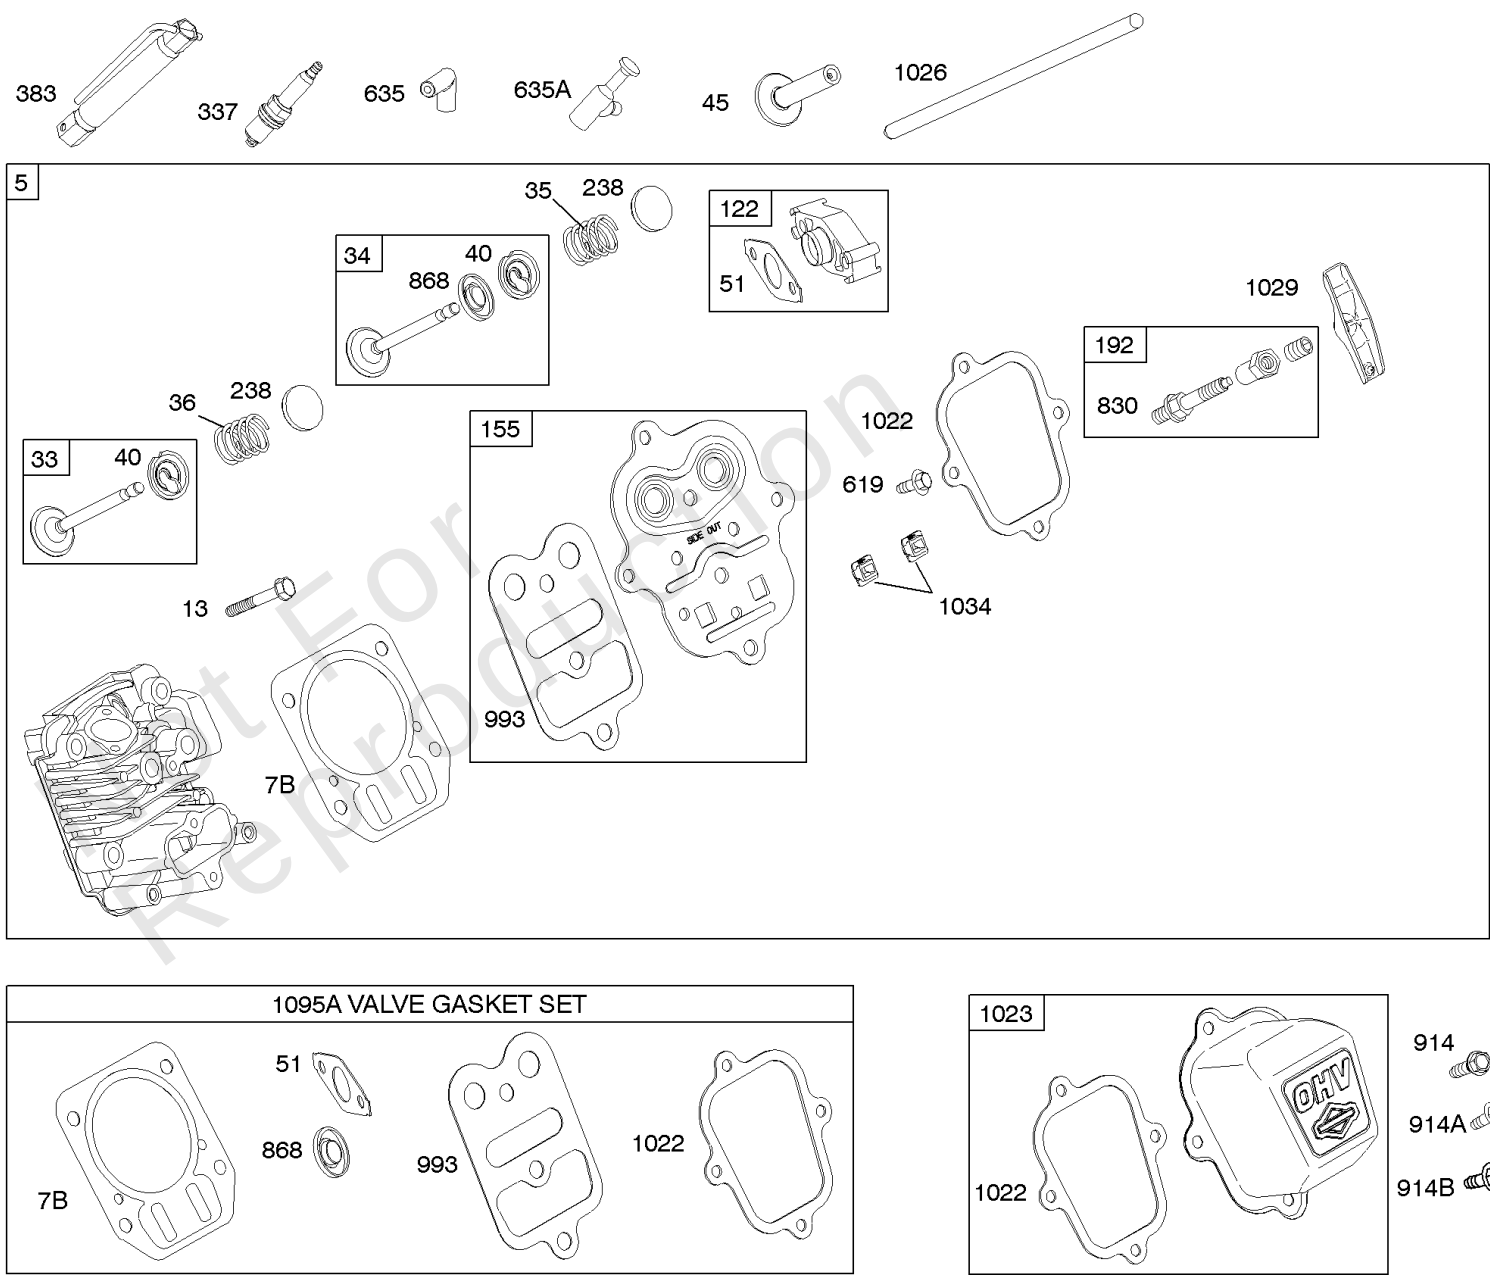 

Cylinder Head

REF NO	PART NO	QTY	DESCRIPTION
5	791720		HEAD, Cylinder
7B	791716		GASKET, Cylinder Head
13	699482		SCREW -(Cylinder Head)
33	499642		VALVE, Exhaust
34	499641		VALVE, Intake
35	691304		SPRING, Valve -(Intake)
36	691304		SPRING, Valve -(Exhaust)
40	692194		RETAINER, Valve
45	690977		TAPPET, Valve
51	791718		GASKET, Intake
122	791717		SPACER, Carburetor
155	698214		PLATE, Cylinder Head -(SAE) -Used Before Code Date 09061800
155	797442		PLATE, Cylinder Head -(Metric) -Used After Code Date 09061700
192	797440		ADJUSTER, Rocker Arm -(Metric) -Used After Code Date 09061700
192	694543		ADJUSTER-ROCKER ARM -(SAE) -Used Before Code Date 09061800
238	691300		CAP, Valve
337	491055S		PLUG, Spark -(Resistor)
337	691043		PLUG, Spark -(EMS)
337	84007216	1	PLUG, SPARK -(China Only)
383	19374S		WRENCH, Spark Plug
619	699481		SCREW -(Cylinder Head Plate)
635	692076		BOOT, Spark Plug
635A	692927		BOOT, Spark Plug
830	797441		STUD, Rocker Arm -(Rocker Arm) (Metric) -Used After Code Date 09061700
830	694544		STUD-ROCKER ARM -(Rocker Arm) (SAE) -Used Before Code Date 09061800
868	692044		SEAL, Valve
914	699481		SCREW -(Rocker Cover) (Bottom)
914A	692557		SCREW -(Rocker Cover) (Top) -Used Before Code Date 09061800
914A	797444		SCREW -(Rocker Cover) (Top) -Used After Code Date 09061700
914B	697551		SCREW -(Rocker Cover) (Center) -Used Before Code Date 09061800
914B	797444S		SCREW -(Rocker Cover) (Center) -Used After Code Date 09061700

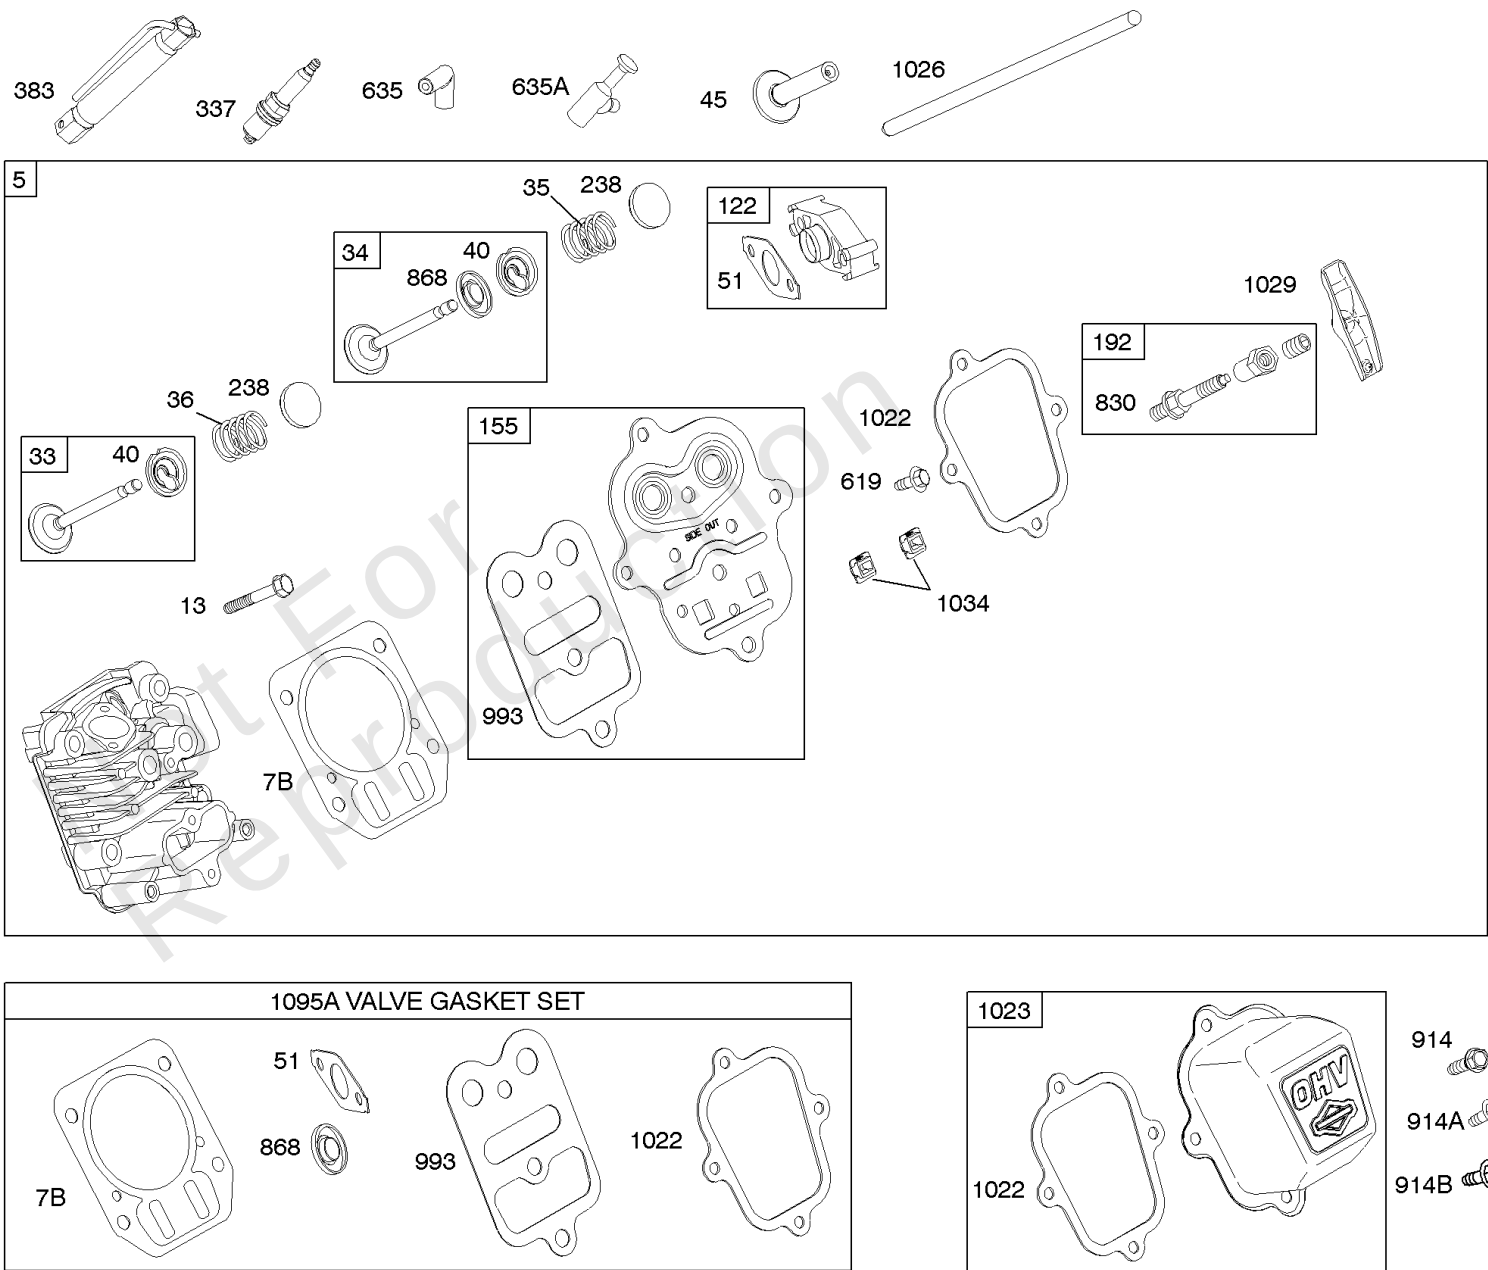 

Cylinder Head

REF NO	PART NO	QTY	DESCRIPTION
993	694088		GASKET, Cylinder Head Plate
1022	691890		GASKET-ROCKER COVER
1023	499924		COVER, Rocker
1026	790287		ROD, Push
1029	691230		ARM, Rocker -(SAE) -Used Before Code Date 09061800
1029	797443		ARM, Rocker -(Metric) -Used After Code Date 09061700
1034	691343		GUIDE, Push Rod
1095A	791798		GASKET SET, Valve

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	15T2120008	1	Replacement Engine
	-----		Top No-Load Speed: 3600
			-Trim: ALL
	-----		Service Note: For all Go-Karts use only a Model 136200 series engine as a replacement, regardless of the original Model.

Not For Reproduction

