

 


Parts Manual

Mfg. No: 157202-1014-E8


Model Components	Page
Air Cleaner, Controls, Exhaust System, Governor Spring, Ignition.	4
Blower Housing, Flywheel, Rewind Starter.	8
Camshaft, Crankcase Cover, Crankshaft, Cylinder, Lubrication, Piston Group.	12
Carburetor, Fuel Supply.	16
Cylinder Head.	20
Replacement Engine - US & Canada.	24

Not For
Reproduction

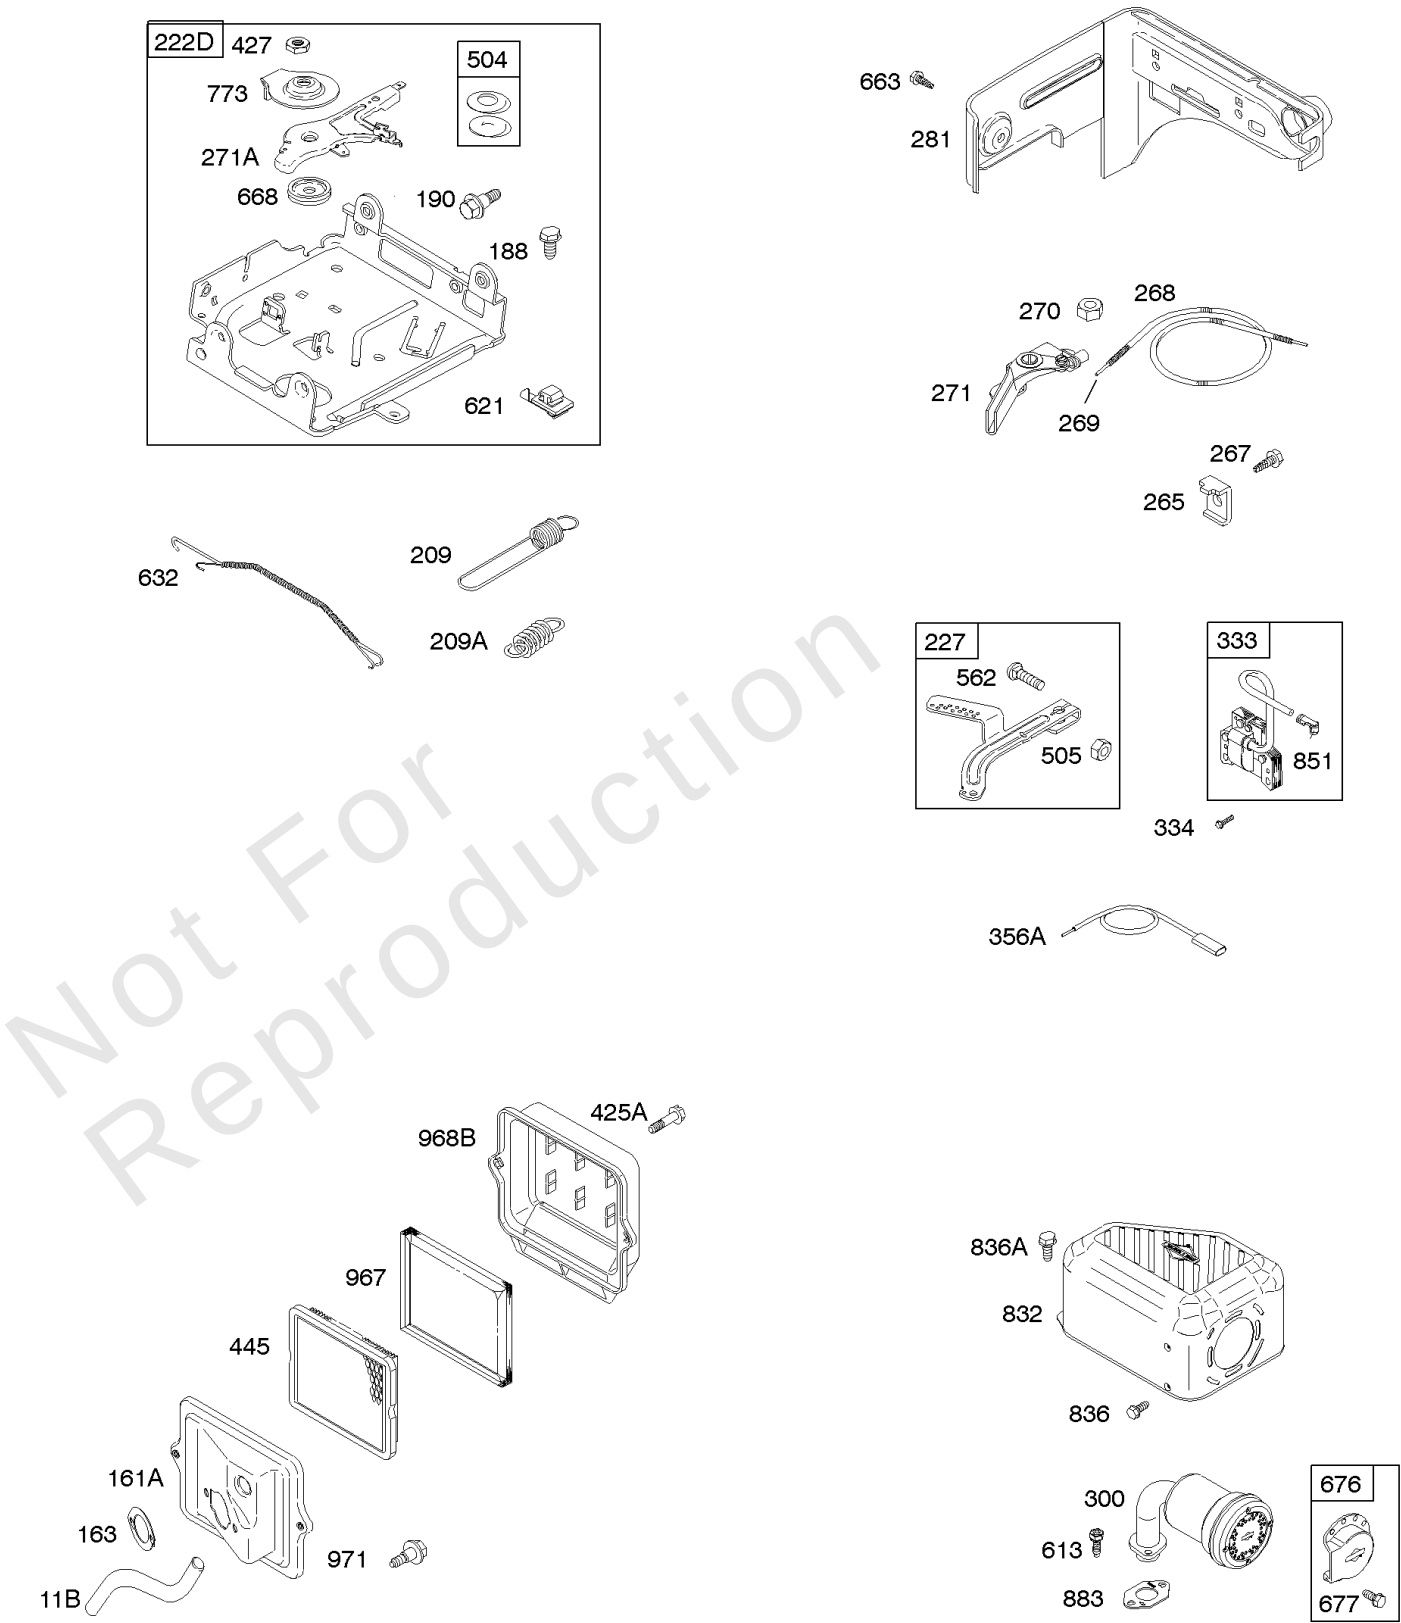



Air Cleaner, Controls, Exhaust System, Governor Spring, Ignition

REF NO	PART NO	QTY	DESCRIPTION
11B	790632		TUBE, Breather -(Ultra Low Mount Air Cleaner)
161A	790631		BASE, Air Cleaner -(Metal) (Ultra Low Mount Air Cleaner)
163	696024		GASKET, Air Cleaner -(Flat Panel Air Cleaner)
188	699479		SCREW -(Control Bracket)
190	699220		SCREW -(Fuel Tank)
209	692571		SPRING, Governor
209A	691278		SPRING, Governor
222D	793107		BRACKET, Control
227	692573		LEVER, Governor Control
265	691024		CLAMP, Casing
267	699492		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
271A	694256		LEVER, Control
281	793122		PANEL, Control
300	693593		MUFFLER
333	695711		ARMATURE, Magneto
334	699477		SCREW -(Magneto Armature)
356A	692390		WIRE, Stop
425A	699492		SCREW -(Air Cleaner Cover)
427	694255		NUT -(Control Bracket) (SAE)
427	798458		NUT -(Control Bracket) (Metric)
445	491588S		FILTER, A/C Cartridge
504	694254		SET, Friction Washer
505	691251		NUT -(Governor Control Lever)
562	691119		BOLT -(Governor Control Lever)
613	699209		SCREW -(Muffler)
621	692310		SWITCH, Stop
632	693408		SPRING/LINK, Mechanical Governor
663	699206		SCREW -(Control Panel)
668	694257		SPACER
676	393757		DEFLECTOR, Muffler -(Side Outlet)
677	690661		SCREW -(Muffler Deflector) (SAE)
677	699203		SCREW -(Muffler Deflector) (Metric)
773	694258		RETAINER -(Control Bracket)


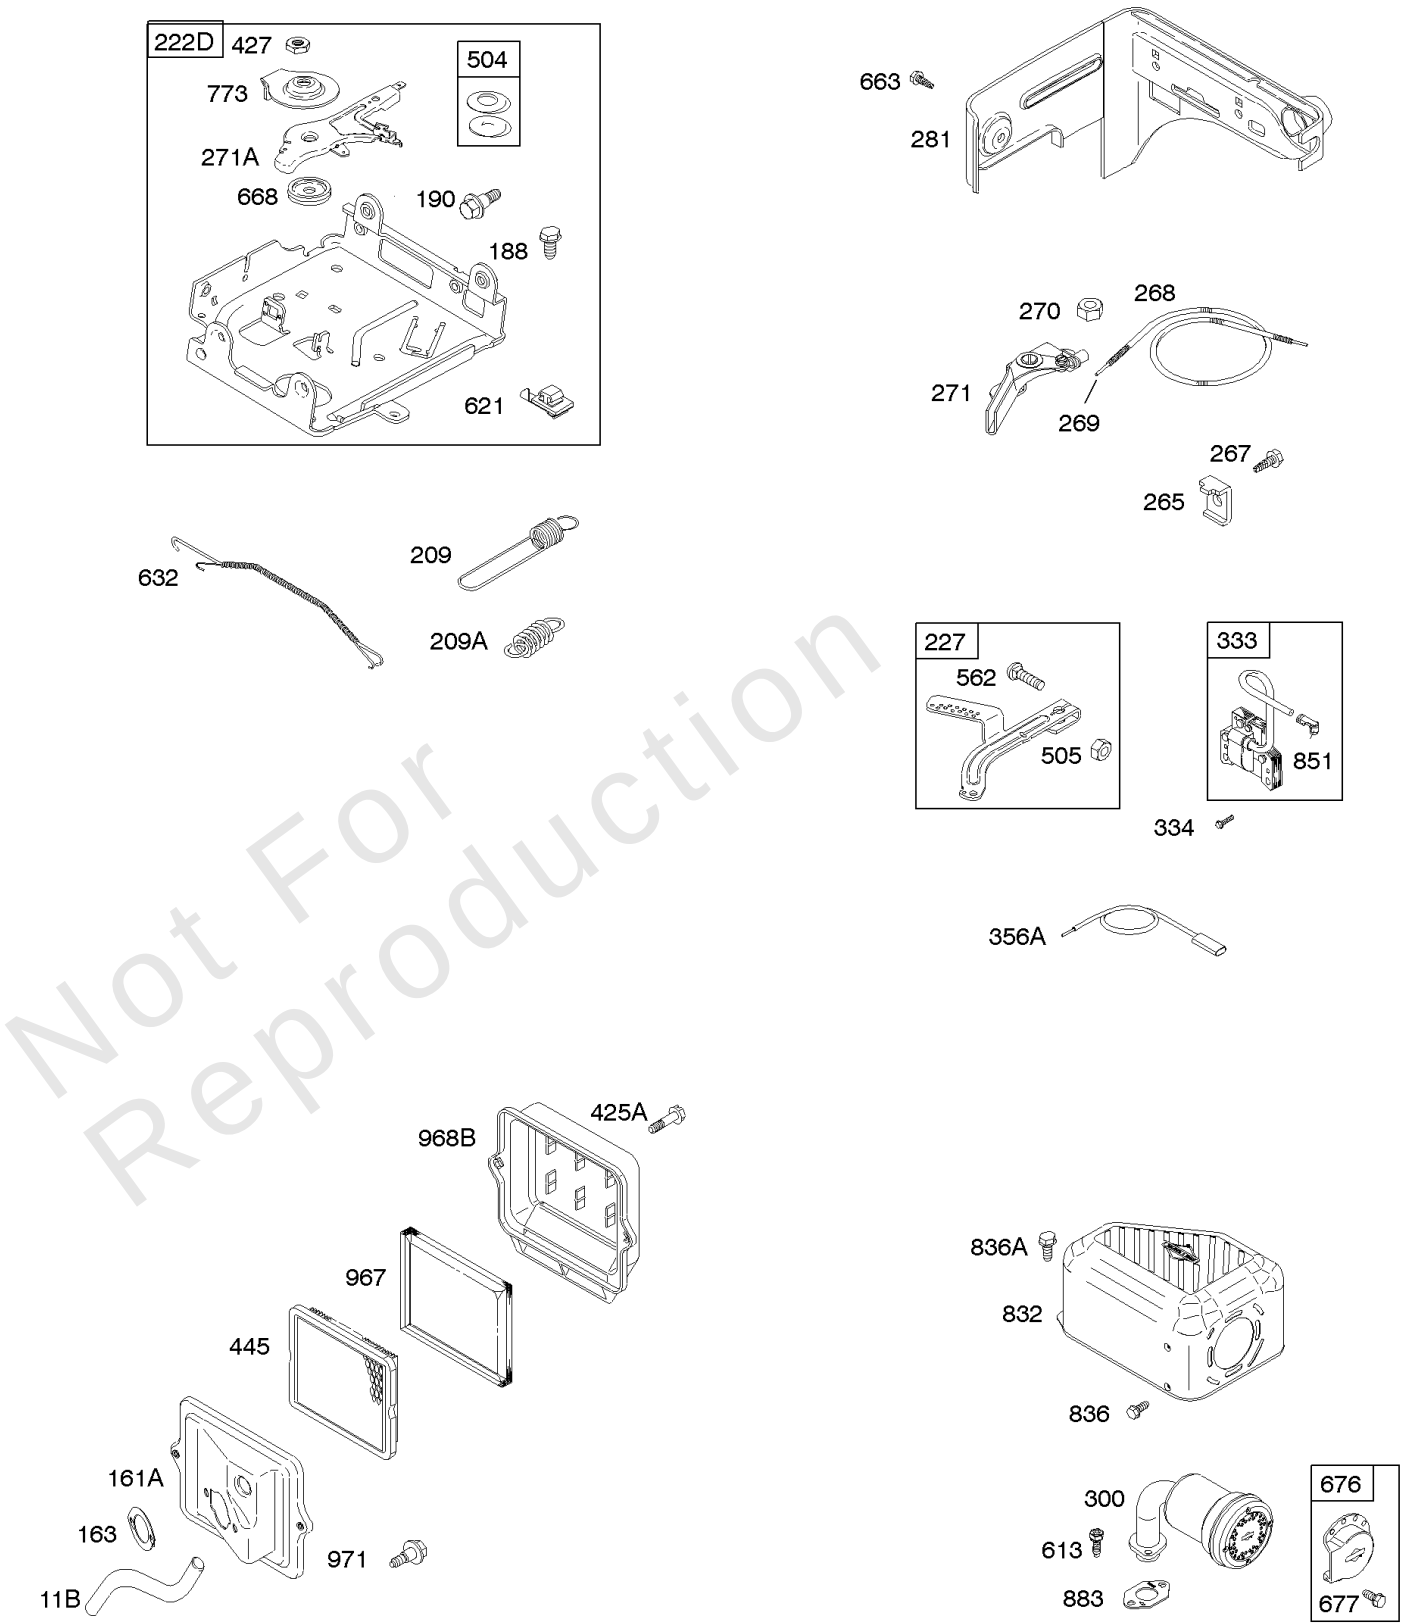 


Air Cleaner, Controls, Exhaust System, Governor Spring, Ignition

REF NO	PART NO	QTY	DESCRIPTION
832	693583		GUARD, Muffler -(Lo Tone)
836	699203		SCREW -(Muffler Guard)
836A	699632		SCREW -(Muffler Guard)
851	493880S		TERMINAL, Spark Plug
883	691893		GASKET-EXHAUST -(Between Adapter And Cylinder)
967	493537S		FILTER, Air Cleaner Foam -(Flat Panel)
968B	791082		COVER, Air Cleaner -(Ultra Low Mount Air Cleaner)
971	690370		SCREW -(Air Cleaner Base to Carburetor) (SAE)
971	798649		SCREW -(Air Cleaner Base to Carburetor) (Metric)

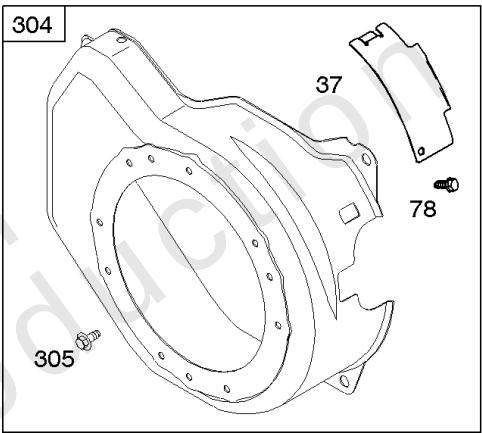 
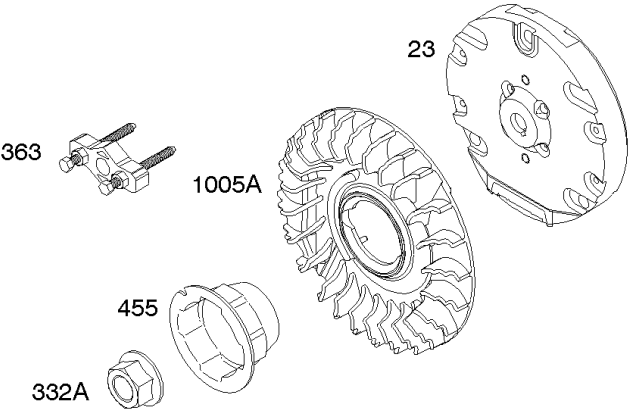 


1036 EMISSIONS LABEL

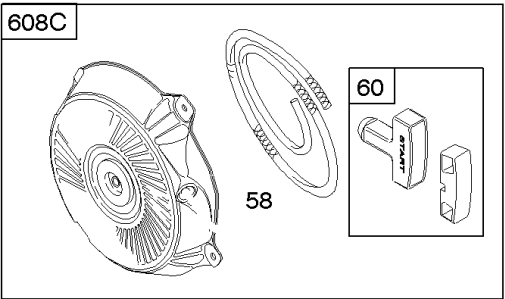 
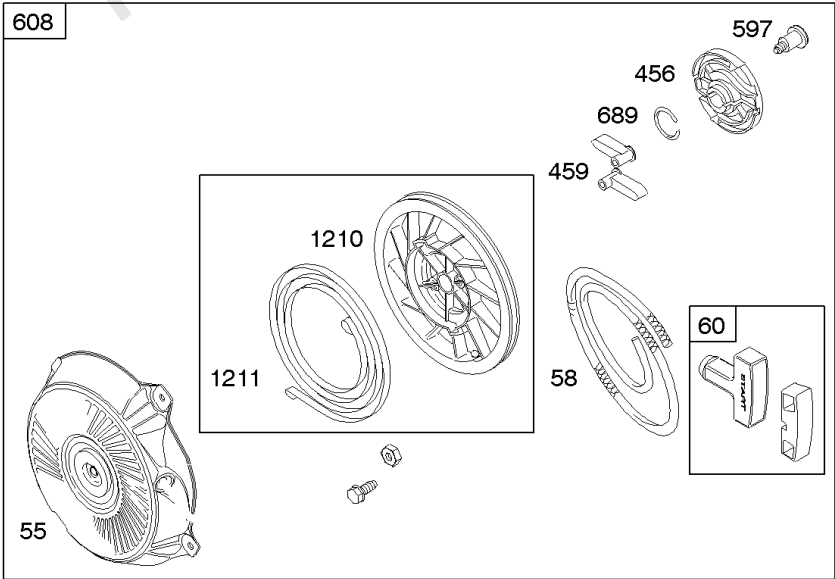 


Blower Housing, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
23	699488		FLYWHEEL
37	699661		GUARD, Flywheel
55	791848		HOUSING, Rewind Starter -Used After Code Date 08030200
55	791848		HOUSING, Rewind Starter -(Rewind Starter Parts Used With 5MM Diameter Starter Rope) -Used Before Code Date 08030300
55	691422		HOUSING, Rewind Starter -(Rewind Starter Parts Used With 3MM Diameter Starter Rope) -Used Before Code Date 08030300
58	693389		ROPE, Starter -(Cut To Required Length) -Used After Code Date 08030200
58	66574		ROPE, Starter -(Rewind Starter Parts Used With 5MM Diameter Starter Rope) -Used Before Code Date 08030300
58	693389		ROPE, Starter -(Cut To Required Length) (Rewind Starter Parts Used With 3MM Diameter Starter Rope) -Used Before Code Date 08030300
60	490652		GRIP-STARTER ROPE -(2 Piece)
78	699205		SCREW -(Flywheel Guard)
304	699598		HOUSING, Blower
305	699481		SCREW -(Blower Housing)
332A	792723		NUT -(Flywheel)
363	19203		PULLER, Flywheel
455	591302		CUP, Flywheel -Used After Code Date 11123100
455	692591		CUP, Flywheel -Used Before Code Date 12010100
456	692299		PLATE-PAWL FRICTION
459	281505S		PAWL-RATCHET
597	691696		SCREW -(Pawl Friction Plate)
608	693394		STARTER, Rewind -(Rewind Starter Parts Used With 3MM Diameter Starter Rope) -Used Before Code Date 08030300
608	791670		STARTER, Rewind -(Rewind Starter Parts Used With 5MM Diameter Starter Rope) -Used Before Code Date 08030300
608	795930		STARTER, Rewind -Used After Code Date 08030200 -Used Before Code Date 12010100
608C	591301		STARTER, Rewind -Used After Code Date 11123100
689	691855		SPRING-FRICTION -(Rewind Starter)
1005A	794273		FAN, Flywheel
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1210	498144		PULLEY/SPRING ASSY -(Pulley) (Rewind Starter Parts Used With 3MM Diameter Starter Rope) -Used Before Code Date 08030300
1210	791849		PULLEY/SPRING ASSEMBLY -(Pulley) (Rewind Starter Parts Used With 5MM Diameter Starter Rope) -Used Before Code Date 08030300

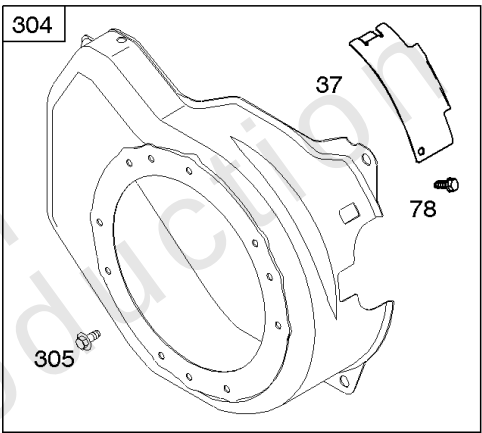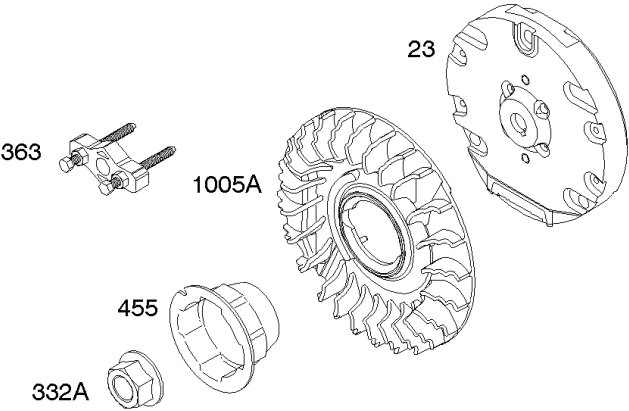  

1036 EMISSIONS LABEL

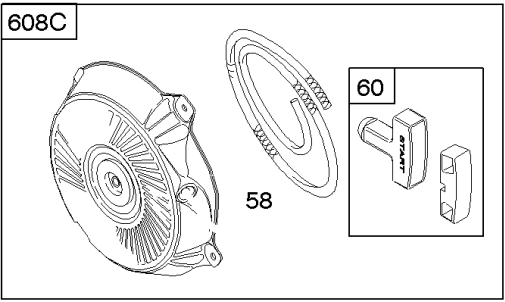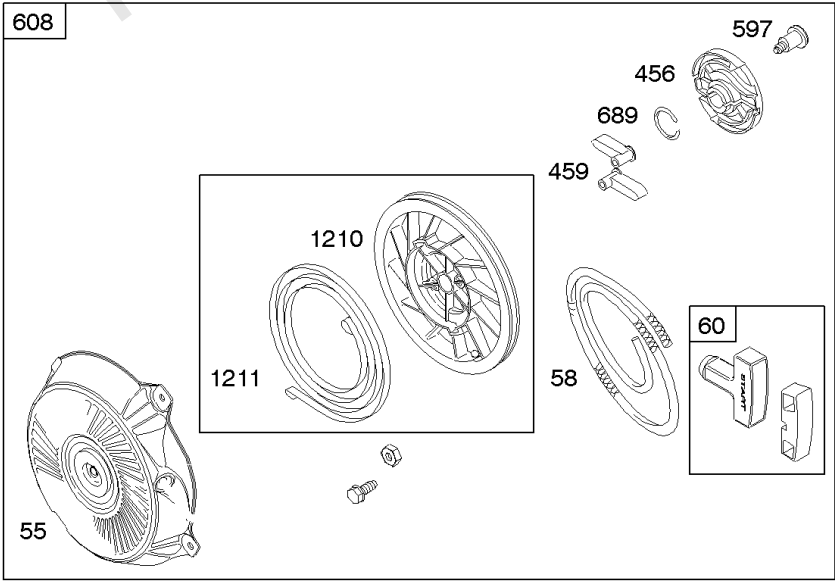  

Blower Housing, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
1210	791849		PULLEY/SPRING ASSEMBLY -(Pulley) -Used After Code Date 08030200
1211	791849		PULLEY/SPRING ASSEMBLY -(Spring) (Rewind Starter Parts Used With 5MM Diameter Starter Rope) -Used Before Code Date 08030300
1211	791849		PULLEY/SPRING ASSEMBLY -(Spring) -Used After Code Date 08030200
1211	498144		PULLEY/SPRING ASSY -(Spring) (Rewind Starter Parts Used With 3MM Diameter Starter Rope) -Used Before Code Date 08030300

1319 WARNING LABEL

WARNING

Read and follow all operating instructions before commencing work.

Exercise extreme caution when working on or near a running engine.

Always wear proper safety equipment.

 
 
 
 
 
 
 
 
Do not touch moving parts.

Do not touch hot parts.

REQUIRED when replacing parts with warning labels affixed.

1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL

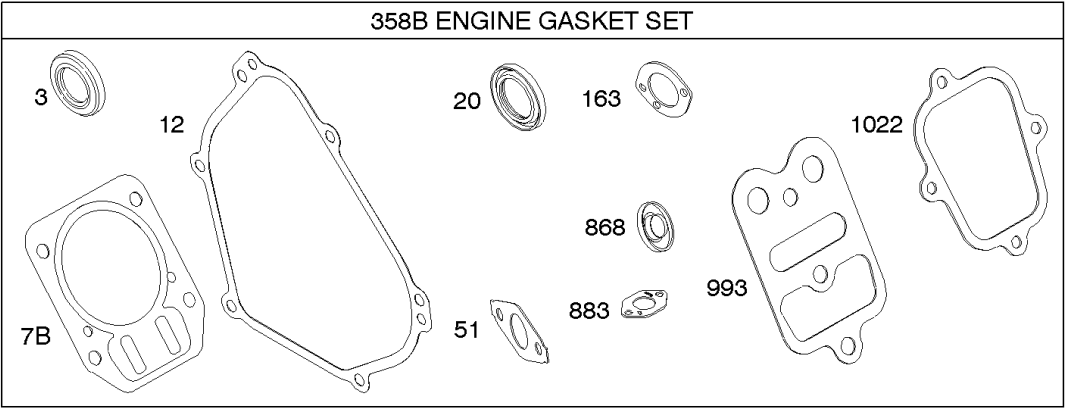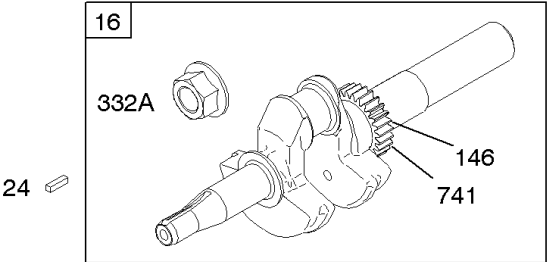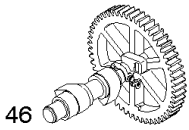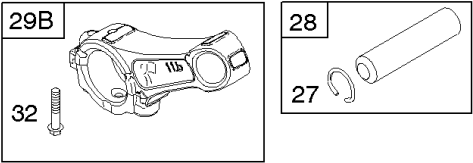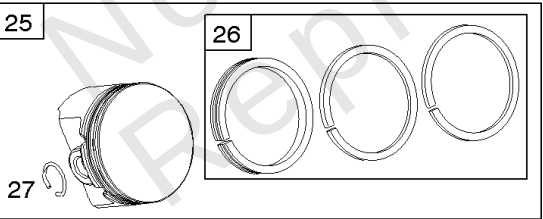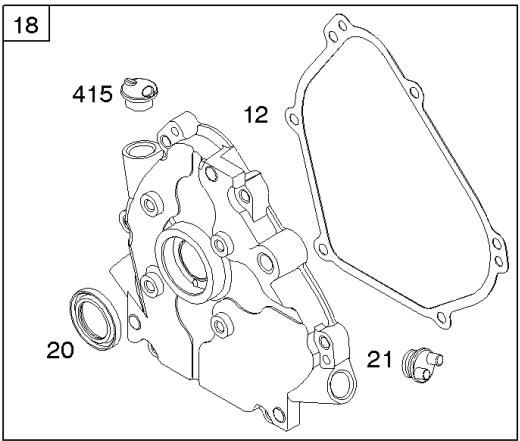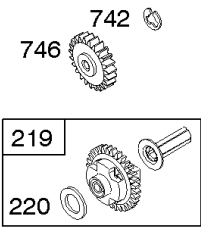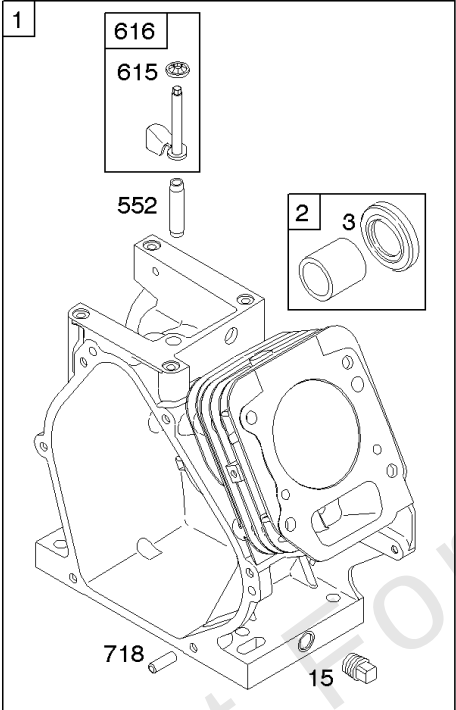

Camshaft, Crankcase Cover, Crankshaft, Cylinder, Lubrication, Piston Group

REF NO	PART NO	QTY	DESCRIPTION
1	794188		CYLINDER ASSEMBLY
2	399269		KIT, Bushing/Seal -(Magneto Side)
3	299819S		SEAL, Oil -(Magneto Side)
7B	791716		GASKET, Cylinder Head
12	699485		GASKET, Crankcase
15	691686		PLUG-OIL DRAIN -(Square Head)(1/4" Diameter)
15A	691682		PLUG-OIL DRAIN -(Hex Socket)(1/4 Diameter)
16	699445		CRANKSHAFT
18	699696		COVER, Crankcase
20	692550		SEAL-OIL -(PTO Side)
21	281658S		CAP, Oil Fill
22	699478		SCREW -(Crankcase Cover/Sump)
24	796335		KEY, Flywheel
25	791786		PISTON ASSEMBLY -(Standard)
25	791791		PISTON ASSEMBLY -(.020 Oversize)
26	791787		SET, Ring -(Standard)
26	791792		SET, Ring -(.020 Oversize)
27	690975		LOCK, Piston Pin
28	690229		PIN, Piston -(Standard)
29B	791783		ROD, Connecting
32	791784		SCREW -(Connecting Rod)
46	693404		CAMSHAFT
51	791718		GASKET, Intake
146	690979		KEY, Woodruff
163	696024		GASKET, Air Cleaner -(Flat Panel Air Cleaner)
219	693578		GEAR, Governor
220	691724		WASHER -(Governor Gear)
306	693610		SHIELD, Cylinder
307	699234		SCREW -(Cylinder Shield)
332A	792723		NUT -(Flywheel)
358B	791797		GASKET SET, Engine
415	693463		PLUG -(Crankcase Cover/Sump)
552	692346		BUSHING, Governor Crank
615	692576		RETAINER, Governor Shaft
616	692547		CRANK, Governor
718	690959		PIN, Locating
741	695087		GEAR, Timing
742	692564		RETAINER, E Ring -(Idler Gear)

1319 WARNING LABEL

WARNING

Read and follow operating instructions before commencing work.

Exercise extreme caution when working on or near a running engine.

Always wear eye protection.

 
 
 
 
 
 
 
 
 
Do not touch moving parts.

Do not touch hot parts.

REQUIRED when replacing parts with warning labels affixed.






1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL

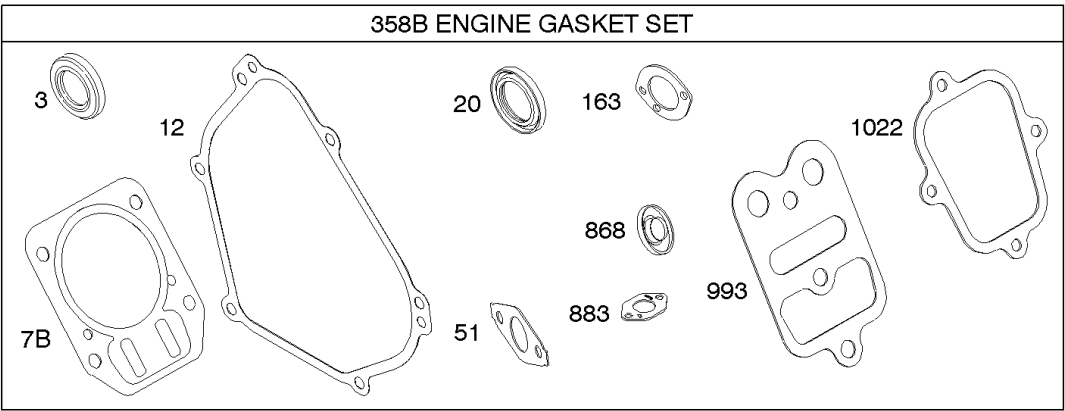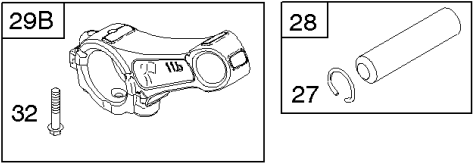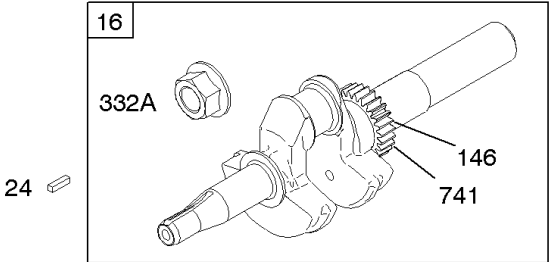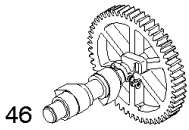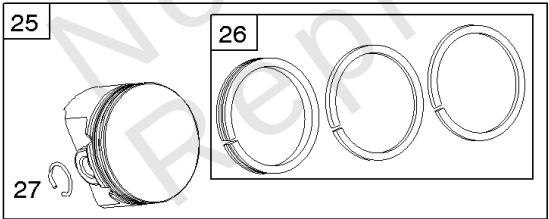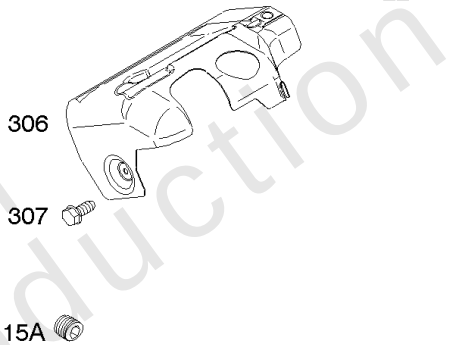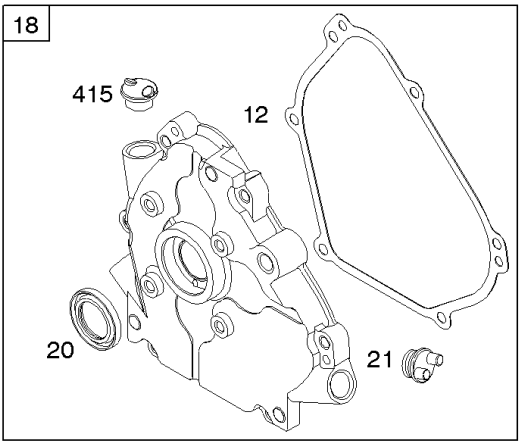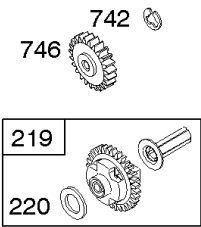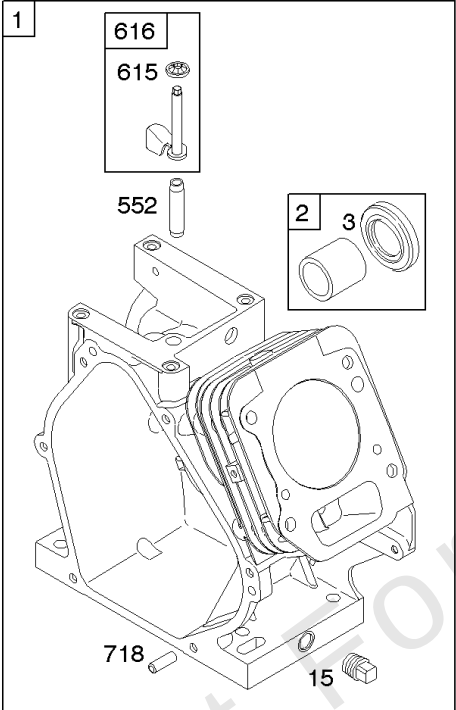






Camshaft, Crankcase Cover, Crankshaft, Cylinder, Lubrication, Piston Group

REF NO	PART NO	QTY	DESCRIPTION
746	790278		GEAR-IDLER
868	692044		SEAL, Valve
883	691893		GASKET-EXHAUST -(Between Adapter And Cylinder)
993	694088		GASKET, Cylinder Head Plate
1022	691890		GASKET-ROCKER COVER
1058	277040		MANUAL, Operator's
1319	794467		LABEL, Warning
1330	272147		MANUAL, Repair

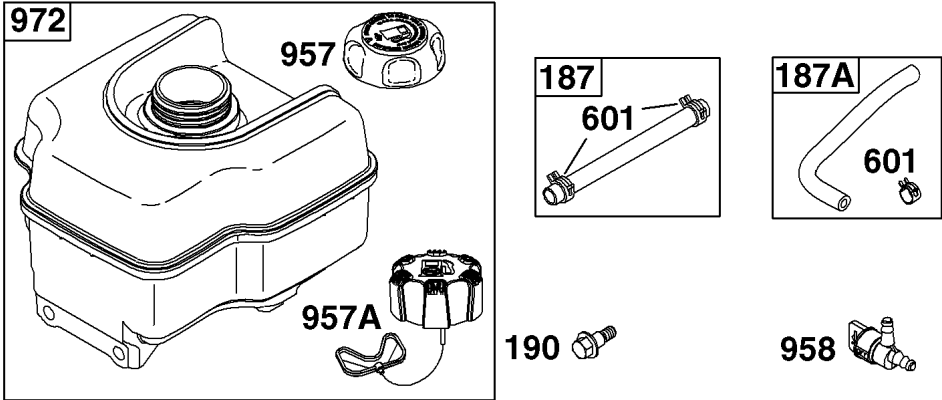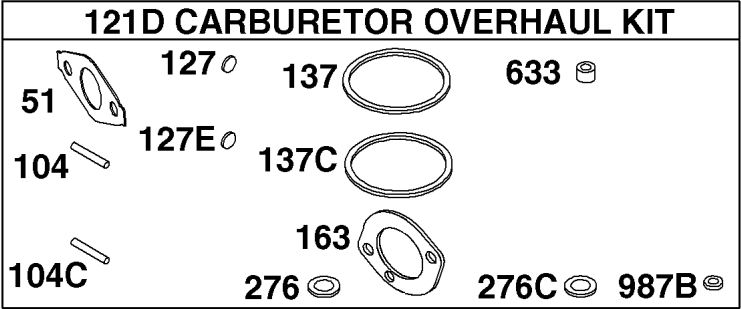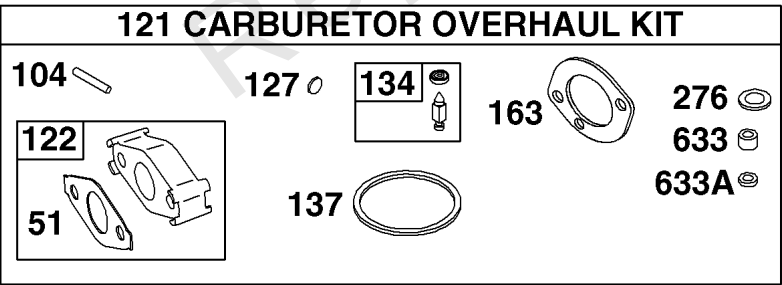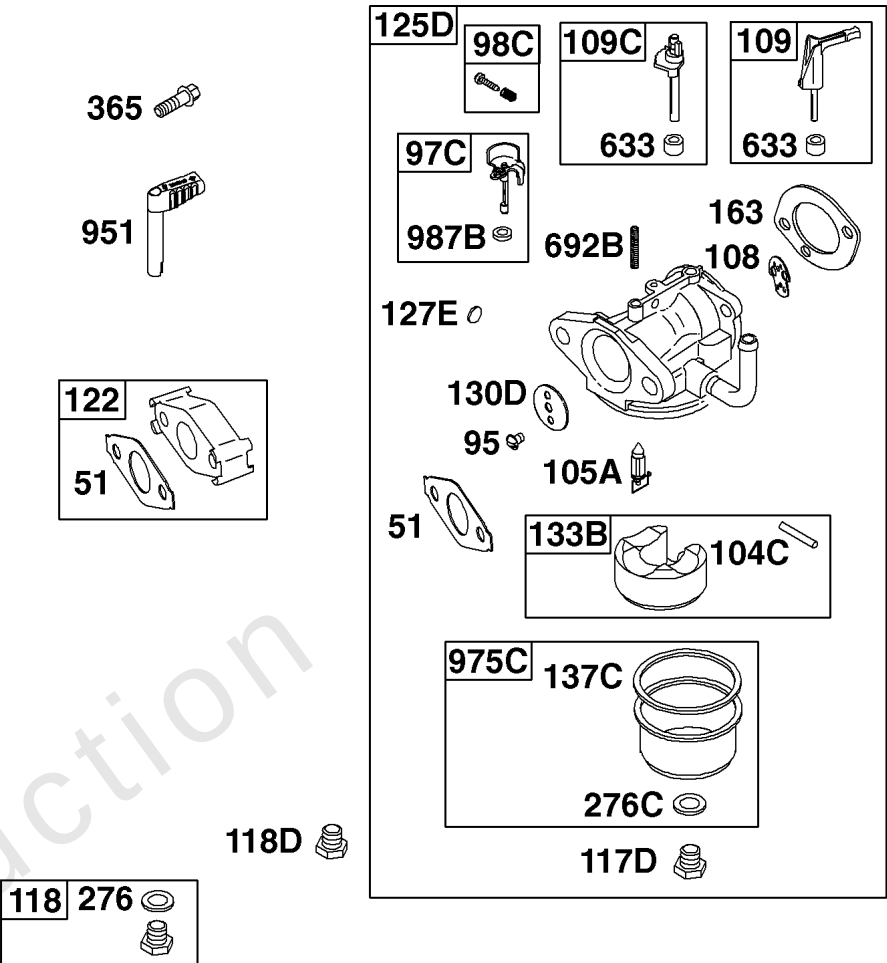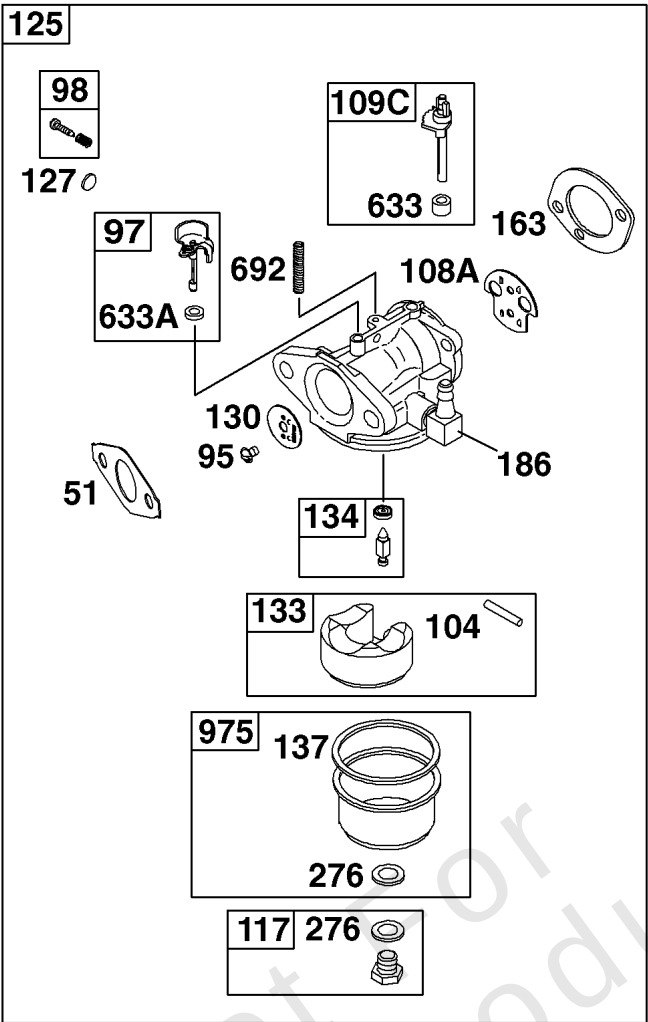     


Carburetor, Fuel Supply

REF NO	PART NO	QTY	DESCRIPTION
51	791718		GASKET, Intake
95	691636		SCREW -(Throttle Valve)
97	690024		SHAFT, Throttle
97C	797628		SHAFT, Throttle
98	398185		KIT-IDLE SPEED -(Carburetor)
98C	797156		KIT, Idle Speed
104	691242		PIN, Float Hinge
104C	797622		PIN, Float Hinge
105A	797139		VALVE, Float Needle
108	692567		VALVE-CHOKE
108A	695807		VALVE, Choke
109	690023		SHAFT, Choke
109C	790624		SHAFT, Choke
117	697355		JET, Main -(Standard)
117D	798661		JET, Main -(Standard)
118	494870		JET, Main -(High Altitude)
118D	798660		JET, Main -(High Altitude)
121	792006		KIT, Carburetor Overhaul
121D	797634		KIT, Carburetor Overhaul
122	791717		SPACER, Carburetor
125	697354		CARBURETOR -Used Before Code Date 10090100
125D	798653		CARBURETOR -Used After Code Date 10083100
127	691739		PLUG-WELCH
127E	797633		PLUG, Welch
130	691181		VALVE-THROTTLE
130D	797630		VALVE, Throttle
133	398187		FLOAT-CARBURETOR
133B	797136		FLOAT, Carburetor
134	398188		KIT-NEEDLE/SEAT
137	693981		GASKET-FLOAT BOWL
137C	797625		GASKET, Float Bowl
163	696024		GASKET, Air Cleaner -(Flat Panel Air Cleaner)
186	692317		CONNECTOR-HOSE
187	791766		LINE, Fuel -(Cut To Required Length)
187A	791867		LINE, Fuel -(Molded)
190	699220		SCREW -(Fuel Tank)
276	271716		WASHER-SEALING
276C	797632		WASHER, Sealing
365	699484		SCREW -(Carburetor)
601	791850		CLAMP, Hose
633	693867		SEAL, Choke/Throttle Shaft
633A	691321		SEAL, Choke/Throttle Shaft -(Throttle Shaft)

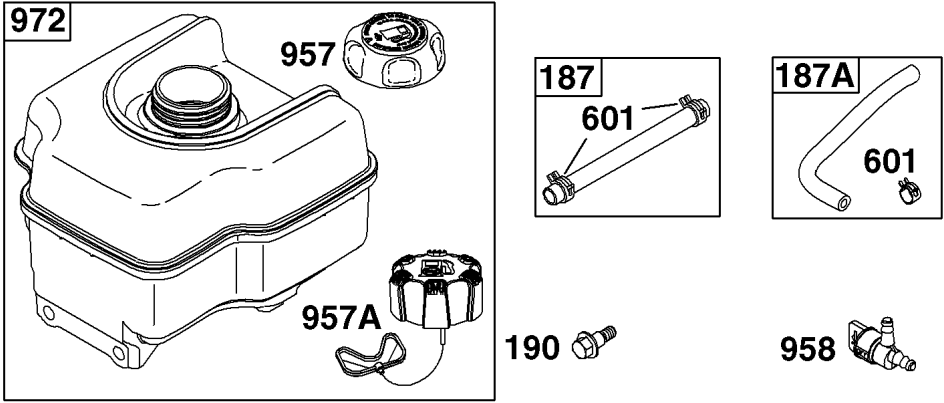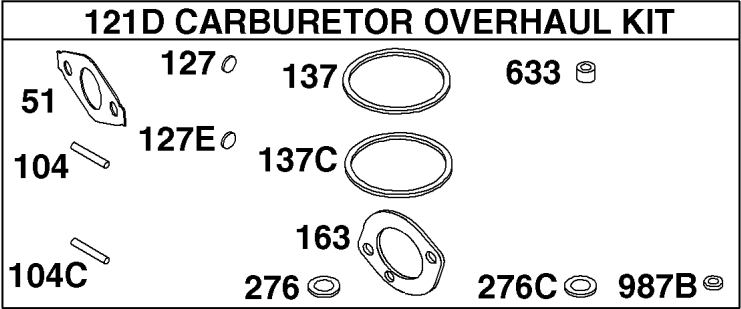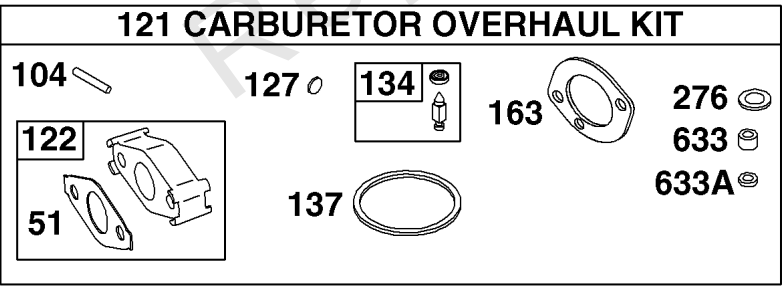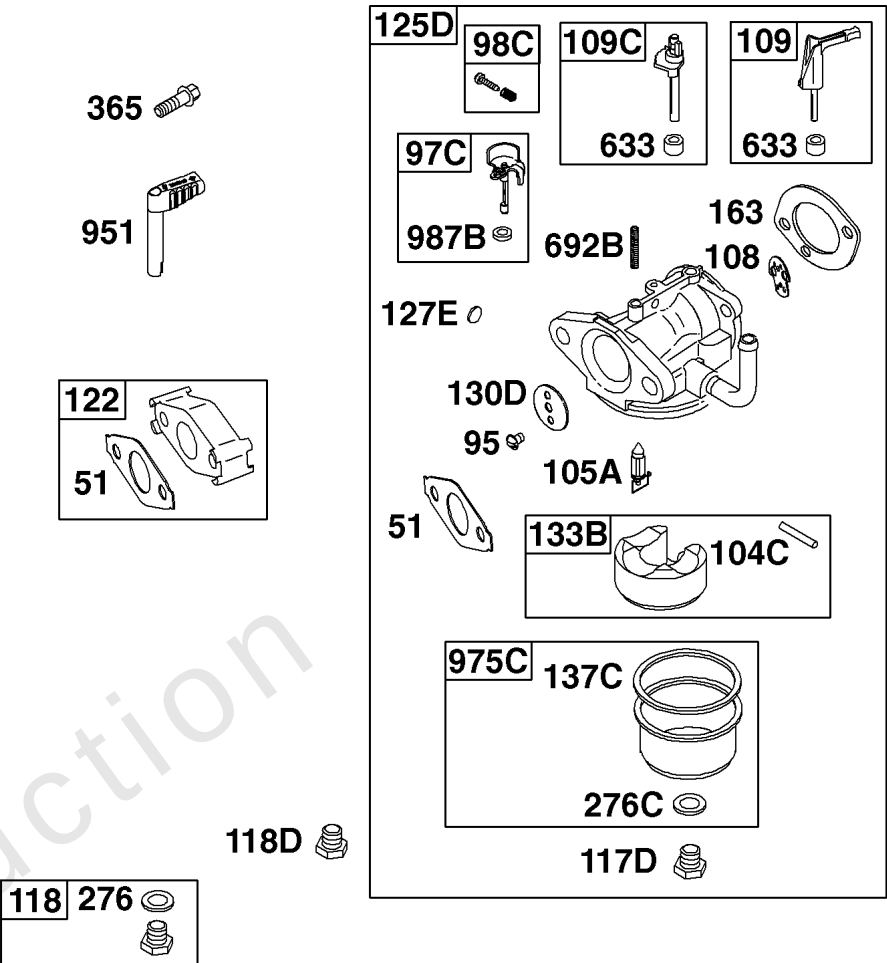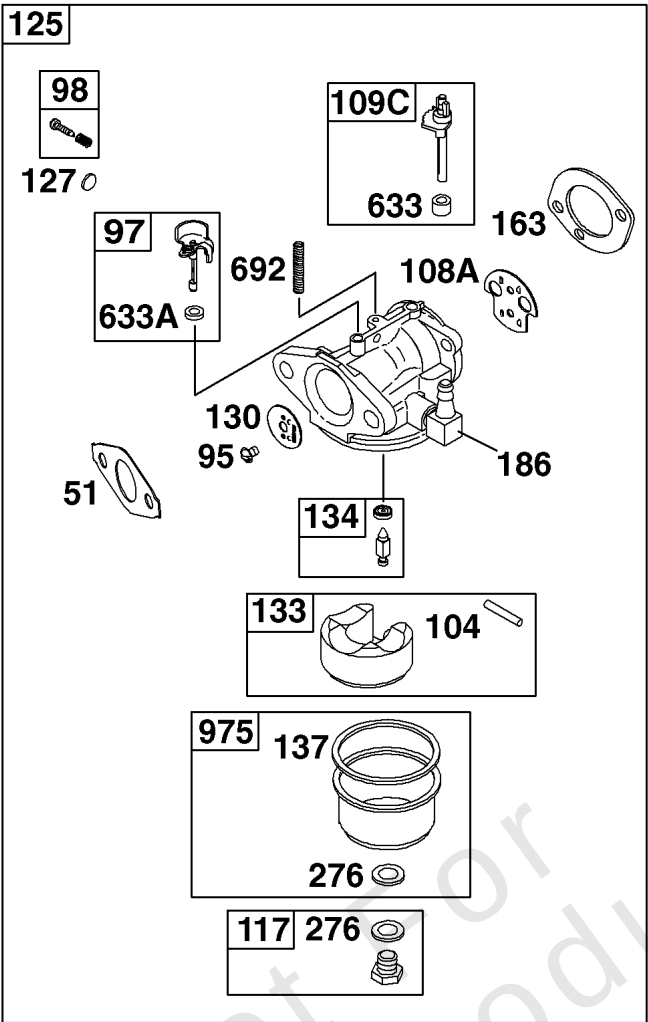     


Carburetor, Fuel Supply

REF NO	PART NO	QTY	DESCRIPTION
692	690572		SPRING, Detent -(Carburetor)
692B	797624		SPRING, Detent
951	790630		LEVER, Choke
957	795027		CAP, Fuel Tank -(Plastic)
957A	799719		CAP, Fuel Tank -(Plastic) (Carbon In Cap)
958	698180		VALVE, Fuel Shutoff -(Plastic)
972	694260		TANK, Fuel -(Plastic)
975	493640		BOWL, Float
975C	797631		BOWL, Float
987B	797629		SEAL, Choke/Throttle Shaft

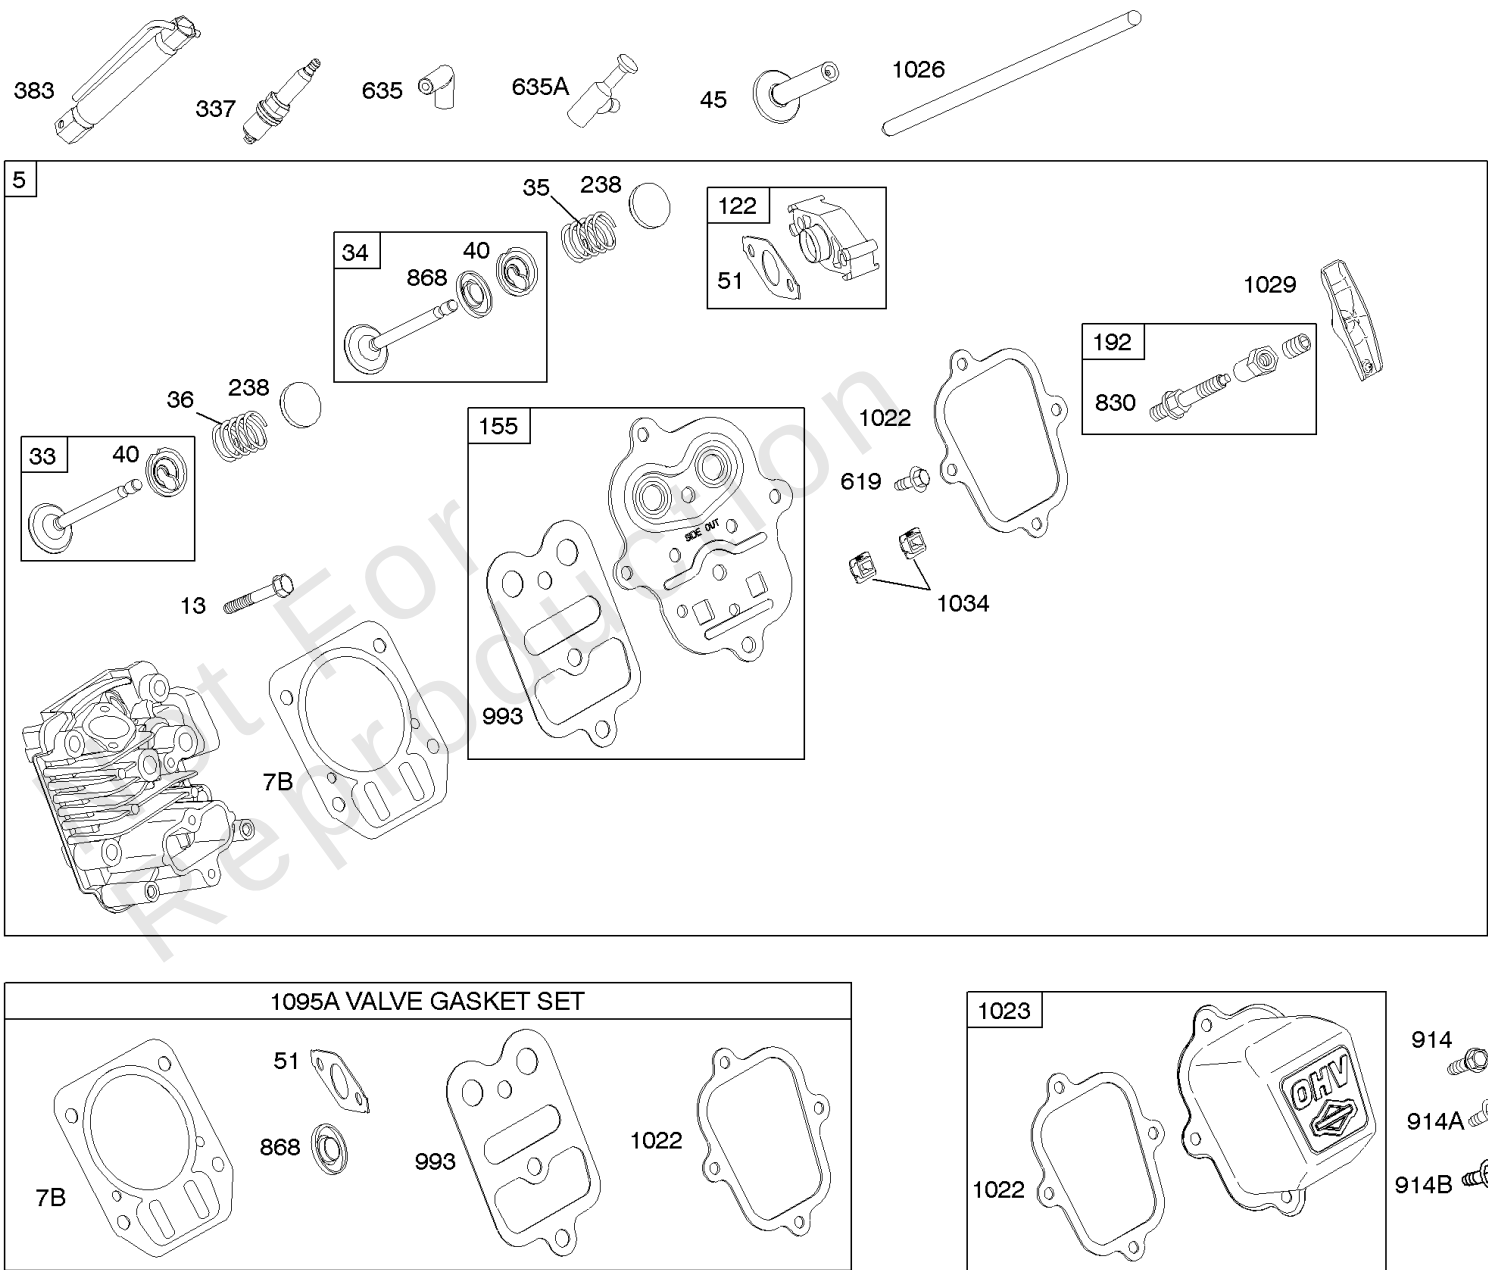 

Cylinder Head

REF NO	PART NO	QTY	DESCRIPTION
5	791720		HEAD, Cylinder
7B	791716		GASKET, Cylinder Head
13	699482		SCREW -(Cylinder Head)
33	499642		VALVE, Exhaust
34	499641		VALVE, Intake
35	691304		SPRING, Valve -(Intake)
36	691304		SPRING, Valve -(Exhaust)
40	692194		RETAINER, Valve
45	690977		TAPPET, Valve
51	791718		GASKET, Intake
122	791717		SPACER, Carburetor
155	698214		PLATE, Cylinder Head -(SAE) -Used Before Code Date 09061800
155	797442		PLATE, Cylinder Head -(Metric) -Used After Code Date 09061700
192	797440		ADJUSTER, Rocker Arm -(Metric) -Used After Code Date 09061700
192	694543		ADJUSTER-ROCKER ARM -(SAE) -Used Before Code Date 09061800
238	691300		CAP, Valve
337	491055S		PLUG, Spark -(Resistor)
337	691043		PLUG, Spark -(EMS)
337	84007216	1	PLUG, SPARK -(China Only)
383	19374S		WRENCH, Spark Plug
619	699481		SCREW -(Cylinder Head Plate)
635	692076		BOOT, Spark Plug
635A	692927		BOOT, Spark Plug
830	797441		STUD, Rocker Arm -(Rocker Arm) (Metric) -Used After Code Date 09061700
830	694544		STUD-ROCKER ARM -(Rocker Arm) (SAE) -Used Before Code Date 09061800
868	692044		SEAL, Valve
914	699481		SCREW -(Rocker Cover) (Bottom)
914A	692557		SCREW -(Rocker Cover) (Top) -Used Before Code Date 09061800
914A	797444		SCREW -(Rocker Cover) (Top) -Used After Code Date 09061700
914B	697551		SCREW -(Rocker Cover) (Center) -Used Before Code Date 09061800
914B	797444S		SCREW -(Rocker Cover) (Center) -Used After Code Date 09061700

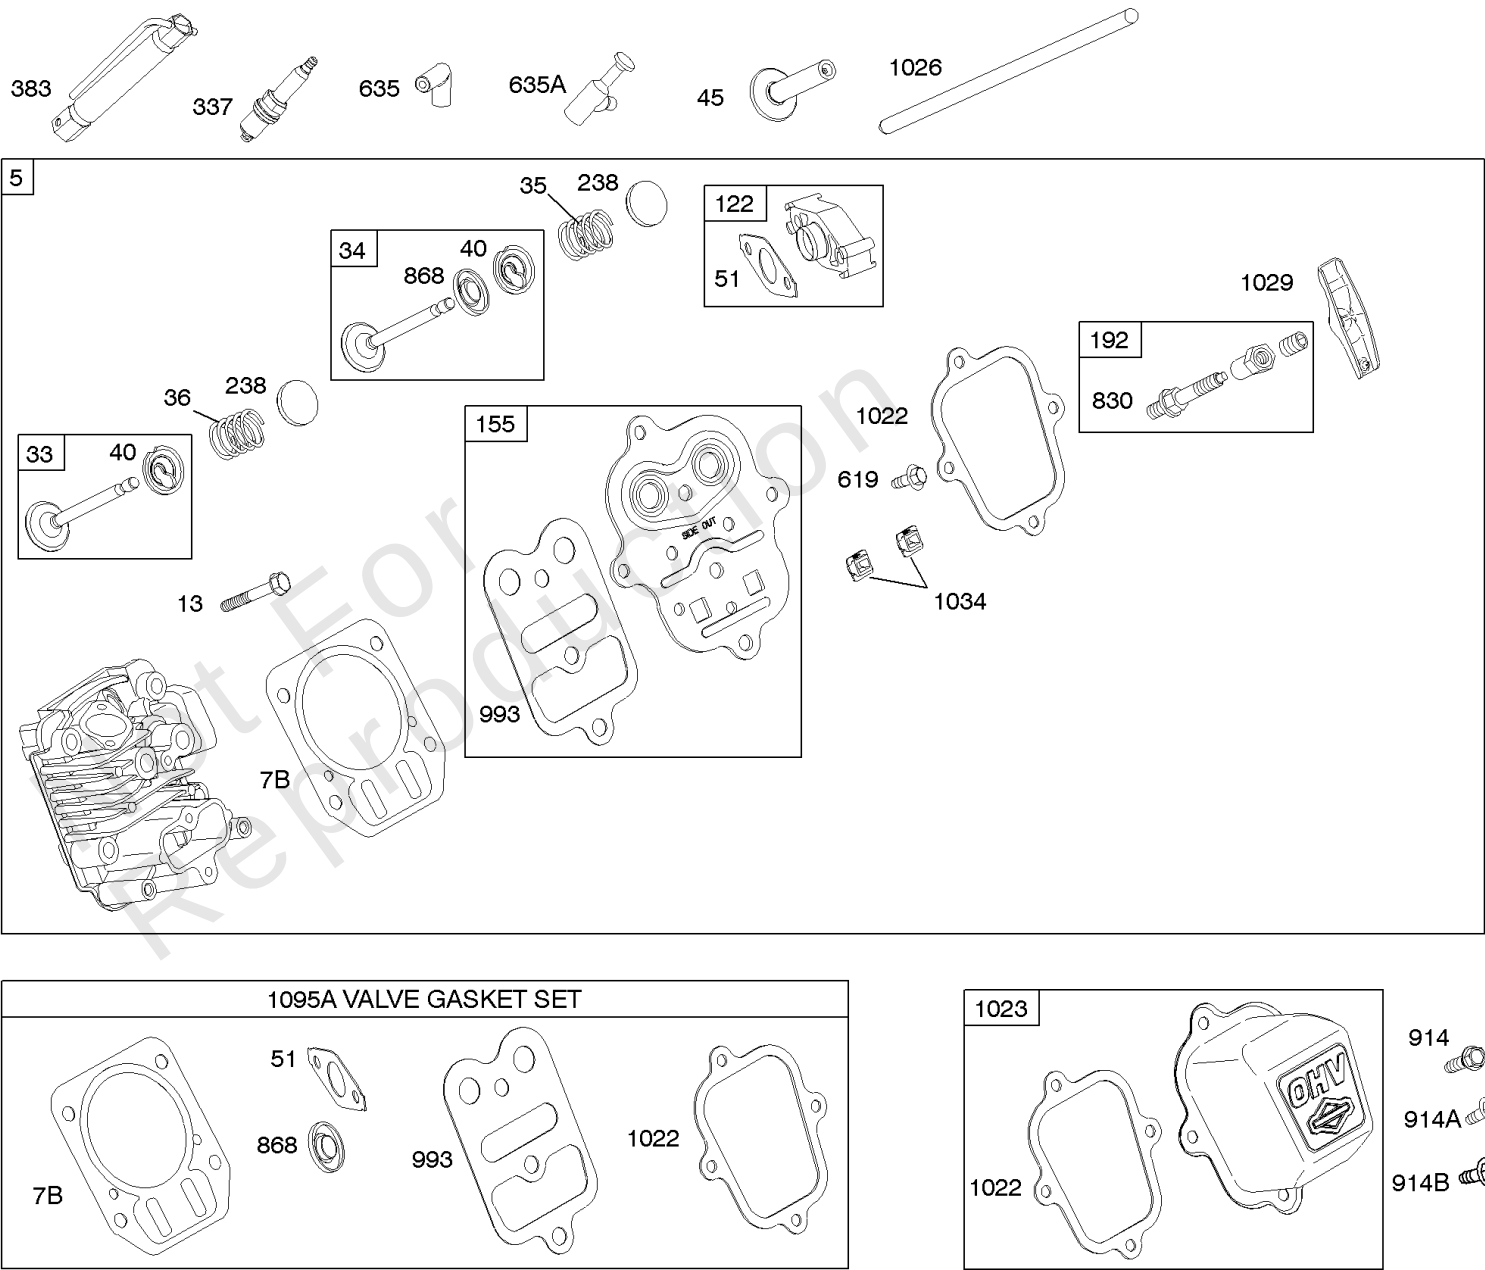 

Cylinder Head

REF NO	PART NO	QTY	DESCRIPTION
993	694088		GASKET, Cylinder Head Plate
1022	691890		GASKET-ROCKER COVER
1023	499924		COVER, Rocker
1026	790287		ROD, Push
1029	691230		ARM, Rocker -(SAE) -Used Before Code Date 09061800
1029	797443		ARM, Rocker -(Metric) -Used After Code Date 09061700
1034	691343		GUIDE, Push Rod
1095A	791798		GASKET SET, Valve

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
--------	---------	-----	-------------

Not For Reproduction

