




Parts Manual

Mfg. No: 187432-0114-E9

Model Components	Page
AIR CLEANER.....	4
BLOWER HOUSING, REWIND STARTER.....	6
CAMSHAFT, CRANKSHAFT.....	8
CARBURETOR.....	10
CONTROL PANEL.....	12
CONTROLS.....	14
CONTROLS, GOVERNOR SPRING.....	16
CRANKCASE COVER, LUBRICATION.....	18
CYLINDER HEAD, VALVES.....	20
CYLINDER, OIL SENSOR GROUP, OPERATOR'S MANUAL, REPAIR MANUAL, WARNING LABEL.....	22
ELECTRIC STARTER.....	24
FLYWHEEL, IGNITION.....	26
FUEL SUPPLY.....	28
FUEL SUPPLY.....	30
GASKET SET - CARBURETOR, GASKET SET - ENGINE, GASKET SET - VALVE, KIT - CARBURETOR	32
IGNITION, OIL SENSOR GROUP.....	34
PISTON, RINGS, CONNECTING ROD.....	36
Replacement Engine - US & Canada.....	38



Not For
Reproduction

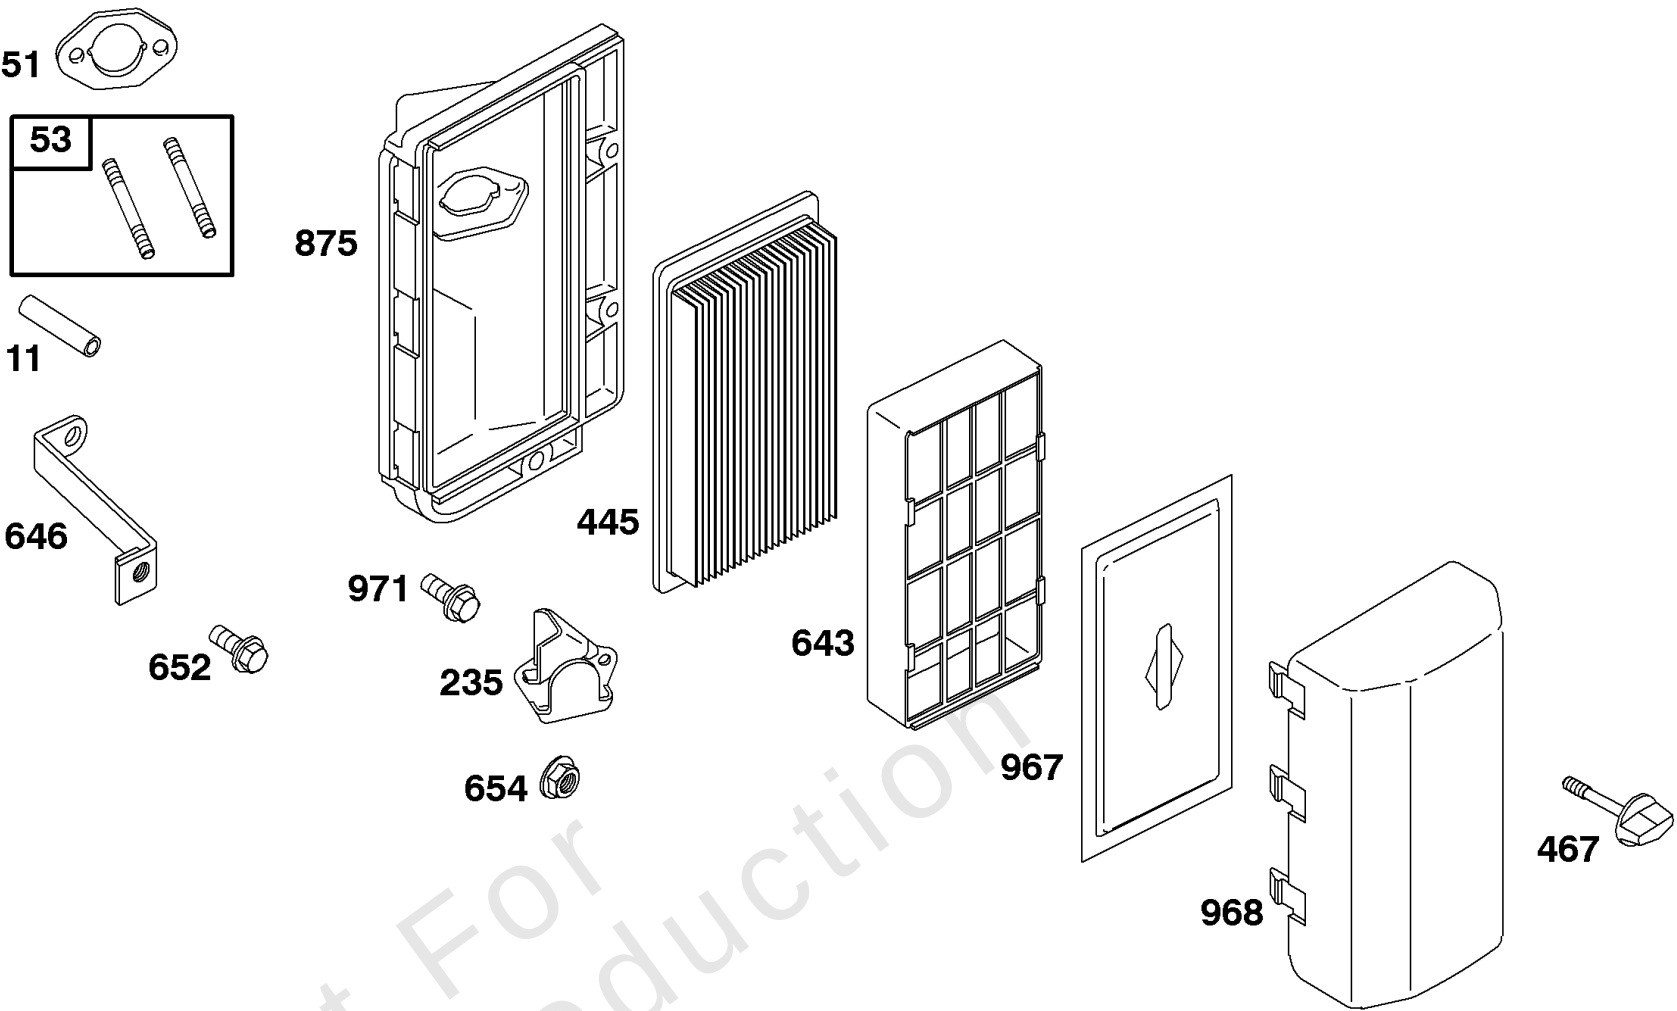

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
11	710115	Tube-Breather	235	710229	Shield-Fuel Spray	654	710068	Nut
50	691368	Manifold-Intake	445	710266	Filter-Air Cleaner			(Carburetor)
		Used on Type No(s).			Cartridge	875	710226	Base-Air Cleaner
		0099, 0399.	467	710113	Knob-Air Cleaner			(Plastic)
51	710235	Gasket-Intake	643	710228	Retainer-Air Filter	968	710227	Cover-Air Cleaner
53	710233	Stud	646	710232	Brace-Air Cleaner	971	710023	Screw
		(Carburetor)(6MM X	652	710234	Screw			(Air Cleaner Base to
		90MM Long)			(Support Bracket)			Carburetor)

AIR CLEANER


REF NO	PART NO	QTY	DESCRIPTION
11	710115		TUBE, Breather
51	710235		GASKET, Intake
53	710233		STUD -(Carburetor) (Carburetor)(6MM X 90MM)
235	710229		SHIELD, Fuel Spray
445	710266		FILTER, A/C Cartridge
467	710113		KNOB, Air Cleaner Cover
643	710228		RETAINER, Air Filter
646	710232		BRACE, Air Cleanr
652	710234		SCREW -(Support Bracket)
654	710068		LOCKNUT -(Carburetor)
875	710226		BASE, Air Cleaner -(Plastic)
967	710268		FILTER, Pre Cleaner
968	710227		COVER, Air Cleaner
971	710023		SCREW -(Air Cleaner Base) (Remote Choke)

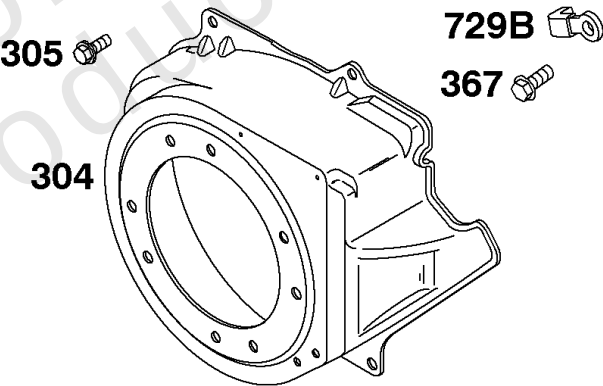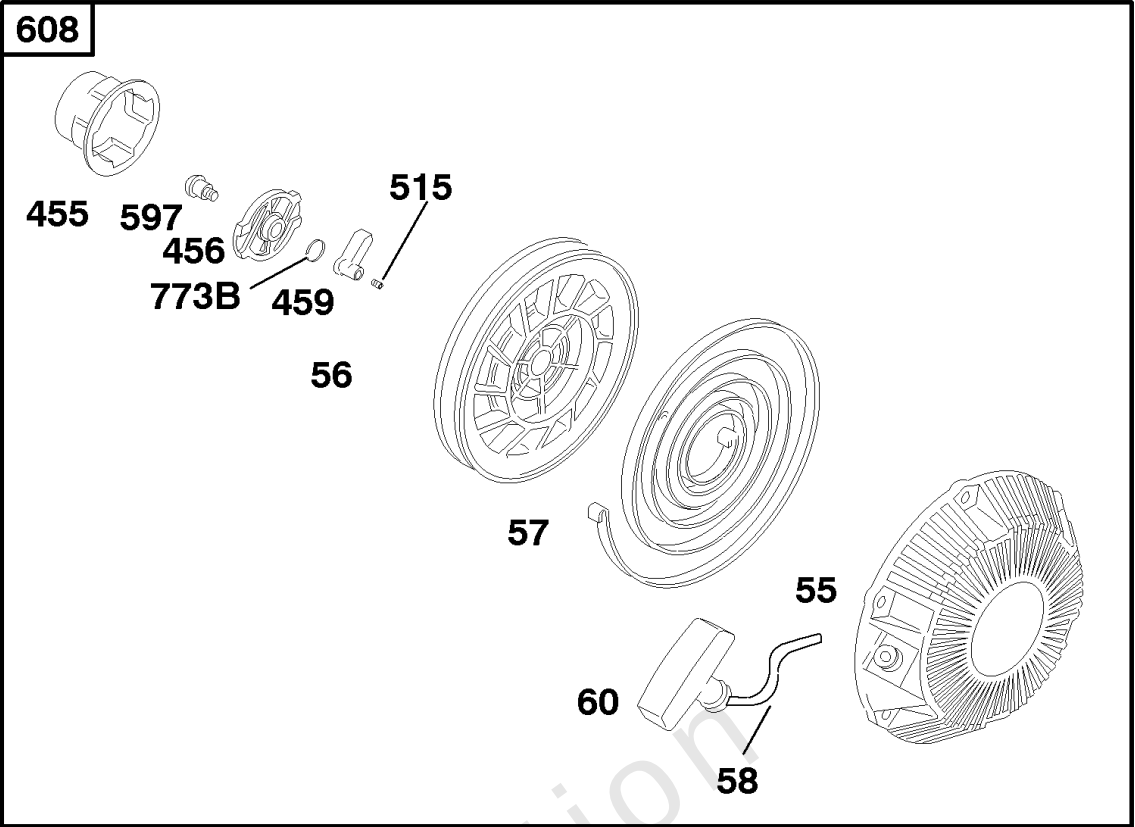

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	691568	Housing-Rewind Starter	304	712024	Housing-Blower (Black) (Rewind Start) Used on Type No(s). 0110, 0114.	456	691529	Plate-Pawl Friction
56	692085	Pulley-Starter			----- Note -----	459	808166	Pawl-Ratchet
57	692086	Spring-Rewind Starter			71025 Housing-Blower (Black) (Electric Start) Used on Type No(s). 0112, 0113.	515	691528	Spring-Pawl
58	66574	Rope-Starter (Cut to Required Length)				597	690876	Screw (Pawl Friction Plate)
59	805957	Insert-Grip	305	710023	Screw (Blower Housing)	608	715204	Starter-Rewind Includes Flywheel Cup, Ref. No. 455)
60	808167	Grip-Starter Rope	367	710023	Screw (Wire Clip)			----- Note -----
65	710074	Screw (Rewind Starter)	455	710366	Cup-Flywheel	729B	710083	Clip-Wire
						773B	690875	Retainer

BLOWER HOUSING, REWIND STARTER

REF NO	PART NO	QTY	DESCRIPTION
55	691568		HOUSING, Rewind Starter
56	692085		PULLEY, Rope Starter
57	692086		SPRING, Rewind Starter
58	66574		ROPE, Starter -(Cut To Required Length)
60	808167		GRIP, Starter Rope
65	710074		SCREW -(Rewind Starter)
304	712024		HOUSING, Blower -(Black)(Rewind Start)
305	710023		SCREW -(Blower Housing)
367	710023		SCREW -(Wire Clip)
455	710366		CUP, Flywheel
456	691529		PLATE, Pawl Friction
459	808166		PAWL, Ratchet
515	691528		SPRING, Pawl
597	690876		SCREW -(Pawl Friction Plate)
608	692102		STARTER, Rewind -(Without Flywheel Cup, Ref. No. 455)
608	715204		STARTER, Rewind -(Includes Flywheel Cup, Ref. No. 455)
729B	710083		CLIP, Wire
773B	690875		RETAINER

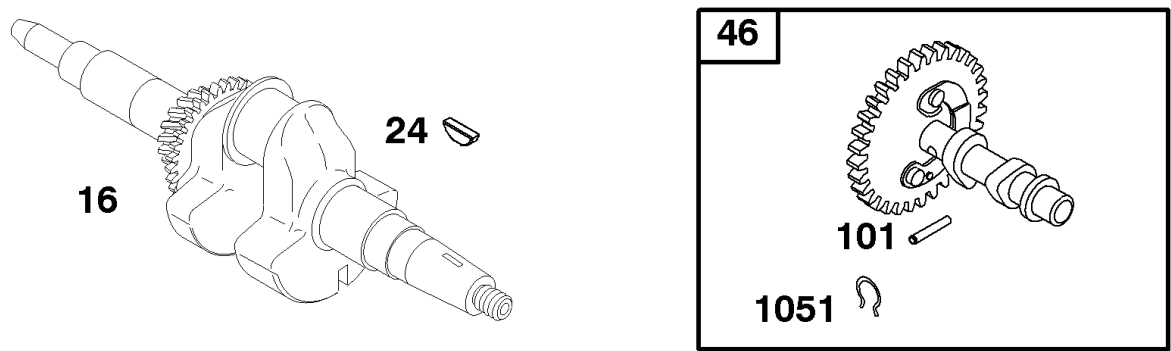


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	716188	Crankshaft (SAE Taper, With Pressed On Helical Gear)	46	716190	Camshaft (Helical Gear With Compression Release)	101	710219	Pin-Shaft
24	710037	Key-Flywheel				1051	710039	Ring-Retaining

CAMSHAFT, CRANKSHAFT

REF NO	PART NO	QTY	DESCRIPTION
24	710037		KEY, Flywheel
46	716190		CAMSHAFT -(Helical Gear With Compression Release)
101	710219		PIN, Shaft
1051	710039		RING, Retaining

Not For Reproduction

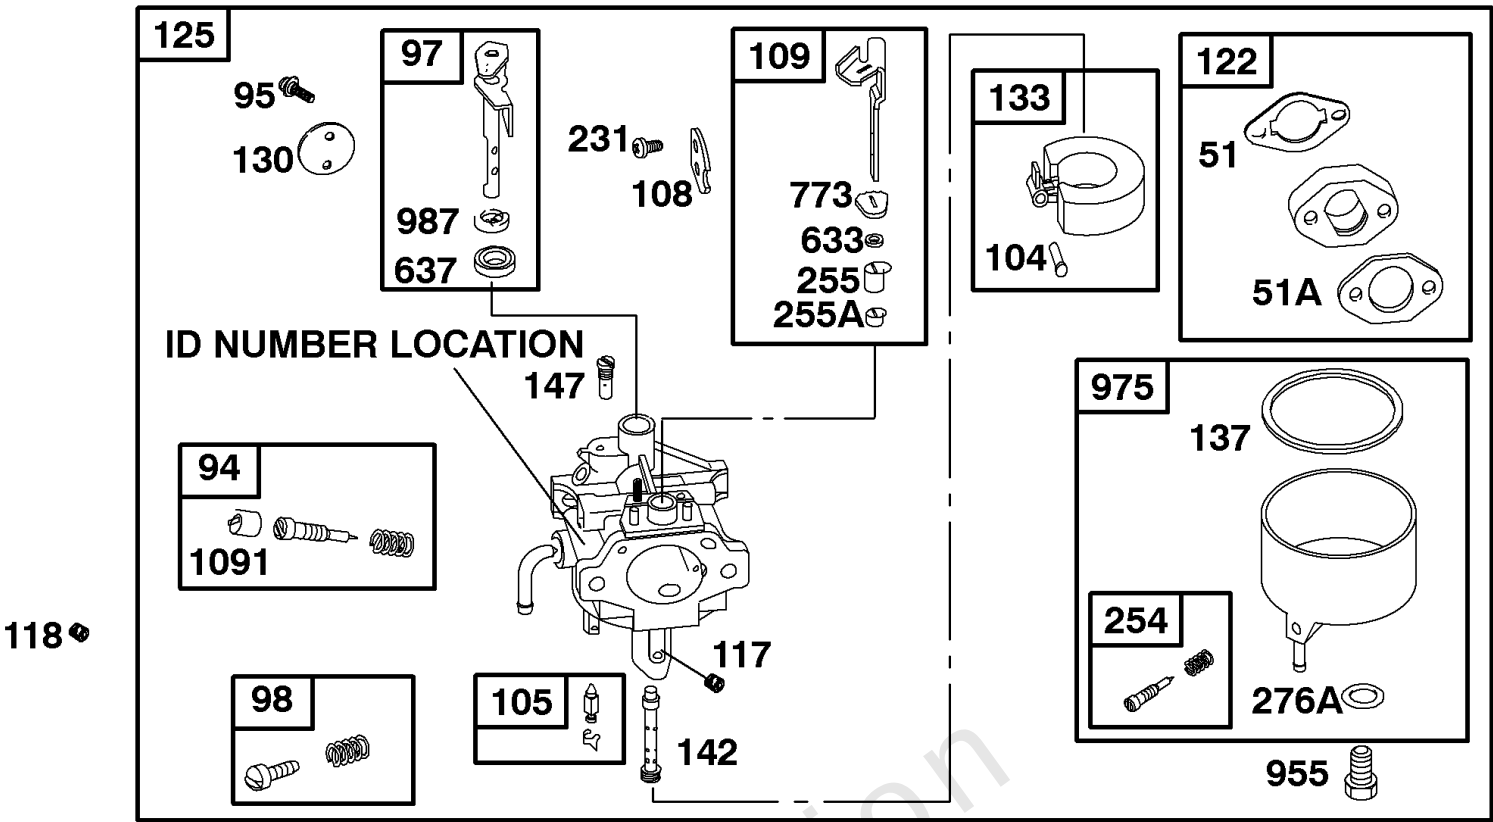


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51◆▲	710235	Gasket-Intake	122	715120	Spacer-Carburetor	276A◆◆		Washer-Sealing (Sold in Kit Only)
51A◆▲	710237	Gasket-Intake	125	715668	Carburetor	633◆◆		Seal-Choke/Throttle Shaft (Sold in Kit Only)
94	715293	Kit-Idle Mixture	130	710323	Valve-Throttle	637◆◆		Washer (Throttle Shaft) (Sold in Kit Only)
95	710859	Screw	133	492283	Float-Carburetor	773◆◆	710175	Retainer
		Throttle Valve)	137◆◆		Gasket-Float Bowl (Sold in Kit Only)	955	94628	Plug-Carburetor
97	715154	Shaft-Throttle	142◆	710317	Nozzle-Carburetor	975	715159	Bowl-Float
98	715074	Kit-Idle Speed	147◆	710321	Jet-Pilot	987◆	710185	Seal-Throttle Shaft
104	231652	Pin-Float Hinge			----- Note -----	1091	710485	Cap-Limiter
105	715155	Valve-Float Needle			710511 Jet-Pilot (High Altitude)			
108	710860	Valve-Choke	231	710683	Screw (Choke Valve)			
109	715157	Shaft-Choke	254	492274	Drain-Carburetor Bowl			
117	710877	Jet-Main (Standard)	255	710177	Bushing-Choke Shaft (Upper)			
118	710512	Jet-Main (High Altitude)	255A	710312	Bushing-Choke Shaft (Lower)			

CARBURETOR

REF NO	PART NO	QTY	DESCRIPTION
51	710235		GASKET, Intake
51A	710237		GASKET, Intake
94	715293		KIT, Idle Mixture
95	710859		SCREW -(Throttle Valve)
97	715154		SHAFT, Throttle
98	715074		KIT, Idle Speed
104	231652		PIN-FLOAT HINGE
105	715155		VALVE, Float Needle
108	710860		VALVE, Choke
109	715157		SHAFT, Choke
117	710877		JET, Main -(Standard)
118	710512		JET, Main -(High Altitude)
122	715120		SPACER, Carburetor
125	715668		CARBURETOR
130	710323		VALVE, Throttle
133	492283		FLOAT, Carburetor
137	-----		Gasket-Float Bowl -(Sold In Kit Only)
142	710317		NOZZLE, Carburetor -(Standard)
147	710321		JET, Pilot
147	710511		JET, Pilot -(High Altitude)
231	710683		SCREW -(Choke Valve)
254	492274		DRAIN, Carburetor Bowl
255	710177		BUSHING, Choke Shaft -(Upper)
255A	710312		BUSHING, Choke Shaft -(Lower)
276A	-----		Washer-Sealing -(Sold In Kit Only)
633	-----		Seal-Choke/Thr Shaft -(Sold In Kit Only)
637	-----		Washer -(Throttle Shaft) (Sold In Kit Only)
773	710175		RETAINER
955	94628		PLUG, Carburetor
975	715159		BOWL, Float
987	710185		SEAL, Choke/Throttle Shaft
1091	710485		CAP, Limiter


1036 EMISSIONS LABEL

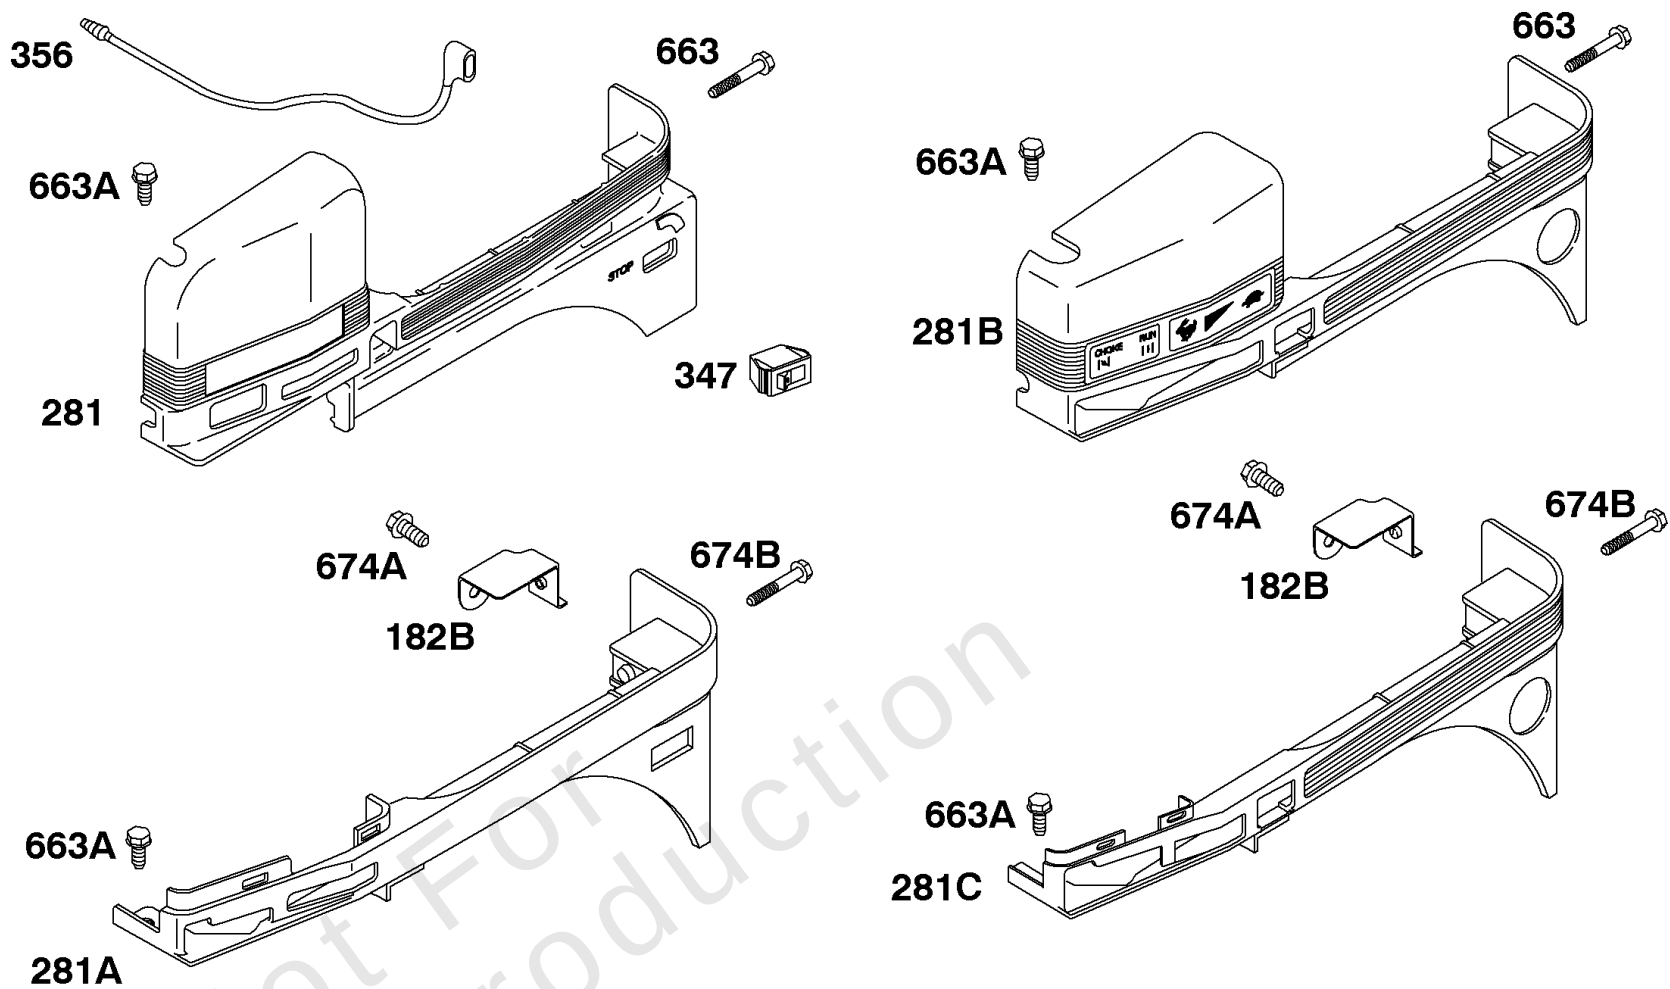

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
182B	710491	Bracket-Fuel Tank	281C	711577	Panel-Control Used on Type No(s). 0112.	663	710095	Screw (Control Panel)
281	711573	Panel-Control Used on Type No(s). 0114.	347	691995	Switch-Rocker (Without Light)	663A	710234	Screw (Control Panel)
281A	711578	Panel-Control Used on Type No(s). 0110.	356	710120	Wire-Stop Used on Type No(s). 0110, 0114.	674A	710023	Screw (Fuel Tank Bracket)
281B	711574	Panel-Control Used on Type No(s). 0113.				674B	710095	Screw (Fuel Tank Bracket)
						1036		Label-Emissions Available From A Briggs & Stratton Authorized Dealer)

CONTROL PANEL

REF NO	PART NO	QTY	DESCRIPTION
182B	710491		BRACKET, Fuel Tank
281	711573		PANEL, Control
347	691995		SWITCH-ROCKER -(Without Light)
356	710120		WIRE, Stop
663	710095		SCREW -(Control Panel)
663A	710234		SCREW -(Control Panel)
674A	710023		SCREW -(Fuel Tank Bracket)
674B	710095		SCREW -(Fuel Tank Bracket)
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)

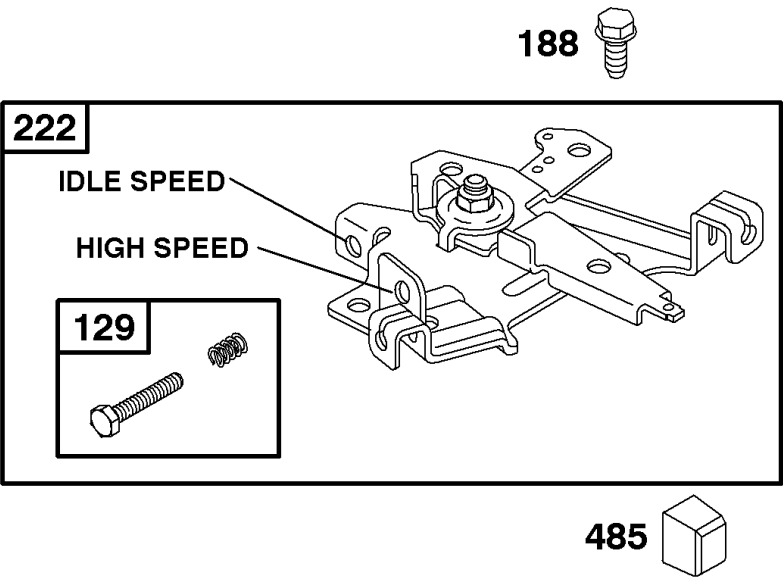

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
129	715170	Screw/Spring-Governor Speed (Idle & High Speed Adjustments)	188	710057	Screw (Control Bracket)	222	715747	Bracket-Control
						485	692295	Knob-Control


CONTROLS

REF NO	PART NO	QTY	DESCRIPTION
129	715170		SCREW -(Governor) (Idle And High Speed Adjustment)
188	710057		SCREW -(Control Bracket)
222	715046		BRACKET, Control
485	692295		KNOB, Air Cleaner Cover

Not For Reproduction

CONTROLS, GOVERNOR SPRING

Mfg. No: 187432-0114-E9

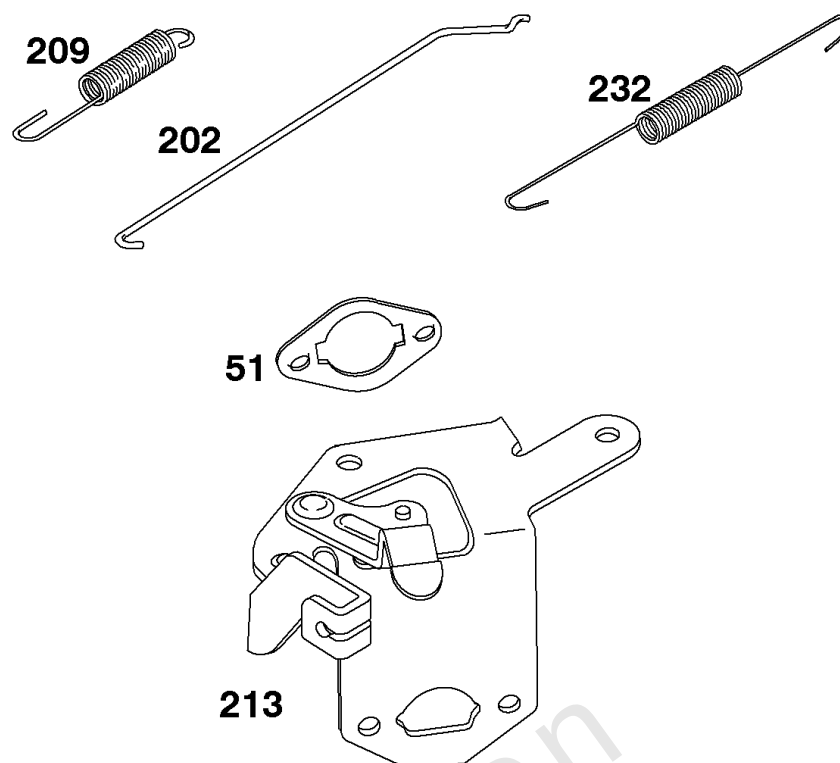


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51 ♦ Δ ★	710235	Gasket-Intake	213	710492	Bracket-Choke Control	232	710241	Spring-Governor Link
202	710240	Link-Mechanical Governor						
209	710875	Spring-Governor						

CONTROLS, GOVERNOR SPRING

REF NO	PART NO	QTY	DESCRIPTION
51	710235		GASKET, Intake
202	710240		LINK, Mechanical Governor
209	710875		SPRING, Governor
213	710492		BRACKET, Choke Control
232	710241		SPRING/LINK, Governor

Not For Reproduction

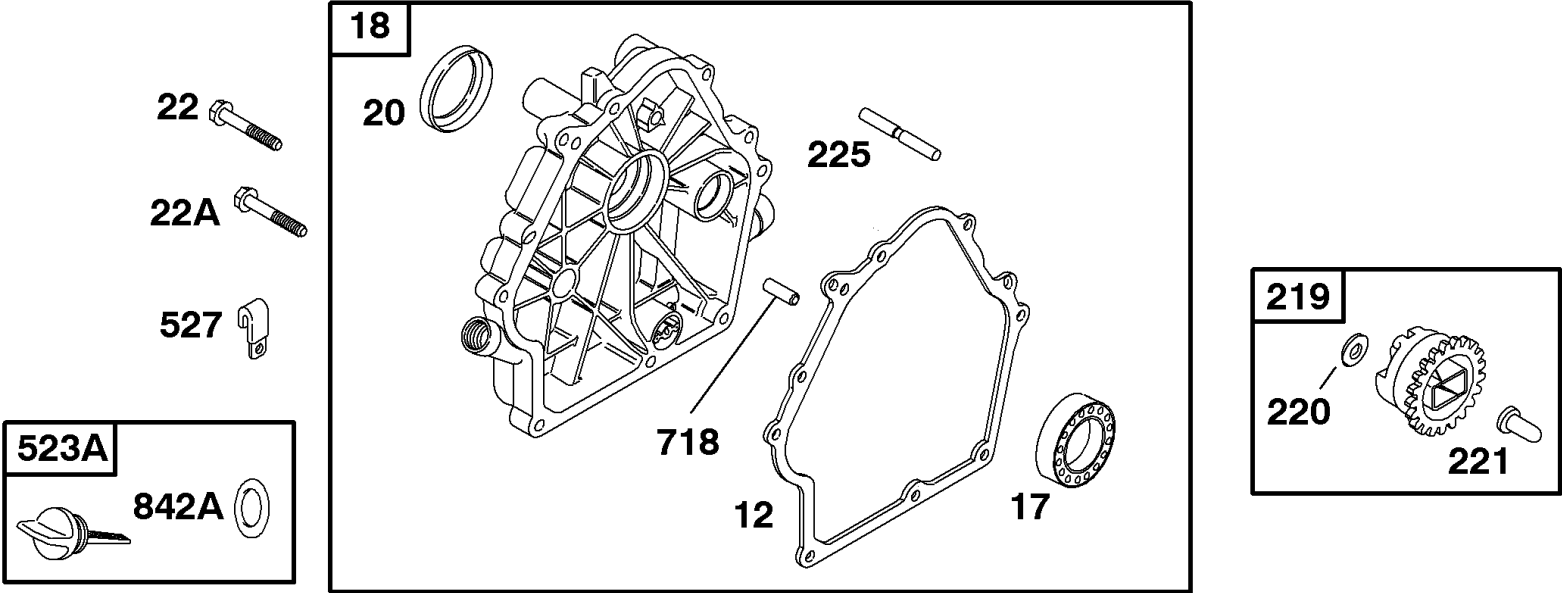


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
12	★710216	Gasket-Crankcase	22	710032	Screw (Crankcase Cover/Sump) (Quantity 8)	221	710872	Cup-Governor (Used After Code Date 99073100). ----- Note ----- 710027 Cup-Governor (Used Before Code Date 99080100).
17	710003	Bearing-Ball	22A	710306	Screw (Crankcase Cover/Sump) (Quantity 1)	225	710028	Shaft-Governor Gear
18	715189	Cover-Crankcase ----- Note ----- 715122 Cover-Crankcase Used on Type No(s). 0072, 0076, 0084, 0127, 0131, 0142, 0272, 0542, 0563, 0566, 0620. 715281 Cover-Crankcase Used on Type No(s). 0099, 0130, 0399. 715282 Cover-Crankcase Used on Type No(s). 0059, 0103, 0259, 0548, 0618. 715745 Cover-Crankcase Used on Type No(s). 0053, 0258, 0616, 0617.	219	715727	Gear-Governor (Used After Code Date 99073100). ----- Note ----- 715679 Gear-Governor (Used Before Code Date 99080100).	523A	715589	Dipstick
						527	710100	Clamp-Tube
						718	710005	Pin-Locating
20	★710215	Seal-Oil (PTO Side)	220	710545	Washer (Governor Gear)	842A	★710218	Seal-O Ring (Dipstick)

CRANKCASE COVER, LUBRICATION

REF NO	PART NO	QTY	DESCRIPTION
12	710216		GASKET, Crankcase
17	710003		BEARING, Ball
18	715189		COVER, Crankcase
20	710215		SEAL, Oil -(PTO Side) (PTO Side)
22	710032		SCREW -(Crankcase Cover/Sump) (Quantity 8)
22A	710306		SCREW -(Crankcase Cover/Sump) (Quantity 1)
219	715679		GEAR, Governor -Used Before Code Date 99080100
219	715727		GEAR, Governor -Used After Code Date 99073100
220	710545		WASHER -(Governor Gear)
221	710027		CUP, Governor -Used Before Code Date 99080100
221	710872		CUP, Governor -Used After Code Date 99073100
225	710028		SHAFT, Governor Gear
523A	715589		DIPSTICK
527	710100		CLAMP, Hose
718	710005		PIN, Locating
842A	710218		WASHER, Sealing -(Dipstick Tube)

CYLINDER HEAD, VALVES



Mfg. No: 187432-0114-E9

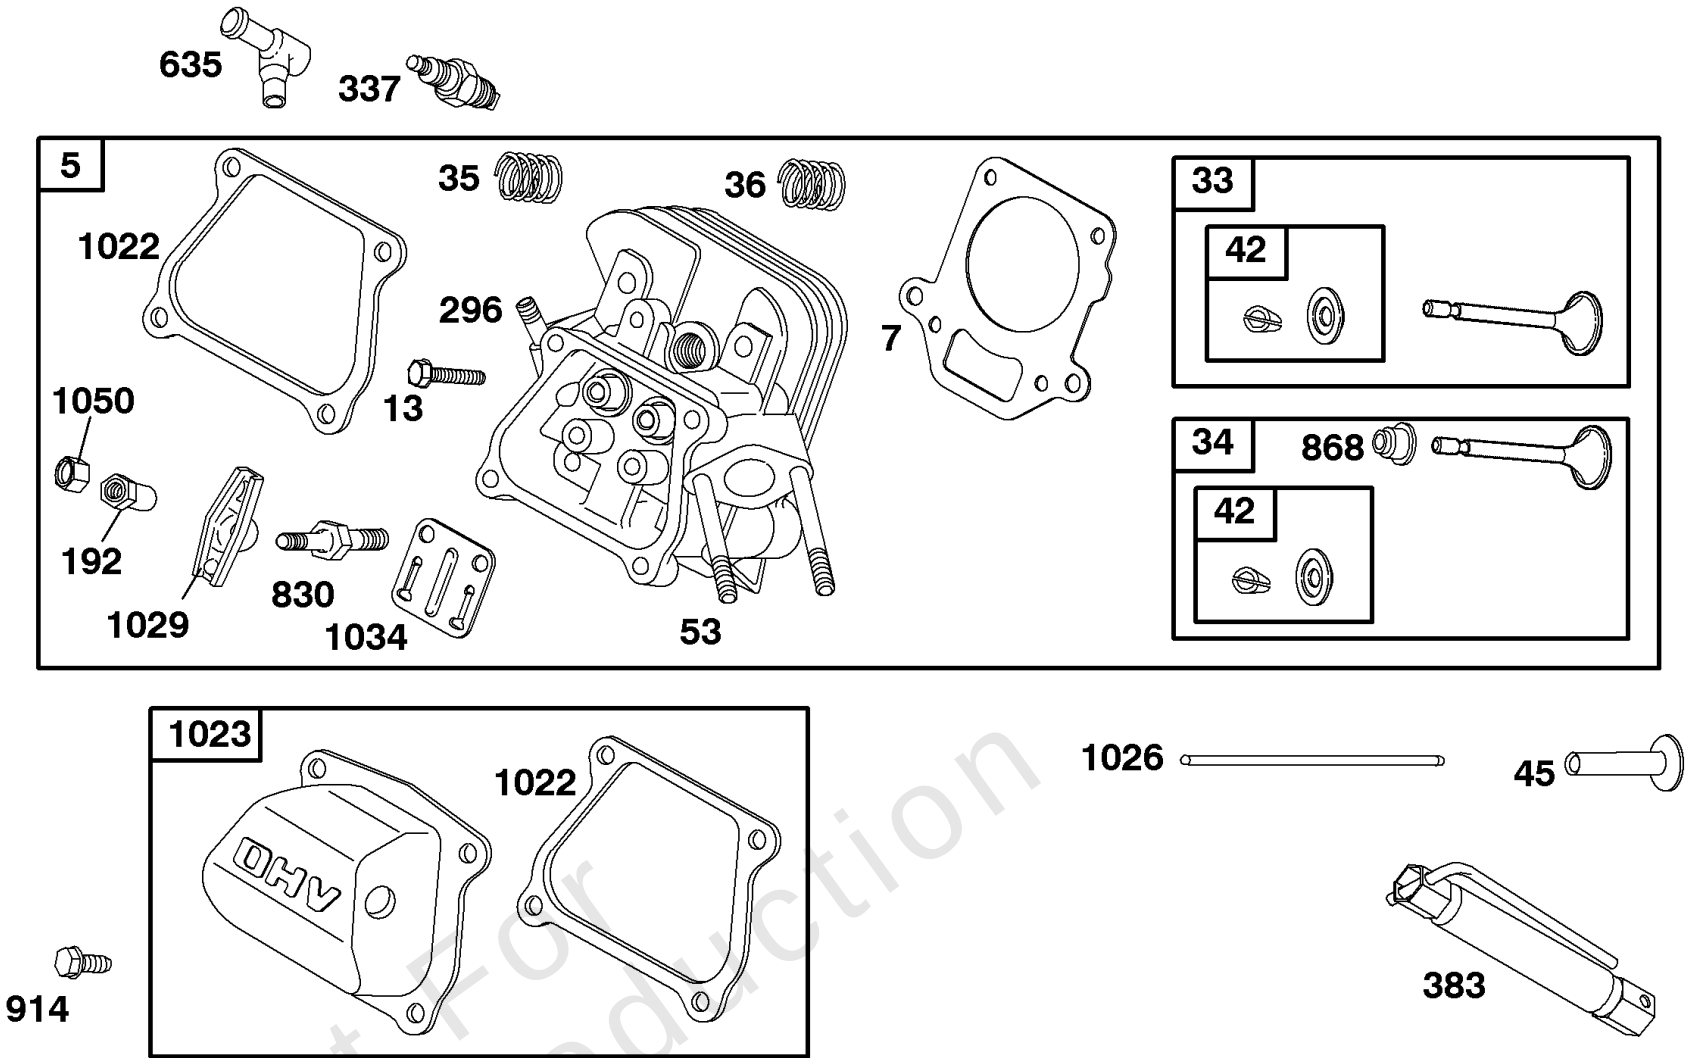

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
5	715089	Head-Cylinder	53	710233	Stud (Carburetor) (6MM X 90MM Long)	914	710023	Screw (Rocker Cover)
7	Δ710205	Gasket-Cylinder Head				1023	715091	Cover-Rocker
13	710204	Screw (Cylinder Head)	192	710015	Adjuster-Rocker Arm	1026	710210	Rod-Push
33	715085	Valve-Exhaust	296	710099	Stud (Muffler)	1029	710014	Arm-Rocker
34	715754	Valve-Intake	337	792015	Plug-Spark	1034	710203	Guide-Push Rod
35	710209	Spring-Valve (Intake)	383	19576S	Wrench-Spark Plug	1050	710007	Nut (Rocker Arm)
36	710209	Spring-Valve (Exhaust)	635	710634	Boot-Spark Plug			
40	710012	Retainer-Valve	830	710016	Stud (Rocker Arm)			
42	715130	Keeper-Valve	868	Δ711634	Seal-Valve (Used After Code Date 01123100). ----- Note ----- Δ710863 Seal-Valve (Used Before Code Date 02010100).			
45	710008	Tappet-Valve						

CYLINDER HEAD, VALVES


REF NO	PART NO	QTY	DESCRIPTION
5	715089		HEAD, Cylinder
7	710205		GASKET, Cylinder Head
13	710204		SCREW -(Cylinder Head)
33	715085		VALVE, Exhaust
34	715754		VALVE, Intake
35	710209		SPRING, Valve -(Intake)
36	710209		SPRING, Valve -(Exhaust)
42	715130		KEEPER, Valve
45	710008		TAPPET, Valve
53	710233		STUD -(Carburetor) (Carburetor)(6MM X 90MM)
192	710015		ADJUSTER. Rocker Arm
296	710099		STUD -(Muffler)
337	792015		PLUG, Spark
383	19576S		WRENCH, Spark Plug
635	710634		BOOT, Spark Plug
830	710016		STUD, Rocker Arm -(Rocker Arm)
868	710863		SEAL, Valve -Used Before Code Date 02010100
868	711634		SEAL, Valve -Used After Code Date 01123100
914	710023		SCREW -(Rocker Cover)
1022	710206		GASKET, Rocker Cover
1023	715091		COVER, Rocker
1026	710210		ROD, Push
1029	710014		ARM, Rocker
1034	710203		GUIDE, Push Rod
1050	710007		ADJUSTER. Rocker Arm -(Rocker Arm)

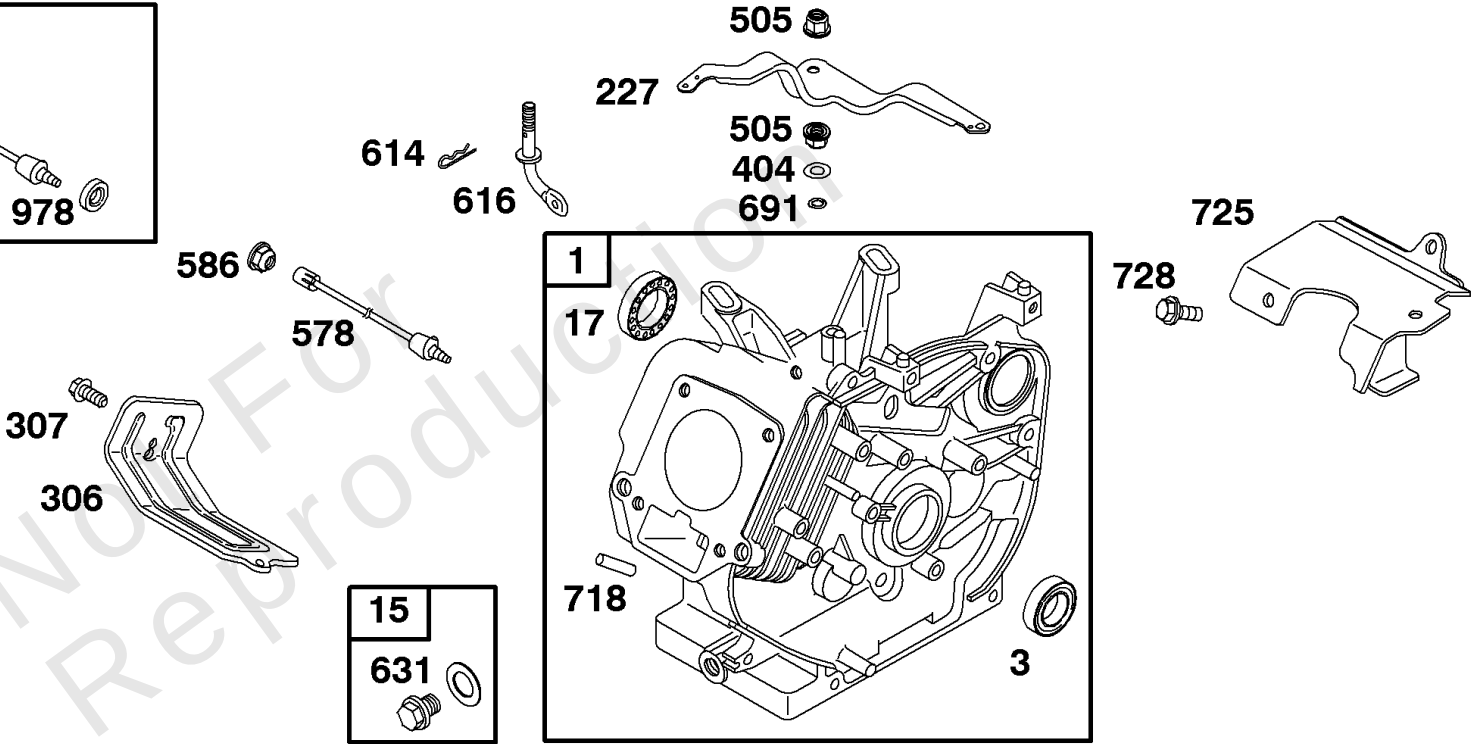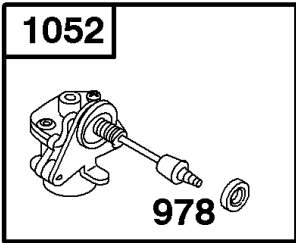

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1058 OPERATOR'S MANUAL								
1	715095	Cylinder Assembly Used on Type No(s). 0110, 0114. ----- Note ----- 715190 Cylinder Assembly Used on Type No(s). 0112, 0113.	227	710238	Lever-Governor Control	616	710050	Crank-Governor
			306	712028	Shield-Cylinder	631	★710004	Washer (Oil Drain Plug)
			307	710023	Screw (Cylinder Shield)	691	★710055	Seal-Governor Shaft
			404	710058	Washer (Governor Crank)	718	710005	Pin-Locating
			505	710059	Nut (Governor Control Lever)	725	712023	Shield-Heat
3	★710000	Seal-Oil (Magneto Side)	578	710308	Wire Assembly	728	710023	Screw (Heat Shield)
15	715000	Plug-Oil Drain	586	710090	Nut (Oil Sensor)	978	★710091	Gasket-Oil Gard®
17	710003	Bearing-Ball	614	710056	Pin-Cotter	1052	715353	Sensor-Oil
						1058	MS3824	Operator's Manual
						1319	794467	Label-Warning
						1330	272147	Repair Manual

CYLINDER, OIL SENSOR GROUP, OPERATOR'S MANUAL, REPAIR MANUAL,


REF NO	PART NO	QTY	DESCRIPTION
1	715095		CYLINDER ASSEMBLY
3	710000		SEAL, Oil -(Magneto Side)
15	715000		PLUG, Oil Drain
17	710003		BEARING, Ball
227	710238		LEVER, Governor Control
306	712028		SHIELD, Cylinder
307	710023		SCREW -(Cylinder Shield)
404	710058		WASHER -(Governor Crank)
505	710059		NUT -(Governor Lever)
578	710308		WIRE ASSEMBLY
586	710090		LOCKNUT -(Oil Sensor)
614	710056		PIN, Cotter
616	710050		CRANK, Governor
631	710004		WASHER -(Oil Drain Plug)
691	710055		SEAL, Governor Shaft
718	710005		PIN, Locating
725	712023		SHIELD, Heat
728	710023		SCREW -(Heat Shield) (Heat Shield)
978	710091		GASKET, Oil Guard
1052	715353		SENSOR, Oil
1058	MS3824		MANUAL, Operator's
1319	794467		LABEL, Warning
1330	272147		MANUAL, Repair

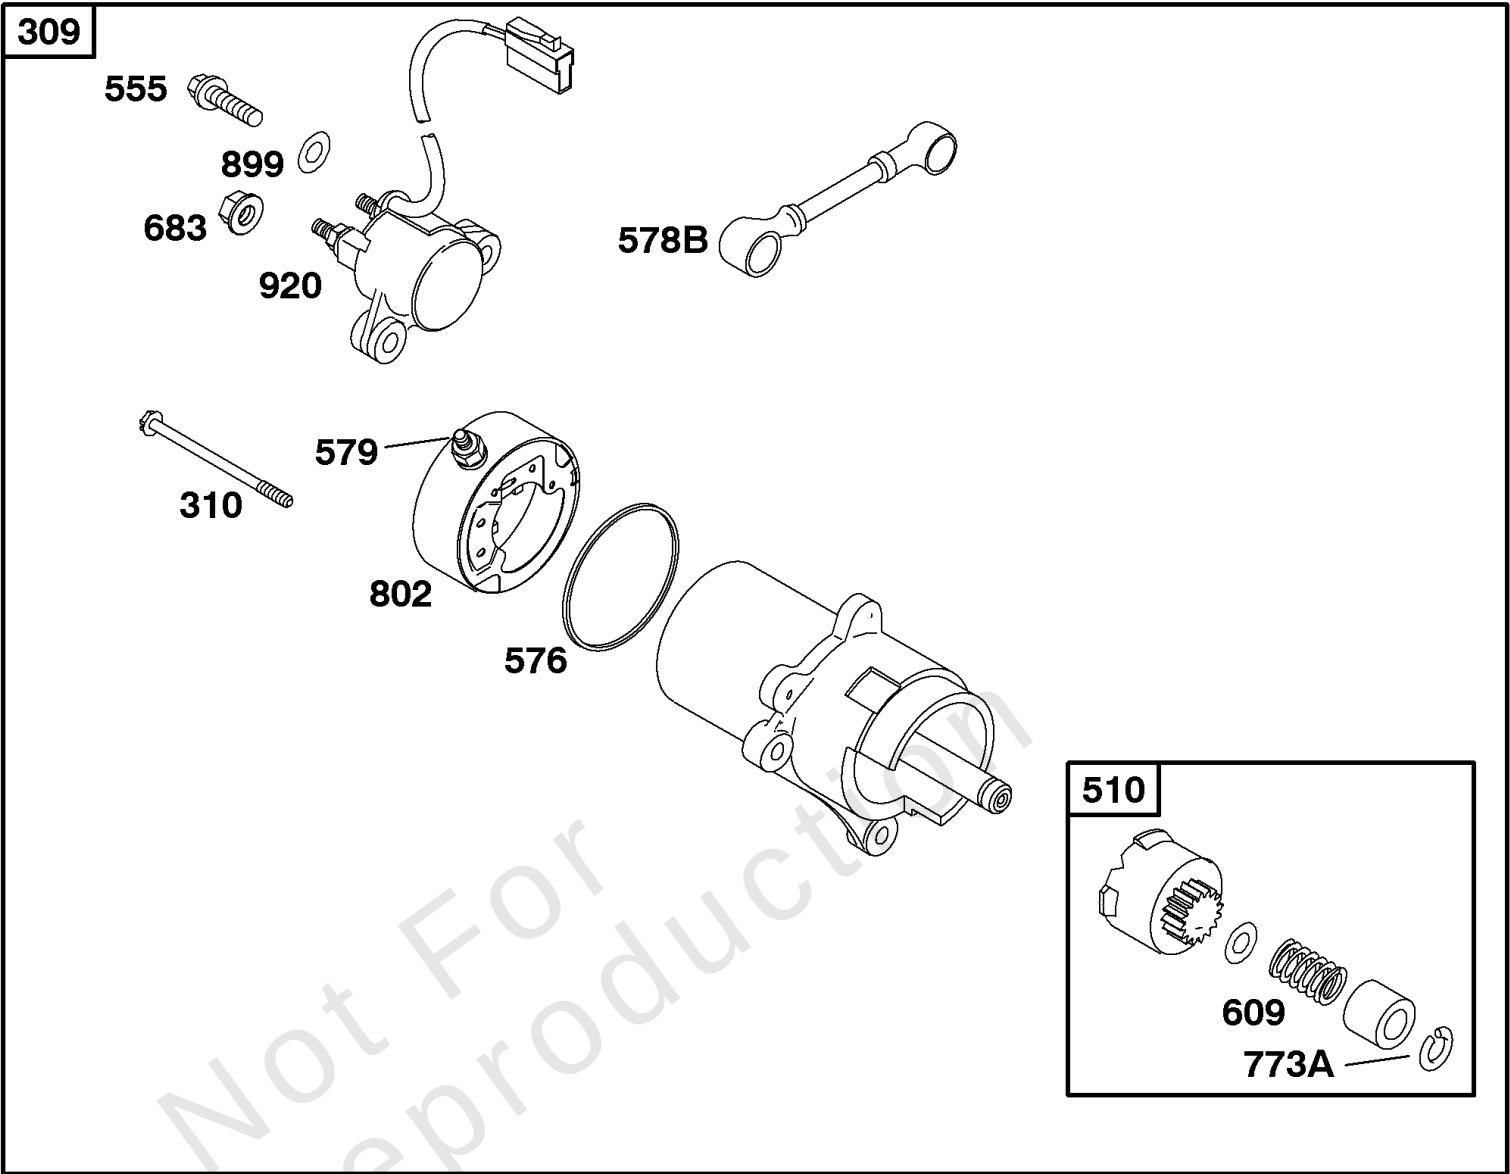

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309	715808	Motor-Starter	578B	715198	Wire Assembly	920	715197	Solenoid-Starter
310	710354	Bolt (Starter Motor)	579	710362	Nut (Starter Cable)	1009	710348	Screw (Starter Motor)
413	710081	Nut (Starter Motor)	609	710357	Spring-Starter Drive			
510	715196	Drive-Starter	683	710362	Nut (Starter Solenoid)			
555	710360	Screw (Starter Solenoid)	773A	710359	Retainer Cap-End (Includes Brush Set)(Order Starter Motor 715808)			
576	710610	Seal-O Ring (Starter Sub Assembly)	802					
			899	710361	Washer (Starter Solenoid)			

ELECTRIC STARTER


REF NO	PART NO	QTY	DESCRIPTION
309	715808		MOTOR, Starter
310	710354		SCREW -(Starter Motor)
413	710081		NUT -(Starter Motor)
510	715196		DRIVE, Starter
555	710360		SCREW -(Starter Solenoid)
576	710610		SEAL, O-Ring -(Starter Sub Assembly)
578B	715198		WIRE ASSEMBLY
579	710362		NUT -(Starter Cable)
609	710357		SPRING, Starter Drive
683	710362		NUT -(Starter Solenoid)
773A	710359		RETAINER
802	-----		Cap-End -(Includes Brush Set)(Order Starter Motor 715808)
899	710361		WASHER -(Starter Solenoid)
920	715197		SOLENOID, Starter
1009	710348		SCREW -(Starter Motor)

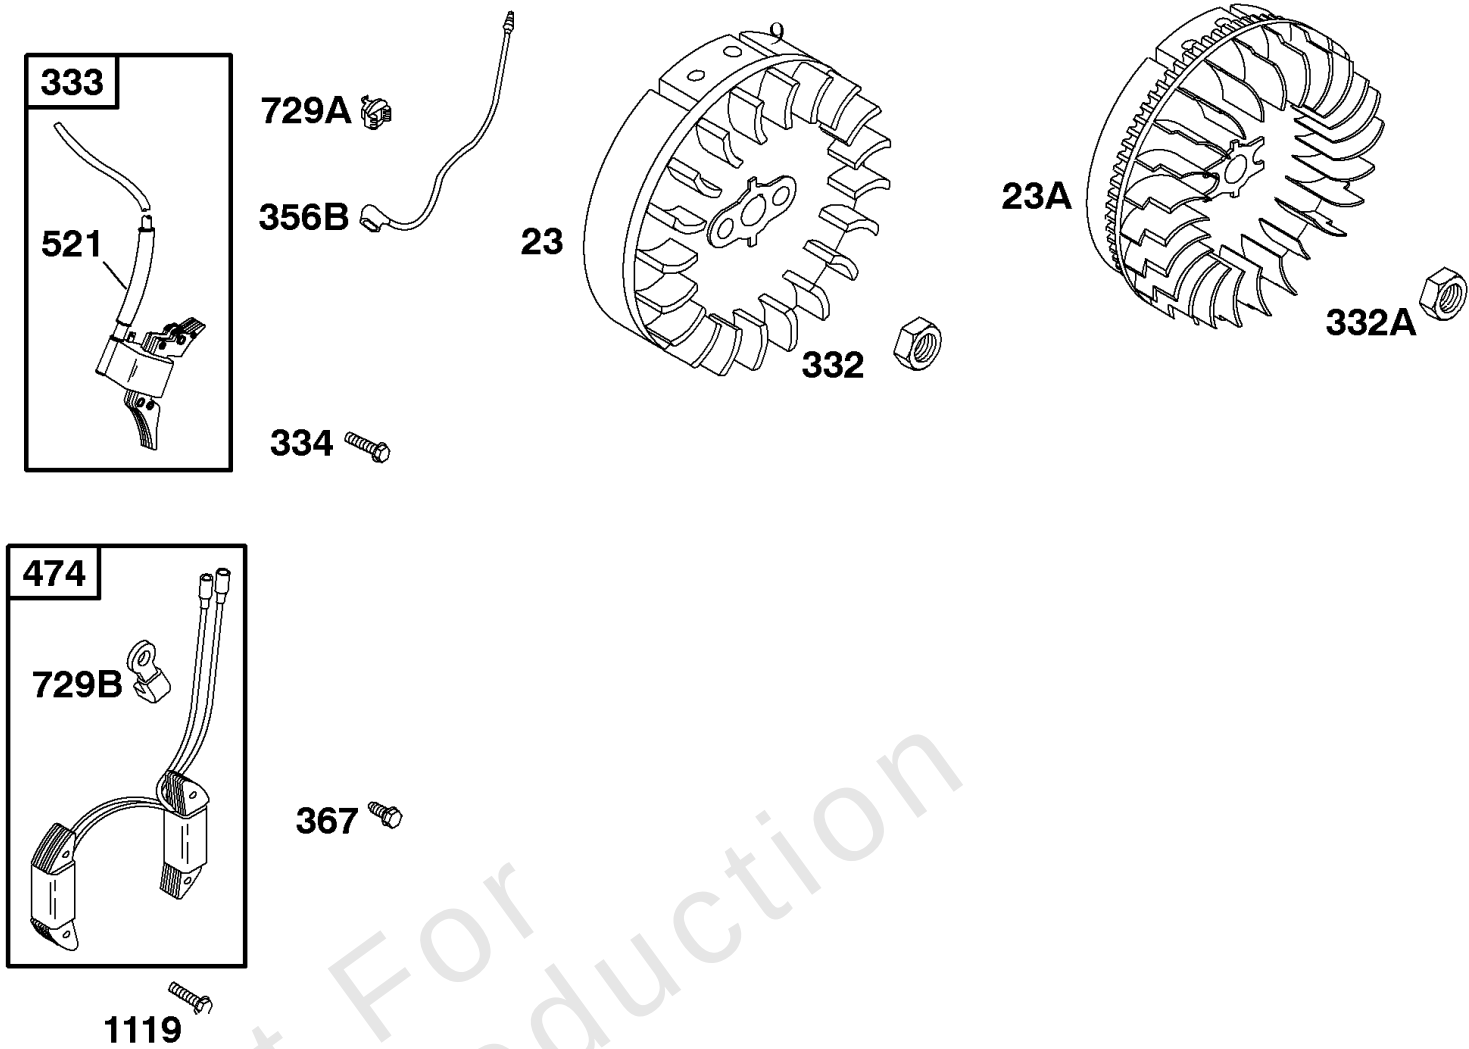

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23	710224	Flywheel Used on Type No(s). 0110, 0114.	333	715118	Armature-Magneto Used on Type No(s). 0110, 0114.	521	710045	Shield-Cable
23A	715748	Flywheel Used on Type No(s). 0112, 0113.	----- Note ----- 715192 Armature-Magneto Used on Type No(s). 0112, 0113.			729A	710046	Clip-Wire
332	710048	Nut (Flywheel)	334	710047	Screw (Magneto Armature)	729B	710083	Clip-Wire
332A	710345	Nut (Flywheel)	356B	710324	Wire-Stop	1119	710047	Screw (Alternator)
			367	710023	Screw (Wire Clip)			
			474	715255	Alternator Used on Type No(s). 0112, 0113.			

FLYWHEEL, IGNITION





REF NO	PART NO	QTY	DESCRIPTION
23	710224		FLYWHEEL
332	710048		NUT -(Flywheel)
332A	710345		NUT -(Flywheel)
334	710047		SCREW -(Magneto Armature)
367	710023		SCREW -(Wire Clip)
521	710045		SHIELD, Cable
729A	710046		CLIP, Wire
729B	710083		CLIP, Wire
1119	710047		SCREW -(Alternator)

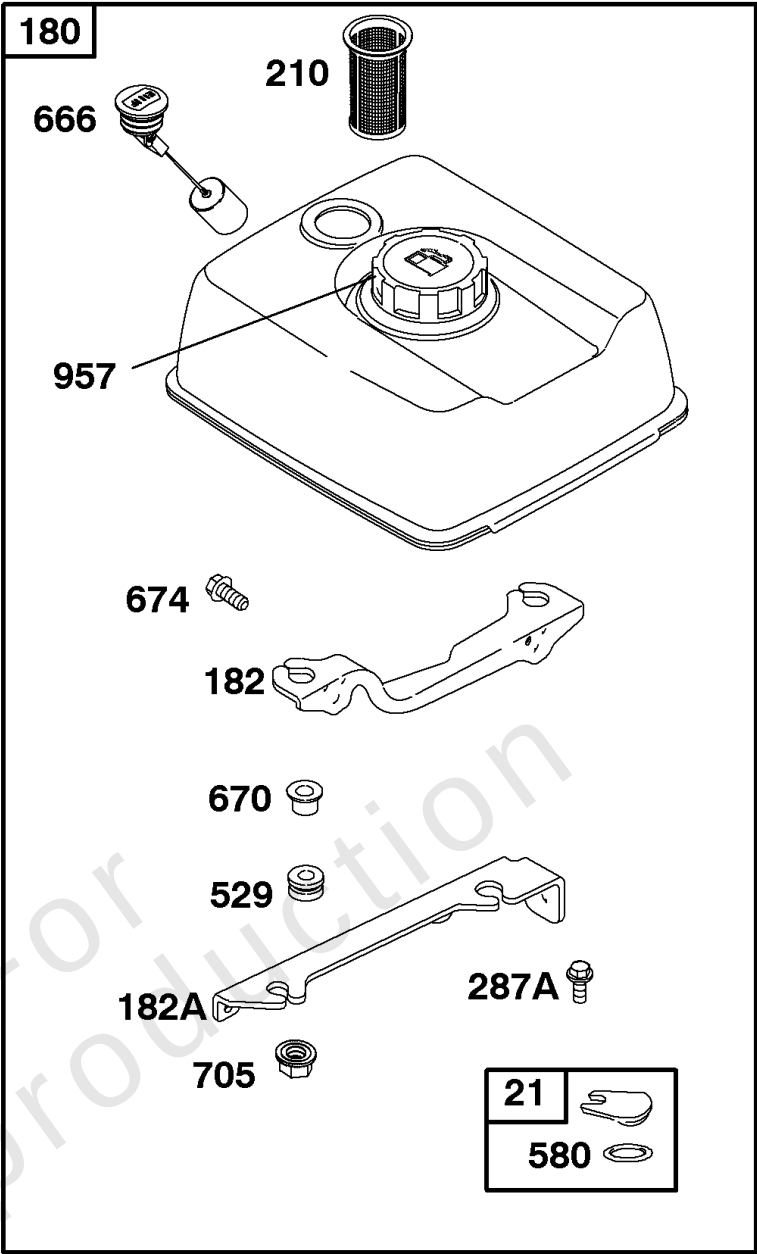

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
21	493668	Cap-Oil Fill	529	710246	Grommet	674	710248	Screw
180	716177	Tank-Fuel (Metal Fuel Tank)	580	280854	Seal-O Ring (Oil Fill Cap)			(Fuel Tank Bracket)
182	710244	Bracket-Fuel Tank	666	710243	Gauge-Fuel	705	710068	Nut
182A	710795	Bracket-Fuel Tank	670	710247	Spacer-Fuel Tank			(Fuel Tank)
210	710065	Strainer-Fuel				957	710490	Cap-Fuel Tank
287A	710234	Screw (Dipstick Tube)						

FUEL SUPPLY





REF NO	PART NO	QTY	DESCRIPTION
21	493668		CAP, Oil Fill
180	716177		TANK, Fuel -(Metal) (Metal Fuel Tank)
182	710244		BRACKET, Fuel Tank
182A	710795		BRACKET, Fuel Tank
210	710065		STRAINER-FUEL
287A	710234		SCREW -(Dipstick Tube) (Dipstick Tube)
529	710246		GROMMET
580	280854		SEAL, O-Ring -(Oil Fill Cap)
666	710243		GAUGE, Fuel
670	710247		SPACER, Fuel Tank
674	710248		SCREW -(Fuel Tank Bracket)
705	710068		LOCKNUT -(Fuel Tank)
957	710490		CAP, Fuel Tank -(Plastic)

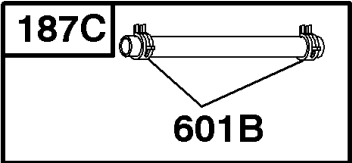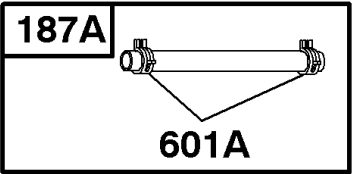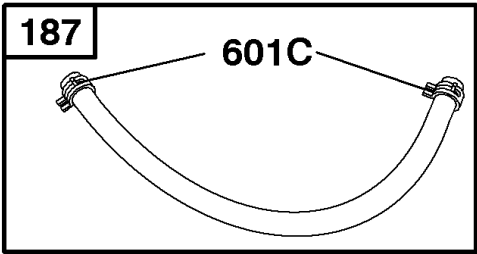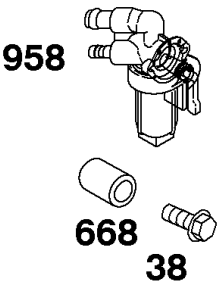

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
38	710160	Screw (Shut Off Valve)	187A	716122	Line-Fuel (4mm Inside Diameter) (Cut To Required Length)	601A	711549	Clamp-Hose
187	716126	Line-Fuel (8mm Inside Diameter) (Cut To Required Length)	187C	716123	Line-Fuel (6mm Inside Diameter) (Cut To Required Length)	601B	711925	Clamp-Hose
						601C	711998	Clamp-Hose
						668	710159	Spacer
						958	716111	Valve-Fuel Shut Off (Plastic)

FUEL SUPPLY


REF NO	PART NO	QTY	DESCRIPTION
38	710160		SCREW -(Shut Off Valve) (Shut Off Valve)
187	716126		LINE-FUEL -(8mm Inside Diameter)(Cut To Required Length)
187A	716122		LINE, Fuel -(4mm Inside Diameter)(Cut To Required Length)
187C	716123		LINE, Fuel -(6mm ID)(Cut To Required Length)
601A	711549		CLAMP, HOSE
601B	711925		CLAMP, Hose
601C	711998		CLAMP, Hose
668	710159		SPACER, Fuel Tank
958	716111		VALVE, Fuel Shut Off -(Plastic)

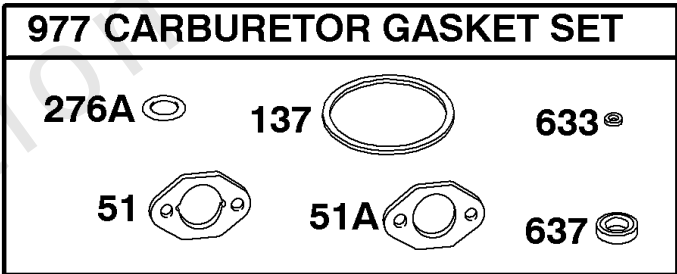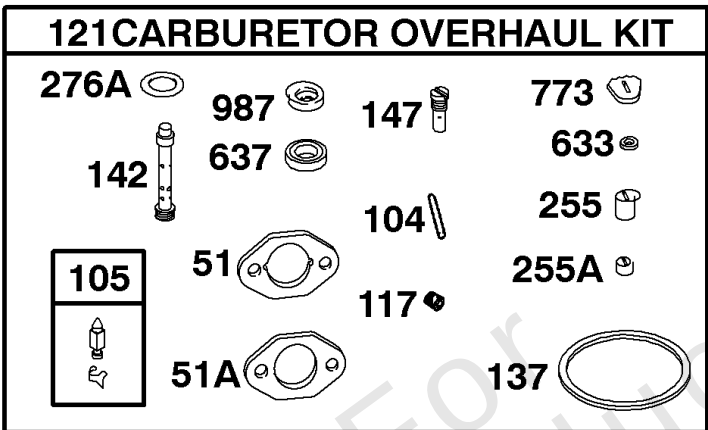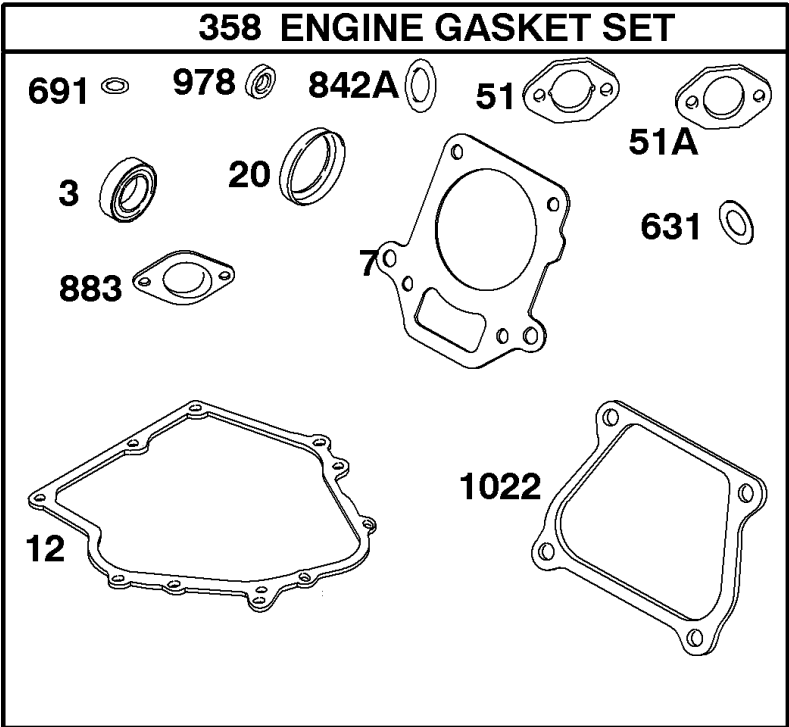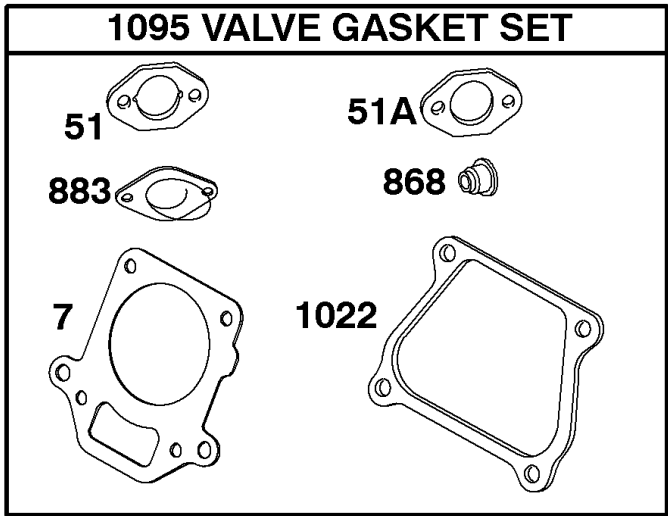

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	★710000	Seal-Oil (Magneto Side)	137	◆◆	Gasket-Float Bowl (Sold in Kit Only)	691	★710055	Seal-Governor Shaft
7	Δ★710205	Gasket-Cylinder Head	142	●710317	Nozzle-Carburetor	773	●710175	Retainer
12	★710216	Gasket-Crankcase	147	●710321	Jet-Pilot	842A	★710218	Seal-O Ring
20	★710215	Seal-Oil (PTO Side)	255	●710177	Bushing-Choke Shaft (Upper)	868	Δ711634	Seal-Valve (Used After Code Date 01123100).
51	◆Δ★710235	Gasket-Intake	255A	●710312	Bushing-Choke Shaft (Lower)	----- Note ----- Δ710863 Seal-Valve (Used Before Code Date 02010100).		
51A	◆Δ★710237	Gasket-Intake	276A	◆◆	Washer-Sealing (Sold in Kit Only)	883	Δ★710250	Gasket-Exhaust
104	●231652	Pin-Float Hinge	358	715124	Gasket Set-Engine	977	715160	Gasket Set-Carburetor
105	●715155	Valve-Float Needle	464	★710069	Seal-O Ring (Fuel Shut Off Valve)	978	★710091	Gasket-Oil Gard®
117	●710877	Jet-Main	631	★710004	Washer (Oil Drain Plug)	987	●710185	Seal-Throttle Shaft
121	715156	Kit-Carburetor Overhaul	633	◆◆	Seal-Choke/Throttle Shaft (Sold in Kit Only)	1022	Δ★710206	Gasket-Rocker Cover
			637	◆◆	Washer (Throttle Shaft) (Sold in Kit Only)	1095	716025	Gasket Set-Valve (Used After Code Date 01123100).
						----- Note ----- 710695 Gasket Set -Valve (Used Before Code Date 02010100).		

GASKET SET - CARBURETOR, GASKET SET - ENGINE, GASKET SET - VALVE, KIT -


REF NO	PART NO	QTY	DESCRIPTION
3	710000		SEAL, Oil -(Magneto Side)
7	710205		GASKET, Cylinder Head
12	710216		GASKET, Crankcase
20	710215		SEAL, Oil -(PTO Side) (PTO Side)
51	710235		GASKET, Intake
51A	710237		GASKET, Intake
104	231652		PIN-FLOAT HINGE
105	715155		VALVE, Float Needle
117	710877		JET, Main -(Standard)
121	715156		KIT, Carburetor Overhaul
137	-----		Gasket-Float Bowl -(Sold In Kit Only)
142	710317		NOZZLE, Carburetor -(Standard)
147	710321		JET, Pilot
147	710511		JET, Pilot -(High Altitude)
255	710177		BUSHING, Choke Shaft -(Upper)
255A	710312		BUSHING, Choke Shaft -(Lower)
276A	-----		Washer-Sealing -(Sold In Kit Only)
358	715124		GASKET SET, Engine
631	710004		WASHER -(Oil Drain Plug)
633	-----		Seal-Choke/Thr Shaft -(Sold In Kit Only)
637	-----		Washer -(Throttle Shaft) (Sold In Kit Only)
691	710055		SEAL, Governor Shaft
773	710175		RETAINER
842A	710218		WASHER, Sealing -(Dipstick Tube)
868	711634		SEAL, Valve -Used After Code Date 01123100
868	710863		SEAL, Valve -Used Before Code Date 02010100
883	710250		GASKET, Exhaust
977	715160		SET, Carburetor Gasket
978	710091		GASKET, Oil Guard
987	710185		SEAL, Choke/Throttle Shaft
1022	710206		GASKET, Rocker Cover
1095	716025		GASKET SET, Valve -Used After Code Date 01123100
1095	715695		GASKET SET, Valve -Used Before Code Date 02010100

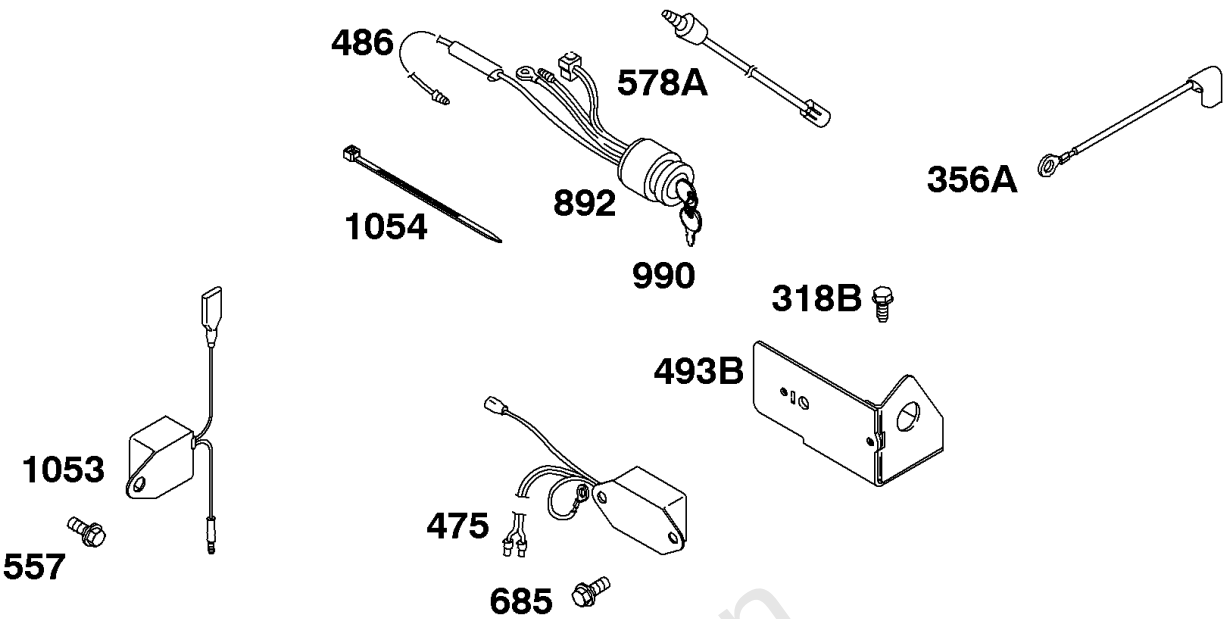

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
318B	710074	Screw (Mounting Bracket)	486	712050	Fuse	685	710089	Screw (Rectifier)
356A	710087	Wire-Stop Used on Type No(s). 0110, 0114.	493B	710363	Bracket-Mounting	892	715199	Switch-Key
475	715200	Rectifier	557	710781	Screw (Oil Gard® Module)	990	711327	Key Set
			578A	715202	Wire Assembly	1053	710305	Module-Oil Gard®
						1054	710349	Tie-Cable

IGNITION, OIL SENSOR GROUP

REF NO	PART NO	QTY	DESCRIPTION
318B	710074		SCREW -(Mounting Bracket)
356A	710087		WIRE, Stop
475	715200		RECTIFIER
486	712050		FUSE
493B	710363		BRACKET, Mounting
557	710781		SCREW -(Oil Gard Module)
578A	715202		WIRE ASSEMBLY
685	710089		SCREW -(Rectifier)
892	715199		SWITCH, Key
990	711327		SET, Key
1053	710305		MODULE, Oil Guard
1054	710349		TIE, Cable

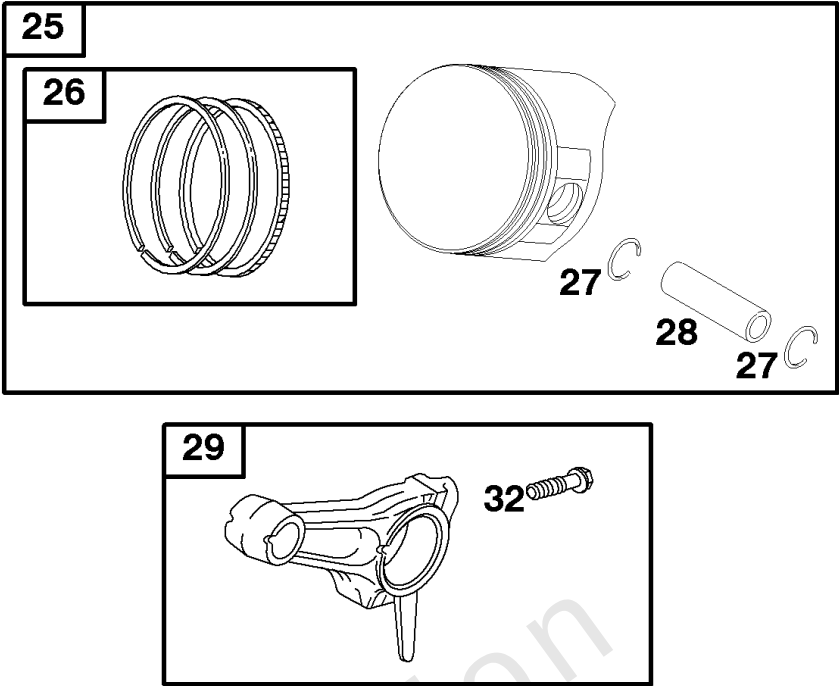

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
25	716191	Piston Assembly (Standard)	26	715111	Ring Set (Standard)	28	711920	Pin-Piston
		----- Note -----			----- Note -----	29	715106	Rod-Connecting (Standard)
	716192	Piston Assembly (0.50 mm Oversize)		715113	Ring Set (0.50 mm Oversize)	32	710221	Screw (Connecting Rod)
			27	710220	Lock-Piston Pin			

PISTON, RINGS, CONNECTING ROD

REF NO	PART NO	QTY	DESCRIPTION
25	716191		PISTON ASSEMBLY -(Standard)
25	716192		PISTON ASSEMBLY -(0.50mm Oversize)
26	715111		SET, Ring -(Standard)
26	715113		SET, Ring -(0.50mm Oversize)
27	710220		LOCK, Piston Pin
28	711920		PIN, Piston
29	715106		ROD, Connecting -(Standard)
32	710221		SCREW -(Connecting Rod)

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	1854320270	1	Replacement Engine
	497640	1	Replacement Short Block
	-----		Top No-Load Speed: 3150 -Trim: ALL
	-----		Service Note: For all Go-Karts use only a Model 136200 series engine as a replacement, regardless of the original Model.
	-----		Service Note: Transfer Governor Spring to replacement engine.
	-----		Service Note: Transfer Muffler and/or Spark Arrester Assembly from the original engine if suitable for additional service or add new parts as required
	-----		Service Note: Transfer the Blower Housing to the replacement engine.

