

 


Parts Manual

Mfg. No: 190402-0757-99

Model Components	Page
Blower Hsg,Flywheels,Screen.....	4
Cyl,Crankcase,Piston,Control.....	8
Electric Starters.....	18
Electric Starters.....	24
Fuel Tank,Sno-Gard,Primer.....	30
Replacement Engine - US & Canada.....	36

Not For
Reproduction

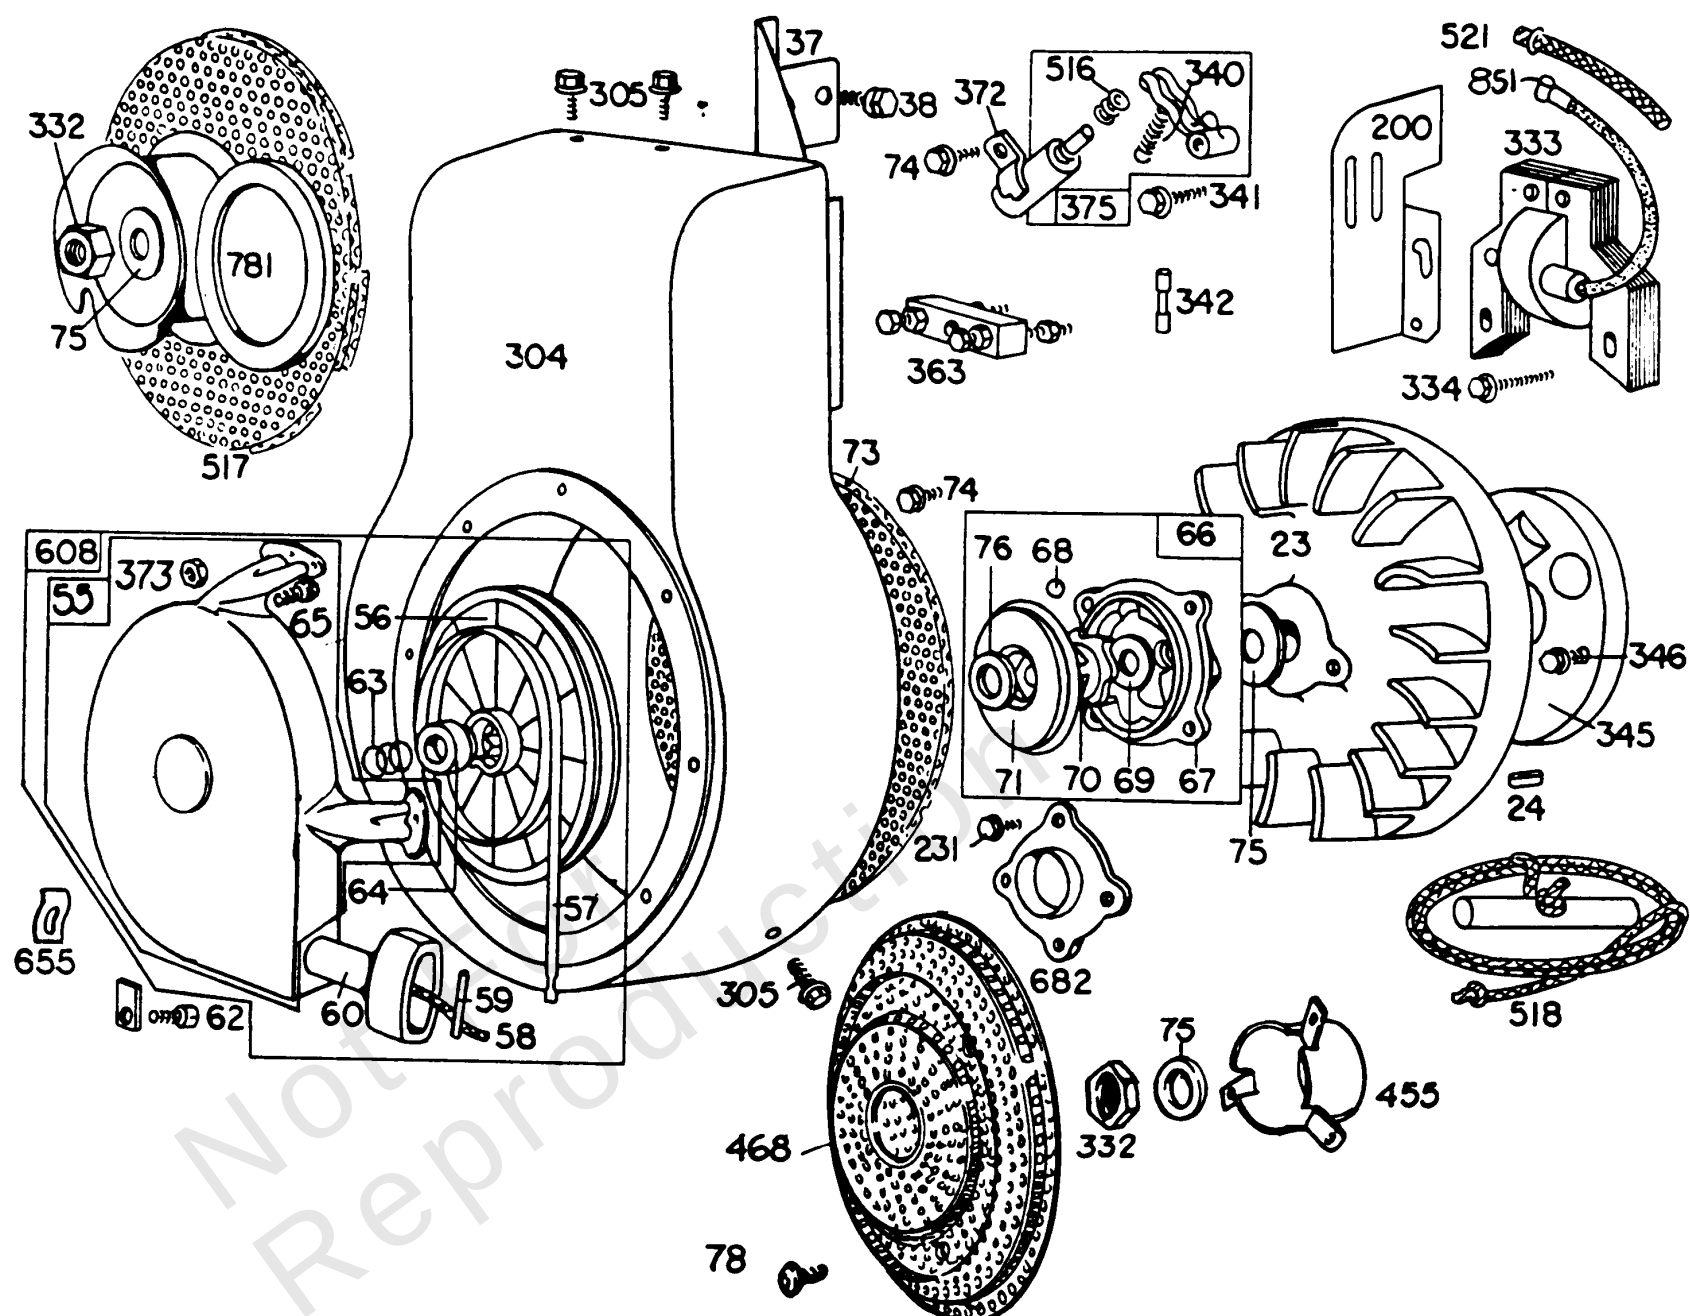


Blower Hsg,Flywheels,Screen

REF NO	PART NO	QTY	DESCRIPTION
23	298260		FLYWHEEL
24	61760		KEY, Flywheel -(Breaker Ignition)
37	222475		GUARD, Flywheel
38	93535		SCREW -(5/16-18 X 3/4)
38	93777		SCREW
55	295272		HOUSING, Rewind Starter -(Casting) (Metal Pulley)
55	393576		HOUSING, Rewind Starter
56	295871		PULLEY, Starter -(63 Rope) Includes 63 rope; if longer rope is required, order rope No. 66894 and cut to required length.
57	294303		SPRING, Rewind Starter
58	66564		ROPE, Starter -(63 Rope) If longer rope is needed, order No. 66574 and cut to required length.
58	66884		ROPE, Starter -(Cut To Required Length) For use with Plastic Pulley; if longer rope is needed, order No. 66894 and cut to required length.
59	230228		PIN, Starter Grip
60	66728		GRIP, Starter Rope
62	93254		SCREW -(Pulley)
63	260414		SPRING, Ratchet
64	230543		ADAPTER, Ratchet Spring
65	230796		NUT
65	93067		SCREW -(3/8)
65	93572		SCREW -(10-32 X 3/8)
66	298798		CLUTCH, Starter -(Rewind Starter)
67	212132		HOUSING, Clutch
68	63770		BALL, Clutch
69	66718		WASHER -(1-1/16 O.D. X 17/32 I.D.) (1 1/16 O.D. X 17/32 I.D.)
70	298799		RATCHET, Clutch -(engine W/Ring Gear on FW equipped for Elec Start)
71	221653		WASHER
73	221796		SCREEN, Rotating
73	222302		SCREEN, Rotating -(Stationary) Uses: 93572 Screw (8)
74	93014		SCREW
74	93042		SCREW
75	220865		WASHER -(Heavy Flywheel)
76	68238		SEAL, Ratchet
78	93808		SCREW
200	221760		GUIDE, Air
231	93064		SCREW
304	299853		HOUSING, Blower
304	391480		HOUSING, Blower -Uses: 93420 Screw (3)

Footnotes:

 For use only with Starter Motors with Plastic Drive Gear

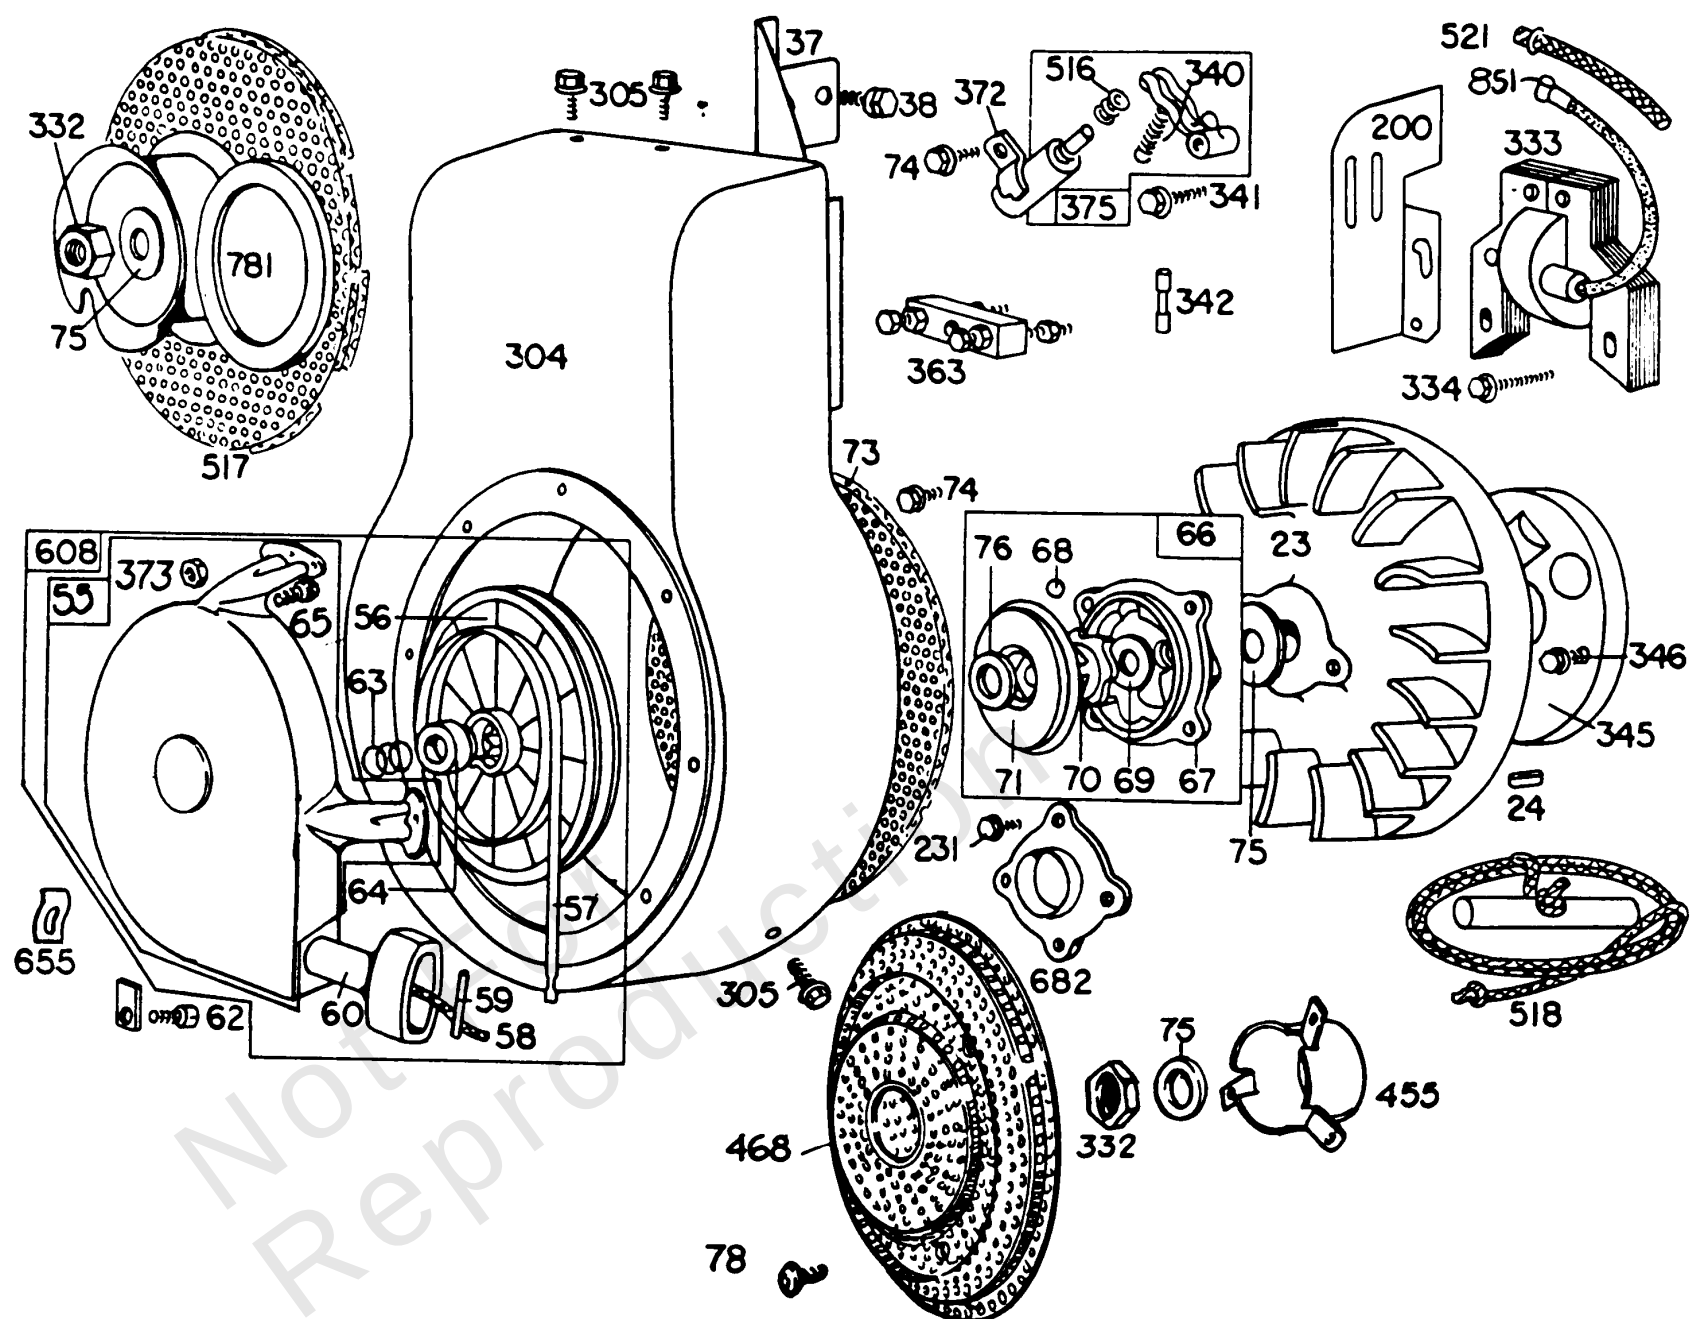


Blower Hsg, Flywheels, Screen

REF NO	PART NO	QTY	DESCRIPTION
305	93158		SCREW -(1/4-20 X 5/8)
332	92284		NUT -(Flywheel)
333	298968		ARMATURE, Magneto -(Breaker Ignition)
334	93381		SCREW
340	26018		SPRING, Breaker Arm
341	93381		SCREW
342	65704		PLUNGER, Breaker
345	222117		COVER, Breaker
346	91920		SCREW -(8-32 X 5/8)
346	93014		SCREW
363	19165		PULLER, Flywheel
372	220477		CLAMP
373	92987		STARTER, Rewind
375	294628		BREAKER, Ignition
375	299061		BREAKER, Ignition -Includes: 294628 Point Set 65704 Plunger 61760 Key-Flywheel
455	222561		CUP, Flywheel
468	222562		SCREEN, Rotating
516	260374		SPRING, Condensor
517	295423		PULLEY, Rope Starter
518	69932		GRIP, Starter Rope
521	298529		SHIELD, Protective
608	390391		STARTER, Rewind -For Starter Assy. with longer than standard Rope-Order No. 299640
655	221014		ANCHOR, Rewind Spring -Used Before Code Date 73061111
655	222598		ANCHOR, Rewind Spring -(Stamped Rewind Housing)
682	211516		SHIELD, Starter
781	280068		CAP, Starter Pulley
851	221798		TERMINAL, Spark Plug

Footnotes:

 For use only with Starter Motors with Plastic Drive Gear

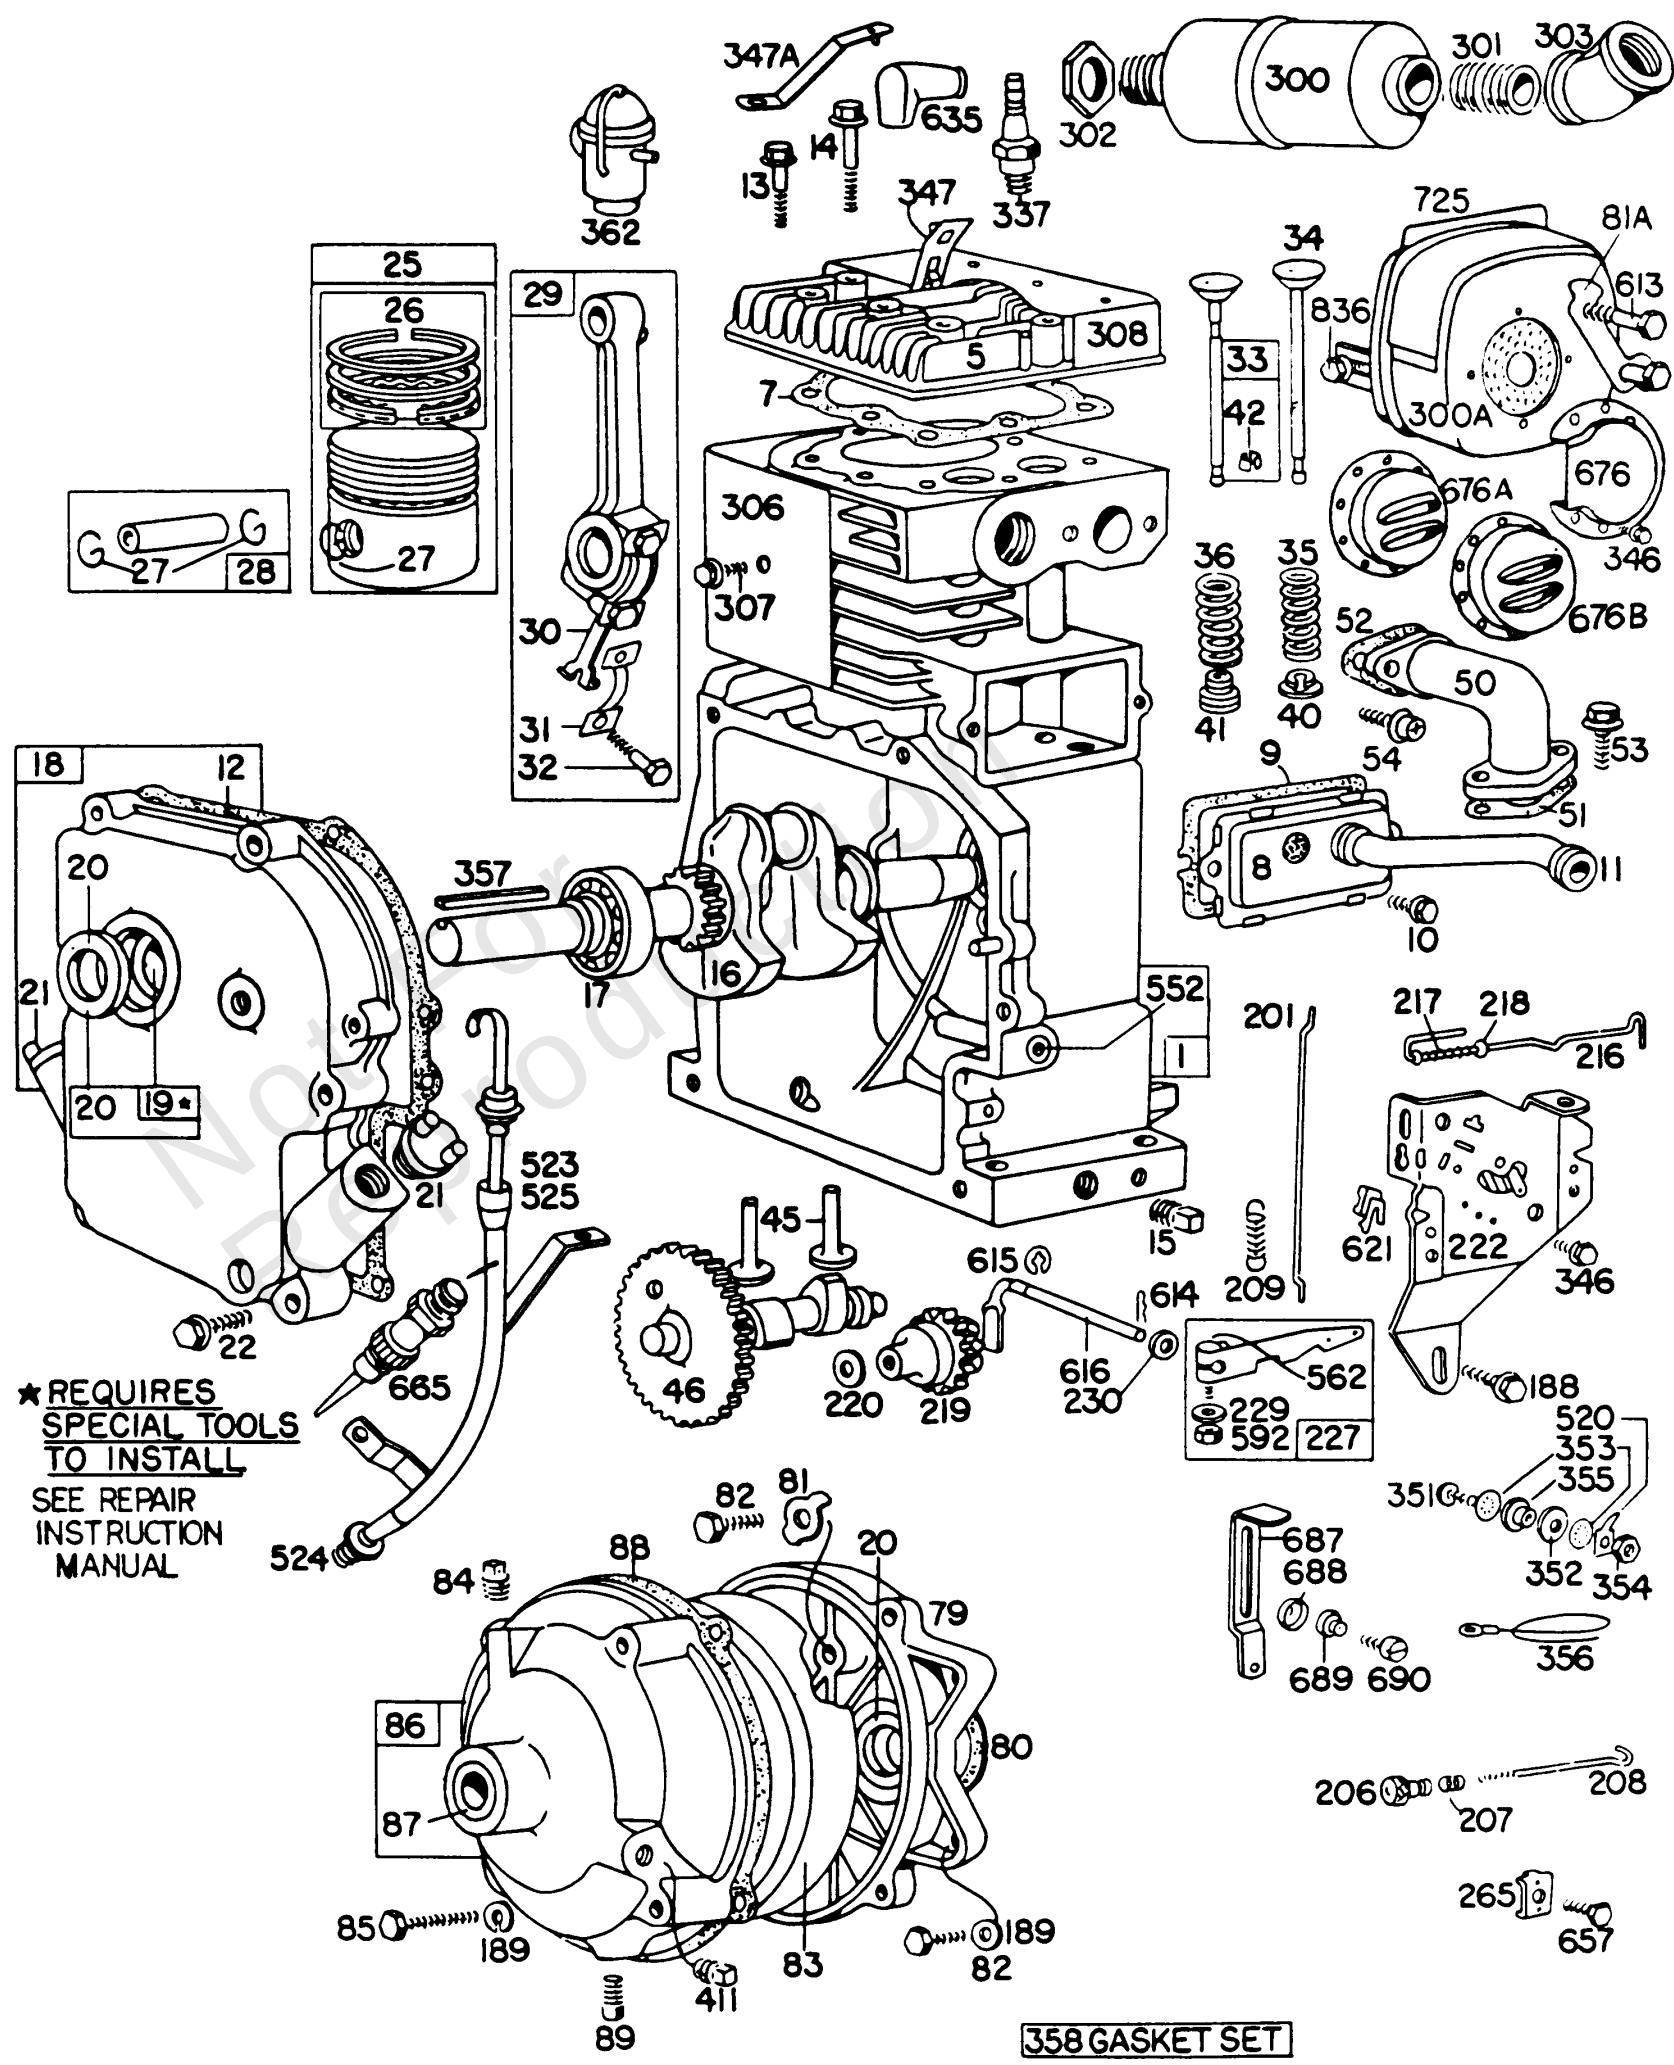


Cyl,Crankcase,Piston,Control

REF NO	PART NO	QTY	DESCRIPTION
1	392001		CYLINDER ASSEMBLY
5	211778		HEAD, Cylinder -(Sno gard)
7	270430		GASKET, Cylinder Head -Included in Gasket Set-Part No. 299577
8	390321		BREATHER ASSEMBLY
9	27803		GASKET, Rocker Cover -Included in Gasket Set-Part No. 299577
10	93536		SCREW
11	67068		TUBE, Breather -(Used with Metal Air Cleaner Pipe)
12	27750		GASKET, Crankcase -(1/64) Included in Gasket Set-Part No. 299577
12	27876		GASKET, Crankcase -(.005) Included in Gasket Set-Part No. 299577
12	27877		GASKET, Crankcase -(.009) Included in Gasket Set-Part No. 299577
13	92985		SCREW -(3)(Cylinder Head)
13	93113		SCREW -(2 5/16) (2-5/16)
13	93583		STUD -(Cylinder Head)
14	93211		SCREW -(5/16-18 X 2-21/32)
14	93583		STUD -(Cylinder Head)
15	91084		PLUG, Oil Drain -(3/8)
16	261077		CRANKSHAFT
17	29530		BEARING, Ball
18	299167		COVER, Crankcase
19	295964		KIT, Bushing/Seal -(PTO Side)
20	298423		SEAL, Oil
21	66768		PLUG, Oil
22	93585		SCREW -(Crankcase Cover)
22	93685		SCREW
25	391673		PISTON ASSEMBLY -(Standard)
25	391674		PISTON ASSEMBLY -(.010 Oversize)
25	391675		PISTON ASSEMBLY -(.020 Oversize)
25	391676		PISTON ASSEMBLY -(.030 Oversize)
26	299743		SET, Ring -(.030 Oversize Chrome)
26	391669		SET, Ring -(Standard)
26	391670		SET, Ring -(.010 Oversize)
26	391671		SET, Ring -(.020 Oversize)

Footnotes:

 For use only with Starter Motors with Plastic Drive Gear

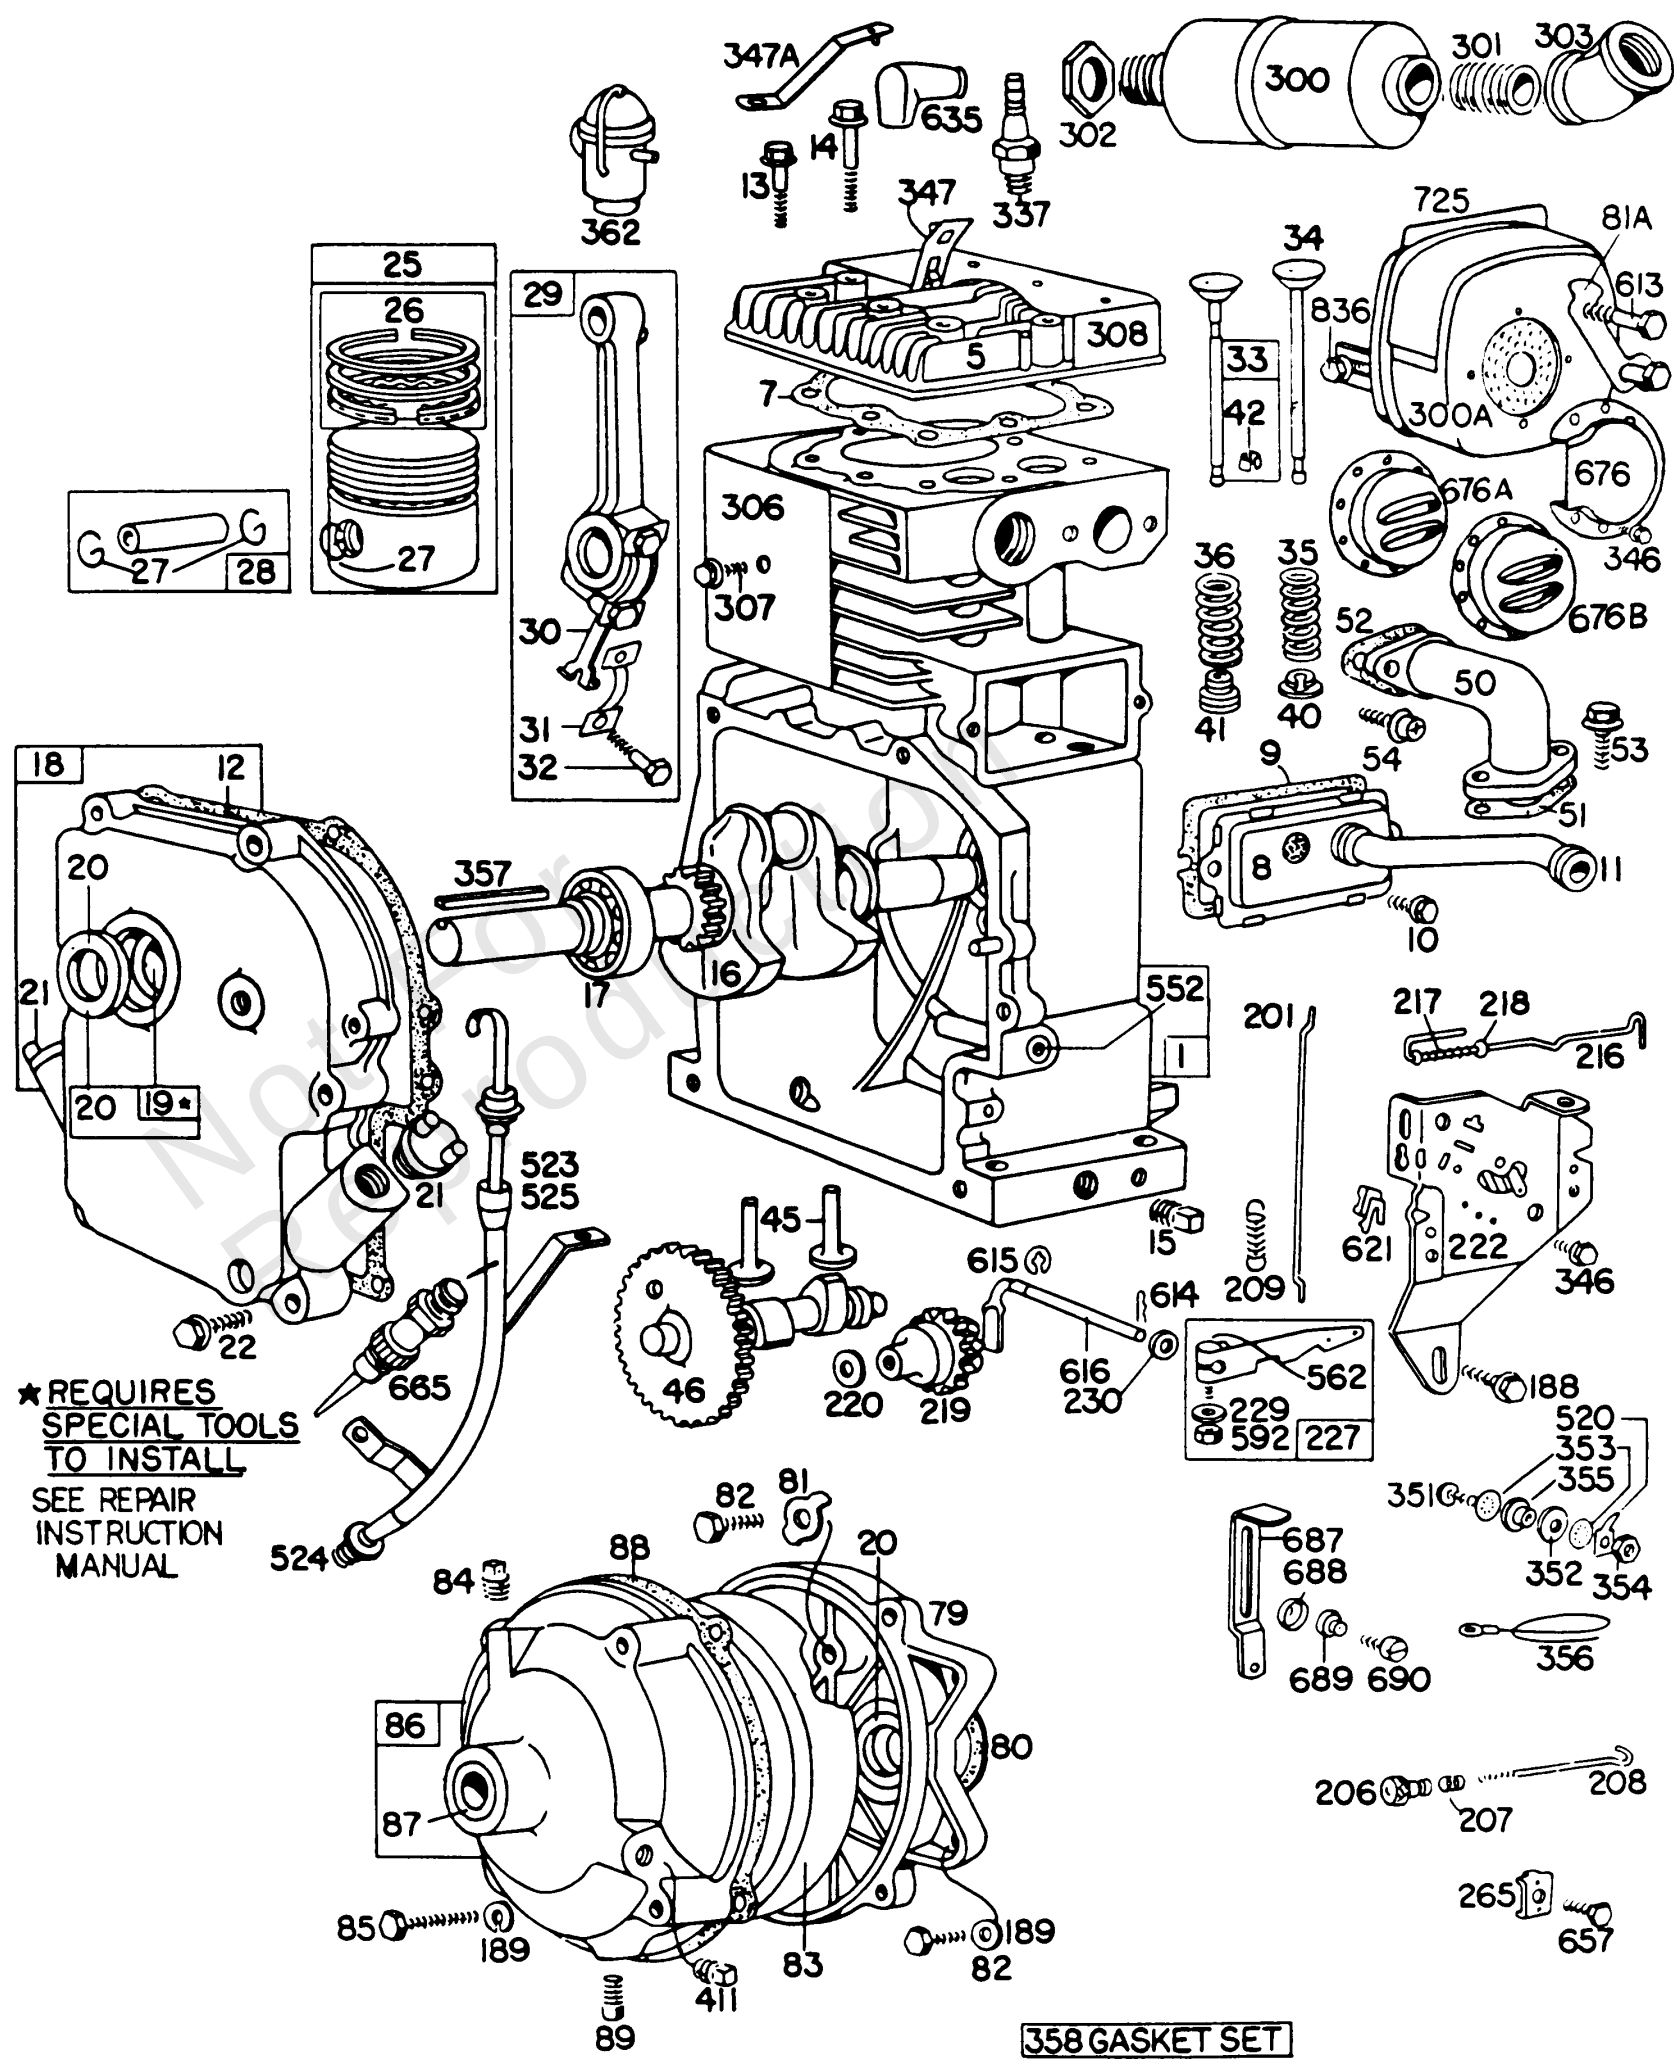


Cyl,Crankcase,Piston,Control

REF NO	PART NO	QTY	DESCRIPTION
26	391672		SET, Ring -(.030 Oversize)
27	68546		LOCK, Piston Pin
28	295840		PIN, Piston -(Standard)
28	295841		PIN, Piston -(.005 Oversize)
29	390401		ROD, Connecting -For Connecting Rod with .020 undersize Crankpin Bore-Order No. 390773
30	222113		DIPPER, Connecting Rod
31	222114		LOCK, Rod Screw
32	92659		SCREW -(Connecting Rod)
33	390419		VALVE, Exhaust -(Includes Retainer(s))
34	261055		VALVE, Intake
35	65906		SPRING, Valve -(Intake)
36	26828		SPRING, Valve -(Exhaust)
40	221596		RETAINER, Valve -(Valves With Groove In Stem)
41	292260		RETAINER, Valve -(Exhaust Valve) (Exhaust)
42	93630		KEEPER, Valve -(2)
45	260933		TAPPET, Valve
46	211689		CAMSHAFT
50	211812		MANIFOLD, Intake
51	270684		GASKET, Intake -Included in Gasket Set-Part No. 299577
52	27828		GASKET, Intake -Included in Gasket Set-Part No. 299577
53	93128		SCREW
54	93208		SCREW -(Intake Manifold)
79	296179		CASE, Gear Reduction
80	27884		GASKET, Gear Cover/Housing
81A	222263		LOCK, Muffler Screw -(3/8 Diameter Bolt Holes)
81	220234		LOCK, Muffler Screw
82	92502		SCREW
83	296052		SHAFT, Auxiliary Drive
84	92617		SCREW -(Gear Case)
85	91386		SCREW -(2)
86	296053		COVER, Gear
87	298423		SEAL, Oil
88	27328		GASKET, Gear Cover/Housing
89	91488		PLUG -(1/8)
188	93535		SCREW -(5/16-18 X 3/4)

Footnotes:

 For use only with Starter Motors with Plastic Drive Gear

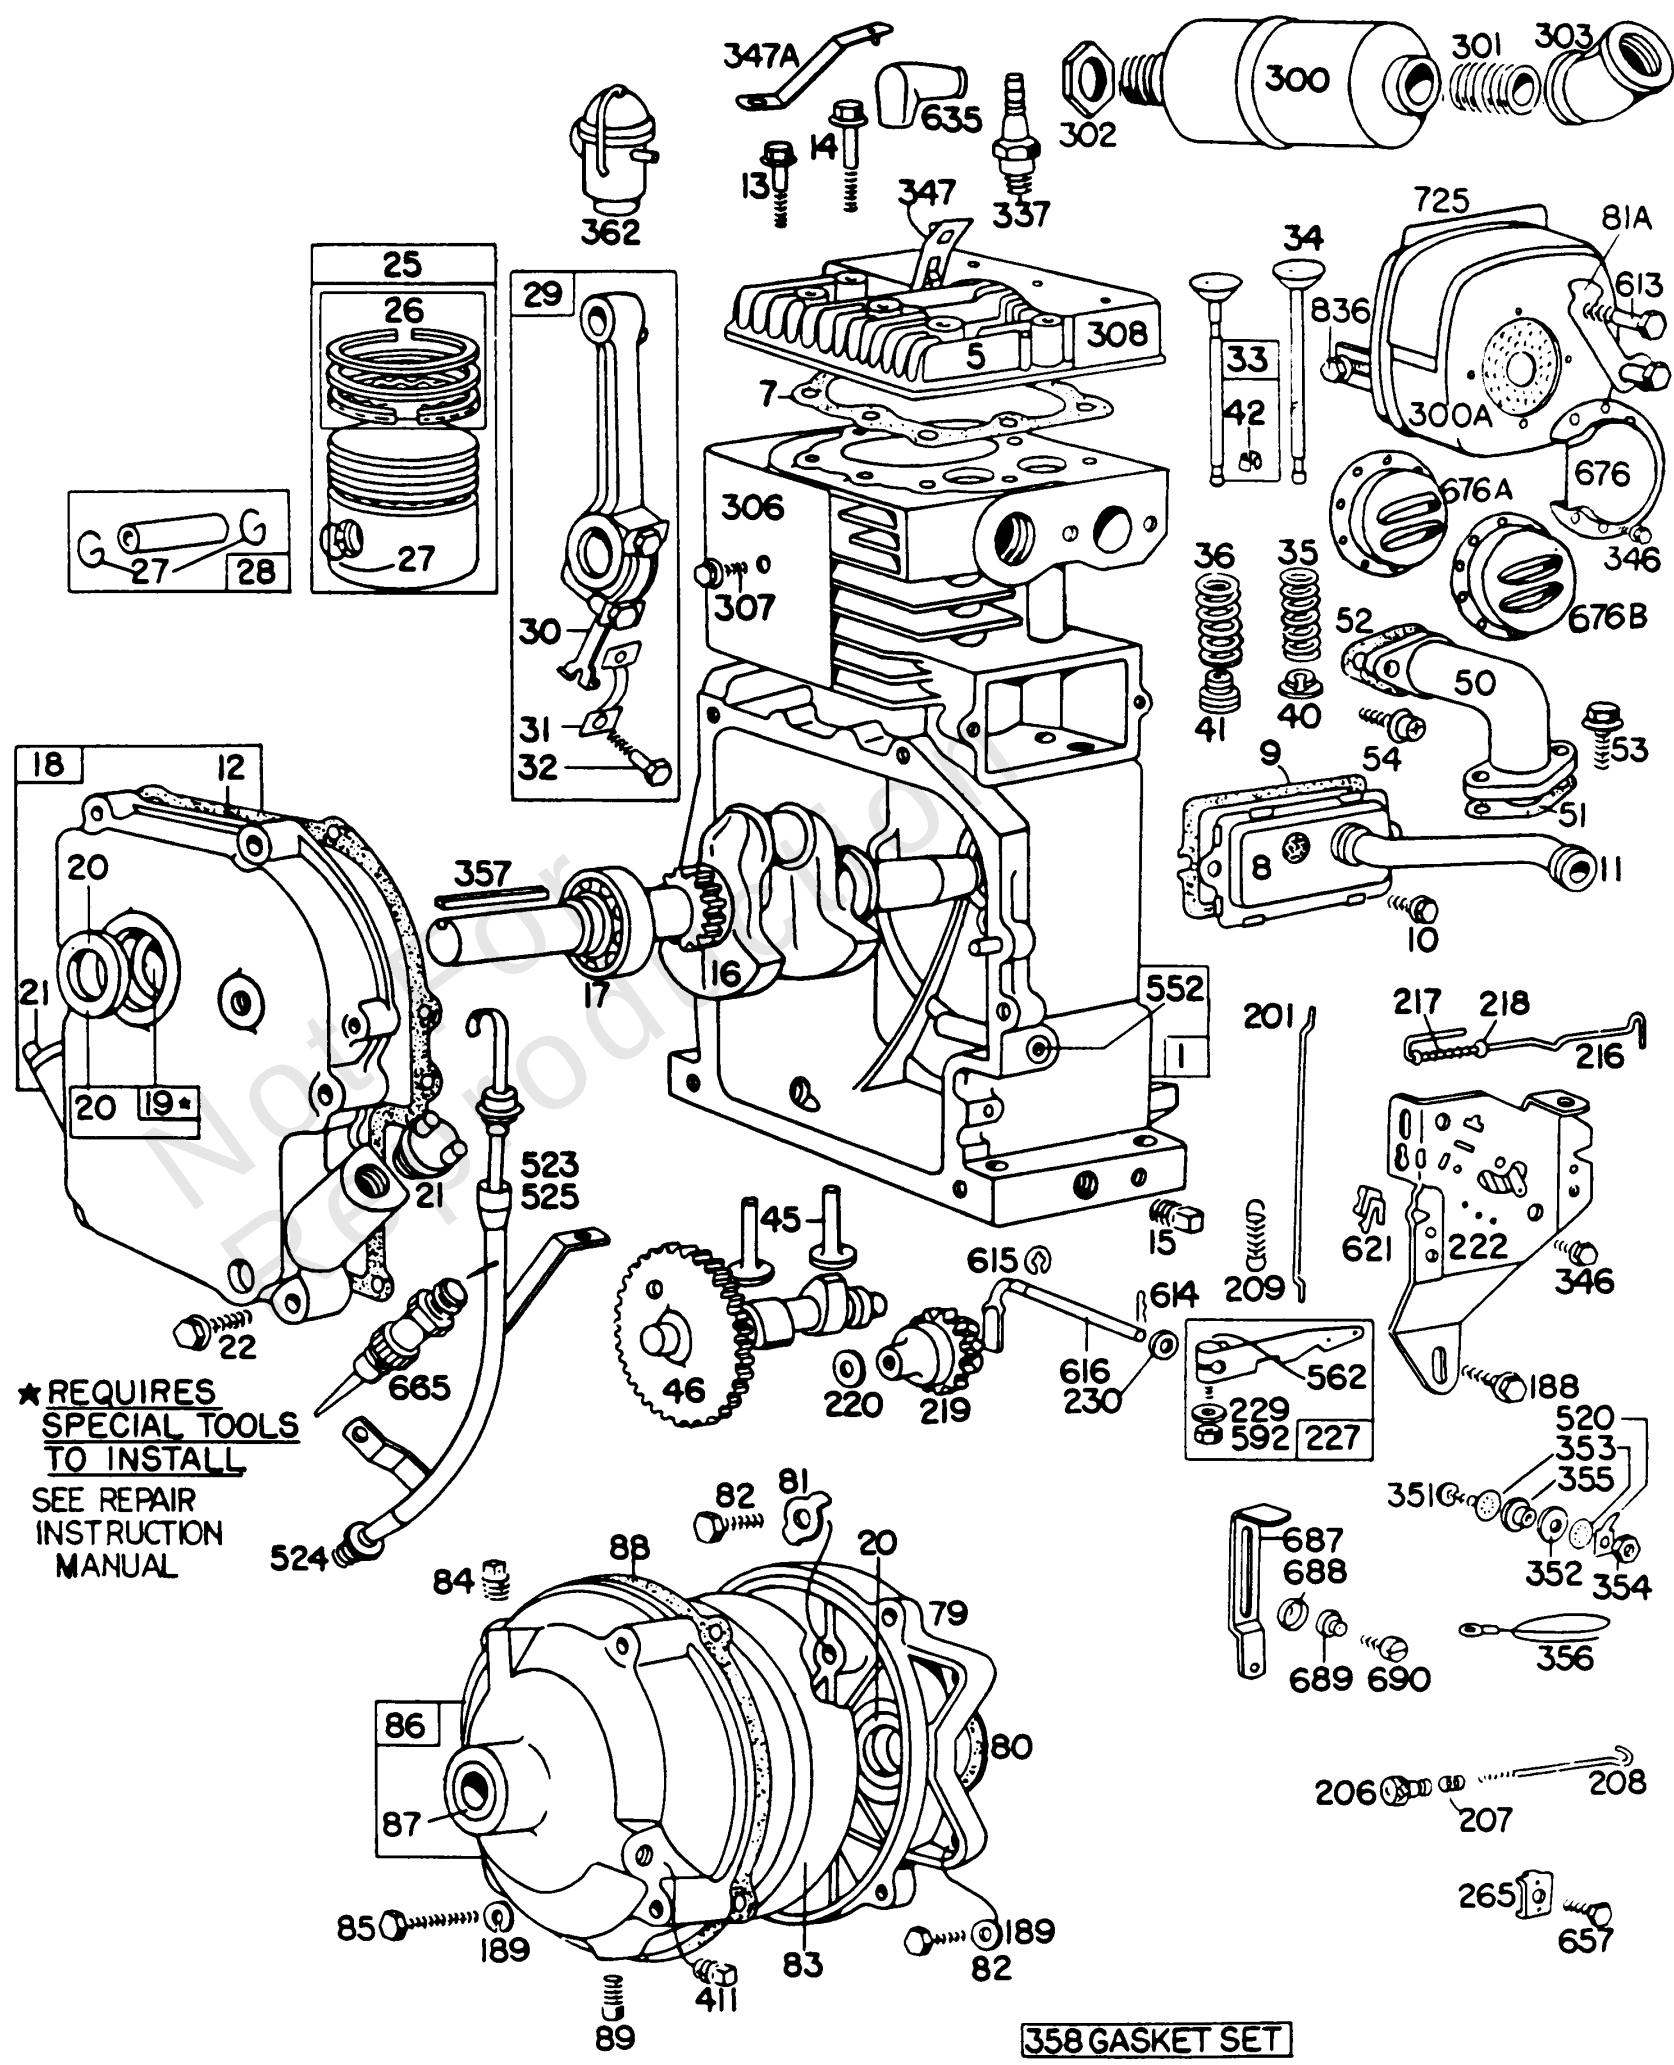


Cyl,Crankcase,Piston,Control

REF NO	PART NO	QTY	DESCRIPTION
188	93623		SCREW -(Flywheel Guard)
189	90366		WASHER
201	260872		LINK, Throttle
206	230149		NUT, Governor Adjusting -(5-44)
207	26855		SPRING, Governor Link
208	230841		ROD, Governor Control
209	260695		SPRING, Governor
209	260871		SPRING, Governor -(2700 To 3300 RPM)
216	261122		LINK, Choke
217	261119		SPRING, Choke Return
218	222352		WASHER
219	297656		GEAR, Governor -Used Before Code Date 75060611
219	391737		GEAR, Governor -Used After Code Date 75060511
220	221551		WASHER -(Governor Lever)
222	299012		BRACKET, Control
222	390670		BRACKET, Control
227	299165		LEVER, Governor Control -(3/16 Diameter) -Used Before Code Date 75060611
227	391965		LEVER, Governor Control -(1/4 Diameter) -Used After Code Date 75060511
229	220680		WASHER
230	221559		WASHER -(3/16 I.D.)
230	222450		WASHER
265	221535		CLAMP, Casing -(Stamped Steel)
300A	391232		MUFFLER -Uses: 93606 Screw-Guard to Muffler
300A	391313		MUFFLER
300	390249		MUFFLER
301	91245		ELBOW, Exhaust
302	91242		LOCKNUT -(Muffler and Elbow)
303	91246		ELBOW, Exhaust -(45 Degree)
306	221898		SHIELD, Cylinder
307	93163		SCREW
308	221901		COVER, Cylinder Head -(Sno gard)
337	293918		PLUG, Spark
337	29693		PLUG, Spark
337	298809		PLUG, Spark -Spark Plugs use Ignition Cabel Terminal No. 221798
337	392588		PLUG, Spark
346	91920		SCREW -(8-32 X 5/8)

Footnotes:

 For use only with Starter Motors with Plastic Drive Gear

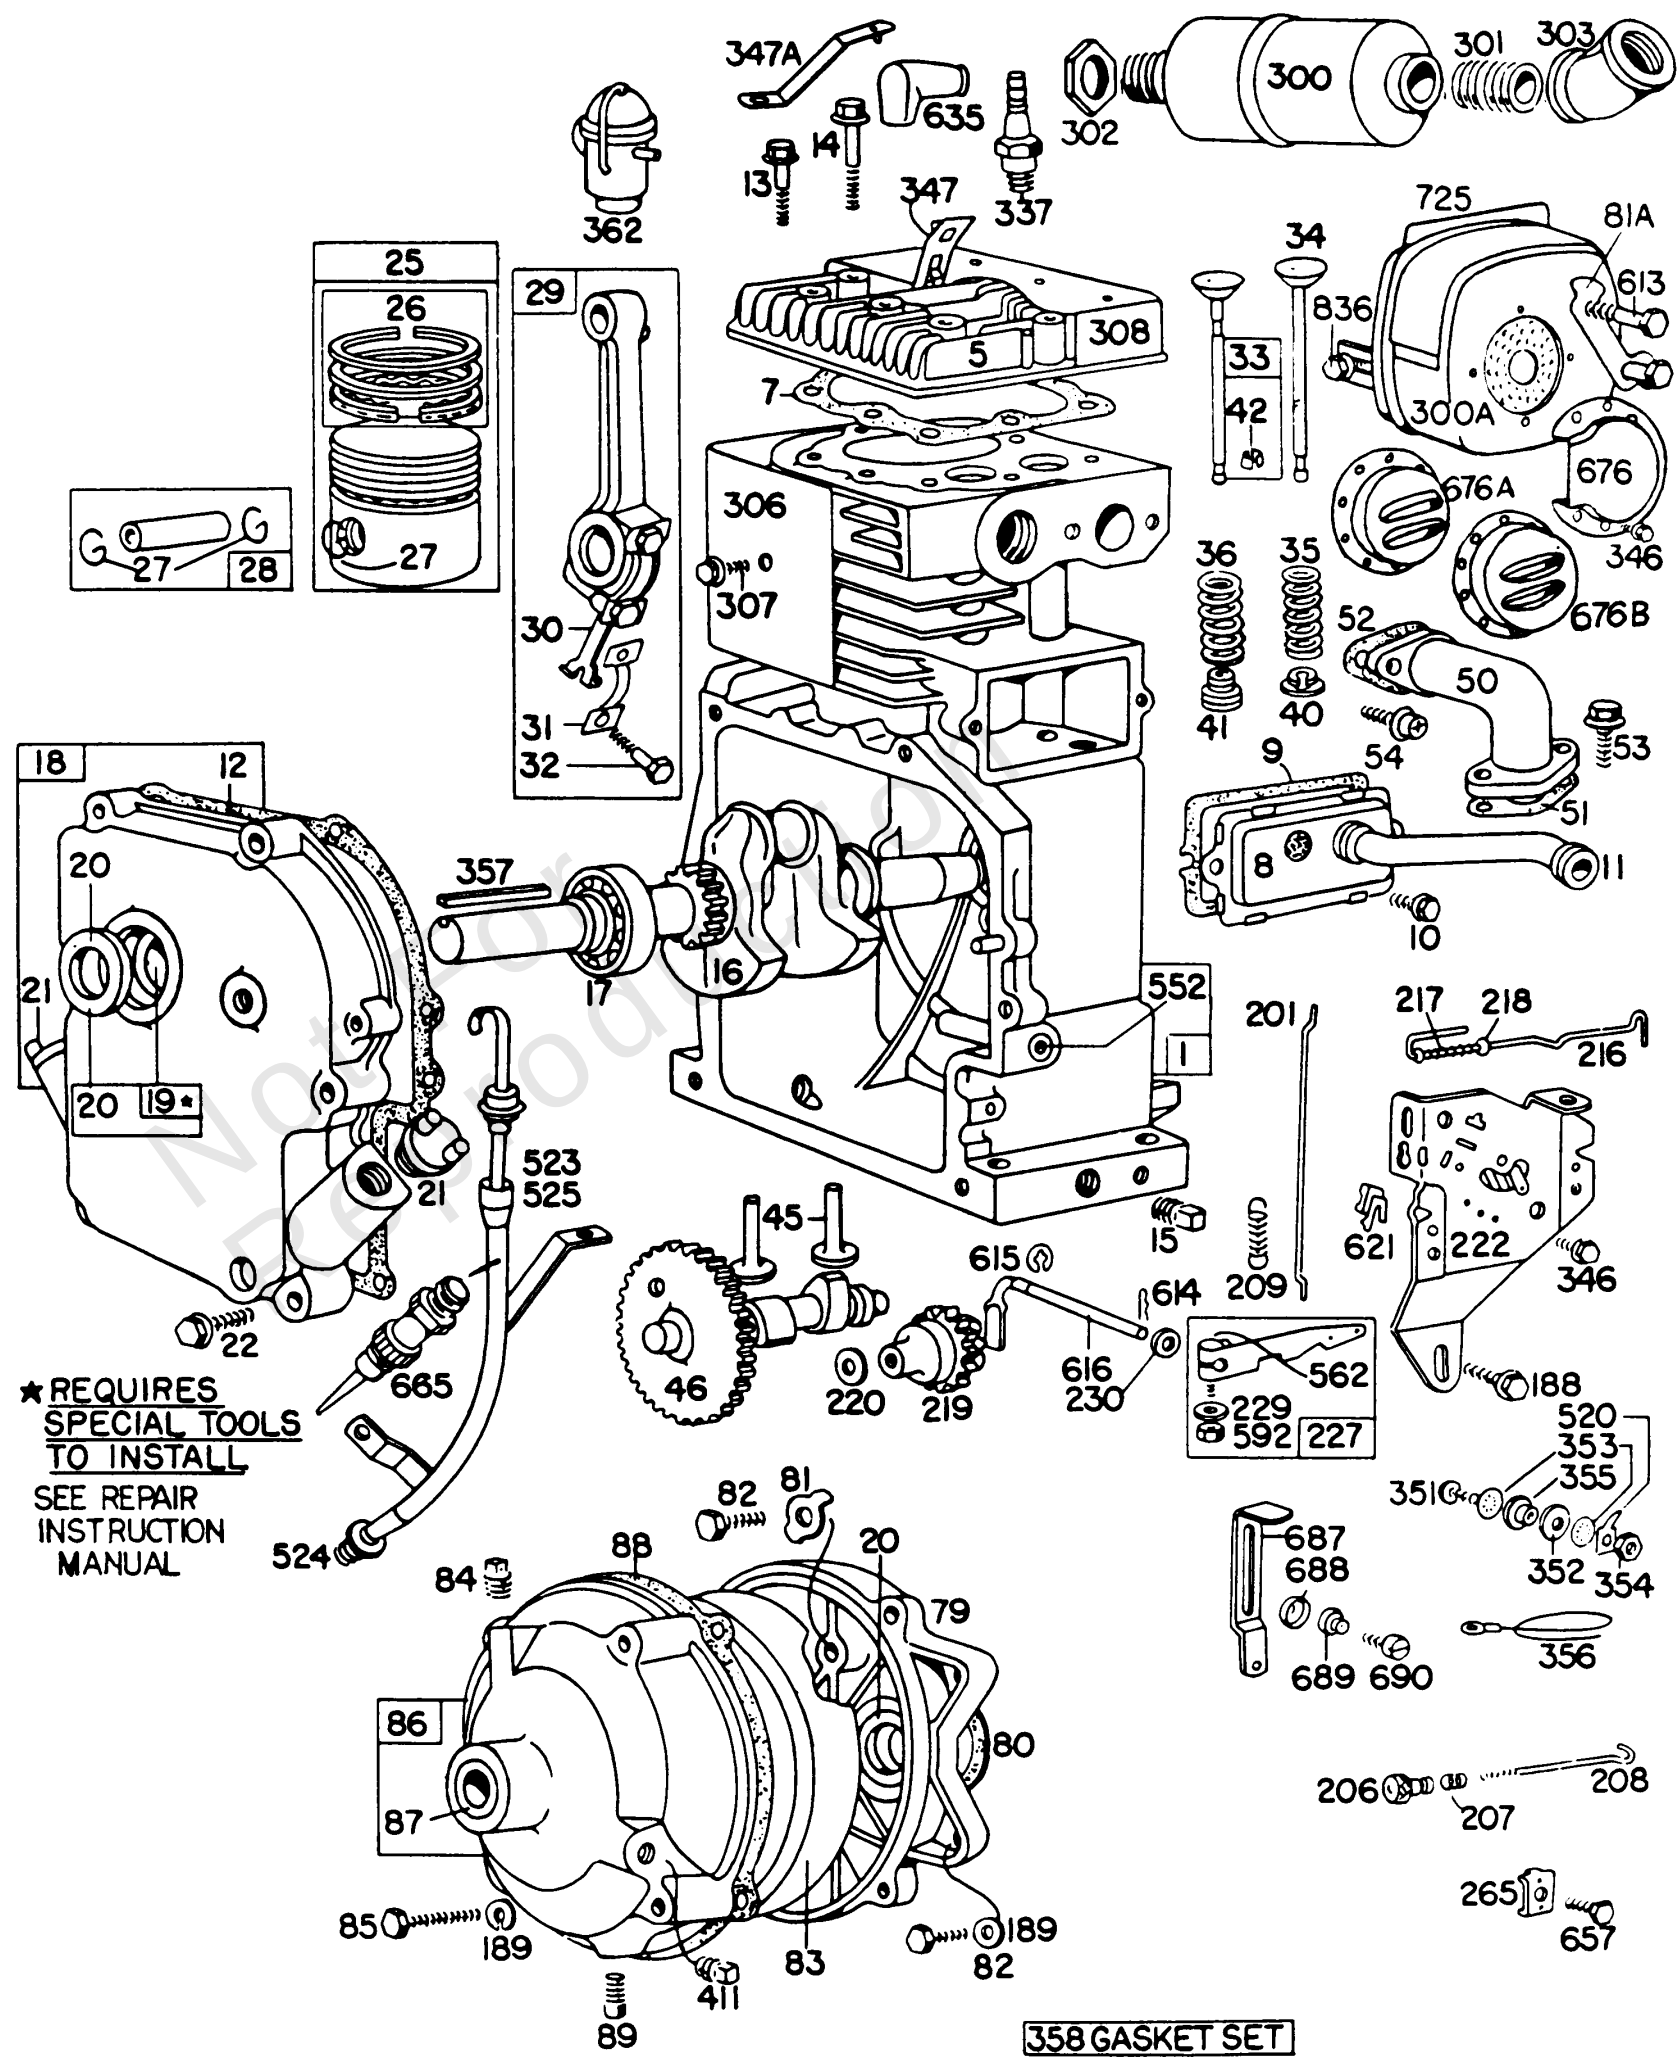


Cyl,Crankcase,Piston,Control

REF NO	PART NO	QTY	DESCRIPTION
346	93014		SCREW
347A	298926		SWITCH, Spark Plug Stop
347	220884		SWITCH, Stop
347	221808		SWITCH, Stop
351	93735		SCREW
352	66068		WASHER -(Fiber)
353	92791		WASHER
354	90576		NUT -(Ground Terminal)
355	66554		WASHER -(Insulating)
356	299500		WIRE, Stop -(Used with Armature Refs. 333A and 333B)
357	91540		KEY, Drive Pulley -(1/4)
358	299577		GASKET SET, Engine
362	291630		SHIELD, Spark Plug -(With Stop Switch)
411	93448		PLUG, Oil Drain -(Flush) (1/4-18 NPTF) (Flush) (1/4 18 NPTF)
520	93722		TERMINAL, Ground
523	295923		CAP, Oil Fill -Uses: 65304 Gasket
523	390848		DIPSTICK
524	68838		SEAL, O-Ring -(Dipstick Tube)
525	299284		TUBE, Dipstick
552	230843		BUSHING, Governor Crank -(3/16 I.D.) -Used Before Code Date 75060611
552	231056		BUSHING, Governor Crank -(1/4 I.D.) -Used After Code Date 75060511
562	92613		BOLT -(Governor Lever)
592	231082		NUT -(Governor Control)
613	93704		SCREW -(Muffler)
614	93306		PIN, Cotter
615	93307		RETAINER, Governor Shaft
616	231057		CRANK, Governor -(1/4 Diameter) -Used After Code Date 75060511
616	231070		SHAFT, Governor Gear -(3/16 Diameter) -Used Before Code Date 75060611
621	297472		SWITCH, Stop
635	66538		BOOT, Spark Plug
657	93496		SCREW -(10-32 X 5/8)
665	298858		MINDER, Oil
687	298957		SLIDE, Control

Footnotes:

 
For use only with Starter Motors with Plastic Drive Gear

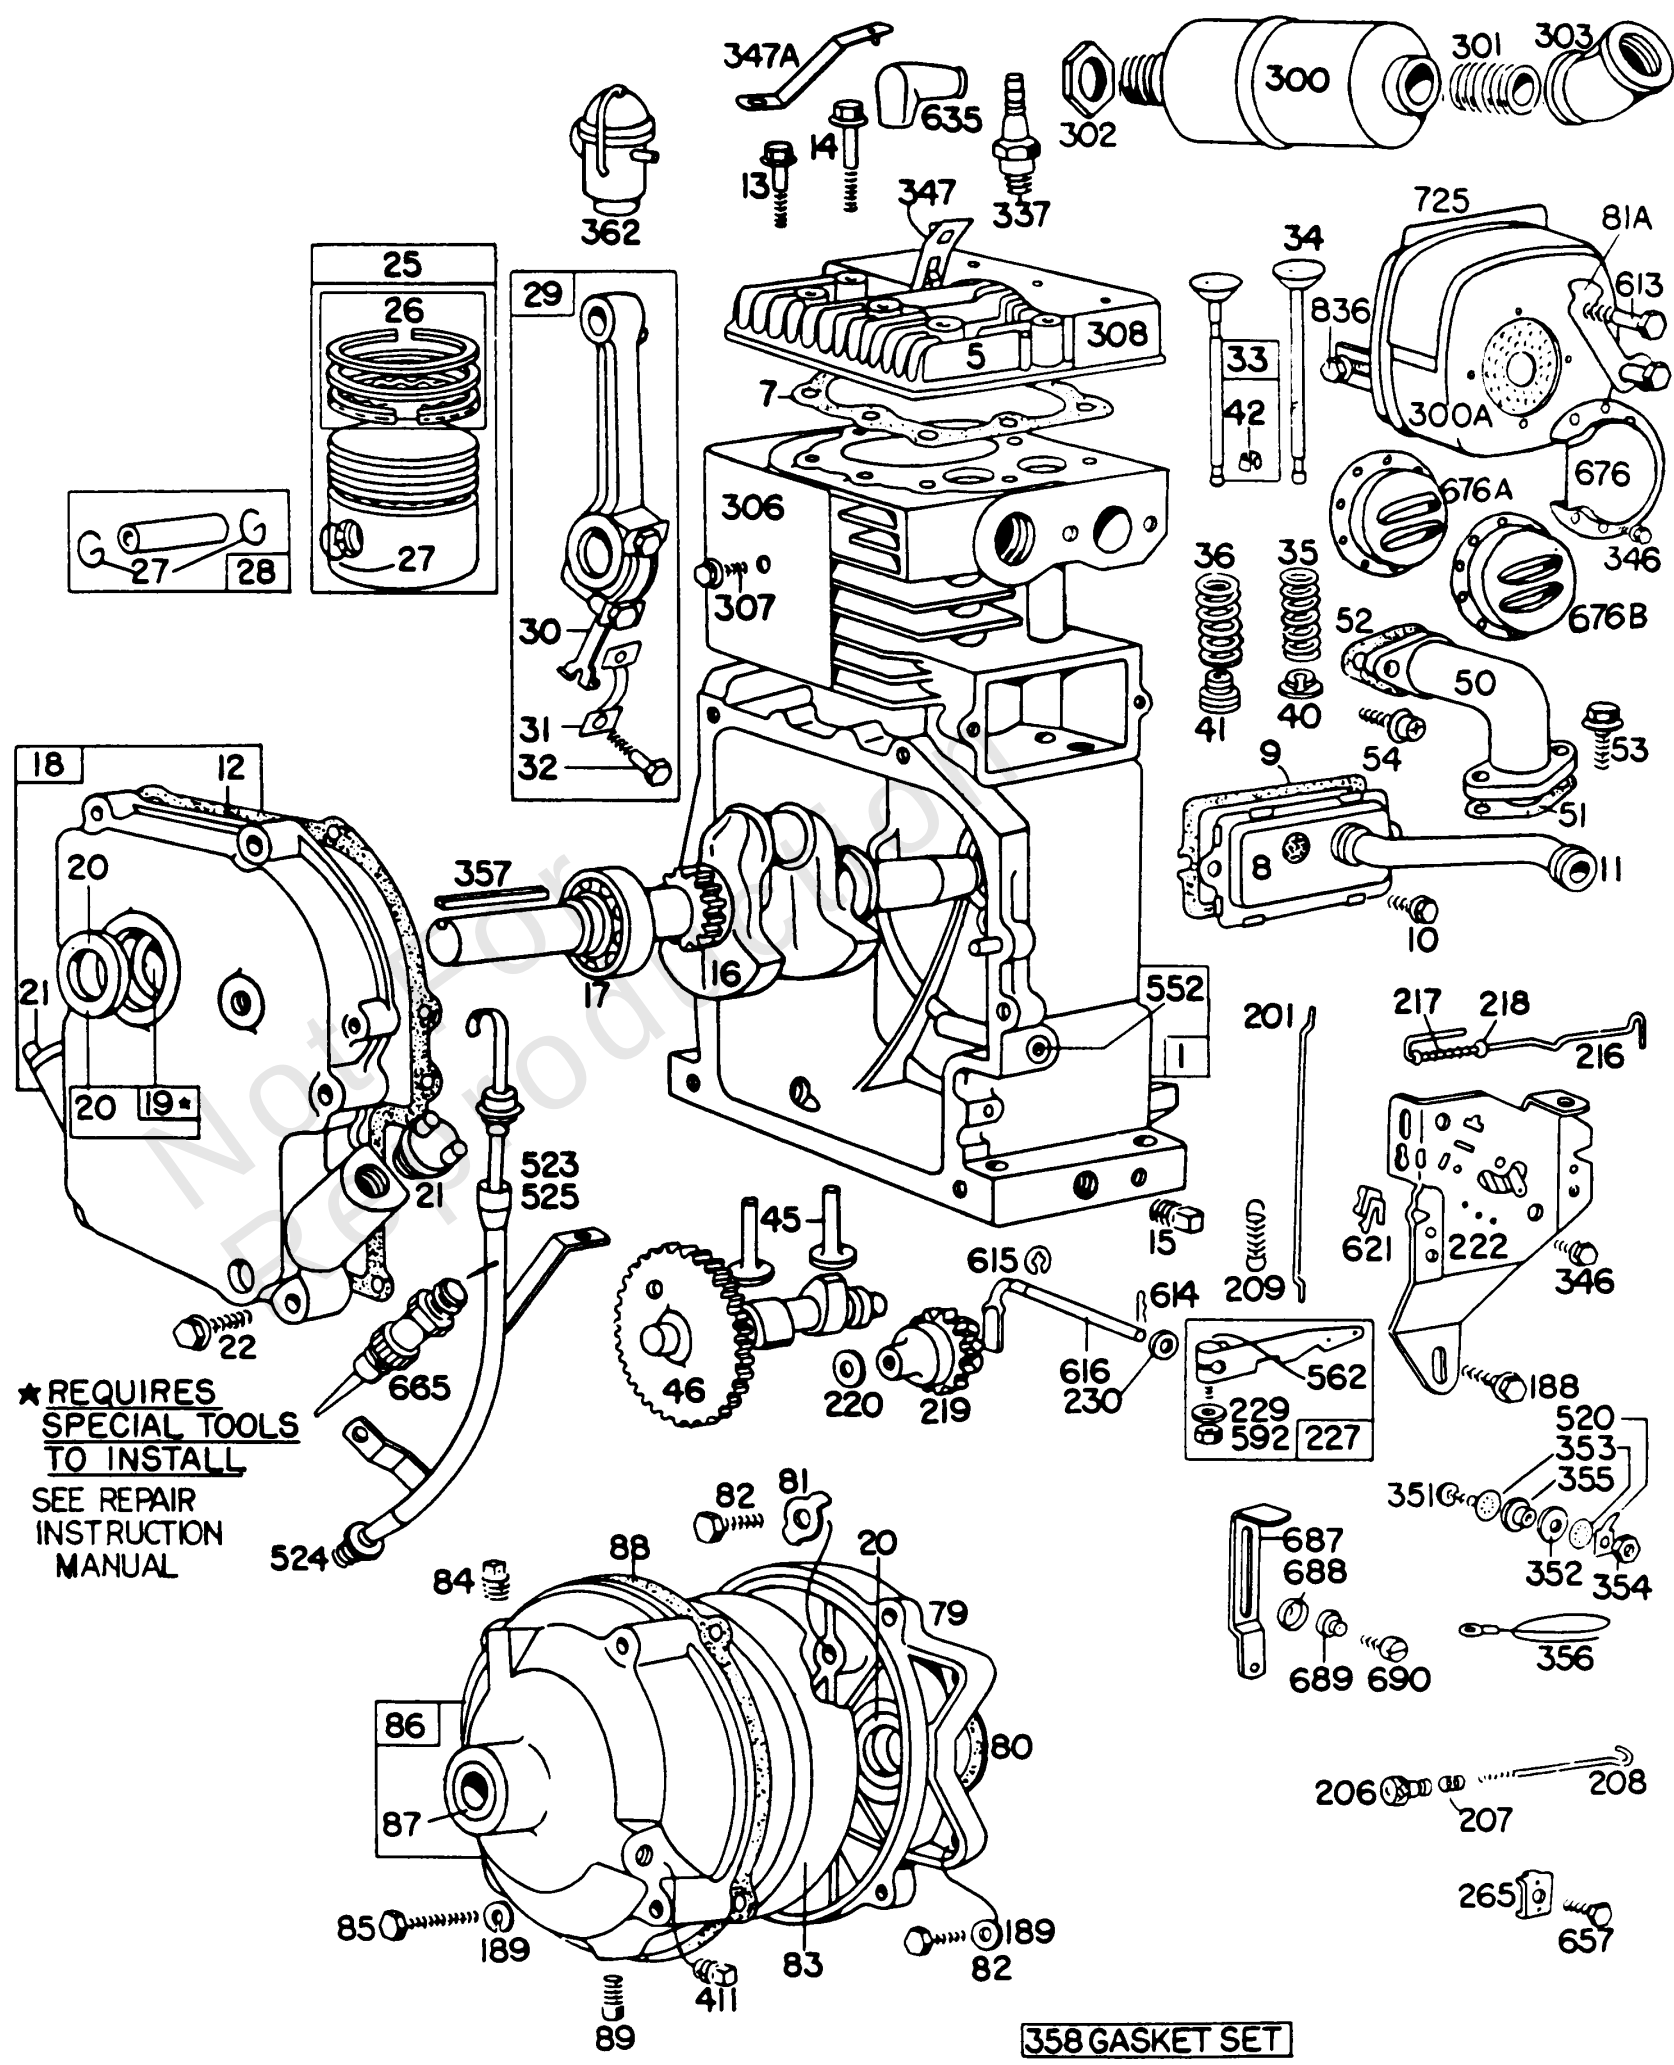

Cyl,Crankcase,Piston,Control

REF NO	PART NO	QTY	DESCRIPTION
688	221766		SPRING, Friction
689	260847		SPRING, Friction
690	92484		SCREW
725	221885		SHIELD, Heat
836	93559		SCREW -(Tank) (Fuel Tank)

 Not For
Reproduction

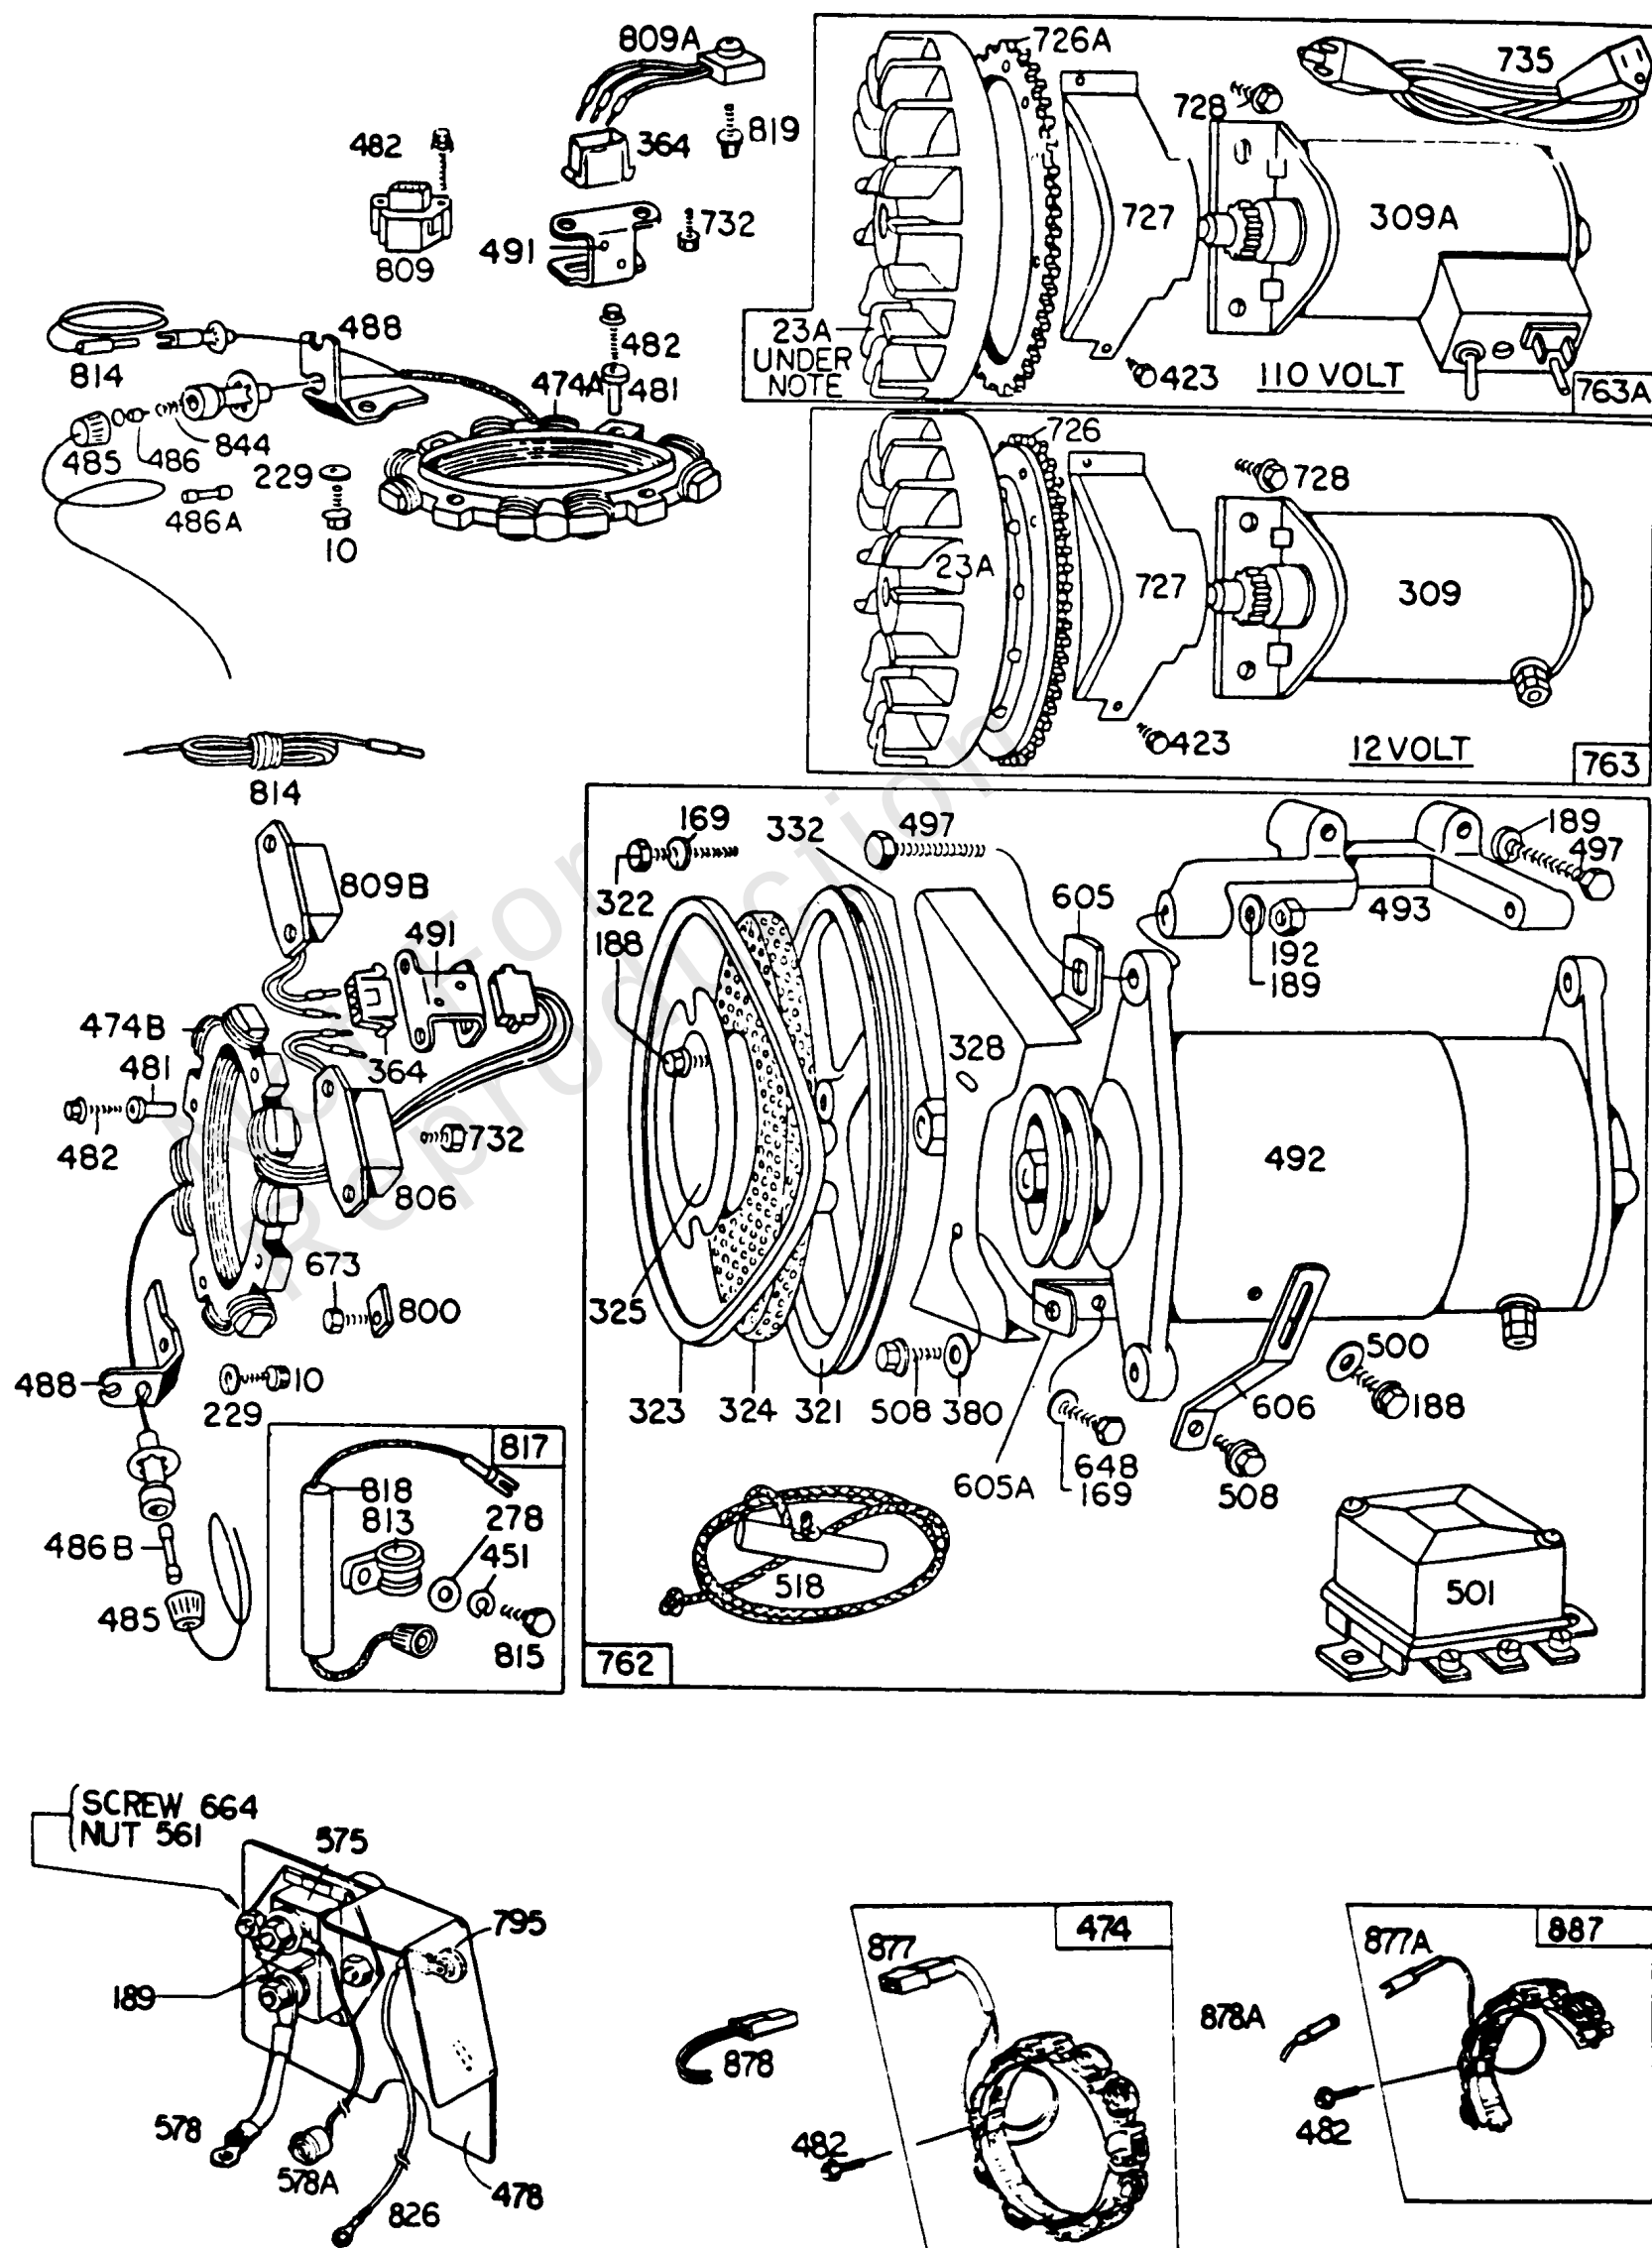


Electric Starters

REF NO	PART NO	QTY	DESCRIPTION
10	93536		SCREW
23A	299375		FLYWHEEL -Use on engs W/O ALT (machined for STEEL ring gear, not incl)
23A	392034		FLYWHEEL -(Aluminum Ring Gear) For use only on electric starter engines WITHOUT ALTERNATOR (Aluminum Ring Gear Inc.) For Plastic Drive Gear Starter
23A	390180		FLYWHEEL -(Engines With Alternator) (Steel Ring Gear)
23A	391983		FLYWHEEL -(Engines With Alternator) For use on engines WITH ALTERNATOR (Includes aluminum ring gear). for Plastic Drive Gear Starter
169	90832		SCREW -(Blower Housing)
188	93535		SCREW -(5/16-18 X 3/4)
188	93623		SCREW -(Flywheel Guard)
189	90366		WASHER
192	91397		NUT -(5/16-18)
229	220680		WASHER
278	22358		WASHER
309A	299556		MOTOR, Starter -(American Bosch 110V)
309A	299764		MOTOR, Starter -(American Bosch 110V)
309A	299329		MOTOR, Starter -(Mitsubishi and American Bosch 110V)
309A	299329		MOTOR, Starter -(Mitsubishi and American Bosch 110V) Uses #392247 Switch Shield Assembly
309	299330		MOTOR, Starter -(Mitsubishi and American Bosch 12V)
309	390307		MOTOR, Starter -(Bosch or Mitsubishi)
309	390838		MOTOR, Starter -(3 1/16 Housing)
309	391756		MOTOR, Starter -(American Bosch 120v)
309	392749		MOTOR, Starter -(3 1/16 Housing)
309	393851		MOTOR, Starter -(3 1/2 Housing) (Briggs & Stratton 110V)
321	210899		PULLEY, Starter
322	90931		SCREW
323	67708		BELT, Vee
324	221067		SCREEN, Rotating
324	222302		SCREEN, Rotating -(Stationary) Uses: 93572 Screw (8)
324	93623		SCREW -(Flywheel Guard)
325	299307		PULLEY, Rope Starter -(With Screen)
328	221447		GUARD, Belt
332	92284		NUT -(Flywheel)

Footnotes:

 For use only with Starter Motors with Plastic Drive Gear.
For use only with Starter Motors with Plastic Drive Gear

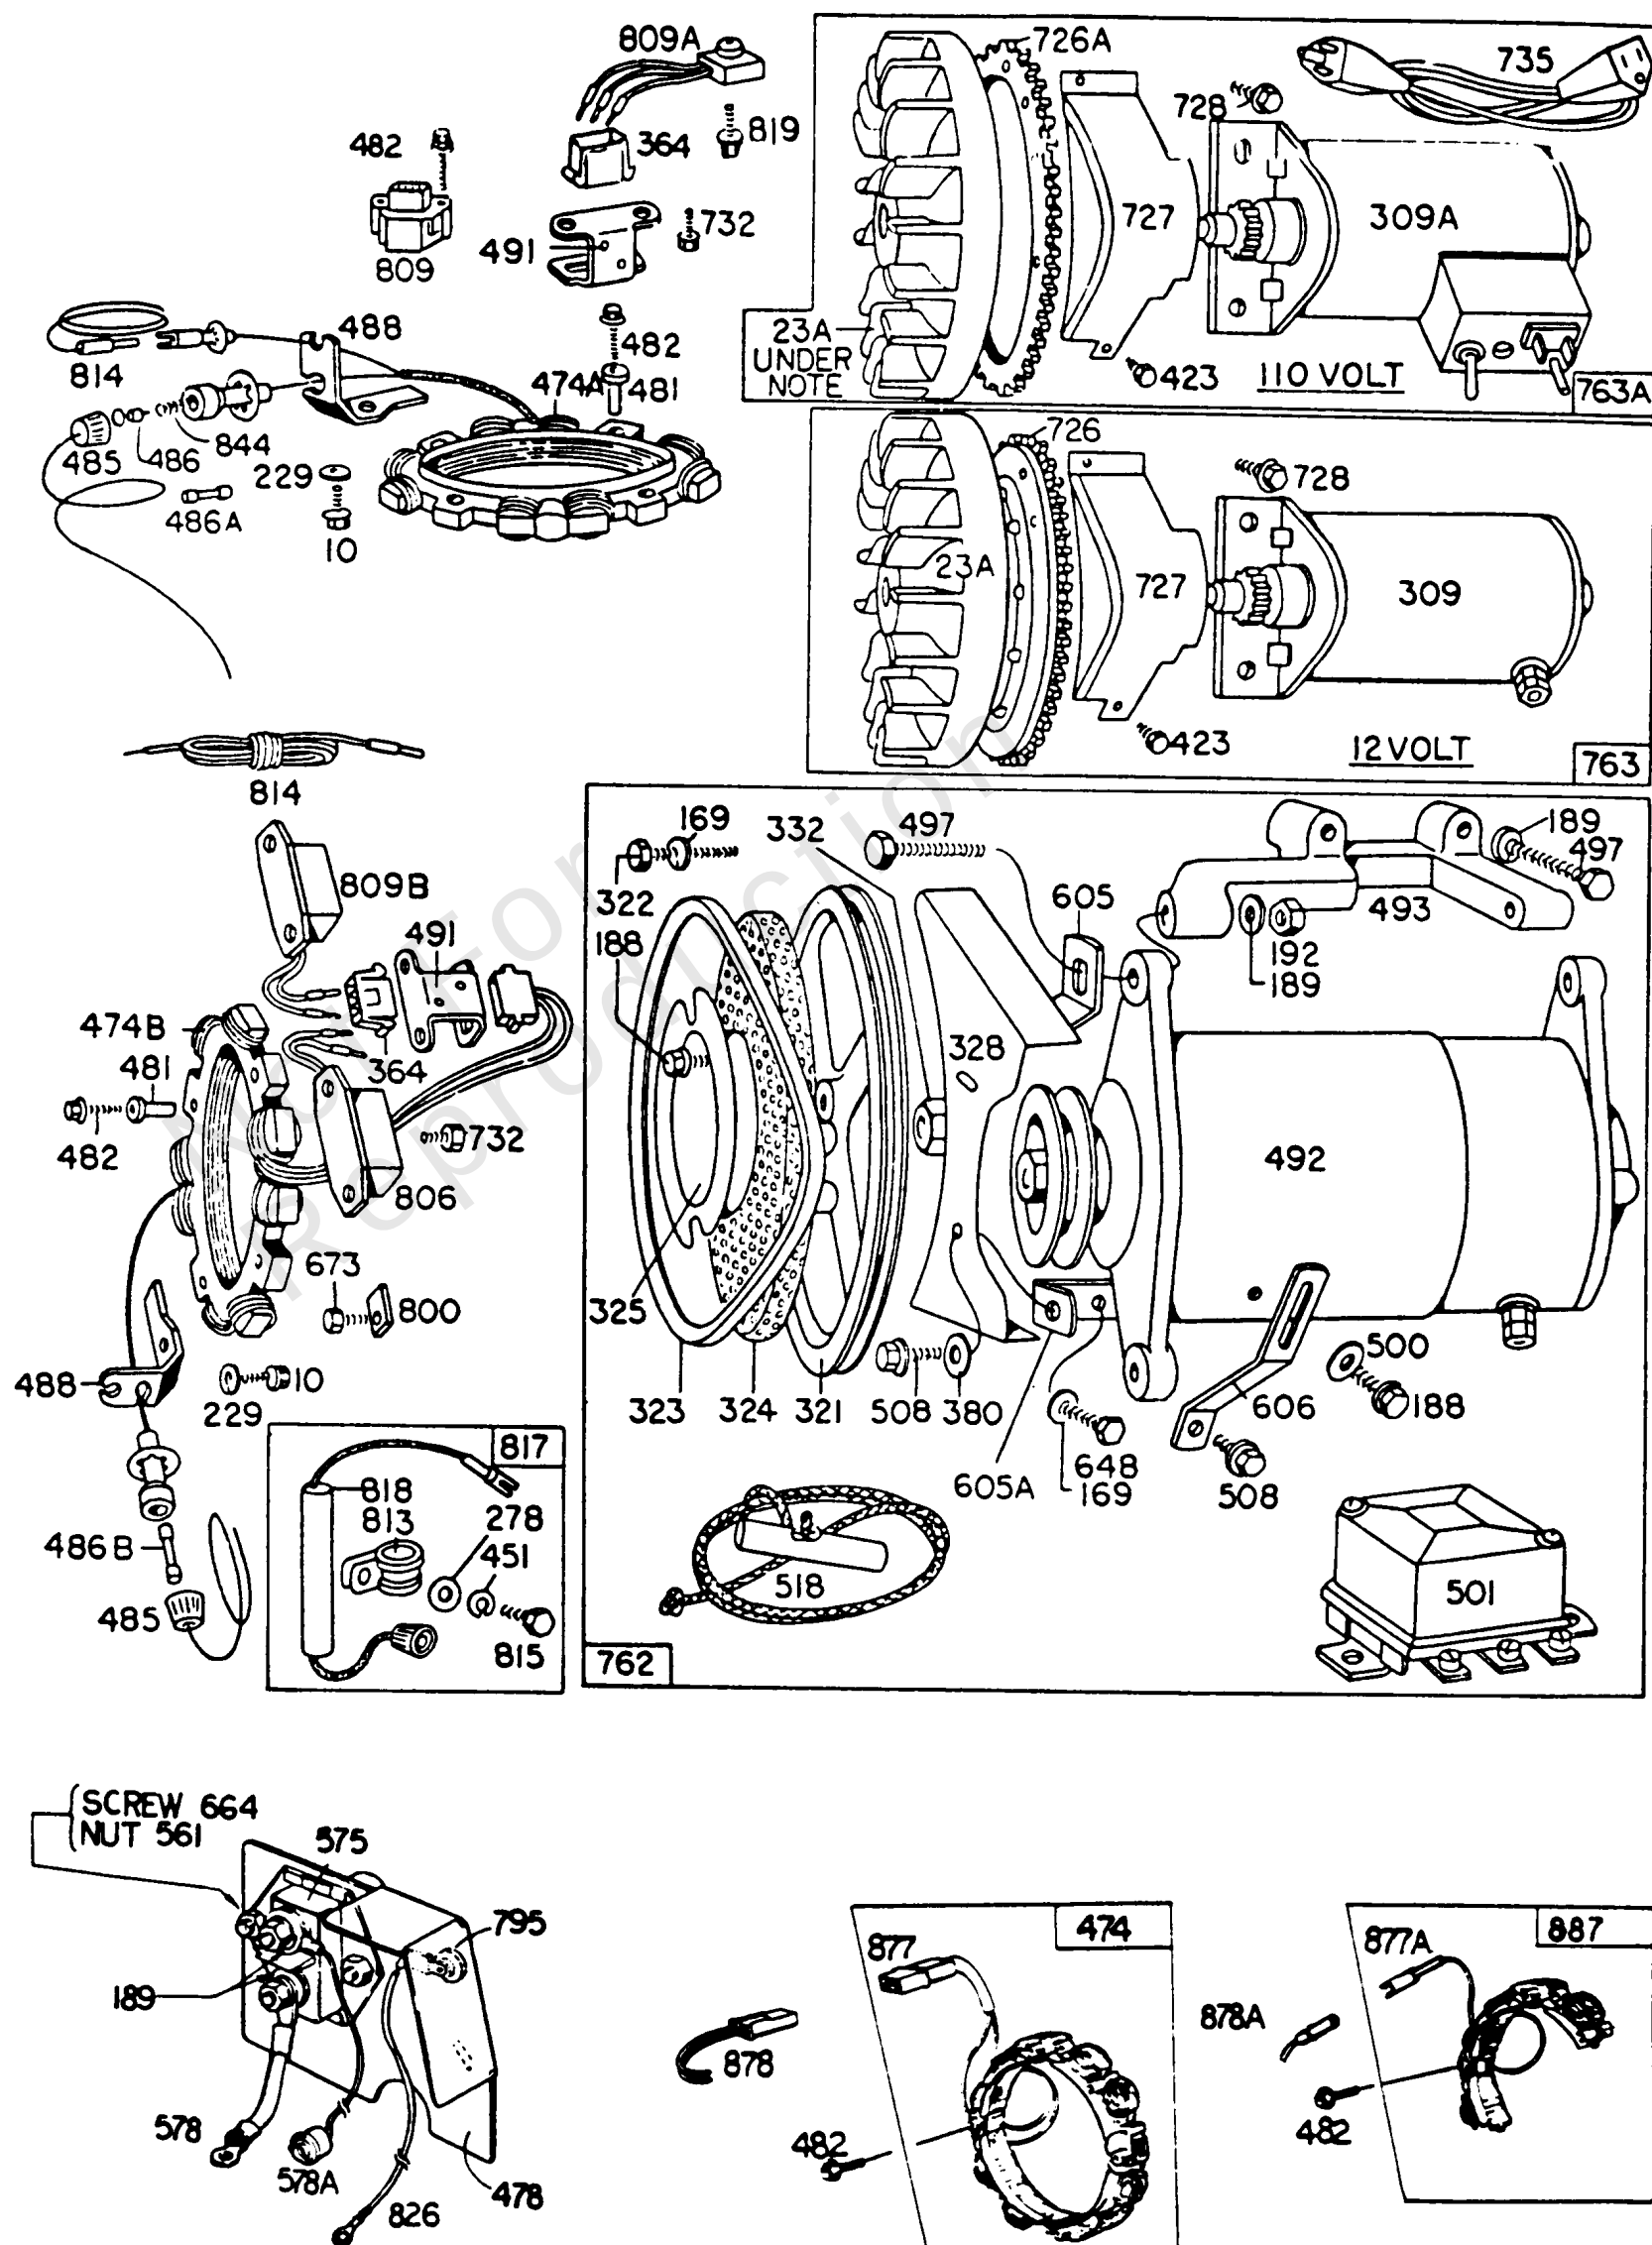


Electric Starters

REF NO	PART NO	QTY	DESCRIPTION
364	280081		WIRE/CONNECTOR, Alternator
380	91324		WASHER
423	93410		SCREW
451	90364		WASHER
474A	391520		ALTERNATOR -(Diode Type)
474A	391222		ALTERNATOR -(Fuse Type)
474	393474		ALTERNATOR -(Dual Circuit)
478	222751		KIT, Panel -(Starter)
481	230976		BUSHING, Alternator
482	93621		SCREW -(Tapping)
485	390888		CAP, Wire/Fuse
486A	67125		FUSE -(7 1/2 Amp)
486	391507		RECTIFIER
488	222211		BRACKET, Mounting
491	222115		BRACKET, Mounting
492	296028		MOTOR, Starter -(12v Delco-Remy #1101695 & Pulley #1949358) (Delco-Remy No. 1101873 and Pulley-Delco-Remy No. 1949358)
492	298590		SWITCH, Toggle
493	211594		BRACKET, Starter Motor
497	91203		SCREW -(5/16-18 X 1-3/4)
500	91325		WASHER
501	295924		REGULATOR -(Flat Mount, Delco-remy)
501	297196		REGULATOR -(Saddle Mount, Delco-remy) Uses: 297197 Clamp (Regulator to Gen.) 67245 Lamp-Charge Indicator 221745 Panel-Instrument
508	93294		SCREW -(5/8)
518	69932		GRIP, Starter Rope
561	92278		NUT -(Starting Switch)
575	299139		SWITCH, Starting
578A	393109		WIRE ASSEMBLY -(Starter Switch To Alternator)
578	392683		CABLE, Starter
605A	297171		BRACKET, Support -(Lower)
605	297187		BRACKET, Mounting -(Upper)
606	221443		STRAP, Adjusting
648	91439		SCREW
664	93415		SCREW -(1/4-20 X 3/4)
673	93438		SCREW

Footnotes:

 For use only with Starter Motors with Plastic Drive Gear.
For use only with Starter Motors with Plastic Drive Gear

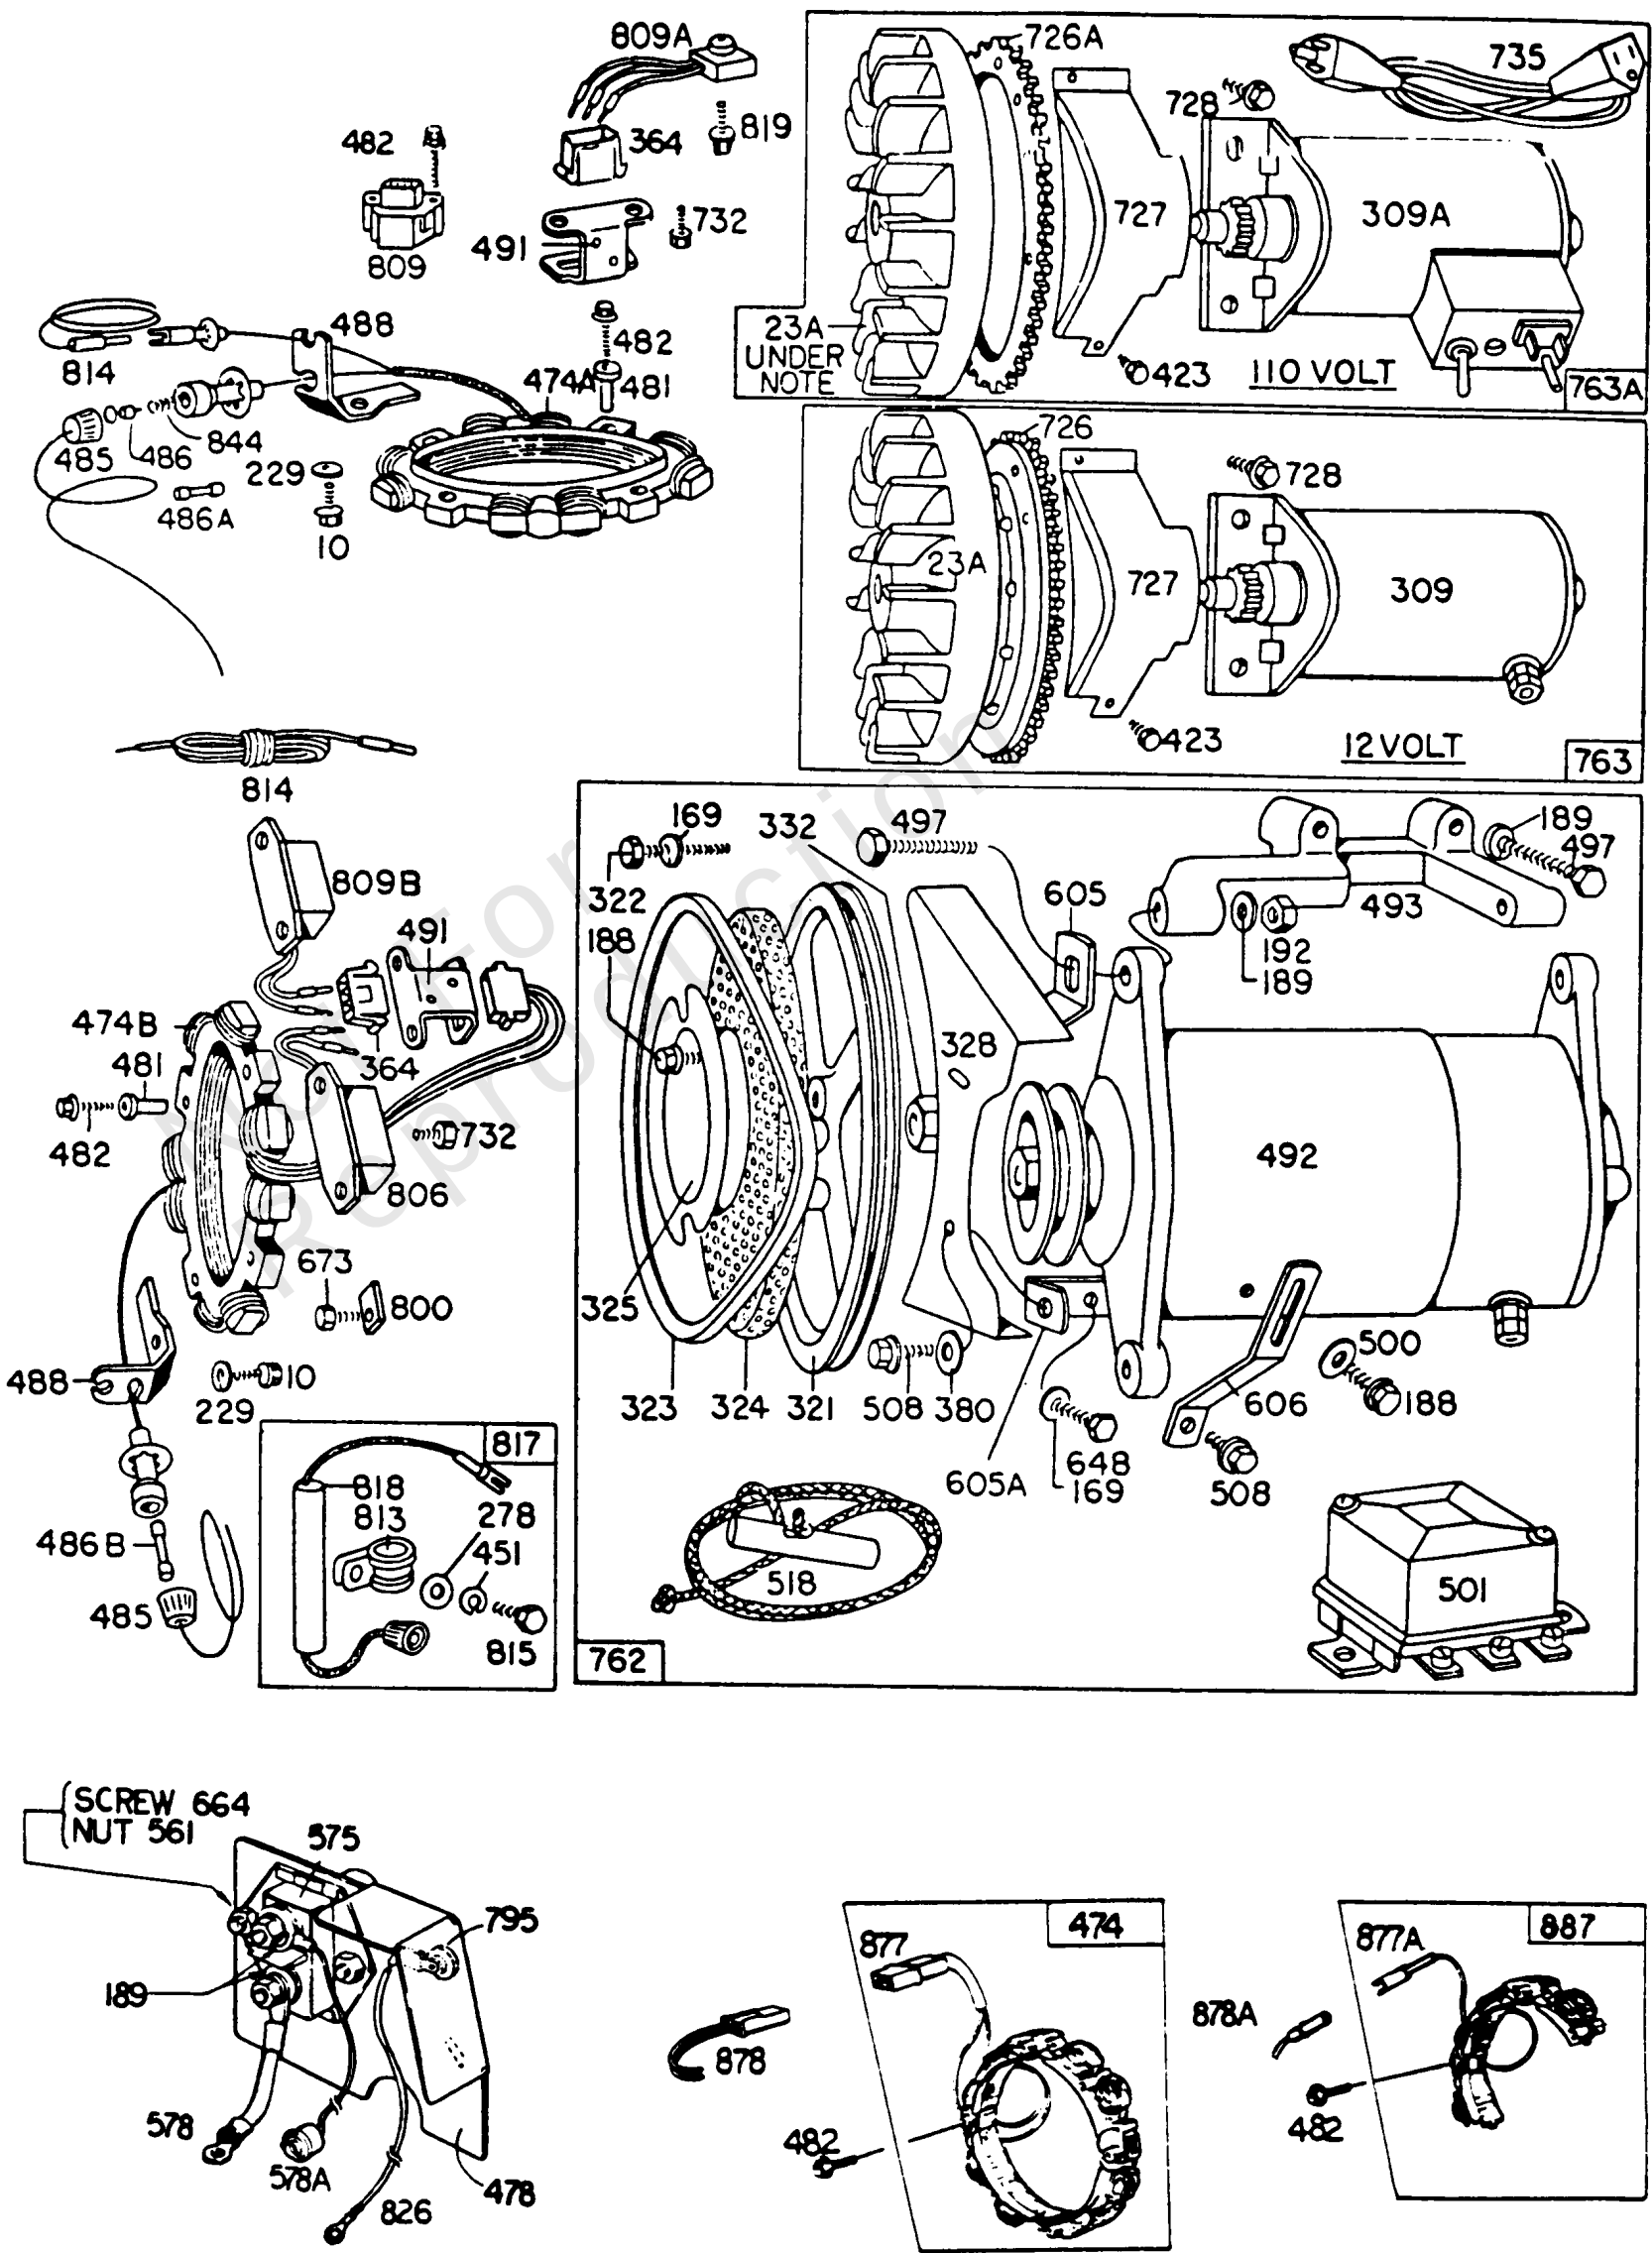


Electric Starters

REF NO	PART NO	QTY	DESCRIPTION
726A	299543		GEAR, Ring -(Steel) (Includes Mounting Hardware) For use only with Starter Motors with Steel Drive Gear
726	391246		GEAR, Ring -(Includes Mounting Hardware) -Used Before Code Date 75022711
726	392134		GEAR, Ring -Used After Code Date 75022610
727	221940		GUARD, Flywheel -Uses: 93623 Screw (2)
727	221968		GUARD, Flywheel -Uses: 93623 Screw-Mtg.
727	390233		COVER, Starter Drive
728	93523		SCREW -(5/16-18 X 11/16)
732	93490		SCREW -(Rotating Screen)
735	390748		CORD, Starter -(Canadian Use Only)
735	390966		CORD, Starter -(Includes Adaptor Plug)
762	297335		KIT, Electric Starter -(12 Volt) (Low Position)
763A	299914		KIT, Electric Starter -(110 Volt Gear Drive) (Cannot be used with Alternator)
763	391604		KIT, Electric Starter -(12 Volt Gear Drive)
795	392833		SWITCH, Key
800	222212		RETAINER
806	390545		REGULATOR
809A	390692		RECTIFIER
809	390892		RECTIFIER
813	93660		CLAMP
814	390867		HARNESS, Alternator -(Ac Only)
815	93661		SCREW -(Diode Clamp)
817	390624		WIRE/CONNECTOR, Alternator
818	390608		WIRE/CONNECTOR, Alternator
819	93680		SCREW
826	393110		WIRE ASSEMBLY
844	261269		SPRING, Diode
877A	393814		WIRE/CONNECTOR, Alternator -(10 Amp Regulated)
877	393456		WIRE/CONNECTOR, Alternator
878A	393422		WIRE ASSEMBLY -(Dc Only)
878	393362		HARNESS, Alternator -(Dual Circuit)
887	391529		ALTERNATOR -(DC Only)

Footnotes:

 For use only with Starter Motors with Plastic Drive Gear.
For use only with Starter Motors with Plastic Drive Gear

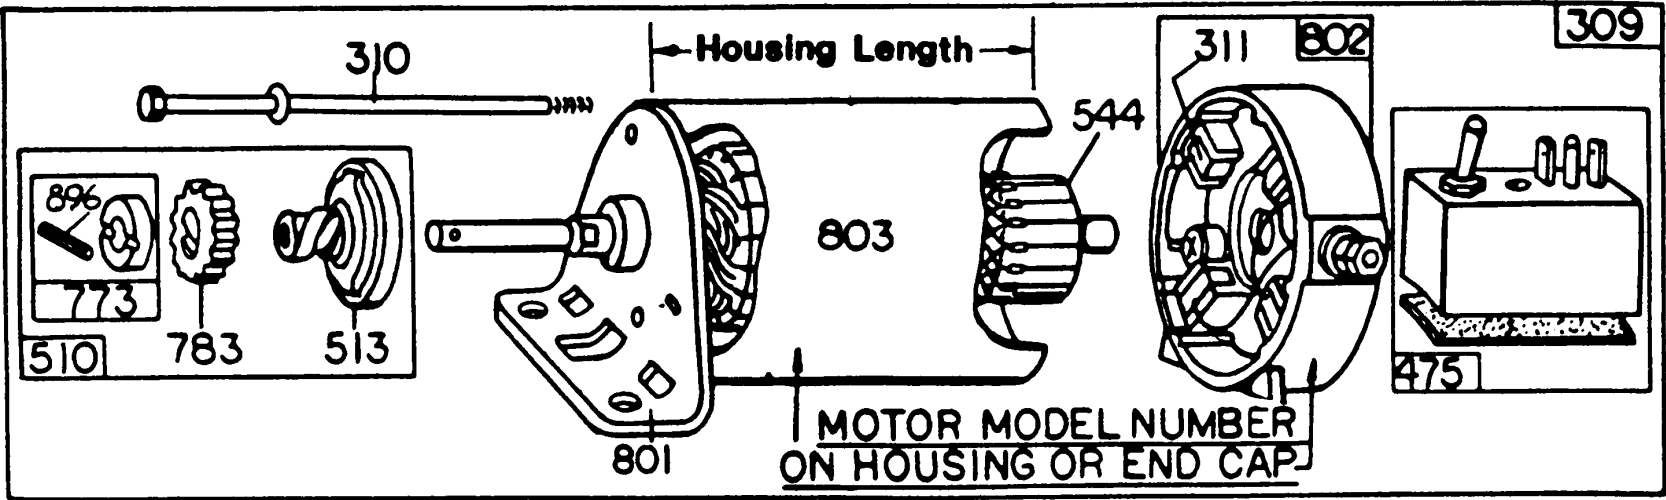


Not For
Reproduction

Electric Starters

REF NO	PART NO	QTY	DESCRIPTION
309	299330		MOTOR, Starter -(Mitsubishi and American Bosch 12V)
309	390307		MOTOR, Starter -(Bosch or Mitsubishi)
309	390838		MOTOR, Starter -(3 1/16 Housing)
309	391756		MOTOR, Starter -(American Bosch 120v)
309	392749		MOTOR, Starter -(3 1/16 Housing)
309	393851		MOTOR, Starter -(3 1/2 Housing) (Briggs & Stratton 110V)
310	299962		BOLT -(Mitsubishi Starters)
310	390080		SCREW -(American Bosch Starters)
310	390450		BOLT -(American Bosch 12V)
310	391706		SCREW -(3 1/16 Housing)
310	393690		BOLT -American Bosch 110V (06026-28-MO-30-SM)
310	93771		BOLT -(Mitsubishi 12V)
310	93889		SCREW -(3 1/2 Housing) (Briggs & Stratton 120V)
311	390081		SET, Brush -(American Bosch 110V Starters)
311	390449		SET, Brush -(American Bosch 12V)
311	390990		SET, Brush -(Mitsubishi Starters)
311	391705		SET, Brush -(3 1/16 Housing)
475	299966		RECTIFIER -(Mitsubishi 110V)
475	390084		RECTIFIER -(American Bosch 110V)
475	390099		RECTIFIER -(American Bosch 110V)
475	393510		RECTIFIER -American Bosch 110V (06026-28-MO-30-SM)
510	299963		DRIVE, Starter -(Mitsubishi Starters)
510	390094		DRIVE, Starter -American Bosch 12V & 110V (SME 12-A8 & SME 110-C3, C6, or C8)
510	390443		DRIVE, Starter -(American Bosch 12V Or 110V)
510	391461		DRIVE, Starter -(3 1/2 Housing) Includes #391135 Clutch Assembly (Ref. No. 513) #280104 Gear (Ref. No. 783) #391462 Retainer and Pin (Ref. No. 773) #93754 Roll Pin (Ref. No. 896)
544	299968		ARMATURE, Starter
544	390086		ARMATURE, Starter
544	390088		ARMATURE, Starter -(American Bosch 110 V Starters)

Footnotes:

 For use only with Starter Motors with Plastic Drive Gear

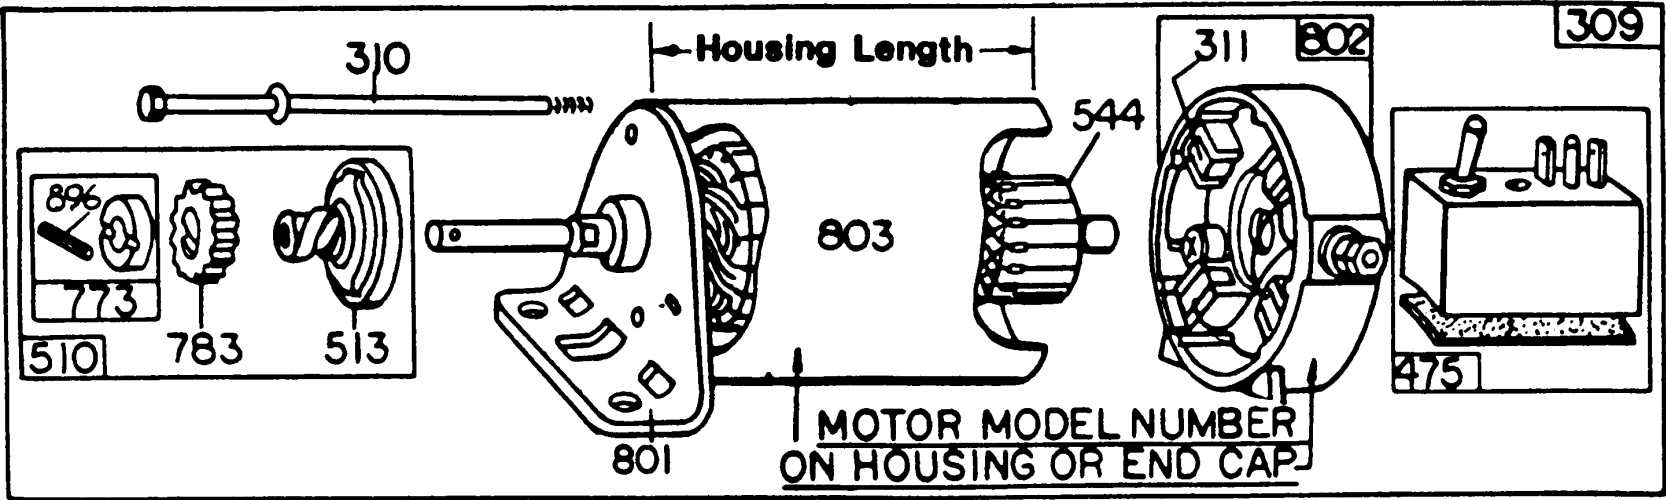


Not For
Reproduction

Electric Starters

REF NO	PART NO	QTY	DESCRIPTION
544	390446		ARMATURE, Starter
544	390456		ARMATURE, Starter
544	390457		ARMATURE, Starter
544	390837		ARMATURE, Starter -(3 5/8 Housing)
544	391584		ARMATURE, Starter
544	391607		ARMATURE, Starter -(American Bosch 12V)
544	392747		ARMATURE, Starter -(3 21/32 Housing)
544	393607		ARMATURE, Starter -(3 1/2 Housing) (110V)
544	393692		ARMATURE, Starter -(American Bosch 110V)
801	299964		CAP, Drive -(Mitsubishi 110V)
801	390091		CAP, Drive
801	390092		CAP, Drive -(American Bosch 12V Or 110V)
801	390093		CAP, Drive
801	390444		CAP, Drive -(American Bosch 12V)
801	390454		CAP, Drive -(Mitsubishi 12V)
801	391585		CAP, Drive -(Mitsubishi 12V)
801	392061		CAP, Drive -(3-1/16 or 3-3/4 Housing)
801	393228		CAP, End -(3 1/2 Housing) (Briggs & Stratton 110V)
801	393682		CAP, Drive -American Bosch 110V (06026-28-MO-30-SM)
802	299965		CAP, End -(Mitsubishi 110V) Includes Brush Set
802	390089		CAP, End -(American Bosch 12V) Includes Brush Set
802	390098		CAP, End -Includes Brush Set (American Bosch 110 V Starters)
802	390448		CAP, End -(American Bosch 12V) Includes Brush Set
802	390455		CAP, End -Includes Brush Set (Mitsubishi 12Vstarters)
802	390846		CAP, End -(3 1/16 Housing) Includes Brush Set
802	393487		CAP, End -(3 1/2 Housing) (Briggs & Stratton 110V) Includes Brush Set
802	393691		CAP, End -(American Bosch 110V) Includes Brush Set
803	299967		HOUSING, Starter
803	390095		HOUSING, Starter -(American Bosch 110V)
803	390096		HOUSING, Starter -(American Bosch 110V)
803	390097		HOUSING, Starter
803	390447		HOUSING, Starter -(American Bosch 12V)

Footnotes:

 For use only with Starter Motors with Plastic Drive Gear

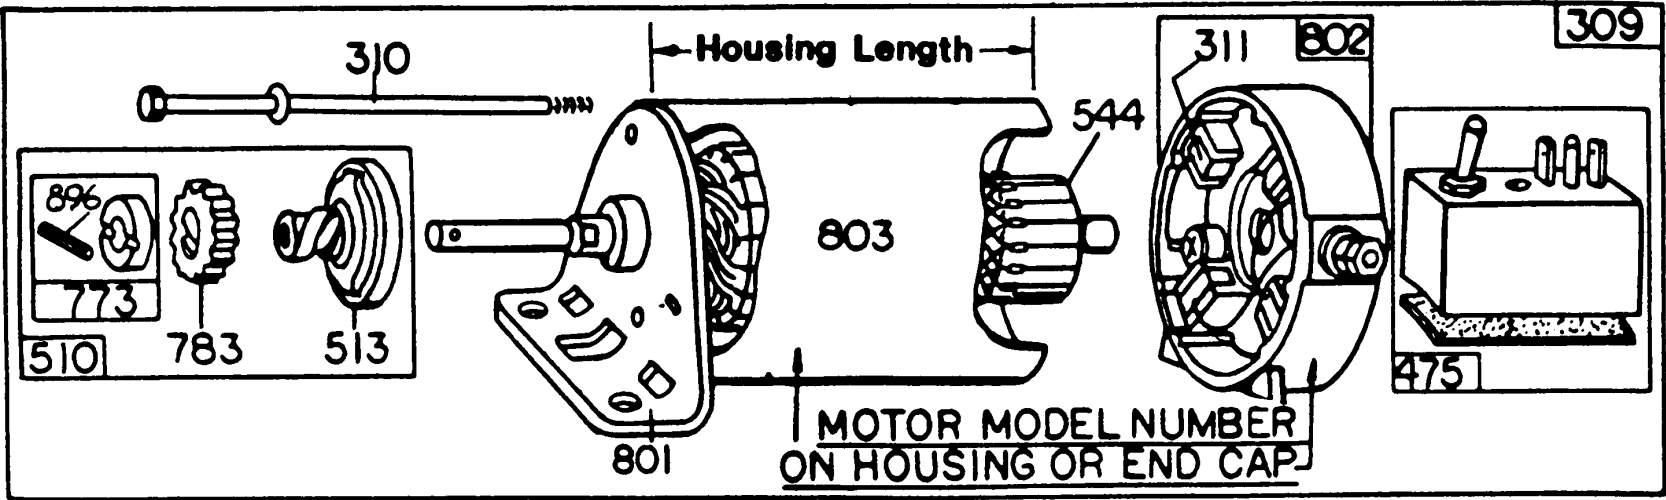

Not For
Reproduction


Electric Starters

REF NO	PART NO	QTY	DESCRIPTION
803	390452		HOUSING, Starter -(Mitsubishi 12V)
803	390453		HOUSING, Starter -(Mitsubishi 12V)
803	390849		HOUSING, Starter -(3 1/16 Housing)
803	392744		HOUSING, Starter -(3 1/16 Housing)
803	393433		HOUSING, Starter -(3 1/2 Housing) (Briggs & Stratton 110V)
803	393781		HOUSING, Starter -American Bosch 110V (06026-28-MO-30-SM)

Not For
Reproduction

Footnotes:

 For use only with Starter Motors with Plastic Drive Gear

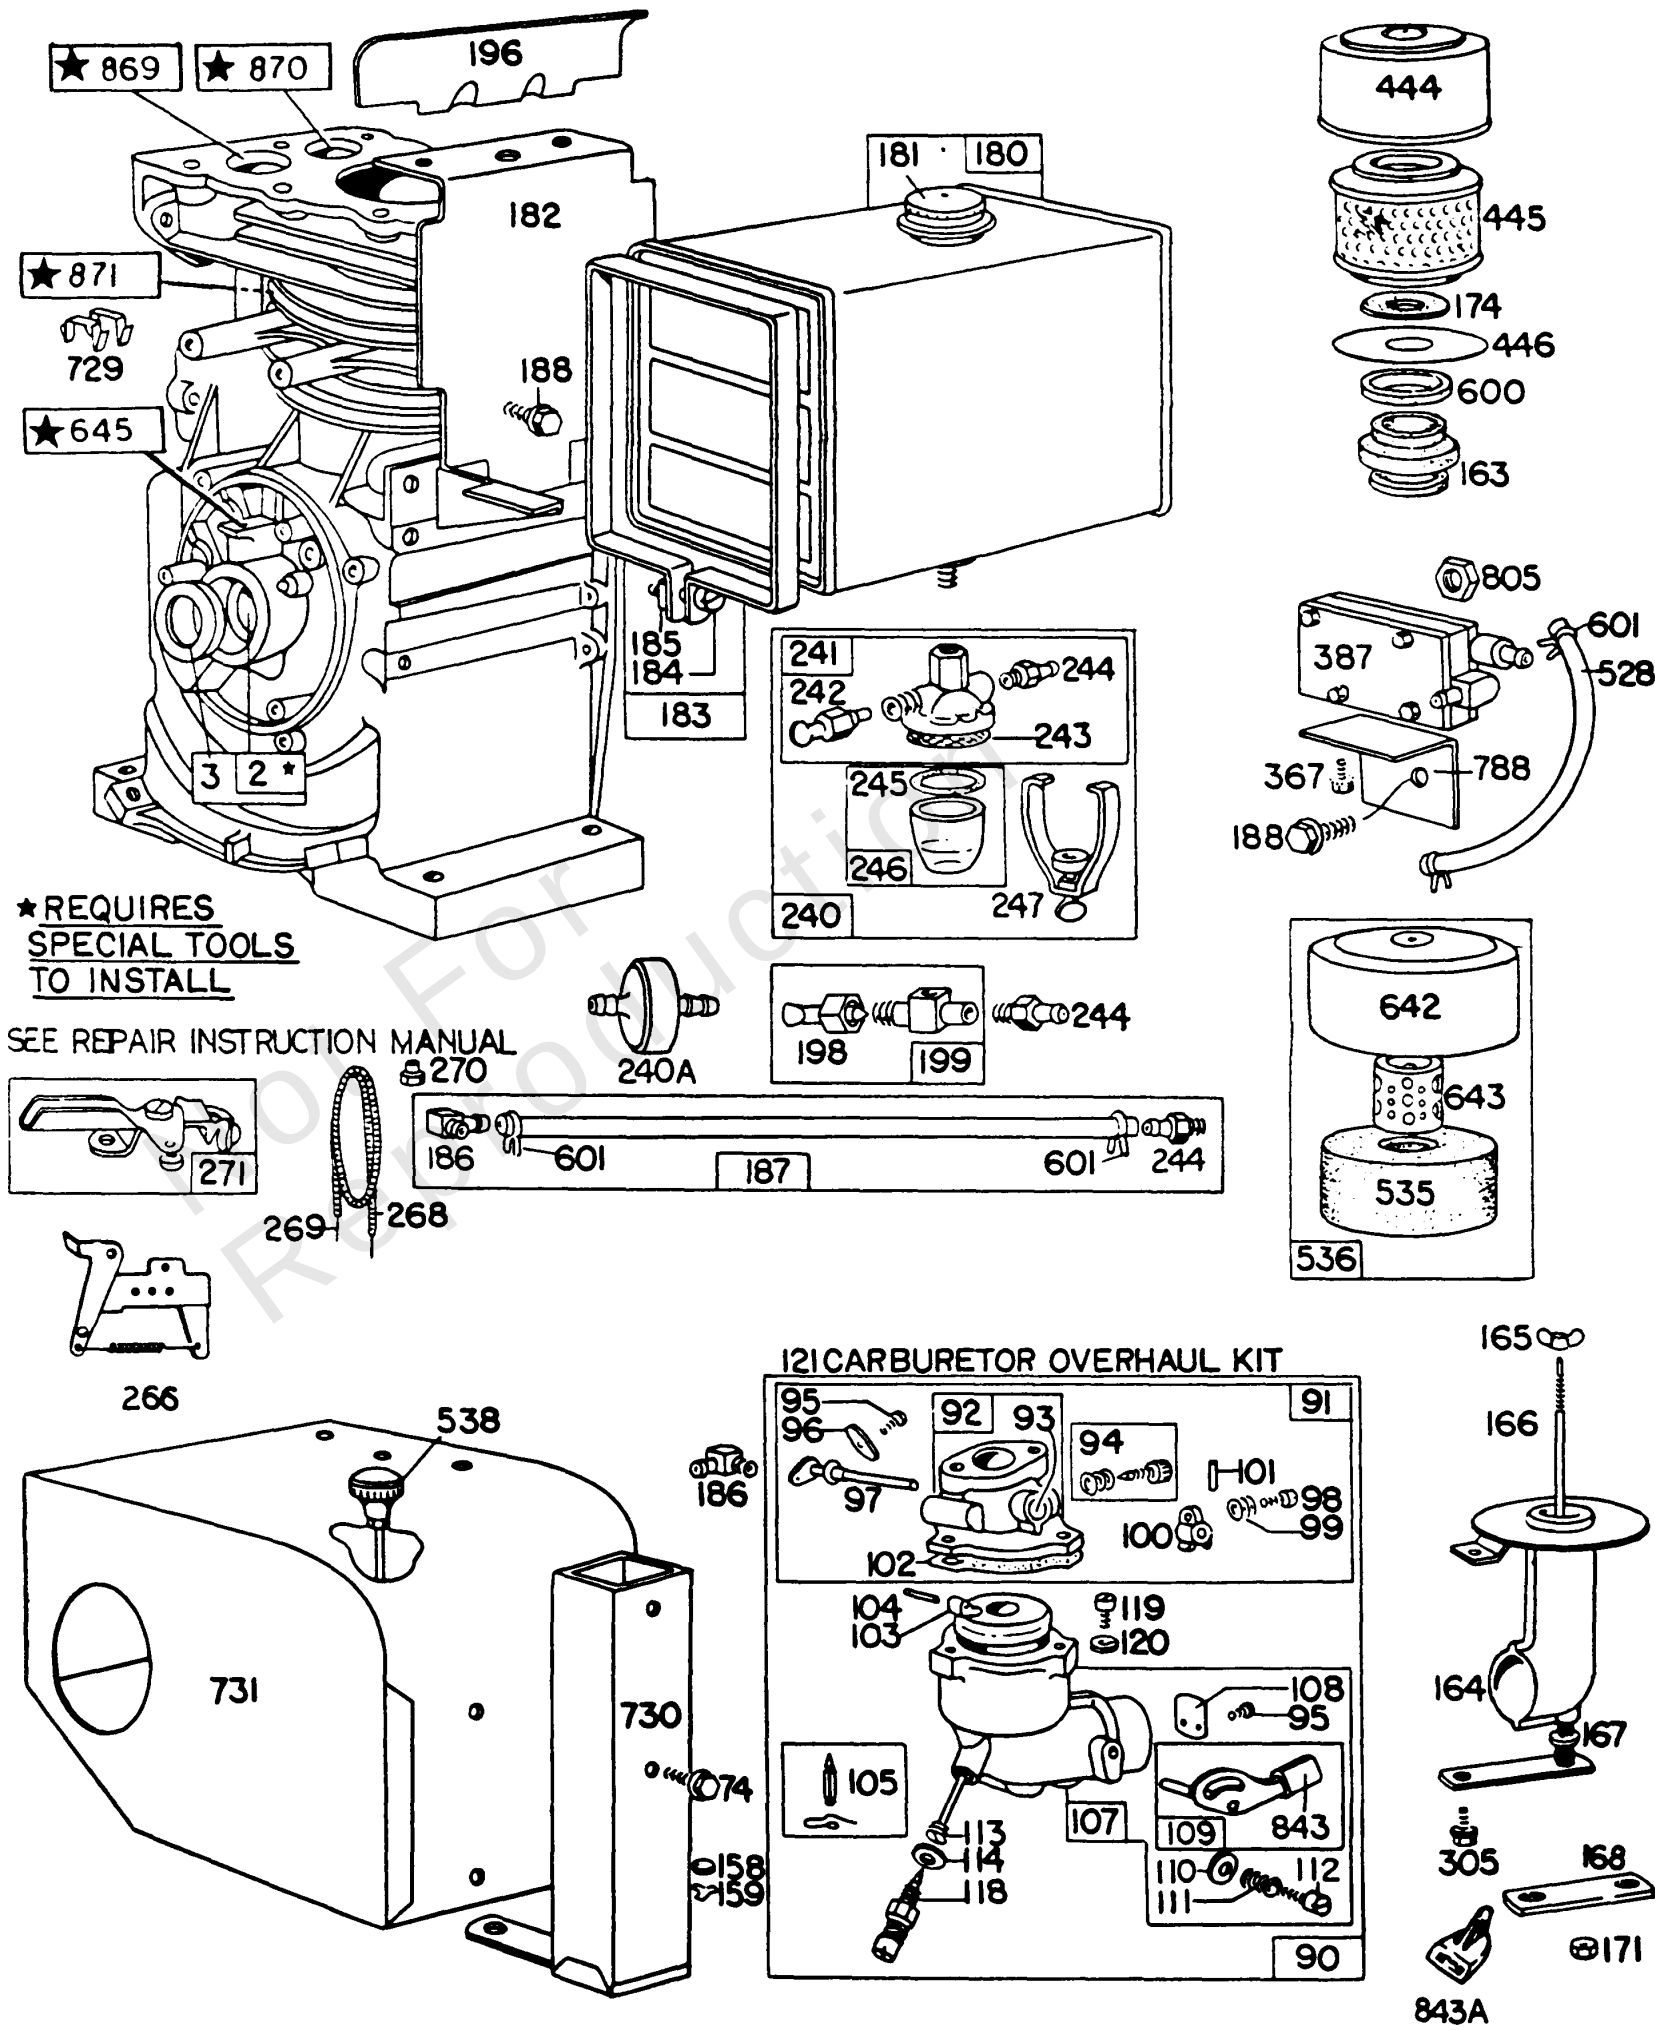


Fuel Tank,Sno-Gard,Primer

REF NO	PART NO	QTY	DESCRIPTION
2	295962		KIT, Bushing/Seal
3	294606		SEAL, Oil
74	93014		SCREW
74	93042		SCREW
90	390323		CARBURETOR -(Manual Choke)
91	390404		BODY, Upper Carburetor
92	390503		BODY, Upper Carburetor
93	23108		BUSHING, Throttle Shaft
94	292681		VALVE, Idle Mixture -Included in Carburetor Overhaul Kit-Part No. 295938
95	93499		SCREW -(Throttle Valve)
96	62940		VALVE, Throttle
97	298826		SHAFT, Throttle
98	91920		SCREW -(8-32 X 5/8)
99	26157		SPRING, Compression
100	61967		STOP, Throttle
101	93043		PIN, Shaft
102	27918		GASKET, Carburetor Body -Included in Carburetor Overhaul Kit-Part No. 295938
103	99333		FLOAT, Carburetor
104	230896		PIN, Float Hinge -Included in Carburetor Overhaul Kit-Part No. 295938
105	299096		KIT, Needle/Seat
107	390403		BODY, Lower Carburetor
108	62872		VALVE, Choke
109	391987		SHAFT, Choke -(Manual)
110	62899		WASHER -(Thermostat)
111	26155		SPRING, Friction
112	23123		SCREW
113	390395		NOZZLE, Carburetor -Included in Carburetor Overhaul Kit-Part No. 295938
114	68667		WASHER -(Viton Seat) Included in Carburetor Overhaul Kit-Part No. 295938
118	99525		VALVE, High Speed -Included in Carburetor Overhaul Kit-Part No. 295938
119	90746		SCREW -(10-32 X 5/8)
120	92290		WASHER
121	295938		KIT, Carburetor Overhaul
158	27590		PLUG, Carburetor Filter/Drain
159	220521		RETAINER, Carburetor Drain
163	27907		GASKET, Air Cleaner
164	391628		BASE, Air Cleaner
165	93453		NUT
166	390325		STUD
167	65978		SEAL, O-Ring -(Needle Valve)

Footnotes:

 For use only with Starter Motors with Plastic Drive Gear

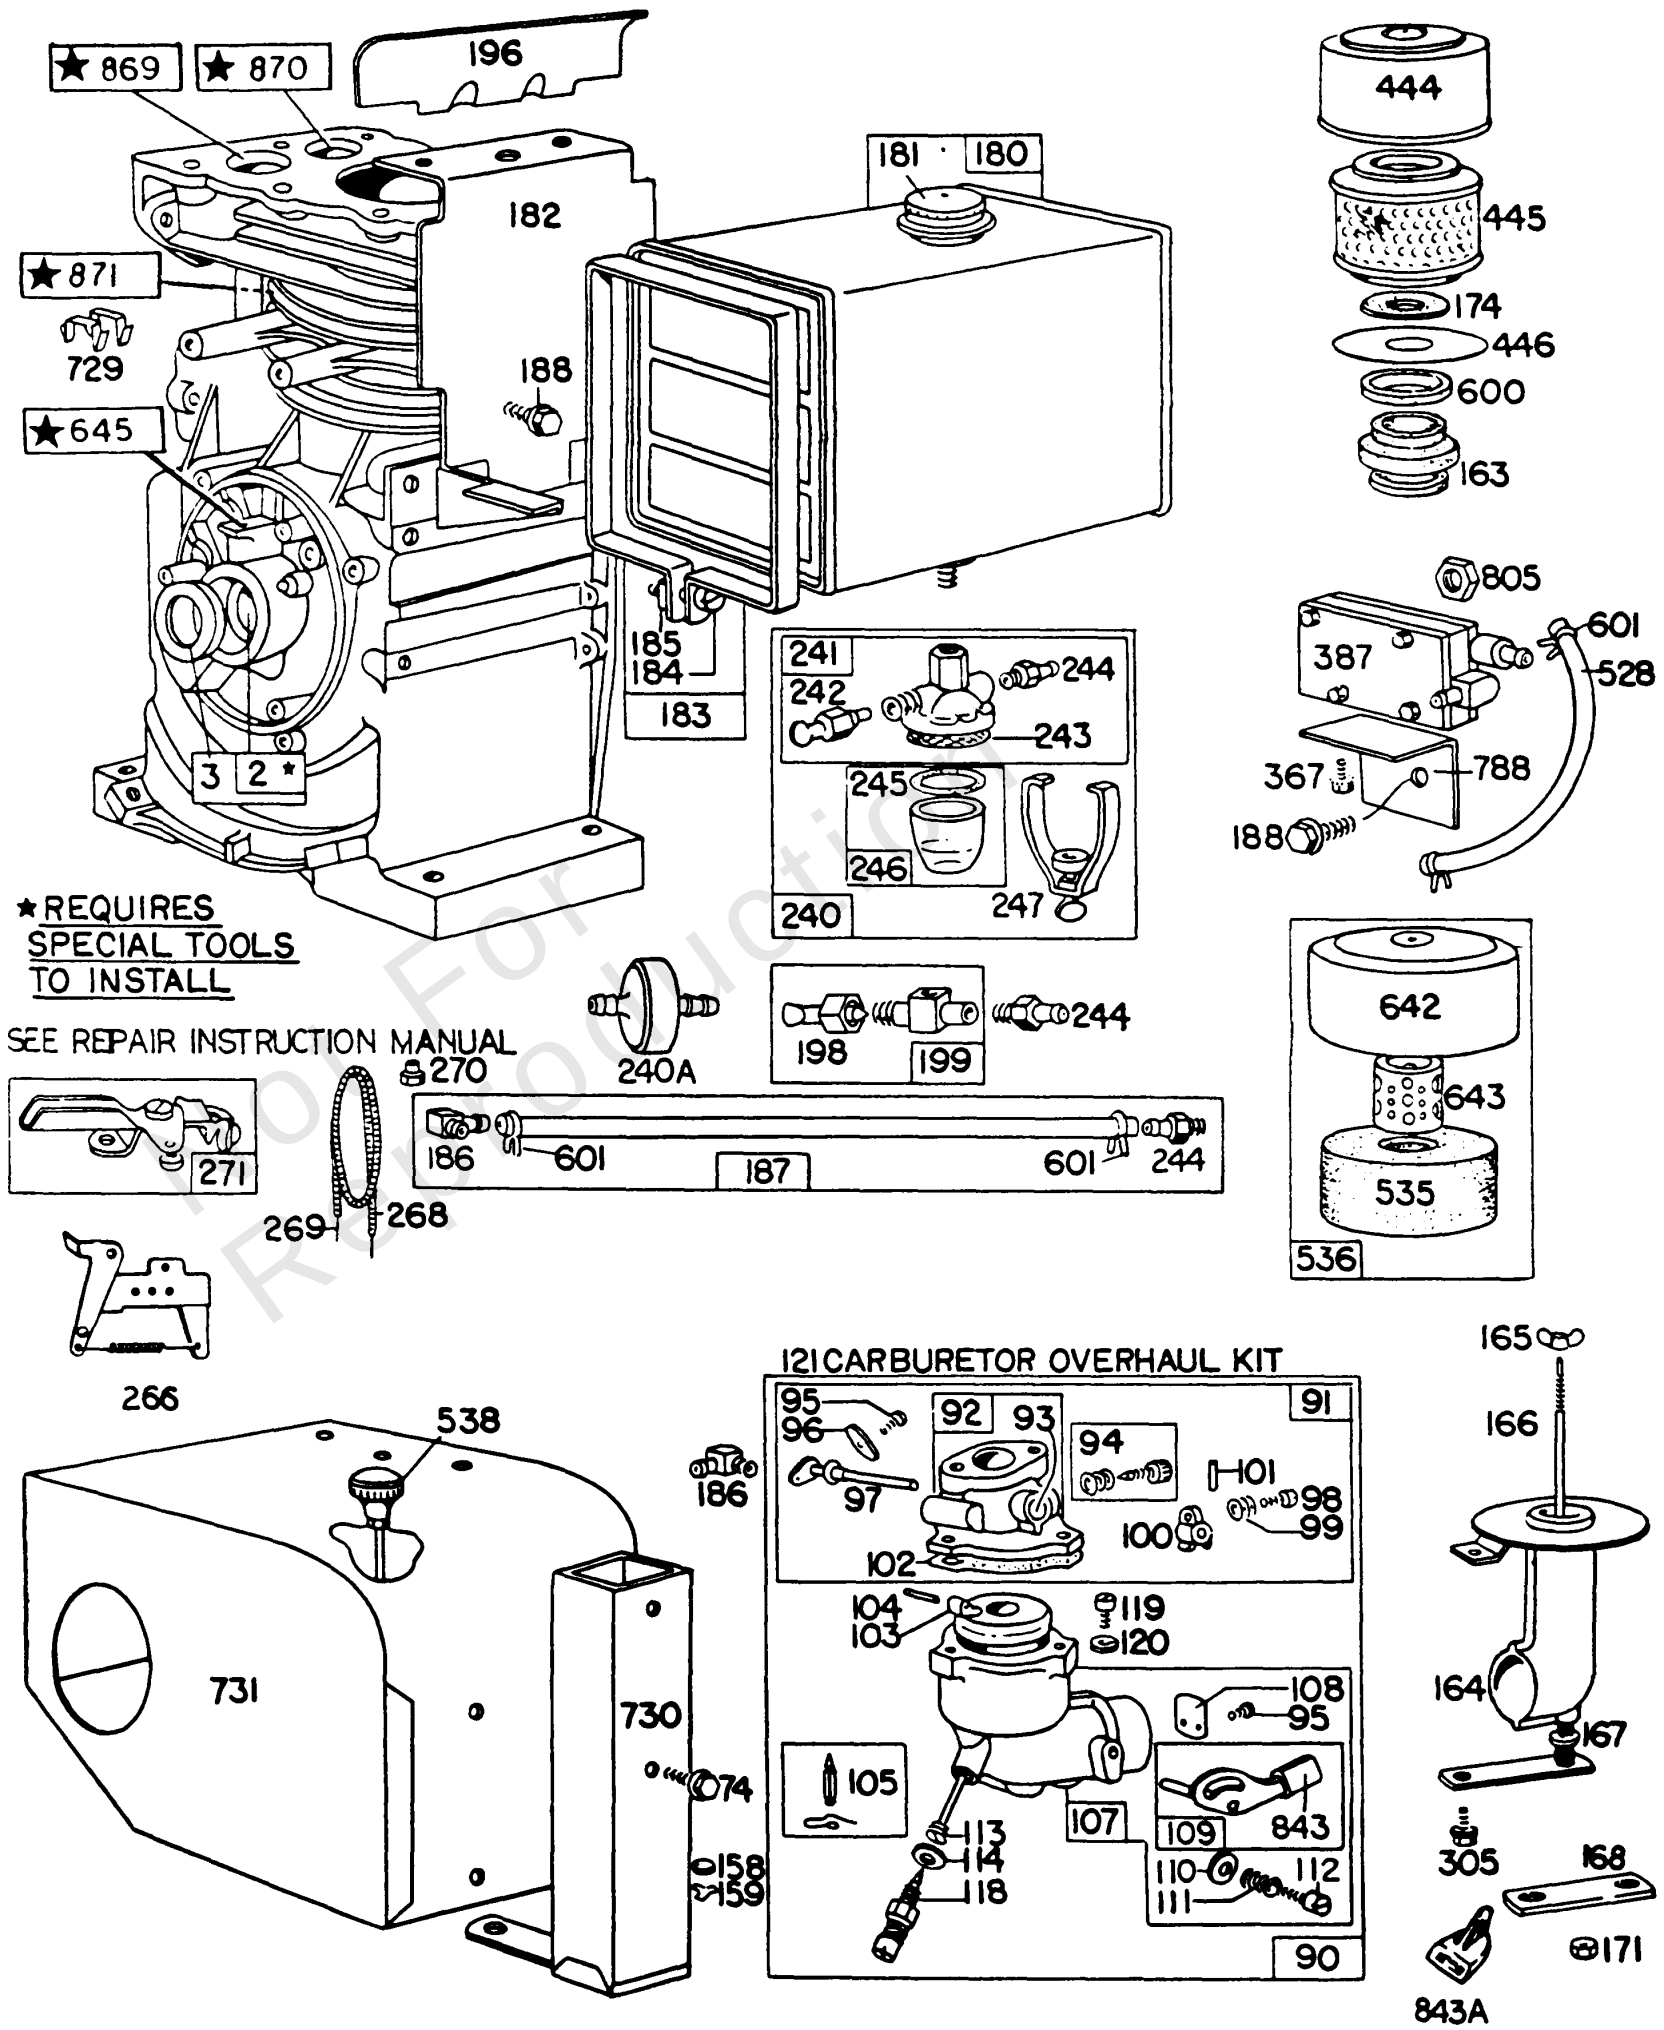


Fuel Tank,Sno-Gard,Primer

REF NO	PART NO	QTY	DESCRIPTION
168	222150		STRAP/STUD, Air Cleaner Mounting
171	92129		NUT -(1/4-28)
174	270730		GASKET, Air Cleaner
180	290816		TANK, Fuel -(4 Quart)
181	392301		CAP, Fuel Tank
182	221935		BRACKET, Fuel Tank
183	291367		STRAP, Fuel Tank -(4 Quart)
184	91257		SCREW -(1/4-20 X 1-1/2)
185	90970		NUT -(1/4-20)
186	67218		CONNECTOR, Hose
187	391498		LINE, Fuel
188	93535		SCREW -(5/16-18 X 3/4)
188	93623		SCREW -(Flywheel Guard)
196	22907		BRACKET, Fuel Tank -(8 Quart) (Remote Mount Only)
198	293934		VALVE, Fuel Shut Off
199	297563		OUTLET, Tank
240A	298090		FILTER, Fuel
240	295984		CARBURETOR -(Flexible Line)
241	296005		COVER, Fuel Filter
242	295913		VALVE, Fuel Shut Off
243	22547		STRAINER, Fuel
244	230318		CONNECTOR, Hose
245	68477		GASKET, Fuel Bowl -Included in Gasket Set-Part No. 299577
246	298683		BOWL, Fuel Filter
247	99665		YOKE, Bowl
266	291460		CONTROL, Throttle -(Disc Type)
268	65616		CASING, Control Wire -(Cut To Required Length)
269	222267		ANCHOR, Spring
269	222268		WIRE, Control
269	261137		SPRING, Throttle Return -(Throttle Return)
269	26633		WIRE, Control -(Cut To Required Length) If longer wire is required, specify length in inches; if shorter wire is needed, Order No. 26633 and cut to required length.
270	63426		NUT -(Control Wire Casing)
271	290568		LEVER, Control
305	93158		SCREW -(1/4-20 X 5/8)
367	93380		SCREW
387	390765		PUMP, Fuel

Footnotes:

 For use only with Starter Motors with Plastic Drive Gear

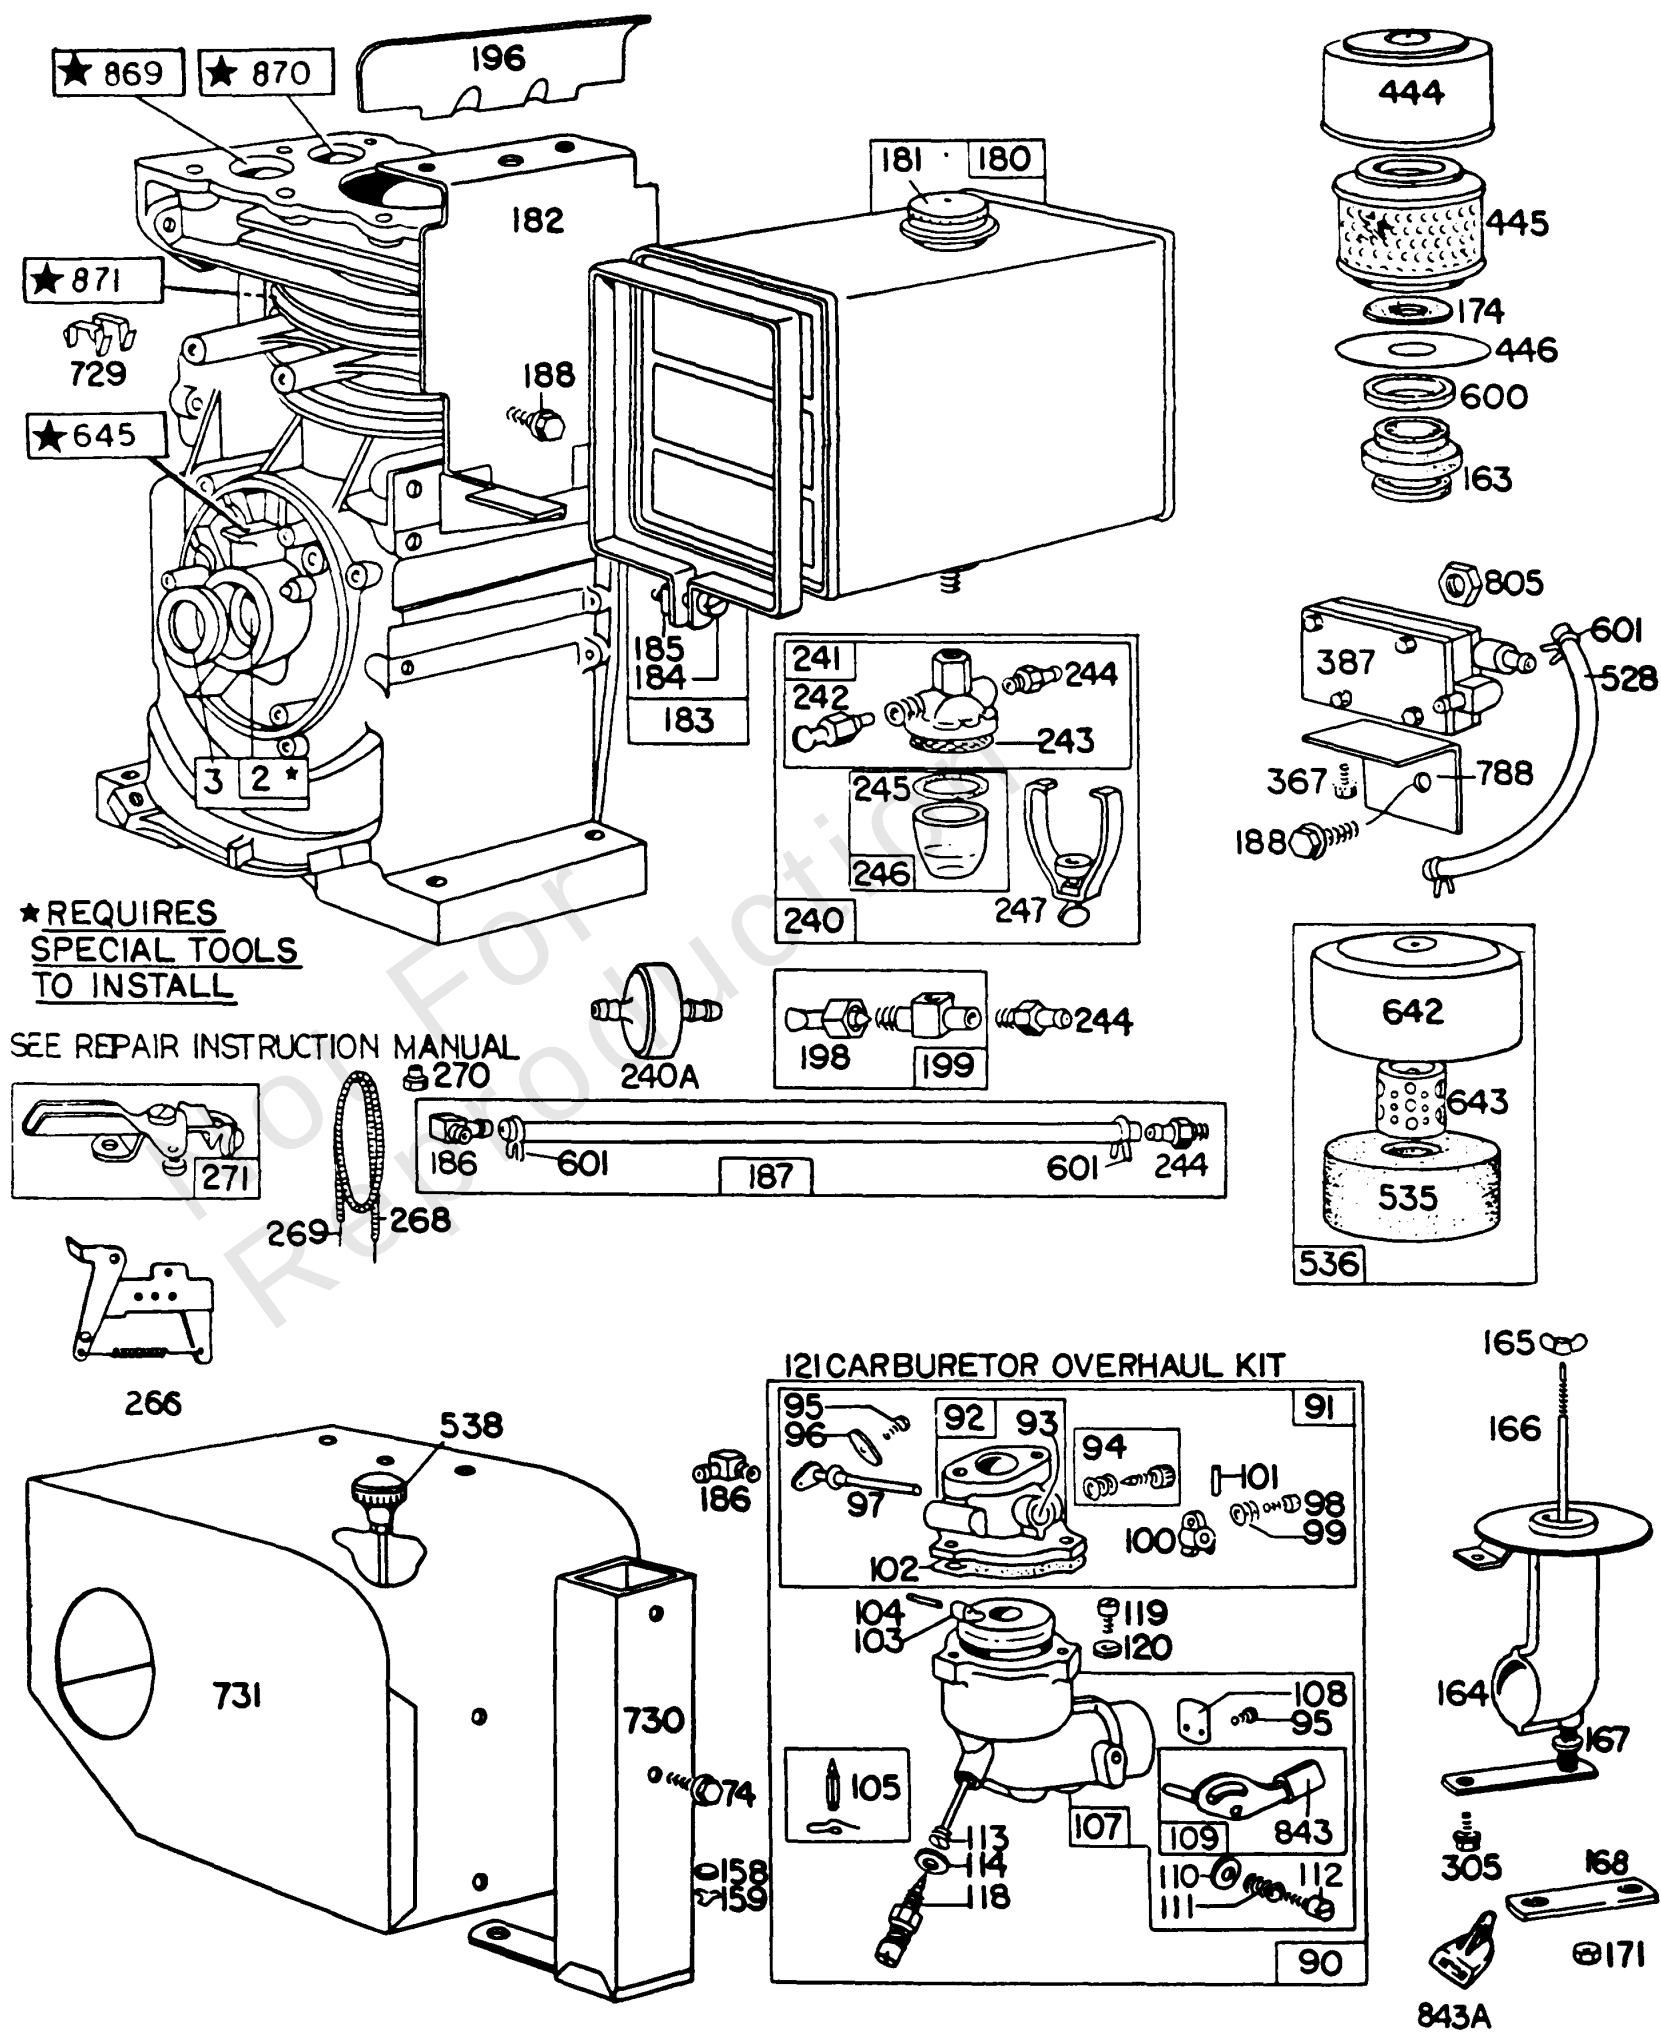

Fuel Tank,Sno-Gard,Primer

REF NO	PART NO	QTY	DESCRIPTION
444	390588		COVER, Air Cleaner
445	390492		FILTER, A/C Cartridge
446	221969		BRACKET, Air Cleaner
528	390674		LINE, Fuel
535	270093		FILTER, Air Cleaner Foam
536	390400		CLEANER, Air
538	390167		ROD, Governor Control
600	270055		SPACER
601	93053		CLAMP, Hose -(Green)
642	221468		COVER, Air Cleaner
643	280001		SUPPORT, Foam Element
645	23513		BUSHING, Plunger -(Used only with Breaker Point Ignition)
729	221907		CLIP, Wire
730	299384		MANIFOLD, Intake
731	299391		HOOD, Snow
731	391166		HOOD, Snow -Uses: 222322 Strap-Support 93730 Stud-Strap to Crankcase Cover 93490 Screw-Strap to Hood 93203 Nut-Hex. (1)
788	222221		BRACKET, Fuel Pump
805	231001		NUT
843A	280147		KNOB, Control -(Sno gard)
843	280149		SLEEVE, Lever
869	211661		SEAT, Valve -(Exhaust)
870	211661		SEAT, Valve -(Exhaust)
871	230655		BUSHING, Valve Guide -(Exhaust)

Footnotes:

For use only with Starter Motors with Plastic Drive Gear

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	20S2320036	1	Replacement Engine
	-----		Top No-Load Speed: 3900 -Trim: ALL
	-----		Service Note: For all Go-Karts use only a Model 136200 series engine as a replacement, regardless of the original Model.
	-----		Service Note: If necessary, to make the original engine crankshaft center line the same add 695154 spacer kit.
	-----		Service Note: If the replacement engine supersedes to or is a Model 200000 series engine, refer to the illustrations located after the conversion data for this model series.
	-----		Service Note: To make the crankshaft center line the same add 695154 spacer kit, other overall dimensions which differ, are shown in the illustrations.
	-----		Service Note: If after making a visual inspection and it is determined the Model 200000 series engine cannot be used because of equipment interference, the original engine should be repaired with a short block and/or individual parts.

