




Parts Manual

Mfg. No: 207432-0126-E1


Model Components	Page
Air Cleaner, Exhaust System.	4
Alternator, Ignition.	6
Blower Housing/Shrouds, Flywheel, Rewind Starter.	8
Camshaft, Crankcase Cover, Crankshaft, Cylinder, Lubrication, Operator's Manual, Piston/Rings/Connecting	10
Carburetor, Kit - Carburetor Overhaul.	14
Controls, Governor Spring.	16
Cylinder Head, Gasket Set - Engine, Gasket Set - Valve, Valves.	18
Electric Starter, Fuel Supply.	20
Replacement Engine - US & Canada.	22


Not For
Reproduction

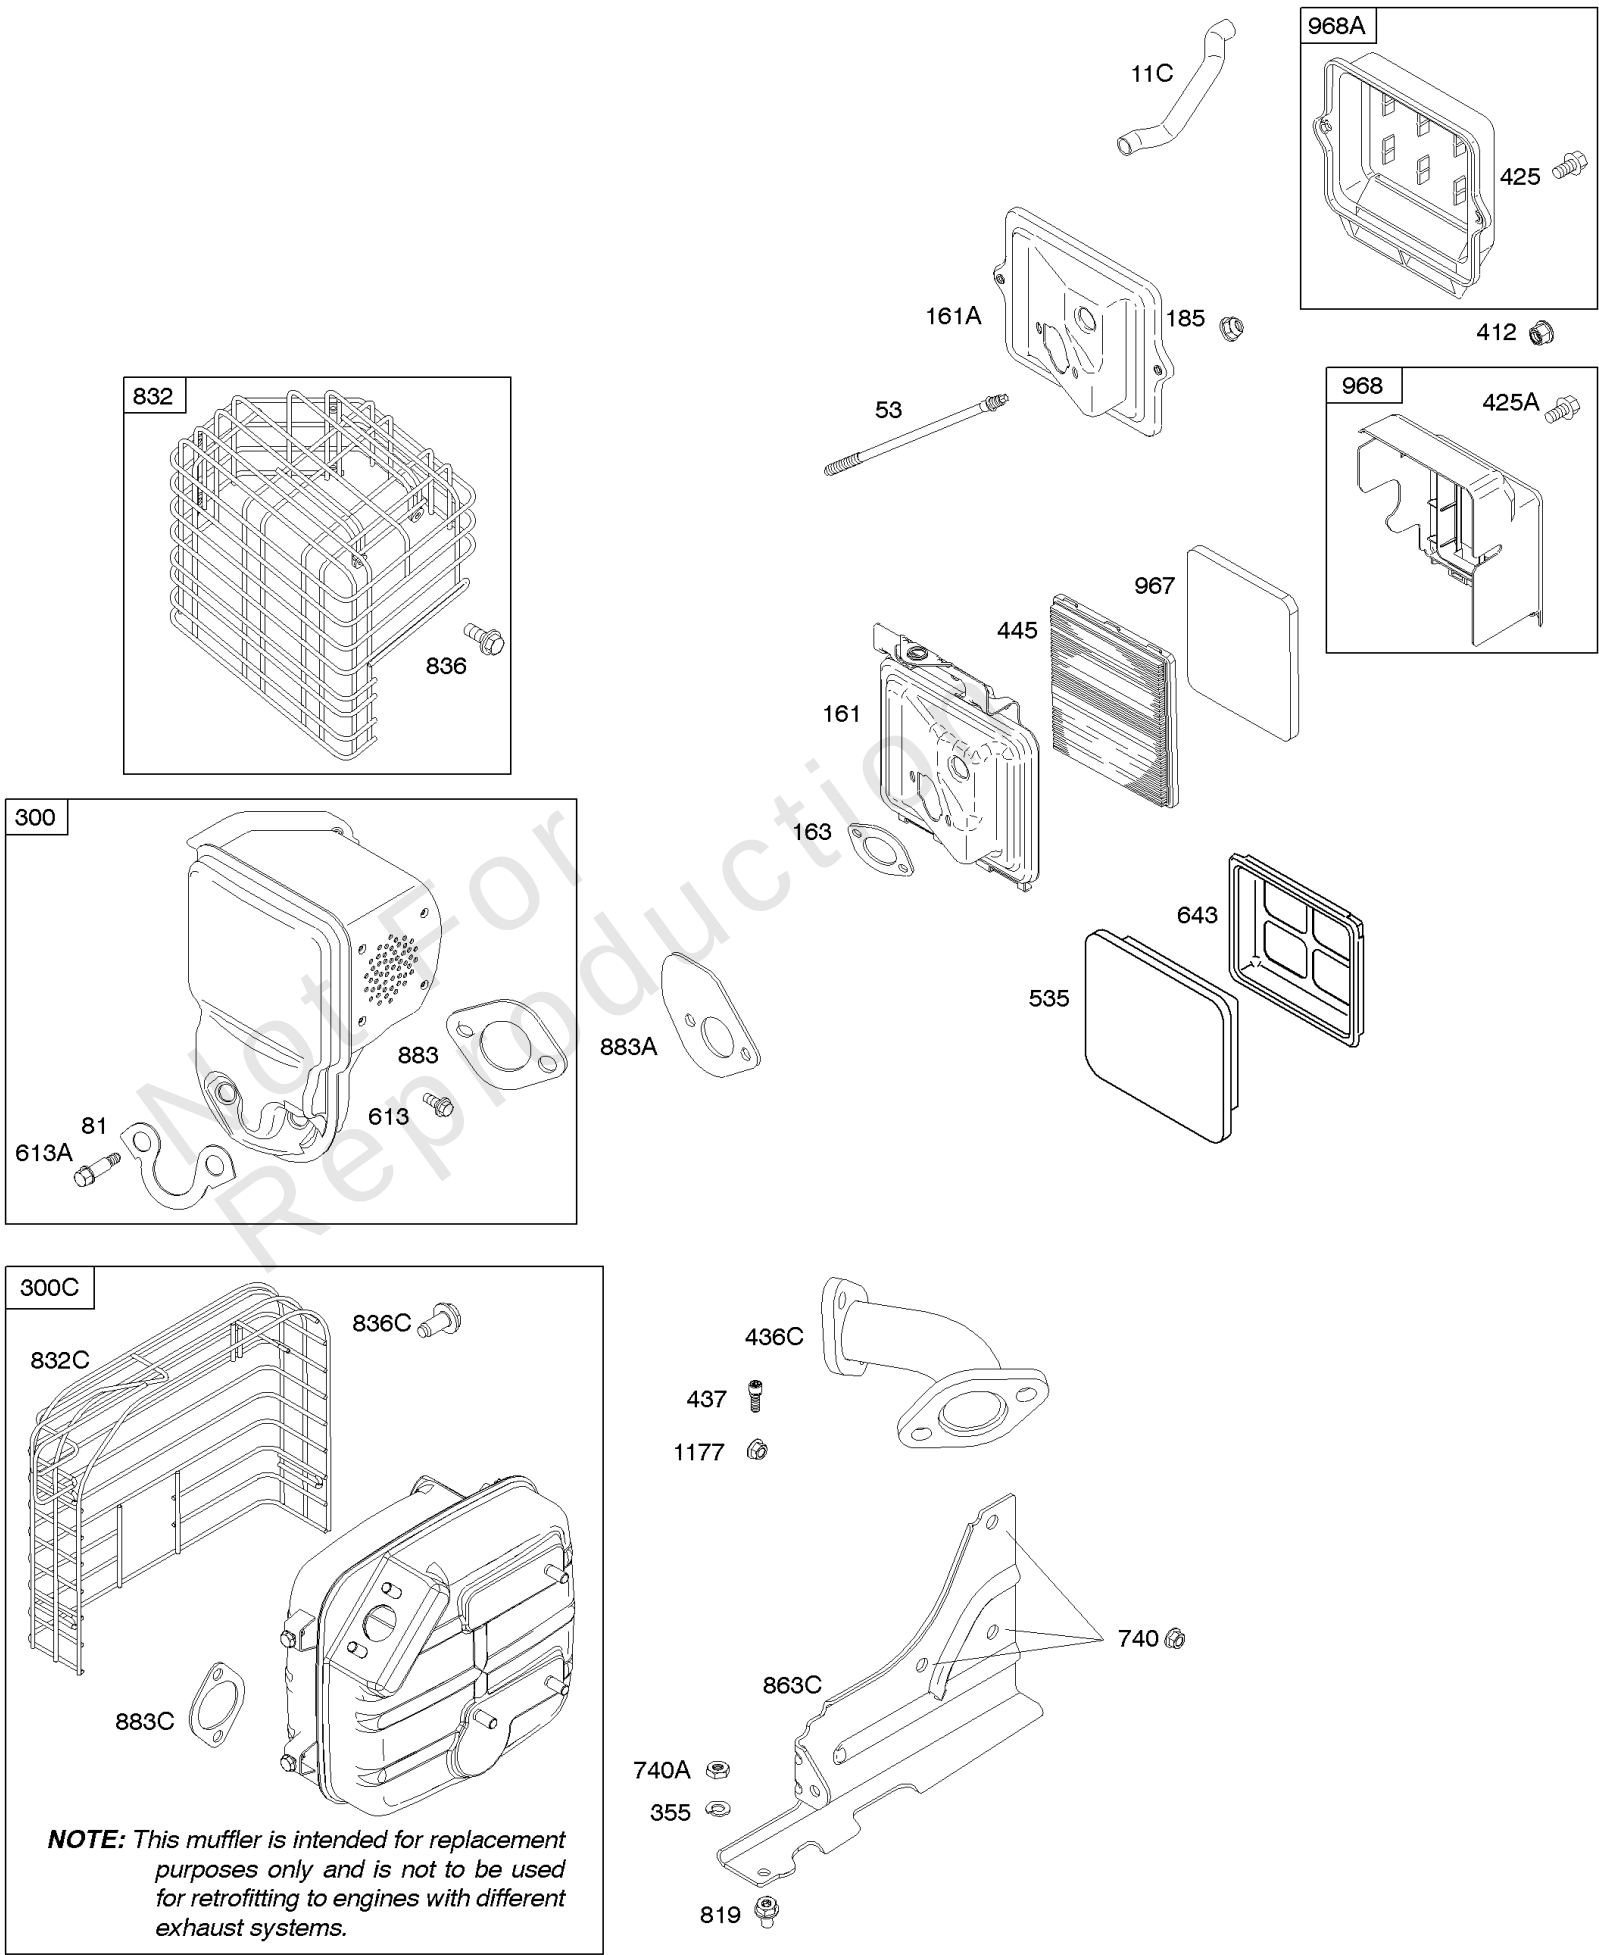

Air Cleaner, Exhaust System


REF NO	PART NO	QTY	DESCRIPTION
11C	696796		TUBE, Breather
53	694869		STUD -(Carburetor)
81	695400		LOCK, Muffler Screw
161	695384		BASE, Air Cleaner -(Metal)
163	692277		GASKET, Air Cleaner -(Air Cleaner)
185	690958		NUT -(Air Cleaner Base)
300	697252		MUFFLER
300C	793701		MUFFLER
355	691075		WASHER -(Muffler Bracket)
412	690958		NUT -(Air Cleaner Cover)
425A	790043		SCREW -(Air Cleaner Cover)
436C	792374		MANIFOLD, Exhaust
437	696705		SCREW -(Exhaust Manifold)
535	696315		FILTER, Air Cleaner Foam
613	695312		SCREW -(Muffler)
613A	695399		SCREW -(Muffler)
643	696264		RETAINER, Air Filter
740	710090		LOCKNUT -(Muffler Bracket)
740A	793859		NUT -(Muffler Bracket)
819	690352		SCREW -(Muffler Bracket)
832	795035		GUARD, Muffler
832C	792380		MUFFLER
836	690367		SCREW -(Muffler Guard) -Used Before Code Date 01061100
836	695312		SCREW -(Muffler Guard) -Used After Code Date 01061000
836C	710023		SCREW -(Muffler Guard)
863C	793700		BRACKET, Muffler
883	695398		GASKET, Exhaust
883A	697255		GASKET, Exhaust
883C	710250		GASKET, Exhaust
968	790959		COVER, Air Cleaner
1177	710090		LOCKNUT -(Muffler)

 	10 - 16 AMP
	474D
	
	578
	
NOTE: All stators use a No. 1119 mounting screw. NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.	526 501

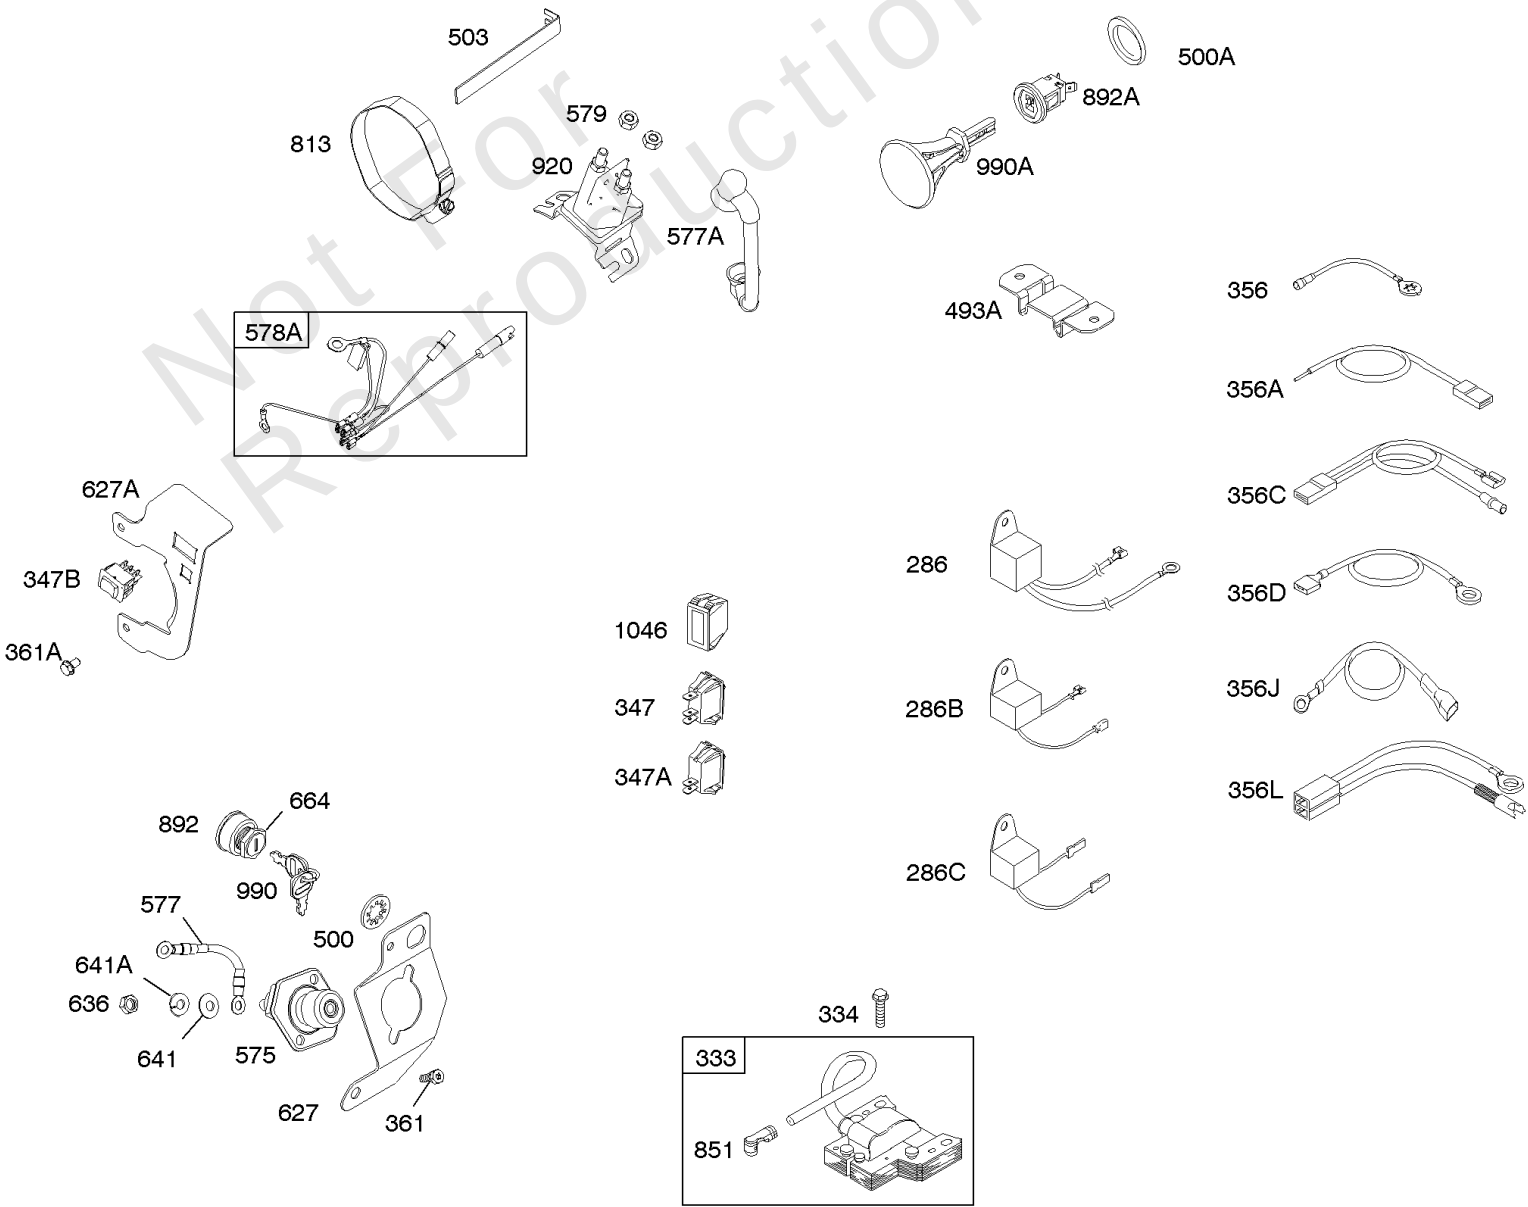



Alternator, Ignition

REF NO	PART NO	QTY	DESCRIPTION
333	492341		ARMATURE, Magneto
334	691061		SCREW -(Magneto Armature)
347	698338		SWITCH, Rocker
356	692603		WIRE, Stop
356C	695295		WIRE, Stop
356L	792609		WIRE, Stop
361	691681		SCREW -(Starting Switch)
361A	690297		SCREW -(Starting Switch)
500A	792613		WASHER -(Key Switch)
577A	690795		CABLE, Starter
578A	790948		WIRE ASSEMBLY
579	691029		NUT -(Starter Cable)
627A	792608		BRACKET, Stopswitch
851	692424		TERMINAL, Spark Plug
892A	791944		SWITCH, Key
920	691656		SOLENOID, Starter
990A	695756		SET, Key
1119	691183		SCREW -(Alternator)

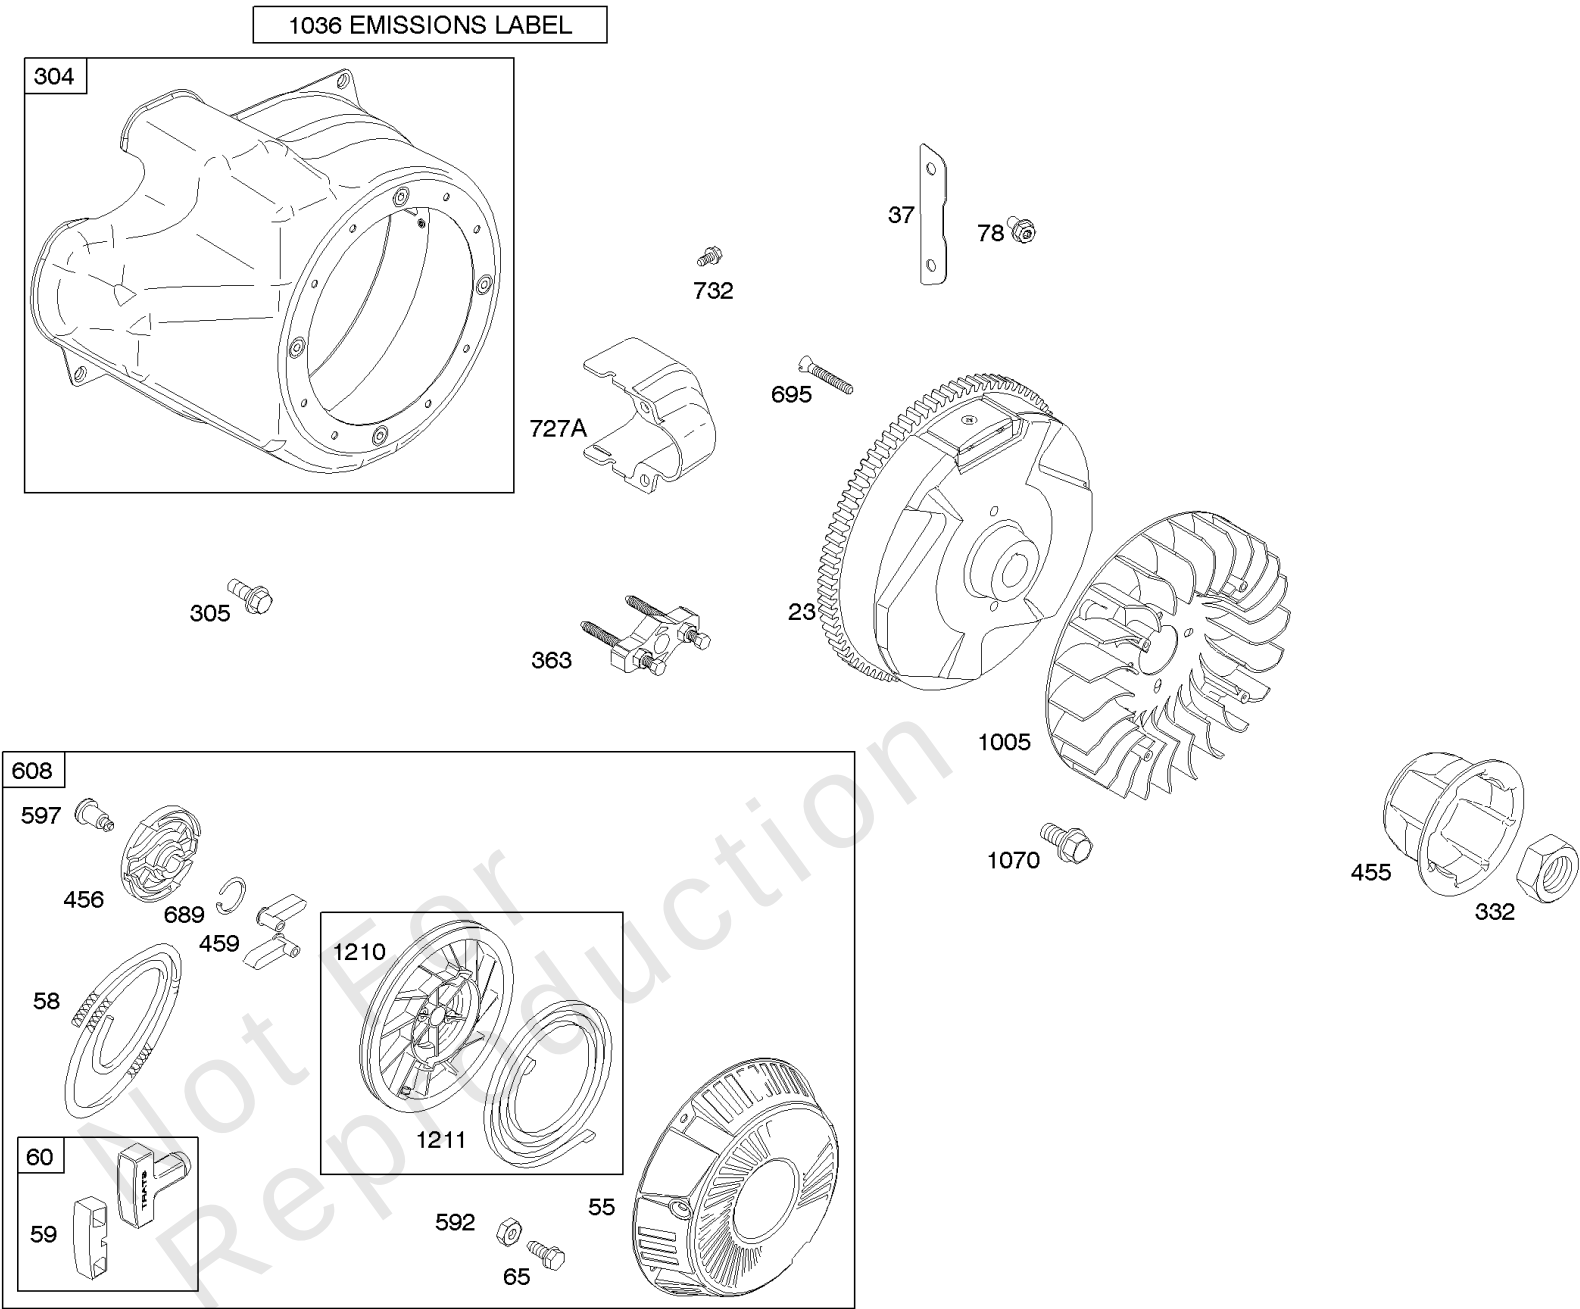



Blower Housing/Shrouds, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
23	794814		FLYWHEEL
37	790730		GUARD, Flywheel
55	695288		HOUSING-REWIND STR
58	693389		ROPE, Starter -(Cut To Required Length)
59	805957		INSERT, Grip
60	490652		GRIP-STARTER ROPE
65	690759		SCREW -(Rewind Starter)
78	690372		SCREW -(Flywheel Guard)
304	791478		HOUSING, Blower
305	691108		SCREW -(Blower Housing)
332	694685		NUT -(Flywheel)
363	19203		PULLER, Flywheel
455	694683		CUP, Flywheel
456	692299		PLATE-PAWL FRICTION
459	281505S		PAWL-RATCHET
592	690800		NUT -(Rewind Starter)
597	691696		SCREW -(Pawl Friction Plate)
608	695287		STARTER-REWIND
689	691855		SPRING-FRICTION
695	698807		SCREW -(Ring Gear)
1005	694684		FAN, Flywheel
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1070	691058		SCREW -(Flywheel Fan)
1210	498144		PULLEY/SPRING ASSY -(Pulley)
1211	498144		PULLEY/SPRING ASSY -(Spring)

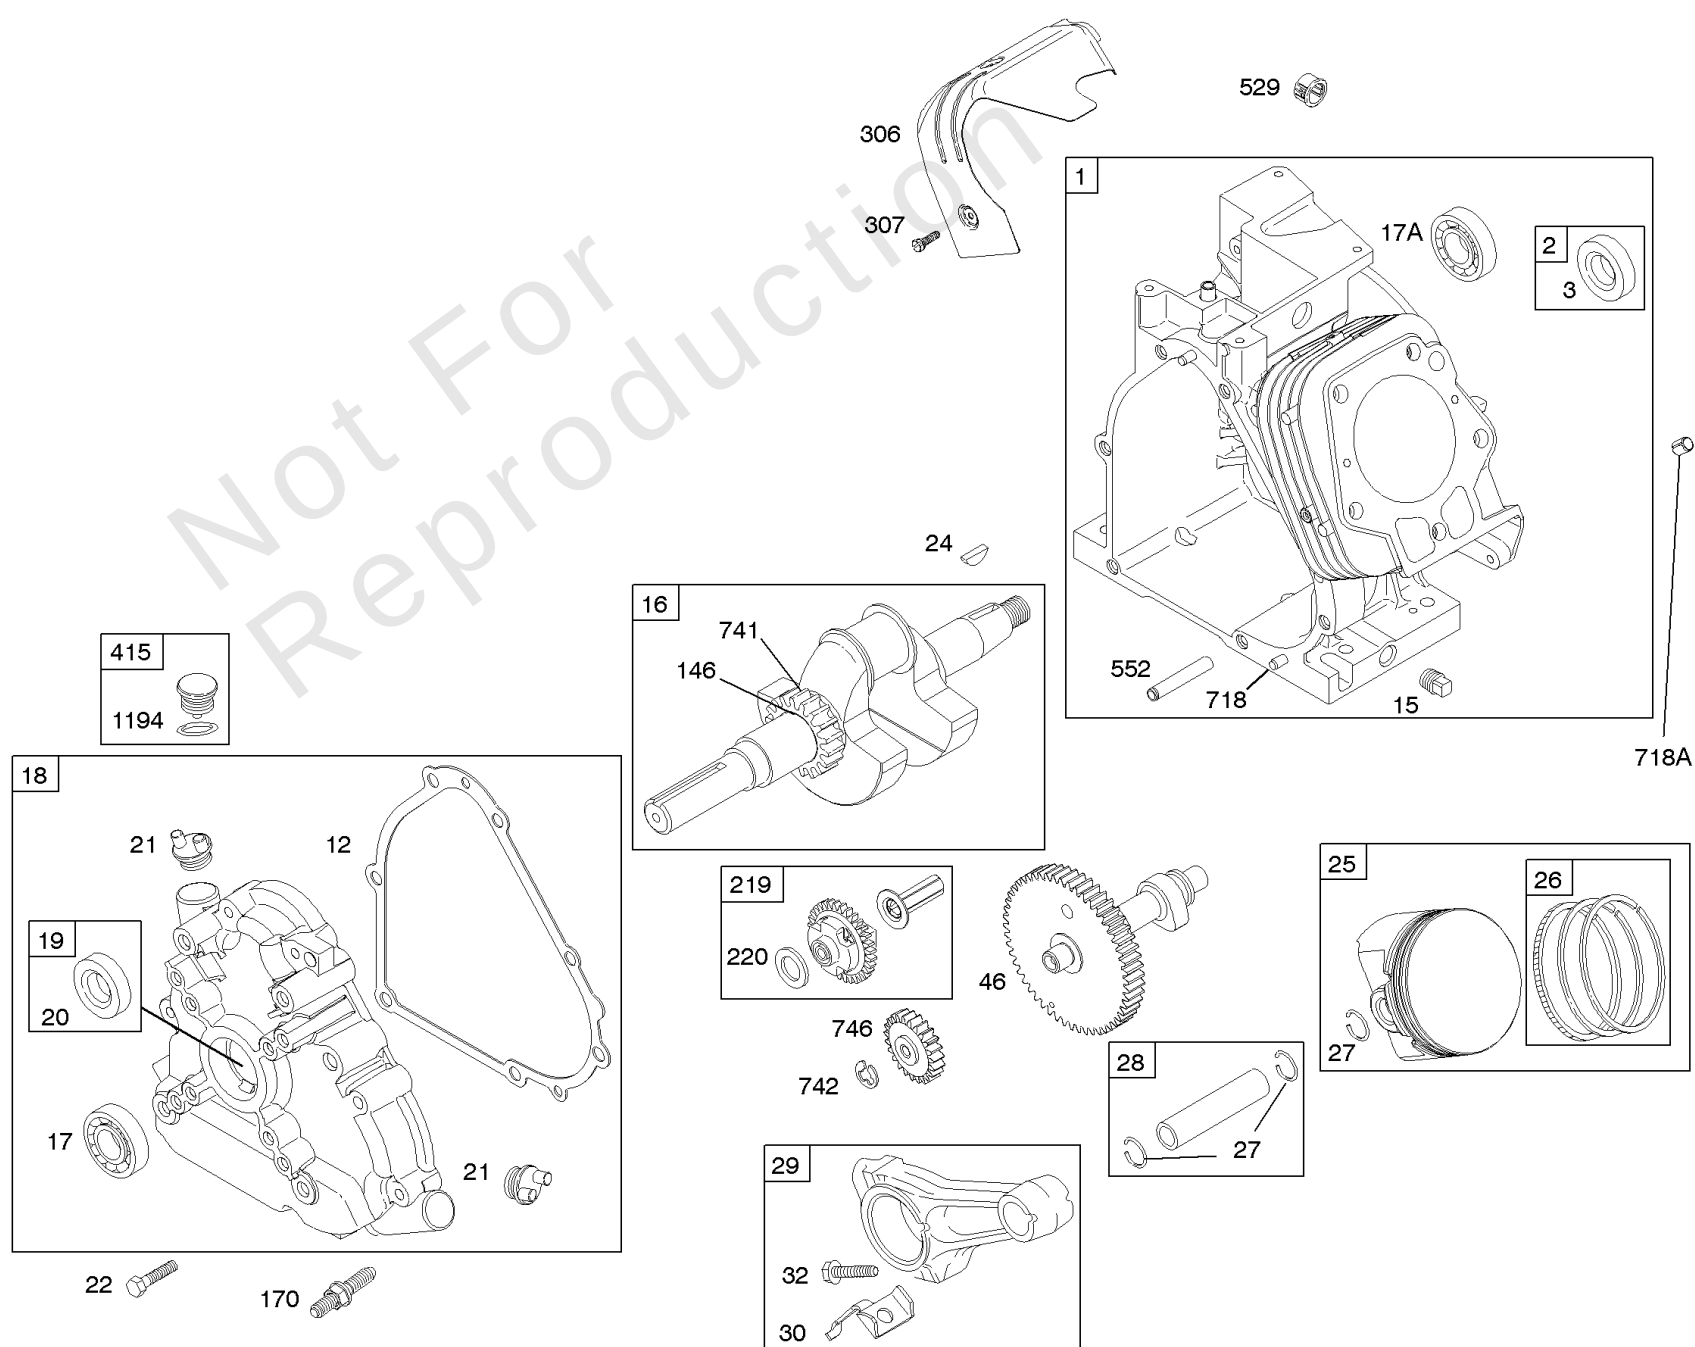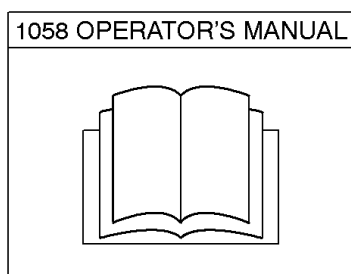


Camshaft, Crankcase Cover, Crankshaft, Cylinder, Lubrication, Operator's Manual, Piston/

REF NO	PART NO	QTY	DESCRIPTION
1	696314		CYLINDER ASSEMBLY -Used Before Code Date 07090400
1	795196		CYLINDER ASSEMBLY -Used After Code Date 07090300
2	698340		KIT, Bushing/Seal -(Magneto Side)
3	391086S		SEAL, Oil -(Magneto Side)
12	694953		GASKET, Crankcase
15	691686		PLUG-OIL DRAIN
16	694678		CRANKSHAFT
17	695434		BEARING, Ball
17A	691069		BEARING, Ball
18	791412		COVER-CRANKCASE
19	698340		KIT, Bushing/Seal -(PTO Side)
20	391086S		SEAL, Oil -(PTO Side)
21	281658S		CAP, Oil Fill
22	695174		SCREW -(Crankcase Cover/Sump)
24	222698S		KEY, Flywheel
25	792117		PISTON ASSEMBLY -(Standard)
25	792144		PISTON ASSEMBLY -(.020 Oversize)
26	694008		SET, Ring -(.020 Oversize) -Used Before Code Date 05081100
26	792026		SET, Ring -(Standard) -Used After Code Date 05081000
26	792073		SET, Ring -(.020 Oversize) -Used After Code Date 05081000
26	694004		SET, Ring -(Standard) -Used Before Code Date 05081100
27	690975		LOCK, Piston Pin
28	696581		PIN, Piston -(Standard)
29	694691		ROD, Connecting
30	694692		DIPPER, Connecting Rod
32	690976		SCREW -(Connecting Rod)
46	790958		CAMSHAFT
146	690979		KEY, Woodruff
170	695296		STUD -(Crankcase Cover/Sump)
219	693578		GEAR, Governor
220	691724		WASHER -(Governor Gear)
306	694677		SHIELD, Cylinder -Used Before Code Date 01102900
306	697240		SHIELD, Cylinder -Used After Code Date 01102800
307	691660		SCREW -(Cylinder Shield)

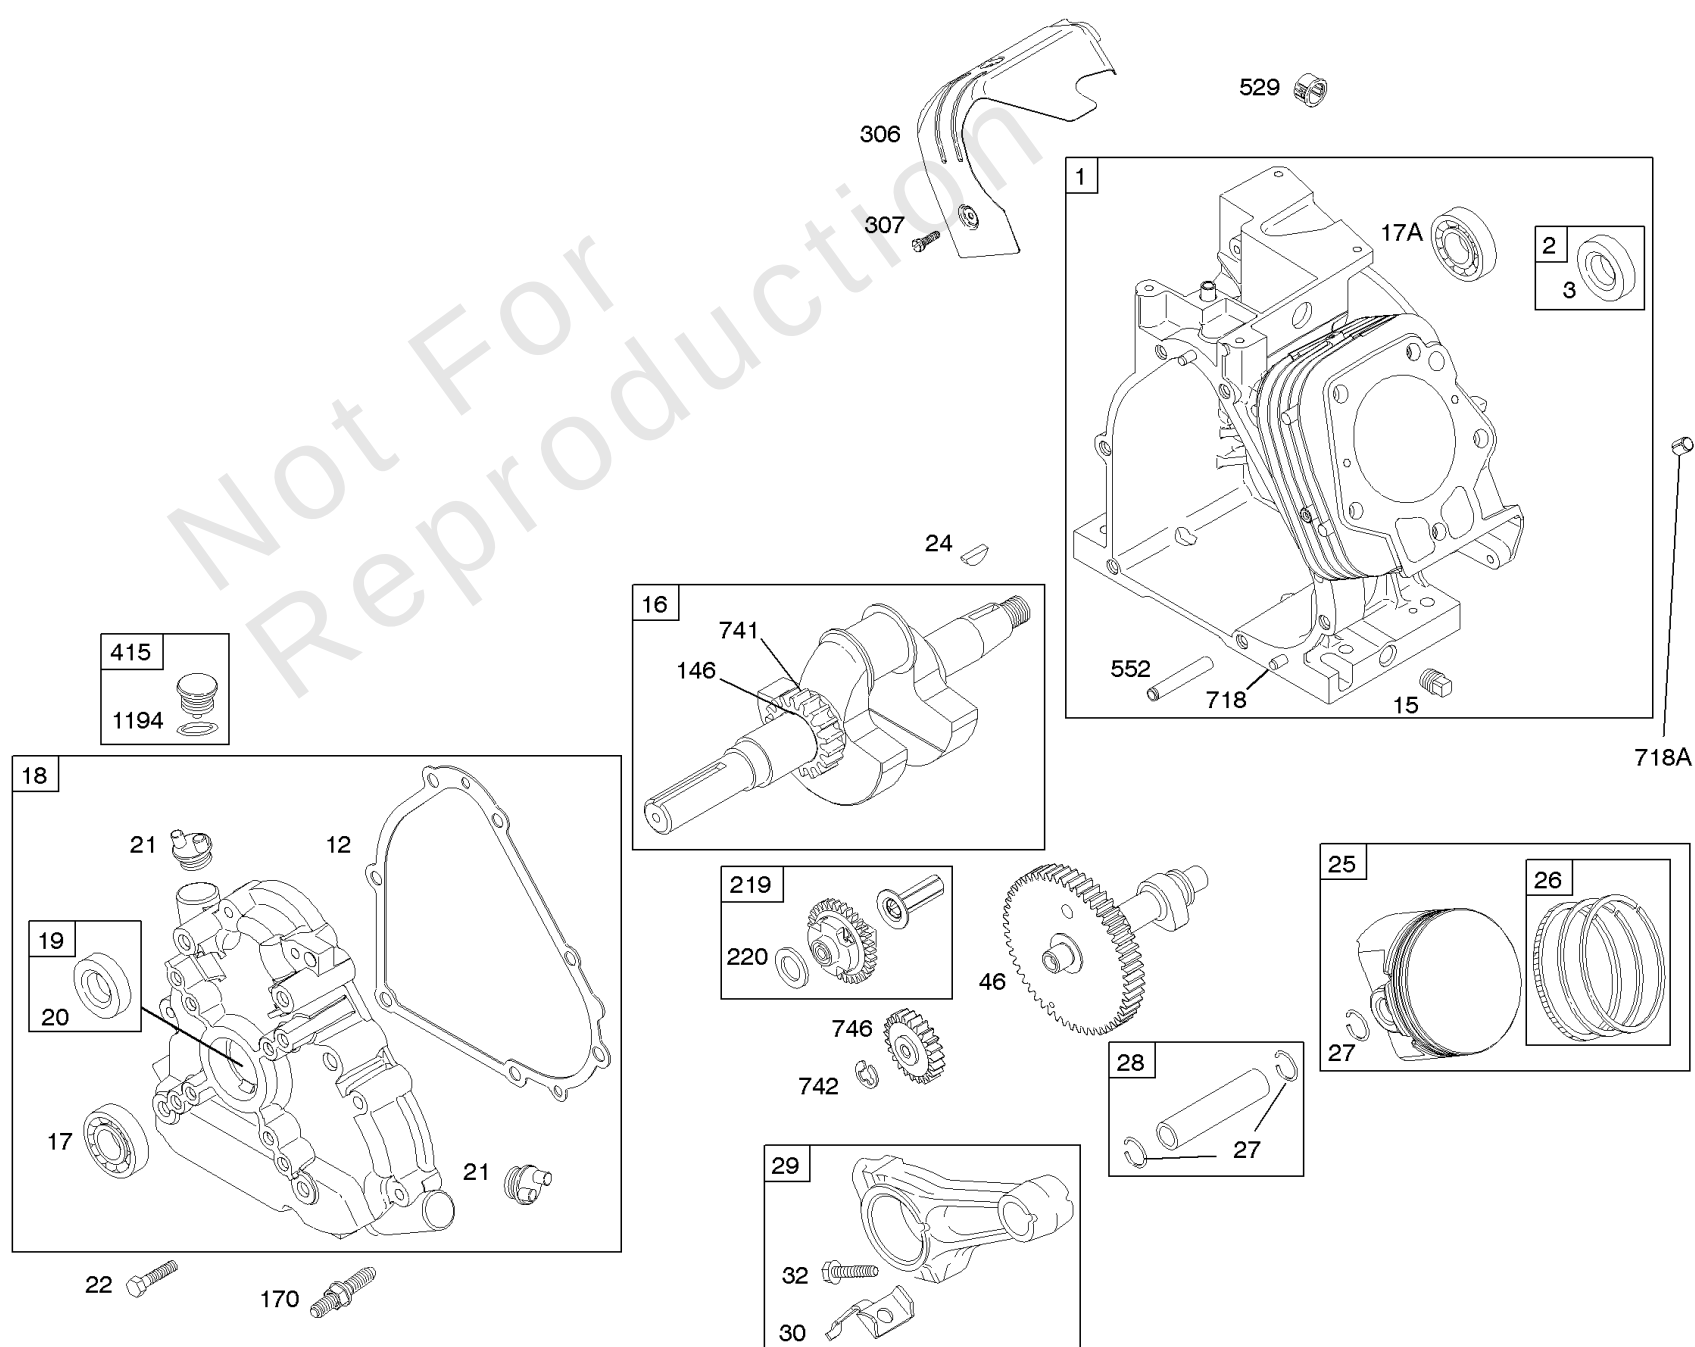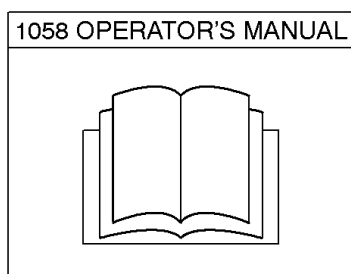


Camshaft, Crankcase Cover, Crankshaft, Cylinder, Lubrication, Operator's Manual, Piston/

REF NO	PART NO	QTY	DESCRIPTION
415	691363		PLUG
529	791822		GROMMET
552	694674		BUSHING, Governor Crank
718	690959		PIN, Locating -(Cylinder)
718A	695178		PIN, Locating -(Head)
741	691288		GEAR, Timing
742	692564		RETAINER, E Ring
746	694679		GEAR, Idler
1058	277040		MANUAL, Operator's
1194	691876		SEAL, O-Ring -(Plug)
1319	794467		LABEL, Warning

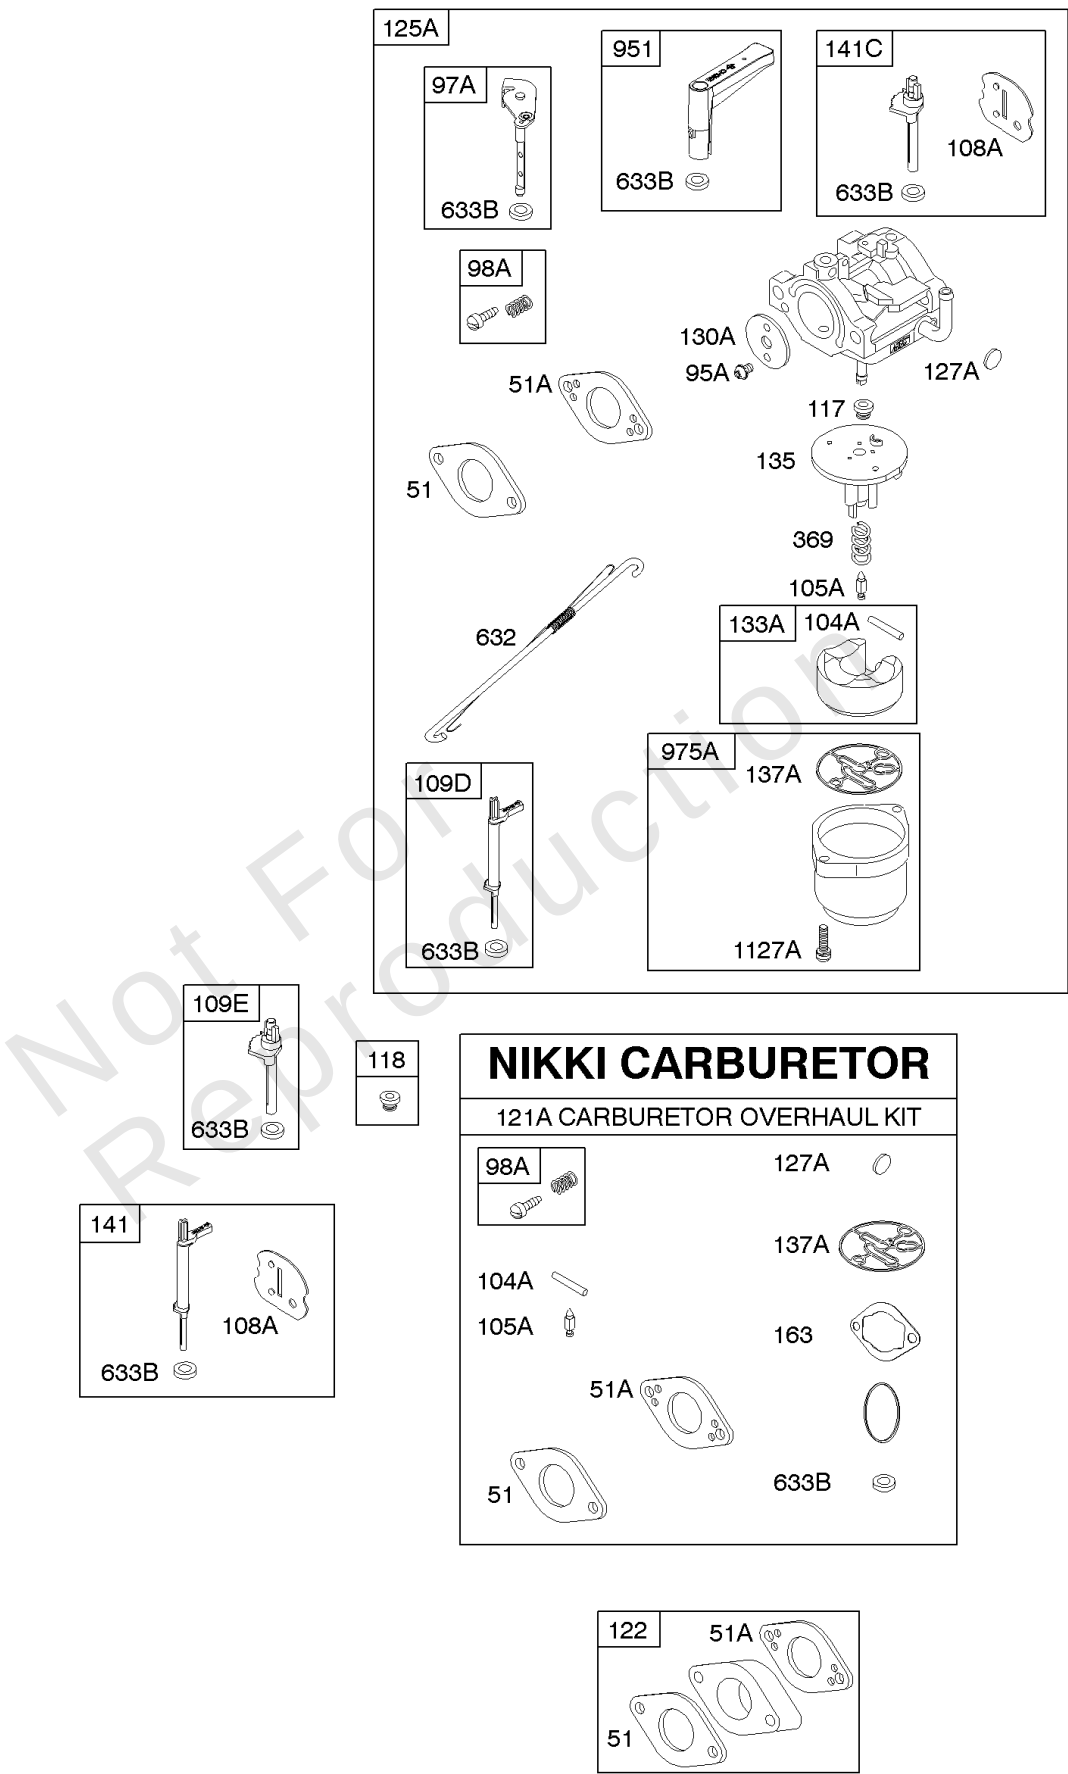




Carburetor, Kit - Carburetor Overhaul

REF NO	PART NO	QTY	DESCRIPTION
51	694874		GASKET, Intake
51A	694875		GASKET, Intake
95A	690718		SCREW -(Throttle Valve)
97A	696387		SHAFT, Throttle
98A	695408		KIT, Idle Speed
104A	694918		PIN, Float Hinge
105A	696136		VALVE, Float Needle
108A	696143		VALVE, Choke
109D	790149		SHAFT, Choke
117	696134		JET, Main -(Standard)
118	696135		JET, Main -(High Altitude)
121A	696146		KIT, Carburetor Overhaul -(Nikki Carburetor)
122	694876		SPACER, Carburetor
125A	699966		CARBURETOR -(Nikki)
127A	690727		PLUG, Welch
130A	696139		VALVE, Throttle
133A	694914		FLOAT, Carburetor
135	696142		TUBE, Fuel Transfer
137A	695426		GASKET, Float Bowl
141	696145		KIT, Choke Shaft
163	692277		GASKET, Air Cleaner -(Air Cleaner)
369	695422		SPRING, Float Bowl
632	695917		SPRING/LINK, Mechanical Governor -(Use With Nikki Carburetor)
633B	690998		SEAL, Choke/Throttle Shaft
975A	696138		BOWL, Float
1127A	695407		SCREW -(Float Bowl) (Float Bowl to Carburetor Body)

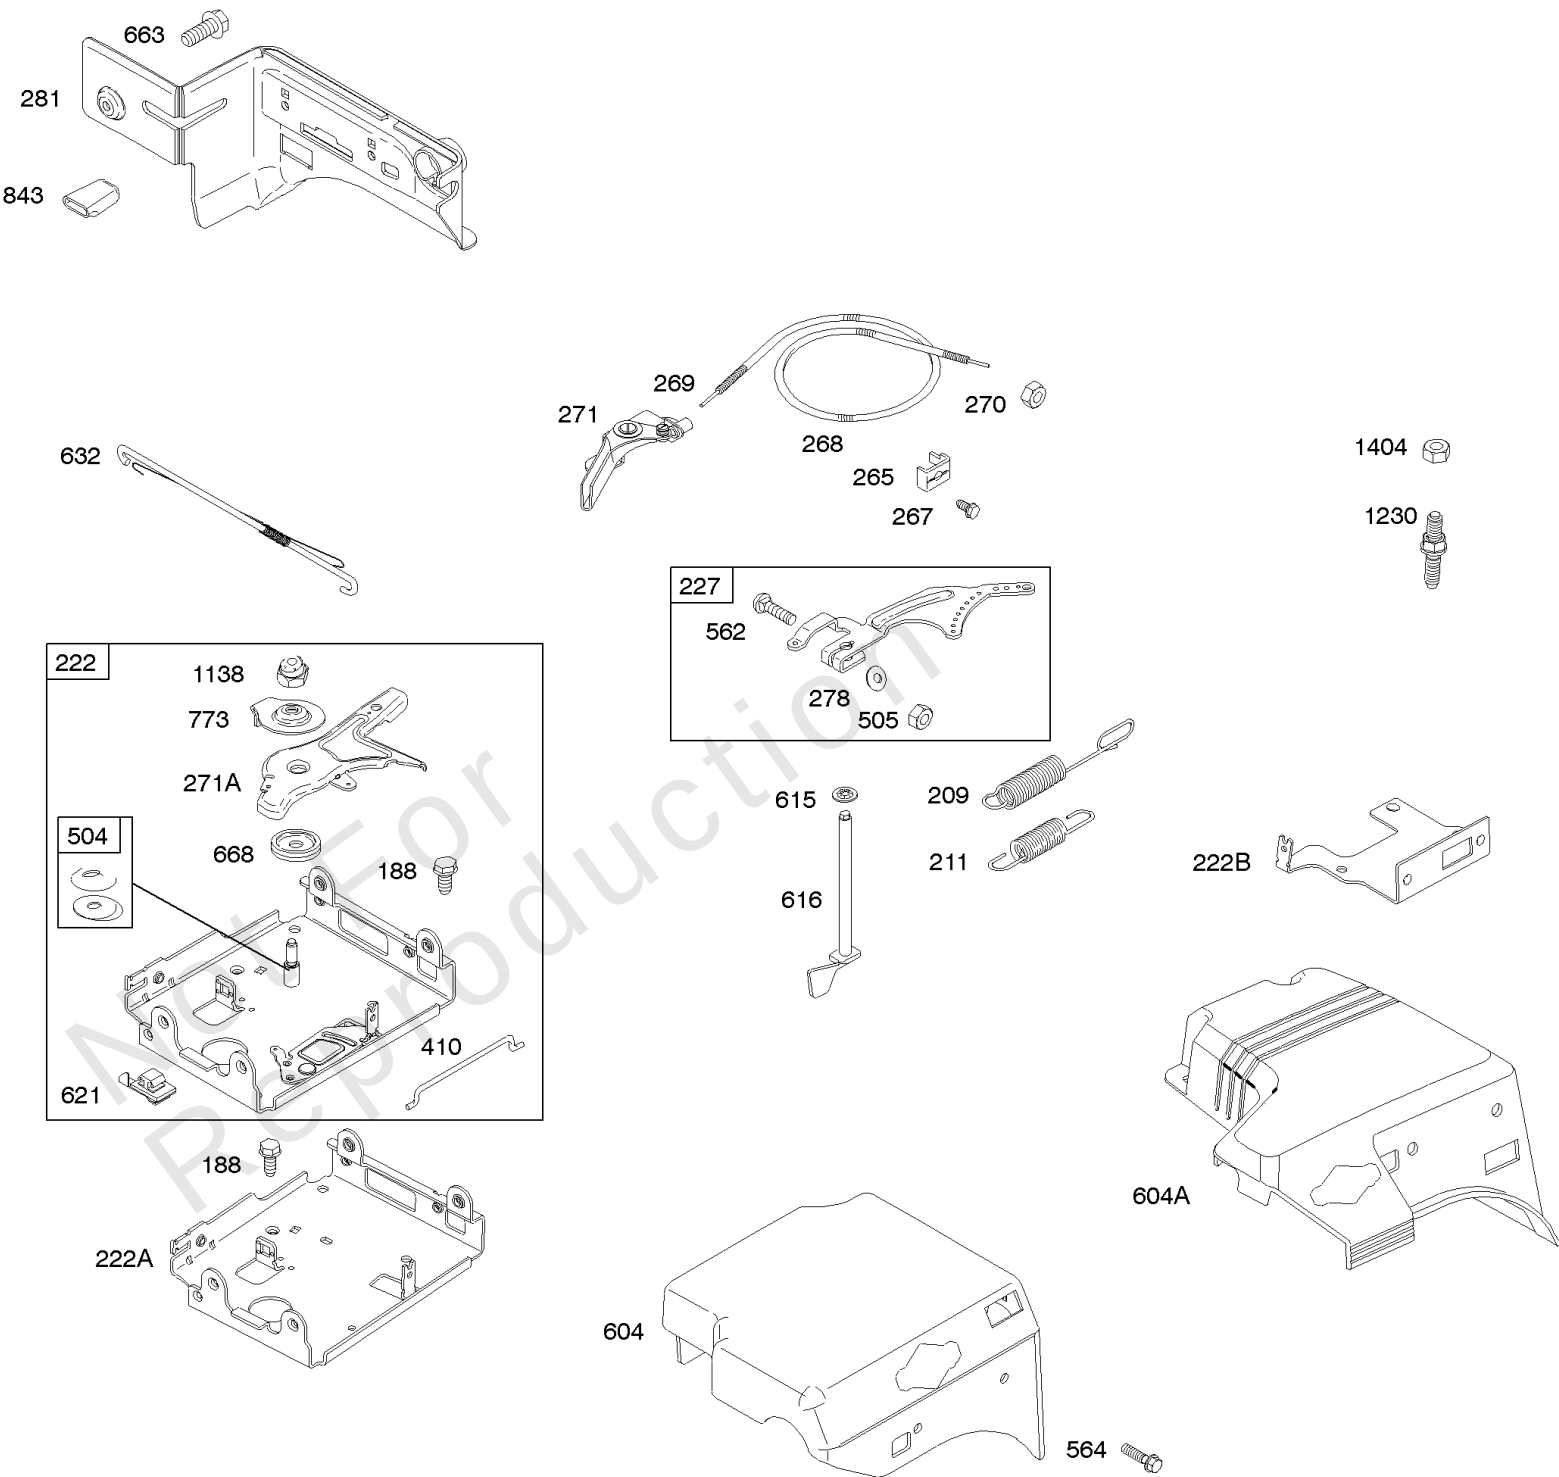



Controls, Governor Spring

REF NO	PART NO	QTY	DESCRIPTION
188	690877		SCREW -(Control Bracket)
209	694867		SPRING, Governor
211	695307		SPRING, Governed Idle
222	695380		BRACKET, Control
222B	791753		BRACKET, Control
227	694864		LEVER, Governor Control
265	691024		CLAMP, Casing
267	692577		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
271A	695381		LEVER, Control
278	792008		WASHER -(Governor Lever)
281	697268		PANEL, Control -Used After Code Date 01102800
281	695294		PANEL, Control -Used Before Code Date 01102900
410	695382		LINK, Control
504	695383		SET, Friction Washer
505	691251		NUT -(Governor Control Lever)
562	793216		BOLT -(Governor Lever)
604A	791752		COVER, Control
615	694676		RETAINER, Governor Shaft
616	694675		CRANK, Governor
632	695917		SPRING/LINK, Mechanical Governor -(Use With Nikki Carburetor)
663	692577		SCREW -(Control Panel)
668	694257		SPACER -(Control Bracket)
773	694258		RETAINER
843	695588		SLEEVE, Lever
1138	694255		NUT -(Control Bracket)
1230	791754		STUD -(Control Bracket)
1404	696757		LOCKNUT -(Control Cover)

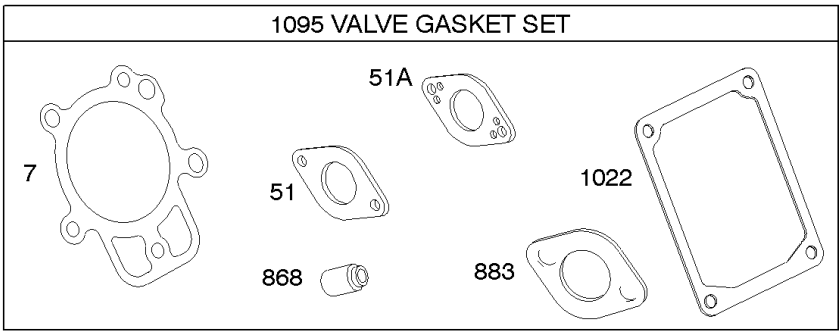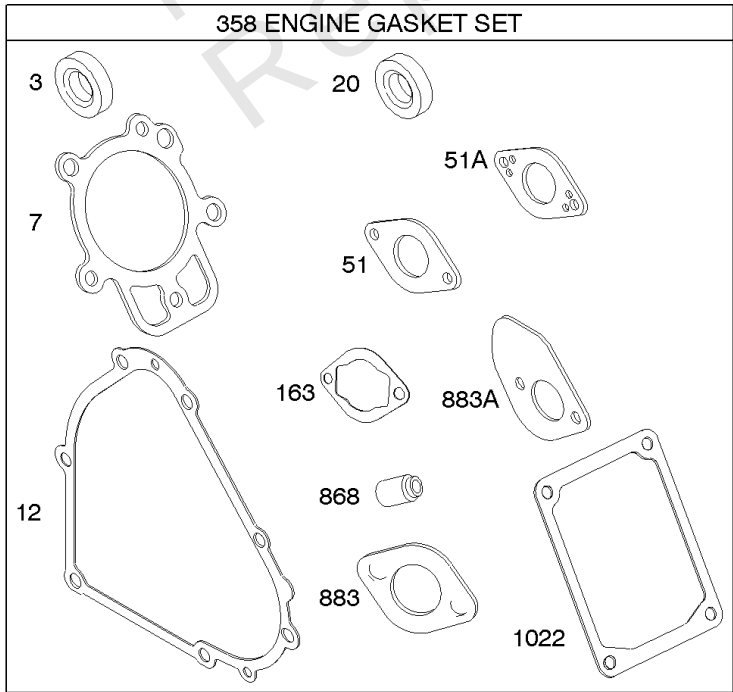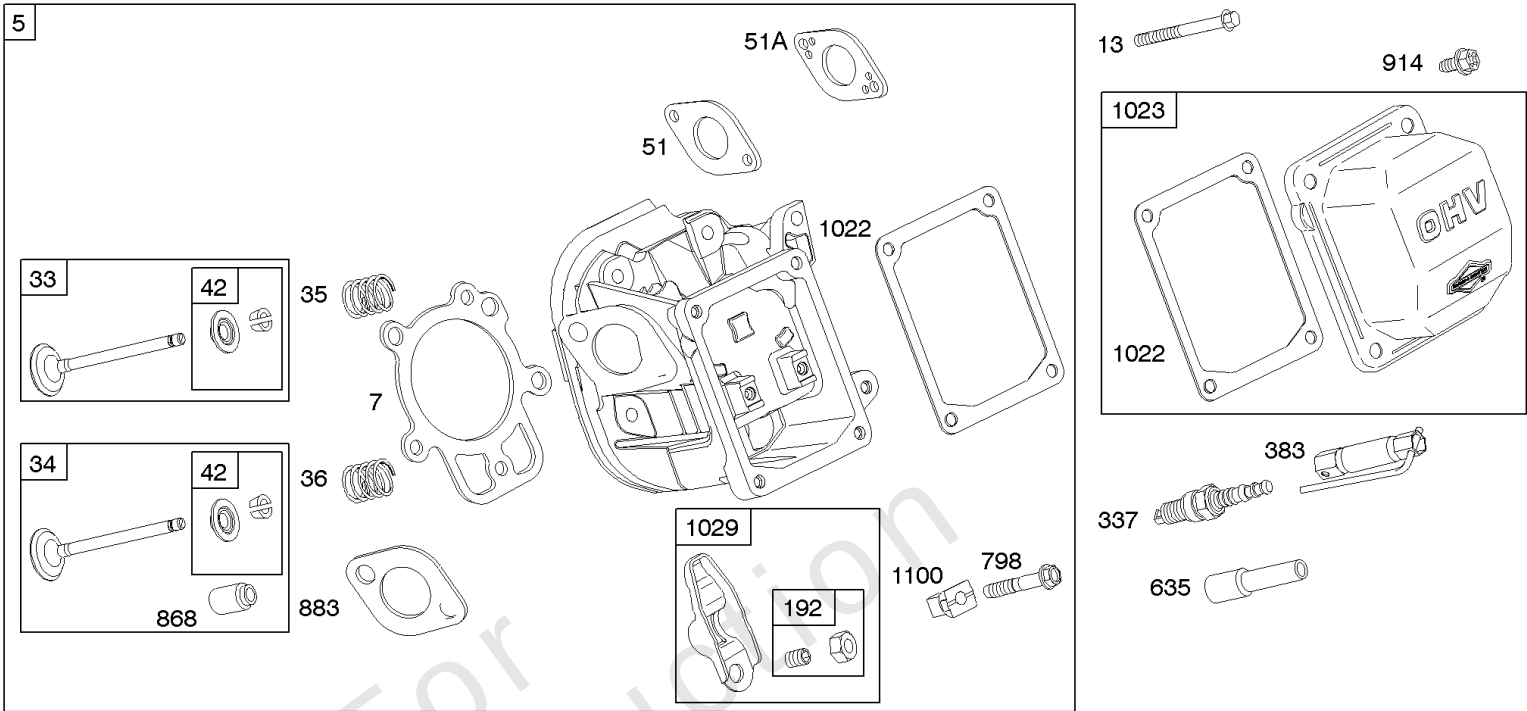

Cylinder Head, Gasket Set - Engine, Gasket Set - Valve, Valves

REF NO	PART NO	QTY	DESCRIPTION
3	391086S		SEAL, Oil -(Magneto Side)
5	793009		HEAD, Cylinder
7	694872		GASKET, Cylinder Head
12	694953		GASKET, Crankcase
13	690360		SCREW -(Cylinder Head)
20	391086S		SEAL, Oil -(PTO Side)
33	499596		VALVE, Exhaust
34	792200		VALVE, Intake
35	694865		SPRING, Valve -(Intake)
36	694865		SPRING, Valve -(Exhaust)
42	499586		KEEPER, Valve
45	690977		TAPPET, Valve
51	694874		GASKET, Intake
51A	694875		GASKET, Intake
163	692277		GASKET, Air Cleaner -(Air Cleaner)
192	690083		ADJUSTER, Rocker Arm
337	491055S		PLUG, Spark
337	84007216		PLUG, SPARK -(China Only)
358	695438		GASKET SET, Engine
383	19374S		WRENCH, Spark Plug
635	691909		BOOT, Spark Plug
798	697890		SCREW -(Rocker Arm)
868	690968		SEAL, Valve
883	695398		GASKET, Exhaust
883A	697255		GASKET, Exhaust
914	693732		SCREW -(Rocker Cover)
1022	690971		GASKET, Rocker Cover
1023	697691		COVER, Rocker
1026	695177		ROD, Push
1029	690972		ARM, Rocker
1095	695440		GASKET SET, Valve
1100	791959		PIVOT, Rocker Arm

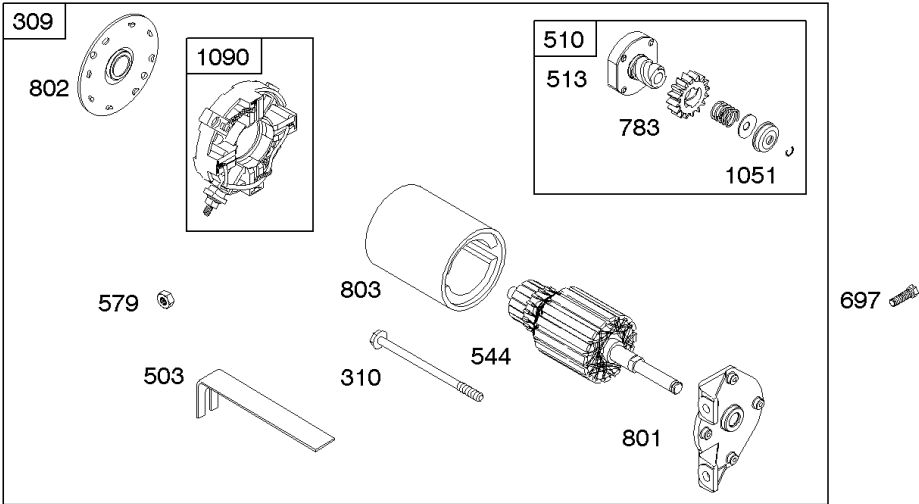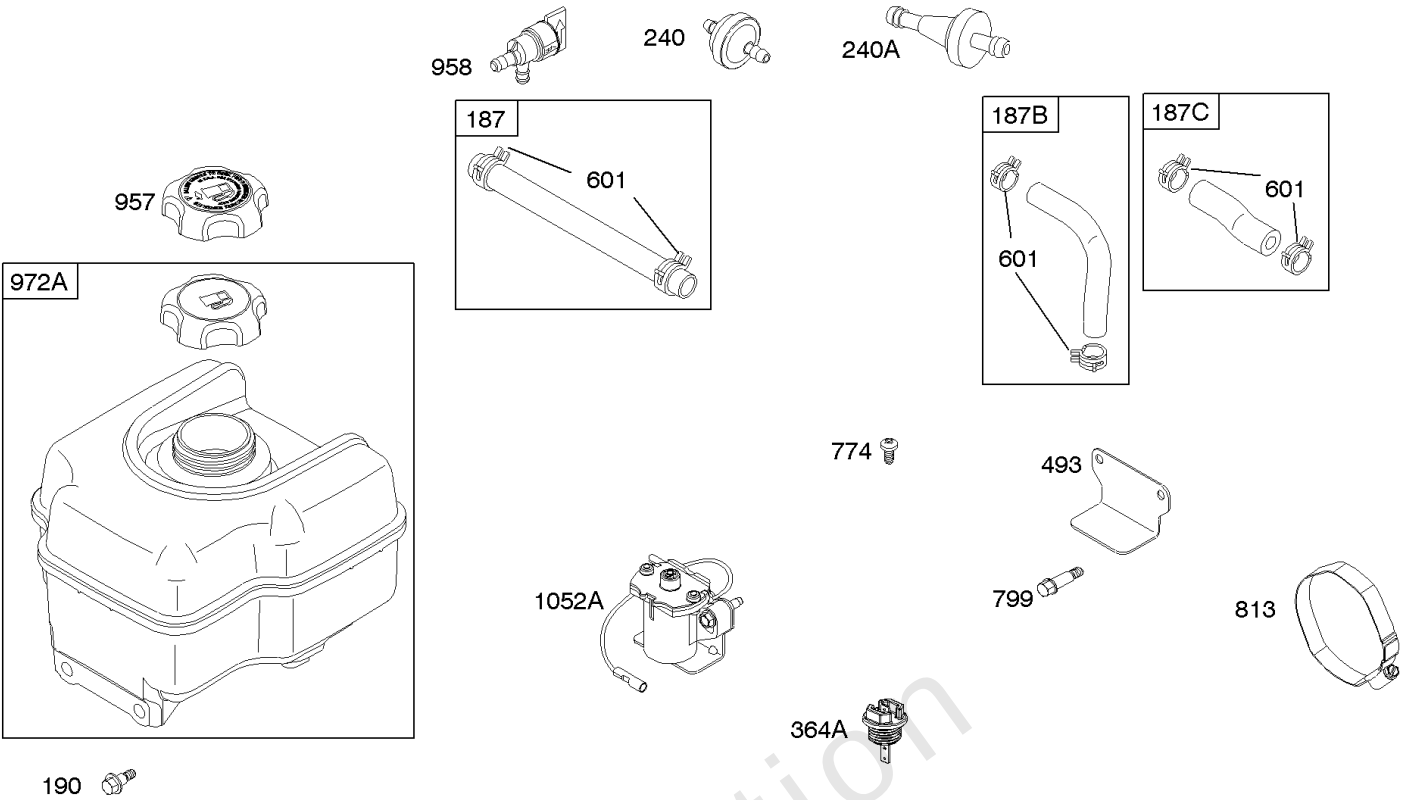

Electric Starter, Fuel Supply

REF NO	PART NO	QTY	DESCRIPTION
187	791766		LINE, Fuel -(15" Long)(Cut to Required Length)
187B	695482		LINE, Fuel -Used Before Code Date 05070100
187B	791834		LINE, Fuel -Used After Code Date 05063000
187C	791871		LINE, Fuel -Used After Code Date 05063000
187C	695483		LINE, Fuel -Used Before Code Date 05070100
190	692127		SCREW -(Fuel Tank)
240	394358S		FILTER, Fuel
240A	694485		FILTER, Fuel
310	690323		SCREW -(Starter Motor)
364A	699947		TERMINAL, Oil Plug
493	694861		BRACKET, Mounting
510	693699		DRIVE, Starter
513	692024		CLUTCH, Drive
544	692034		ARMATURE, Starter -(3 5/8 Housing)
579	691029		NUT -(Starter Cable)
601	791850		CLAMP, Hose
774	695447		SCREW -(Stop Wire)
783	693713		GEAR, Pinion
799	695446		SCREW -(Oil Sensor)
801	694482		CAP-DRIVE
802	691286		CAP, End
803	-----		Housing-Starter -(Not Serviced Separately, Order Starter Motor 695479)
957	792647		CAP, Fuel Tank -(Plastic)
958	698180		VALVE, Fuel Shutoff -(Plastic)
972A	694260		TANK, Fuel -(Plastic)
1051	691265		RING, Retaining
1052A	791159		SENSOR, Oil
1090	691293		RETAINER, Brush

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
--------	---------	-----	-------------

Not For Reproduction

