

 


Parts Manual

Mfg. No: 212317-0118-B1

Model Components	Page
Air Cleaner.	4
Alternator, Ignition.	6
Blower Housing/Shrouds, Electric Starter, Flywheel, Rewind Starter.	8
Camshaft, Crankcase Cover, Crankshaft, Cylinder, Lubrication, Operator's Manual, Piston/Rings/Connecting	12
Carburetor, Kit - Carburetor Overhaul.	16
Controls, Fuel Supply, Governor Spring.	18
Cylinder Head, Gasket Set - Engine, Gasket Set - Valve, Valves.	22
Exhaust System.	24
Replacement Engine - US & Canada.	26

Not For
Reproduction

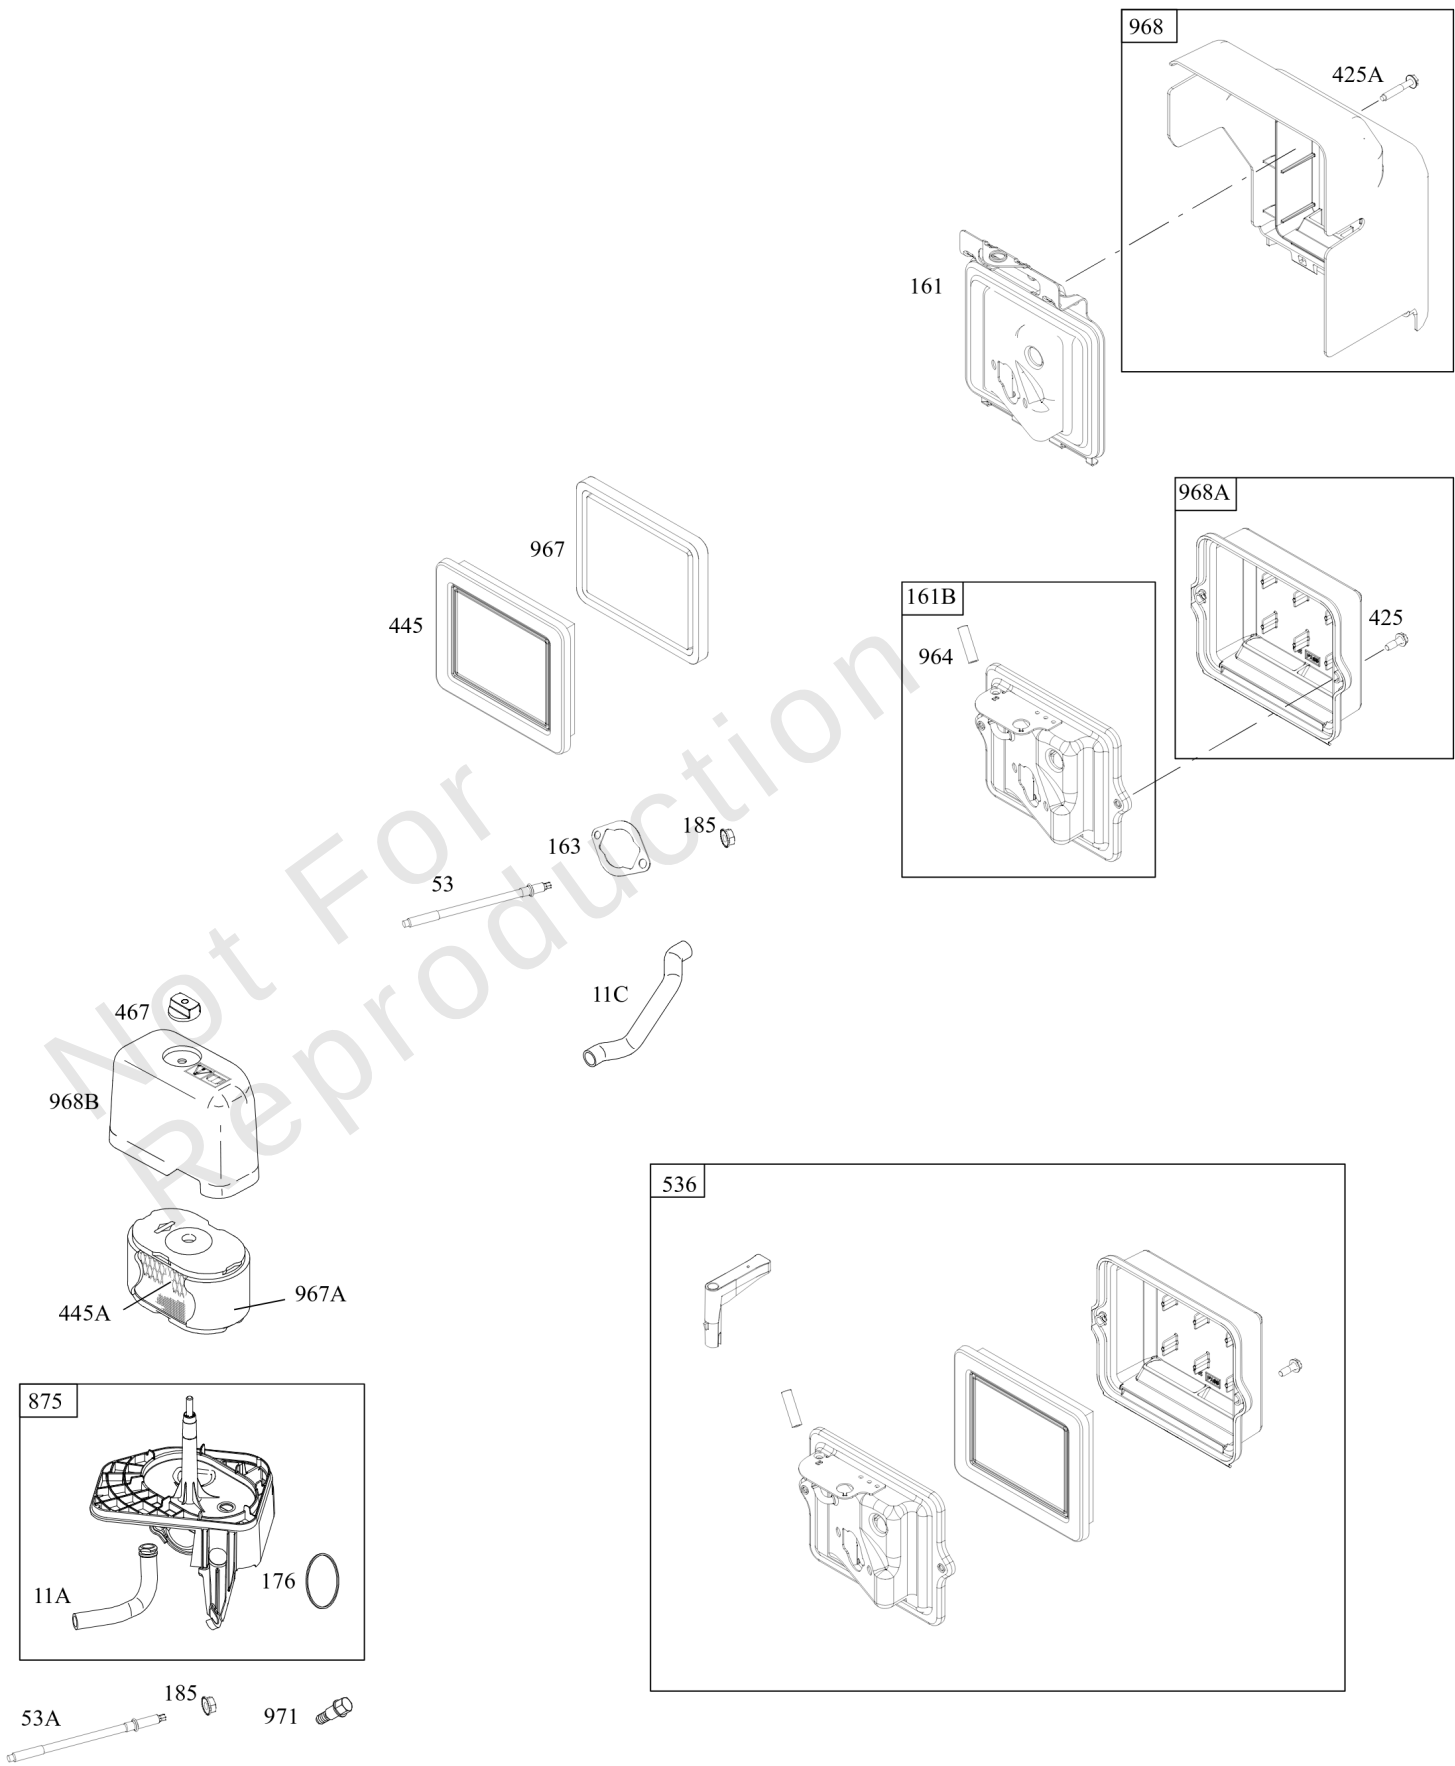











Air Cleaner

REF NO	PART NO	QTY	DESCRIPTION
11A	695305		TUBE, Breather
11C	696796		TUBE, Breather
53	794830		STUD -(Carburetor)
161	-----		Base-Air Cleaner -(Metal) (No Longer Available)(For Replacement, Order Reference 536)
161B	591217		BASE, Air Cleaner -(Metal)
163	692277		GASKET, Air Cleaner -(Air Cleaner)
176	691917		SEAL, O-Ring -(Air Cleaner Base)
185	794838		NUT -(Air Cleaner Base)
425	794836		SCREW -(Air Cleaner Cover)
425A	794835		SCREW -(Air Cleaner Cover)
445	491588S		FILTER, A/C Cartridge
445A	695302		FILTER, A/C Cartridge
467	691668		KNOB, Air Cleaner Cover
536	591546		CLEANER, Air
875	797667		BASE, Air Cleaner -(Plastic)
964	799159		CAP, Connector
967	491435S		FILTER, Pre Cleaner
967A	695303		FILTER, Pre Cleaner
968	-----		Cover-Air Cleaner -(No Longer Available)(For Replacement, Order Reference 536)
968A	794784		COVER, Air Cleaner
968B	695301		COVER, Air Cleaner

DC ONLY	10-16 AMP
474A	474D
	


NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.

1119	578	526 501	526A 501B
------	-----	------------	--------------

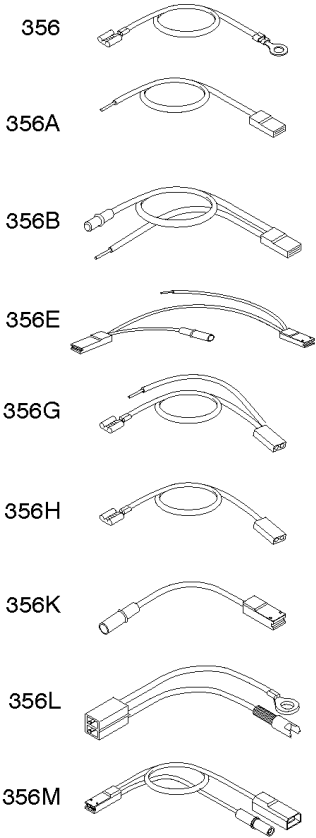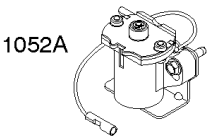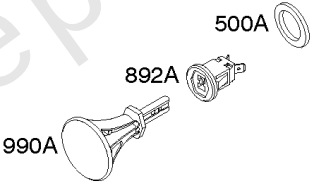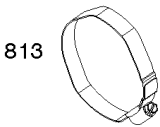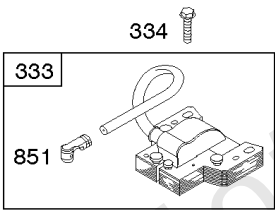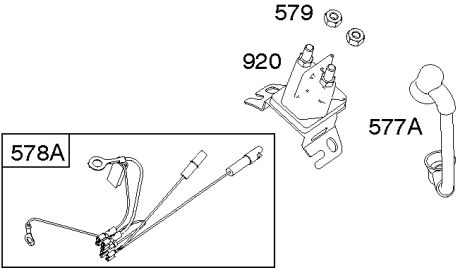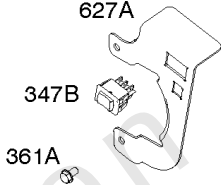          





Alternator, Ignition

REF NO	PART NO	QTY	DESCRIPTION
286	793696		MODULE, Oil Sensor
333	492341		ARMATURE, Magneto
334	699477		SCREW -(Magneto Armature)
347	697854		SWITCH, Rocker
356	695630		WIRE, Stop
356A	692390		WIRE, Stop
356B	699340		WIRE, Stop
356L	792609		WIRE, Stop
356M	794290		WIRE, Stop
356K	697397		WIRE, Stop
356E	696328		WIRE, Stop
356H	696482		WIRE, Stop
356G	697336		WIRE, Stop
361A	691693		SCREW -(Starting Switch)
364A	699947		TERMINAL, Oil Plug
415	691363		PLUG
474D	695466		ALTERNATOR
493A	691177		BRACKET, Mounting
500A	792613		WASHER -(Key Switch)
501	845907		REGULATOR
503	691532		STRAP, Starter
526	690297		SCREW -(Regulator)
577A	690795		CABLE, Starter
578	692306		WIRE ASSEMBLY
578A	790948		WIRE ASSEMBLY
579	691029		NUT -(Starter Cable)
627A	792608		BRACKET, Stopswitch
799	699233		SCREW -(Oil Sensor)
799	794937		SCREW -(Oil Sensor) (Shoulder Screw)
813	690635		CLAMP
851	692424		TERMINAL, Spark Plug
892A	791944		SWITCH, Key
920	691656		SOLENOID, Starter
990A	794696		KEY SET
1046	691337		PLUG, Blower Housing
1052A	794805		SENSOR, Oil
1054	280275		TIE, Cable
1119	699772		SCREW -(Alternator)

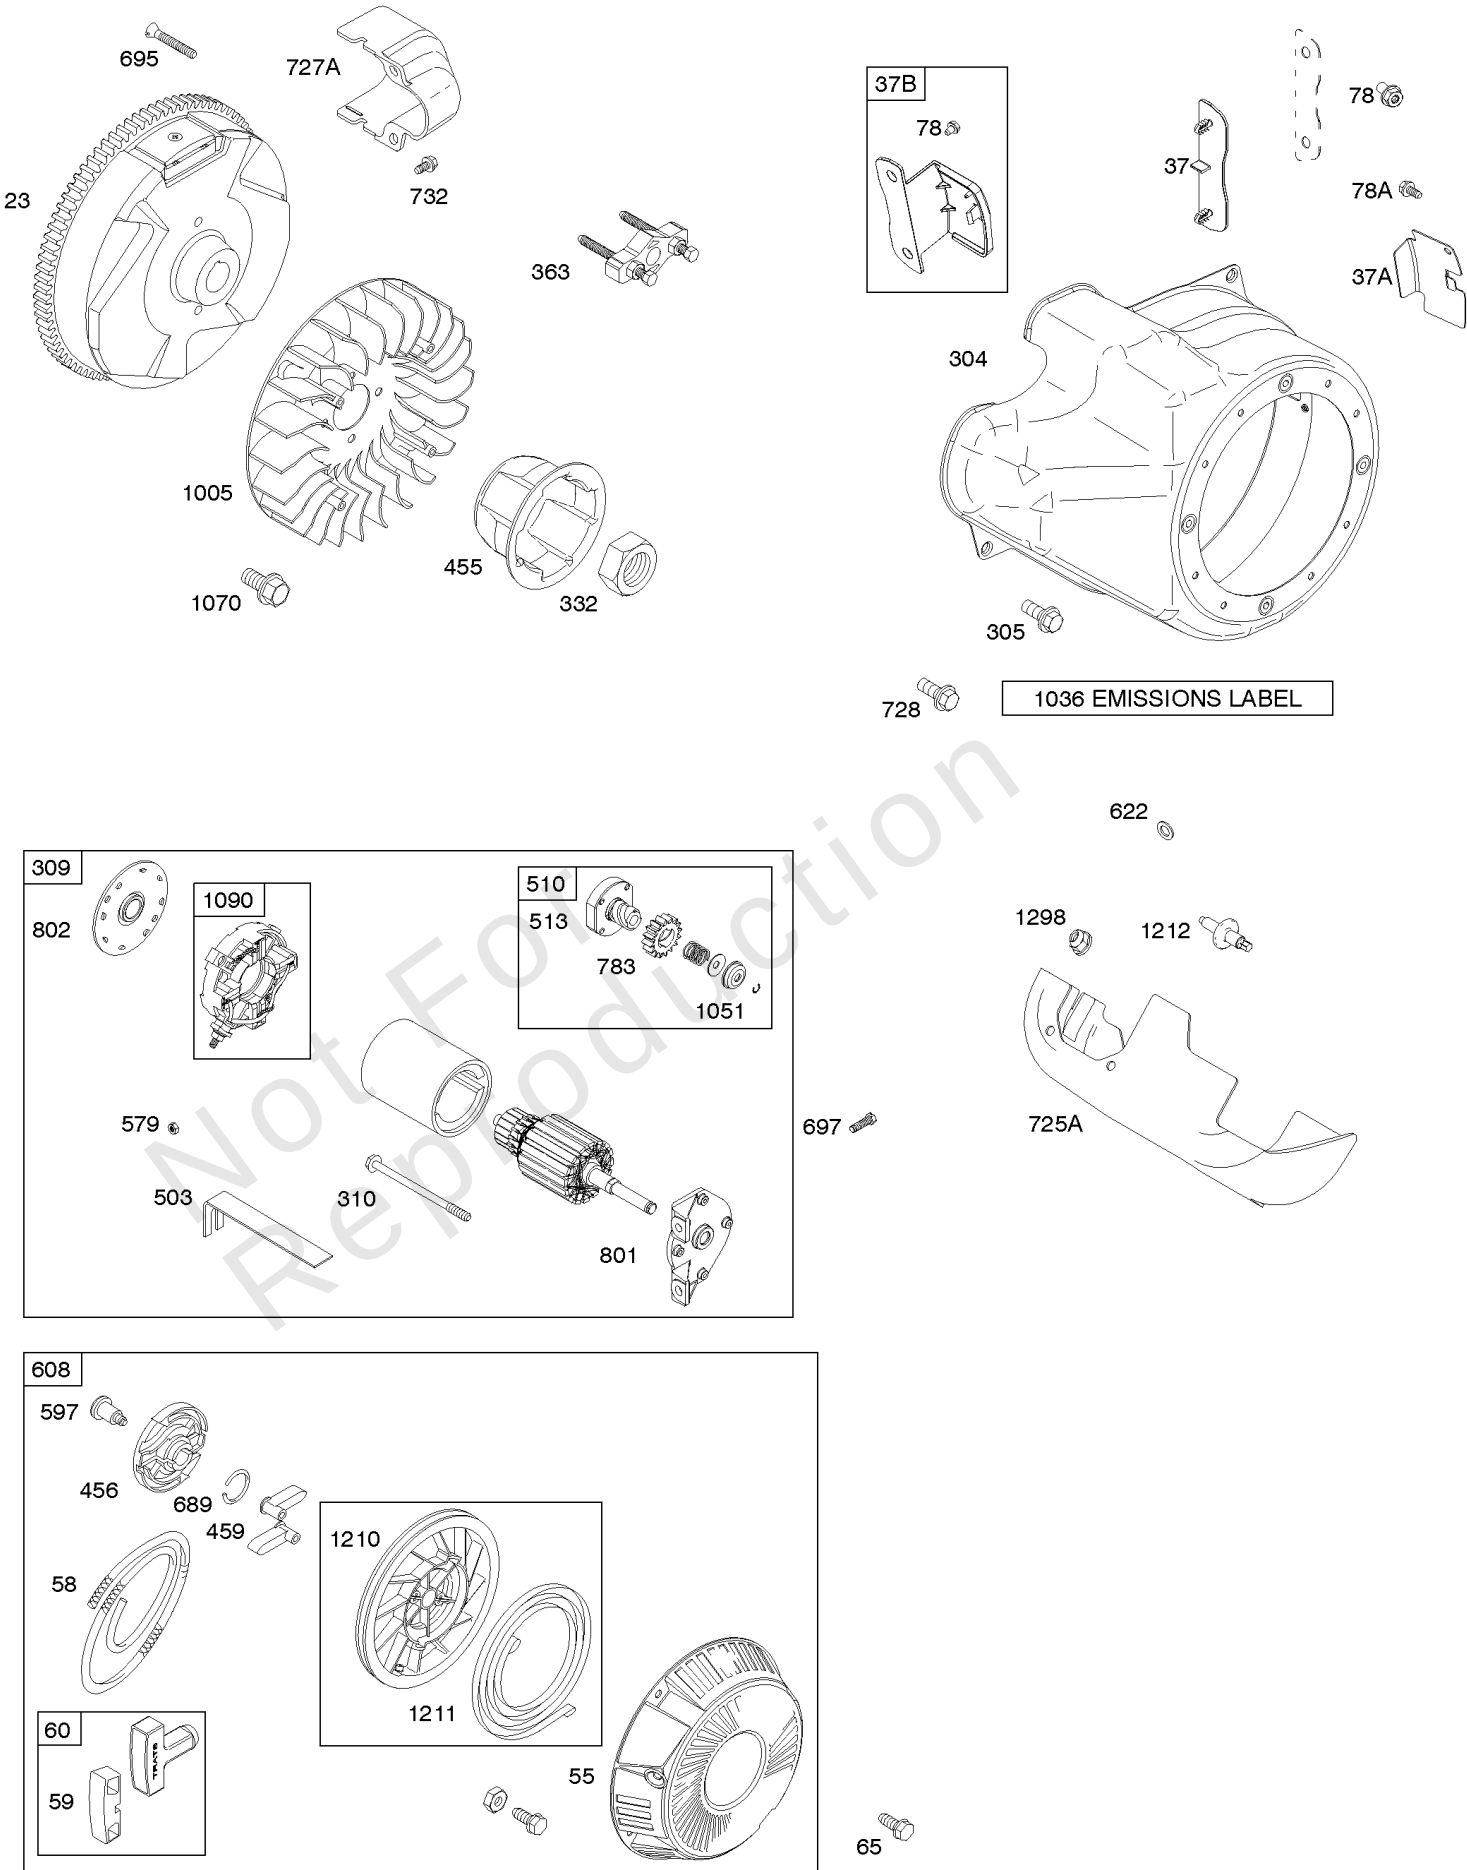 

Blower Housing/Shrouds, Electric Starter, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
23	794812		FLYWHEEL
37	795715		GUARD, Flywheel
37A	699047		GUARD, Flywheel
37B	591544		GUARD, Flywheel
55	695288		HOUSING-REWIND STR
58	693389		ROPE, Starter -(Cut To Required Length)
59	805957		INSERT, Grip
60	490652		GRIP-STARTER ROPE
65	699228		SCREW -(Rewind Starter)
78	795026		SCREW -(Flywheel Guard)
78A	699205		SCREW -(Flywheel Guard)
304	795699		HOUSING, Blower -Used Before Code Date 12012400
304	591545		HOUSING, Blower -Used After Code Date 12012300
305	699481		SCREW -(Blower Housing)
309	695479		MOTOR, Starter
310	690323		SCREW -(Starter Motor)
332	794824		NUT -(Flywheel)
363	19203		PULLER, Flywheel
455	794867		CUP, Flywheel
456	692299		PLATE-PAWL FRICTION
459	281505S		PAWL-RATCHET
503	691532		STRAP, Starter
510	693699		DRIVE, Starter
513	692024		CLUTCH, Drive
579	691029		NUT -(Starter Cable)
597	691696		SCREW -(Pawl Friction Plate)
608	695287		STARTER-REWIND
622	794839		WASHER -(Heat Shield)
689	691855		SPRING-FRICTION
695	698807		SCREW -(Ring Gear)
697	795026		SCREW -(Drive Cap)
725A	792995		SHIELD, Heat -Used Before Code Date 11020700
725A	795886		SHIELD, Heat -Used After Code Date 11020600
727A	697465		COVER, Starter Drive
728	699481		SCREW -(Heat Shield)
732	699200		SCREW -(Starter Drive Cover)
783	693713		GEAR, Pinion
801	694482		CAP-DRIVE

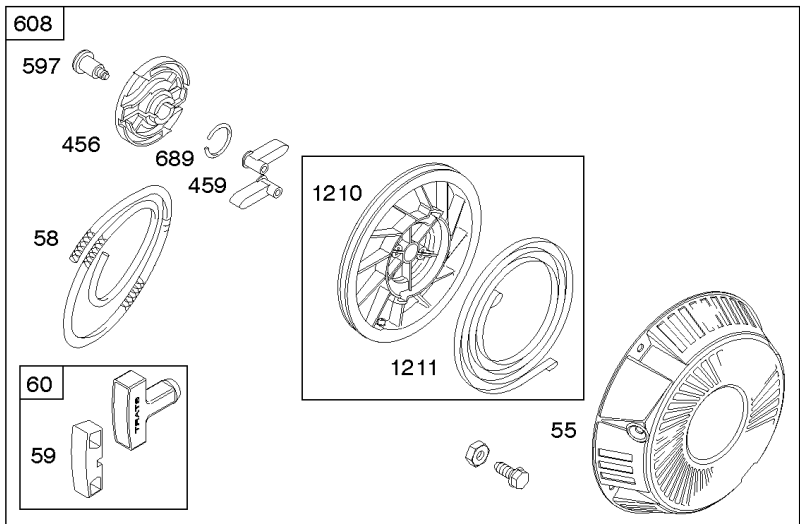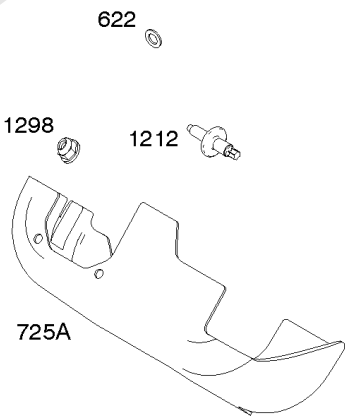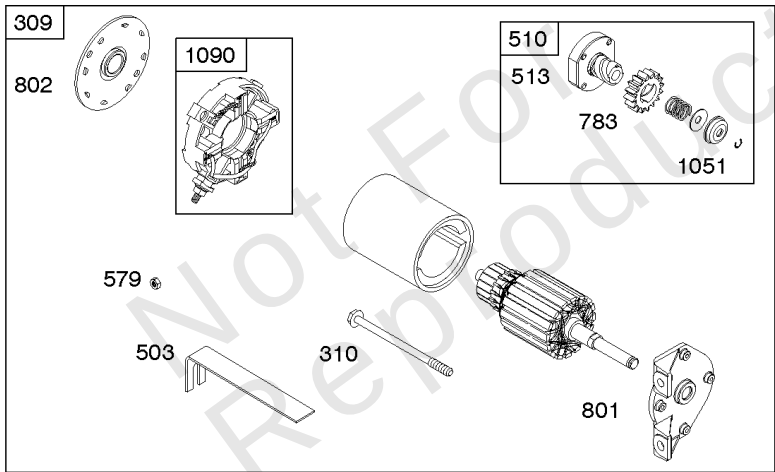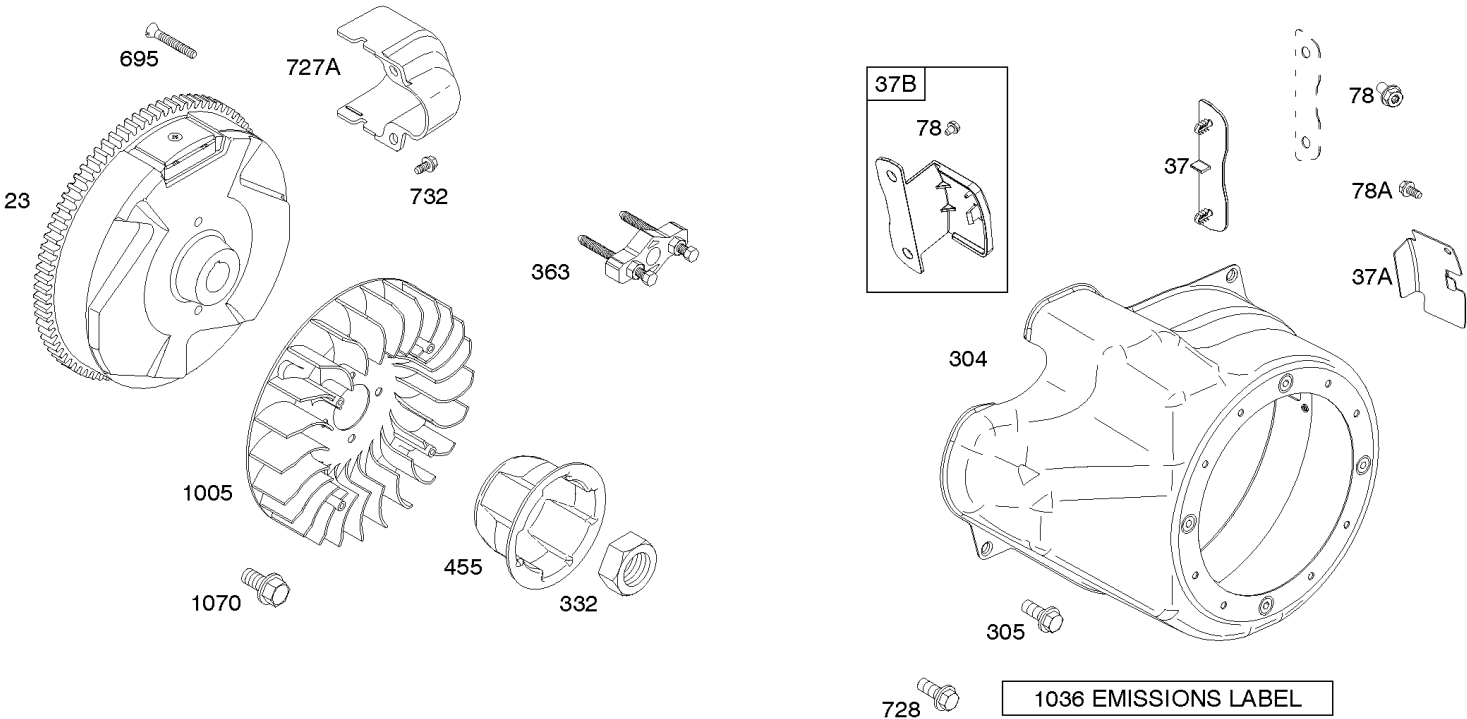    

Blower Housing/Shrouds, Electric Starter, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
802	691286		CAP, End
1005	794815		FAN, Flywheel
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1051	691265		RING, Retaining
1070	794821		SCREW -(Flywheel Fan)
1090	691293		RETAINER, Brush
1210	498144		PULLEY/SPRING ASSY -(Pulley)
1211	498144		PULLEY/SPRING ASSY -(Spring)
1212	794841		STUD -(Blower Housing)
1298	794838		NUT -(Shield-Heat)

1319 WARNING LABEL

**WARNING**

Read and follow Operating Instructions before running engine.

Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.

Engines emit carbon monoxide. DO NOT run in enclosed area.

Exhaust area temperature may exceed 150 F. Do not touch hot parts.

REQUIRED when replacing parts with warning labels affixed.

1319A WARNING LABEL

 




REQUIRED when replacing parts with warning labels affixed.


1036 EMISSIONS LABEL

1058 OPERATOR'S MANUAL



1330 REPAIR MANUAL



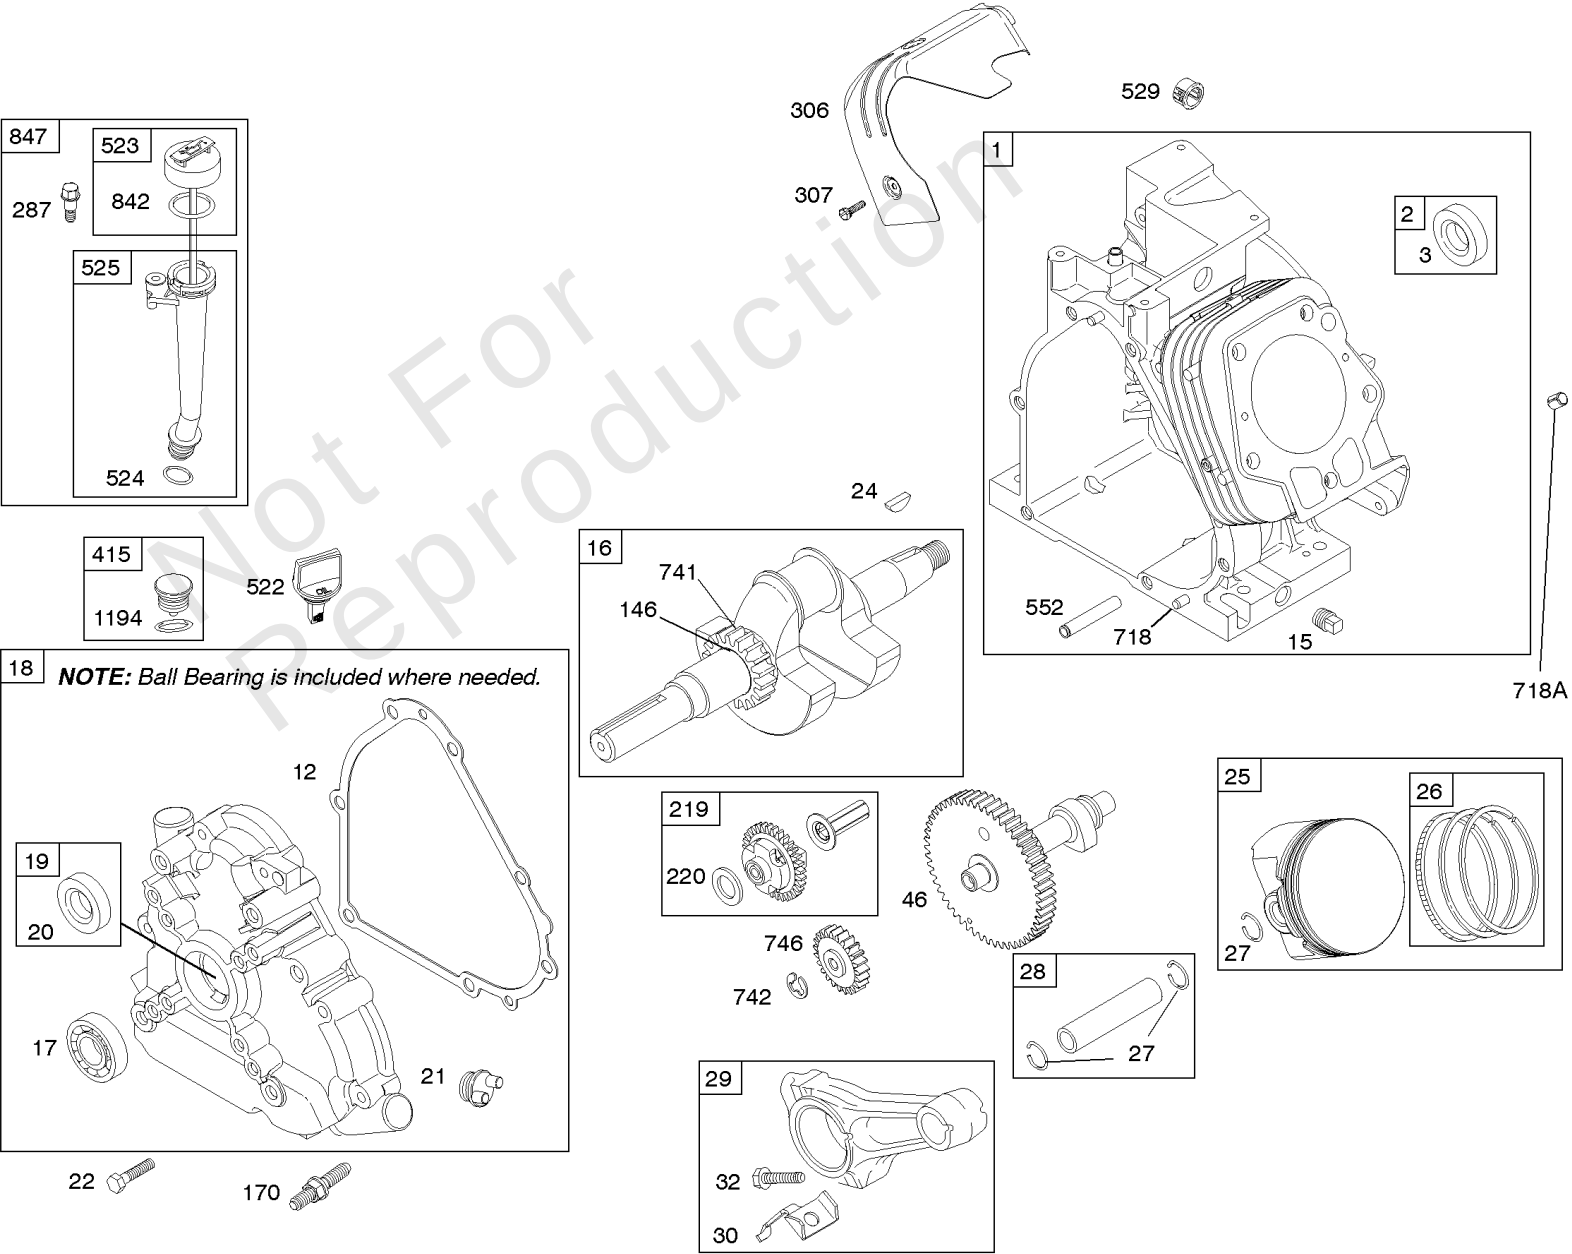 

Camshaft, Crankcase Cover, Crankshaft, Cylinder, Lubrication, Operator's Manual, Piston/

REF NO	PART NO	QTY	DESCRIPTION
1	794850		CYLINDER ASSEMBLY
2	698340		KIT, Bushing/Seal -(Magneto Side)
3	391086S		SEAL, Oil -(Magneto Side)
12	694953		GASKET, Crankcase
15	691686		PLUG-OIL DRAIN
16	794716		CRANKSHAFT
17	695434		BEARING, Ball
18	791965		COVER, Crankcase
19	698340		KIT, Bushing/Seal -(PTO Side)
20	391086S		SEAL, Oil -(PTO Side)
21	281658S		CAP, Oil Fill
22	794825		SCREW -(Crankcase Cover/Sump)
24	222698S		KEY, Flywheel
25	791818		PISTON ASSEMBLY -(.020 Oversize)
25	791819		PISTON ASSEMBLY -(Standard)
26	697698		SET, Ring -(.020 Oversize)
26	697692		SET, Ring -(Standard)
27	690975		LOCK, Piston Pin
28	696581		PIN, Piston -(Standard)
29	694691		ROD, Connecting
30	694692		DIPPER, Connecting Rod
32	690976		SCREW -(Connecting Rod)
46	795697		CAMSHAFT
146	690979		KEY, Woodruff
170	794833		STUD -(Crankcase Cover/Sump)
219	693578		GEAR, Governor
220	691724		WASHER -(Governor Gear)
287	699234		SCREW -(Dipstick Tube)
306	697240		SHIELD, Cylinder
307	794822		SCREW -(Cylinder Shield)
415	691363		PLUG
523	695344		DIPSTICK
524	691876		SEAL, O-Ring
525	695343		TUBE, Dipstick
529	791822		GROMMET
552	694674		BUSHING, Governor Crank
718	690959		PIN, Locating
718A	695178		PIN, Locating
741	691288		GEAR, Timing
742	692564		RETAINER, E Ring

1319 WARNING LABEL

**WARNING**

Read and follow Operating Instructions before running engine.

Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.

Engines emit carbon monoxide. DO NOT run in enclosed area.

Exhaust area temperature may exceed 150 F. Do not touch hot parts.

REQUIRED when replacing parts with warning labels affixed.

1319A WARNING LABEL

 




REQUIRED when replacing parts with warning labels affixed.


1036 EMISSIONS LABEL

1058 OPERATOR'S MANUAL




1330 REPAIR MANUAL



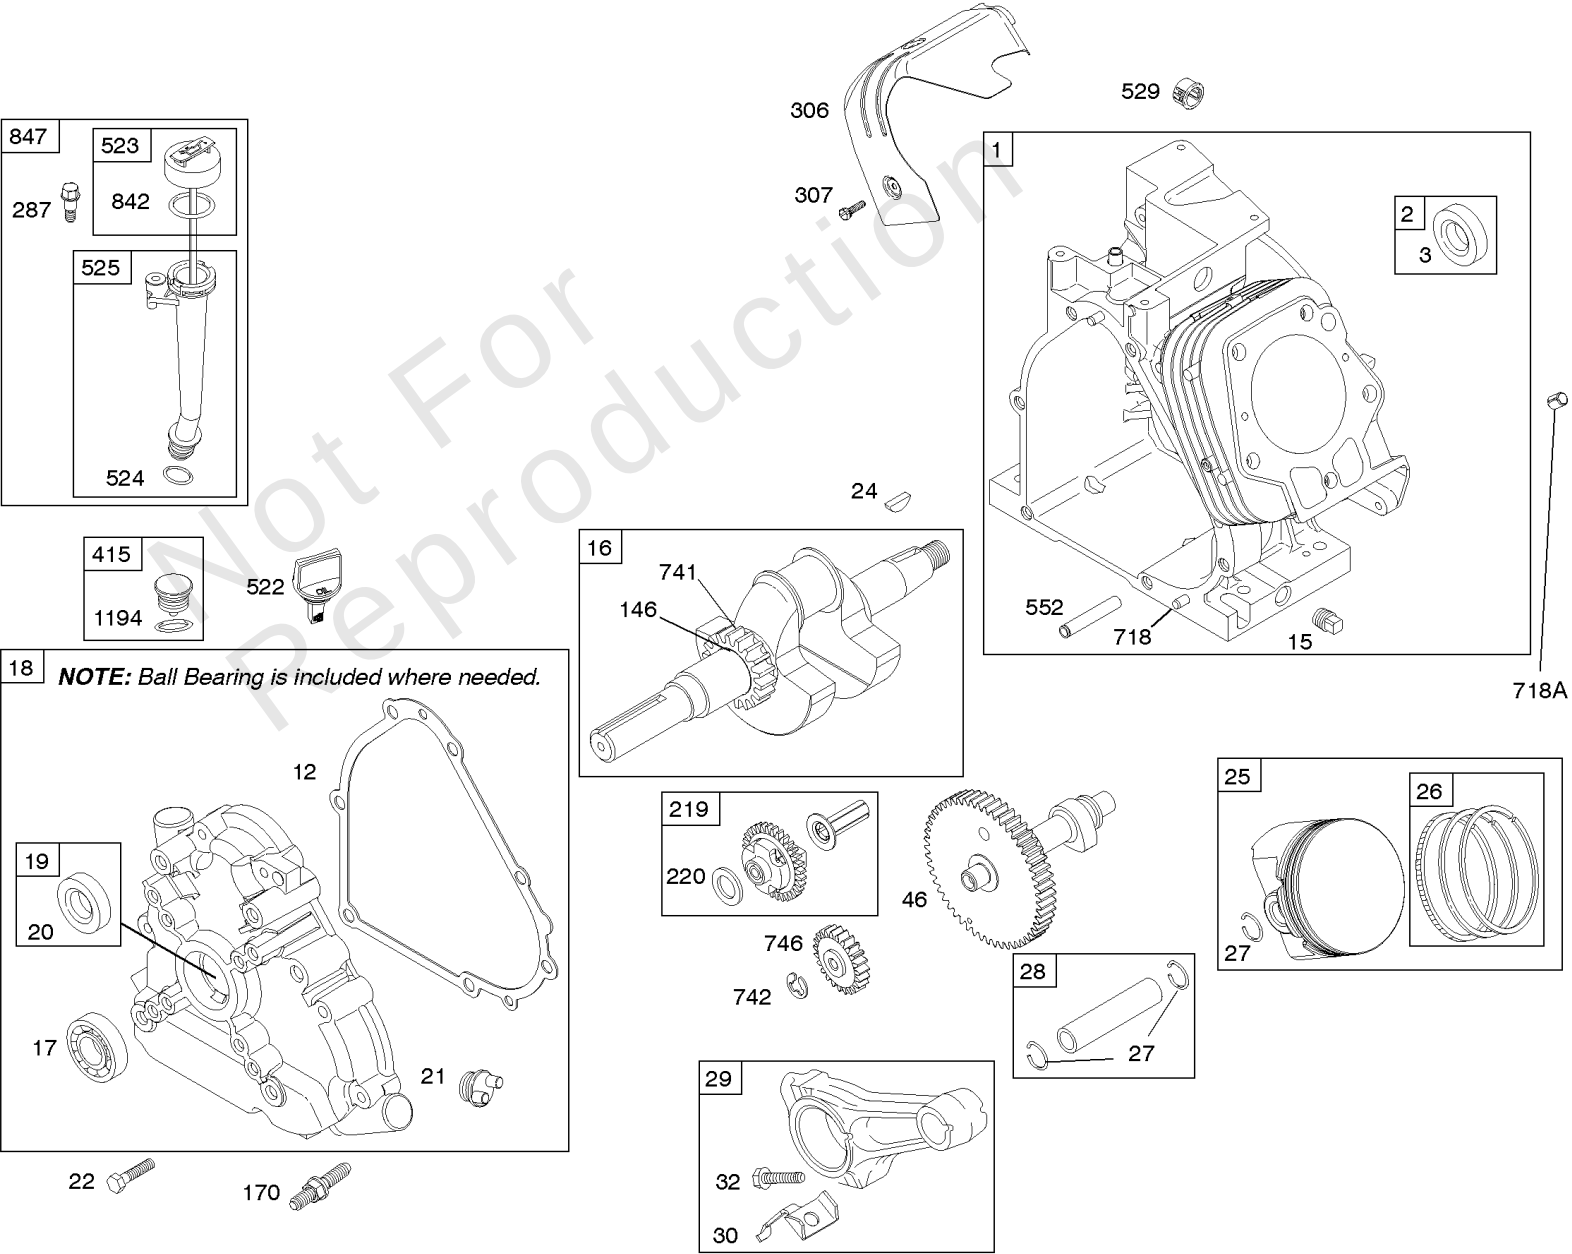 


Camshaft, Crankcase Cover, Crankshaft, Cylinder, Lubrication, Operator's Manual, Piston/

REF NO	PART NO	QTY	DESCRIPTION
746	694679		GEAR, Idler
842	691031		SEAL, O-Ring -(Dipstick Tube)
847	695342		DIPSTICK/TUBE ASSEMBLY
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1058	277040		MANUAL, Operator's
1194	691876		SEAL, O-Ring -(Plug)
1319	794467		LABEL, Warning
1319A	797669		LABEL, Warning
1330	276781		MANUAL, Repair

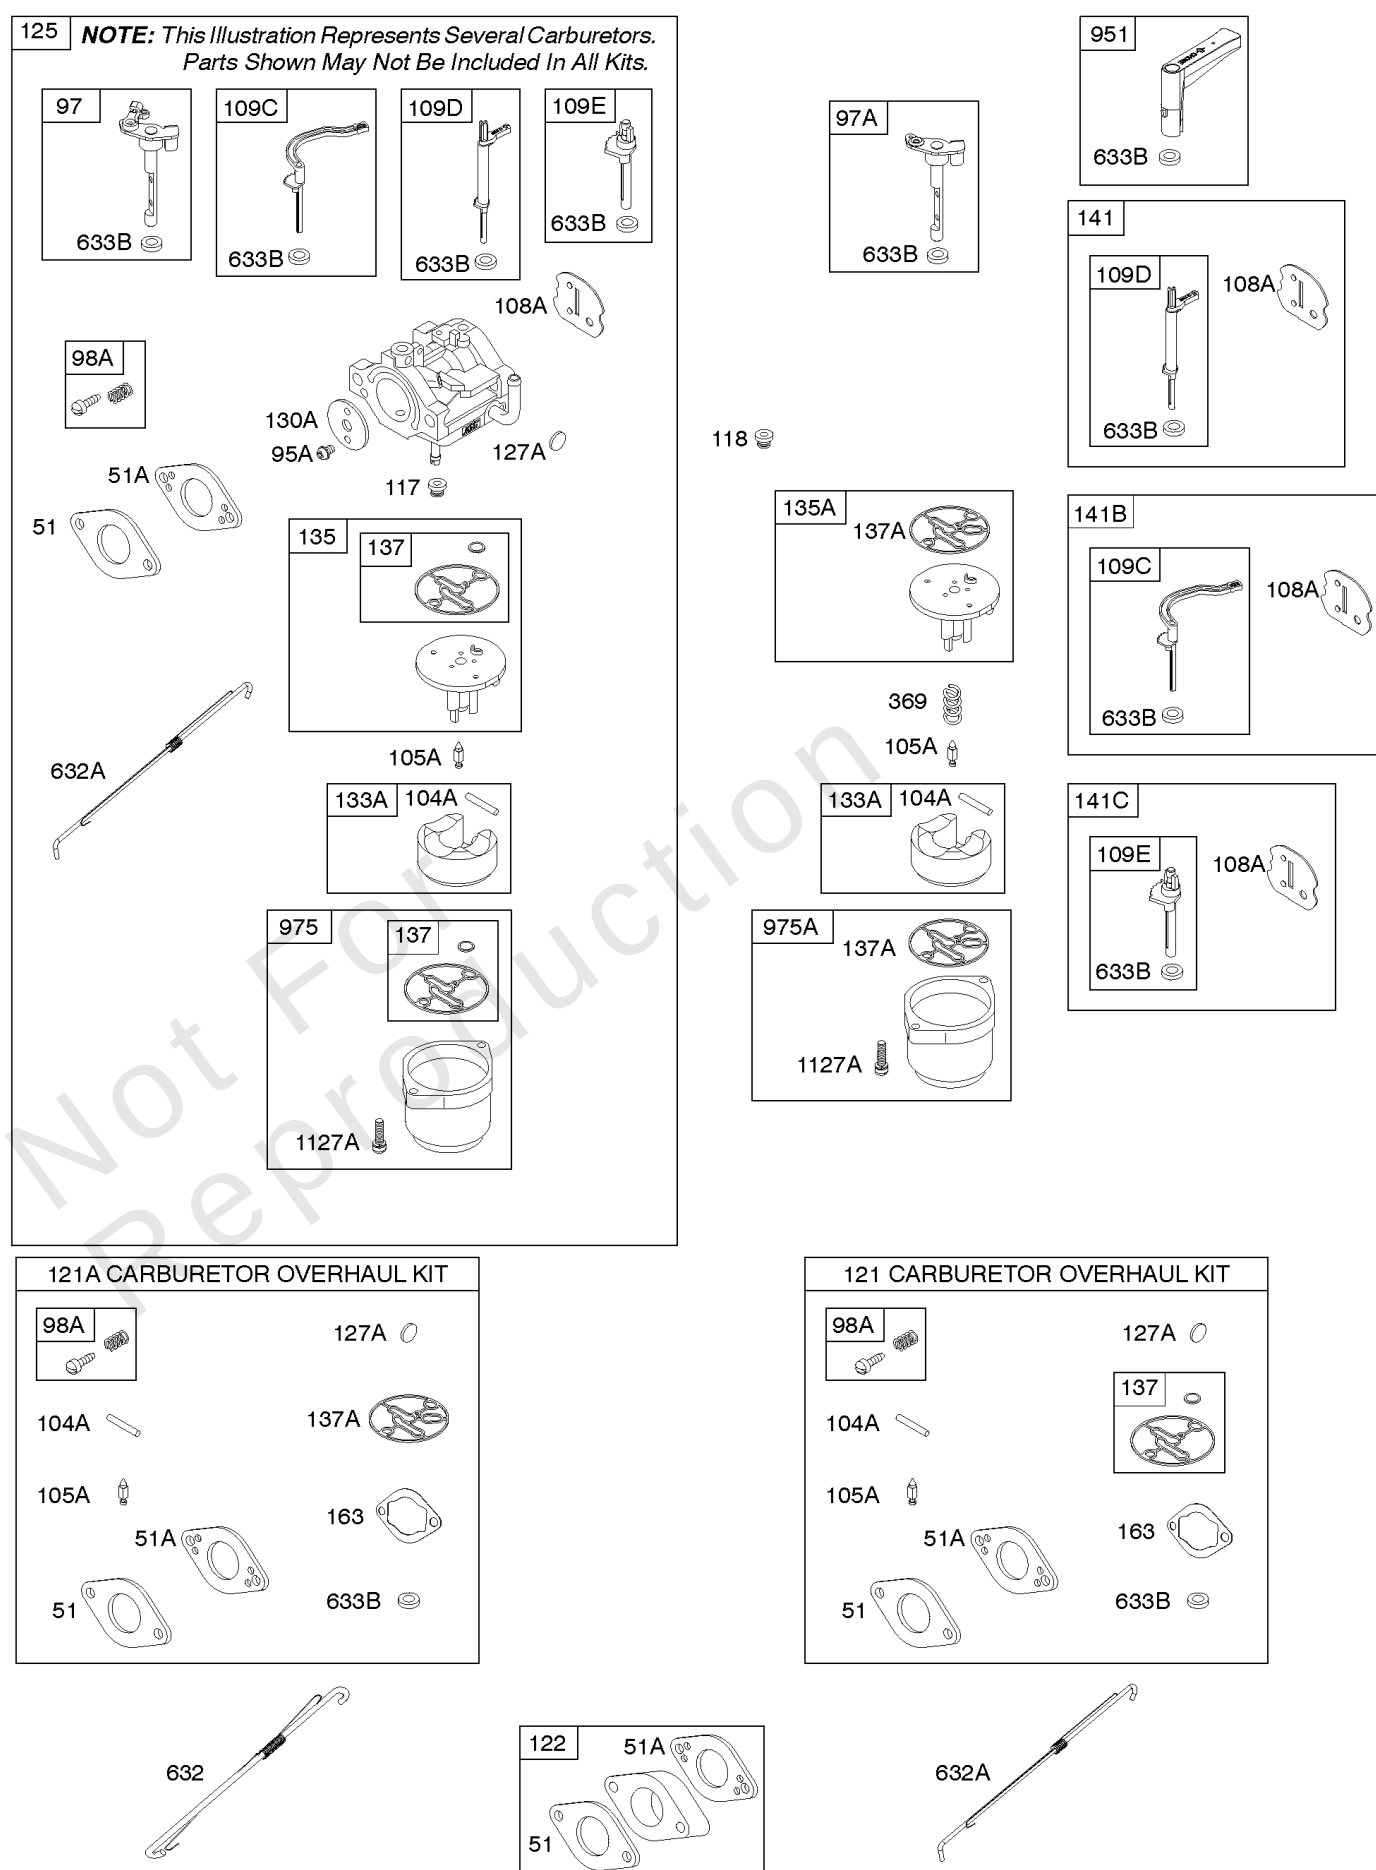 


Carburetor, Kit - Carburetor Overhaul

REF NO	PART NO	QTY	DESCRIPTION
51	694874		GASKET, Intake
51A	694875		GASKET, Intake
95A	690718		SCREW -(Throttle Valve)
97	796334		SHAFT, Throttle
97A	696387		SHAFT, Throttle
98A	695408		KIT, Idle Speed
104A	694918		PIN, Float Hinge
105A	696136		VALVE, Float Needle
108A	696143		VALVE, Choke
109C	790148		SHAFT, Choke
109E	696735		SHAFT, Choke
109D	790149		SHAFT, Choke
117	796080		JET, Main -(Standard) -Used After Code Date 08071700
117	696134		JET, Main -(Standard) -Used Before Code Date 08071800
118	796128		JET, Main -(High Altitude) -Used After Code Date 08071700
118	696135		JET, Main -(High Altitude) -Used Before Code Date 08071800
121	796137		KIT, Carburetor Overhaul
121A	696146		KIT, Carburetor Overhaul
122	694876		SPACER, Carburetor -Used Before Code Date 08071800
122	796315		SPACER, Carburetor -Used After Code Date 08071700
125	796321		CARBURETOR
127A	690727		PLUG, Welch
130A	696139		VALVE, Throttle
133A	694914		FLOAT, Carburetor
135	698780		TUBE, Fuel Transfer
135A	696142		TUBE, Fuel Transfer
137	698781		GASKET, Float Bowl
137A	695426		GASKET, Float Bowl
141	696145		KIT, Choke Shaft
141B	696144		KIT, Choke Shaft
141C	699979		KIT, Choke Shaft
163	692277		GASKET, Air Cleaner -(Air Cleaner)
369	695422		SPRING, Float Bowl
632	695917		SPRING/LINK, Mechanical Governor -Used Before Code Date 08071800
632A	796324		SPRING/LINK, Mechanical Governor -Used After Code Date 08071700
633B	690998		SEAL, Choke/Throttle Shaft
951	699961		LEVER, Choke
975	698783		BOWL, Float
975A	696138		BOWL, Float
1127A	695407		SCREW -(Float Bowl) (Float Bowl to Carburetor Body)

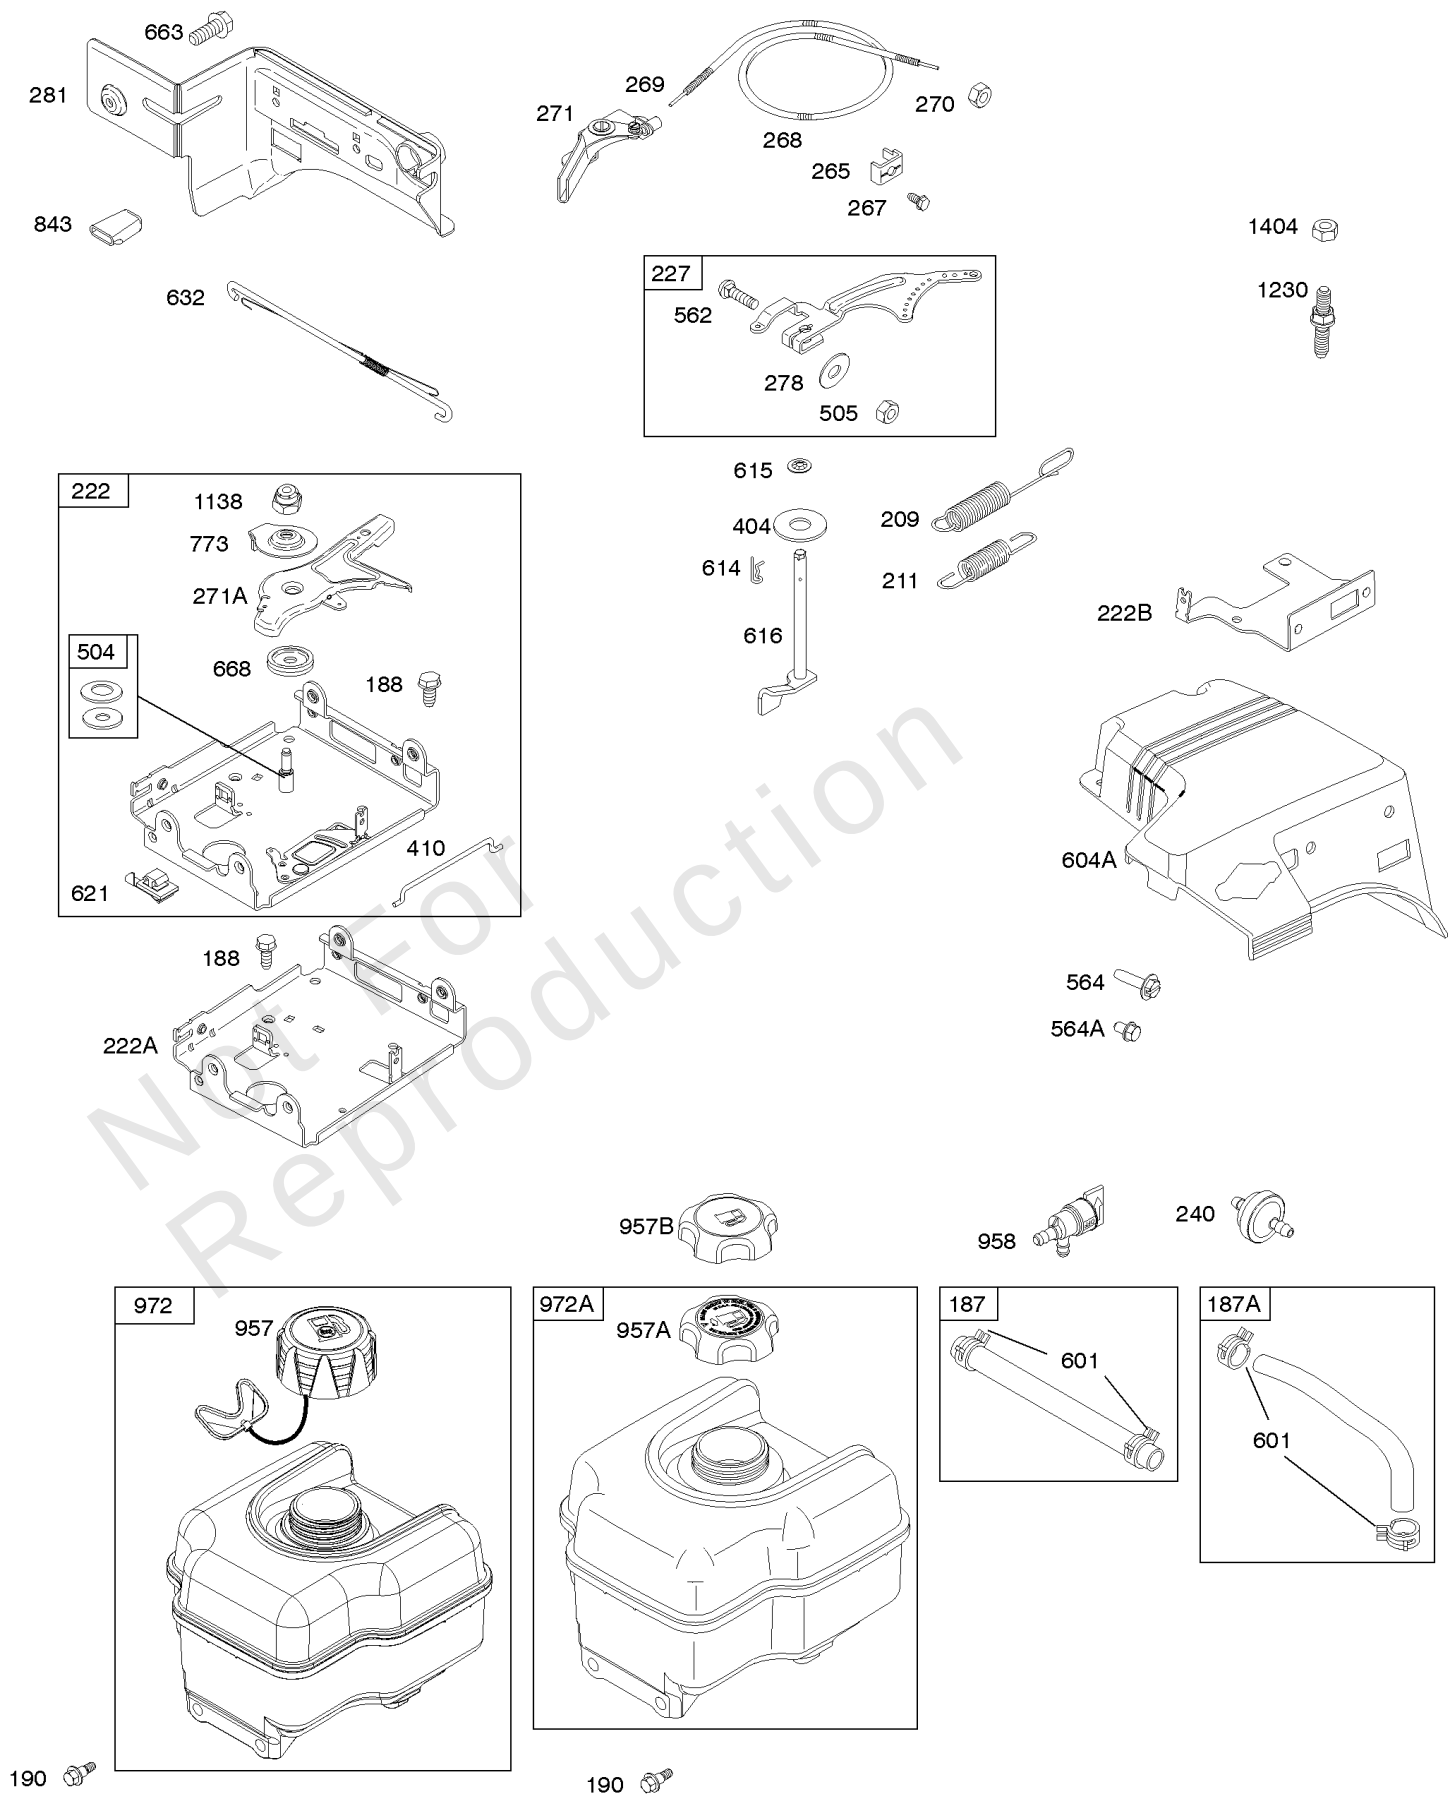 




Controls, Fuel Supply, Governor Spring

REF NO	PART NO	QTY	DESCRIPTION
187	791766		LINE, Fuel -(15" Long)(Cut to Required Length)
187A	791869		LINE, Fuel
188	699479		SCREW -(Control Bracket)
190	699220		SCREW -(Fuel Tank)
209	694867		SPRING, Governor
211	695307		SPRING, Governed Idle
222	794799		BRACKET, Control
222B	794804		BRACKET, Control
227	694864		LEVER, Governor Control
240	394358S		FILTER, Fuel
265	691024		CLAMP, Casing
267	699492		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire
269	691026		WIRE, Control
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
271A	695381		LEVER, Control
278	798196		WASHER -(Governor Control Lever) -Used After Code Date 09101800
278	792008		WASHER -(Governor Lever) -Used Before Code Date 09101900
281	697268		PANEL, Control
404	795759		WASHER -(Governor Crank)
410	695382		LINK, Control
504	695383		SET, Friction Washer
505	793515		NUT -(Governor Control Lever) -Used After Code Date 09101800
505	691251		NUT -(Governor Control Lever) -Used Before Code Date 09101900
562	798197		BOLT -(Governor Control Lever) -Used After Code Date 09101800
562	793216		BOLT -(Governor Lever) -Used Before Code Date 09101900
564	699492		SCREW -(Control Cover)
564A	699491		SCREW -(Control Cover)
601	791850		CLAMP, Hose
604A	791752		COVER, Control
614	691620		PIN, Cotter -(Governor Crank)
615	694676		RETAINER, Governor Shaft -(Governor Gear) -Used Before Code Date 08021500
616	795758		CRANK, Governor
621	692310		SWITCH, Stop

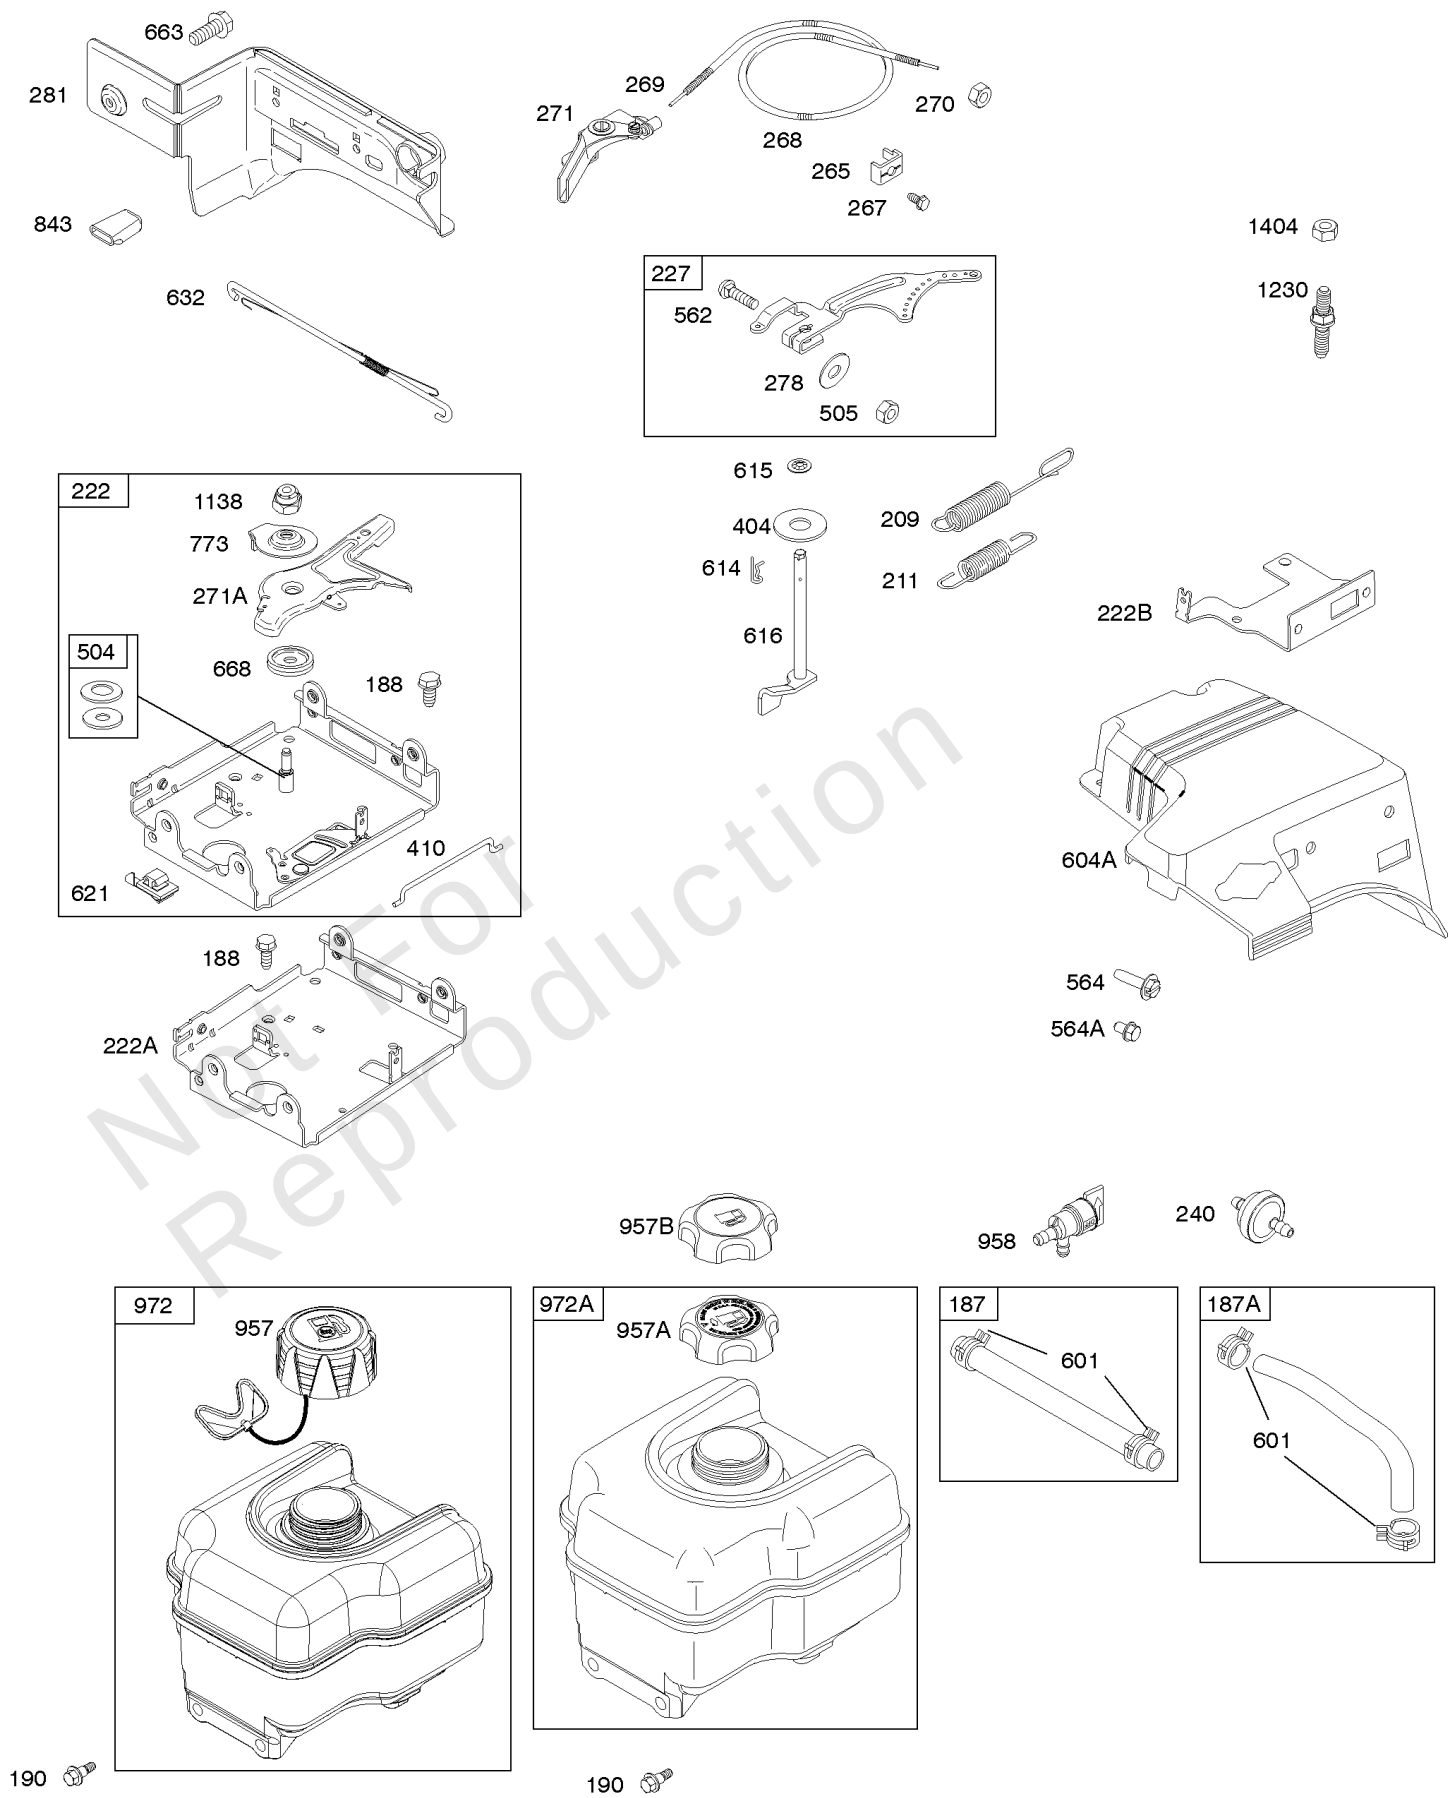 




Controls, Fuel Supply, Governor Spring

REF NO	PART NO	QTY	DESCRIPTION
632	695917		SPRING/LINK, Mechanical Governor -Used Before Code Date 08071800
663	699492		SCREW -(Control Panel)
668	694257		SPACER -(Control Bracket)
773	694258		RETAINER
843	695588		SLEEVE, Lever
957	799719		CAP, Fuel Tank -(Plastic)
957A	792647		CAP, Fuel Tank -(Plastic) (Fresh Start)
957B	795027		CAP, Fuel Tank -(Plastic)
958	698180		VALVE, Fuel Shutoff -(Plastic)
972	799863		TANK, Fuel -(Plastic)
972A	-----		Tank-Fuel -(Plastic) (No Longer Available)(For Replacement, Order Reference 972)
1138	694255		NUT -(Control Bracket)
1230	794840		STUD -(Control Bracket)
1404	794838		NUT -(Control Cover)

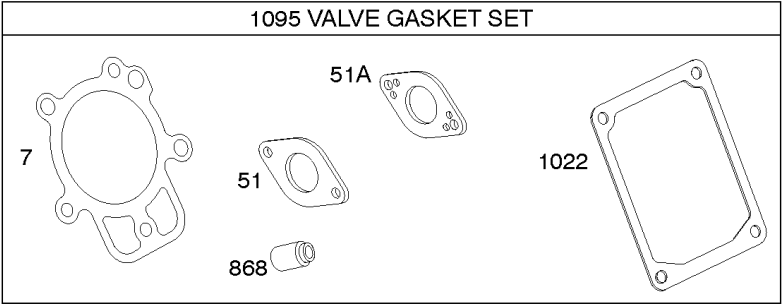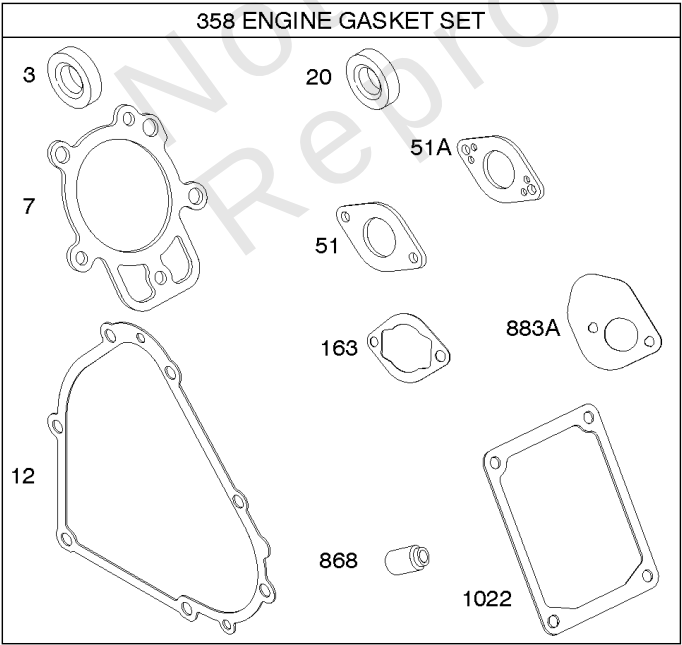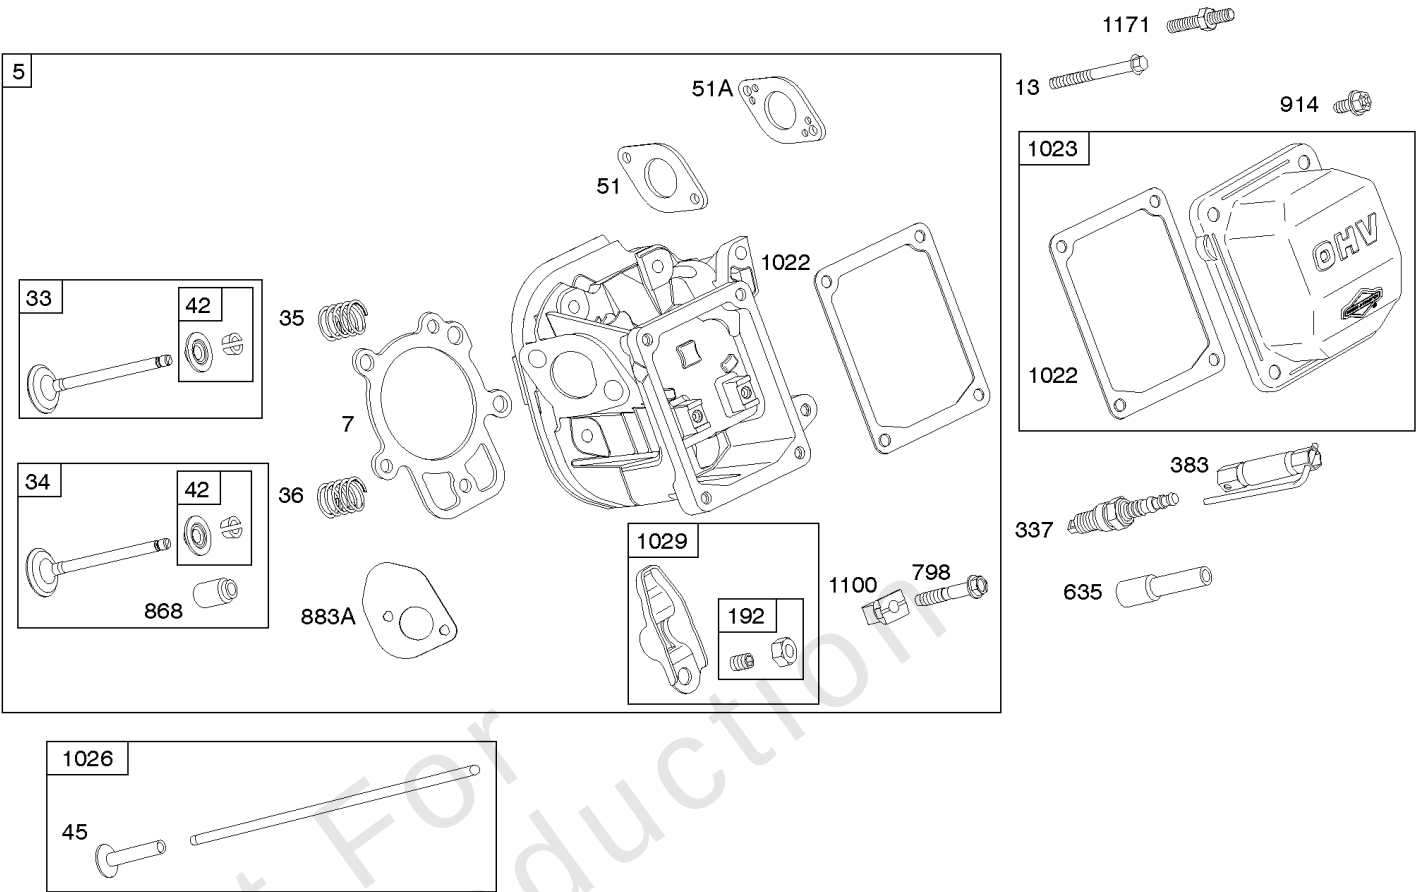   

Cylinder Head, Gasket Set - Engine, Gasket Set - Valve, Valves

REF NO	PART NO	QTY	DESCRIPTION
3	391086S		SEAL, Oil -(Magneto Side)
5	799859		HEAD, Cylinder
7	697690		GASKET, Cylinder Head
12	694953		GASKET, Crankcase
13	794829		SCREW -(Cylinder Head)
20	391086S		SEAL, Oil -(PTO Side)
33	697576		VALVE, Exhaust -(Chrome)
34	792200		VALVE, Intake
35	694865		SPRING, Valve -(Intake)
36	694865		SPRING, Valve -(Exhaust)
42	499586		KEEPER, Valve
45	690977		TAPPET, Valve
51	694874		GASKET, Intake
51A	694875		GASKET, Intake
163	692277		GASKET, Air Cleaner -(Air Cleaner)
192	690083		ADJUSTER, Rocker Arm
337	491055S		PLUG, Spark
337	84007216	1	PLUG, SPARK -(China Only)
358	695438		GASKET SET, Engine
383	19576S		WRENCH, Spark Plug
635	691909		BOOT, Spark Plug
798	697890		SCREW -(Rocker Arm)
868	690968		SEAL, Valve
883A	794818		GASKET, Exhaust
914	794827		SCREW -(Rocker Cover)
1022	690971		GASKET, Rocker Cover
1023	697691		COVER, Rocker
1026	592673		ROD, Push
1029	690972		ARM, Rocker
1095	695440		GASKET SET, Valve
1100	791959		PIVOT, Rocker Arm
1171	794828		STUD -(Rocker Cover)

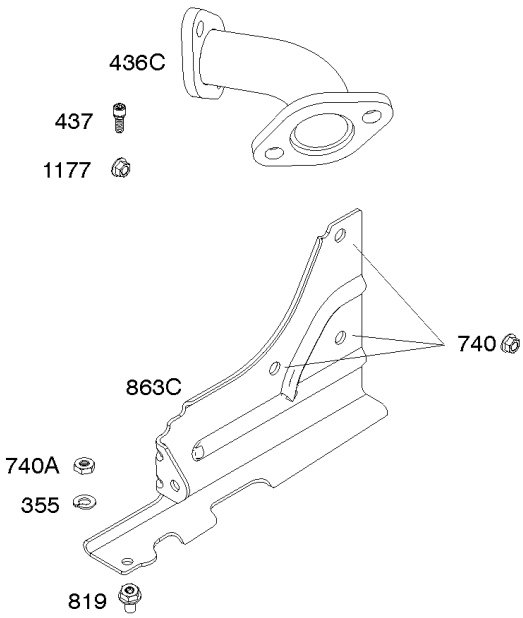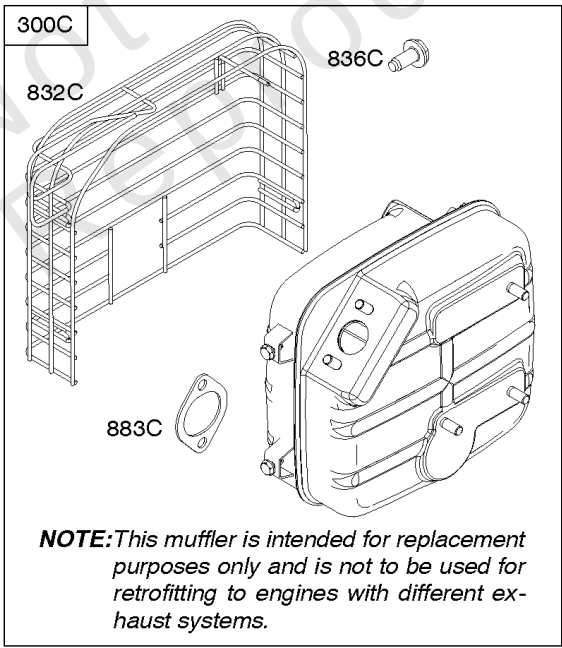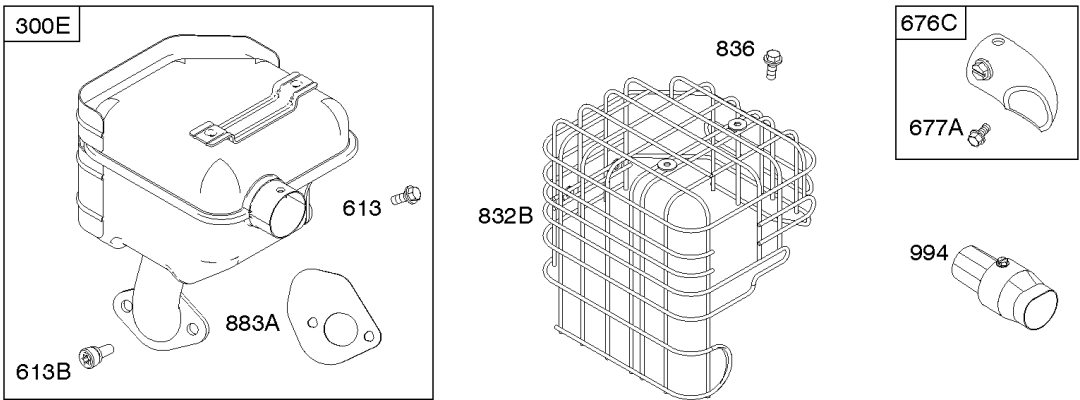   

Exhaust System

REF NO	PART NO	QTY	DESCRIPTION
300C	793701		MUFFLER
300E	794949		MUFFLER
355	794842		WASHER -(Muffler Bracket)
436C	792374		MANIFOLD, Exhaust
437	794844		SCREW -(Exhaust Manifold)
613	794846		SCREW -(Muffler)
613B	794844		SCREW -(Muffler)
676C	697816		DEFLECTOR, Muffler
677A	699776		SCREW -(Muffler Deflector)
740	710090		LOCKNUT -(Muffler Bracket)
740A	794843		NUT -(Muffler Bracket)
819	794832		SCREW -(Muffler Bracket)
832B	590767		MUFFLER
832C	792380		MUFFLER
836	699234		SCREW -(Muffler Guard)
836C	710023		SCREW -(Muffler Guard)
863C	793700		BRACKET, Muffler
883A	794818		GASKET, Exhaust
883C	710250		GASKET, Exhaust
994	790153		ARRESTOR, Spark
1177	710090		LOCKNUT -(Muffler)

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
--------	---------	-----	-------------

Not For Reproduction

