




Parts Manual

Mfg. No: 222417-0630-01

Model Components	Page
Air Cleaner Grp, Muffler Grp.	4
Carburetor Assy.	6
Controls.	8
Crankcase Cvr. Cam.	10
Cylinder, Head.	12
Elect.	14
Electric Starter.	16
Electric Starter.	18
Electric Starter.	20
Flywhells, BlowerHsg, Screen.	22
Fuel Tank Grp.	24
Kits/Gasket Sets.	26
Piston Grp, Crankshaft.	28
Replacement Engine - US & Canada.	30
Rewind Starter.	31
Sno Gard.	33

Not For
Reproduction

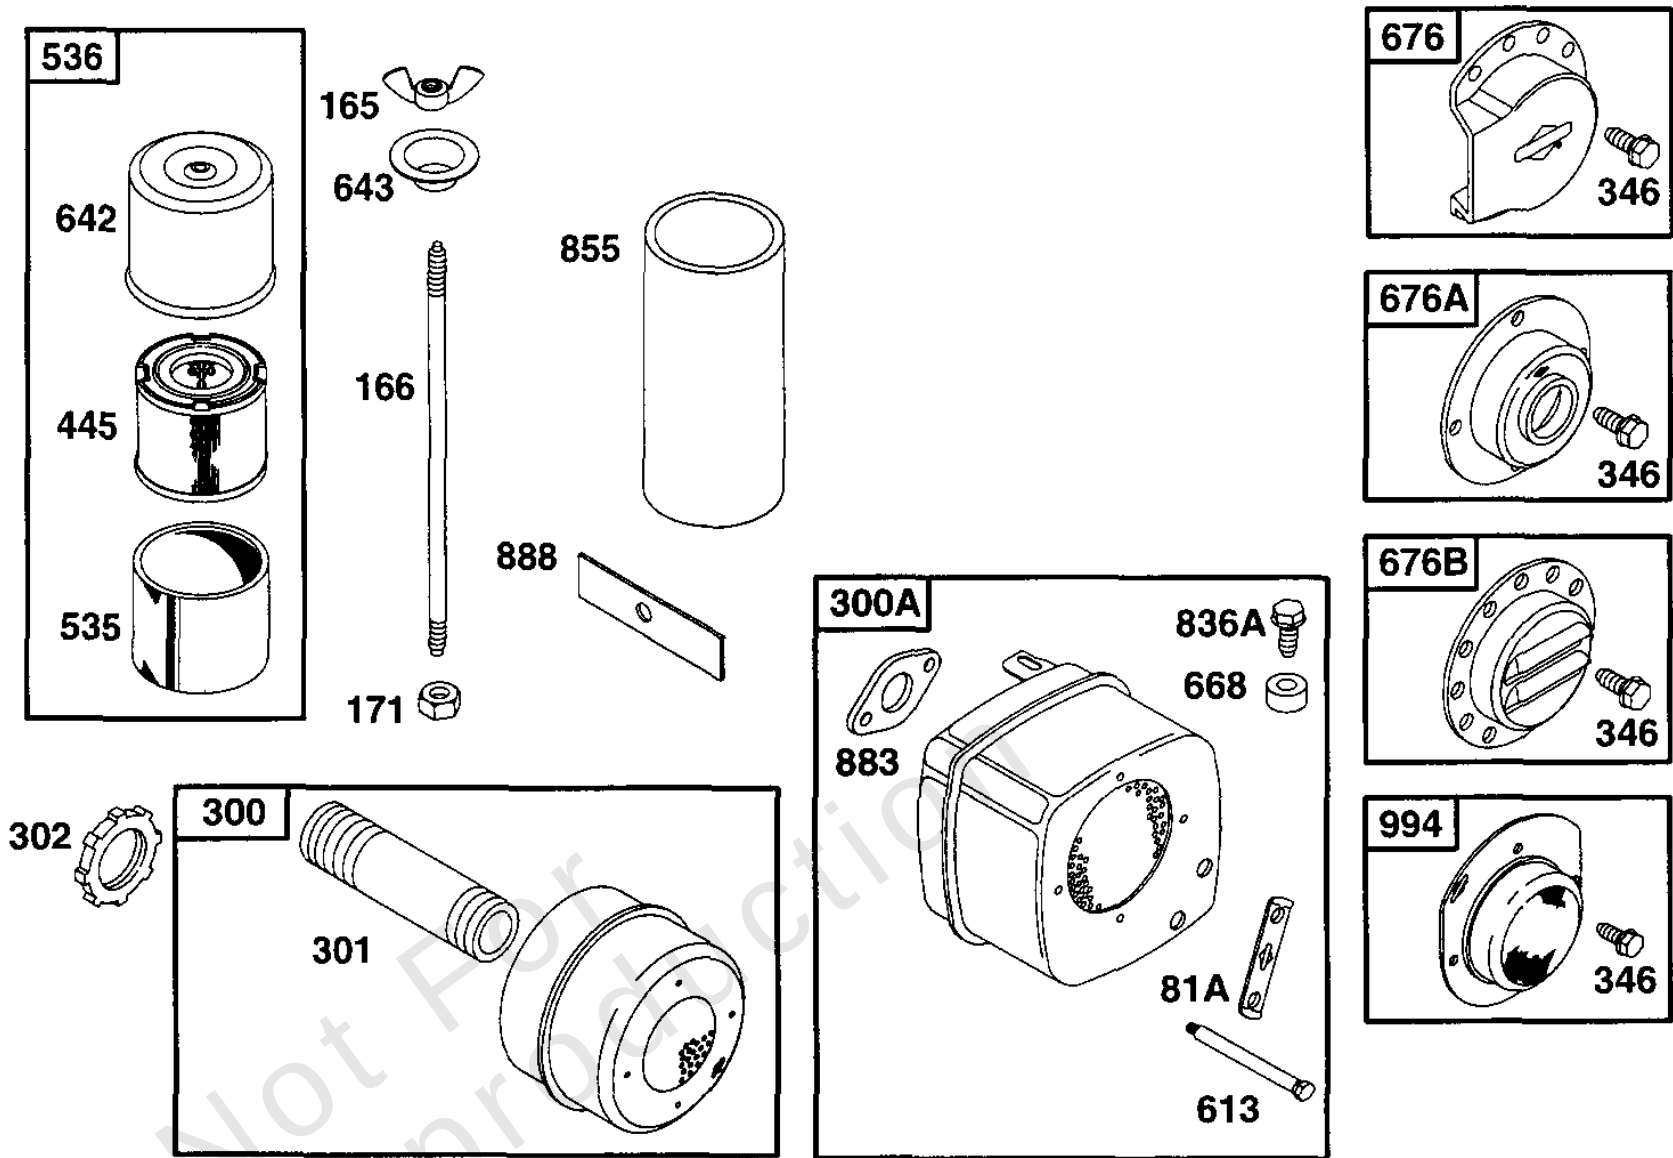


Air Cleaner Grp, Muffler Grp

REF NO	PART NO	QTY	DESCRIPTION
81A	223016		LOCK, Muffler Screw
165	94289		NUT
166	231007		STUD -(Air Cleaner)
166	93110		SCREW
171	92129		NUT -(1/4-28)
300A	491626		MUFFLER
300	391569		MUFFLER
301	93833		PIPE, Exhaust
302	261564		LOCKNUT -(Muffler and Elbow)
346	93705		SCREW -(8-32 X 3/8)
445	393957		FILTER, A/C Cartridge
535	271794		FILTER, Air Cleaner Foam
536	391063		CLEANER, Air
613	93927		SCREW -(Muffler)
642	224885		COVER, Air Cleaner
643	222272		RETAINER, Air Filter
668	231109		SPACER
676B	397630		DEFLECTOR, Muffler -(Louvered Outlet)
676A	396903		DEFLECTOR, Muffler
676	393761		DEFLECTOR, Muffler -(Side Outlet)
836A	94885		SCREW
855	231145		MANIFOLD, Intake
883	272293		GASKET, Exhaust -Included in Valve Overhaul Gasket Set-Part No. 498537. Included in Gasket Set-Part No. 492653
888	222726		BRACKET, Support
994	392390		ARRESTOR, Spark

Footnotes:

(Used only with Breaker Point Ignition)

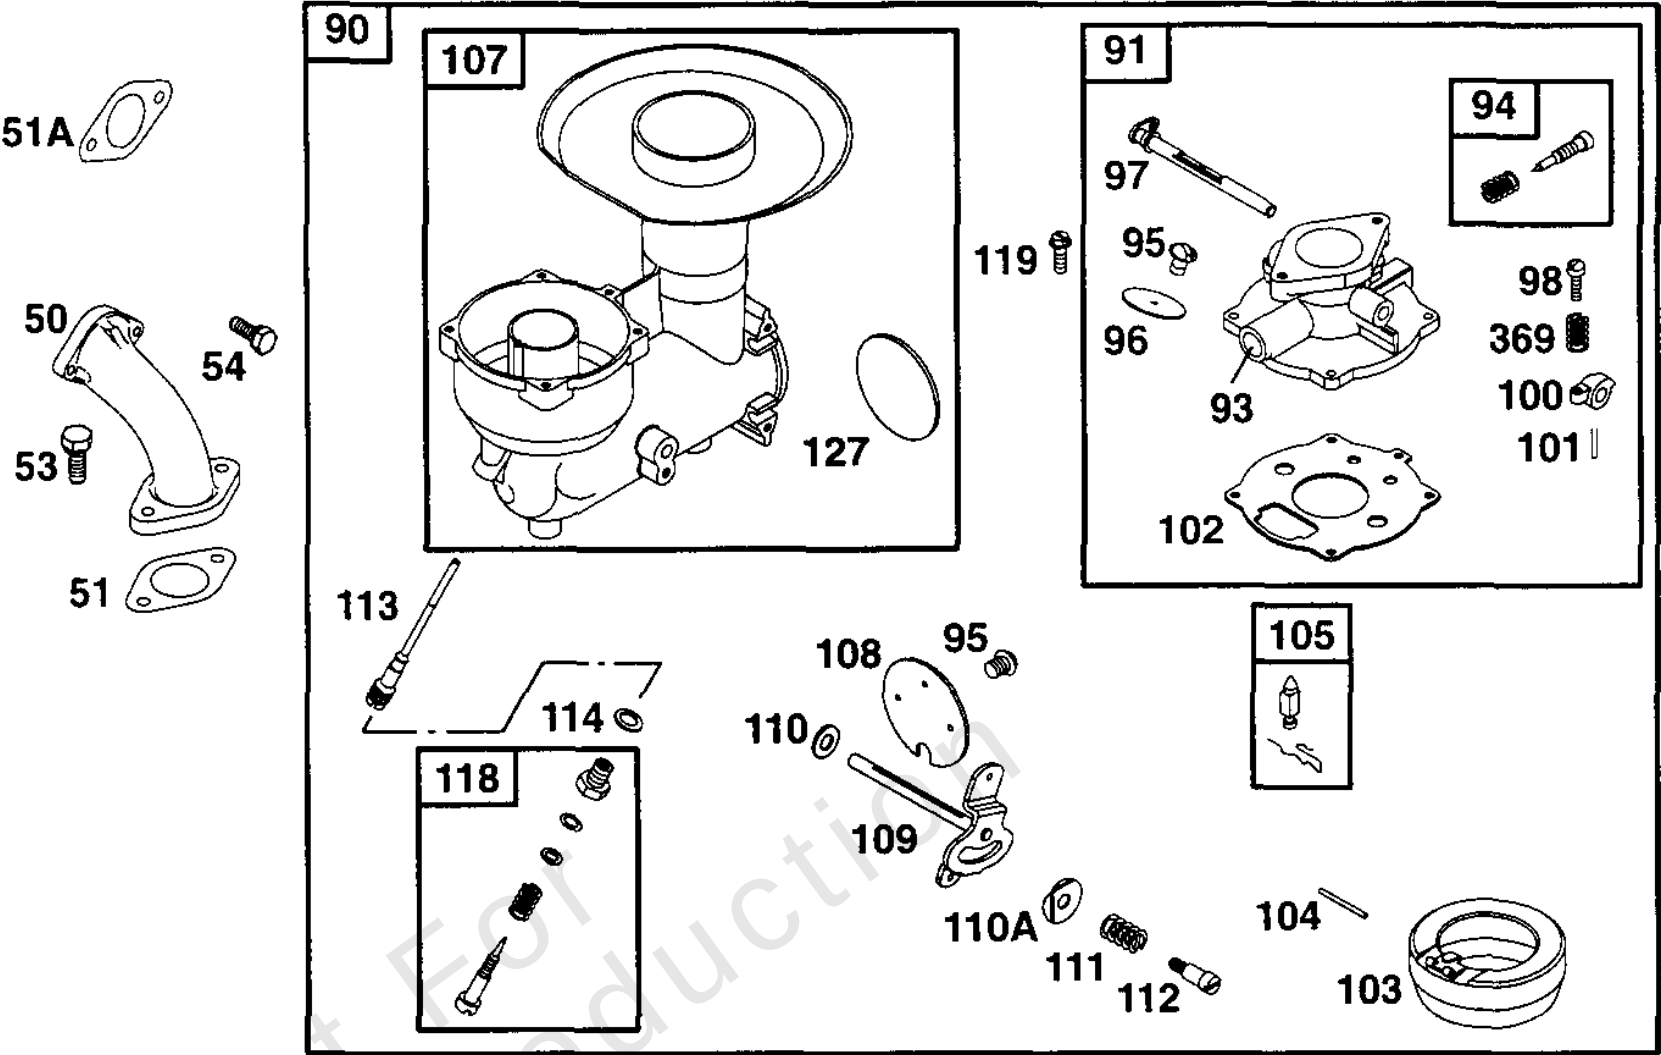


Carburetor Assy

REF NO	PART NO	QTY	DESCRIPTION
50	212301		MANIFOLD, Intake
51A	498869		GASKET, Intake -Included in Valve Overhaul Gasket Set-Part No. 498537. Included in Gasket Set-Part No. 492653. Included in Carburetor Kit-See Ref. 121
51	270267		GASKET, Intake -Included in Gasket Set-Part No. 492653. Included in Carburetor Kit-See Ref. 121
53	93415		SCREW -(1/4-20 X 3/4)
54	93208		SCREW -(Intake Manifold)
90	391992		CARBURETOR -(Manual Choke)
91	391833		BODY, Upper Carburetor
93	23108		BUSHING, Throttle Shaft
94	292681		VALVE, Idle Mixture -Included in Carburetor Kit-See Ref. 121
95	93499		SCREW -(Throttle Valve)
96	221939		VALVE, Throttle
97	391596		SHAFT, Throttle
98	91920		SCREW -(8-32 X 5/8)
100	212904		STOP, Throttle
101	93043		PIN, Shaft
102	270268		GASKET, Carburetor Body -Included in Carburetor Kit-See Ref. 121
103	298514		FLOAT, Carburetor
104	230896		PIN, Float Hinge -Included in Carburetor Kit-See Ref. 121
105	394681		KIT, Needle/Seat -(Gravity Feed) Included in Carburetor Kit-See Ref. 121
107	391829		BODY, Lower Carburetor
108	391836		VALVE, Choke
109	391884		SHAFT, Choke
110	222712		WASHER
111	26155		SPRING, Friction
112	23123		SCREW
113	390950		NOZZLE, Carburetor -Used Before Code Date 81060211
113	394730		NOZZLE, Carburetor -(Labeled B) -Used After Code Date 81060100
114	68667		WASHER -(Viton Seat) Included in Carburetor Kit-See Ref. 121
118	99525		VALVE, High Speed -Included in Carburetor Kit-See Ref. 121
119	94152		SCREW -(Upper To Lower Carburetor Body)
127	221747		PLUG, Welch -Included in Carburetor Kit-See Ref. 121
369	26157		SPRING, Compression

Footnotes:

Included in Carburetor Kit-See Ref. 121

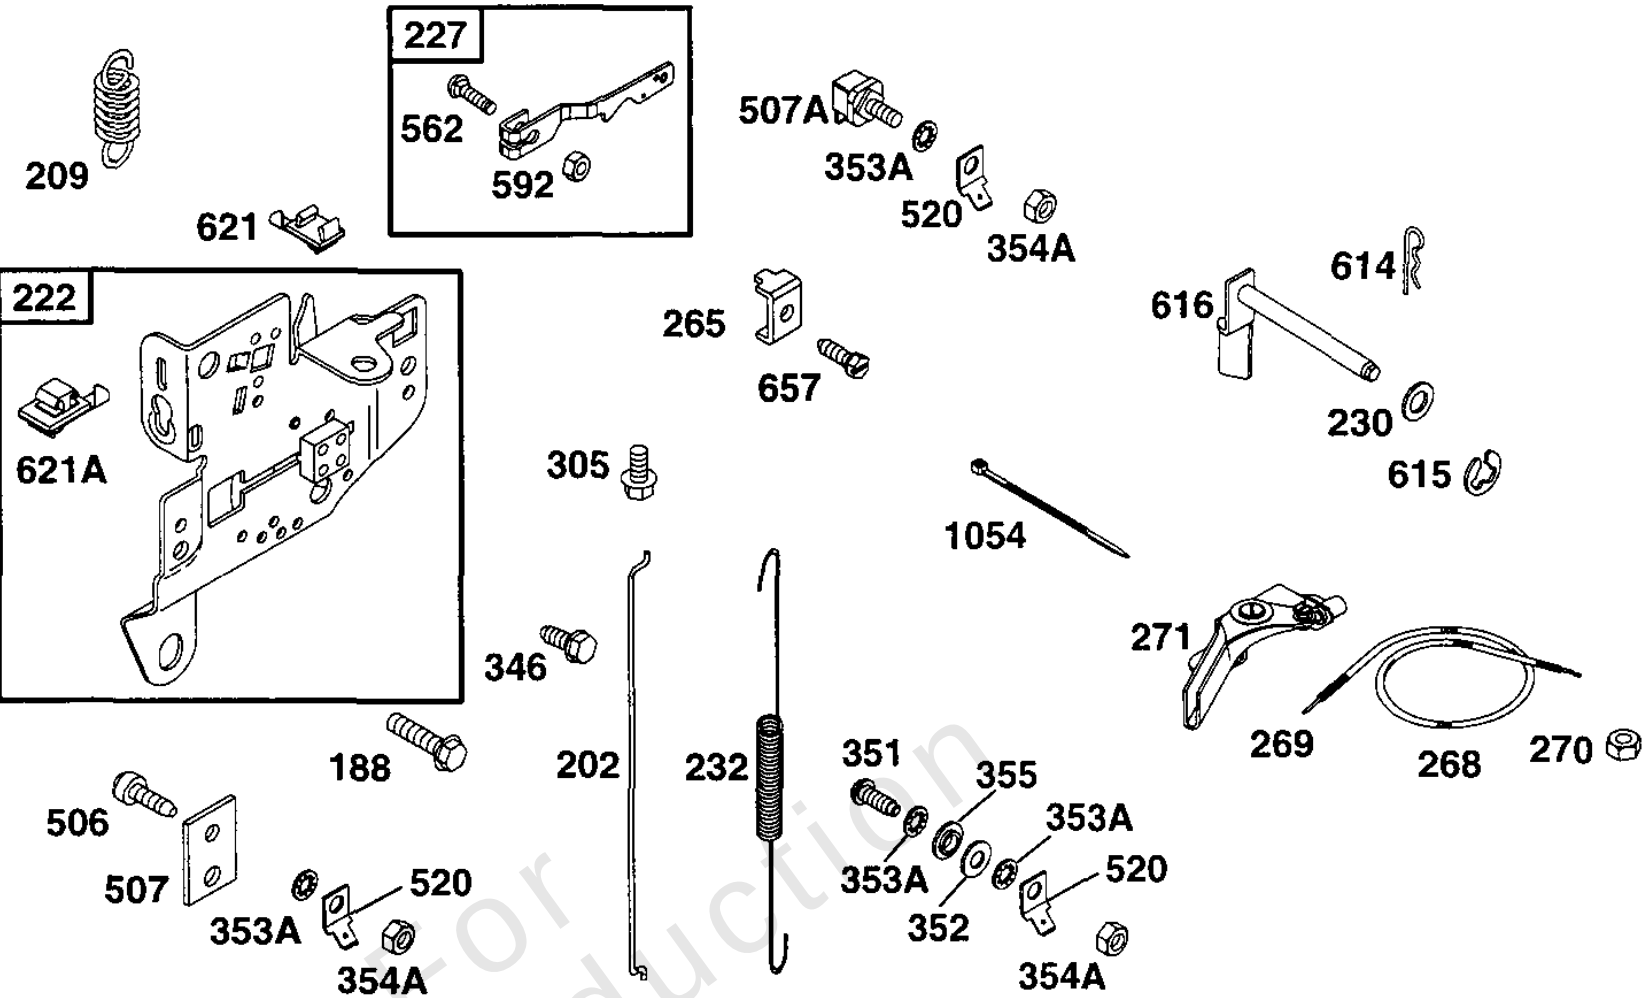


Controls

REF NO	PART NO	QTY	DESCRIPTION
188	94627		SCREW -(Fuel Tank)
202	261236		LINK, Mechanical Governor
209	261306		SPRING, Governor
222	399152		BRACKET, Control -(Manual Choke)
227	391732		LEVER, Governor Control -(1/4 Diameter) -Used Before Code Date 83121600
227	396775		LEVER, Governor Control
230	94742		WASHER
232	260478		SPRING/LINK, Mechanical Governor
265	221535		CLAMP, Casing -(Stamped Steel)
268	65616		CASING, Control Wire -(Cut To Required Length)
269	26633		WIRE, Control -(Cut To Required Length)
270	63426		NUT -(Control Wire Casing)
271	290568		LEVER, Control
305	94786		SCREW -(1/2)
346	93705		SCREW -(8-32 X 3/8)
351	93735		SCREW
352	66068		WASHER -(Fiber)
353A	92791		WASHER
354A	90576		NUT -(Ground Terminal)
355	66554		WASHER -(Insulating)
506	90200		SCREW -(8-32 X 1/2)
507A	398525		INSULATOR
507	66895		INSULATOR
520	93722		TERMINAL, Ground
562	92613		BOLT -(Governor Lever)
592	231082		NUT -(Governor Control)
614	93306		PIN, Cotter
615	93307		RETAINER, Governor Shaft -Used Before Code Date 92070900
616	231057		CRANK, Governor -(1/4 Diameter)
621A	396847		SWITCH, Stop -Used After Code Date 85041500
621	297472		SWITCH, Stop -Used Before Code Date 85041500
657	93496		SCREW -(10-32 X 5/8)
1054	280275		TIE, Cable


Footnotes:

(Used only with Breaker Point Ignition)

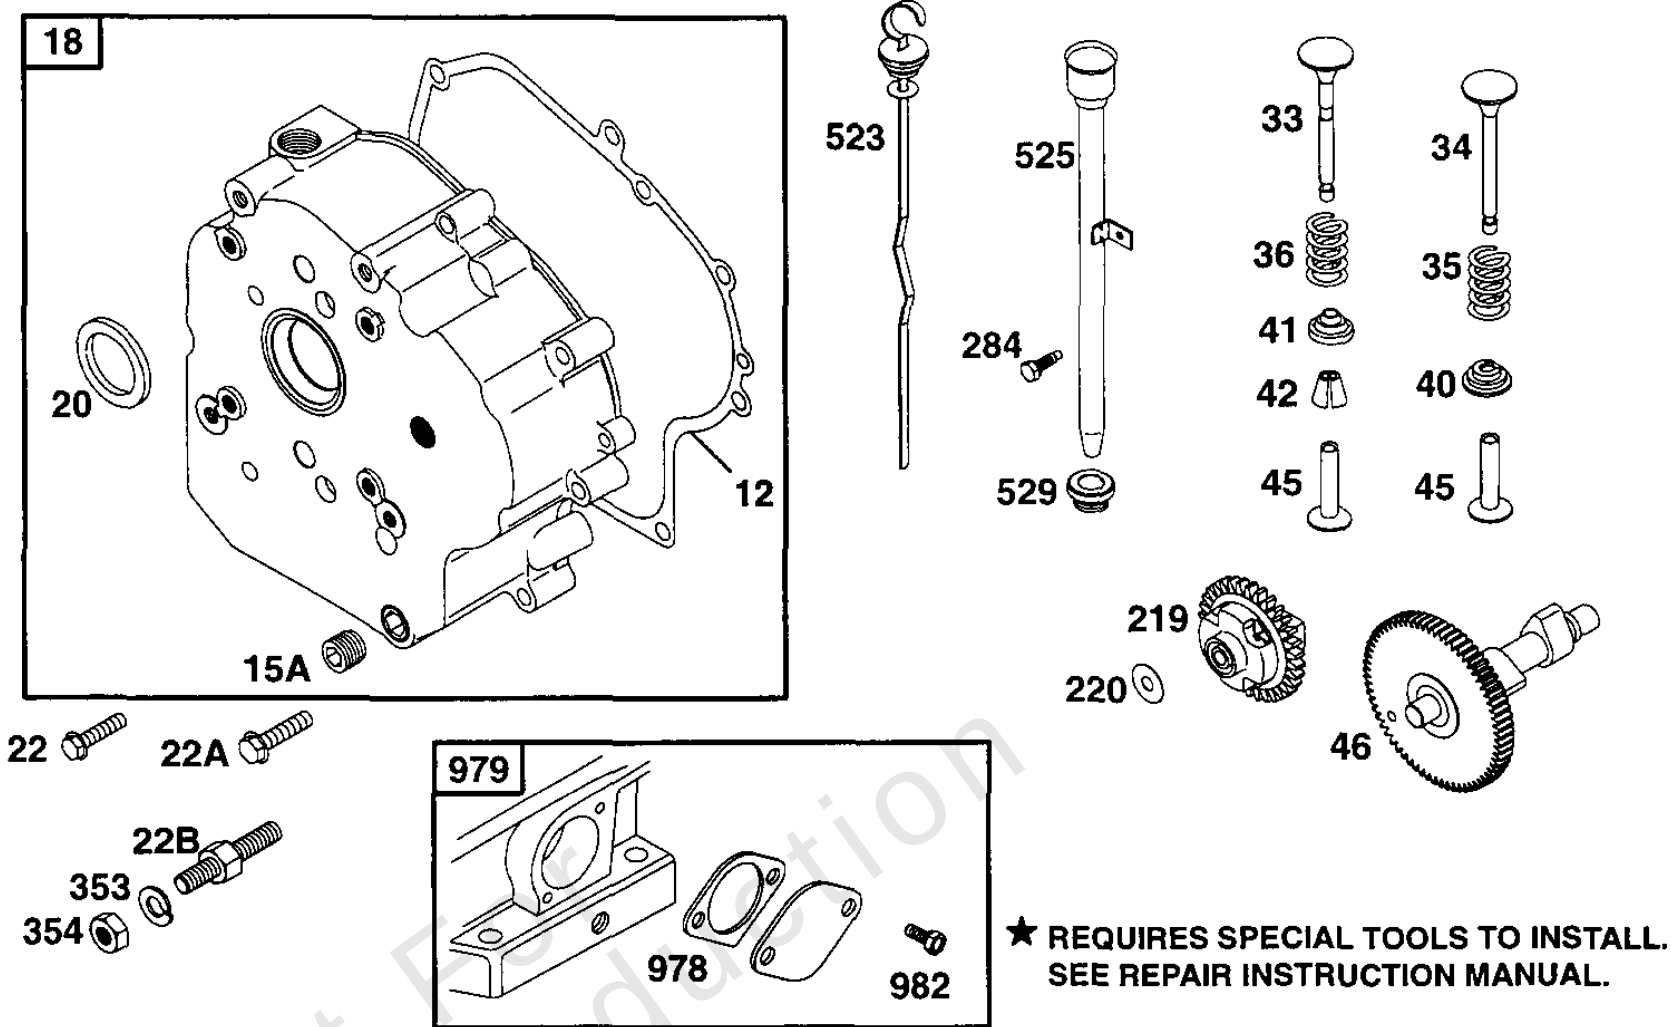

Crankcase Cvr. Cam

REF NO	PART NO	QTY	DESCRIPTION
12	272125		GASKET, Crankcase -(.015) Included in Gasket Set-Part No. 492653
12	272219		GASKET, Crankcase -(.005) Included in Gasket Set-Part No. 492653
12	272220		GASKET, Crankcase -(.009) Included in Gasket Set-Part No. 492653
15A	94720		PLUG, Oil Drain -(Flush)
18	394701		COVER, Crankcase
20	291675		SEAL, Oil -(Crankcase Cover) Included in Gasket Set-Part No. 492653
22A	93764		SCREW -(Crankcase Cover)(Position 6)
22B	94931		STUD -(2 1/2)
22	93585		SCREW -(Crankcase Cover)
33	261185		VALVE, Exhaust -Used After Code Date 89020900
33	261503		VALVE, Exhaust -(Includes Retainer(s)) -Used Before Code Date 89021000
34	261462		VALVE, Intake
35	65906		SPRING, Valve -(Intake)
36	26828		SPRING, Valve -(Exhaust)
40	221596		RETAINER, Valve -(Valves With Groove In Stem)
41	292260		RETAINER, Valve -(Exhaust Valve) (Exhaust)
42	494553		KEEPER, Valve -(Exhaust)
45	262248		TAPPET, Valve
46	212897		CAMSHAFT
219	391737		GEAR, Governor -Used Before Code Date 91061000
219	494845		GEAR, Governor -Used After Code Date 91060900
220	221551		WASHER -(Governor Lever)
284	94903		SCREW
353	90366		WASHER
354	94314		NUT
523	490665		DIPSTICK
525	496517		TUBE, Dipstick
529	281370		SEAL, O-Ring -Included in Gasket Set-Part No. 492653
978	271736		GASKET, Oil Guard -Included in Gasket Set-Part No. 492653
979	494807		COVER, Oil Guard
982	94139		SCREW -(Oil Guard)

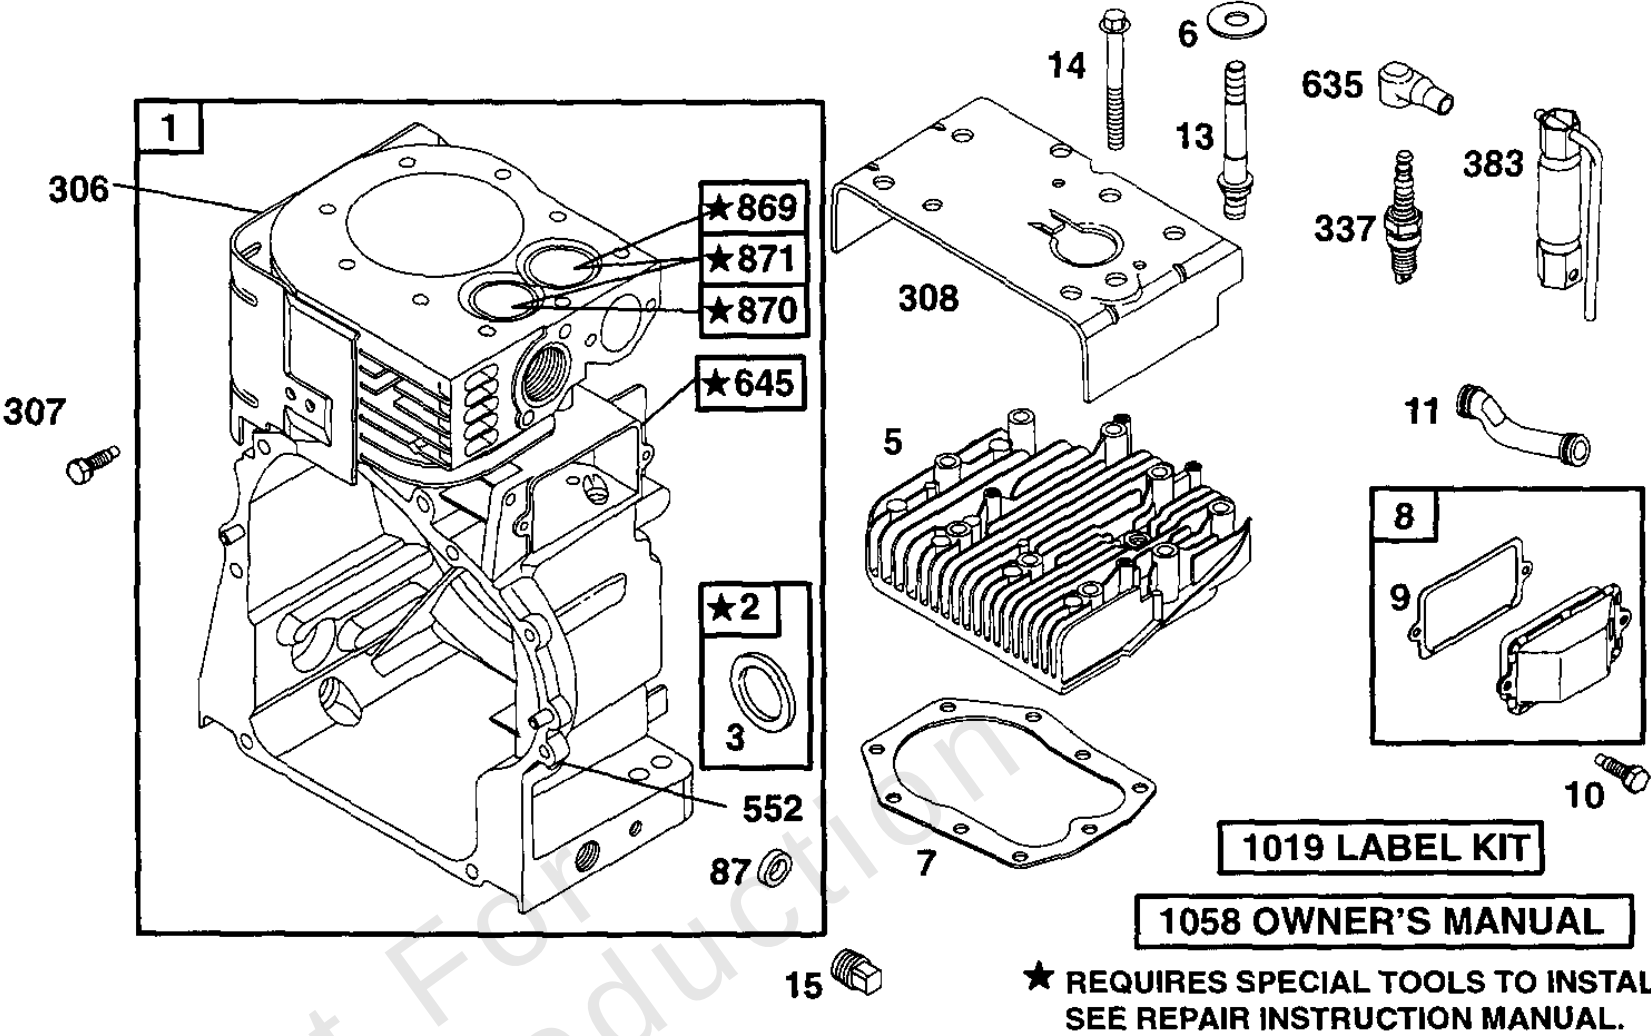


Cylinder, Head

REF NO	PART NO	QTY	DESCRIPTION
1	394699		CYLINDER ASSEMBLY -Used Before Code Date 82080100
1	396209		CYLINDER ASSEMBLY -Used After Code Date 82073100
2	399265		KIT, Bushing/Seal -(Magneto Side)
3	391086		SEAL, Oil -Included in Gasket Set-Part No. 492653
5	212501		HEAD, Cylinder
6	225137		WASHER
7	271866		GASKET, Cylinder Head -Included in Valve Overhaul Gasket Set-Part No. 498537. Included in Gasket Set-Part No. 492653
8	495736		BREATHER ASSEMBLY
9	27803		GASKET, Rocker Cover -Included in Valve Overhaul Gasket Set-Part No. 498537. Included in Gasket Set-Part No. 492653
10	94621		SCREW -(Breather Assembly)
11	280112		TUBE, Breather
13	94926		STUD -(3 15/16) (3 5/16)
14	94565		SCREW -(Cylinder Head) (3 9/16)
14	94622		SCREW -(3)
15	94239		PLUG, Oil Drain -(Square Head)
15	94880		PLUG, Oil Drain -(Flush)
87	491323		SEAL, Governor Shaft -Included in Gasket Set-Part No. 492653
306	224882		SHIELD, Cylinder
307	94930		SCREW -(Cylinder Shield)
308	222306		COVER, Cylinder Head
337	298809		PLUG, Spark
337	492167		PLUG, Spark
337	802592		PLUG, Spark -(Resistor)
383	89838		WRENCH, Spark Plug
552	491893		BUSHING, Governor Crank -(Includes Seal, Ref. 87)
635	66538		BOOT, Spark Plug
645	23513		BUSHING, Plunger -Used Before Code Date 82073100
869	261463		SEAT, Valve -(Intake)
870	213316		SEAT, Valve -(Exhaust)
871	231218		BUSHING, Valve Guide -(Intake)
1019	491194		KIT, Label
1058	271074		MANUAL, Operator's


Footnotes:

(Used only with Breaker Point Ignition)

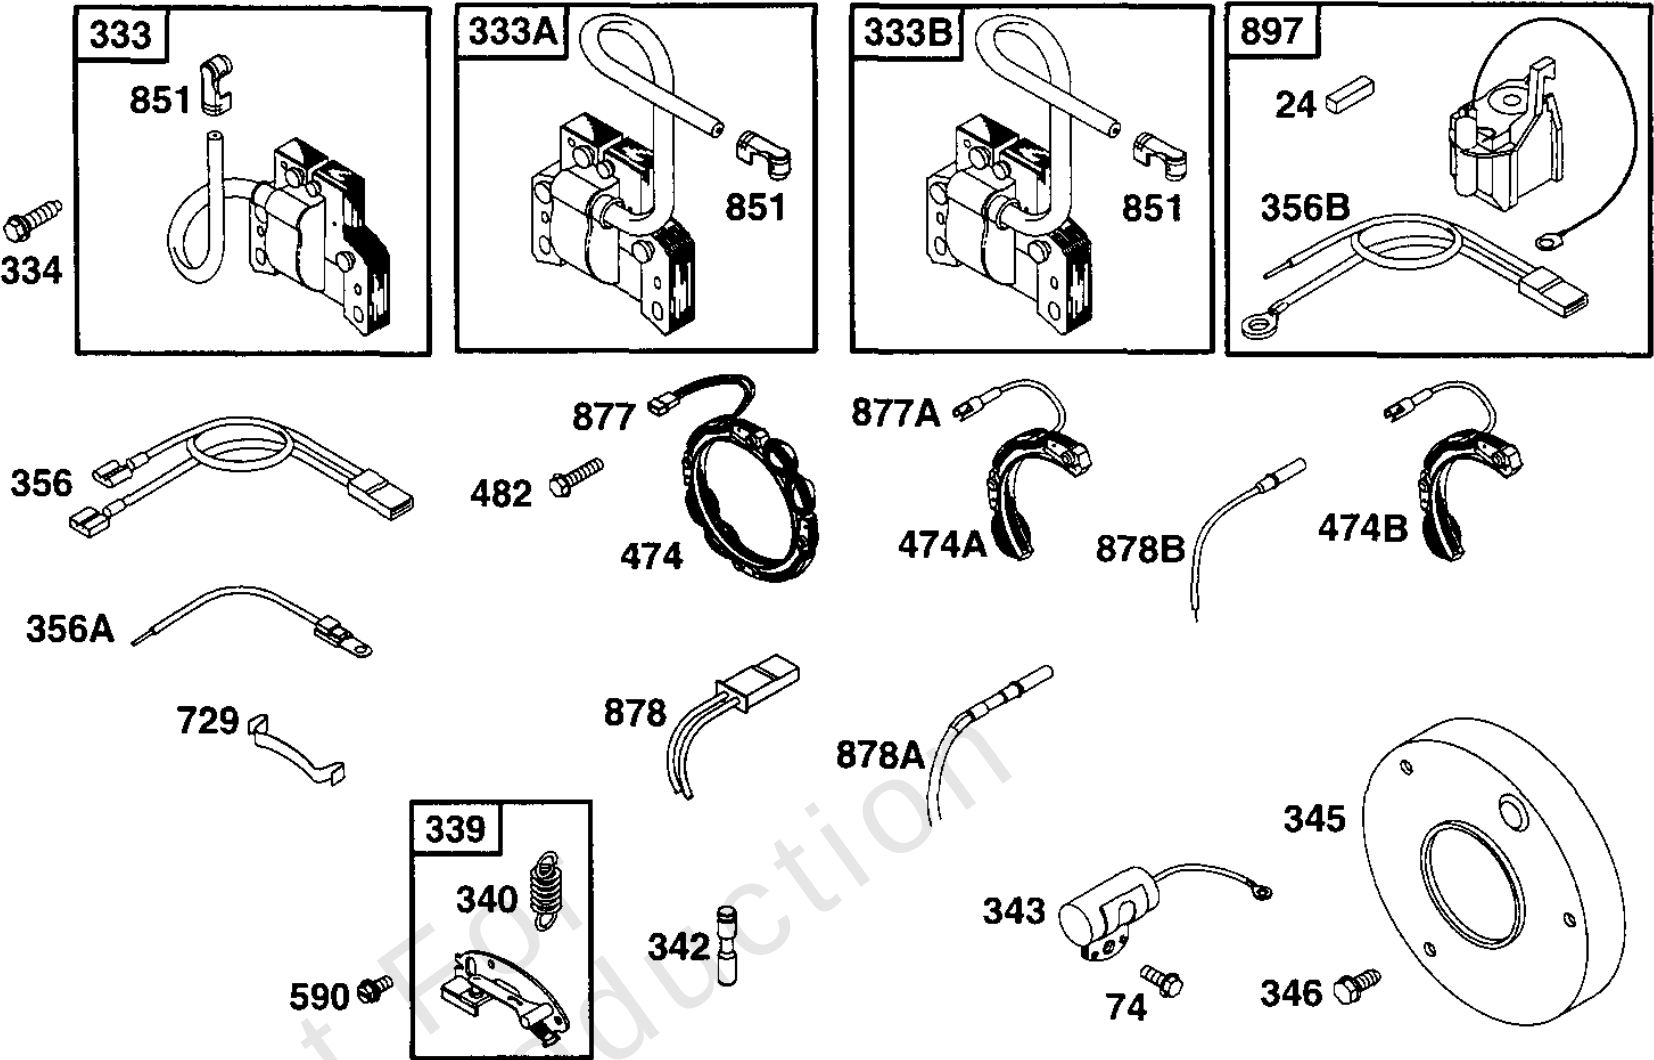

Elect

REF NO	PART NO	QTY	DESCRIPTION
24	222698		KEY, Flywheel
74	93042		SCREW
333B	395326		ARMATURE, Magneto -(Electronic Ignition-Without Module)
333A	298968		ARMATURE, Magneto -(Breaker Ignition)
333	398811		ARMATURE, Magneto -(Magnetron Ignition)
334	94731		SCREW -(Magneto)
339	391284		BREAKER, Ignition
340	26018		SPRING, Breaker Arm
342	65704		PLUNGER, Breaker
343	29861		CONDENSER
345	222309		COVER, Breaker
346	93705		SCREW -(8-32 X 3/8)
356B	398808		WIRE, Stop -(Cut To Required Length)
356A	496868		WIRE, Stop
356	398838		WIRE, Stop
474B	391595		ALTERNATOR -(AC Only)
474A	391529		ALTERNATOR -(DC Only)
474	393474		ALTERNATOR -(Dual Circuit)
482	93621		SCREW -(Tapping)
590	93226		SCREW
851	493880		TERMINAL, Spark Plug
877A	393814		WIRE/CONNECTOR, Alternator -(10 Amp Regulated)
877	393456		WIRE/CONNECTOR, Alternator
878A	393422		WIRE ASSEMBLY -(Dc Only)
878B	390867		HARNESS, Alternator -(Ac Only)
878	393362		HARNESS, Alternator -(Dual Circuit)
897	394970		KIT, Magnetron Ignition

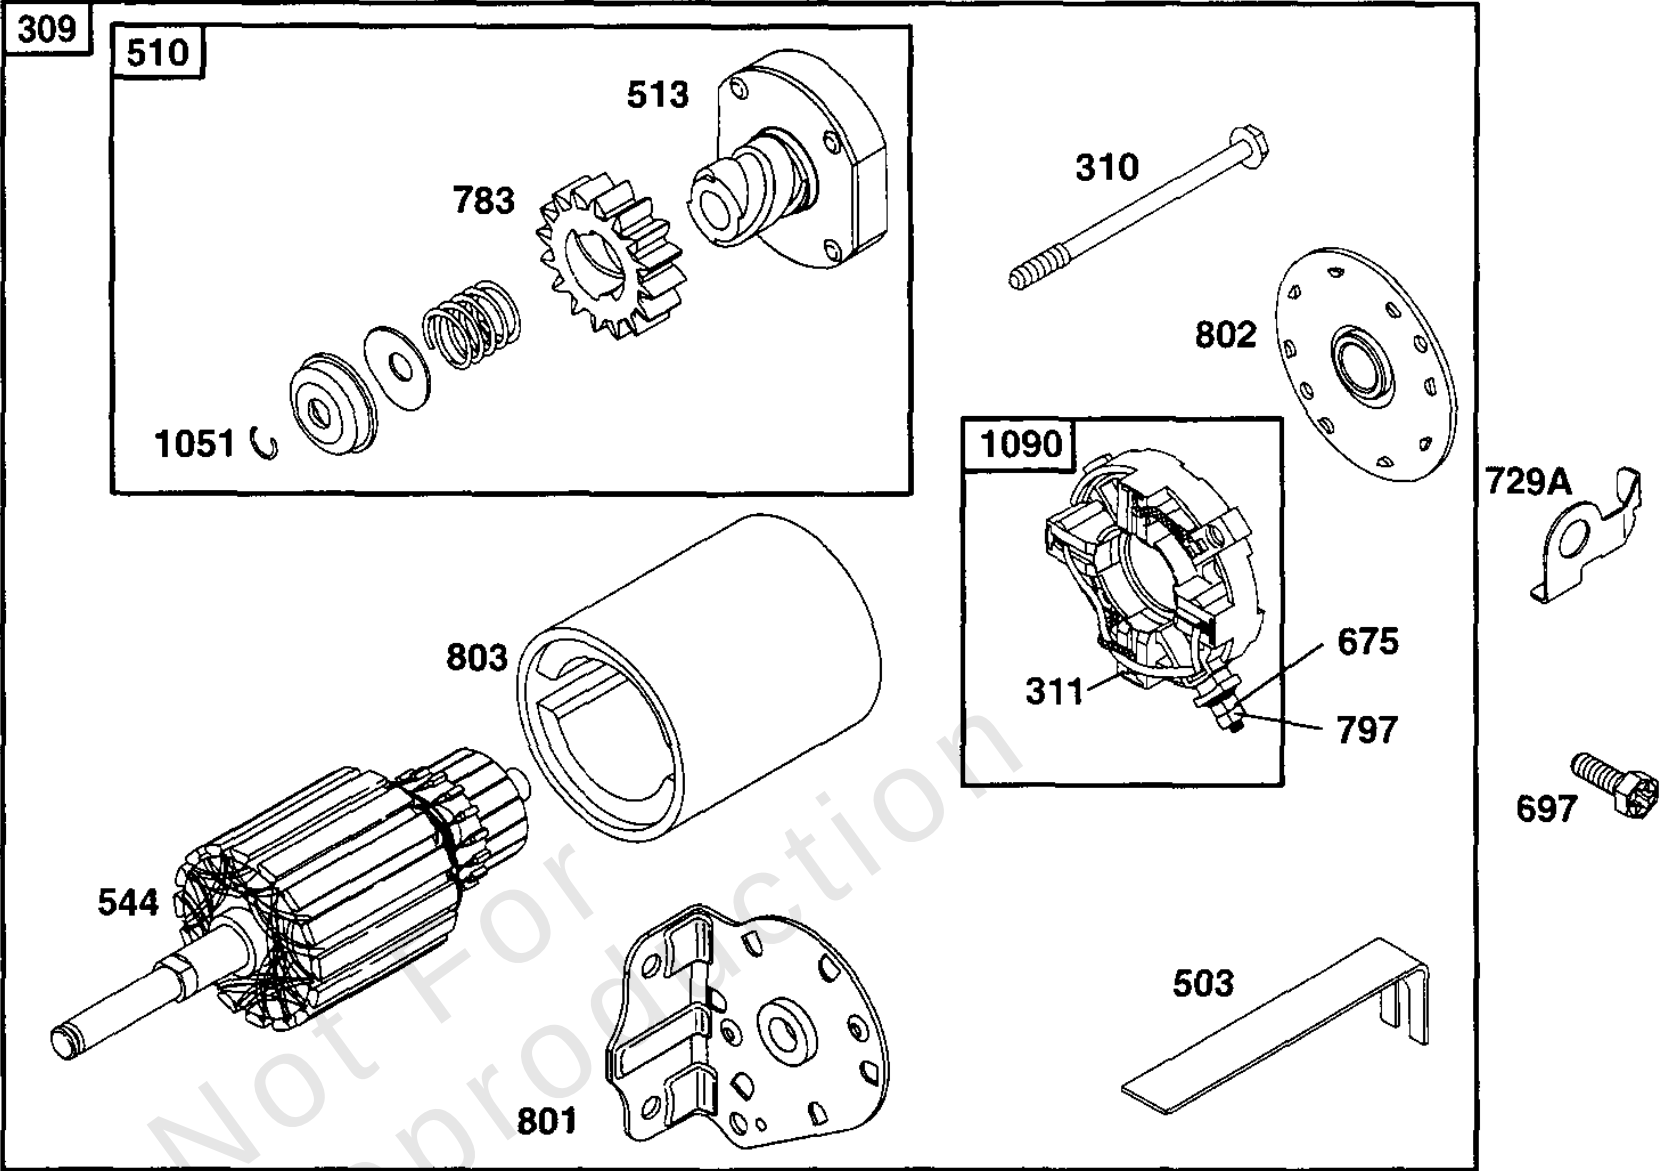


Electric Starter

REF NO	PART NO	QTY	DESCRIPTION
309	499521		MOTOR, Starter -(4 3/8 Housing Length; For Alum Ring Gear Only)
309	693054		MOTOR, Starter -(3 5/8) (Aluminum Ring Gear)
310	94003		SCREW -(3 5/8 Housing)
310	95035		SCREW -(4 3/8 Housing)
311	497608		SET, Brush
503	806000		STRAP, Ground -(4 9/16 Housing)
510	497606		DRIVE, Starter -(Includes 693058 And 693059 Starter Gear)
513	398003		CLUTCH, Starter
544	497603		ARMATURE, Starter -(3 5/8 Housing)
675	225137		WASHER
697	94773		SCREW
729A	225170		CLIP, Wire
783	280104		GEAR, Pinion -(Briggs & Stratton 12V)
783	693059		GEAR, Pinion -(Aluminum Ring Gear Only)
797	92278		NUT -(Starting Switch)
801	394856		CAP, Drive
801	497626		CAP, Drive
802	497607		CAP, End
803	497604		HOUSING, Starter -(3 5/8 Housing)
1051	263080		RING, Retaining
1090	497605		RETAINER, Brush

Footnotes:

(Used only with Breaker Point Ignition)

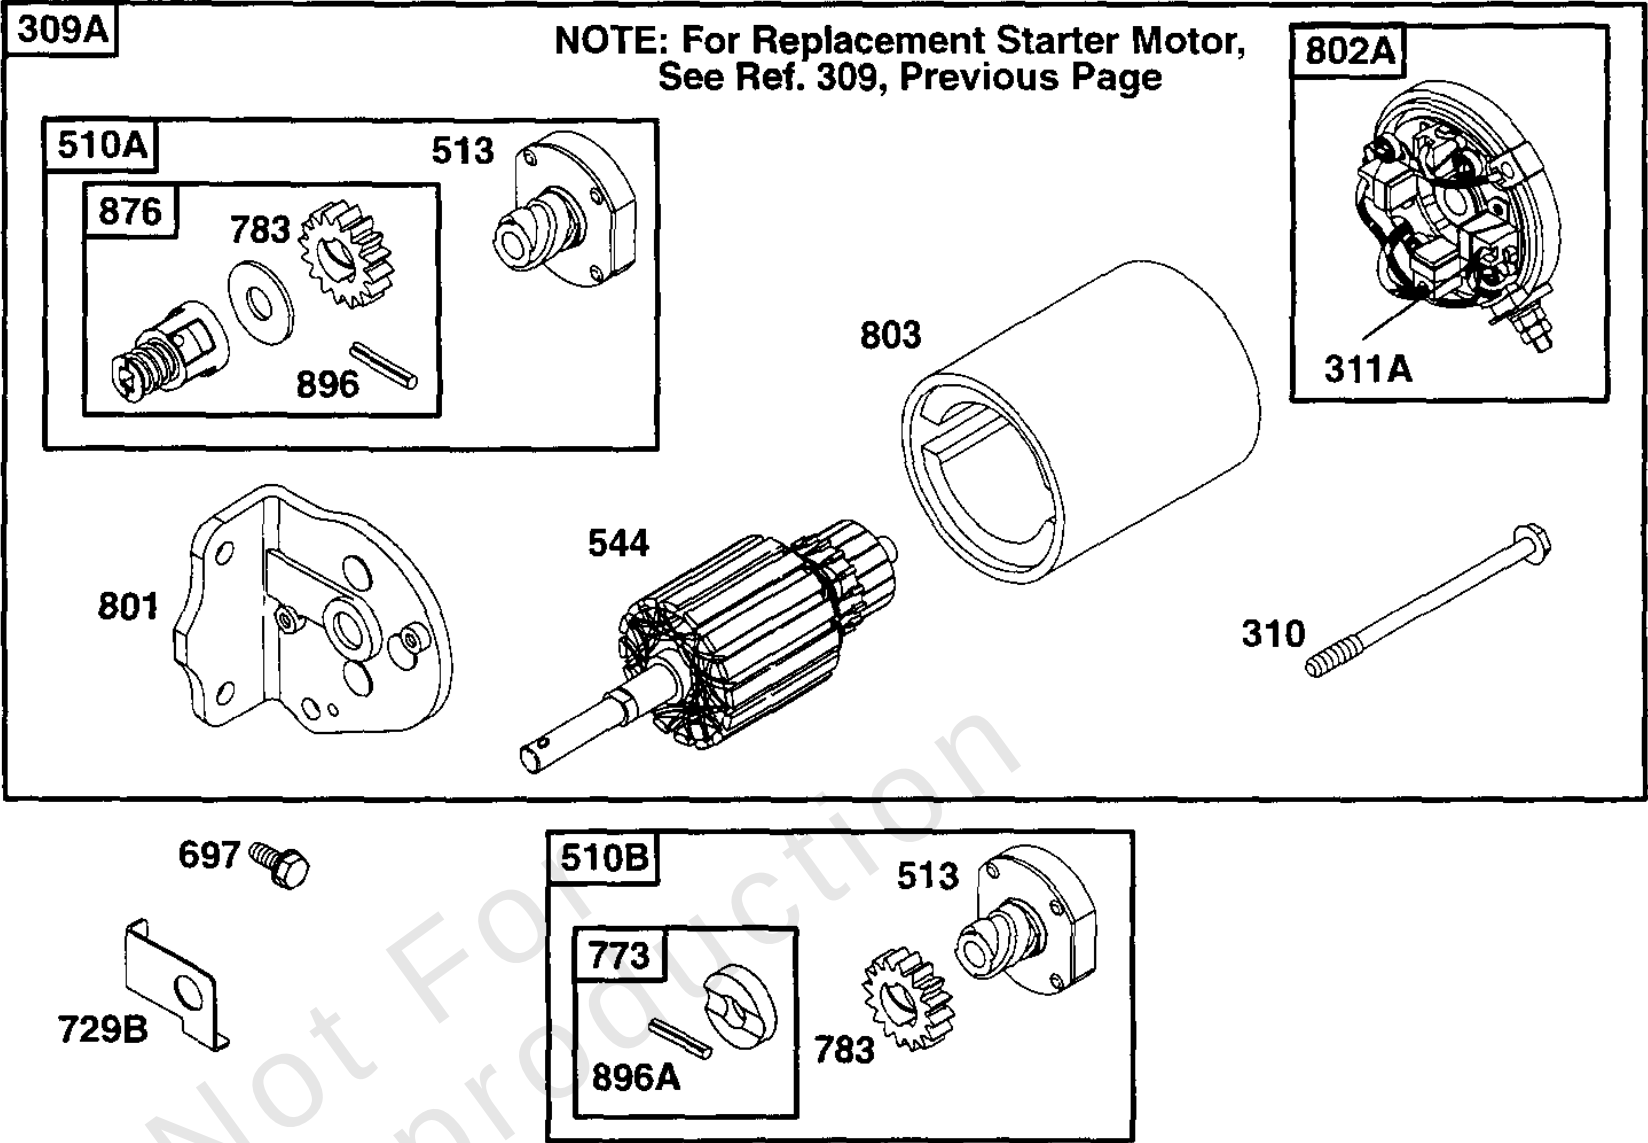


Electric Starter

REF NO	PART NO	QTY	DESCRIPTION
310	94003		SCREW -(3 5/8 Housing)
310	95035		SCREW -(4 3/8 Housing)
311A	395538		SET, Brush -(3-5/8 or 4 3/8 Housing)
510A	495878		DRIVE, Starter -(4 3/8 Housing)
510B	391461		DRIVE, Starter -(3 1/2 Housing)
513	398003		CLUTCH, Starter
544	497603		ARMATURE, Starter -(3 5/8 Housing)
697	94773		SCREW
729B	224723		CLIP, Wire
773	391462		RETAINER
783	280104		GEAR, Pinion -(Briggs & Stratton 12V)
783	693059		GEAR, Pinion -(Aluminum Ring Gear Only)
801	394856		CAP, Drive
801	497626		CAP, Drive
802A	395537		CAP, End -(3 5/8 Housing)
803	497604		HOUSING, Starter -(3 5/8 Housing)
876	495877		DRIVE, Starter -(4 3/8 Housing)
896A	94192		PIN, Drive Retainer
896	94192		PIN, Drive Retainer
896	94288		PIN, Drive Retainer

Footnotes:

(Used only with Breaker Point Ignition)

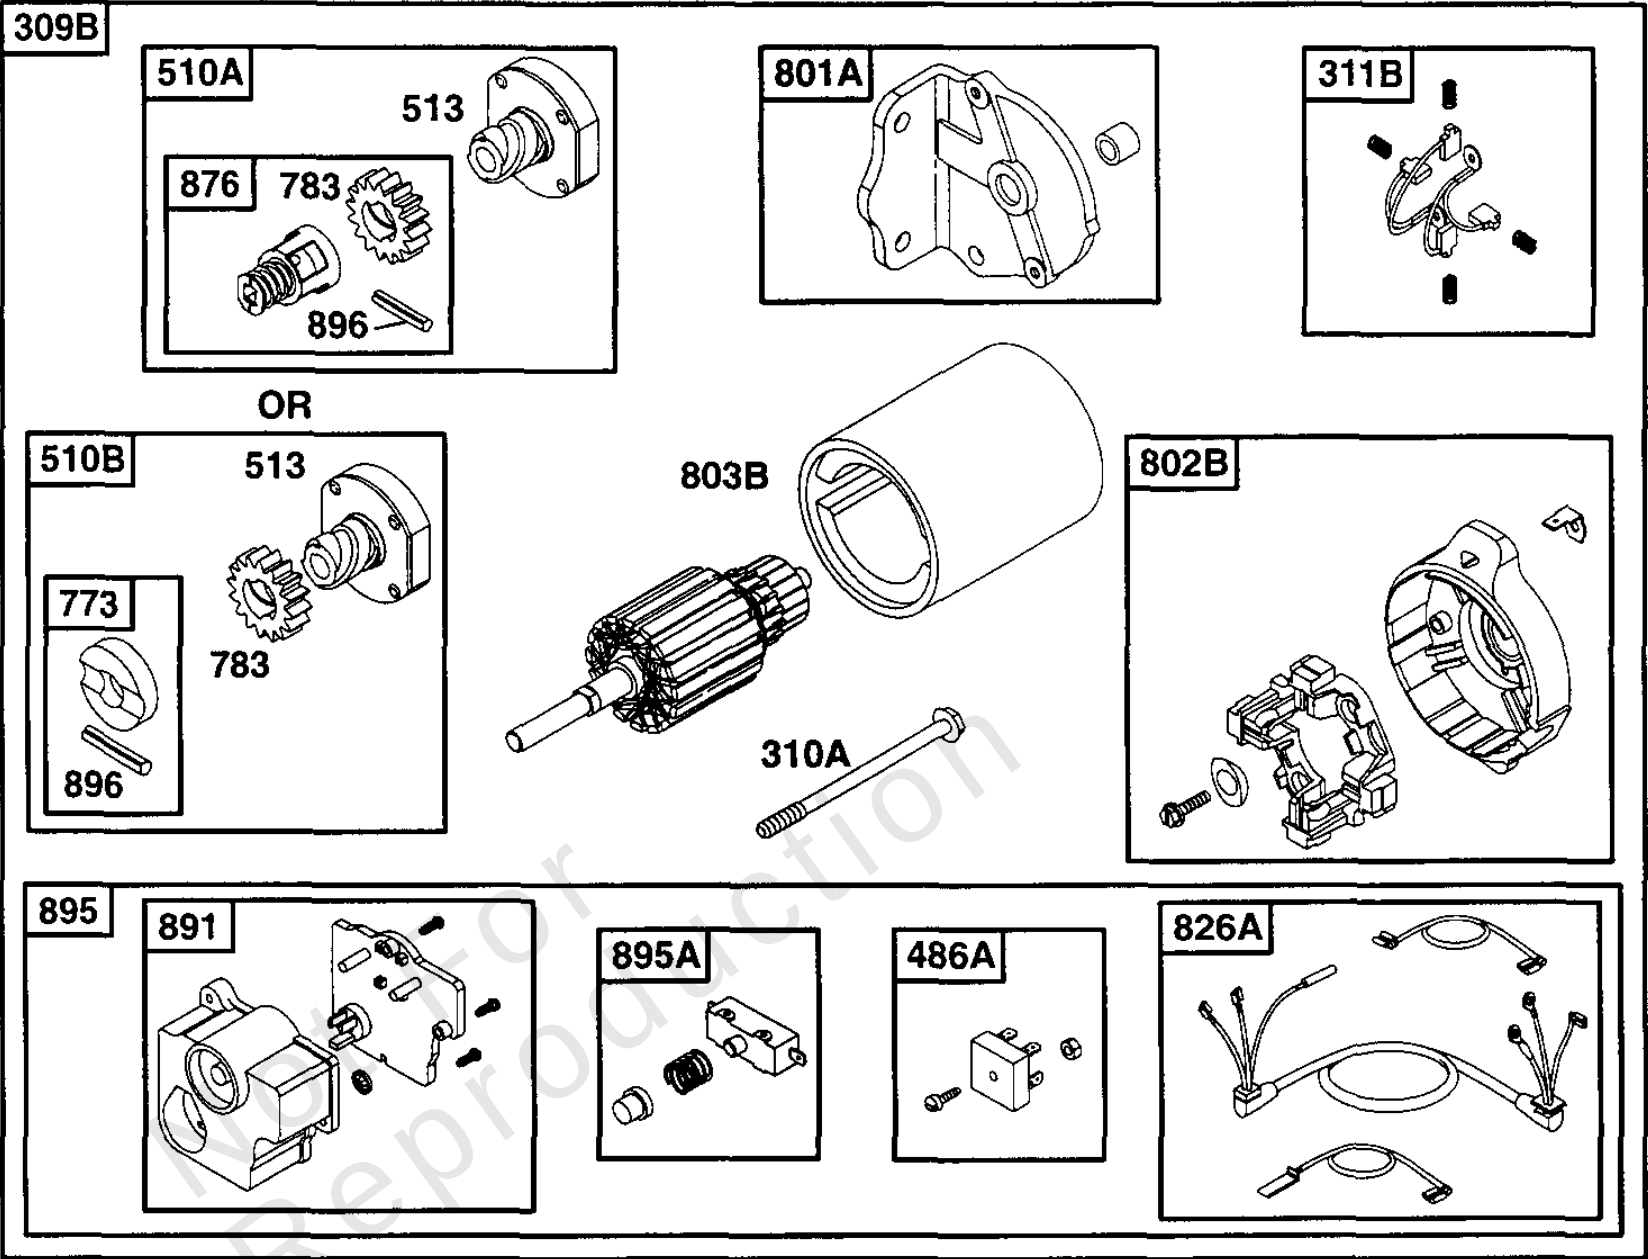


Electric Starter

REF NO	PART NO	QTY	DESCRIPTION
309B	396505		MOTOR, Starter -(3 1/2 Housing) (Briggs & Stratton 110V)
310A	93934		SCREW -(3 1/2 Housing)
311B	393612		SET, Brush -(3 1/2 Housing) (110V)
486A	393707		RECTIFIER -(Briggs & Stratton 110V)
510B	391461		DRIVE, Starter -(3 1/2 Housing)
510A	495878		DRIVE, Starter -(4 3/8 Housing)
513	398003		CLUTCH, Starter
728	94773		SCREW
735	390966		CORD, Starter -(Includes Adaptor Plug)
773	391462		RETAINER
783	280104		GEAR, Pinion -(Briggs & Stratton 12V)
783	693059		GEAR, Pinion -(Aluminum Ring Gear Only)
801A	394398		CAP, Drive -(3 1/2 Housing)
802B	491192		CAP, End -(3 1/2 Housing) (Briggs & Stratton 110V) -Used After Code Date 87033100
802B	491778		CAP, End -Used Before Code Date 87040100
803B	491008		HOUSING, Starter -(3 1/2 Housing) (Briggs & Stratton 110V) -Used After Code Date 87033100
803B	394254		HOUSING, Starter -Used Before Code Date 87040100
826A	393706		HARNESS, Wiring -(Briggs & Stratton 110V)
876	495877		DRIVE, Starter -(4 3/8 Housing)
891	393705		HOUSING, Switch
895A	393708		SWITCH, Starting -(Briggs & Stratton 110V)
895	393486		SWITCH, Starting -(Briggs & Stratton 120V)
896	94192		PIN, Drive Retainer
896	94288		PIN, Drive Retainer

Footnotes:

(Used only with Breaker Point Ignition)

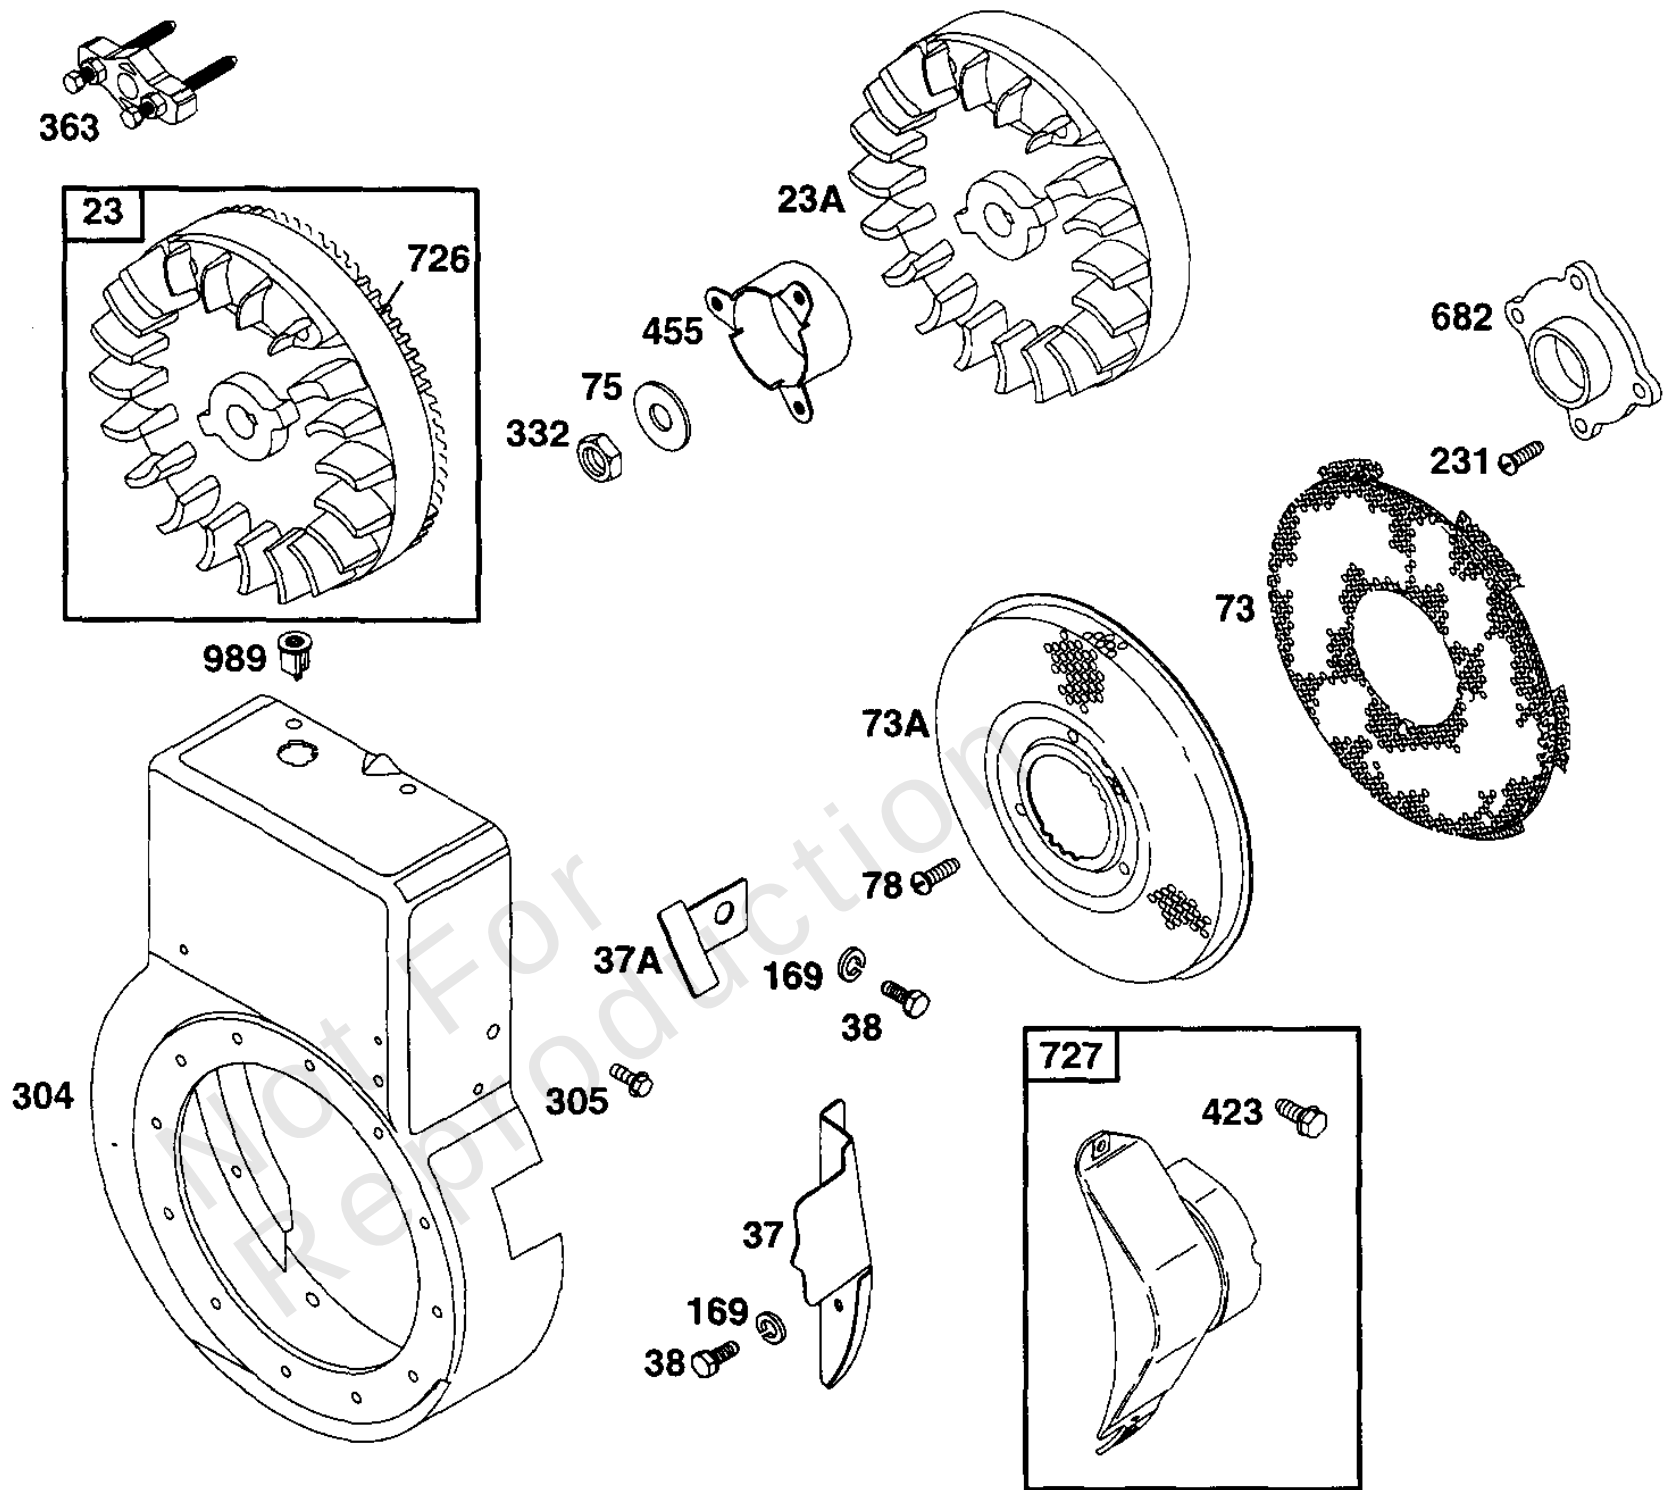


Flywhells, BlowerHsg, Screen

REF NO	PART NO	QTY	DESCRIPTION
23A	498896		FLYWHEEL -(Rewind Starter)
23	391988		FLYWHEEL -(Plastic Motor Drive)
37A	221968		GUARD, Flywheel
37	224886		GUARD, Flywheel -(Engines with Rope or Recoil Starter)
38	94811		SCREW
73A	224517		SCREEN, Rotating
73	224874		SCREEN, Rotating
75	224061		WASHER -(5/8 Hole)
78	94626		SCREW
169	93713		WASHER
231	94238		SCREW
304	490446		HOUSING, Blower
305	94786		SCREW -(1/2)
332	92284		NUT -(Flywheel)
363	19203		PULLER, Flywheel
423	94903		SCREW
455	222561		CUP, Flywheel
682	211516		SHIELD, Starter
726	392134		GEAR, Ring
727	395405		COVER, Starter Drive
989	399668		SWITCH, Stop -Used Before Code Date 97010100
989	491060		SWITCH, Stop -Used After Code Date 96123100

Footnotes:

(Used only with Breaker Point Ignition)

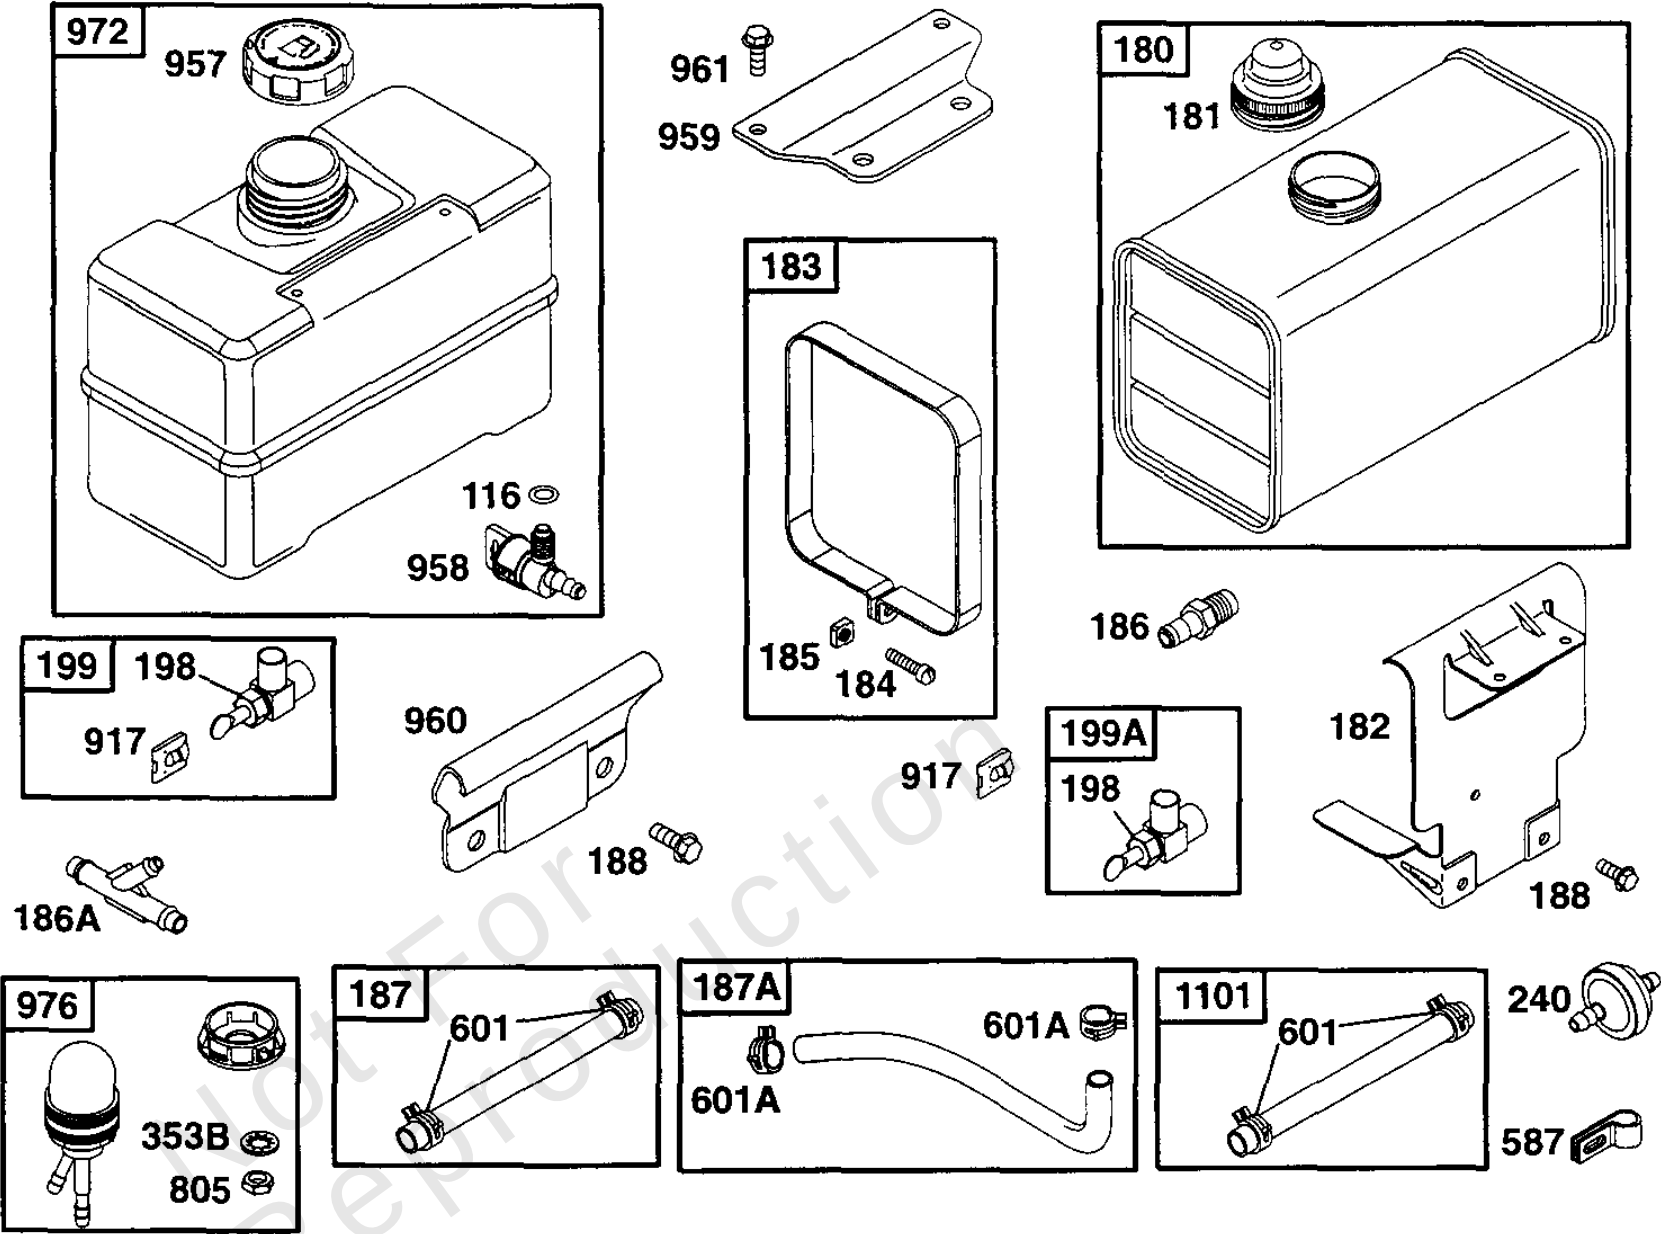


Fuel Tank Grp

REF NO	PART NO	QTY	DESCRIPTION
116	280203		SEAL, O-Ring -(Fuel Shut Off)
180	290816		TANK, Fuel -(4 Quart)
181	297866		CAP, Fuel Tank -(Metal)
182	222333		BRACKET, Fuel Tank -(4 Quart)
183	291367		STRAP, Fuel Tank -(4 Quart)
184	91257		SCREW -(1/4-20 X 1-1/2)
185	90970		NUT -(1/4-20)
186A	280727		CONNECTOR, Hose
186	230318		CONNECTOR, Hose
187A	399254		LINE, Fuel -(1/4 O.D.)
187	296004		LINE, Fuel -(Cut To Required Length)
188	94627		SCREW -(Fuel Tank)
198	293934		VALVE, Fuel Shut Off
199A	297563		OUTLET, Tank
199	492649		VALVE, Fuel Shut Off
240	298090		FILTER, Fuel
240	394358		FILTER, Fuel -(Fuel Pump)
353B	94281		WASHER
587	220162		CLIP, Wire
601A	94171		CLAMP, Hose
601	93053		CLAMP, Hose -(Green)
601	93807		CLAMP, Hose -(Black)
805	94189		NUT -(Primer)
917	223271		VALVE, Handle Shutoff
957	493988		CAP, Fuel Tank -(Plastic)
958	399517		VALVE, Fuel Shut Off -(Plastic)
959	224888		BRACKET, Fuel Tank -(Upper)
960	224889		BRACKET, Fuel Tank -(Lower)
961	94095		SCREW -(Tapping)
972	493337		TANK, Fuel -(4 Quart) (Plastic)
976	399255		PRIMER, Carburetor
1101	399256		LINE, Fuel -(1/4 O.D.)

Footnotes:

Included in Carburetor Kit-See Ref. 121

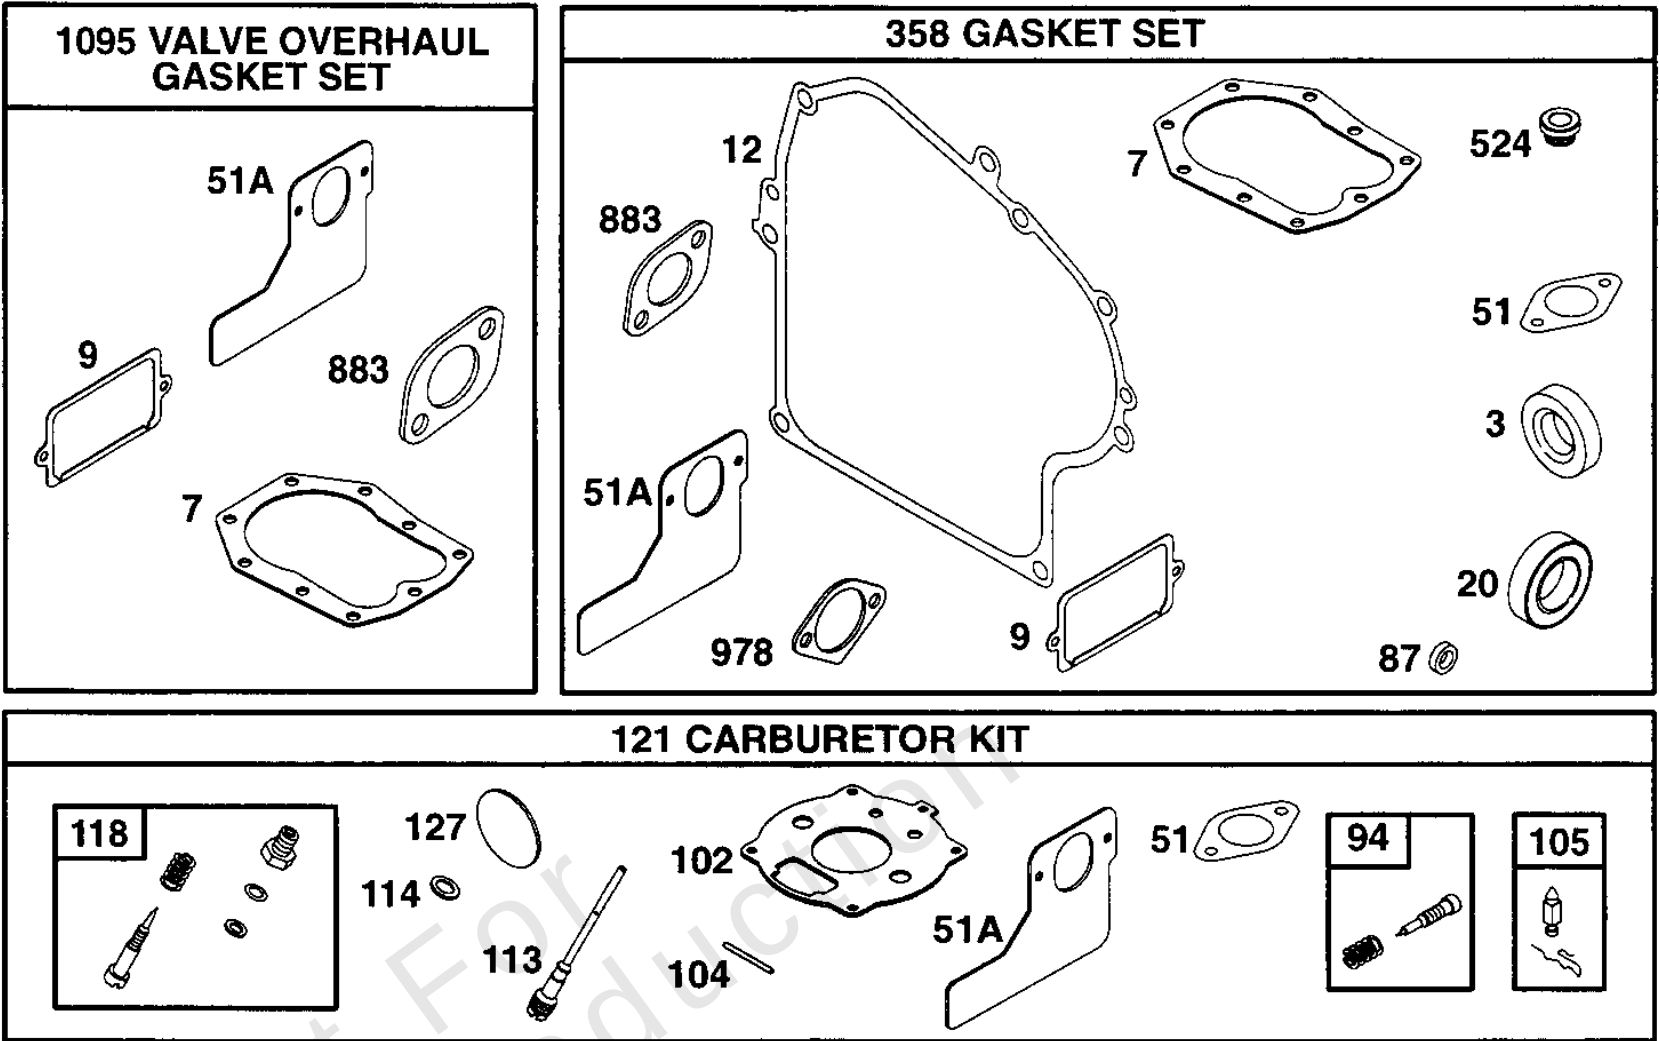





Kits/Gasket Sets

REF NO	PART NO	QTY	DESCRIPTION
3	391086		SEAL, Oil -Included in Gasket Set-Part No. 492653
7	271866		GASKET, Cylinder Head -Included in Valve Overhaul Gasket Set-Part No. 498537. Included in Gasket Set-Part No. 492653
9	27803		GASKET, Rocker Cover -Included in Valve Overhaul Gasket Set-Part No. 498537. Included in Gasket Set-Part No. 492653
12	272125		GASKET, Crankcase -(.015) Included in Gasket Set-Part No. 492653
12	272219		GASKET, Crankcase -(.005) Included in Gasket Set-Part No. 492653
12	272220		GASKET, Crankcase -(.009) Included in Gasket Set-Part No. 492653
20	291675		SEAL, Oil -(Crankcase Cover) Included in Gasket Set-Part No. 492653
51A	498869		GASKET, Intake -Included in Valve Overhaul Gasket Set-Part No. 498537. Included in Gasket Set-Part No. 492653. Included in Carburetor Kit-See Ref. 121
51	270267		GASKET, Intake -Included in Gasket Set-Part No. 492653. Included in Carburetor Kit-See Ref. 121
87	491323		SEAL, Governor Shaft -Included in Gasket Set-Part No. 492653
94	292681		VALVE, Idle Mixture -Included in Carburetor Kit-See Ref. 121
102	270268		GASKET, Carburetor Body -Included in Carburetor Kit-See Ref. 121
104	230896		PIN, Float Hinge -Included in Carburetor Kit-See Ref. 121
105	394681		KIT, Needle/Seat -(Gravity Feed) Included in Carburetor Kit-See Ref. 121
113	390950		NOZZLE, Carburetor -Used Before Code Date 81060211
113	394730		NOZZLE, Carburetor -(Labeled B) -Used After Code Date 81060100
114	68667		WASHER -(Viton Seat) Included in Carburetor Kit-See Ref. 121
118	99525		VALVE, High Speed -Included in Carburetor Kit-See Ref. 121
121	391071		KIT, Carburetor Overhaul -Used Before Code Date 81060211
121	394989		KIT, Carburetor Overhaul -Used After Code Date 81060111
127	221747		PLUG, Welch -Included in Carburetor Kit-See Ref. 121
358	492653		GASKET SET, Engine
524	281370		SEAL, O-Ring -Included in Gasket Set-Part No. 492653
883	272293		GASKET, Exhaust -Included in Valve Overhaul Gasket Set-Part No. 498537. Included in Gasket Set-Part No. 492653
978	271736		GASKET, Oil Guard -Included in Gasket Set-Part No. 492653
1095	498537		GASKET SET, Valve

Footnotes:

Included in Carburetor Kit-See Ref. 121

24 

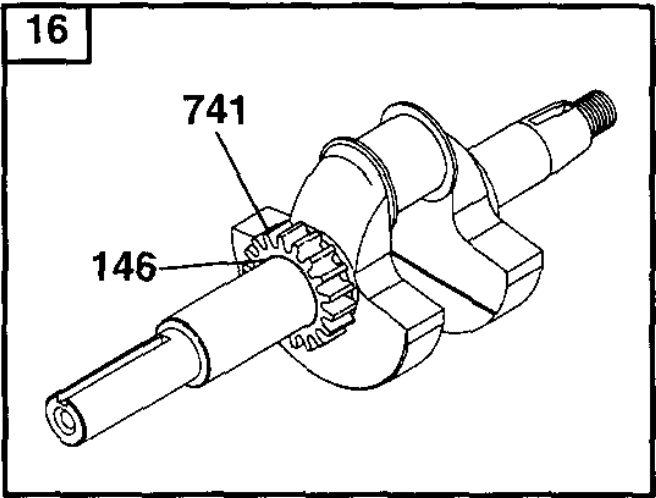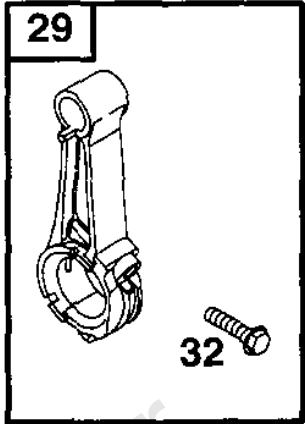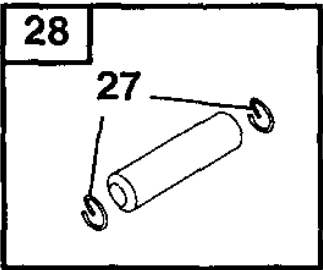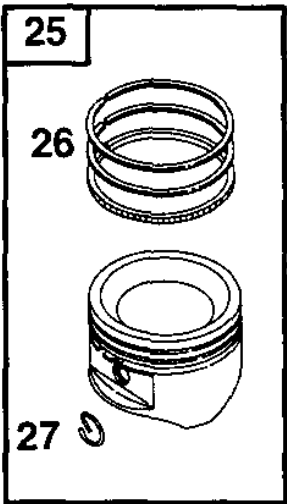

357 

30 

31 

Not For
Reproduction

Piston Grp, Crankshaft

REF NO	PART NO	QTY	DESCRIPTION
16	491640		CRANKSHAFT
24	222698		KEY, Flywheel
25	391285		PISTON ASSEMBLY -(Standard)
25	391287		PISTON ASSEMBLY -(.010 Oversize)
25	391288		PISTON ASSEMBLY -(.020 Oversize)
25	391289		PISTON ASSEMBLY -(.030 Oversize)
26	391780		SET, Ring -(Standard)
26	391781		SET, Ring -(.010 Oversize)
26	391782		SET, Ring -(.020 Oversize)
26	391783		SET, Ring -(.030 Oversize)
26	392331		SET, Ring -(Standard)
27	260924		LOCK, Piston Pin
28	299691		PIN, Piston -(Standard)
28	391286		PIN, Piston -(.005 Oversize)
29	393860		ROD, Connecting -(Standard)
29	393861		ROD, Connecting -(.020 Undersize)
30	222329		DIPPER, Connecting Rod
31	222299		LOCK, Rod Screw
32	92909		SCREW
146	94196		KEY, Woodruff
357	91540		KEY, Drive Pulley -(1/4)
741	262135		GEAR, Timing -(Key)


Footnotes:

(Used only with Breaker Point Ignition)

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	-----		No engine replacement. Repair engine with individual parts.
	-----		Top No-Load Speed: 3800 -Trim: 01

Not For Reproduction

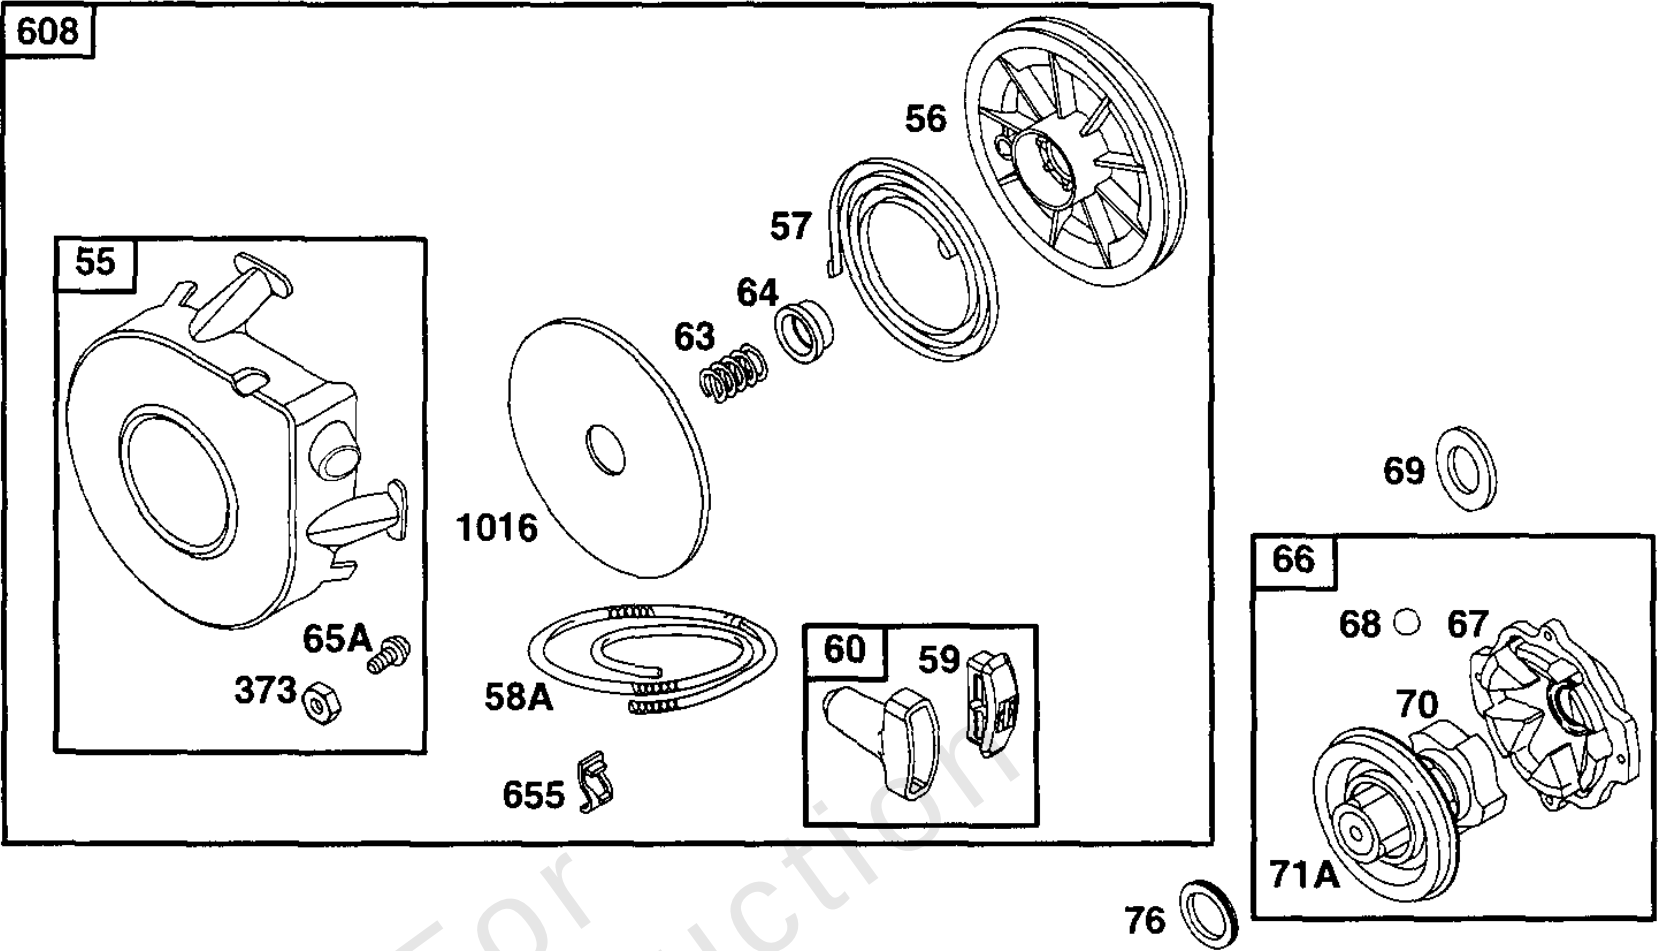


Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
55	398099		HOUSING, Rewind Starter
56	295871		PULLEY, Starter -(63 Rope)
57	490179		SPRING-REWIND STR
58A	66894		ROPE, Starter -(Cut To Required Length)
59	490653		INSERT, Grip
60	398101		GRIP, Starter Rope
63	260414		SPRING, Ratchet
64	281204		ADAPTER, Ratchet Spring
65A	94128		SCREW
66	399671		CLUTCH-STARTER -(Uses Rubber Coated Retainer Washer-Ref. 71)
67	394897		HOUSING, Clutch
68	63770		BALL, Clutch
69	66718		WASHER -(1-1/16 O.D. X 17/32 I.D.) (1 1/16 O.D. X 17/32 I.D.)
70	298799		RATCHET, Clutch -(engine W/Ring Gear on FW equipped for Elec Start)
71A	394506		COVER, Ratchet -(Rubber Coated)
76	68238		SEAL, Ratchet
373	92987		STARTER, Rewind
608	397982		STARTER, Rewind
655	222598		ANCHOR, Rewind Spring -(Stamped Rewind Housing)
1016	490817		SPACER-REWIND -(Rewind)

Footnotes:

(Used only with Breaker Point Ignition)

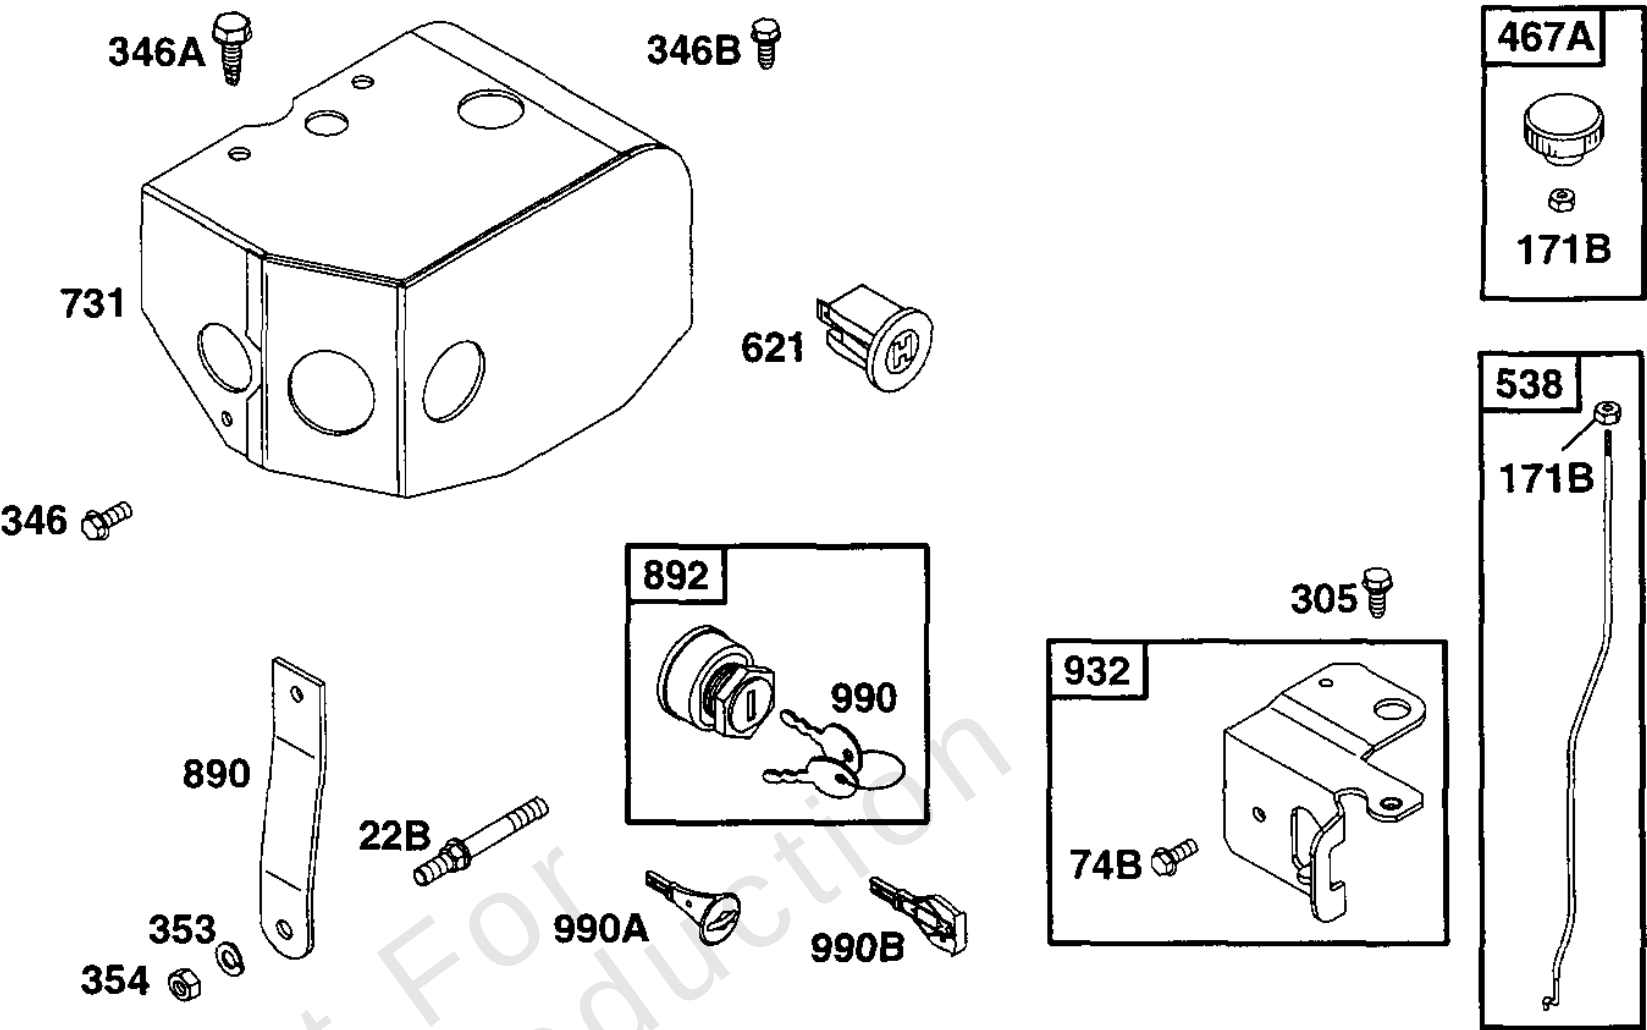

Sno Gard

REF NO	PART NO	QTY	DESCRIPTION
22B	94931		STUD -(2 1/2)
74B	93042		SCREW
171B	90356		NUT -(10-24)
305	94786		SCREW -(1/2)
346A	93490		SCREW -(Rotating Screen)
346B	93640		SCREW
346	93705		SCREW -(8-32 X 3/8)
353	90366		WASHER
354	94314		NUT
467A	391908		KNOB, Air Cleaner Cover
538	396085		ROD, Governor Control
621	297472		SWITCH, Stop -Used Before Code Date 85041500
731	399158		HOOD, Snow
890	222710		BRACKET, Support
892	392833		SWITCH, Key
932	396084		GUIDE, Rod
990A	490023		SET, Key
990B	280596		SET, Key
990	392832		SWITCH, Key

Footnotes:

(Used only with Breaker Point Ignition)

