




Parts Manual

Mfg. No: 243431-0176-99


Model Components	Page
Air Guide, Stopswitch, Cylinder Shield.....	4
Alternator, Wire Assemblies.....	6
Back Plate, Starter Clutch.....	8
Blower Housing.....	10
Carburetor Parts, Nozzle, High Speed Valve.....	12
Carburetor, Choke & Throttle Shaft, Upper Body.....	14
Crankcase Cover, Bearing Support.....	16
Crankshaft.....	18
Cylinder, Head, Breather.....	20
Electric Starter.....	22
Electric Starter 2.....	24
Engine Base, Dipstick.....	26
Engine Gasket Set, Carburetor Overhaul Kit.....	28
Exhaust System.....	30
Flywheel, Rotating Screen.....	32
Fuel Filter, Fuel Pump, Fuel Line.....	34
Fuel Tank, Brackets.....	36
Gear Reduction, Gear Cover.....	38
Governor Spring, Bell Crank, Control Levers.....	40
Ignition Breaker, Magneto Armature.....	42
Intake Manifold, Air Cleaner.....	44
Piston, Connecting Rod, Bearing Support.....	46
Regulator, V-Belt, Bracket.....	48
Replacement Engine - US & Canada.....	50
Rewind Starter.....	51
Starter Panel Kits.....	53
Valves, Camshaft.....	55

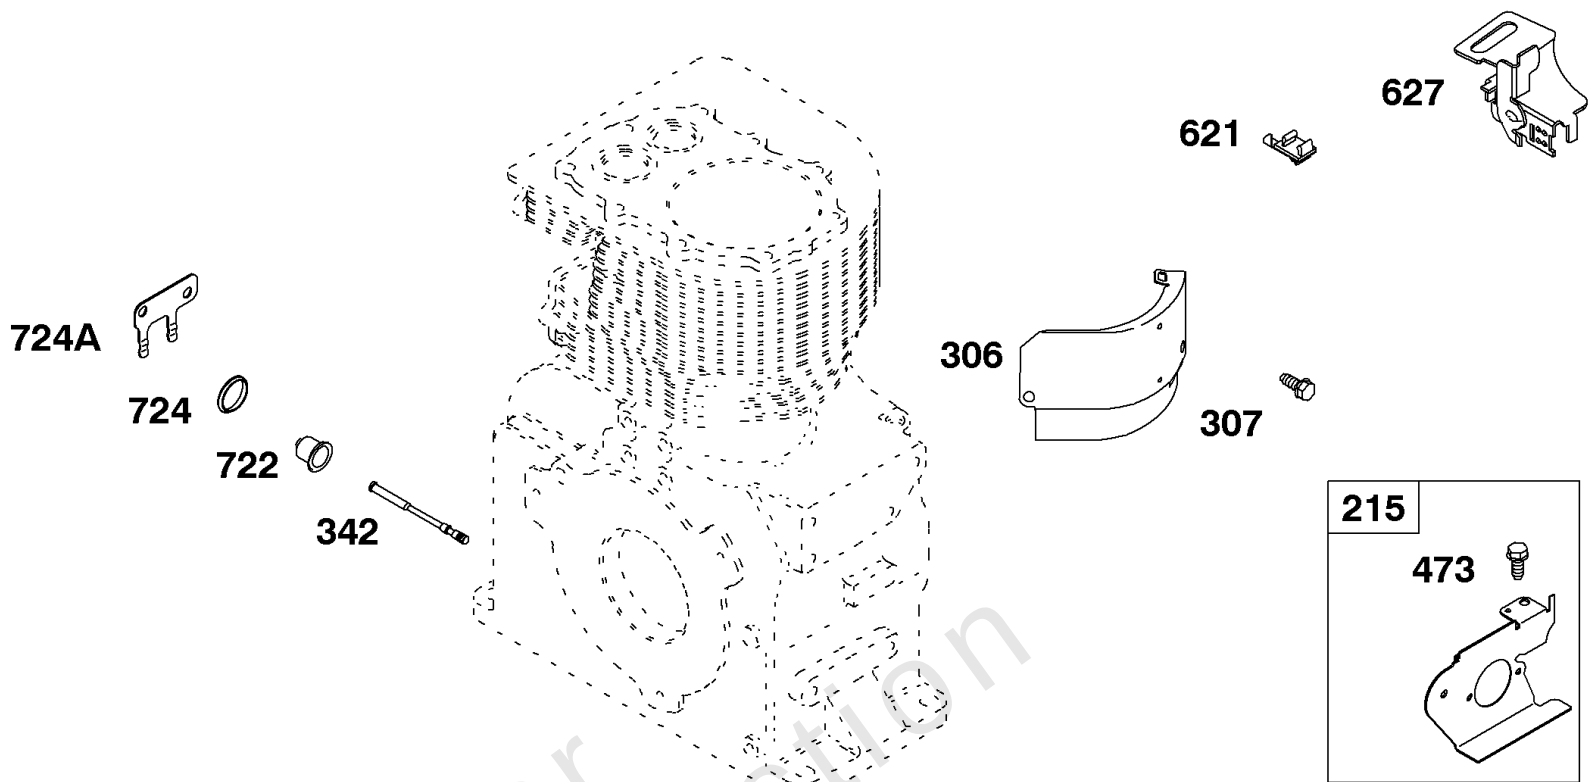

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
215	291871	Guide-Air	473	692198	Screw (Rod Guide)	722	68768	Seal-Plunger
306	690399	Shield-Cylinder	621	297472S	Switch-Stop	724	93516	Retainer-Seal
307	692198	Screw (Cylinder Shield)	627	392884	Bracket-Stopswitch	724A	221873	Retainer-Seal
342	298125S	Plunger-Breaker						

Air Guide, Stopswitch, Cylinder Shield

REF NO	PART NO	QTY	DESCRIPTION
215	291871		GUIDE, Air
306	690399		SHIELD, Cylinder
307	692198		SCREW -(Cylinder Shield)
342	298125S		PLUNGER, Breaker
473	692198		SCREW -(Rod Guide)
621	297472S		SWITCH, Stop
627	392884		BRACKET, Stopswitch
722	68768		SEAL, Plunger
724	93516		RETAINER, Seal
724A	221873		RETAINER, Seal

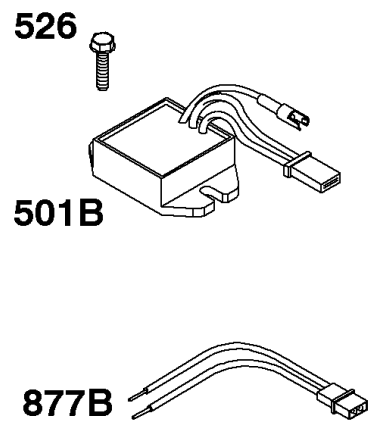

DC ONLY	AC ONLY	DUAL CIRCUIT	10/16 AMP
474 877 1059	474A 877 1059	474B 877A 1059	474C 877A 1059
578A	578B	878A	

1119 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
474	696578	Alternator (DC Only)	501B	691185	Regulator	1059	698516	Kit-Screw/Washer (Alternator)
474A	391595	Alternator (AC Only)	526	690297	Screw (Regulator)	1119	691183	Screw (Alternator)
474B	696459	Alternator (Dual Circuit)	578A	692306	Wire Assembly			
474C	696458	Alternator (10/16 Amp)	578B	390867	Wire Assembly			
			877	393814	Wire/Connector-Alternator (DC Only)			
			877A	393456	Wire/Connector-Alternator (Dual Circuit)			
			877B	399916	Wire/Connector-Alternator (Tri-Circuit)			
			878A	398661	Harness-Alternator			

Alternator, Wire Assemblies

REF NO	PART NO	QTY	DESCRIPTION
474	696578		ALTERNATOR -(DC Only)
474A	391595		ALTERNATOR -(AC Only)
474B	696459		ALTERNATOR -(Dual Circuit)
474C	696458		ALTERNATOR -(10/16 AMP)
501B	691185		REGULATOR -(16 Amp Regulated)
526	690297		SCREW -(Regulator)
578A	692306		WIRE ASSEMBLY
578B	390867		HARNESS, Alternator -(Ac Only)
877	393814		WIRE/CONNECTOR, Alternator -(DC Only)
877A	393456		WIRE/CONNECTOR, Alternator -(Dual Circuit)
877B	399916		WIRE/CONN-ALTERNATOR -(Tri Circuit)
878A	398661		HARNESS, Wiring
1059	698516		KIT, Screw/Washer -(Alternator)
1119	691183		SCREW -(Alternator)


Back Plate, Starter Clutch

REF NO	PART NO	QTY	DESCRIPTION
66	399671		CLUTCH-STARTER
67	394897		HOUSING, Clutch
68	691604		BALL, Clutch
69	690271		WASHER -(Starter Clutch)
70	691945		RATCHET-CLUTCH
71	691359		COVER, Ratchet
75	691056		WASHER -(Flywheel)
197	90072		SCREW -(Back Plate)
257	691078		SCREW -(Starter Clutch)
316	691612		NUT -(Back Plate)
325A	690261		PULLEY, Rope Starter
344	93410		SCREW -(Cable Clamp)
384	690371		WASHER -(Back Plate)
405	690290		SCREW -(Back Plate)
452	26404		WASHER -(Back Plate)
452A	92864		WASHER -(Back Plate)
458	69932S		KIT, Handle/Rope -(55-1/2 Rope)
573	298159		PLATE, Back
573A	-----		Plate-Back -(NO LONGER AVAILABLE)
588	690375		BRACKET, Armature
589	690300		SCREW -(Armature Bracket)
729	690432		CLIP, Wire

Blower Housing

REF NO	PART NO	QTY	DESCRIPTION
304	294698		HOUSING, Blower
305	692198		SCREW -(Blower Housing)
895	692309		SWITCH, Rotary

Not For Reproduction

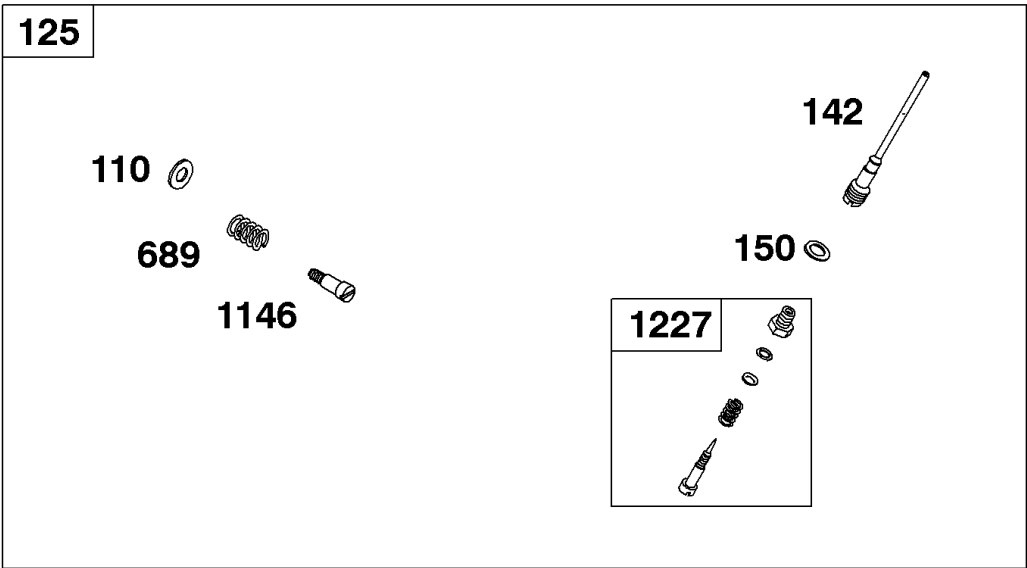

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
110	691186	Washer (Choke Shaft)	142	691966	Nozzle-Carburetor (Standard) (Labeled B) (Used After Code Date 81101100).	150	691610	Gasket-Nozzle
125		Carburetor (See Previous Page)			----- Note ----- 390950 Nozzle-Carburetor (Standard) (Labeled B) (#40 Jet) (Used Before Code Date 81101200).	158	27590	Plug-Carburetor Filter/Drain
						689	691590	Spring-Friction
						800	220521	Retainer-Carburetor Drain
						1146	691587	Screw (Choke Shaft)
						1227	99525S	Valve-High Speed

###

Crankcase Cover, Bearing Support

REF NO	PART NO	QTY	DESCRIPTION
228	691681		SCREW -(Bearing Support)
571	291672		SUPPORT, Bearing -(Ball Bearing)
571A	291665		SUPPORT, Bearing -(Ball Bearing)
593	691311		GASKET, Crankcase Cover -(.015)

Not For Reproduction

Crankshaft

REF NO	PART NO	QTY	DESCRIPTION
16	690530		CRANKSHAFT
17	691938		BEARING, Ball
24	222698S		KEY, Flywheel
357	691483		KEY, Drive Pulley

Not For Reproduction

