




Parts Manual

Mfg. No: 261D02-0004-01


Model Components	Page
Air Cleaner Group.	4
Blower Housing Group.	6
Controls Group.	8
Crankcase Cover/Sump Group.	10
Crankshaft Group.	12
Cylinder Group.	14
Cylinder Head Group.	16
Exhaust Group.	18
Fuel Supply Group.	20

Not For
Reproduction

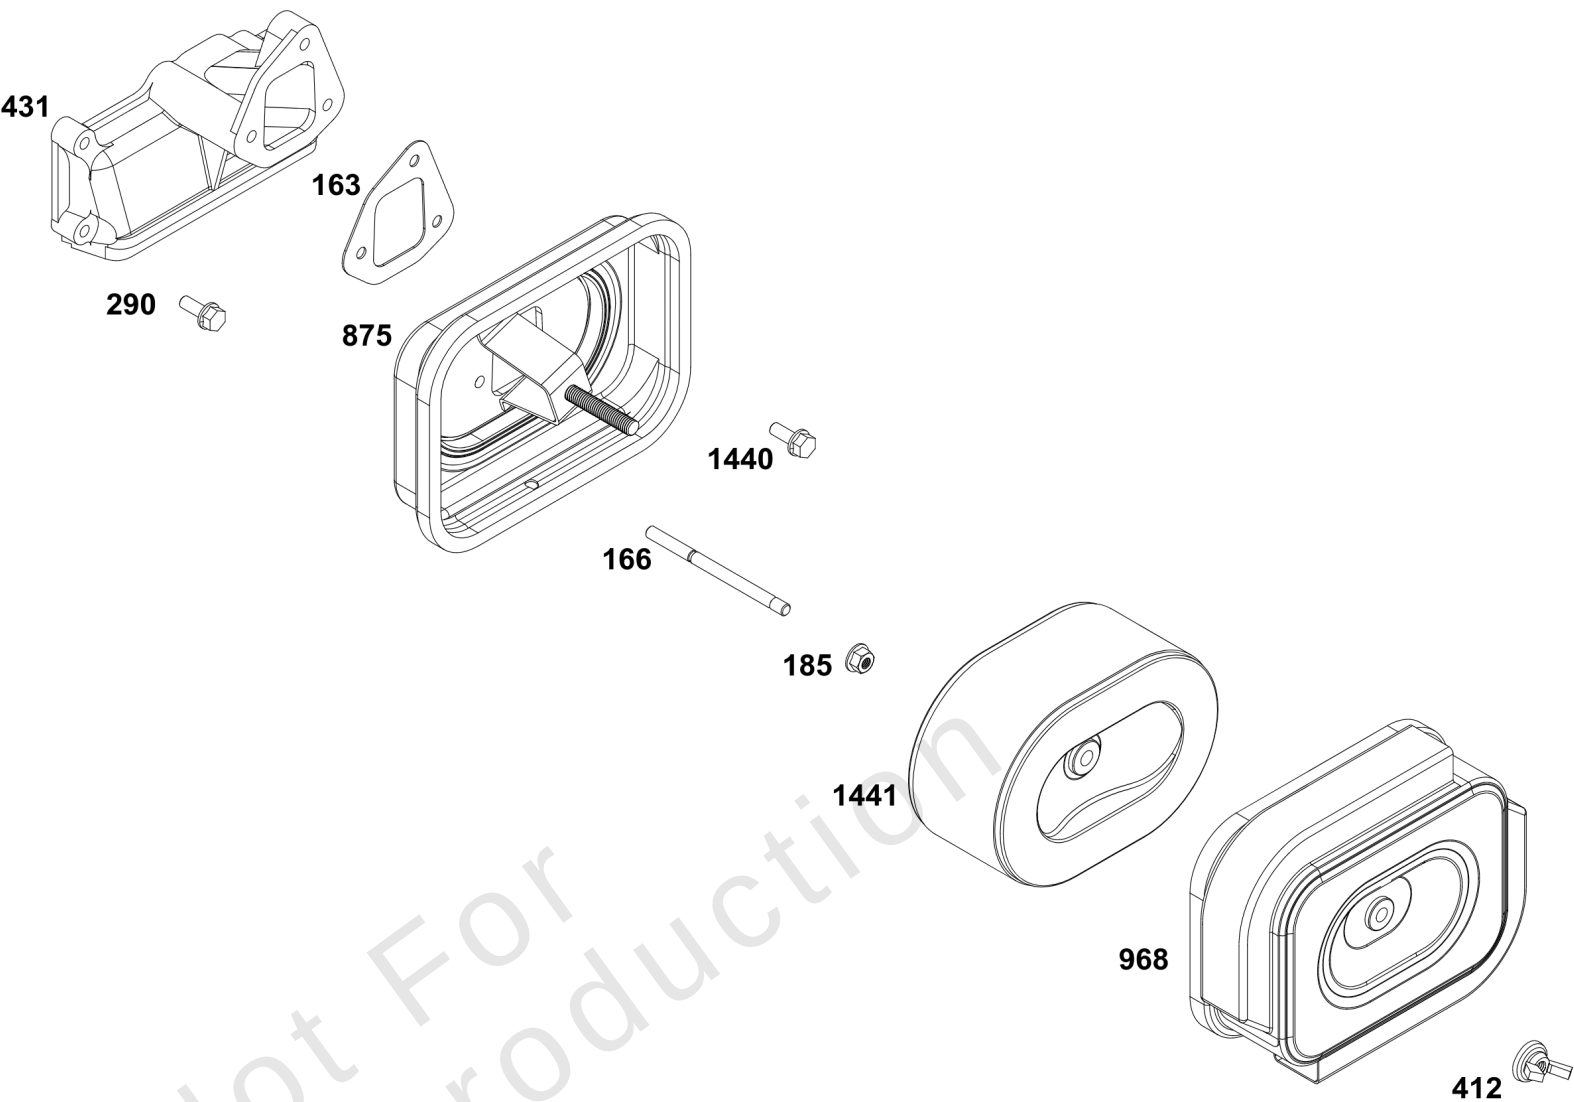

Air Cleaner Group

REF NO	PART NO	QTY	DESCRIPTION
163	84005687	1	GASKET, Air Cleaner
166	84005688	2	STUD -(Air Cleaner)
185	84005350	2	NUT -(Air Cleaner Base)
290	84005407	1	SCREW
412	84005683	2	NUT -(Air Cleaner Cover)
431	84005630	1	ELBOW, Intake
875	84005686	1	BASE, Air Cleaner
968	84005684	1	COVER, Air Cleaner
1440	84005460	1	SCREW -(Air Cleaner Base to Intake Elbow)
1441	84005685	1	FILTER, Air

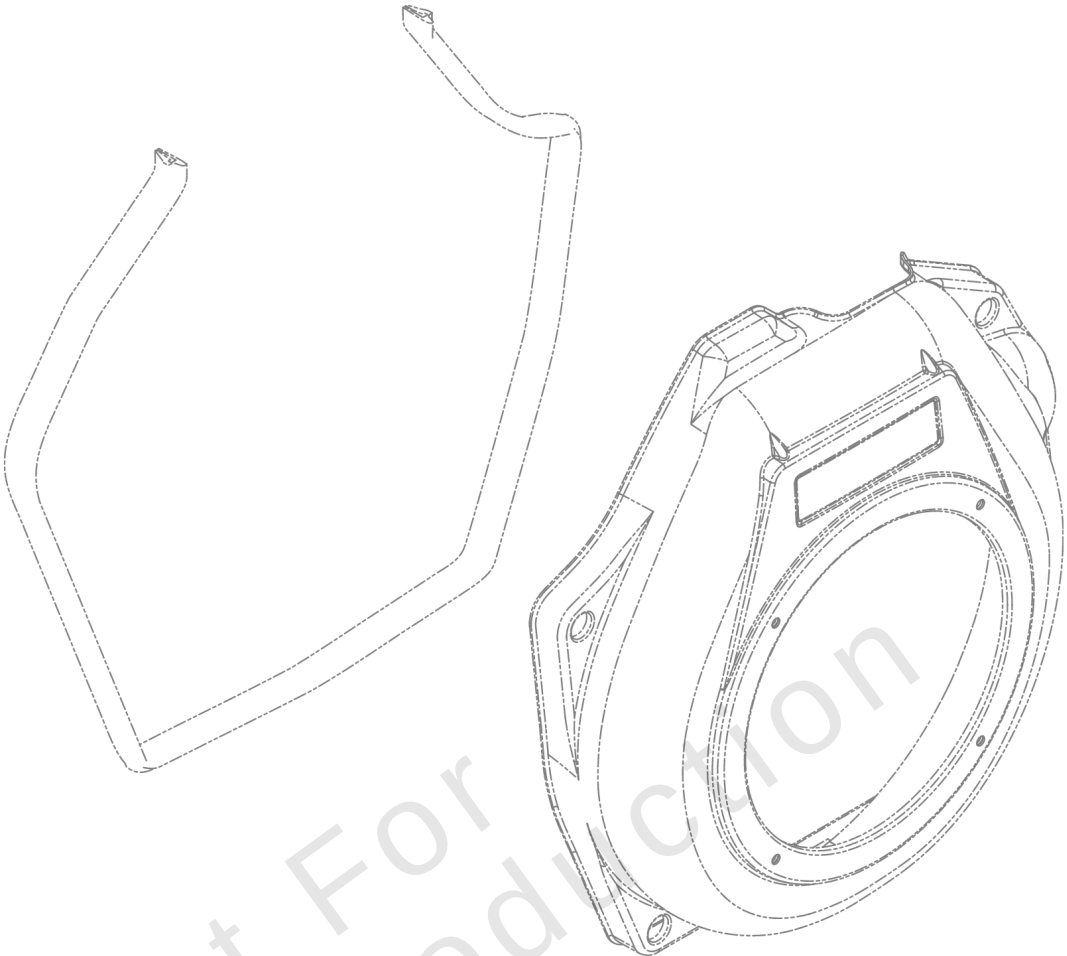

1036 


1319 

1319A 

1319B 


1397A 

1397 

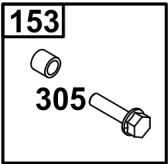


Blower Housing Group

REF NO	PART NO	QTY	DESCRIPTION
153	84005546	4	KIT, Collar/Screw
305	84005283	4	SCREW -(Blower Housing)
1036	-----		LABEL, Emissions - (Available from a Briggs & Stratton Authorized Dealer)
1319	794467		LABEL, Warning - (REQUIRED When Replacing Parts With Warning Labels Affixed)
1319A	797669		LABEL, Warning - (REQUIRED When Replacing Parts With Warning Labels Affixed)
1319B	278911GS		LABEL, Warning - (REQUIRED When Replacing Parts With Warning Labels Affixed)
1397	84005342	4	WASHER -(Blower Housing)
1397A	84005398	4	WASHER -(Blower Housing)

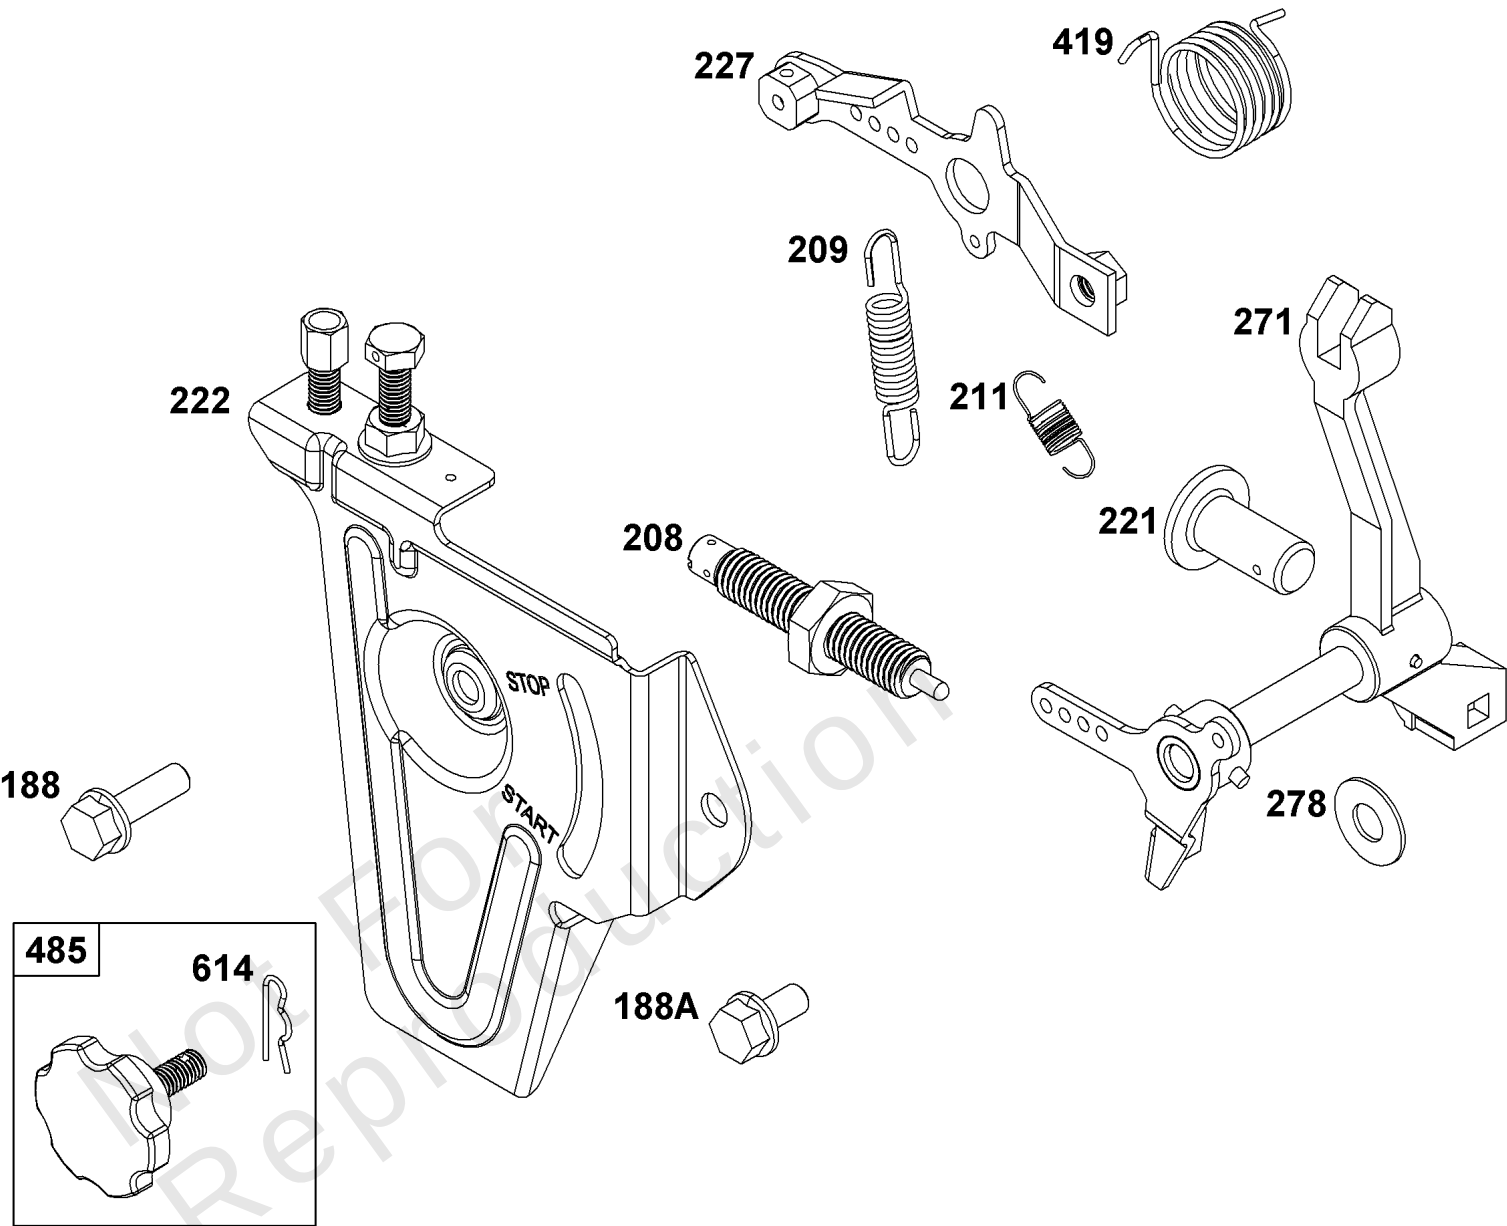





Controls Group

REF NO	PART NO	QTY	DESCRIPTION
188	84005343	1	SCREW -(Control Bracket)
188A	84005407	1	SCREW -(Control Bracket)
208	84005668	1	ROD, Governor Control
209	84005663	1	SPRING, Governor
211	84005536	1	SPRING, Governed Idle
221	84005662	1	CUP, Governor
222	84005665	1	BRACKET, Control
227	84005664	1	LEVER, Governor Control
271	84005661	1	LEVER, Control
278	84005531	2	WASHER -(Governor Control Lever)
419	84005533	1	SPRING, Return
485	84005666	1	KNOB, Control
614	84005667	1	PIN, Cotter

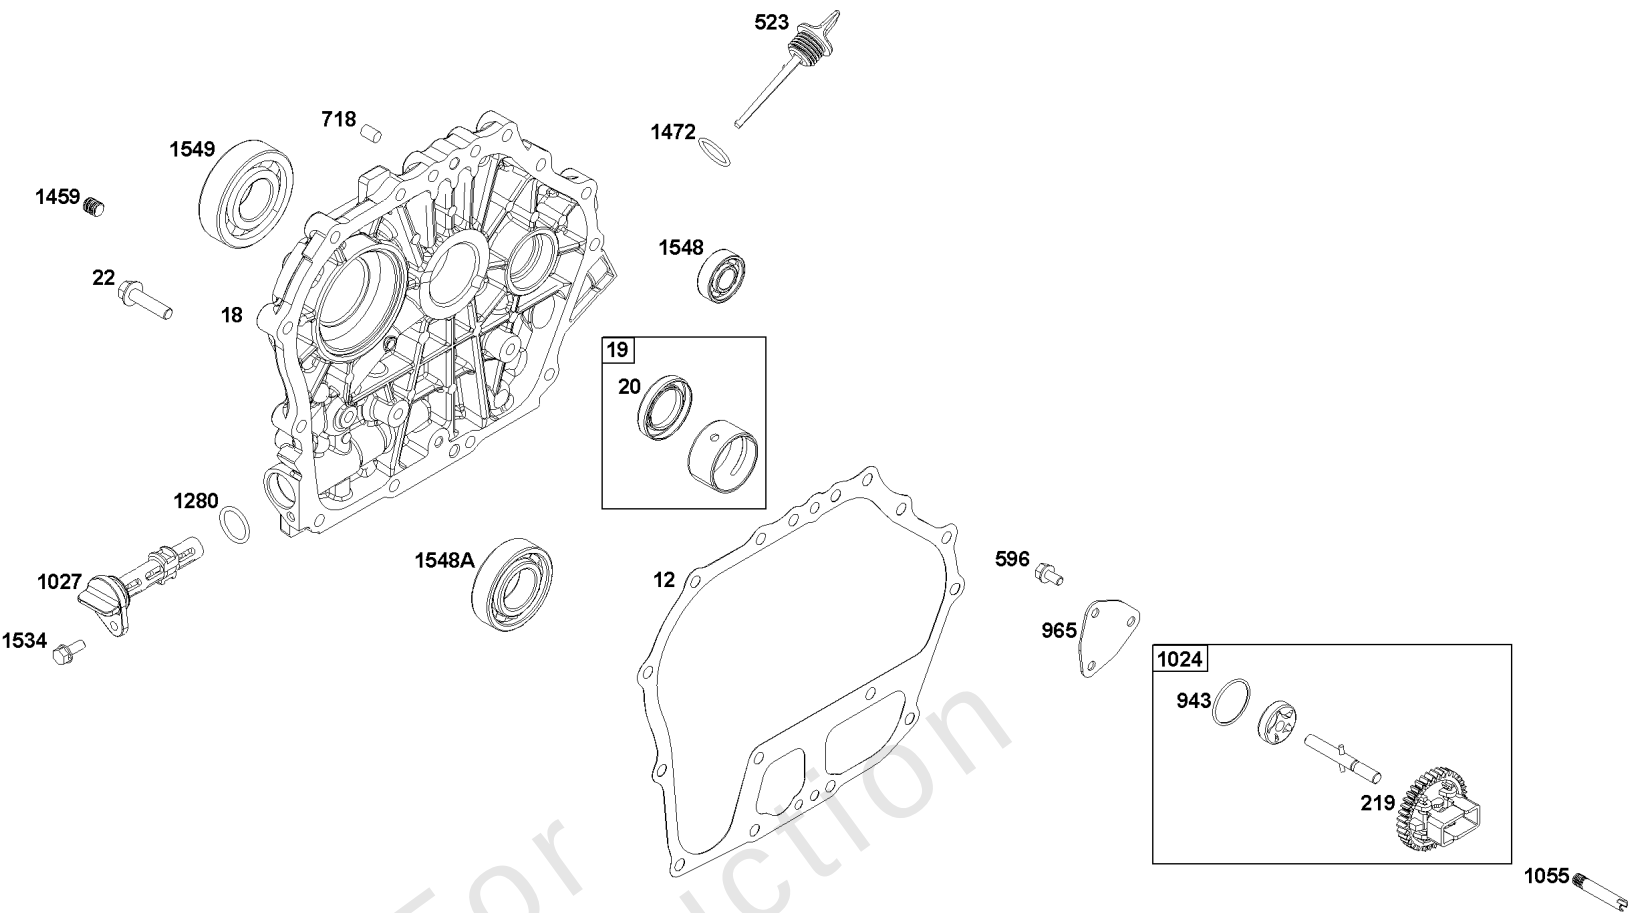


Crankcase Cover/Sump Group

REF NO	PART NO	QTY	DESCRIPTION
12	84005648	1	GASKET, Crankcase
18	84005718	1	COVER, Crankcase
19	84005645	1	KIT, Bushing/Seal -(PTO Side)
20	84005647	1	SEAL, Oil -(PTO Side)
22	84005406	16	SCREW -(Crankcase Cover/Sump)
219	84005405	1	GEAR, Governor
523	84005391	1	DIPSTICK
596	84005407	3	SCREW -(Oil Pump)
718	84005403	2	PIN, Locating
943	84005410	1	SEAL, O-Ring -(Oil Pump Cover)
965	84005408	1	COVER, Oil Pump
1024	84005649	1	PUMP, Oil
1027	84005461	1	FILTER, Oil
1055	84005404	1	TUBE, Oil Pump
1280	84005465	1	SEAL, O-Ring -(Oil Filter Cover)
1459	84005459	1	SCREW, Set
1472	84005392	1	SEAL, O-Ring -(Dipstick/Fill Plug)
1534	84005460	1	SCREW -(Oil Filter Housing)
1548	84005633	1	BEARING, Ball -(Crankcase Cover/Sump)
1548A	84005646	1	BEARING, Ball -(Crankcase Cover/Sump)
1549	-----	1	BEARING, Ball -(Part information located in Crankshaft Group.)

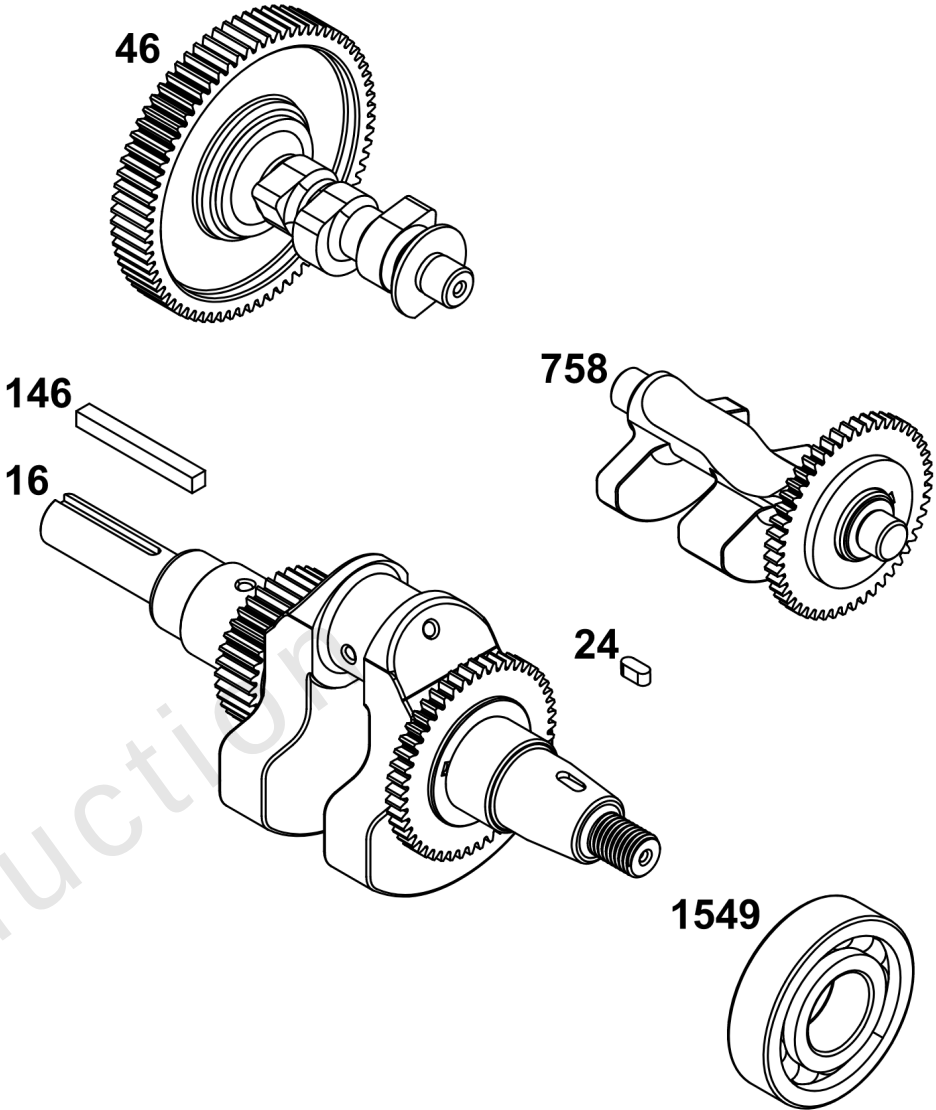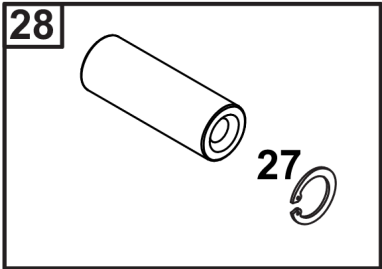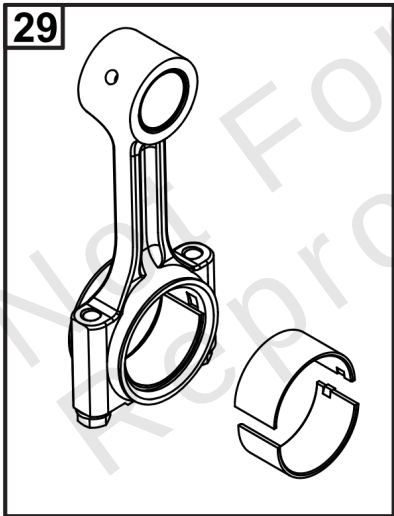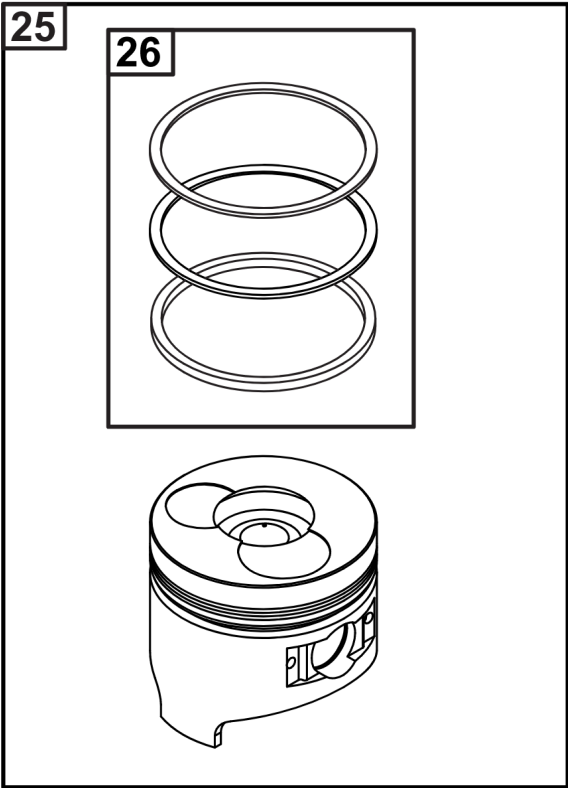


Crankshaft Group

REF NO	PART NO	QTY	DESCRIPTION
16	84005669	1	CRANKSHAFT
24	84005675	1	KEY, Flywheel
25	84005653	1	PISTON ASSEMBLY -(Standard)
25	84005655	1	PISTON ASSEMBLY -(.010" Oversize)
26	84005652	1	SET, Ring -(Standard)
26	84005654	1	SET, Ring -(.010" Oversize)
27	84005656	2	LOCK, Piston Pin
28	84005657	1	PIN, Piston
29	84005658	1	ROD, Connecting
46	84005651	1	CAMSHAFT
146	84005698	1	KEY, Timing
758	84005650	1	COUNTERWEIGHT
1549	84005670	1	BEARING, Ball -(Crankshaft)

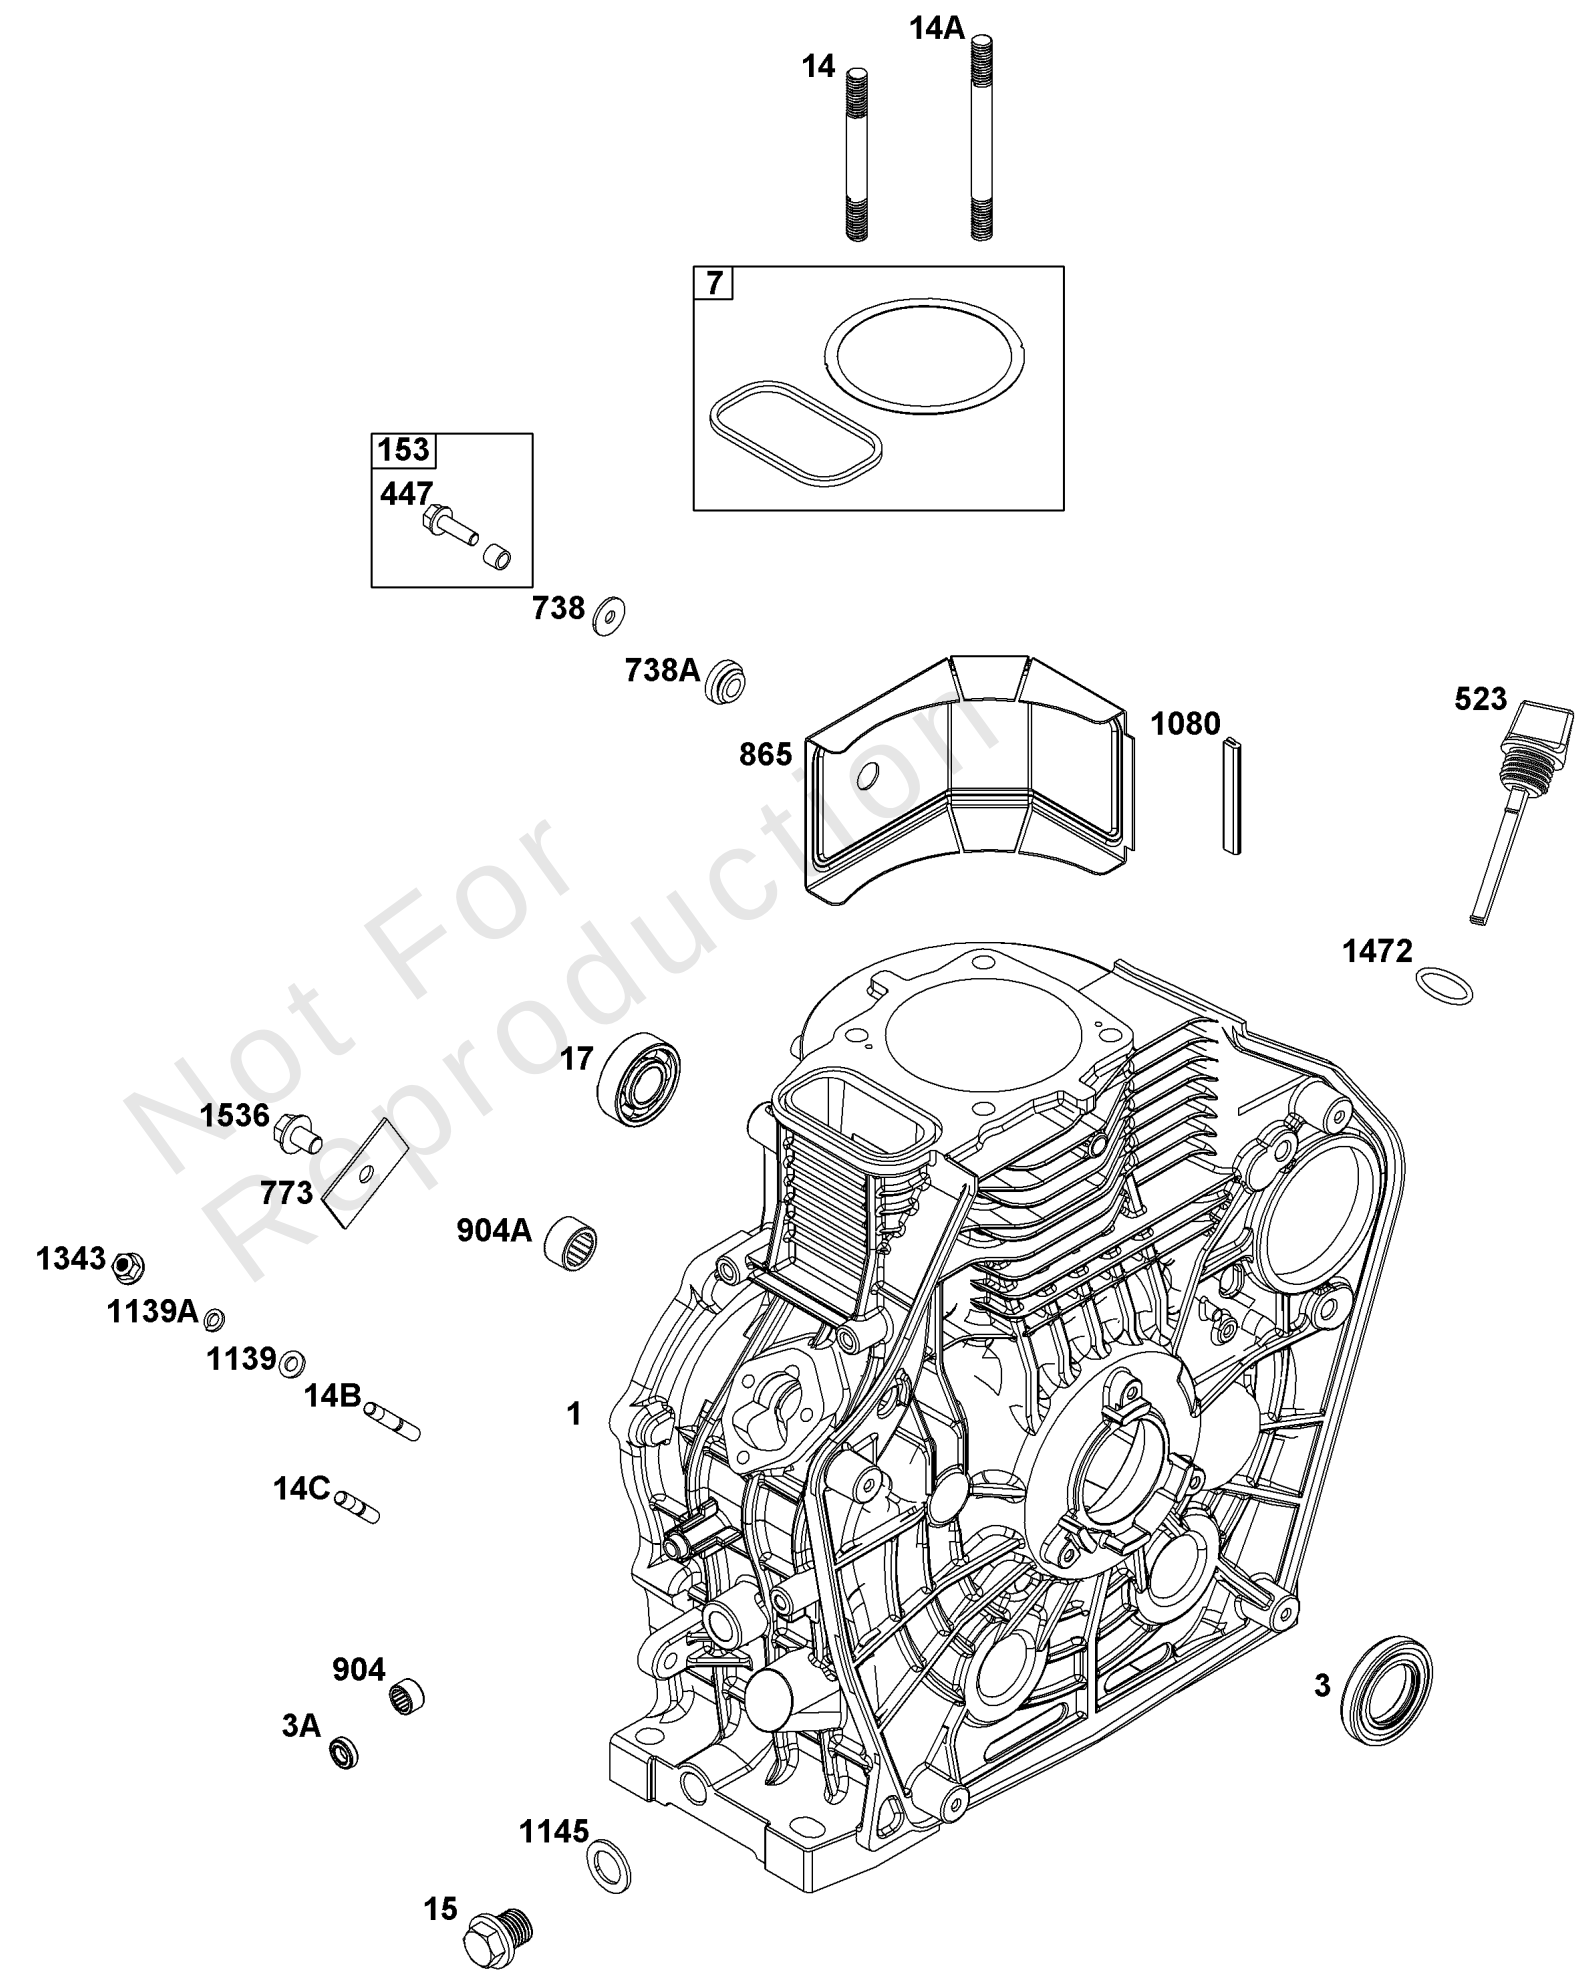


Cylinder Group

REF NO	PART NO	QTY	DESCRIPTION
1	84005632	1	CYLINDER ASSEMBLY
3	84005634	1	SEAL, Oil -(Magneto Side)
3A	84005326	1	SEAL, Oil -(Magneto Side)
7	-----	1	GASKET, Cylinder Head -(Part information located in Cylinder Head Group.)
14	-----	2	STUD -(Part information located in Cylinder Head Group.)
14A	-----	2	STUD -(Part information located in Cylinder Head Group.)
14B	84005344	2	STUD -(Cylinder Head)
14C	84005345	1	STUD -(Cylinder Head)
15	84005394	1	PLUG, Oil Drain
17	84005633	1	BEARING, Ball -(Cylinder)
153	84005341	1	KIT, Collar/Screw
447	84005343	2	SCREW -(Air Guide Cover)
523	84005391	1	DIPSTICK
738	84005342	1	WASHER -(Air Guide Cover)
738A	84005340	1	WASHER -(Air Guide Cover)
773	84005347	1	RETAINER
865	84005644	1	COVER, Air Guide
904	84005325	2	BEARING, Needle
904A	84005324	1	BEARING, Needle
1080	84005338	1	GASKET, Seal Retainer
1139	84005396	2	WASHER -(Fuel Pump Bracket)
1139A	84005397	2	WASHER -(Fuel Pump Bracket)
1145	84005395	1	SEAL, O-Ring -(Oil Drain Plug)
1343	84005350	3	NUT
1472	84005392	1	SEAL, O-Ring -(Dipstick/Fill Plug)
1536	84005346	1	SCREW -(Retainer)

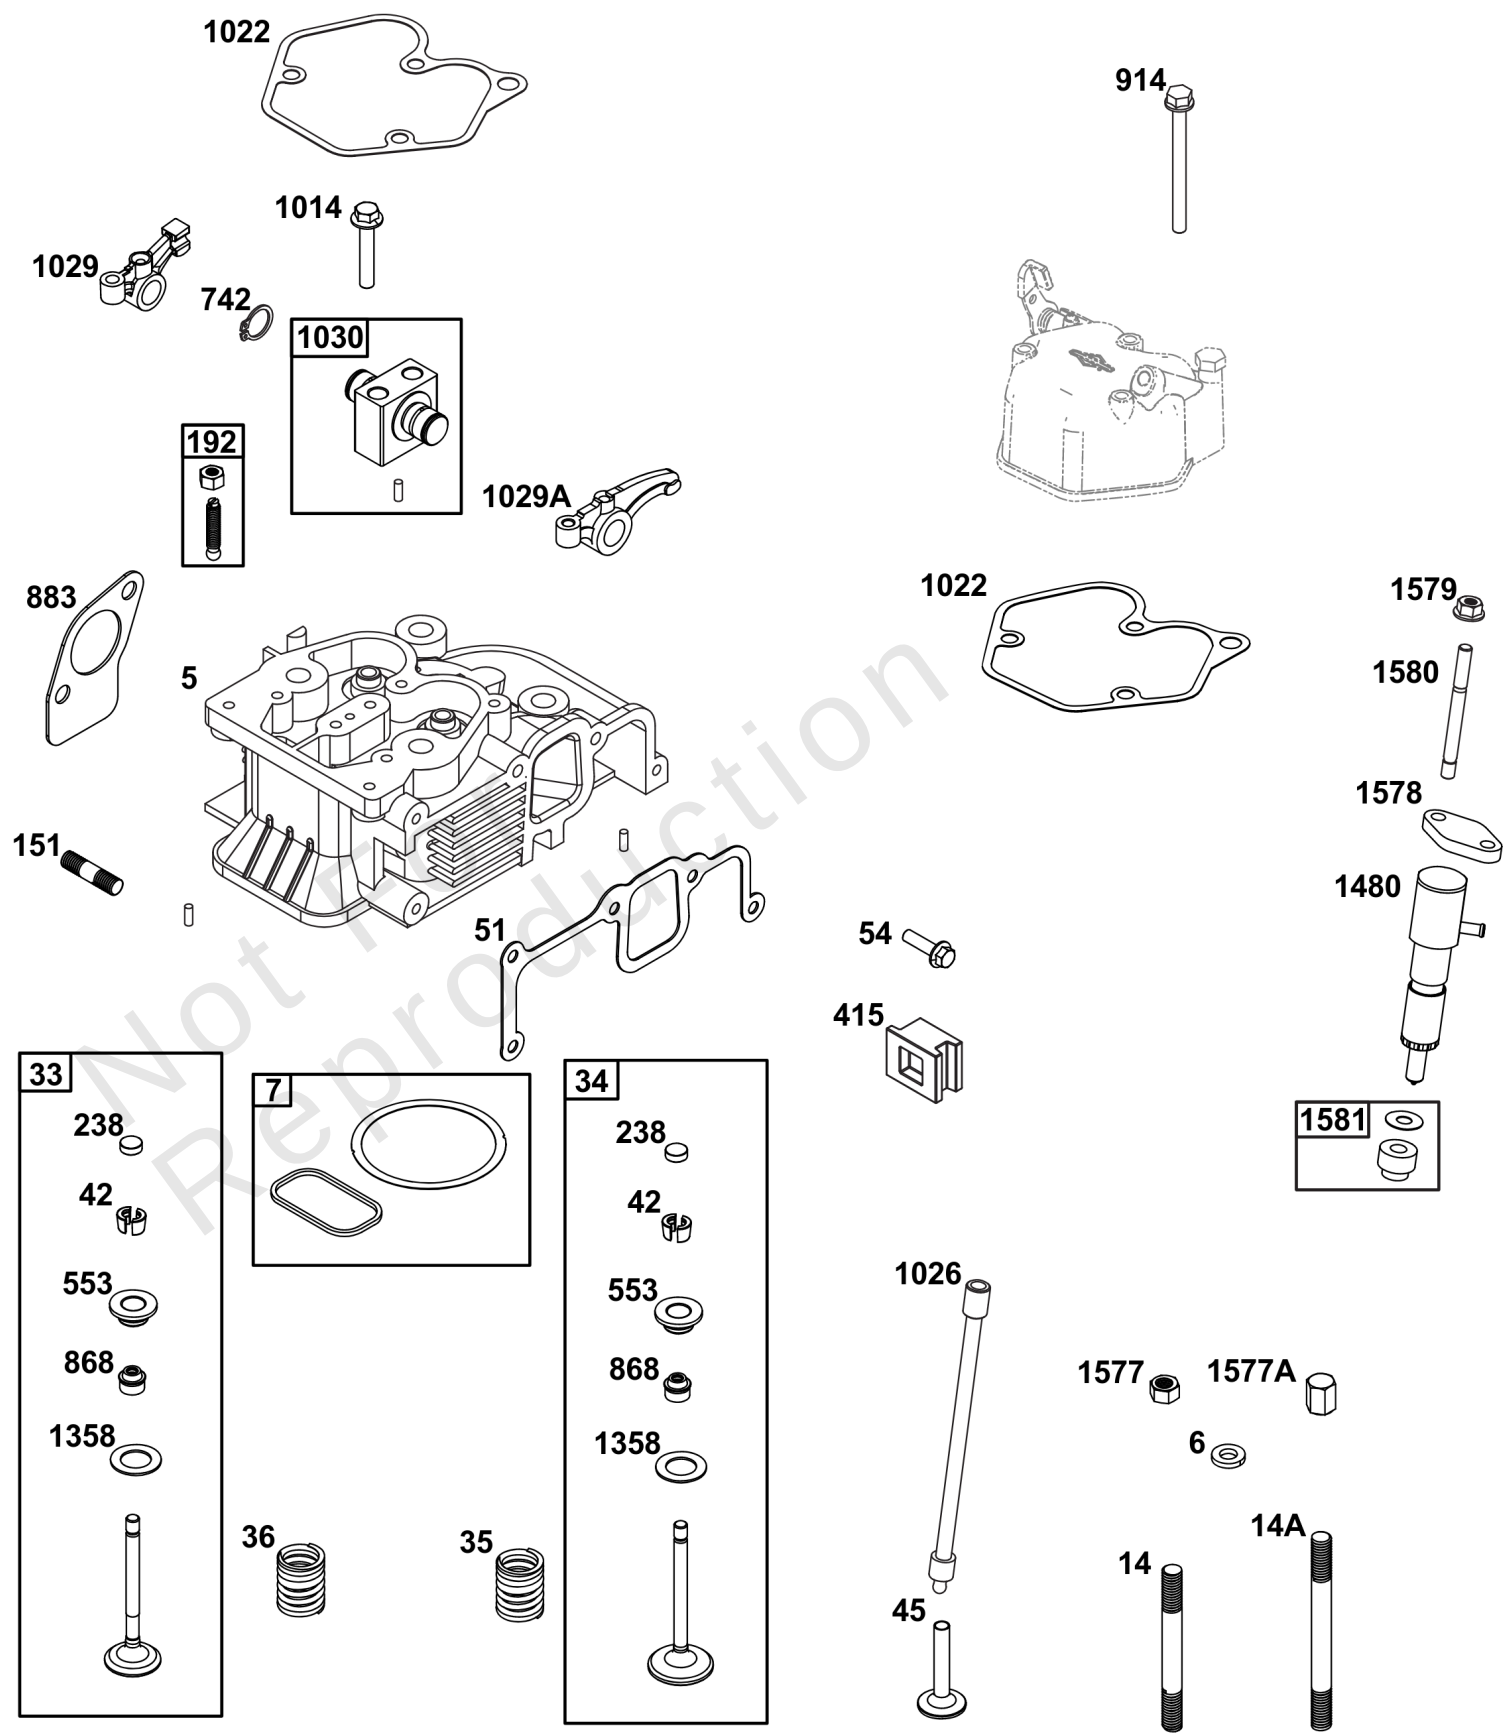

Cylinder Head Group


REF NO	PART NO	QTY	DESCRIPTION
5	84005631	1	HEAD, Cylinder
6	84005638	4	WASHER -(Cylinder Head)
7	84005637	1	GASKET, Cylinder Head
14	84005635	2	STUD -(Cylinder Head)
14A	84005636	2	STUD -(Cylinder Head)
33	84005609	1	VALVE, Exhaust
34	84005611	1	VALVE, Intake
35	84005617	1	SPRING, Valve -(Intake)
36	84005617	1	SPRING, Valve -(Exhaust)
42	84005619	4	KEEPER, Valve
45	84005621	2	TAPPET, Valve
51	84005629	1	GASKET, Intake
54	84005283	3	SCREW -(Intake Manifold)
151	JUMPTO151	2	STUD -(Part information located in Exhaust Group.)
192	84005610	2	ADJUSTER, Rocker Arm
238	84005620	2	CAP, Valve
415	84005628	1	PLUG
553	84005618	2	RETAINER, Valve Spring
742	84005615	2	RETAINER, E Ring
868	84005608	2	SEAL, Valve
883	-----	1	GASKET, Exhaust -(Part information located in Exhaust Group.)
914	84005537	3	SCREW -(Rocker Cover)
1014	84005624	2	SCREW -(Rocker Arm Support)
1022	84005678	1	GASKET, Rocker Cover
1026	84005622	2	ROD, Push
1029	84005612	1	ARM, Rocker -(Exhaust)
1029A	84005613	1	ARM, Rocker -(Intake)
1030	84005623	1	SUPPORT, Rocker Arm
1358	84005616	2	SEAT, Valve Spring
1480	84005627	1	INJECTOR, Fuel
1577	84005639	2	NUT -(Cylinder Head)
1577A	84005643	2	NUT -(Cylinder Head)
1578	84005349	1	PLATE, Clamp -(Fuel Injector)
1579	84005350	2	NUT -(Clamp Plate)
1580	84005625	2	STUD -(Clamp Plate)
1581	84005626	1	ADJUSTER, Height -(Fuel Injector)

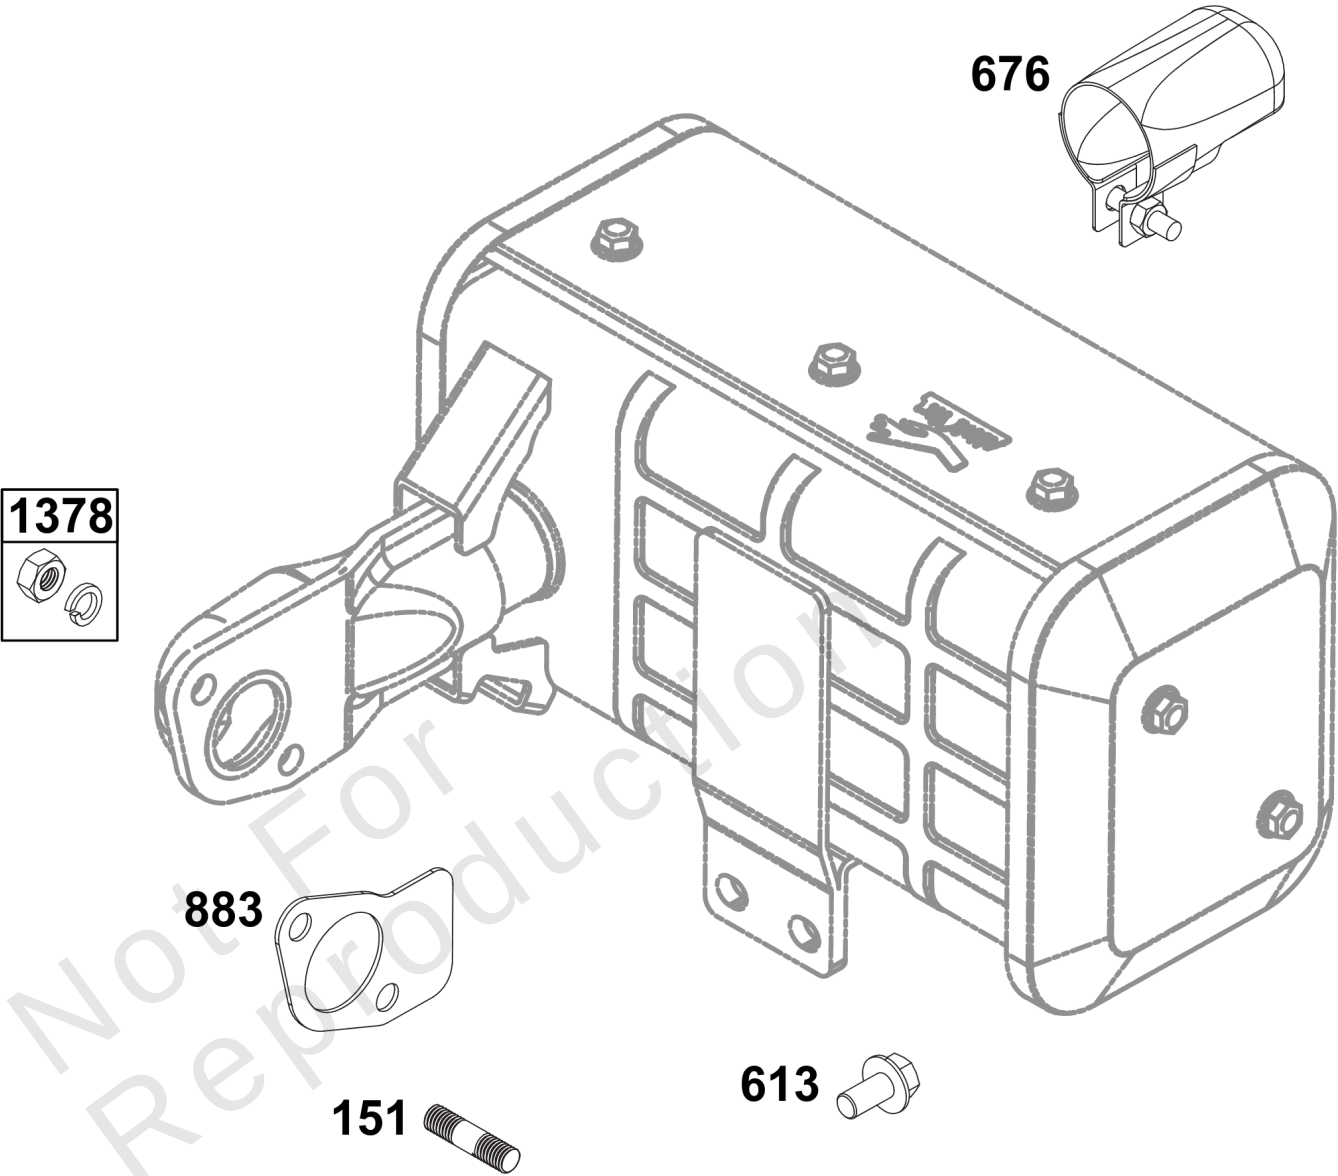

Exhaust Group

REF NO	PART NO	QTY	DESCRIPTION
151	84005311	2	STUD -(Exhaust Manifold)
613	84005524	2	SCREW -(Muffler)
676	84005699	1	DEFLECTOR, Muffler
883	84005690	1	GASKET, Exhaust
1378	84005523	2	SET, Washer/Nut

Not For Reproduction

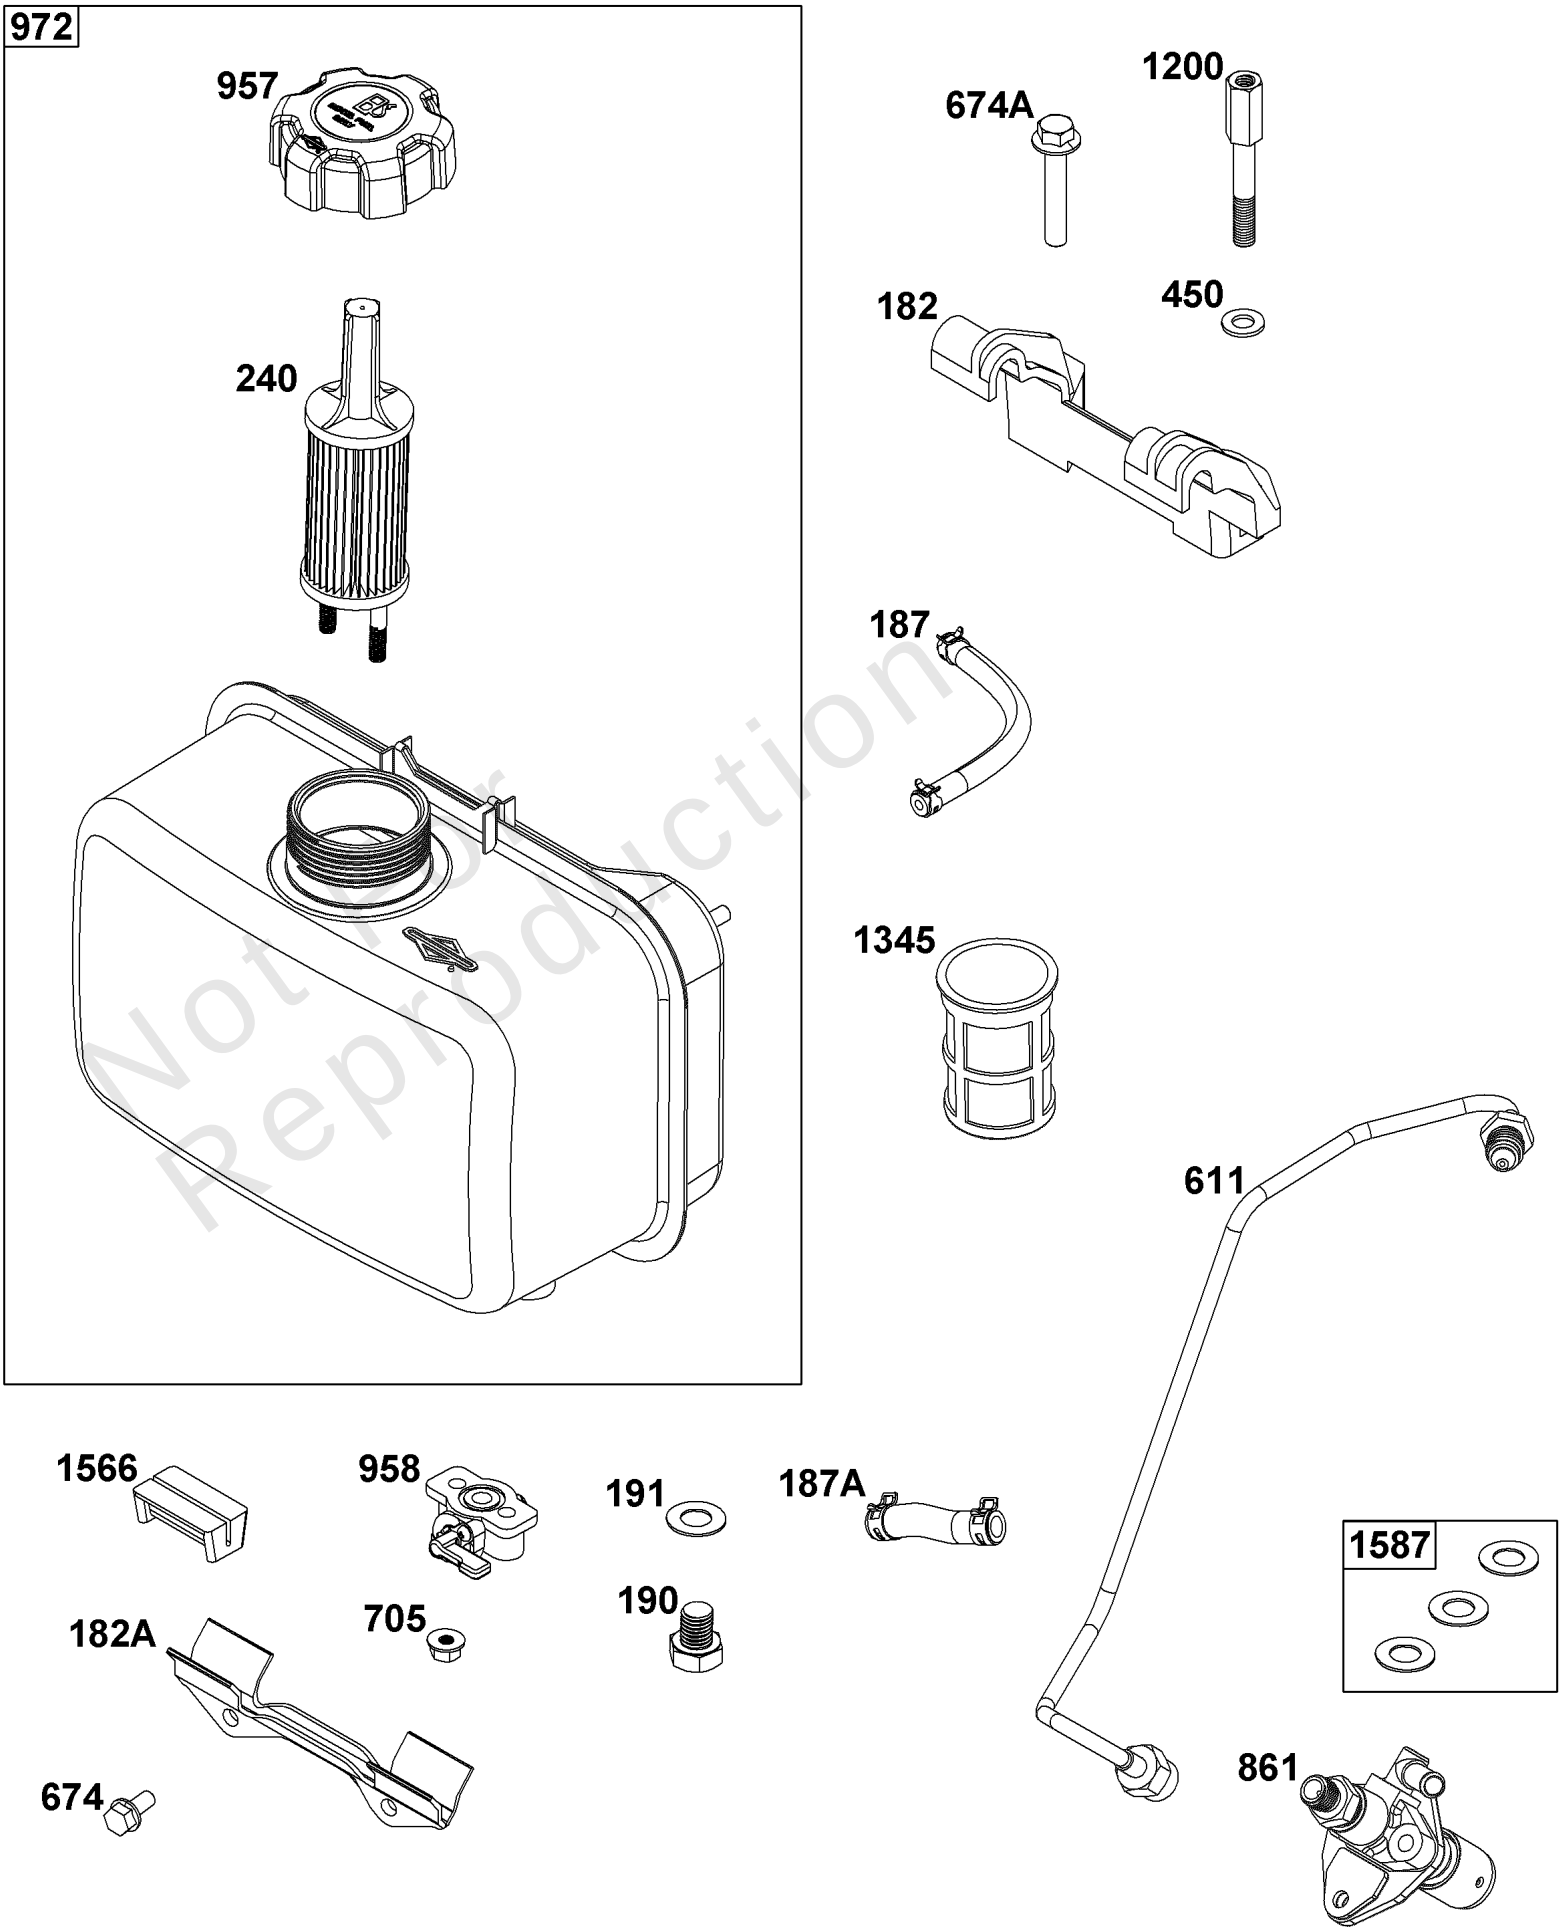

Fuel Supply Group

REF NO	PART NO	QTY	DESCRIPTION
182	84005696	1	BRACKET, Fuel Tank
182A	84005508	1	BRACKET, Fuel Tank
187	84005694	1	LINE, Fuel
187A	84005509	1	LINE, Fuel
190	84005516	1	SCREW -(Fuel Tank)
191	84005518	1	GASKET, Fuel Tank
240	84005693	1	FILTER, Fuel
450	84005511	1	WASHER -(Fuel Tank Bracket)
611	84005660	1	PIPE, Fuel
674	84005507	2	SCREW -(Fuel Tank Bracket)
674A	84005319	1	SCREW -(Fuel Tank Bracket)
705	84005350	2	NUT -(Fuel Tank)
861	84005659	1	KIT, Fuel Pump
957	84005504	1	CAP, Fuel Tank
958	84005521	1	VALVE, Fuel Shut Off
972	84005692	1	TANK, Fuel
1200	84005510	1	STUD -(Fuel Tank Bracket)
1345	84005505	1	FILTER, Filler Neck
1566	84005513	4	ADAPTER, Mounting
1587	84006148	1	SET, Shim -(Fuel Pump)

