

 


Parts Manual

Mfg. No: 286707-0114-01


Model Components	Page
Air Cleaner, Muffler.	4
Alternator, Ignition, Wires.	8
Blower Housing, Rotating Screen.	10
Carburetor, Carburetor Overhaul Kit.	12
Crankcase Cover/Sump, Engine Gasket Set, Cylinder, Oil, Valve Gasket Set, Crankshaft, Piston/Rings/	18
Electric Starters.	24
Fuel, Brackets, Controls, Springs.	28
Replacement Engine - US & Canada.	32
Rewind Starter, Flywheel.	33

Not For
Reproduction

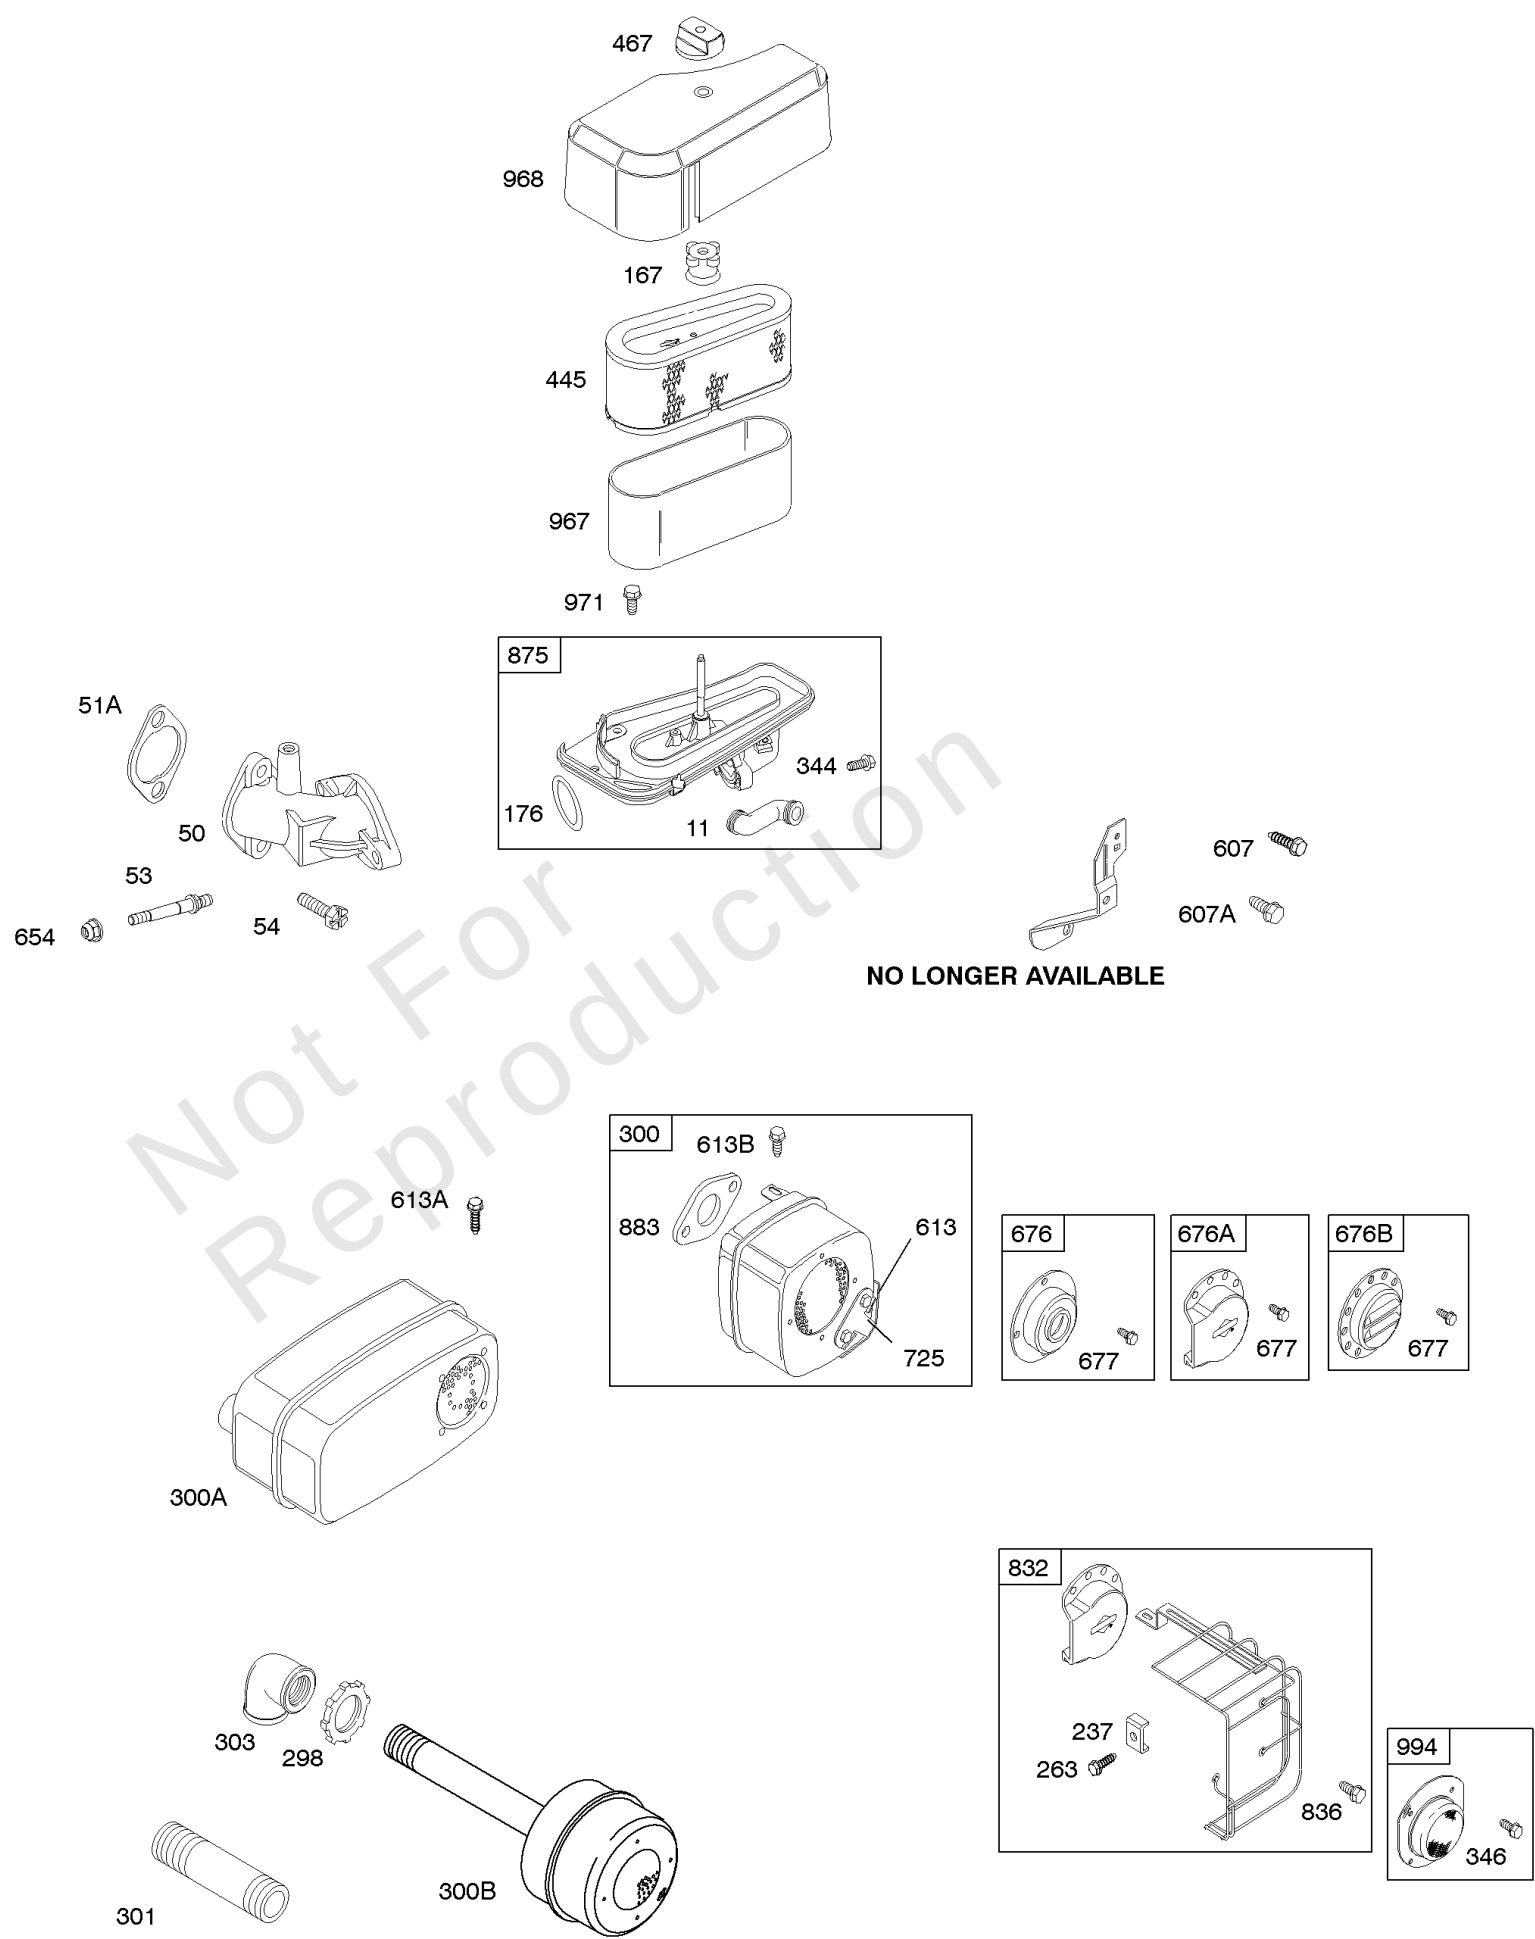

Air Cleaner, Muffler





REF NO	PART NO	QTY	DESCRIPTION
11	692253		TUBE, Breather
50	691711		MANIFOLD, Intake
51A	272554S		GASKET, Intake
53	690227		STUD -(Carburetor)
54	690953		SCREW -(Intake Manifold)
167	692297		SEAL-A/C NUT
176	691917		SEAL, O-Ring -(Air Cleaner Base)
237	690409		RETAINER, Muffler Guard
263	691083		SCREW -(Muffler Guard Retainer)
298	691808		LOCKNUT -(Muffler and Elbow)
300	691874		MUFFLER
300A	498984S		MUFFLER
300B	391569S		MUFFLER
301	93768		PIPE, Exhaust -(5 1/4)
303	690281		MANIFOLD, Exhaust
344	693675		SCREW -(Cable Clamp)
346	690661		SCREW -(Spark Arrestor)
445	496894S		FILTER-A/C CARTRIDGE
467	691668		KNOB, Air Cleaner Cover
607	690703		SCREW -(Air Cleaner Brace)
607A	691693		SCREW -(Air Cleaner Brace)
613	691416		SCREW -(Muffler)
613A	691693		SCREW -(Muffler)
613B	692198		SCREW -(Muffler)
654	690958		NUT -(Carburetor)
676	396903		DEFLECTOR, Muffler
676A	393761		DEFLECTOR, Muffler -(Side Outlet)
676B	397630		DEFLECTOR, Muffler -(Louvered Outlet)
677	690661		SCREW -(Muffler Deflector)
725	690420		SHIELD, Heat -(Muffler)
832	692361		GUARD-MUFFLER
836	690367		SCREW -(Muffler Guard)
875	696129		BASE, Air Cleaner
883	692236		GASKET, Exhaust
967	272403S		FILTER-PRE CLEANER
968	691916		COVER, Air Cleaner
971	691108		SCREW -(Air Cleaner Base to Carburetor/Throttle Body) -Used After Code Date 98091300

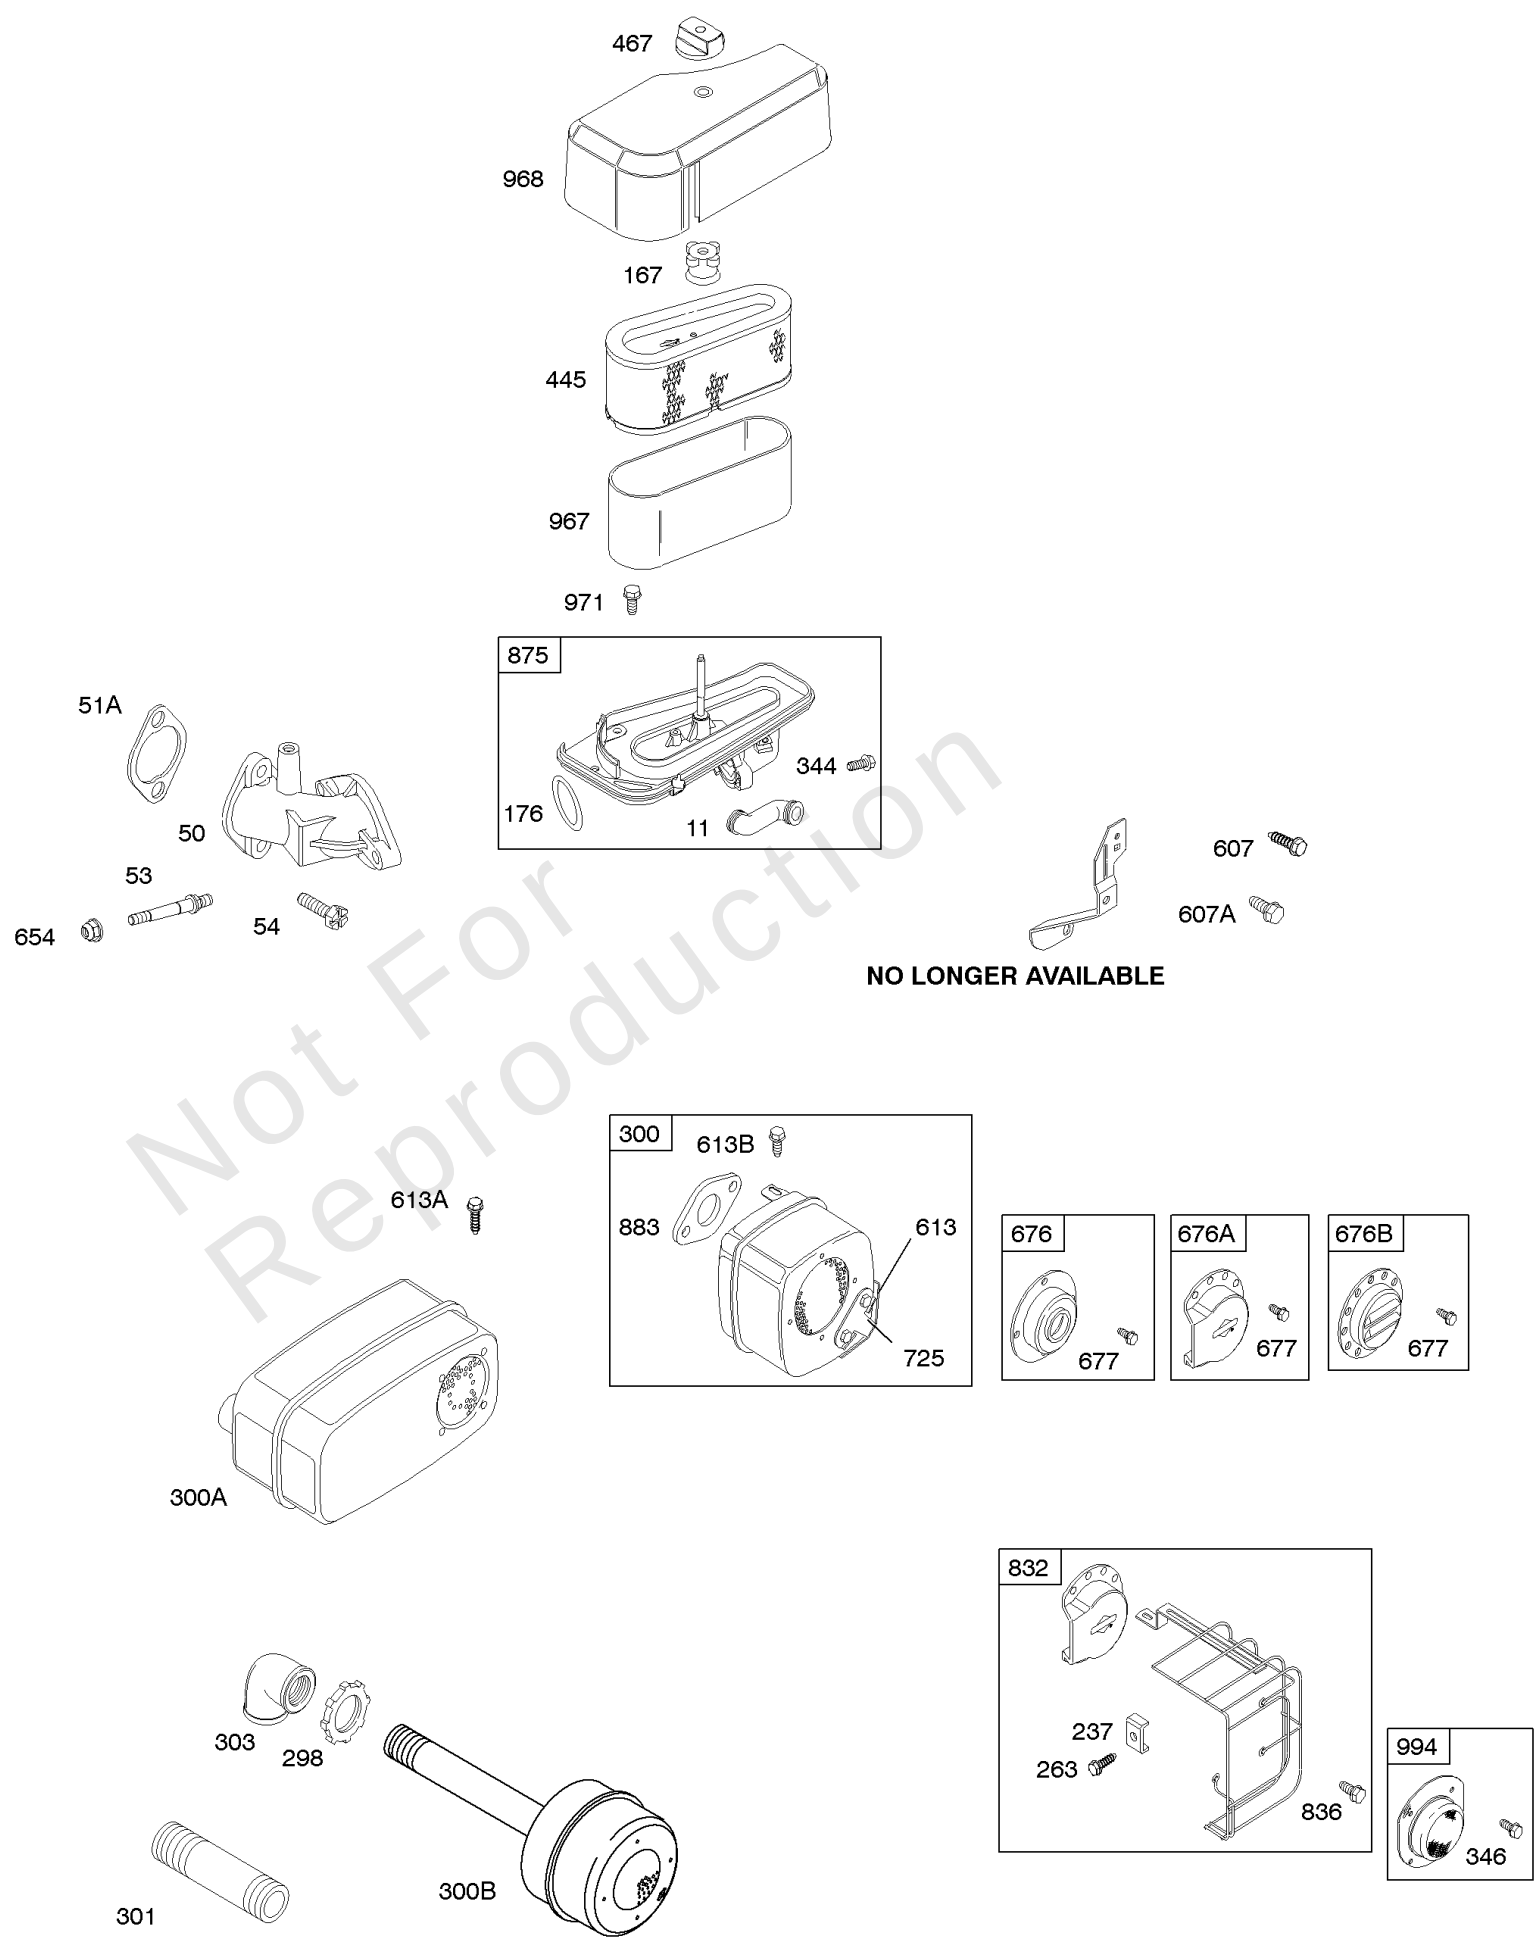 


Air Cleaner, Muffler

REF NO	PART NO	QTY	DESCRIPTION
971	692198		SCREW -(Air Cleaner Base to Carburetor/Throttle Body) -Used Before Code Date 98091400
994	392390		ARRESTOR, Spark

    
Not For Reproduction

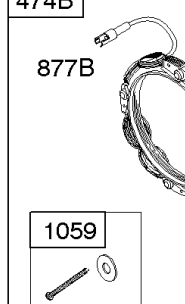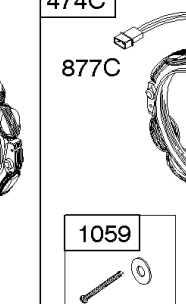DC ONLY	DUAL CIRCUIT	TRI CIRCUIT	10/16 AMP
474 877A 1059 	474A 877 1059 	474B 877B 1059 	474C 877C 1059 
578 	878 	878A 	

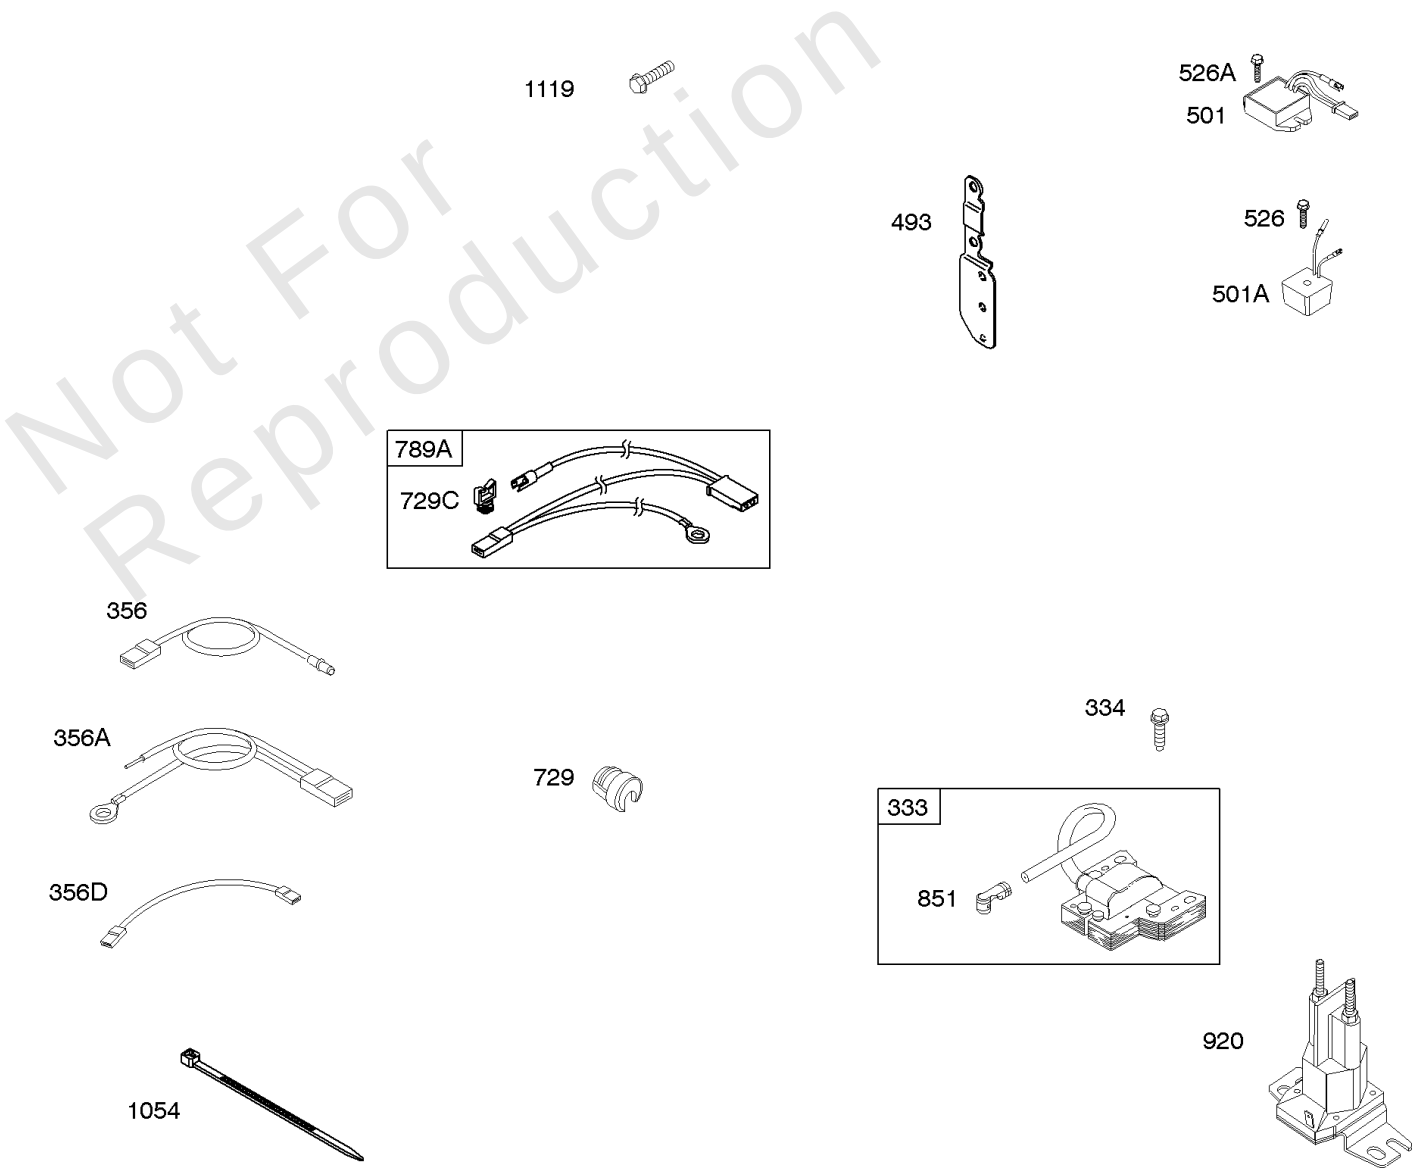 

Alternator, Ignition, Wires


REF NO	PART NO	QTY	DESCRIPTION
333	492341		ARMATURE, Magneto
334	691061		SCREW -(Magneto Armature)
356	690807		WIRE, Stop
356A	398808		WIRE, Stop -(Cut To Required Length)
356D	690799		WIRE, Stop
474	696578		ALTERNATOR -(DC Only)
474A	696459		ALTERNATOR -(Dual Circuit)
474B	696457		ALTERNATOR -(Tri Circuit)
474C	696458		ALTERNATOR -(10-16 AMP.)
493	694475		BRACKET, Mounting
501	691185		REGULATOR -(16 Amp Regulated)
501A	691188		REGULATOR -(9 Amp Regulated)
526	690326		SCREW -(Regulator)
526A	692198		SCREW -(Regulator)
578	692306		WIRE ASSEMBLY
729	690596		CLIP, Wire
729C	691335		CLIP, Wire
789A	692037		HARNESS-WIRING
851	493880S		TERMINAL, Spark Plug
877	393456		WIRE/CONNECTOR, Alternator -(Dual Circuit)
877A	393814		WIRE/CONNECTOR, Alternator -(10 Amp Regulated)
877B	393537		WIRE/CONNECTOR, Alternator -(Tri Circuit) (9 Amp)
877C	399916		WIRE/CONN-ALTERNATOR
878	398661		HARNESS, Wiring
878A	691955		HARNESS, Alternator
920	691656		SOLENOID, Starter
1054	280275		TIE, Cable
1059	698516		KIT, Screw/Washer -(Alternator)
1119	691183		SCREW -(Alternator)

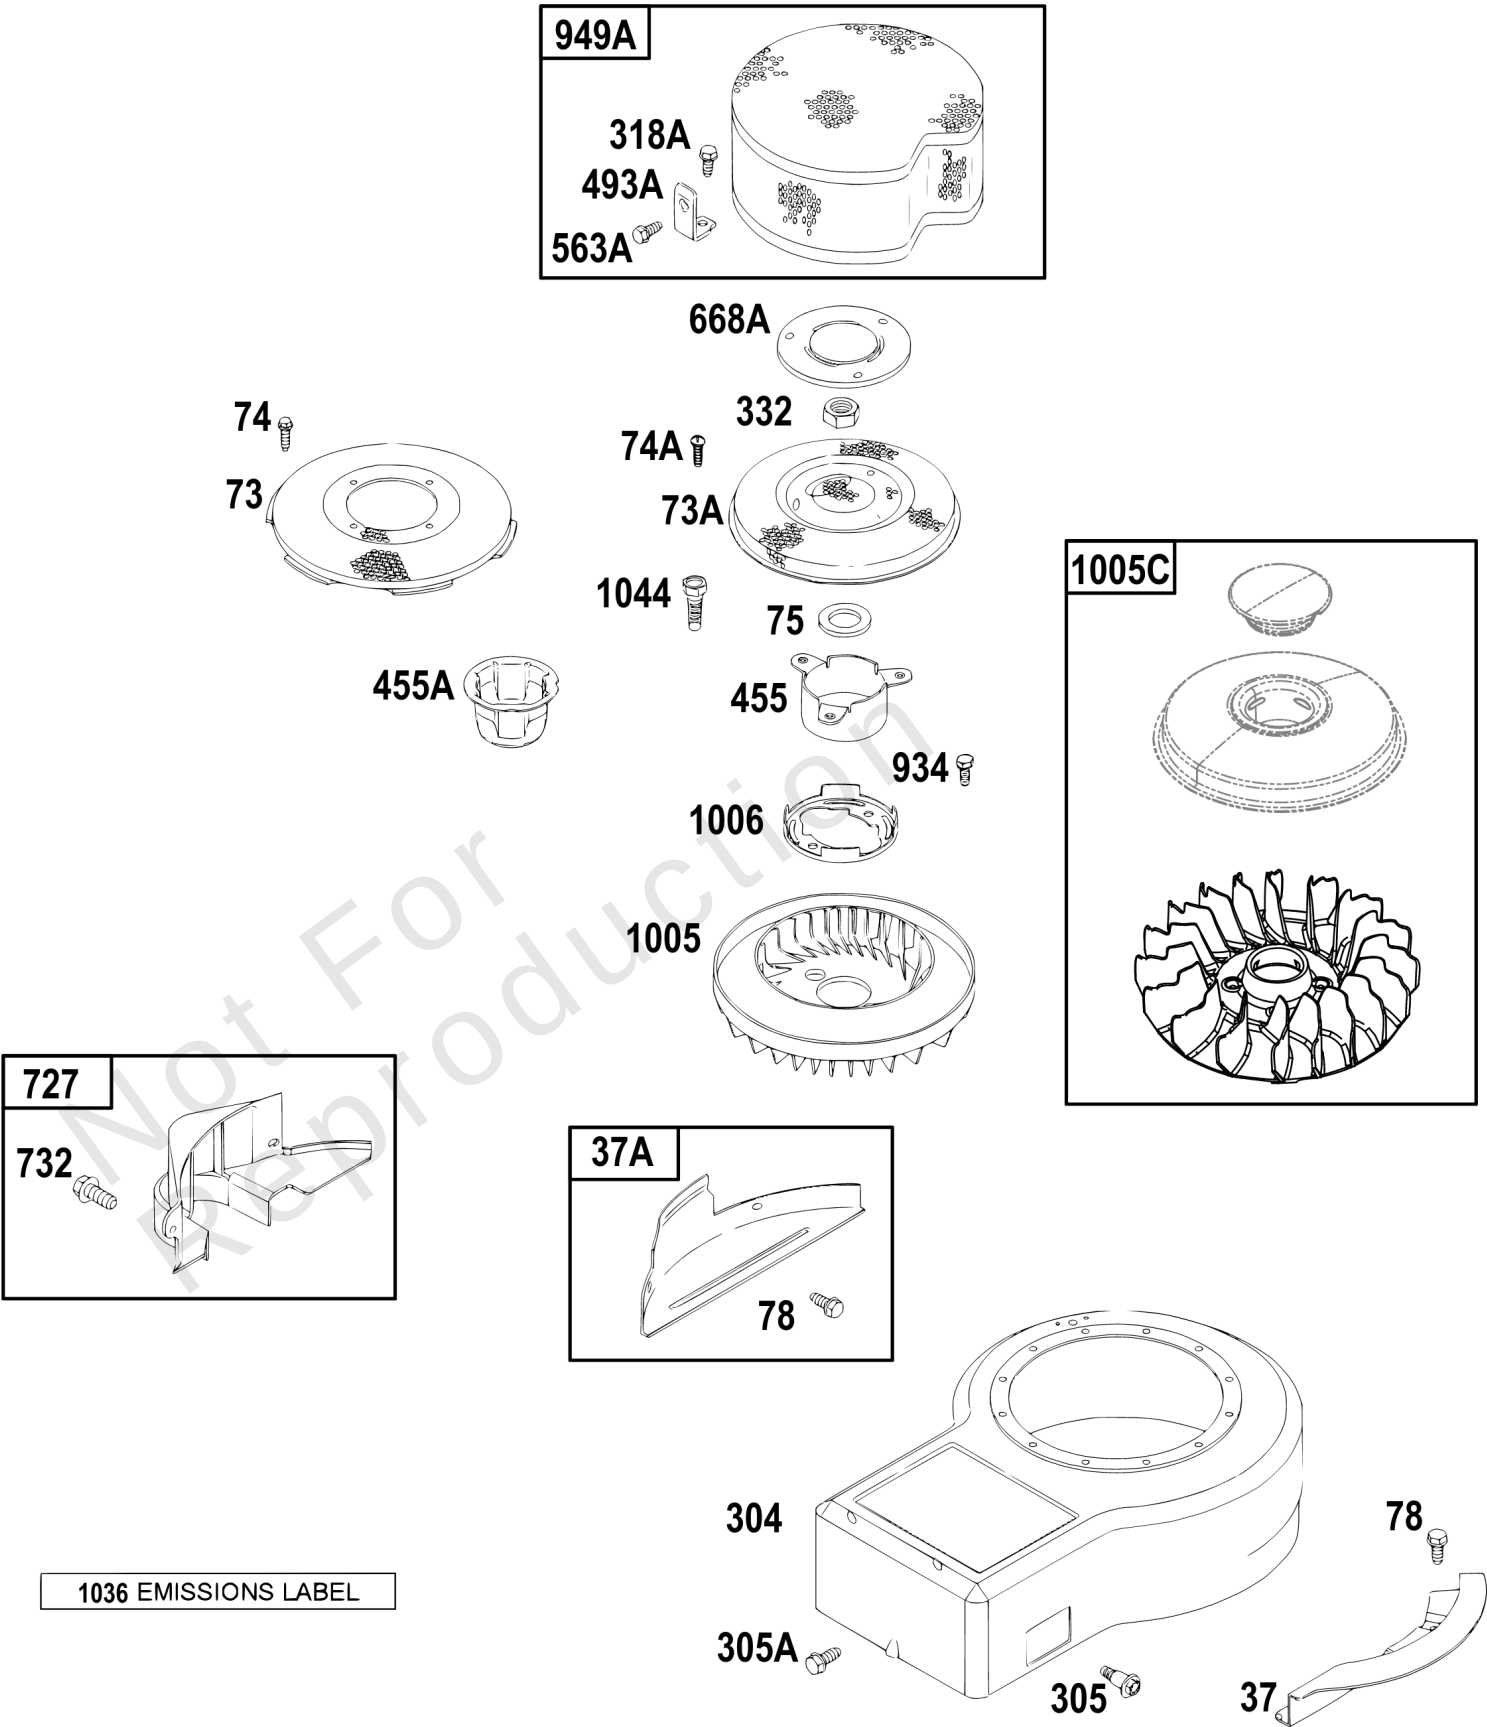 





Blower Housing, Rotating Screen

REF NO	PART NO	QTY	DESCRIPTION
37	690456		GUARD, Flywheel
73	691191		SCREEN-ROTATING
73A	691748		SCREEN-ROTATING
74	690345		SCREW -(Rotating Screen)
74A	691655		SCREW -(Rotating Screen)
75	690582		WASHER -(Flywheel)
78	690661		SCREW -(Flywheel Guard)
304	494268		HOUSING, Blower -(Red) -Used Before Code Date 93071900
305	692198		SCREW -(Blower Housing)
305A	692127		SCREW -(Blower Housing)
318A	691082		SCREW -(Mounting Bracket)
332	690662		NUT -(Flywheel)
455	691173		CUP, Flywheel
455A	695113		CUP, Flywheel
493A	692825		BRACKET-MOUNTING
563A	690370		SCREW -(Debris Screen Guard)
668A	691323		SPACER
727	490324		COVER, Starter Drive -(Includes Mounting Hardware)
732	691002		SCREW -(Starter Drive Cover)
934	691058		SCREW -(Fan Retainer)
949A	397530		GUARD, Debris Screen -(Rewind Starter)
1005	691905		FAN, Flywheel -Used Before Code Date 99102500
1005	794436		FAN, Flywheel -Used After Code Date 99102400
1005C	796201		FAN-FLYWHEEL -Used After Code Date 07040900
1006	690452		RETAINER, Fan
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1044	698139		SCREW -(Flywheel)

 NIKKI

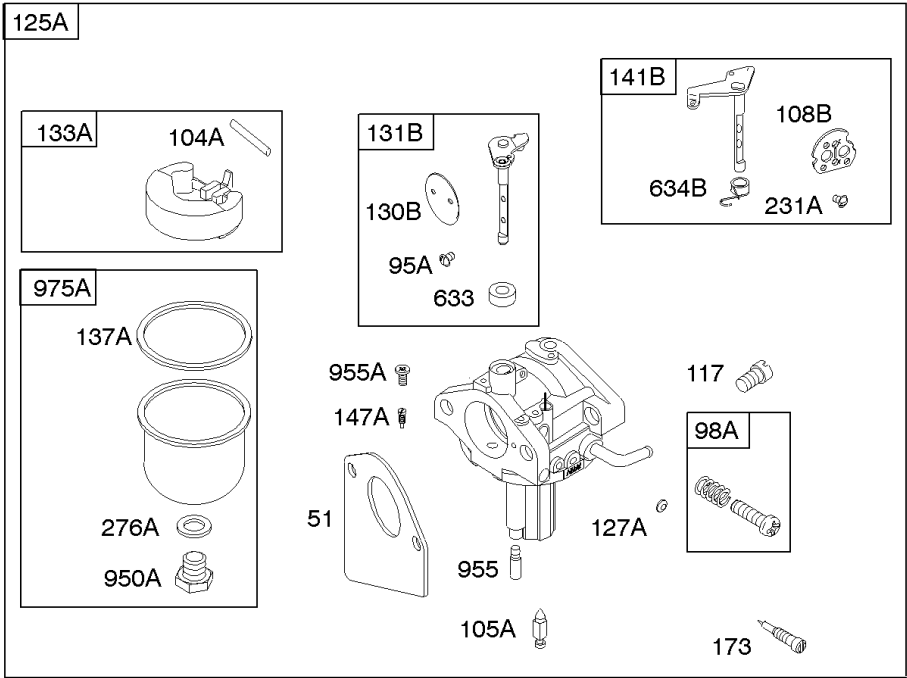


WALBRO

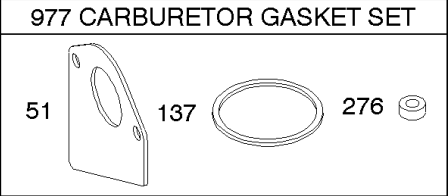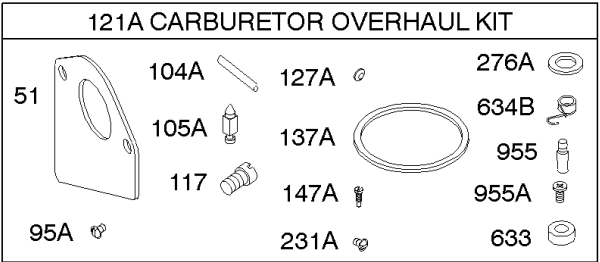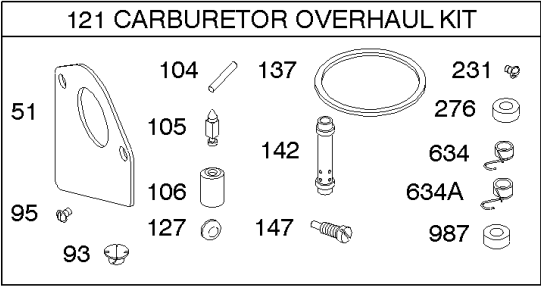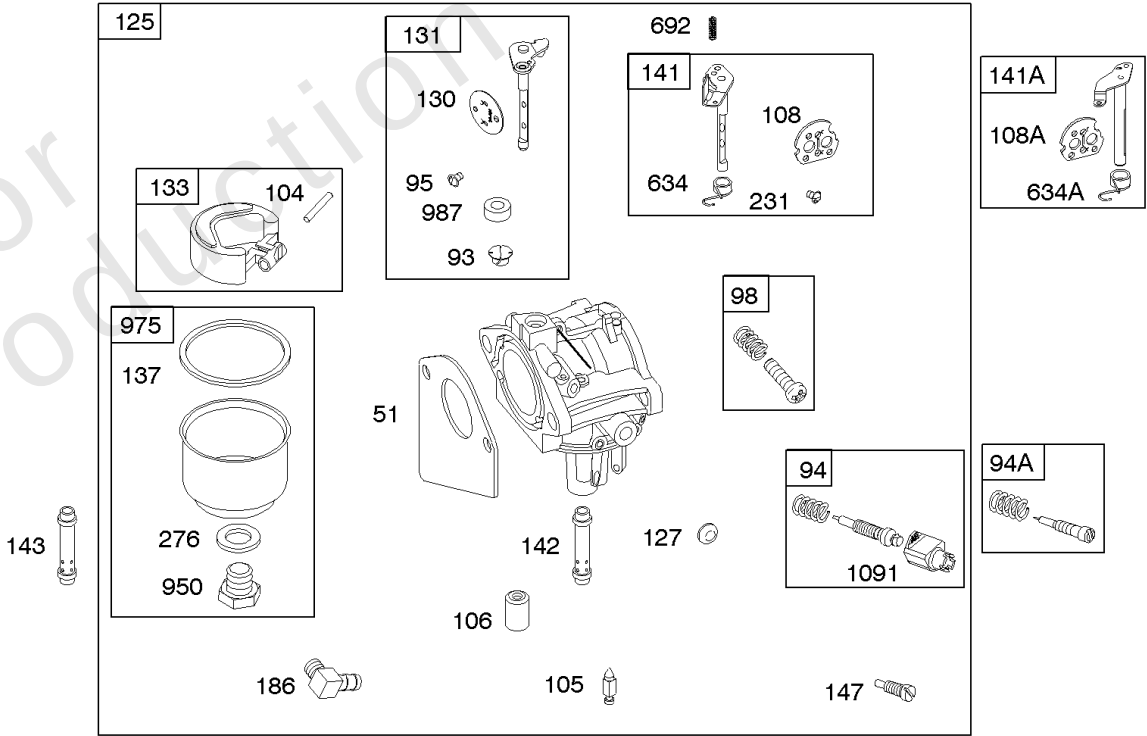    

WALBRO

 
NIKKI

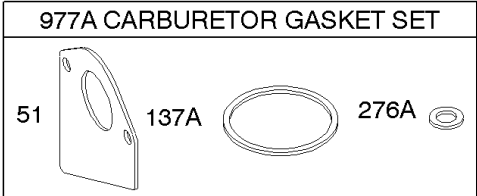





Carburetor, Carburetor Overhaul Kit

REF NO	PART NO	QTY	DESCRIPTION
51	692284		GASKET, Intake
93	690602		BUSHING, Throttle Shaft
94	498030		KIT, Idle Mixture -(Lmt 153154,155,156)
94A	494383		KIT, Idle Mixture -(Lmt 71,101,102,113,114,116)
95	691636		SCREW -(Throttle Valve)
95A	690718		SCREW -(Throttle Valve)
98	495800		KIT, Idle Speed -(Idle Speed) (Lmt 54, 55, 91)
98A	694907		KIT, Idle Speed
104	690525		PIN, Float Hinge
104A	694918		PIN, Float Hinge
105	231855S		VALVE-FLOAT NEEDLE
105A	696136		VALVE, Float Needle
106	691780		SEAT, Inlet -(Pump Feed Carburetor) -Used After Code Date 92071900
106	690577		SEAT, Inlet -(Gravity Feed Carburetor) -Used After Code Date 92071900
106	691901		SEAT, Inlet -(Gravity Feed Carburetor) -Used Before Code Date 92072000
108	690467		VALVE, Choke
108A	692344		VALVE, Choke
108B	694923		VALVE, Choke
117	690880		JET, Main -(Standard)
121	497535		KIT, Carburetor Overhaul -(LMT 1, 2, 3, 7, 37, 77, 157, 161)
121	499220		KIT, Carburetor Overhaul -(LMT 92, 93, 94, 95, 96, 108, 111, 162, 165, 169)
121	499231		KIT, Carburetor Overhaul -(LMT 97, 99, 133, 135, 136, 157, 158, 159, 160, 166, 168)
121	697884		KIT, Carburetor Overhaul -(696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)
121	497481		KIT, Carburetor Overhaul -(LMT 63, 65, 66)
121A	694930		KIT, Carburetor Overhaul -(Nikki Carburetor)
125	498027		CARBURETOR -(Walbro) (Gravity Feed)
125	499158		CARBURETOR -(Walbro)(Pump Feed)
125	698171		CARBURETOR -(696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)
125A	699831		CARBURETOR -(Nikki Carburetor)
127	695005		PLUG, Welch
127	694524		PLUG, Welch -(696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)
127A	694916		PLUG, Welch
130	690468		VALVE, Throttle -(LMT 111, 169)
130B	691750		VALVE, Throttle

 NIKKI

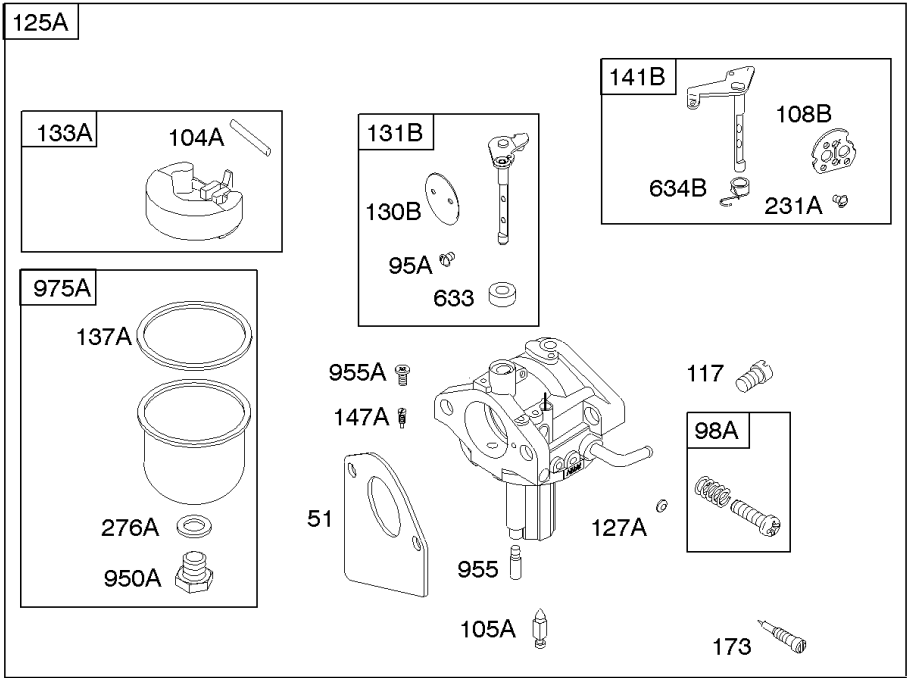


WALBRO

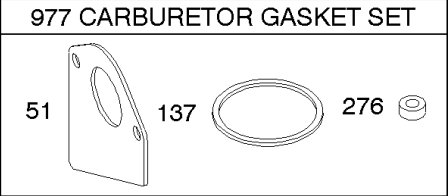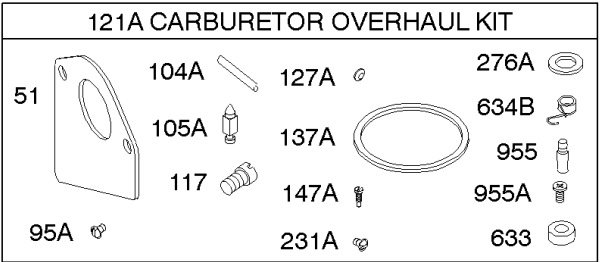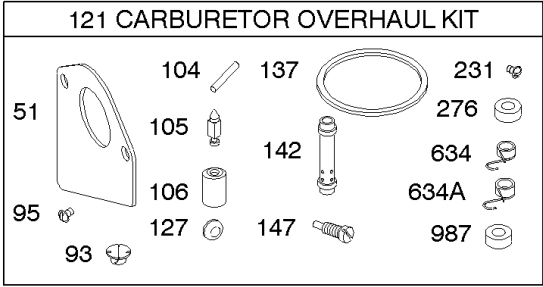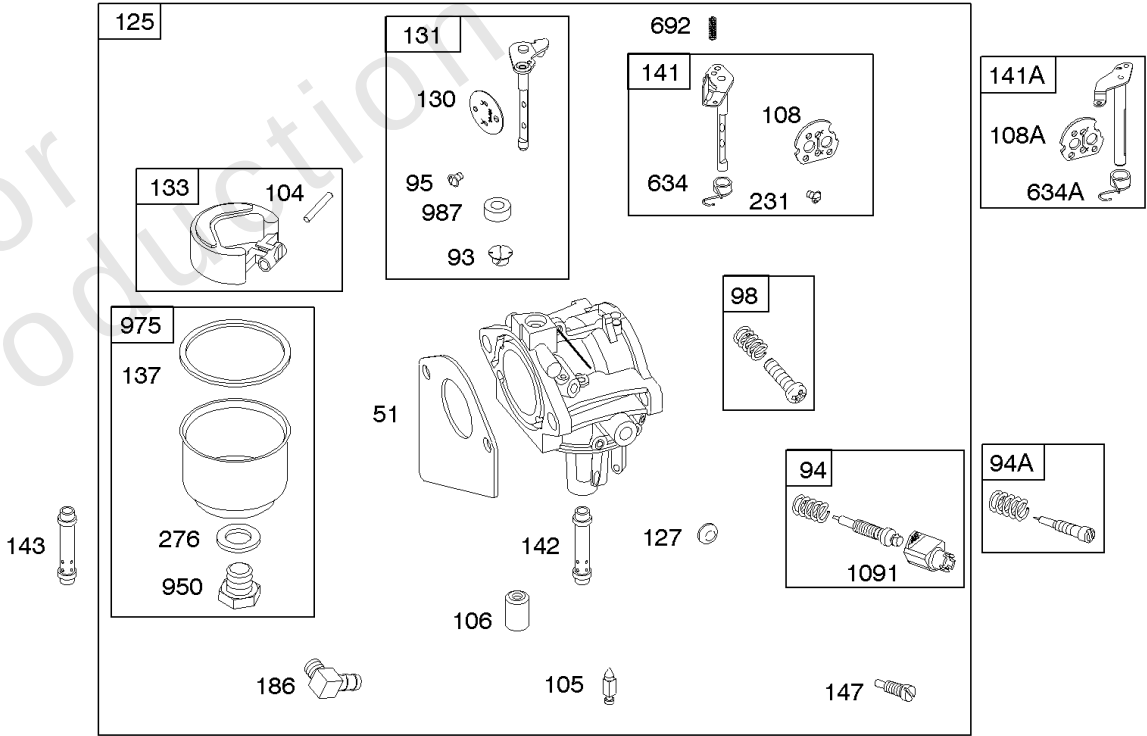    

WALBRO

 
NIKKI

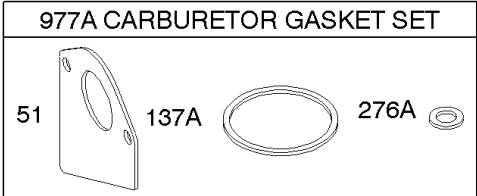





Carburetor, Carburetor Overhaul Kit

REF NO	PART NO	QTY	DESCRIPTION
131	790901		KIT, Throttle Shaft -(LMT 111, 169)
131B	694909		KIT, Throttle Shaft -(Nikki Carburetor)
133	494381		FLOAT, Carburetor
133A	694914		FLOAT, Carburetor
134	494788		KIT, Needle/Seat -(LMT 5, 6)
137	281165S		GASKET, Float Bowl
137A	694920		GASKET, Float Bowl
141	790905		KIT, Choke Shaft -(Manual Choke)
141A	790902		KIT, Choke Shaft -(Choke A Matic)
141B	694913		KIT, Choke Shaft
142	697592		NOZZLE, Carburetor -(696160, 696162, 696164, 696166, 697212, 697213, 697214, 697906)
142	497568		NOZZLE, Carburetor -(LMT 97, 99, 100)
142	497860		NOZZLE, Carburetor -(LMT 63, 65, 66, 108, 111, 133, 135, 136)
142	498545		NOZZLE, Carburetor -(LMT 108, 111)
142	499037		NOZZLE, Carburetor -(LMT 162, 165, 169)
142	499039		NOZZLE, Carburetor -(LMT 166, 167, 168)
142	691425		NOZZLE, Carburetor -(LMT 5, 6)
142	691434		NOZZLE, Carburetor -(LMT 92, 93, 94, 96)
143	498258		NOZZLE, Carburetor -(High Altitude) (LMT 63, 65, 66, 108, 111, 133, 135, 136)
143	499040		NOZZLE, Carburetor -(High Altitude) (LMT 166, 167, 168)
143	497567		NOZZLE, Carburetor -(High Altitude) (LMT 5, 6)
143	497737		NOZZLE, Carburetor -(High Altitude) (LMT 92, 93, 94, 96)
143	497970		NOZZLE, Carburetor -(High Altitude) (LMT 97, 99, 100)
147	497472		JET, Pilot -(LMT 1, 2, 3, 4, 5, 7, 37, 38, 39, 40, 41, 77, 78, 79, 80, 81)
147A	694927		JET, Pilot
173	694926		VALVE, Idle Mixture
186	692317		CONNECTOR-HOSE
231	691636		SCREW -(Choke Valve)
231A	690718		SCREW -(Choke Valve)
276	692255		WASHER, Sealing
276A	690997		WASHER, Sealing
633	695414		SEAL, Choke/Throttle Shaft
634	690801		SPRING/SEAL ASSEMBLY
634A	690802		SPRING/SEAL ASSEMBLY
634B	694912		SPRING/SEAL ASSEMBLY
692	690572		SPRING, Detent

 NIKKI

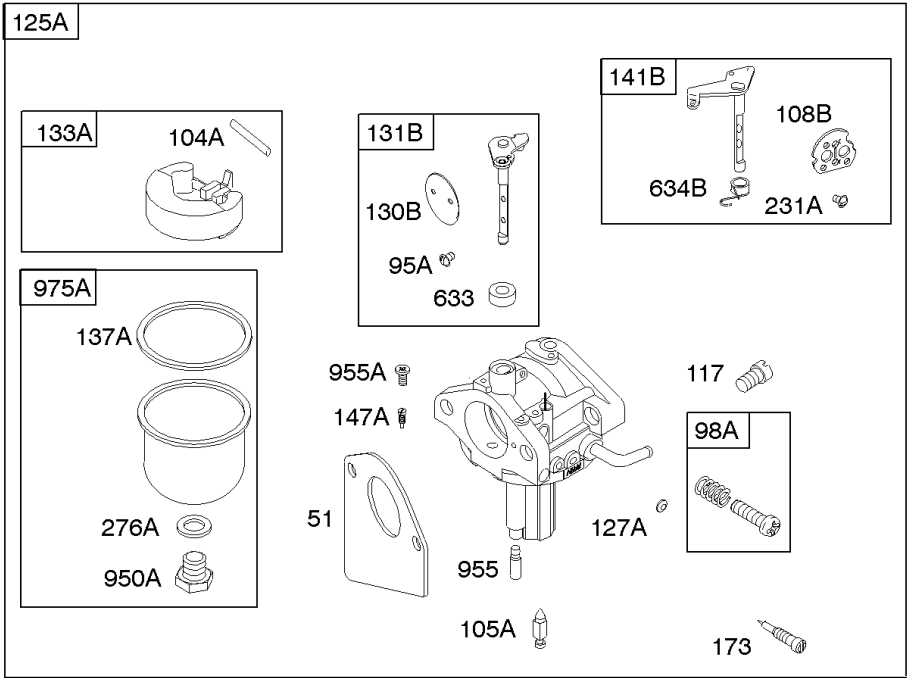


WALBRO

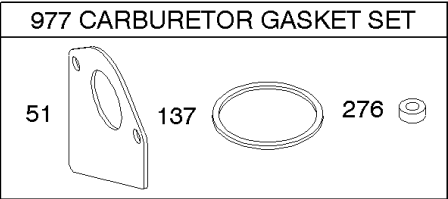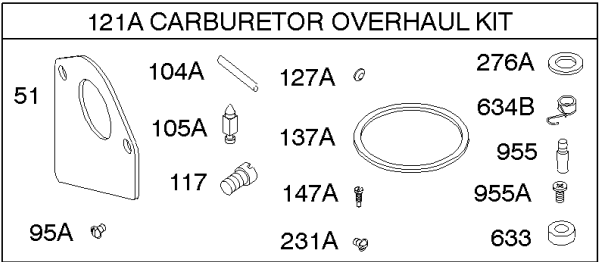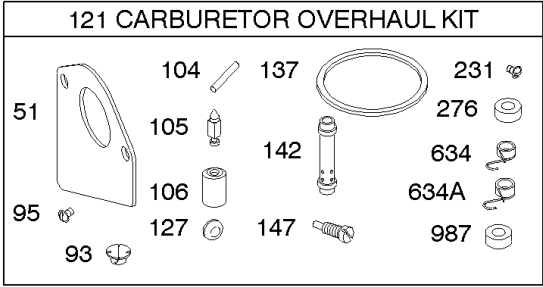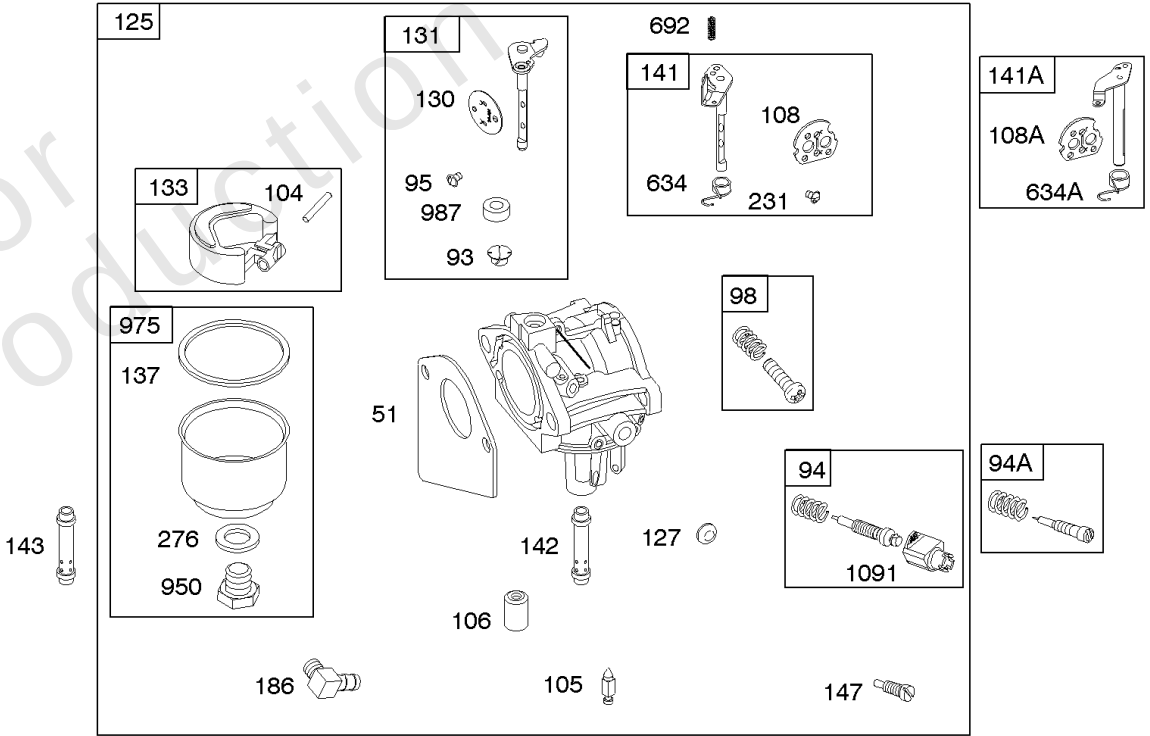    


WALBRO

 NIKKI

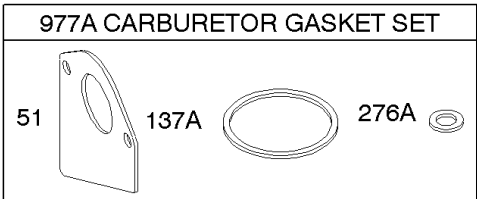


Carburetor, Carburetor Overhaul Kit

REF NO	PART NO	QTY	DESCRIPTION
950	691657		SCREW -(Float Bowl)
950A	694919		SCREW -(Float Bowl)
955	694924		PLUG, Carburetor -(Idle Chamber)
955A	694921		PLUG, Carburetor -(Pilot Jet)
975	495933		BOWL, Float -(Float Bowl)
975A	694908		BOWL, Float
977	690192		SET, Carburetor Gasket
977A	694931		SET, Carburetor Gasket
987	691326		SEAL, Choke/Throttle Shaft
1091	691333		CAP, Limiter

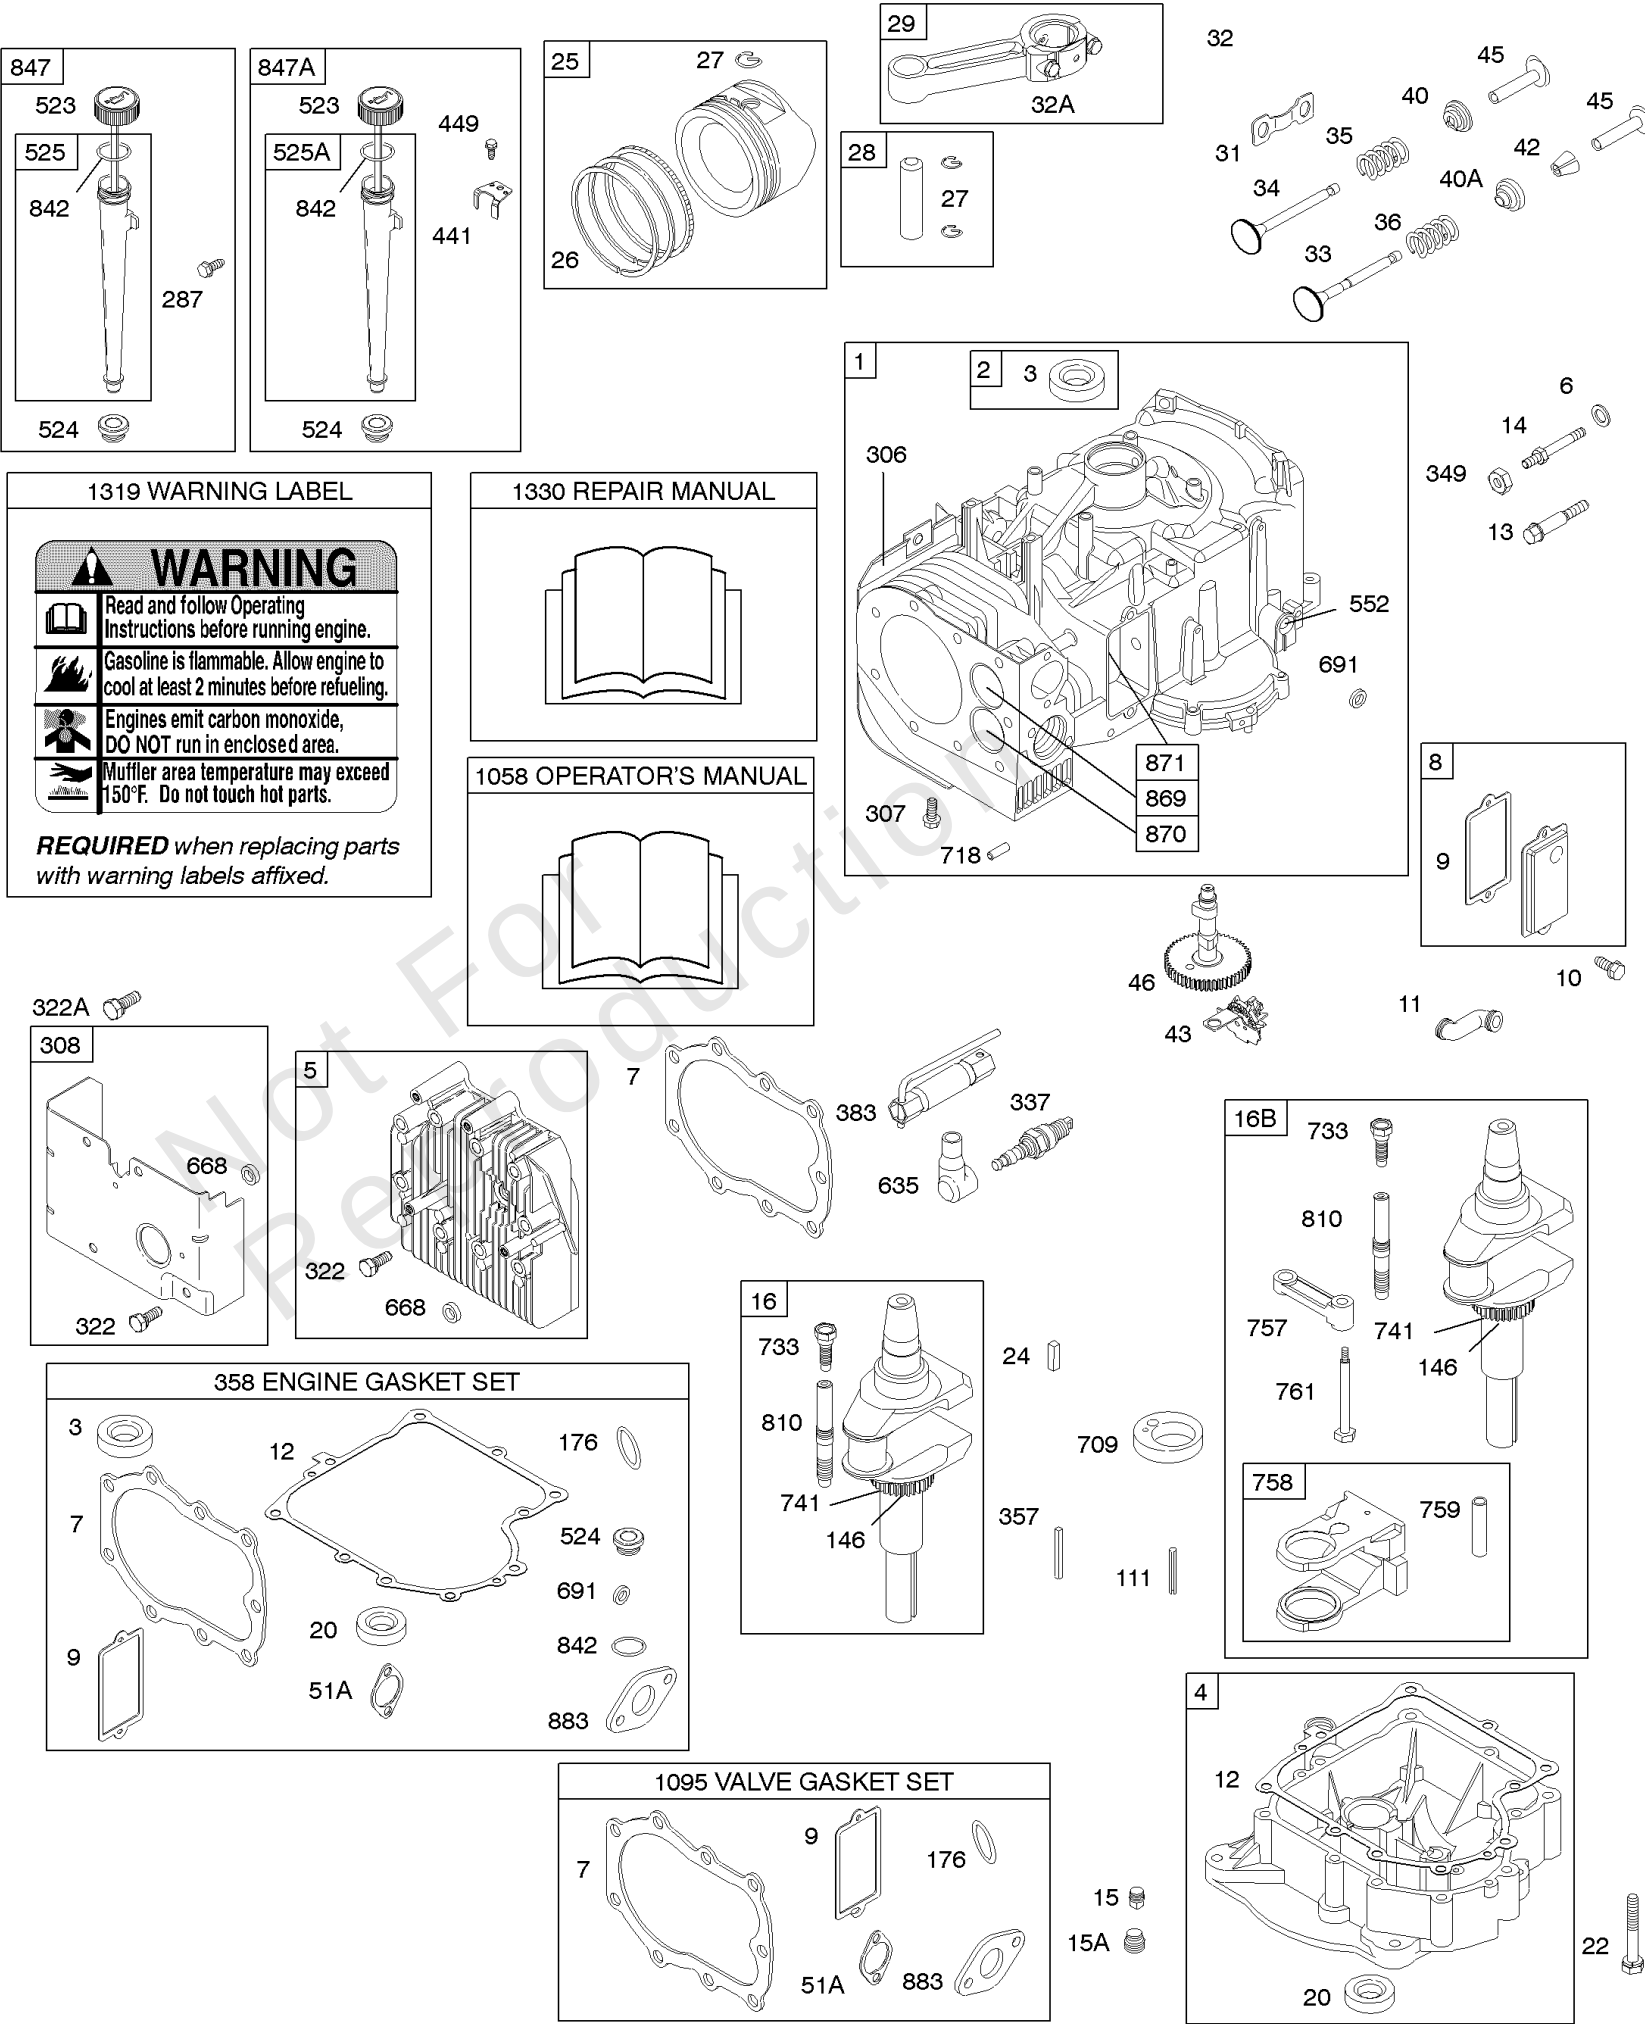 


Crankcase Cover/Sump, Engine Gasket Set, Cylinder, Oil, Valve Gasket Set, Crankshaft,

REF NO	PART NO	QTY	DESCRIPTION
1	496413		CYLINDER ASSEMBLY
2	399265		KIT, Bushing/Seal -(Magneto Side)
3	391086S		SEAL, Oil -(Magneto Side)
4	494238		SUMP, Engine
5	494240		HEAD, Cylinder
6	691261		WASHER -(Cylinder Head)
7	271866S		GASKET, Cylinder Head
8	495735		BREATHER ASSEMBLY
9	27803S		GASKET, Breather
10	691666		SCREW -(Breather Assembly)
11	692253		TUBE, Breather
12	692406		GASKET, Crankcase -(.005)
12	692226		GASKET, Crankcase -(.015)(Standard)
12	692405		GASKET, Crankcase -(.009)
13	690904		SCREW -(Cylinder Head)
14	691690		STUD -(Cylinder Head) (Used In Positions 5 And 6)
15	690946		PLUG, Oil Drain
15A	691680		PLUG, Oil Drain
16	693944		CRANKSHAFT -Used After Code Date 95080200
16B	693653		CRANKSHAFT -Used Before Code Date 95080100
20	291675S		SEAL, Oil -(PTO Side)
22	692125		SCREW -(Crankcase Cover/Sump)
24	222698S		KEY, Flywheel
25	499284		PISTON ASSEMBLY -(Standard) -Used Before Code Date 01060700
25	499292		PISTON ASSEMBLY -(.020 Oversize) -Used Before Code Date 01060700
25	696397		PISTON ASSEMBLY -(Standard) -Used After Code Date 01060600
25	696399		PISTON ASSEMBLY -(.020 Oversize) -Used After Code Date 01060600
25	696400		PISTON ASSEMBLY -(.030 Oversize) -Used After Code Date 01060600
26	392331		SET, Ring -(Standard)(Chrome) -Used Before Code Date 01060700
26	499996		SET, Ring -(Standard) -Used Before Code Date 01060700
26	499998		SET, Ring -(.020 Oversize) -Used Before Code Date 01060700

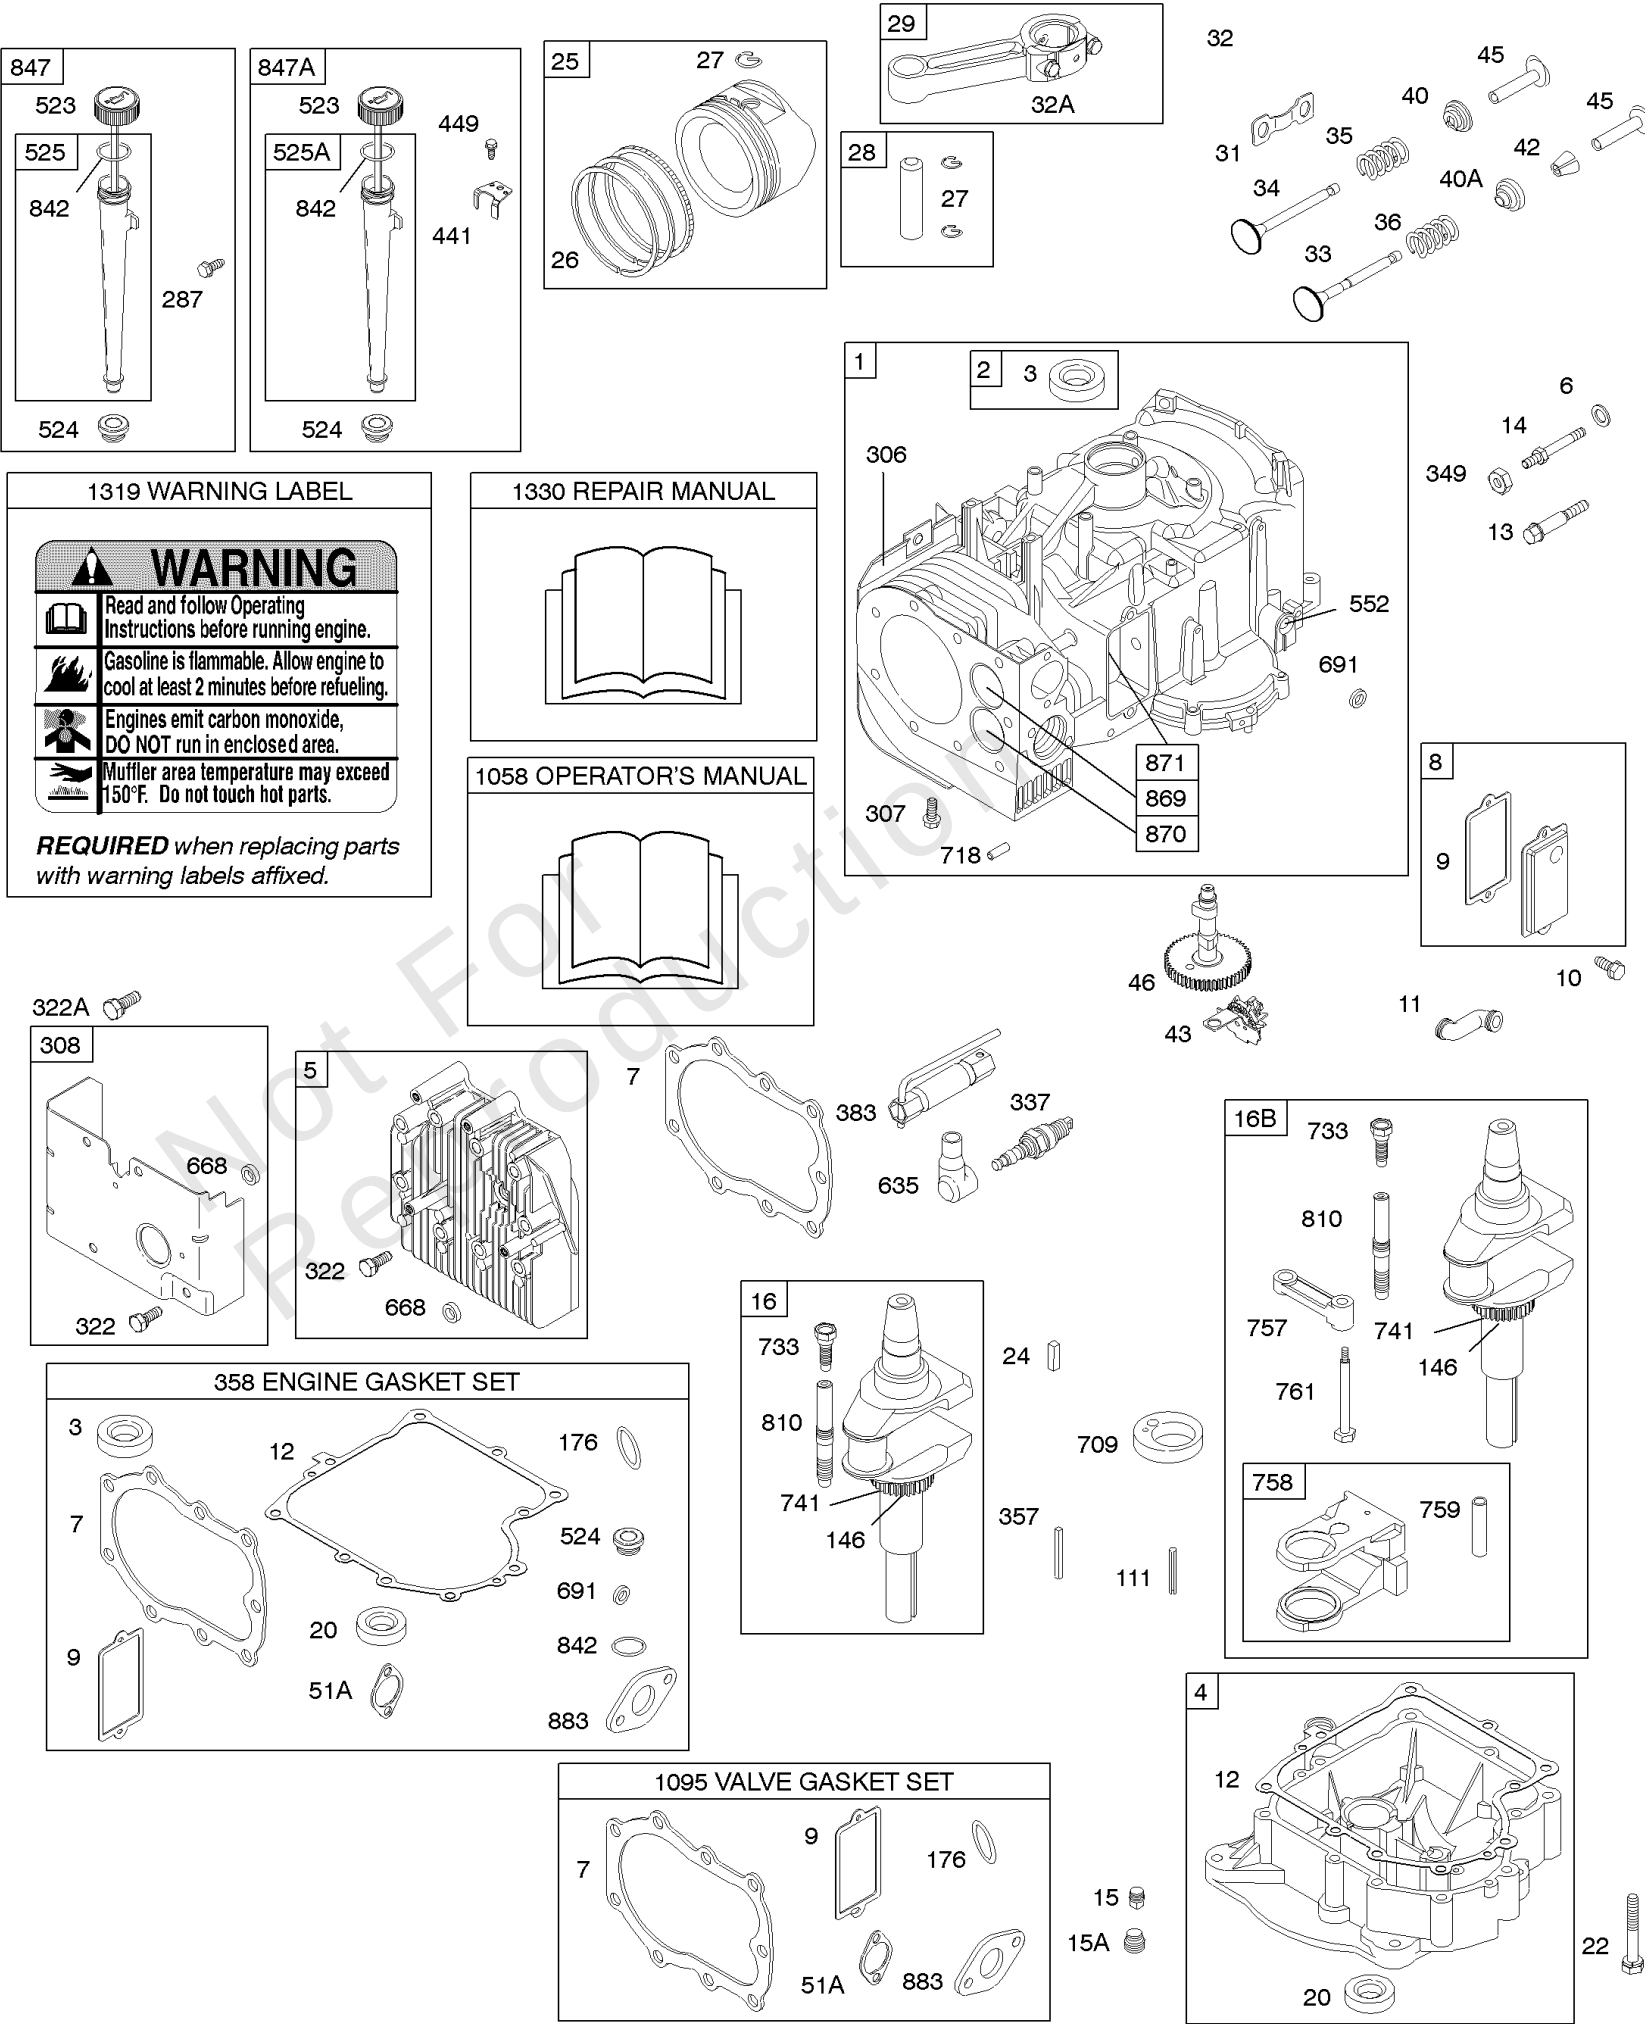 






Crankcase Cover/Sump, Engine Gasket Set, Cylinder, Oil, Valve Gasket Set, Crankshaft,

REF NO	PART NO	QTY	DESCRIPTION
26	696403		SET, Ring -(Standard) -Used After Code Date 01060600
26	696405		SET, Ring -(.020 Oversize) -Used After Code Date 01060600
27	691299		LOCK, Piston Pin -Used After Code Date 95101500
27	691792		LOCK, Piston Pin -Used Before Code Date 95101600
28	299691		PIN, Piston -(Standard) -Used Before Code Date 95101600
28	498319		PIN, Piston -(Standard) -Used After Code Date 95101500
28	498320		PIN, Piston -(.005 Oversize) -Used After Code Date 95101500
29	494504S		ROD, Connecting -(Standard)
29	495490		ROD, Connecting -(.020 Undersize)
31	222299		LOCK, Rod Screw
32	690356		SCREW -(Connecting Rod) (1 7/8)
32A	690348		SCREW -(Connecting Rod) (1 5/8)
33	262246S		VALVE, Exhaust
34	262247S		VALVE, Intake
35	691605		SPRING, Valve -(Intake)
36	691597		SPRING, Valve -(Exhaust)
40	690656		RETAINER, Valve -(Intake)
40A	691939		RETAINER, Valve -(Exhaust)
42	494553		KEEPER, Valve -(Exhaust)
43	691968		SLINGER, Governor/Oil
45	691811		TAPPET, Valve
46	697668		CAMSHAFT
51A	272554S		GASKET, Intake
111	691679		PIN, Retainer
146	691639		KEY, Woodruff
176	691917		SEAL, O-Ring -(Air Cleaner Base)
287	691002		SCREW -(Dipstick Tube)
306	698477		SHIELD-CYLINDER
307	691003		SCREW -(Cylinder Shield)
308	698476		COVER, Cylinder Head
322	692198		SCREW -(Cylinder Head Cover)
322A	691681		SCREW -(Cylinder Head Cover)
337	802592S		PLUG, Spark -(Resistor)

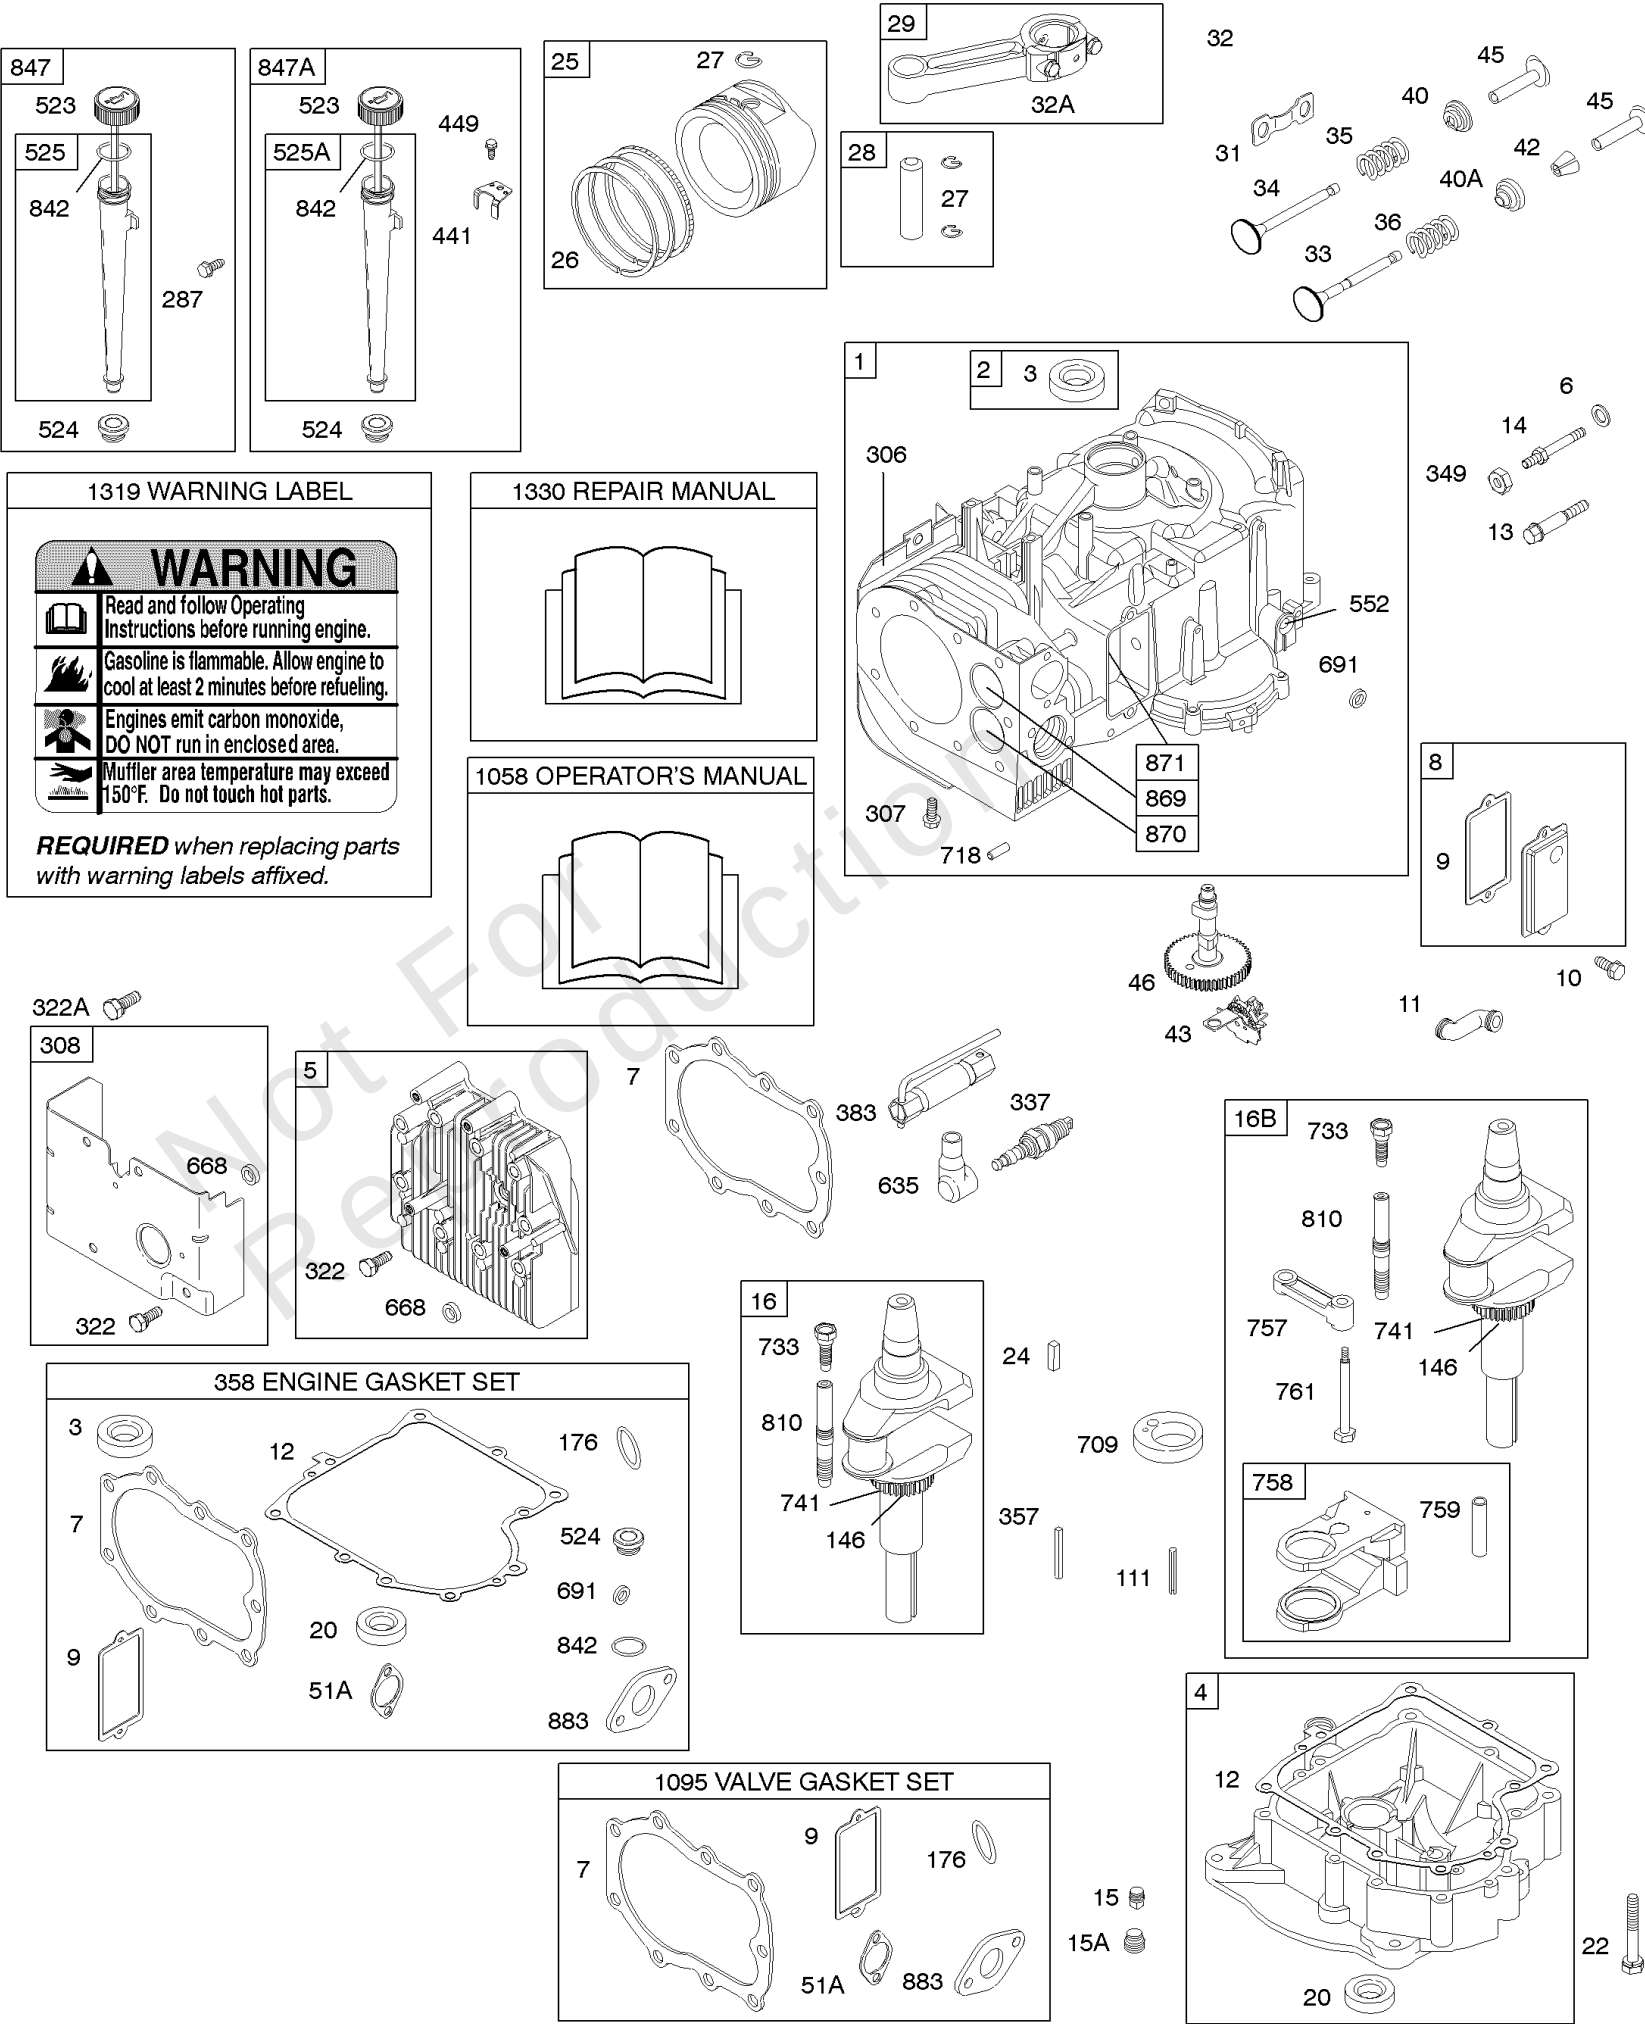 

Crankcase Cover/Sump, Engine Gasket Set, Cylinder, Oil, Valve Gasket Set, Crankshaft,






REF NO	PART NO	QTY	DESCRIPTION
349	691105		LOCKNUT -(Cylinder Head Cover)
357	691483		KEY, Drive Pulley
358	494241		GASKET SET, Engine
383	89838S		WRENCH, Spark Plug
441	224390		BRACKET, Oil Fill
449	691678		SCREW -(Oil Fill Bracket)
523	692014		DIPSTICK
524	281370S		SEAL, Dipstick Tube -(Dipstick Tube)
525	691398		TUBE, Dipstick
525A	495768		TUBE, Dipstick
552	491986		BUSHING, Governor Crank -(1/4 I.D.)
635	66538S		BOOT, Spark PLug
668	690510		SPACER
691	692407		SEAL, Governor Shaft
709	262243		ECCENTRIC
718	690959		PIN, Locating
733	698139		SCREW -(Crankshaft Extension)
741	691284		GEAR, Timing
757	691714		LINK, Counterweight -(-Used After Code Date 78100411)
758	692423		COUNTERWEIGHT
759	691239		PIN, Counterweight
761	691096		SCREW -(Counterweight)
810	691779		EXTENSION, Crankshaft
842	691870		SEAL, O-Ring -(Dipstick Tube)
847	496415		DIPSTICK/TUBE ASSEMBLY
847A	490474		DIPSTICK/TUBE ASSEMBLY
869	691802		SEAT, Valve -(Intake)
870	691844		SEAT-VALVE -(Exhaust)
871	261961		BUSHING, Valve Guide -(Exhaust)
871	231218		BUSHING, Valve Guide -(Brass)
883	692236		GASKET, Exhaust
1058	274787		MANUAL, Operator's
1095	498539		GASKET SET, Valve
1319	794467		LABEL, Warning
1330	270962		REP MAN-1 CYL L-HD

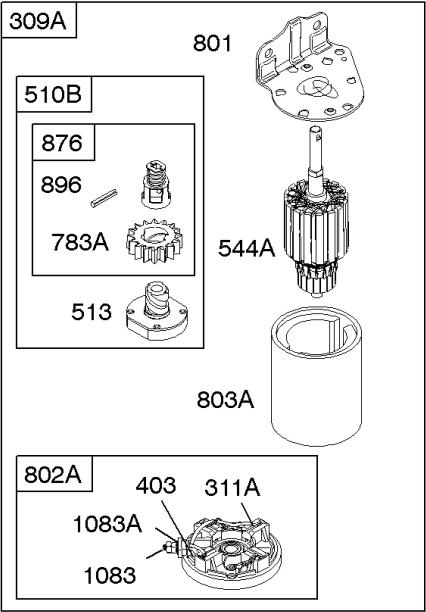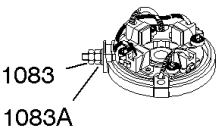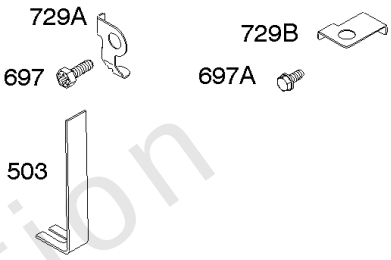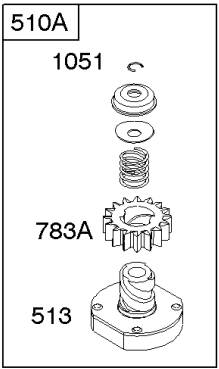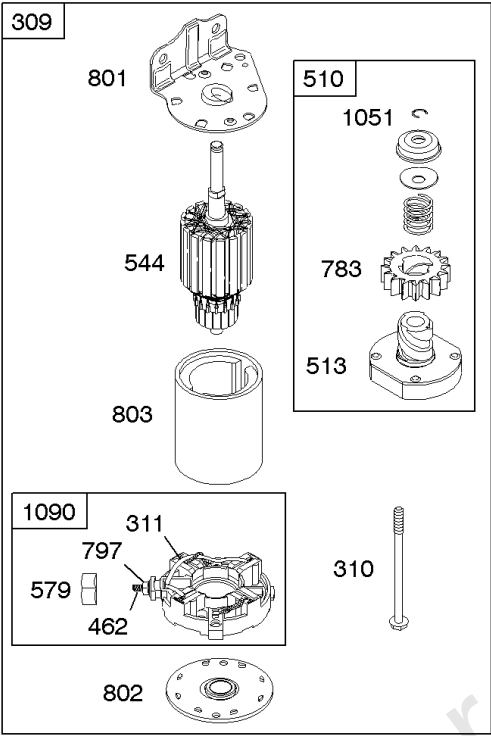     

NOTE: For Replacement Starter Motor, See Reference 309.

Electric Starters


REF NO	PART NO	QTY	DESCRIPTION
309	497595		MOTOR, Starter -(3 5/8) (Plastic Ring Gear)
309	499521		MOTOR, Starter -(4 3/8 Housing)
309	693551		MOTOR, Starter -(3 5/8 Housing Length For Steel Ring Gear Only)
309	693552		MOTOR, Starter -(4 3/8 Housing Length For Steel Ring Gear Only)
309A	-----		Motor-Starter -(For Replacement Starter Motor, See Reference 309, Previous Page)
310	690323		SCREW -(Starter Motor)
310	691263		BOLT -(Starter Motor) (4 3/8 Housing)
311	497608		SET, Brush
311A	395538		SET, Brush -(3 5/8 Housing)
403	690288		WASHER -(End Cap)
462	691261		WASHER -(Starter Cable)
503	691532		STRAP, Starter
510	693699		DRIVE, Starter -(Used With Steel Ring Gear)
510A	696541		DRIVE, Starter -(Used With Aluminum And Plastic Ring Gears)
510B	696540		DRIVE, Starter
513	692024		CLUTCH, Drive
544	692034		ARMATURE, Starter -(3 5/8 Housing)
544A	490309		ARMATURE, Starter -(4 3/8 Housing)
544A	390837		ARMATURE, Starter -(3 5/8 Housing)
579	691029		NUT -(Starter Cable)
697	690372		SCREW -(Starter Motor) (Drive Cap)
697A	691058		SCREW -(Starter Motor) (Drive Cap)
729A	691224		CLIP, Wire
729B	224723		CLIP, Wire
783	693713		GEAR, Pinion -(DC)(10-16 AMP)
783A	695708		GEAR-PINION
797	693167		NUT -(Brush Retainer)
801	691283		CAP, Drive
802	691286		CAP, End
802A	395537		CAP, End -(3 5/8 Housing)
803	-----		Housing-Starter -(3 5/8" Housing Length)(Service with Corresponding Reference 309)
803	XX		Housing-Starter -(4 3/8" Housing Length)(Service with Corresponding Reference 309)
803A	398159		HOUSING, Starter -(3 5/8 Housing)
803A	494205		HOUSING, Starter -(4 3/8 Housing)

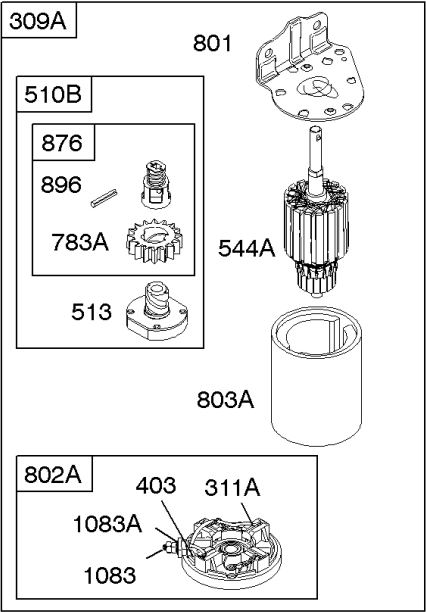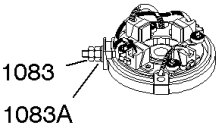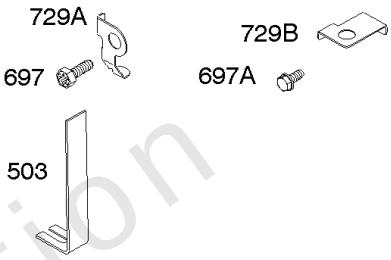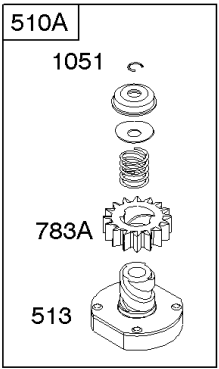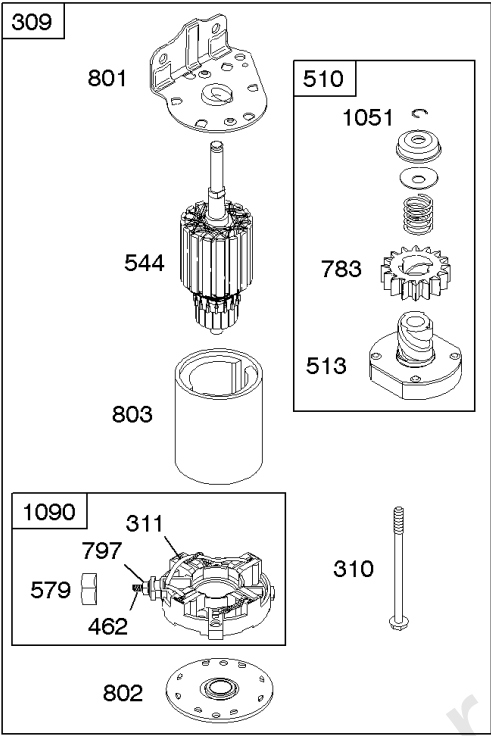     

NOTE: For Replacement Starter Motor, See Reference 309.


Electric Starters

REF NO	PART NO	QTY	DESCRIPTION
876	696539		KIT, Pinion Spring
896	691641		PIN, Drive Retainer
1051	691265		RING, Retaining
1083	691626		NUT -(End Cap)
1083A	690958		NUT -(End Cap) (Serrated)
1090	691293		RETAINER, Brush

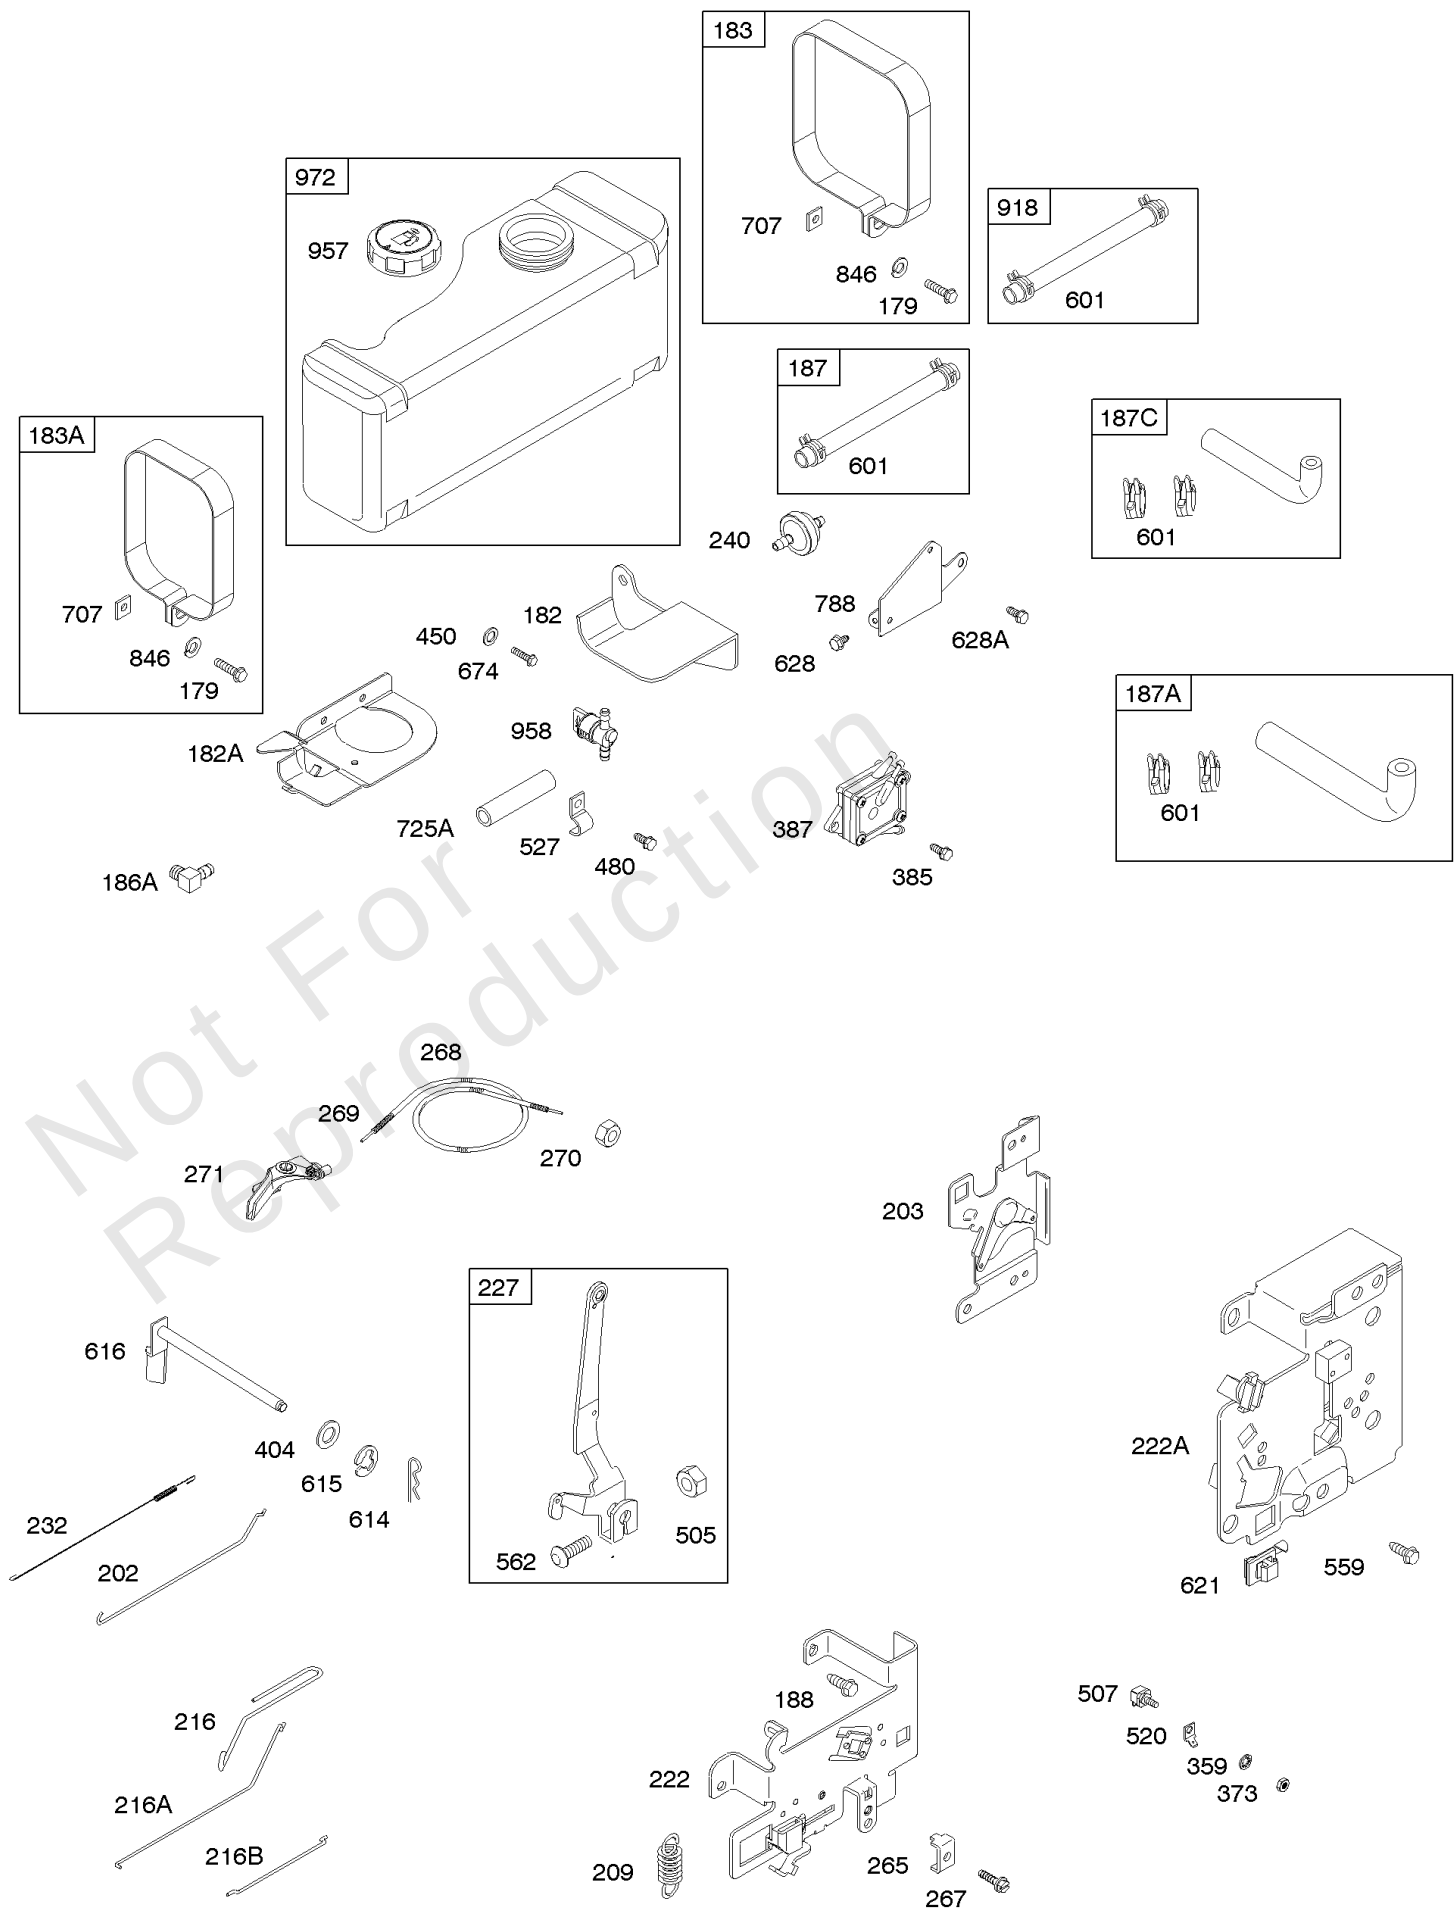 

Fuel, Brackets, Controls, Springs

REF NO	PART NO	QTY	DESCRIPTION
179	692331		SCREW -(Fuel Tank Strap)
182	690443		BRACKET-FUEL TANK -(Right Hand)
182A	692535		BRACKET-FUEL TANK -(Left Hand)
183	698459		STRAP-FUEL TANK -(Right Hand)
183A	692030		STRAP-FUEL TANK -(Left Hand)
186A	691609		CONNECTOR, Hose
187	791766		LINE, Fuel -(Cut To Required Length)
187A	791806		LINE, Fuel -(Formed)(21)(Cut To Required Length)
187C	697907		LINE, Fuel -(Formed)(Cut To Required Length)
188	691693		SCREW -(Control Bracket)
202	691841		LINK, Mechanical Governor
203	691381		CRANK, Bell
209	690480		SPRING, Governor -(Red)
216	691840		LINK, Choke
216A	690574		LINK, Choke
216B	691281		LINK, Choke
222	694042		BRACKET, Control
222A	692002		BRACKET, Control
227	691374		LEVER, Governor Control
232	691842		SPRING, Governor Link
240	298090S		FILTER, Fuel -(Red)
240	394358S		FILTER, Fuel -(White)
265	691024		CLAMP, Casing
267	690804		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
359	691077		WASHER -(Ground Terminal)
373	691612		NUT -(Ground Terminal)
385	692198		SCREW -(Fuel Pump)
387	808656		PUMP, Fuel
404	691691		WASHER -(Governor Crank)
450	690259		WASHER -(Fuel Tank Bracket)
480	690664		SCREW -(Tube Clamp)
505	691251		NUT -(Governor Control Lever)





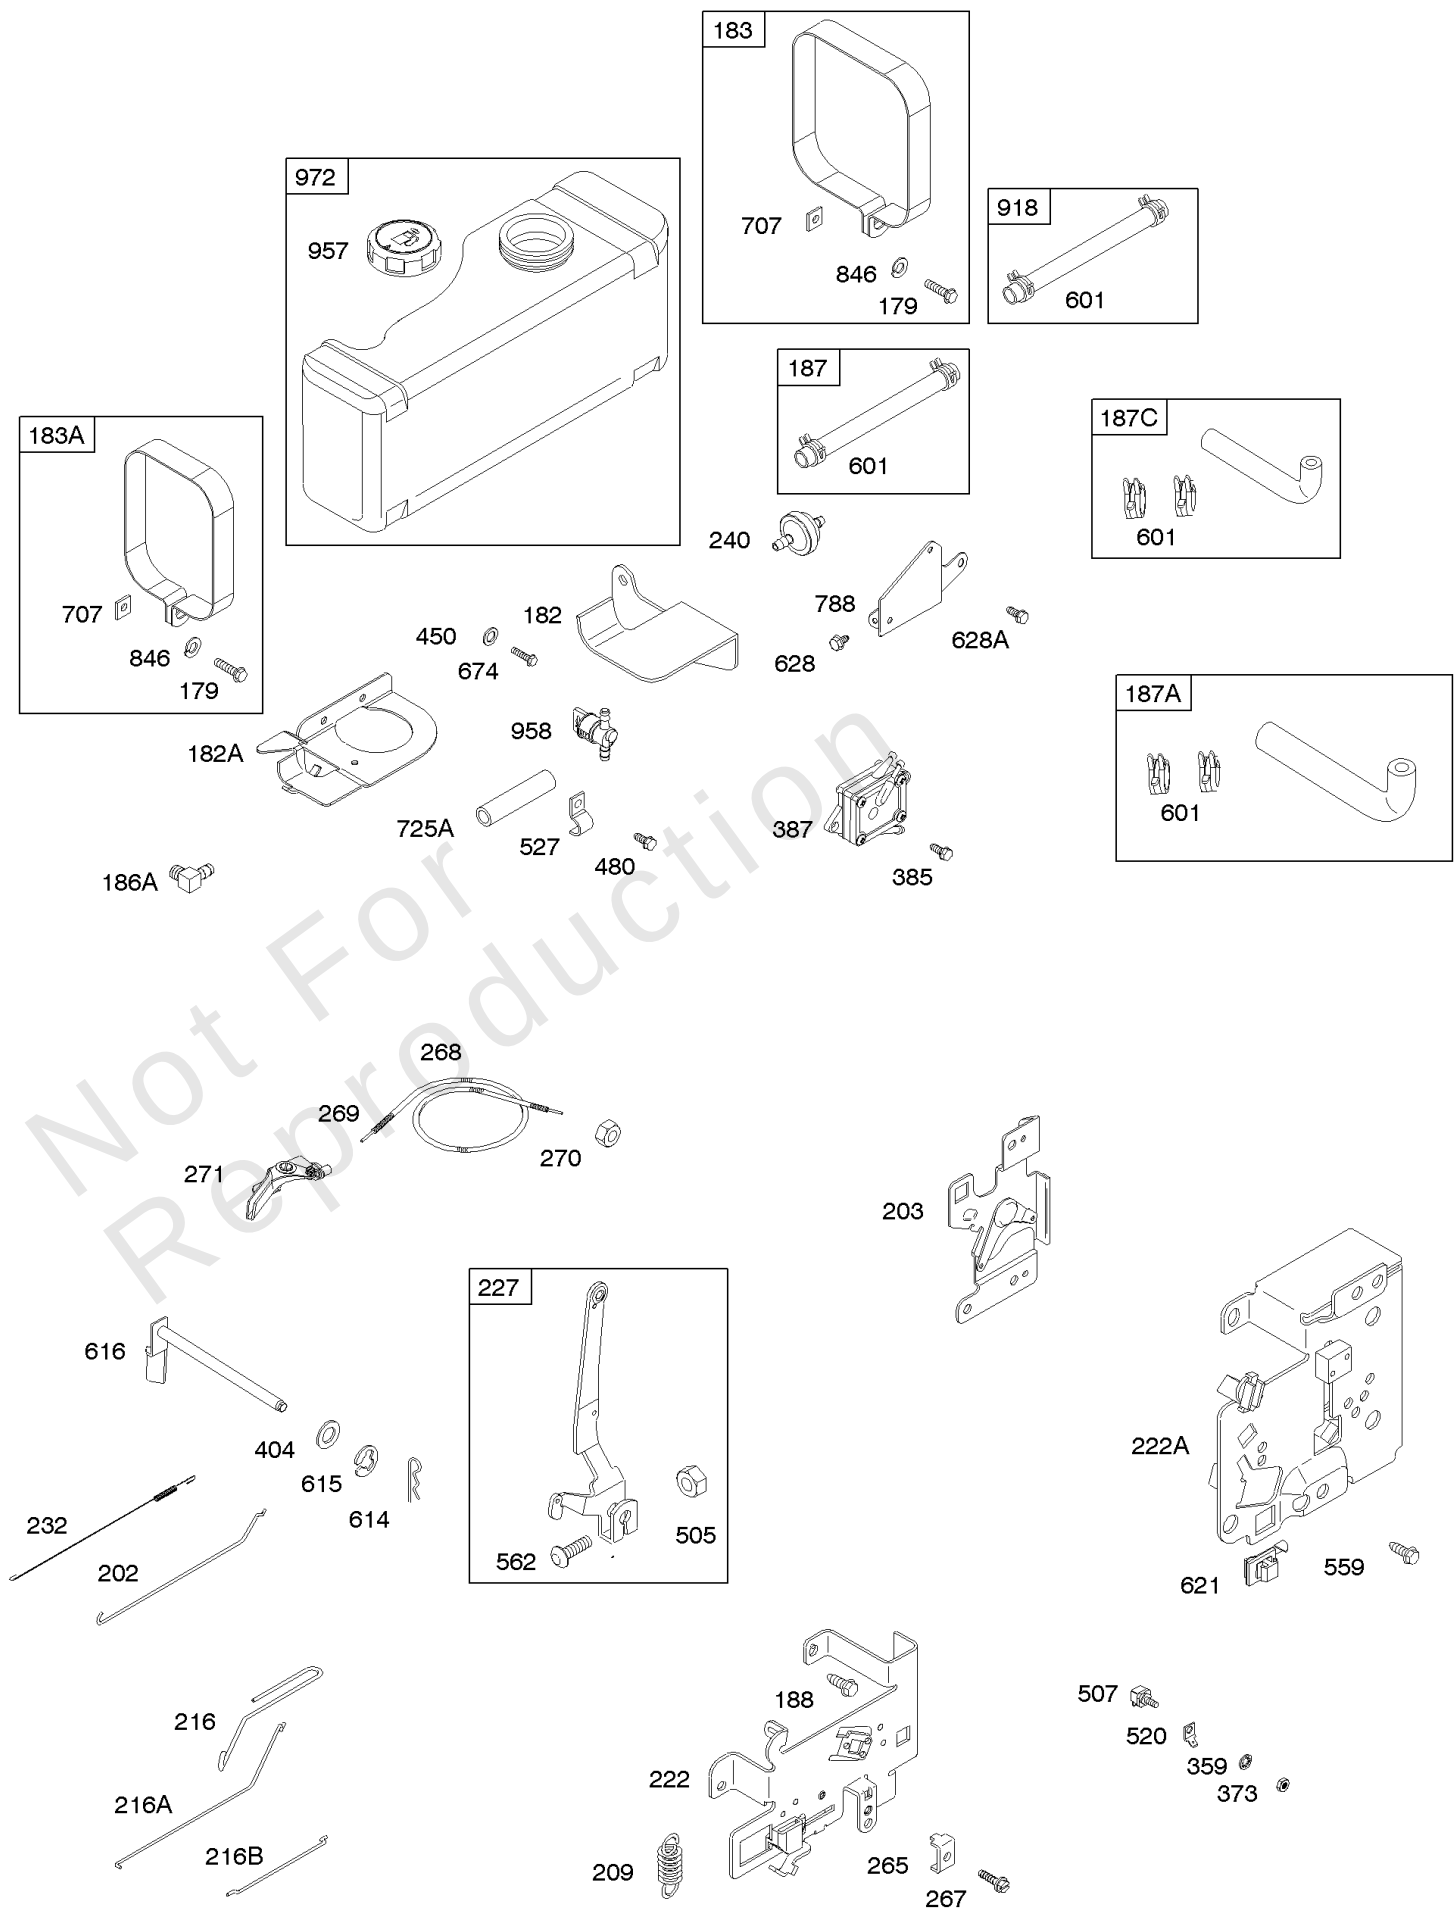 


Fuel, Brackets, Controls, Springs

REF NO	PART NO	QTY	DESCRIPTION
507	691972		INSULATOR
520	691084		TERMINAL, Ground
527	690394		CLAMP, Hose
559	690661		SCREW -(Remote Choke Stop)
562	691119		BOLT -(Governor Control Lever)
601	791850		CLAMP, Hose
614	691620		PIN, Cotter
615	93307		RETAINER, Governor Shaft
616	692012		CRANK, Governor
621	692310		SWITCH, Stop
628	690661		SCREW -(Fuel Pump Bracket) (13/32" Long)
628A	692198		SCREW -(Fuel Pump Bracket) (2 5/16)
674	691058		SCREW -(Fuel Tank Bracket)
707	690279		NUT -(Fuel Tank Strap)
725A	690403		SHIELD, Heat -(Fuel Line)
788	690458		BRACKET, Fuel Pump
846	690371		WASHER -(Fuel Tank Strap)
918	393815		HOSE, Vacuum -(Cylinder To Impulse Pump)(Cut To Required Length)
957	493988S		CAP, Fuel Tank -(Plastic)
958	698183		VALVE, Fuel Shut Off
972	390225		TANK, Fuel -(3 Quart Tank)

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	2199073026	1	Replacement Engine
	-----		Top No-Load Speed: 3300 -Trim: ALL
	-----		Service Note: If the replacement engine supersedes to or is a Model 210000 series engine, refer to the illustrations located after the conversion data for this model series. The overall dimensions which differ, are shown in the illustrations.
	-----		Service Note: If after making a visual inspection and it is determined the Model 210000 series engine cannot be used because of equipment interference, the original engine should be repaired with a short block and/or individual parts.

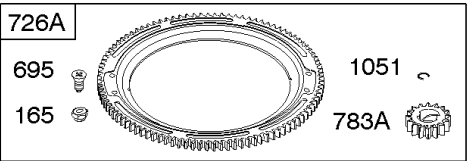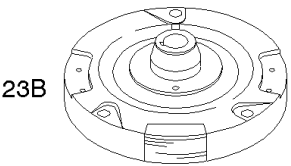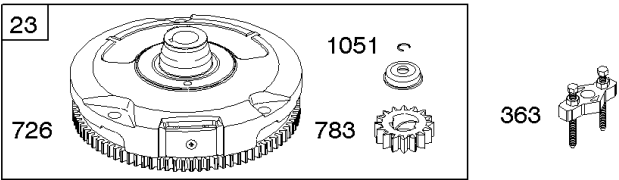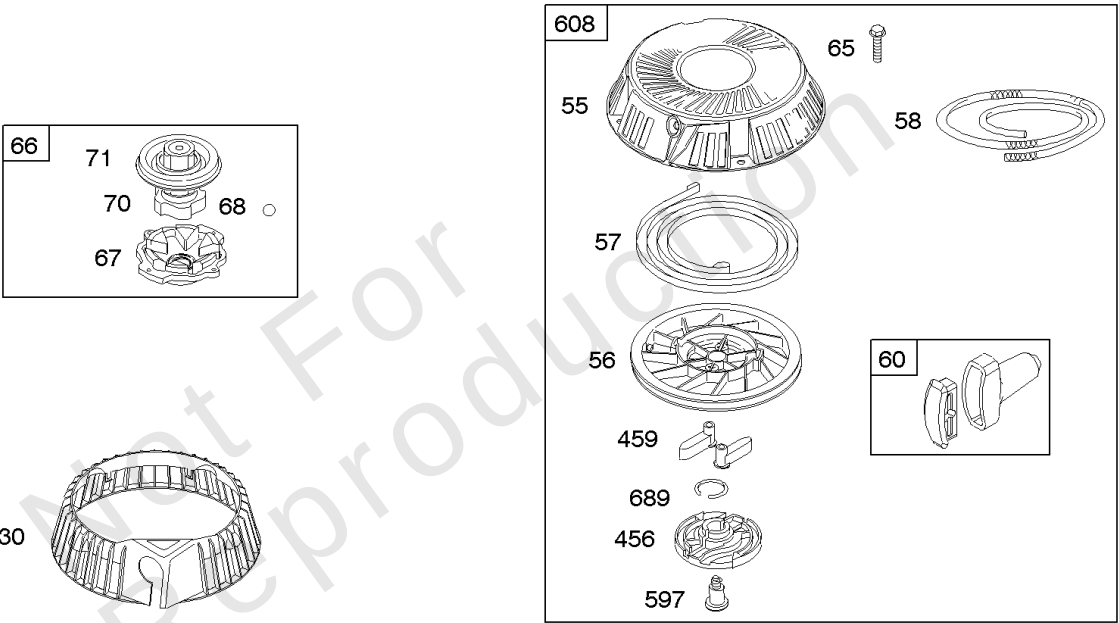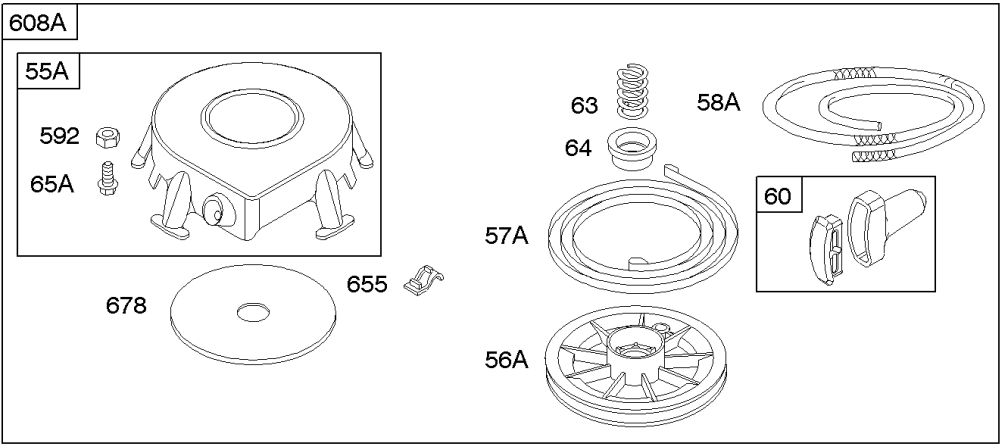     

Rewind Starter, Flywheel

REF NO	PART NO	QTY	DESCRIPTION
23	693557		FLYWHEEL -(Steel Ring Gear)
23B	693555		FLYWHEEL -(Rewind Starter)
55	695130		HOUSING, Rewind Starter
55A	393576		HOUSING, Rewind Starter
56	695129		PULLEY, Starter
56A	295871		PULLEY, Starter -(63 Rope)
57	695131		SPRING, Rewind Starter
57A	490179		SPRING-REWIND STR
58	695132		ROPE, Starter -(59" Long)
58A	695002		ROPE, Starter -(99)(Cut to Required Length)
60	490652		GRIP-STARTER ROPE
63	690547		SPRING, Ratchet
64	691920		ADAPTER, Ratchet Spring
65	697725		SCREW -(Rewind Starter)
65A	690837		SCREW -(Rewind Starter)
66	399671		CLUTCH-STARTER
67	394897		HOUSING, Clutch
68	691604		BALL, Clutch
70	691945		RATCHET-CLUTCH
71	691359		COVER, Ratchet
165	693148		NUT -(Ring Gear)
363	19203		PULLER, Flywheel
456	695128		PLATE, Pawl Friction
459	281505S		PAWL-RATCHET
592	690800		NUT -(Rewind Starter)
597	691696		SCREW -(Pawl Friction Plate)
608	695058		STARTER, Rewind -Used After Code Date 99102400
608A	390391		STARTER, Rewind -Used Before Code Date 99102500
655	691734		ANCHOR-REWIND SPRING
678	490817		SPACER-REWIND -(Rewind)
689	691855		SPRING-FRICTION
695	693109		SCREW -(Ring Gear)
726	-----		Gear-Ring
726A	696537		GEAR, Ring -(Aluminum)(Services Plastic Ring Gear Only)
783	693713		GEAR, Pinion -(DC)(10-16 AMP)
783A	695708		GEAR-PINION
930	691904		GUARD, Rewind
1051	691265		RING, Retaining

