




Parts Manual


Mfg. No: 294446-0462-01

Model Components	Page
Air Cleaners.	4
Air Guides, Shrouds.	6
Alternators, Control Panels, Wires, Ignition.	8
Blower Housing.	12
Carburetor, Carburetor Overhaul Kit.	14
Controls, Springs.	16
Crankcase Cover/Sump, Intake Manifold.	20
Cylinder Head, Valve Covers, Valve Gasket Set.	22
Cylinder, Piston/Rings/Connecting Rod, Engine Gasket Set.	26
Electric Starter.	30
Electric Starter.	32
Exhaust System.	34
Exhaust System.	36
Flywheel, Starter Kit, Rotating Screen.	38
Fuel Tanks, Fuel Pumps, Fuel Hoses.	42
Lubrication.	46
Replacement Engine - US & Canada.	48
Rewind Starters.	49
Model 29, 30, 35 & 38 Engine Accessories Catalog.	51
Maintenance Kits.	52
Lubrication.	54
Starter Motor Side Outlet Mufflers.	56
Oil Filter Side Outlet Mufflers.	58
Oil Filter Side Outlet Manifolds.	60
Starter Motor Side Outlet Manifolds.	62
Mufflers.	64
Center Outlet Mufflers.	66
Muffler Guards and Shields.	68
Spark Arrestors and Deflectors.	70
Muffler Mounting Hardware.	72
Flywheel and Air Intake Guards.	74
PTO.	76
Electrical.	78
Speed Control.	80

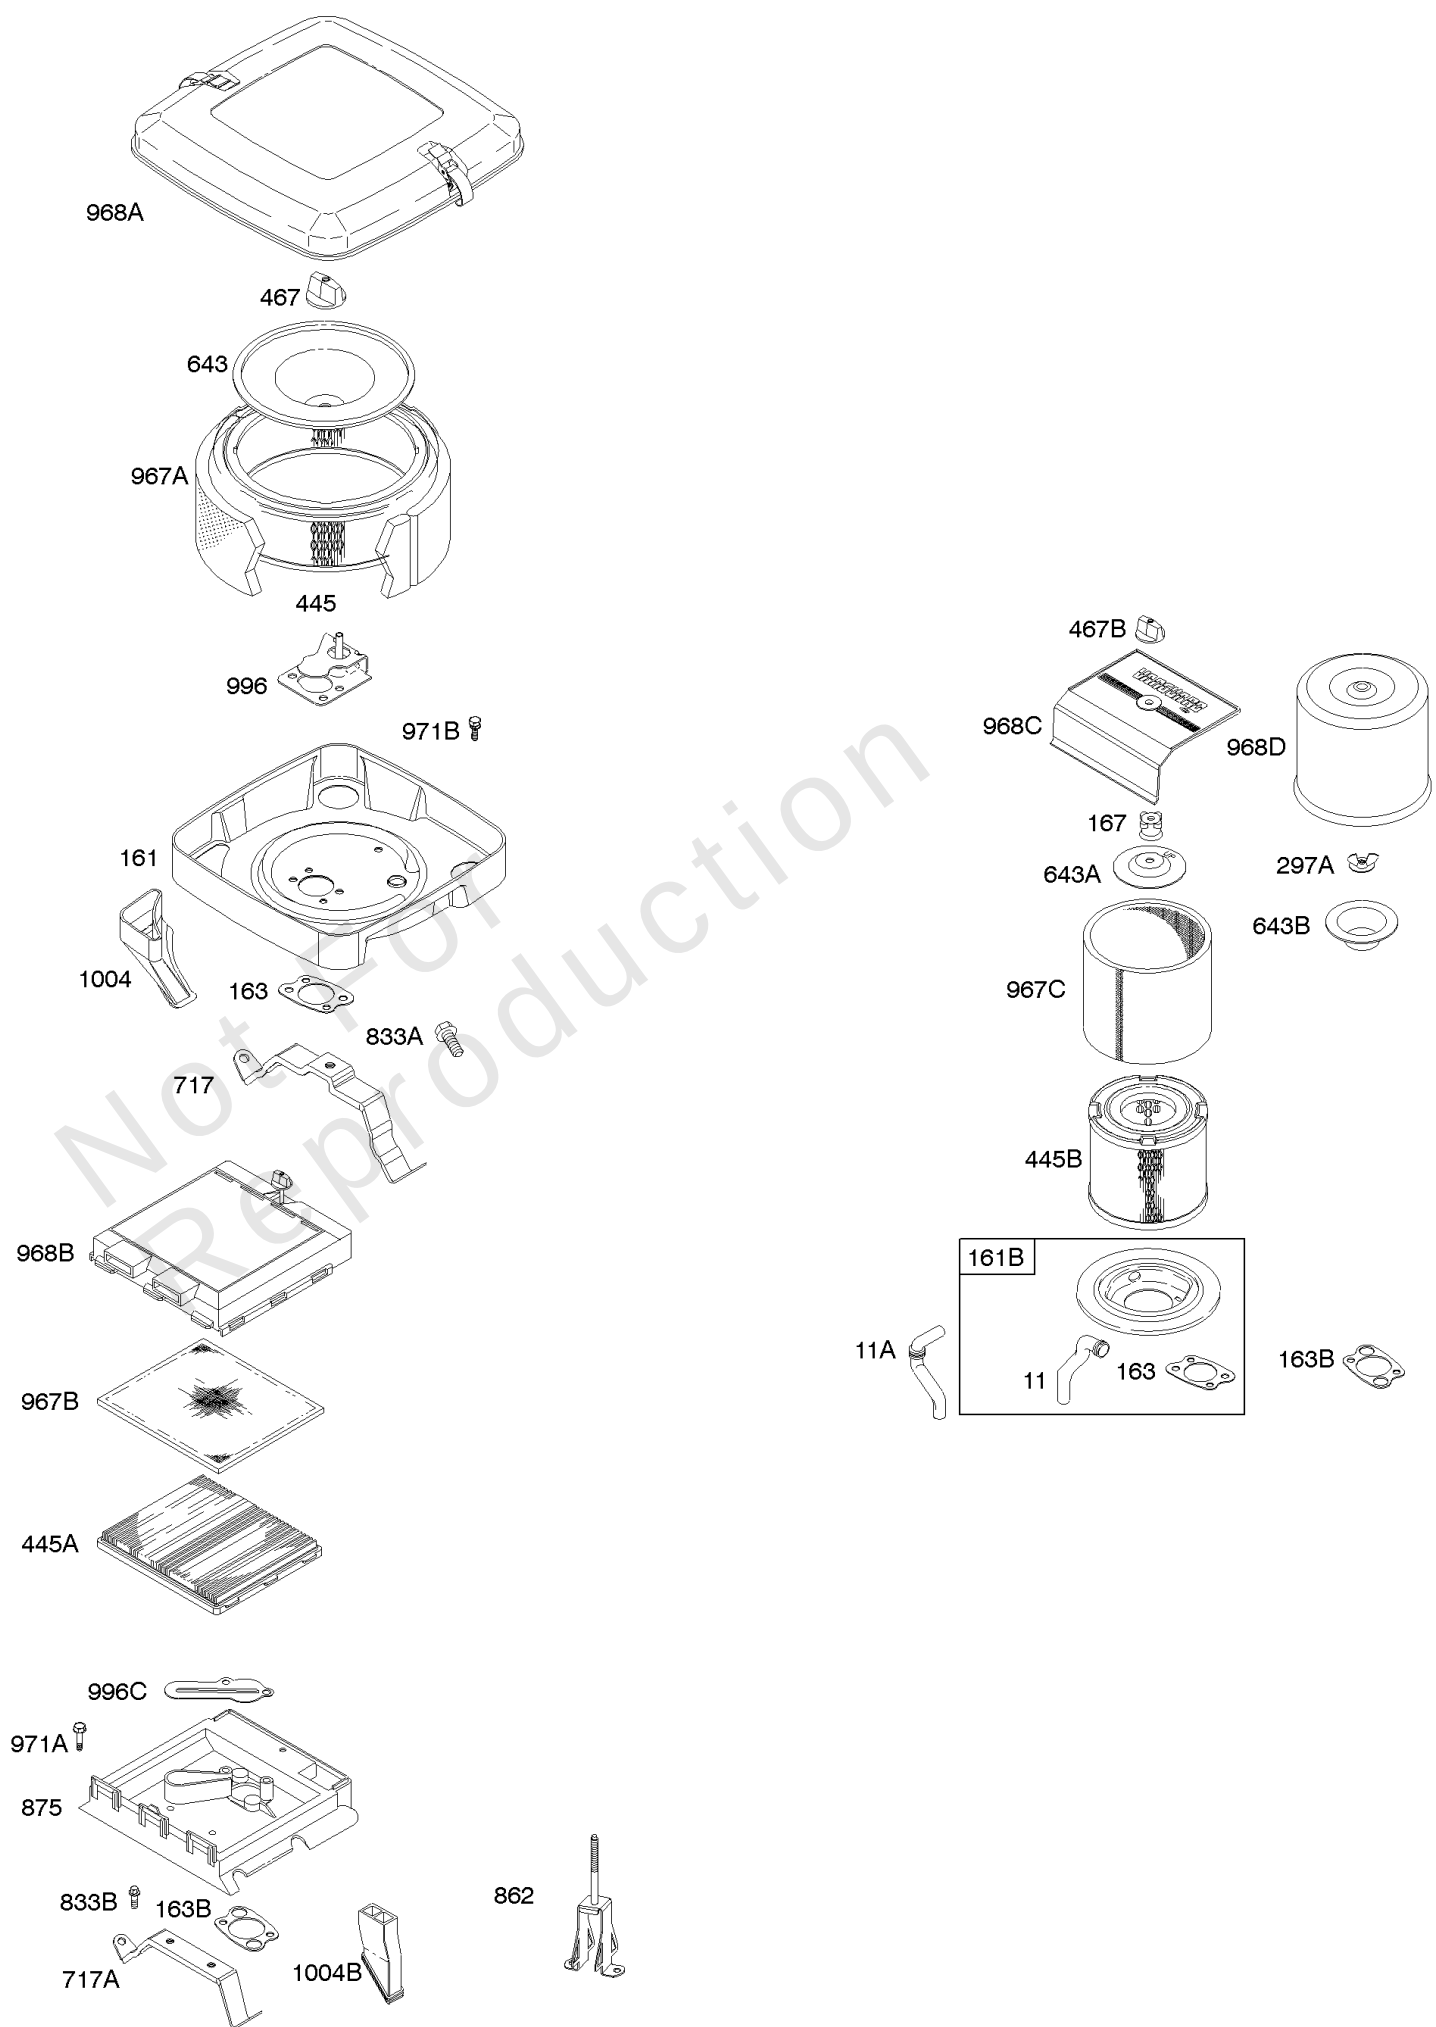


Air Cleaners

REF NO	PART NO	QTY	DESCRIPTION
11	691556		TUBE, Breather
11A	806083S		TUBE, Breather
161	691561		BASE, Air Cleaner -(Metal)
161B	808414		BASE, Air Cleaner -(Metal)
163	692081		GASKET, Air Cleaner -(Air Cleaner)
163B	692052		GASKET, Air Cleaner -(Air Cleaner)
167	691668		KNOB, Air Cleaner Cover
297A	691331		NUT -(Air Filter Retainer)
445	394018S		FILTER, A/C Cartridge
445A	805113		FILTER, A/C Cartridge
445B	393957S		FILTER, A/C Cartridge
467	691985		KNOB, Air Cleaner Cover
467B	691668		KNOB, Air Cleaner Cover
643	692079		RETAINER, Air Filter
643A	690447		RETAINER, Air Filter
643B	691730		RETAINER, Air Filter
717	692153		BRACKET, Air Cleaner
717A	807563		STRAP/STUD, Air Cleaner Mounting
833A	807084		SCREW -(Air Cleaner Mounting Strap/Stud)
833B	691593		SCREW -(Air Cleaner Mounting Strap/Stud)
862	691565		STRAP/STUD, Air Cleaner Mounting
875	690894		BASE, Air Cleaner -(Plastic)
967A	272490S		FILTER, Pre Cleaner
967B	805267S		FILTER, Pre Cleaner
967C	271794S		FILTER, Pre Cleaner
968A	699959		COVER, Air Cleaner
968B	690694		COVER, Air Cleaner
968D	691755		COVER, Air Cleaner
968C	691910		COVER, Air Cleaner
971A	807084		SCREW -(Air Cleaner Base) (Remote Choke)
971B	690699		SCREW -(Air Cleaner Base) (Remote Choke)
996	691577		SHIELD, Carburetor
996C	690696		SHIELD, Carburetor
1004	690743		DUCT, Air
1004B	692538		DUCT, Air -(Used With Plastic Air Cleaner Base)

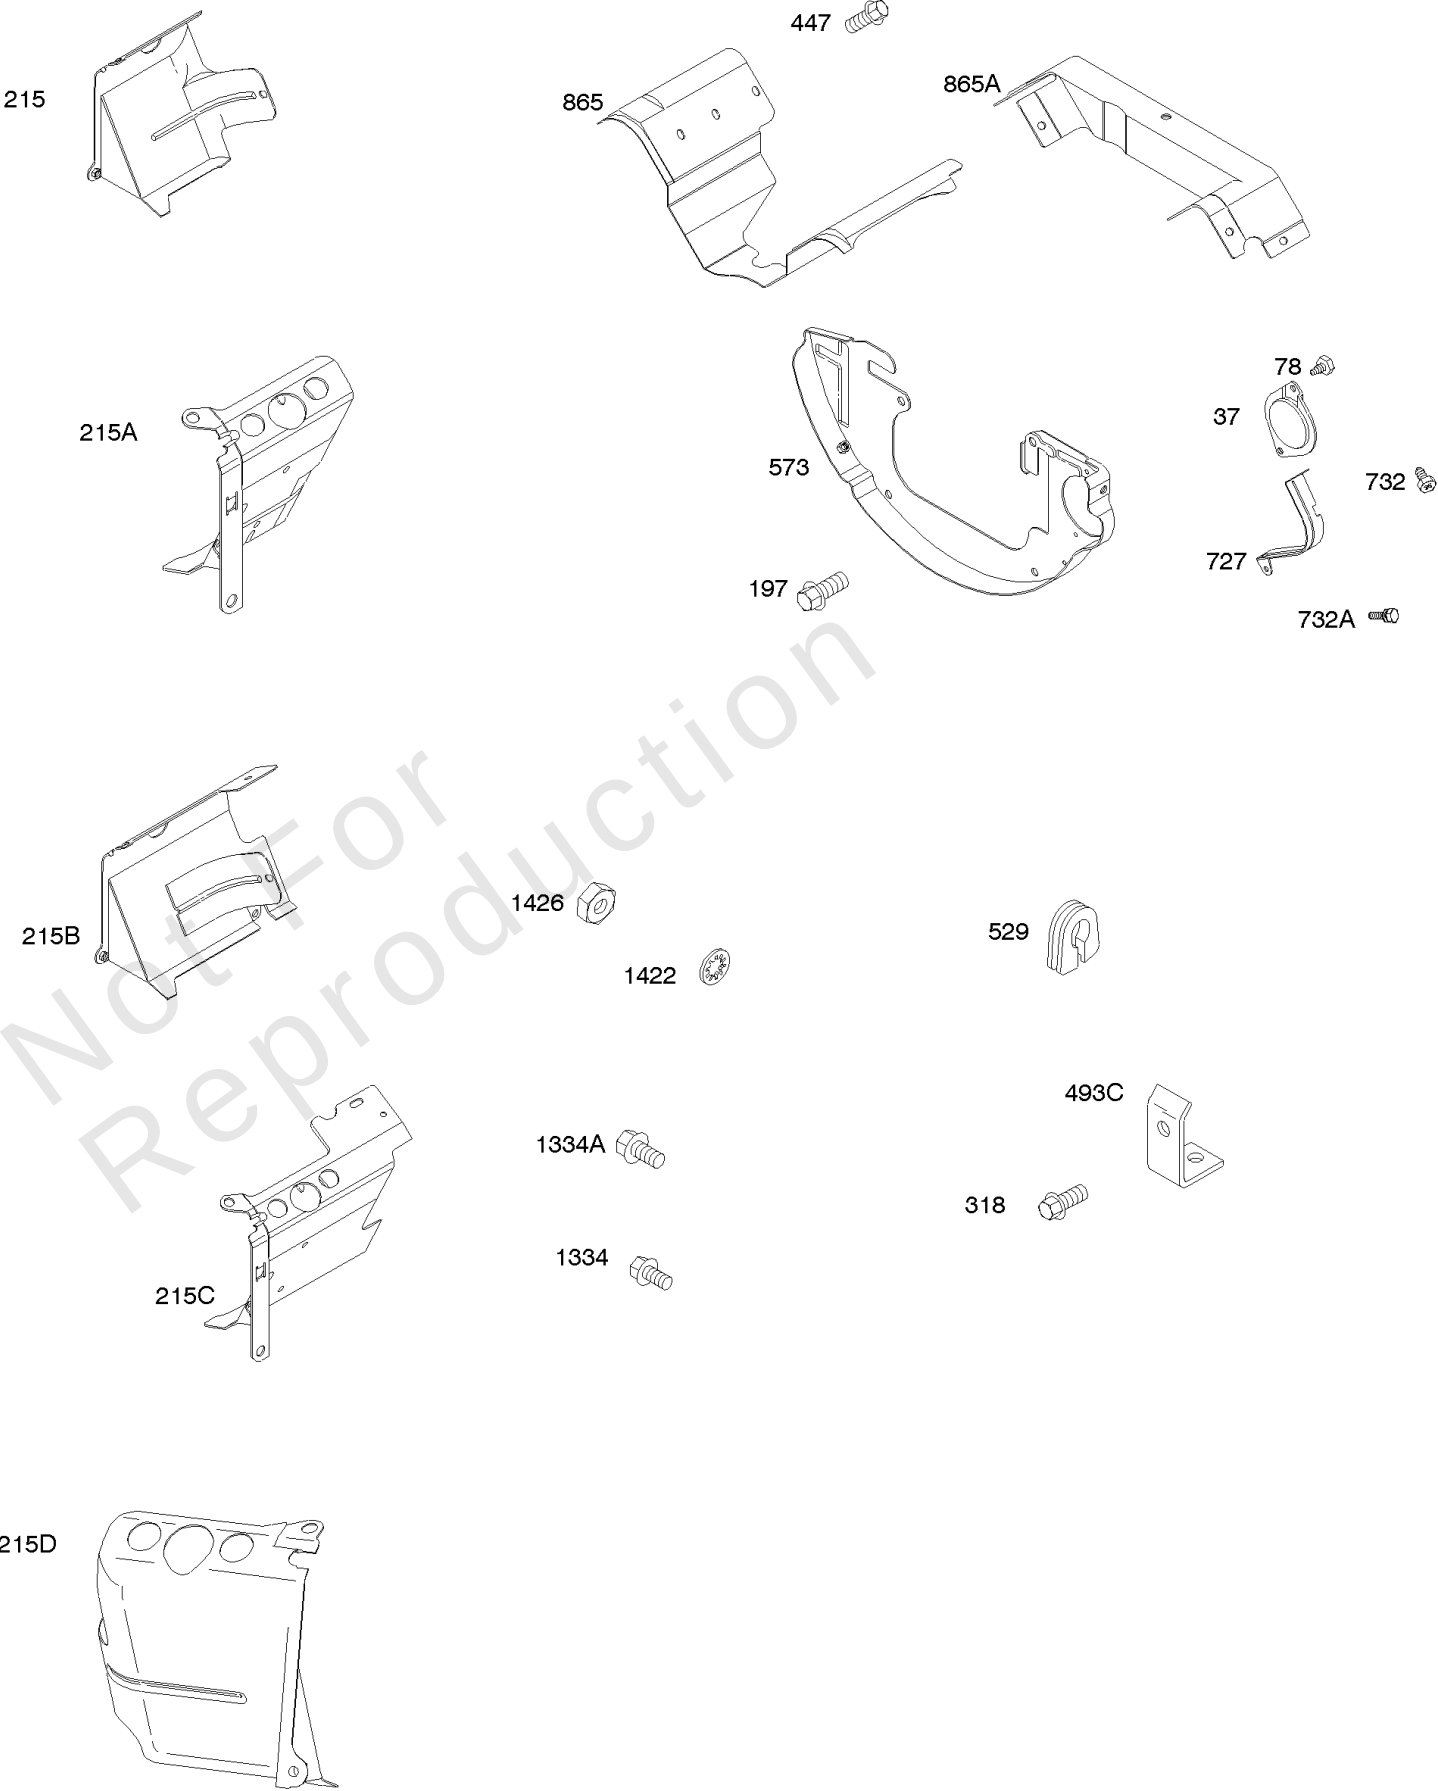


Air Guides, Shrouds

REF NO	PART NO	QTY	DESCRIPTION
37	841309		GUARD, Flywheel
78	690688		SCREW -(Flywheel Guard)
197	807163		SCREW -(Back Plate)
215A	807656		COVER, Cylinder Head -(Cylinder 1) -Used Before Code Date 90111700
215A	841183		GUIDE, Air -(Cylinder 1) -Used After Code Date 05121100
215A	841183		GUIDE, Air -(Cylinder 1) -Used After Code Date 90111600 -Used Before Code Date 05121200
215D	841182		GUIDE, Air -Used After Code Date 03110100
215B	807657		GUIDE, AIR -(Cylinder 2) -Used Before Code Date 90111700
215D	841182		GUIDE, Air -Used Before Code Date 98113000
215B	841182		GUIDE, Air -Used After Code Date 90111600
215D	841182		GUIDE, Air -Used After Code Date 98112900 -Used Before Code Date 03110200
318	841233		SCREW -(Mounting Bracket) (10mm Long)
447	841233		SCREW -(Air Guide Cover)
493C	691503		BRACKET, Mounting
529	690744		GROMMET
573	841310		PLATE, Back
727	841313		COVER, Starter Drive
732	690688		SCREW -(Starter Drive Cover)
732A	841233		SCREW -(Starter Drive Cover) (10mm Long)
865	843768		COVER, Air Guide -Used Before Code Date 07092800
865	843768		COVER, Air Guide -Used After Code Date 07092700
865A	841319		COVER, Air Guide -(Aluminum)
1334	841233		SCREW -(Air Guide) (M6x10mm) -Used After Code Date 03120900
1334A	692067		SCREW -(Air Guide) (M6x12mm)
1422	691551		WASHER -(Air Guide) -Used Before Code Date 03110100
1422	690706		WASHER -(Air Guide)
1426	690238		NUT -(Air Guide)

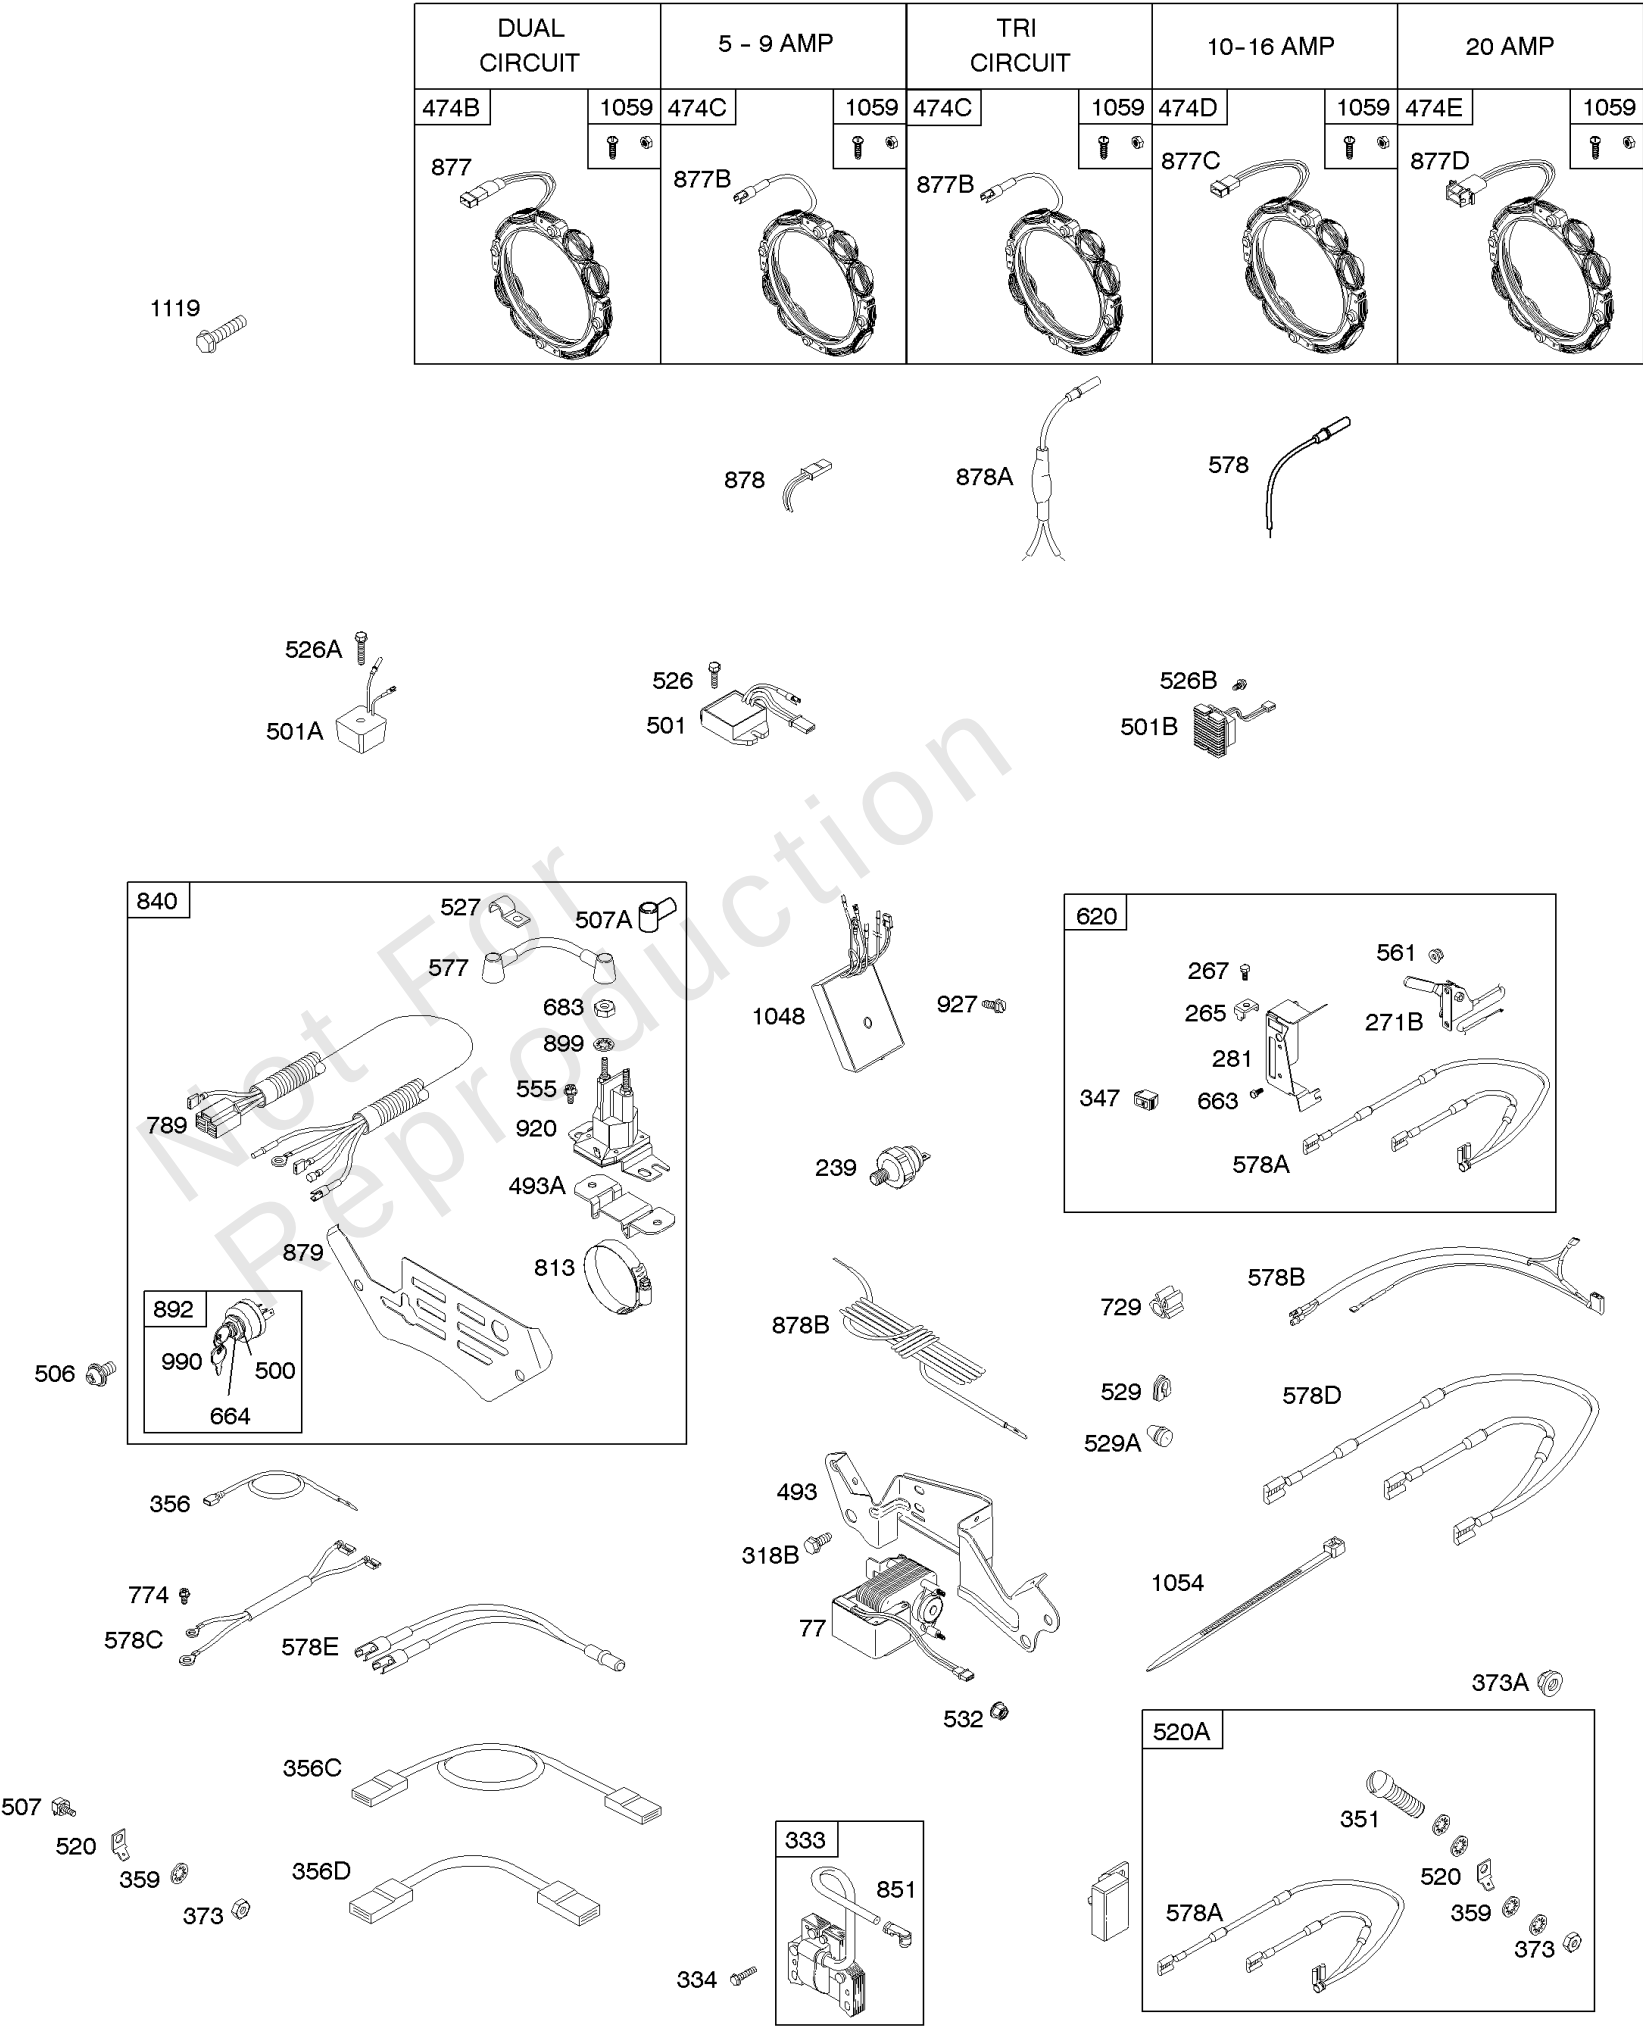

Alternators, Control Panels, Wires, Ignition


REF NO	PART NO	QTY	DESCRIPTION
77	690819		MOTOR, Servo
239	690233		SWITCH, Oil Pressure
265	691024		CLAMP, Casing
267	692083		SCREW -(Casing Clamp)
271B	691028		LEVER, Control
281	690742		PANEL, Control
318B	807163		SCREW -(Mounting Bracket)
333	492341		ARMATURE, Magneto
334	692066		SCREW -(Magneto Armature)
347	691995		SWITCH-ROCKER
351	692083		SCREW -(Ground Terminal)
356	690796		WIRE, Stop
356C	807593		WIRE, Stop -(Cylinder 1) -Used Before Code Date 90120200
356D	807594		WIRE, Stop -(Cylinder 2) -Used Before Code Date 90120200
359	691077		WASHER -(Ground Terminal)
373	691612		NUT -(Ground Terminal)
373A	690713		NUT -(Ground Terminal)
474B	696459		ALTERNATOR -(Dual Circuit)
474C	696457		ALTERNATOR -(5 and 9 Amp Regulated)
474D	696458		ALTERNATOR -(10 and 16 Amp Regulated)
493	691518		BRACKET, Mounting
493A	691177		BRACKET, Mounting -(Solenoid)
500	691086		WASHER -(Key Switch)
501	797375		REGULATOR
501A	794360		REGULATOR
506	690677		SCREW -(Carburetor Cover)
507	691972		INSULATOR
507A	281223		INSULATOR
520	691084		TERMINAL, Ground
520A	809077		TERMINAL, Ground -(Ignition Shutoff) -Used Before Code Date 90120200
526	692067		SCREW -(Regulator) (10-16 Amp Regulated)
526A	690717		SCREW -(Regulator) (5/9 Amp. Regulated)
527	690423		CLAMP, Tube
529	690744		GROMMET
529A	691527		GROMMET
532	691115		NUT -(Mounting Bracket)

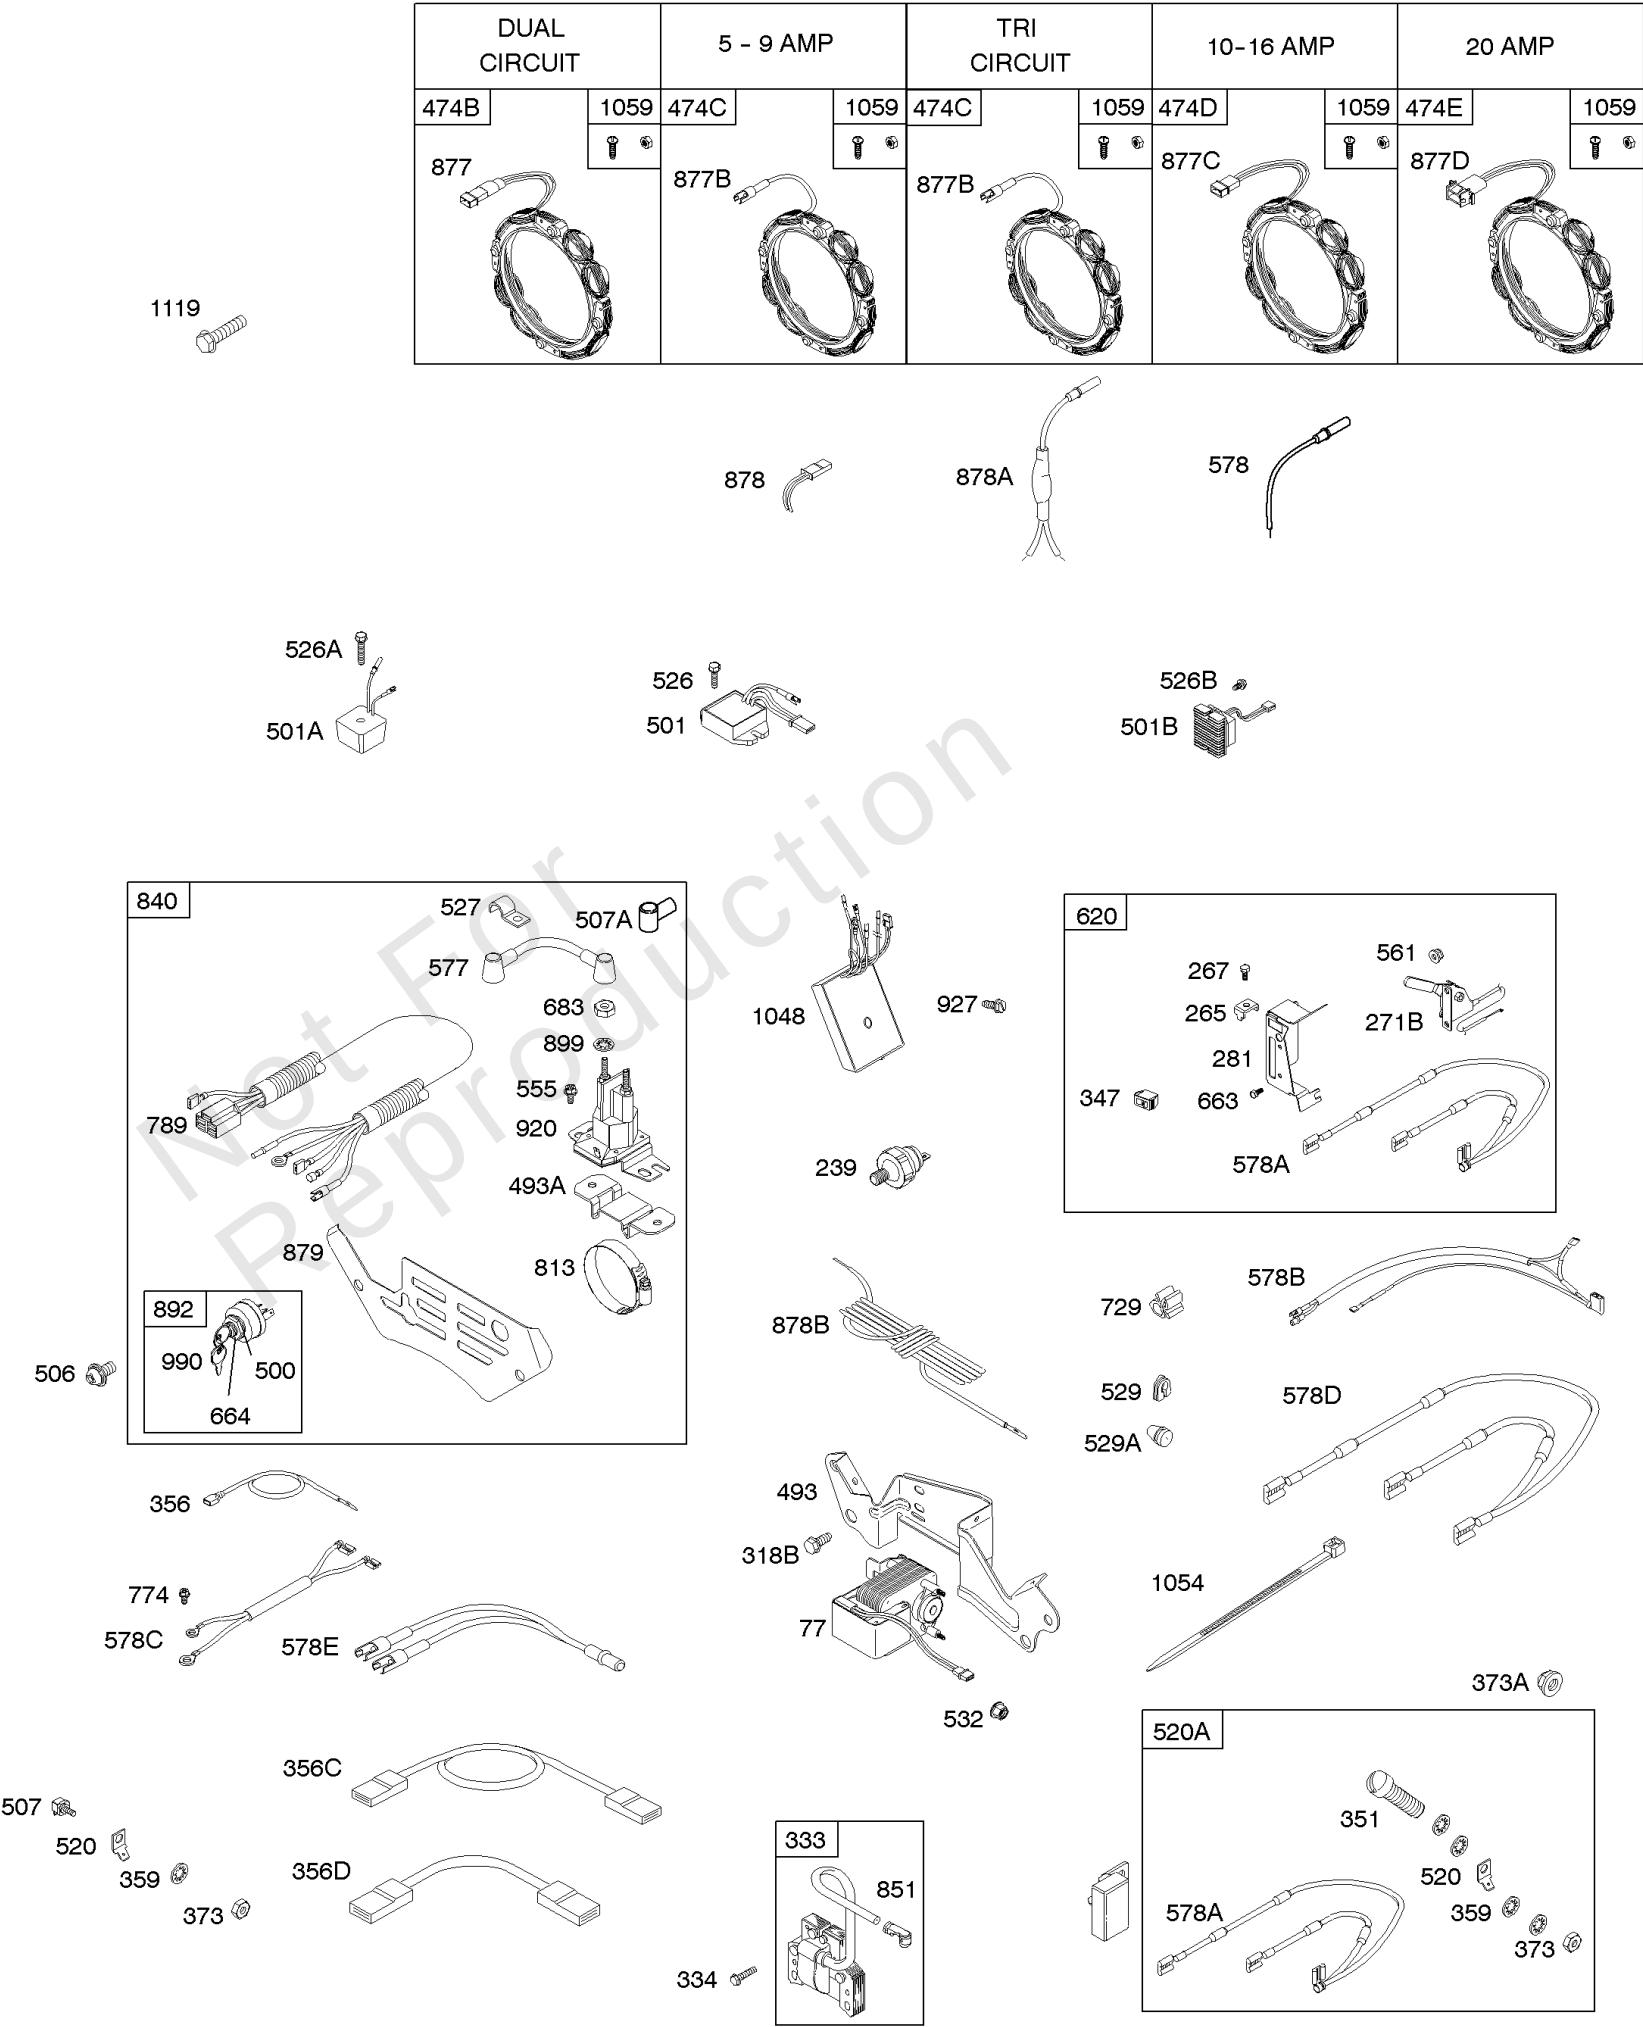

Alternators, Control Panels, Wires, Ignition




REF NO	PART NO	QTY	DESCRIPTION
555	692067		SCREW -(Starter Solenoid)
561	690713		NUT -(Control Lever)
577	690795		CABLE, Starter
578	692306		WIRE ASSEMBLY
578A	844547		HARNESS, Wiring
578B	844549		HARNESS-WIRING
578D	691999		WIRE ASSEMBLY -(Ignition Coil)
578C	690809		WIRE ASSEMBLY
620	494052		BRACKET, Control -(Ignition Coil)
663	692083		SCREW -(Control Panel)
664	691087		NUT -(Key Switch)
683	691029		NUT -(Starter Solenoid)
729	690586		CLIP, Wire
774	692067		SCREW -(Stop Wire)
789	691996		HARNESS, Wiring
813	690635		CLAMP
840	842828		KIT, Panel
851	493880S		TERMINAL, Spark Plug
877	393456		WIRE/CONNECTOR, Alternator
877B	393537		WIRE/CONNECTOR, Alternator -(Tri Circuit) (9 Amp)
877C	399916		WIRE/CONN-ALTERNATOR
877D	698092		WIRE/CONNECTOR, Alternator
878	398661		HARNESS, Wiring
878A	691955		HARNESS, Alternator
879	842829		COVER, Carburetor/EFI
892	692318		SWITCH, Key
899	691077		WASHER -(Starter Solenoid)
920	691656		SOLENOID, Starter
927	691116		SCREW -(Electronic Governor Module)
990	691959		SET, Key
1048	690669		MODULE, Electronic Governor
1054	280275		TIE, Cable
1059	698516		KIT, Screw/Washer -(Alternator)
1119	691552		SCREW -(Alternator)

1036 EMISSIONS LABEL

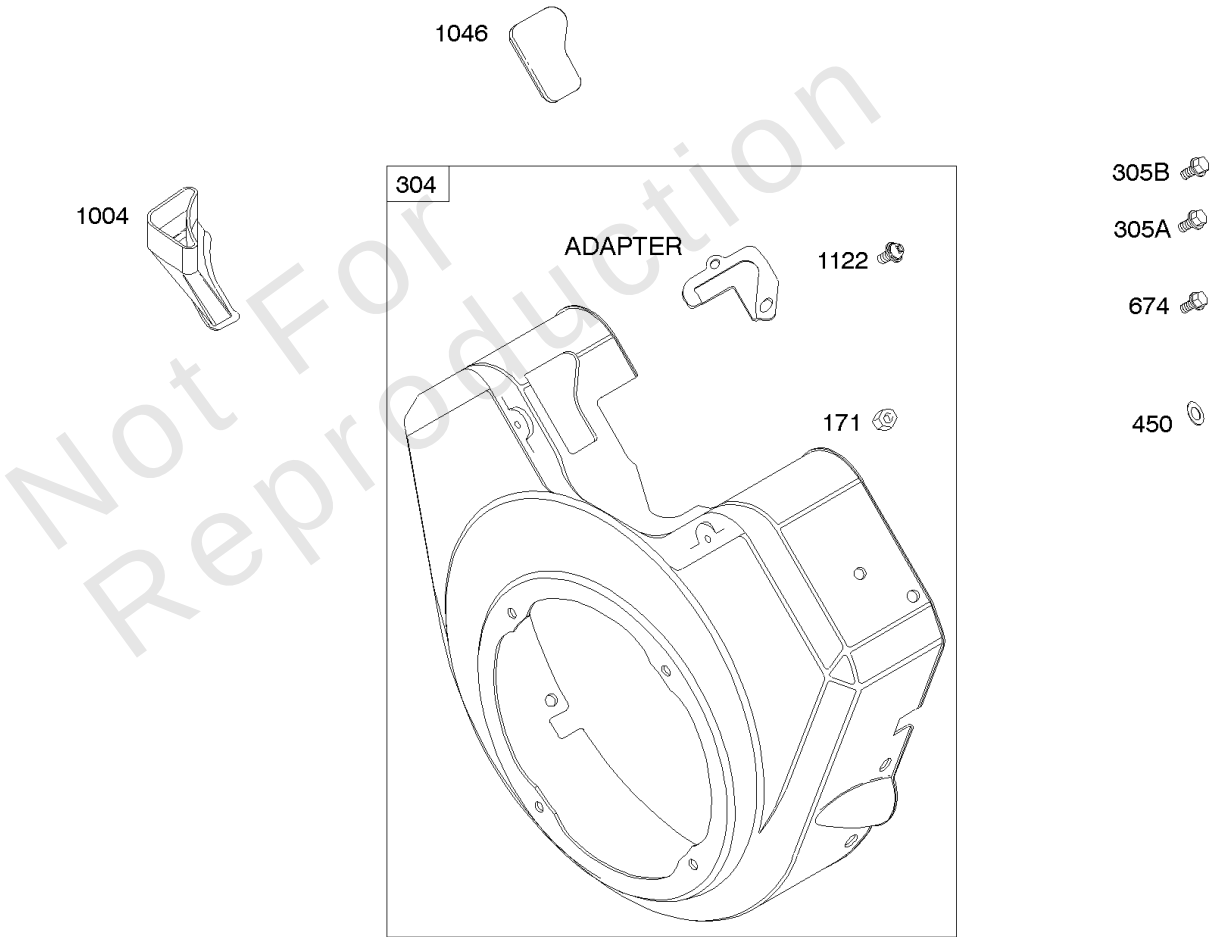


Blower Housing

REF NO	PART NO	QTY	DESCRIPTION
171	810056		NUT -(Air Cleaner)
304	808055		HOUSING, Blower -(Red)
304	808408		HOUSING, Blower -(Black)
305A	692062		SCREW -(Blower Housing) (18mm Long)
305B	807163		SCREW -(Blower Housing) (10mm)
450	806497		WASHER -(Fuel Tank Bracket)
674	692056		SCREW -(Fuel Tank Bracket) (M8x14mm)
1004	690743		DUCT, Air
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1046	692082		PLUG, Blower Housing
1122	93410		SCREW -(Blower Housing Adapter)

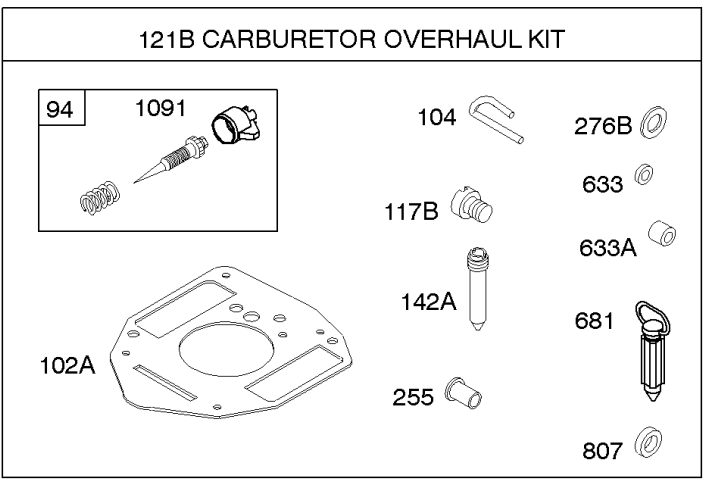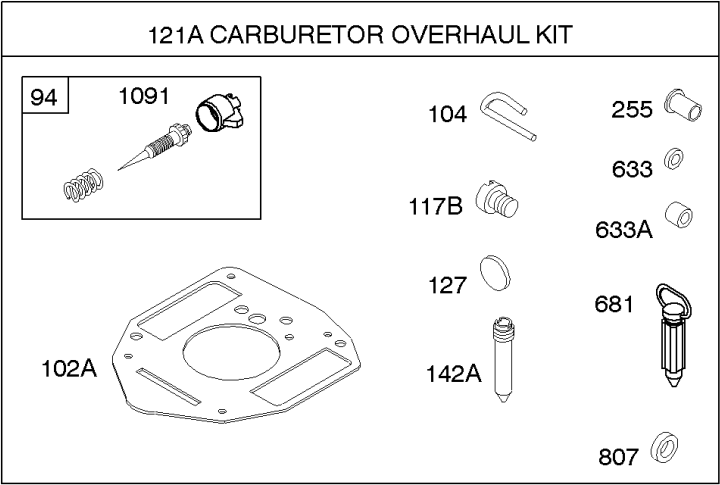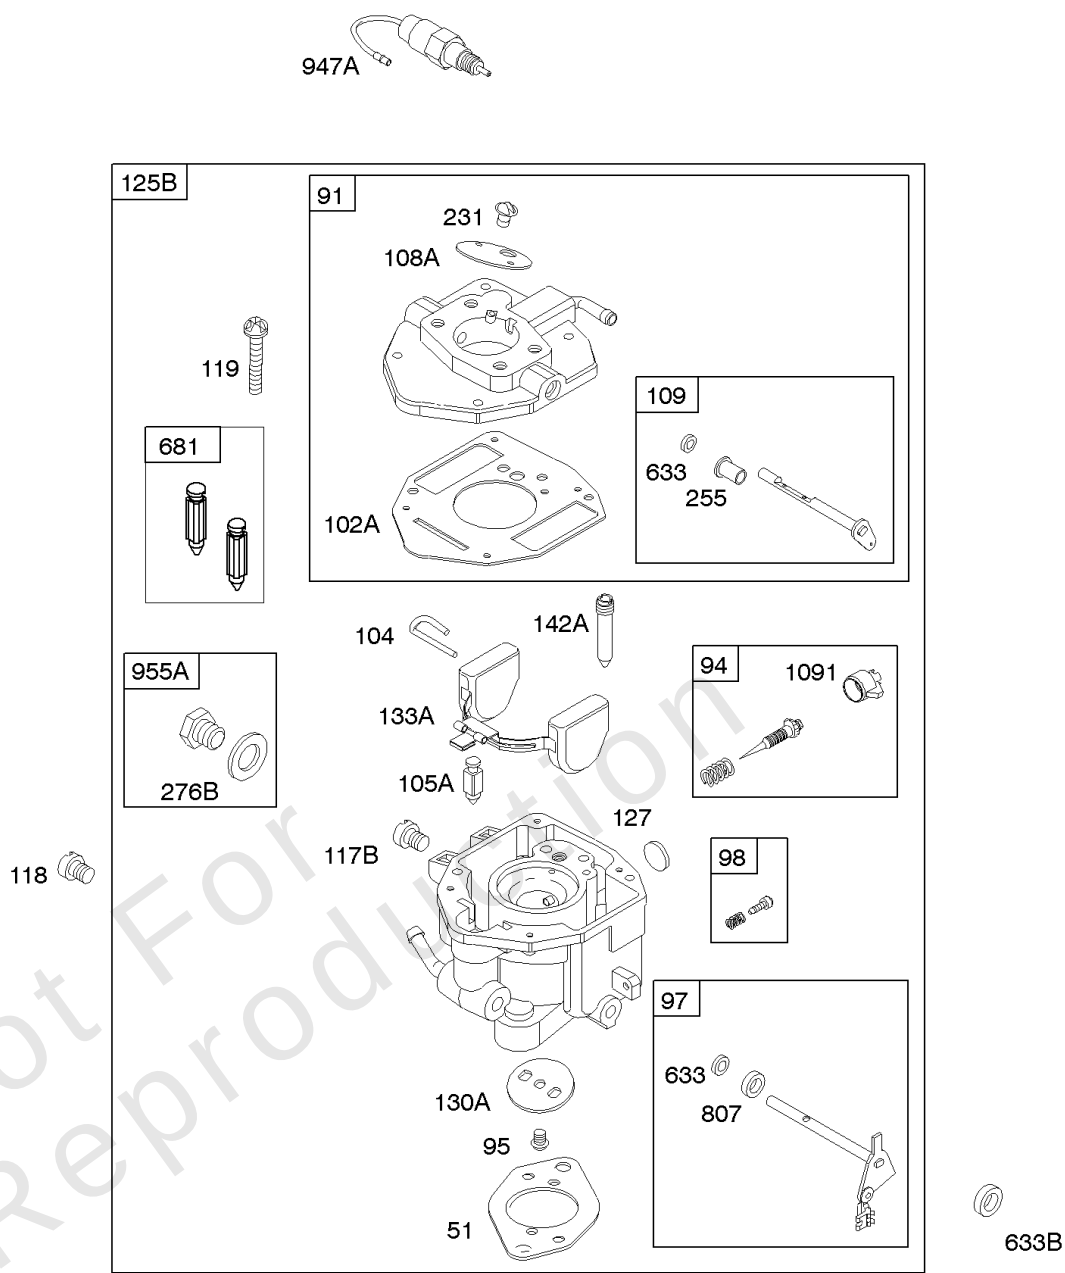


Carburetor, Carburetor Overhaul Kit

REF NO	PART NO	QTY	DESCRIPTION
51	691694		GASKET, Intake -(Manifold To Carburetor)
91	807919		BODY, Upper Carburetor
94	842870		KIT, Idle Mixture
95	690718		SCREW -(Throttle Valve)
97	809007		KIT, Throttle Shaft
98	808177		KIT, Idle Speed
102A	692077		GASKET, Carburetor Body
104	690723		PIN, Float Hinge
105A	805620		VALVE, Float Needle -(Gravity Feed Carburetor)
108A	690719		VALVE, Choke
109	809096		SHAFT-CHOKE
117B	690861		JET, Main -(Standard) -Used Before Code Date 99033100
117B	806652		JET, Main -(Standard) -Used After Code Date 99033000
118	842238		JET, Main -(High Altitude)
119	690720		SCREW -(Upper To Lower Carburetor Body)
121B	809021		KIT, Carburetor Overhaul
125B	809008		CARBURETOR -(Pump Feed Carburetor)
127	690727		PLUG, Welch
130A	690726		VALVE, Throttle
142A	690725		NOZZLE, Carburetor -(Standard)
231	692056		SCREW -(Choke Valve)
255	690721		BUSHING, Choke Shaft
276B	690724		WASHER, Sealing -(Carburetor Plug)
633	690722		SEAL, Choke/Throttle Shaft
633A	806131		SEAL, Choke/Throttle Shaft -(Choke)
807	805557		SPACER -(Throttle)
947A	692094		SOLENOID, Fuel
955A	807723		PLUG, Carburetor -(Jet)
1091	691516		CAP, Limiter

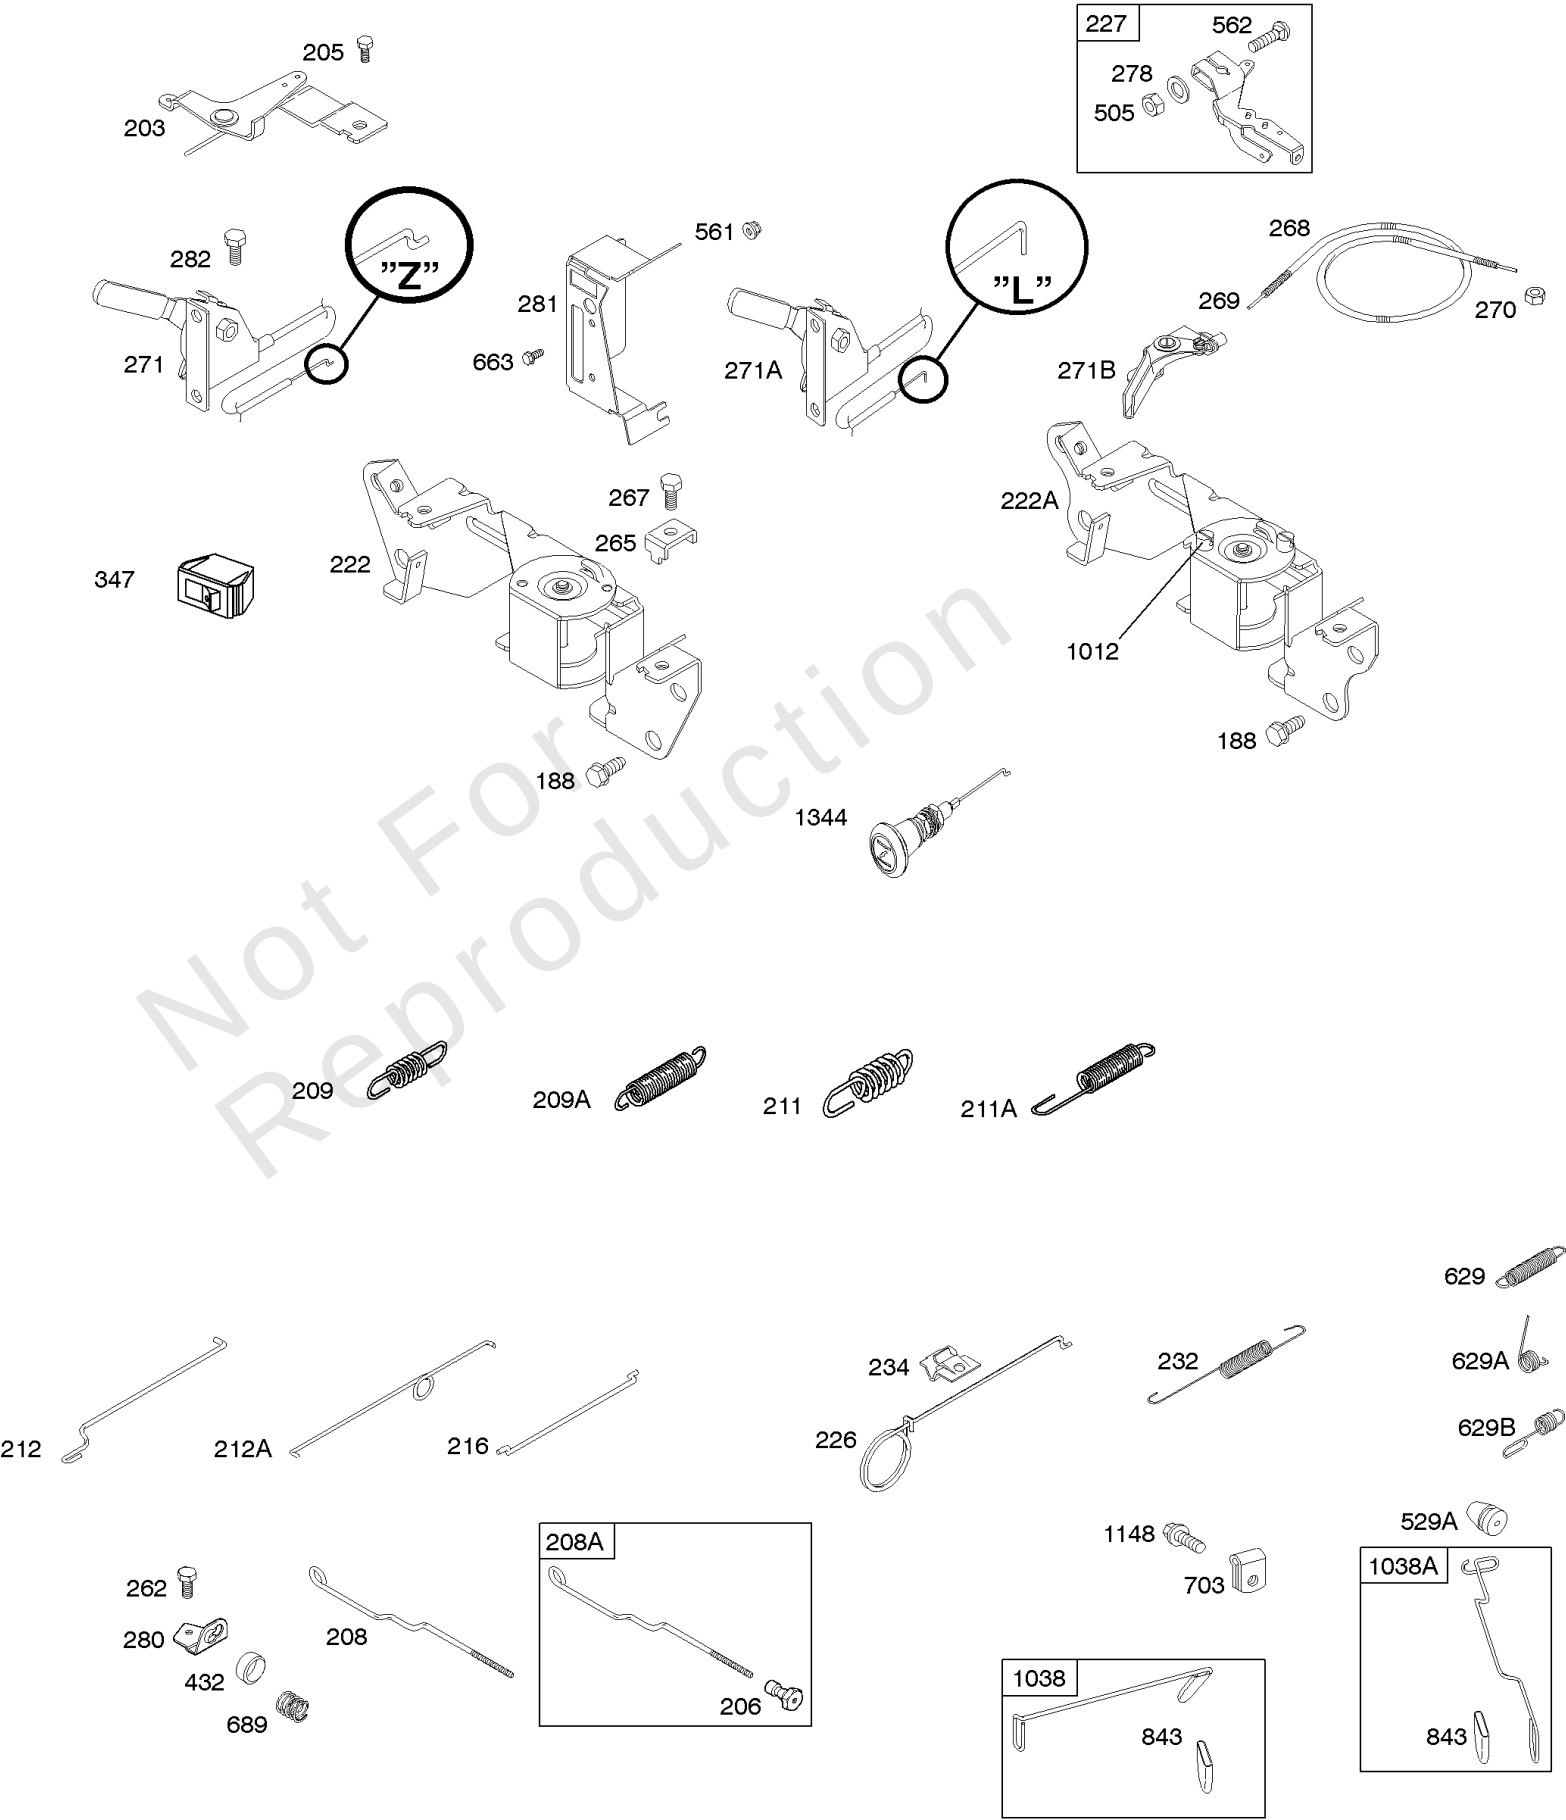


Controls, Springs

REF NO	PART NO	QTY	DESCRIPTION
188	692056		SCREW -(Control Bracket)
203	690923		CRANK, Bell
205	692083		SCREW -(Bell Crank)
206	691244		NUT, Governor Adjusting -Used After Code Date 96033100
208	808453		ROD, Governor Control -Used After Code Date 96033100
208A	808453		ROD, Governor Control -Used Before Code Date 96040100
209	692072		SPRING, Governor
211	692069		SPRING, Governed Idle
212	690712		LINK, Throttle
212A	691519		LINK-THROTTLE
216	690705		LINK, Choke
222	808454		BRACKET, Control -(Used With Control Lever And/Or Wire With "Z" Formed End)
222A	690918		BRACKET, Control -(Used With Control Lever And/Or Wire With L Formed End)
226	692075		ROD, Choke
227	690236		LEVER, Governor Control
232	692073		SPRING, Governor Link
234	691723		CLIP, Control Rod
262	692083		SCREW -(Rod Bracket)
265	691024		CLAMP, Casing
267	692083		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	692541		LEVER, Control -(Cable Wire With Z Formed End)
271A	692105		LEVER, Control -(Cable Wire With L Formed End)
271B	691028		LEVER, Control
278	842122		WASHER -(Governor Control Lever)
280	691526		BRACKET, Fixed Speed
281	690742		PANEL, Control
282	692083		SCREW -(Control Lever)
347	691995		SWITCH-ROCKER
432	691509		CAP, Spring
505	690238		NUT -(Governor Lever)
529A	691527		GROMMET
561	690713		NUT -(Control Lever)
562	690239		BOLT -(Governor Control Lever)
629	806717		SPRING, Throttle Return -(Throttle Return)

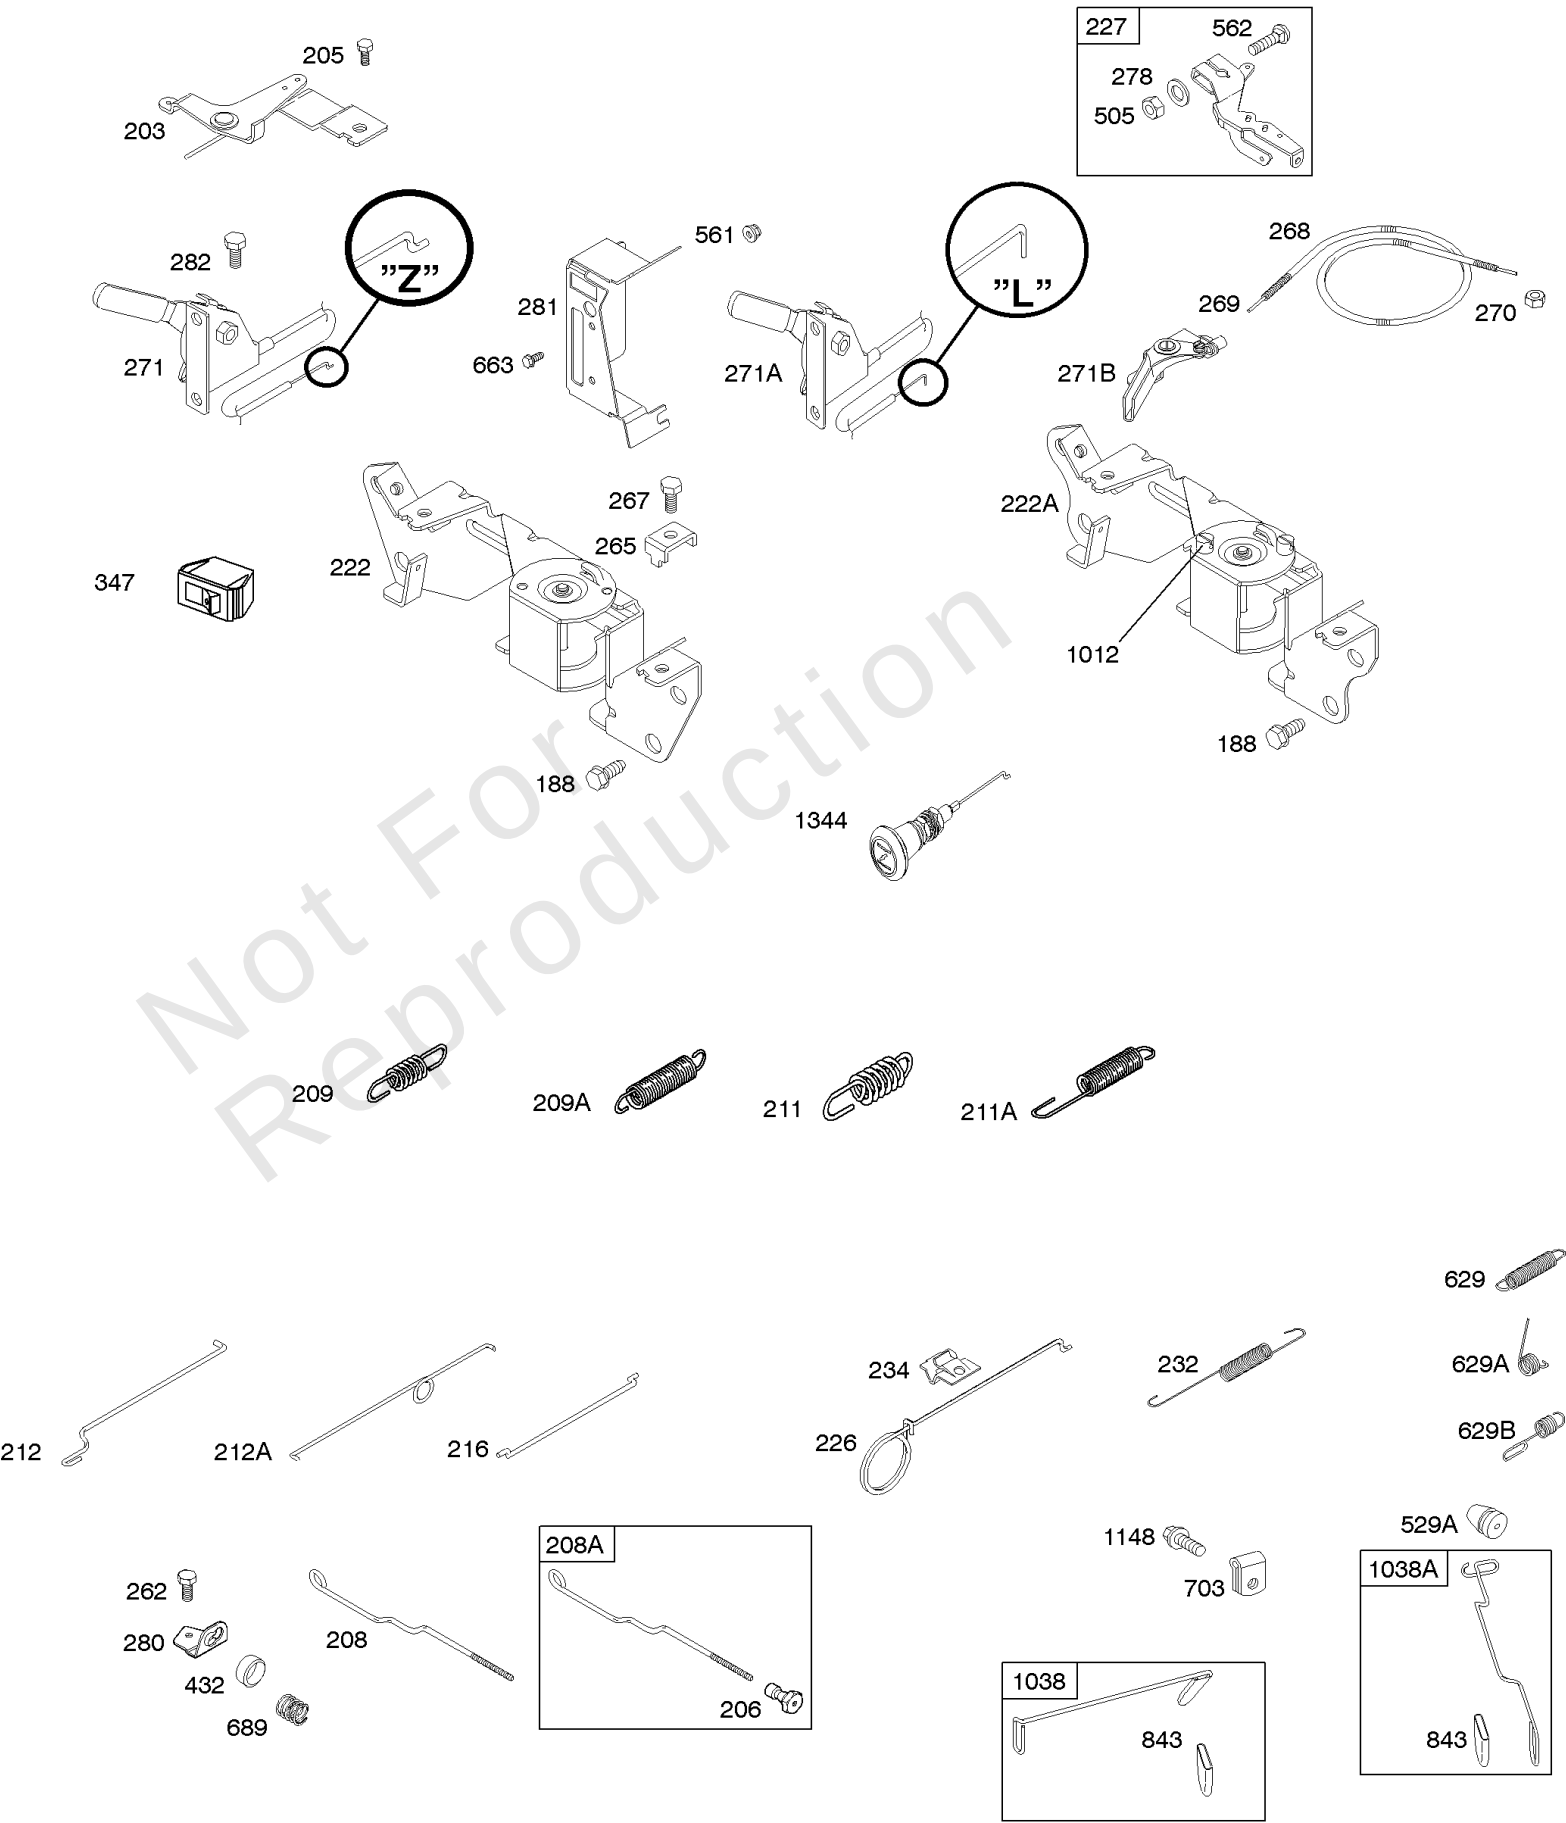


Controls, Springs

REF NO	PART NO	QTY	DESCRIPTION
629A	806716		SPRING, Throttle Return -(Throttle Return)
629B	692088		SPRING, Throttle Return -(Throttle Return)
663	692083		SCREW -(Control Panel)
689	691272		SPRING, Friction
703	94484		CLAMP
843	691322		SLEEVE, Lever
1012	690592		RETAINER, Link
1038	492374		ROD, Fuel Shut Off
1038A	691567		ROD, Fuel Shut Off
1148	94504		SCREW -(Clip) (Side Out)

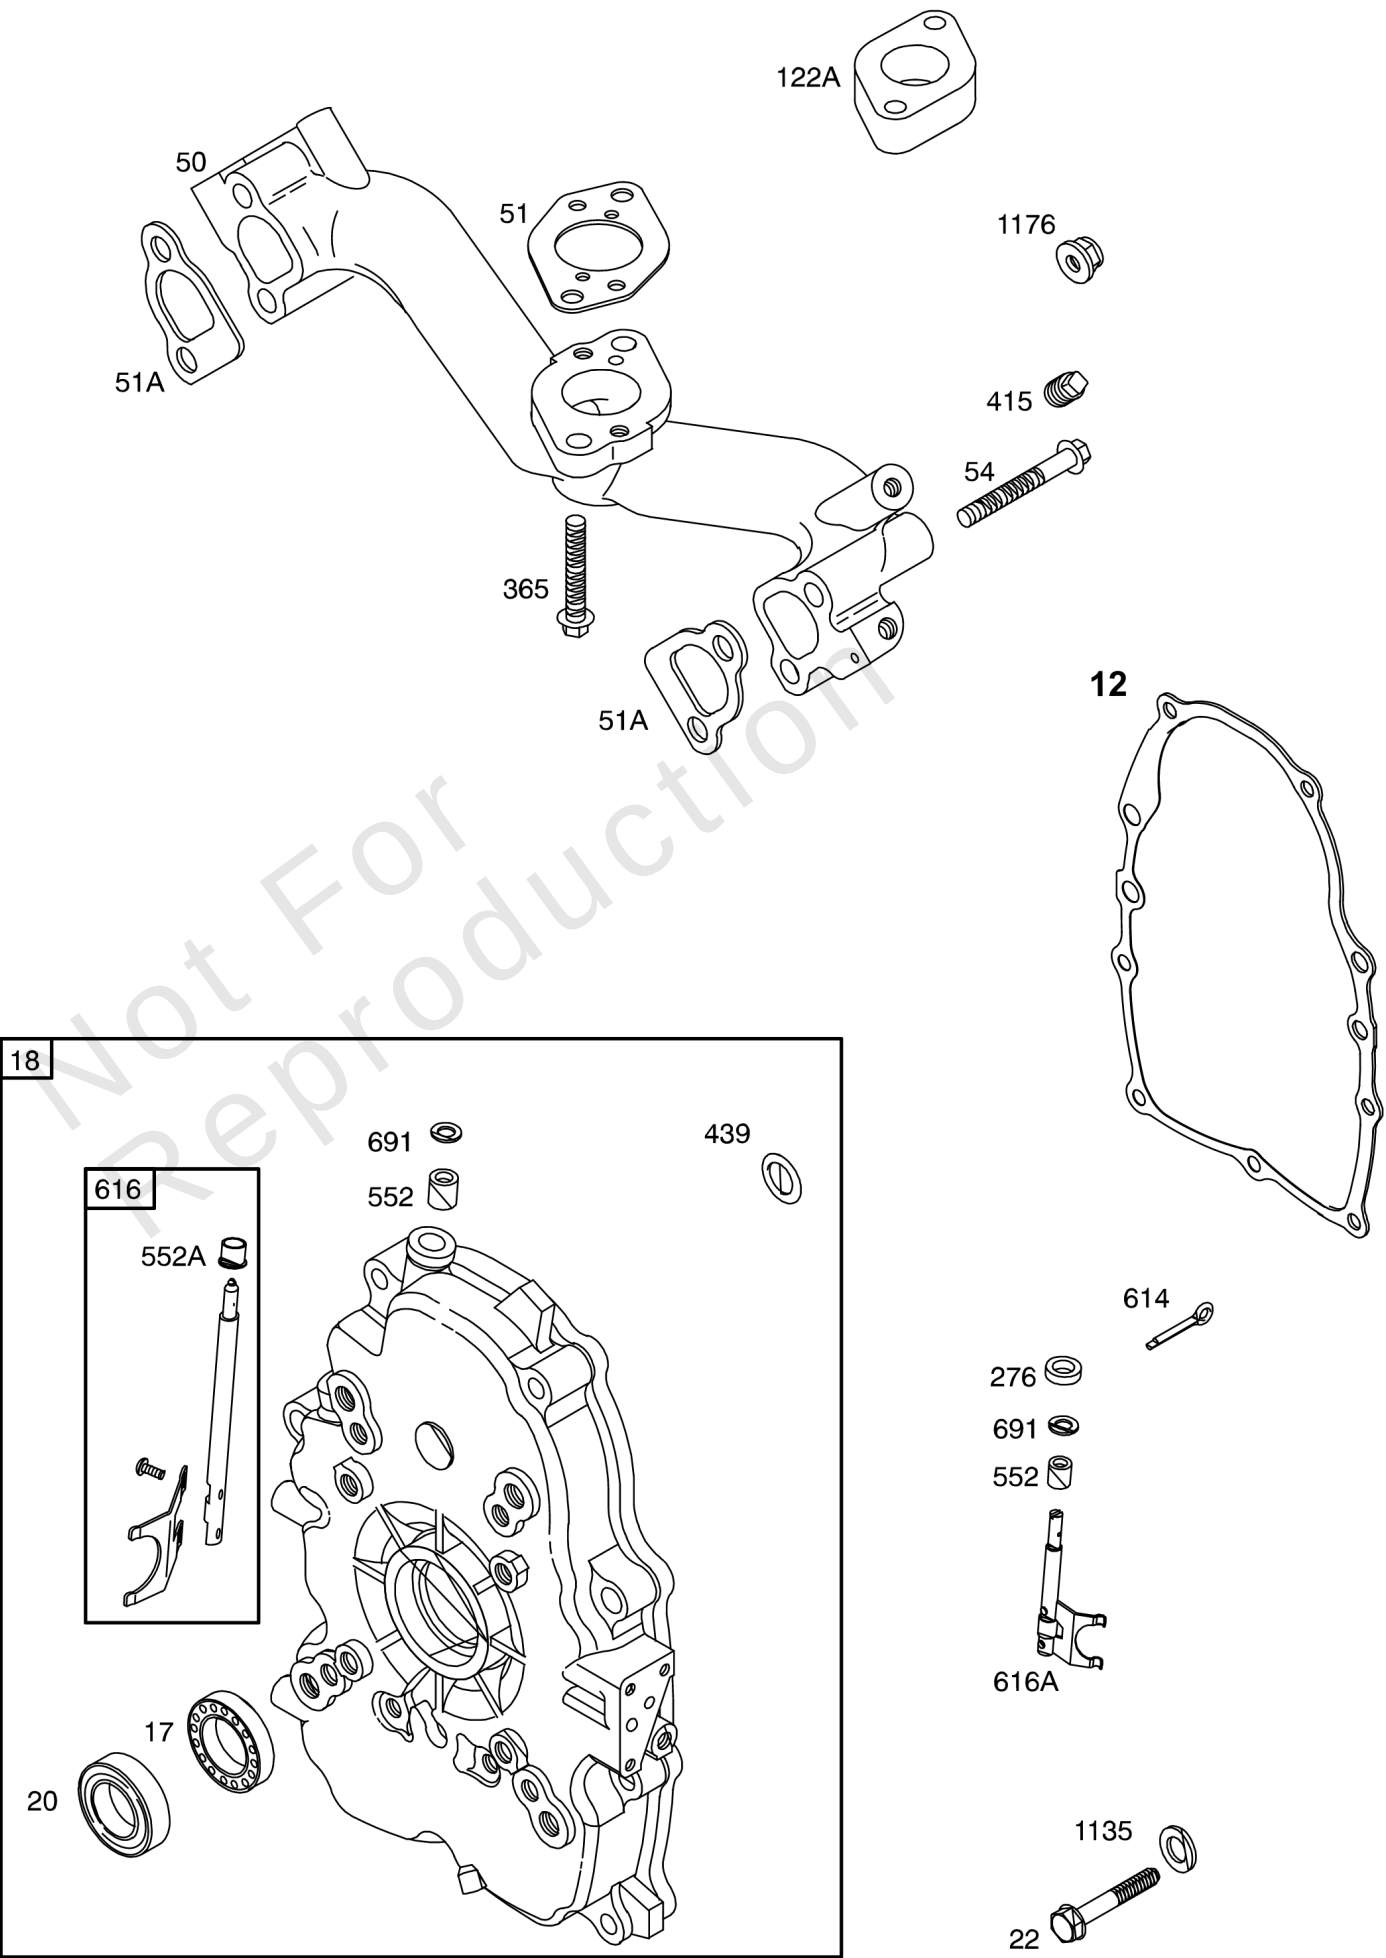

Crankcase Cover/Sump, Intake Manifold

REF NO	PART NO	QTY	DESCRIPTION
12	846487		GASKET, Crankcase
17	843827		BEARING, Ball
18	844588		COVER, Crankcase
20	805049S		SEAL, Oil -(PTO Side)
22	807362		SCREW -(Crankcase Cover/Sump)
50	690754		MANIFOLD, Intake
51	691694		GASKET, Intake -(Manifold To Carburetor)
51A	692035		GASKET, Intake -(Manifold to Cylinder Head)
54	690676		SCREW -(Intake Manifold)
122A	690691		SPACER, Carburetor
276	690704		WASHER -(Governor Crank)
365	690711		SCREW -(Carburetor)
415	794903		PLUG
439	805198		SEAL, O-Ring -(Crankcase Cover/Sump) or (Cylinder Assembly) -Used Before Code Date 97050100
439	692154		O-RING, Oil Gallery -(Crankcase Cover/Sump) or (Cylinder Assembly) -Used After Code Date 97043000
552	690701		BUSHING, Governor Crank -(Output End)
552A	806686		BUSHING, Governor Crank -(Flanged)
614	691550		PIN, Cotter
616	806685		CRANK, Governor -Used After Code Date 99072000
616A	690899		CRANK, Governor -Used Before Code Date 99072100
691	842826		SEAL, Governor Shaft
1135	806497		WASHER -(Crankcase Cover/Sump)
1176	842067		NUT -(Exhaust Manifold)

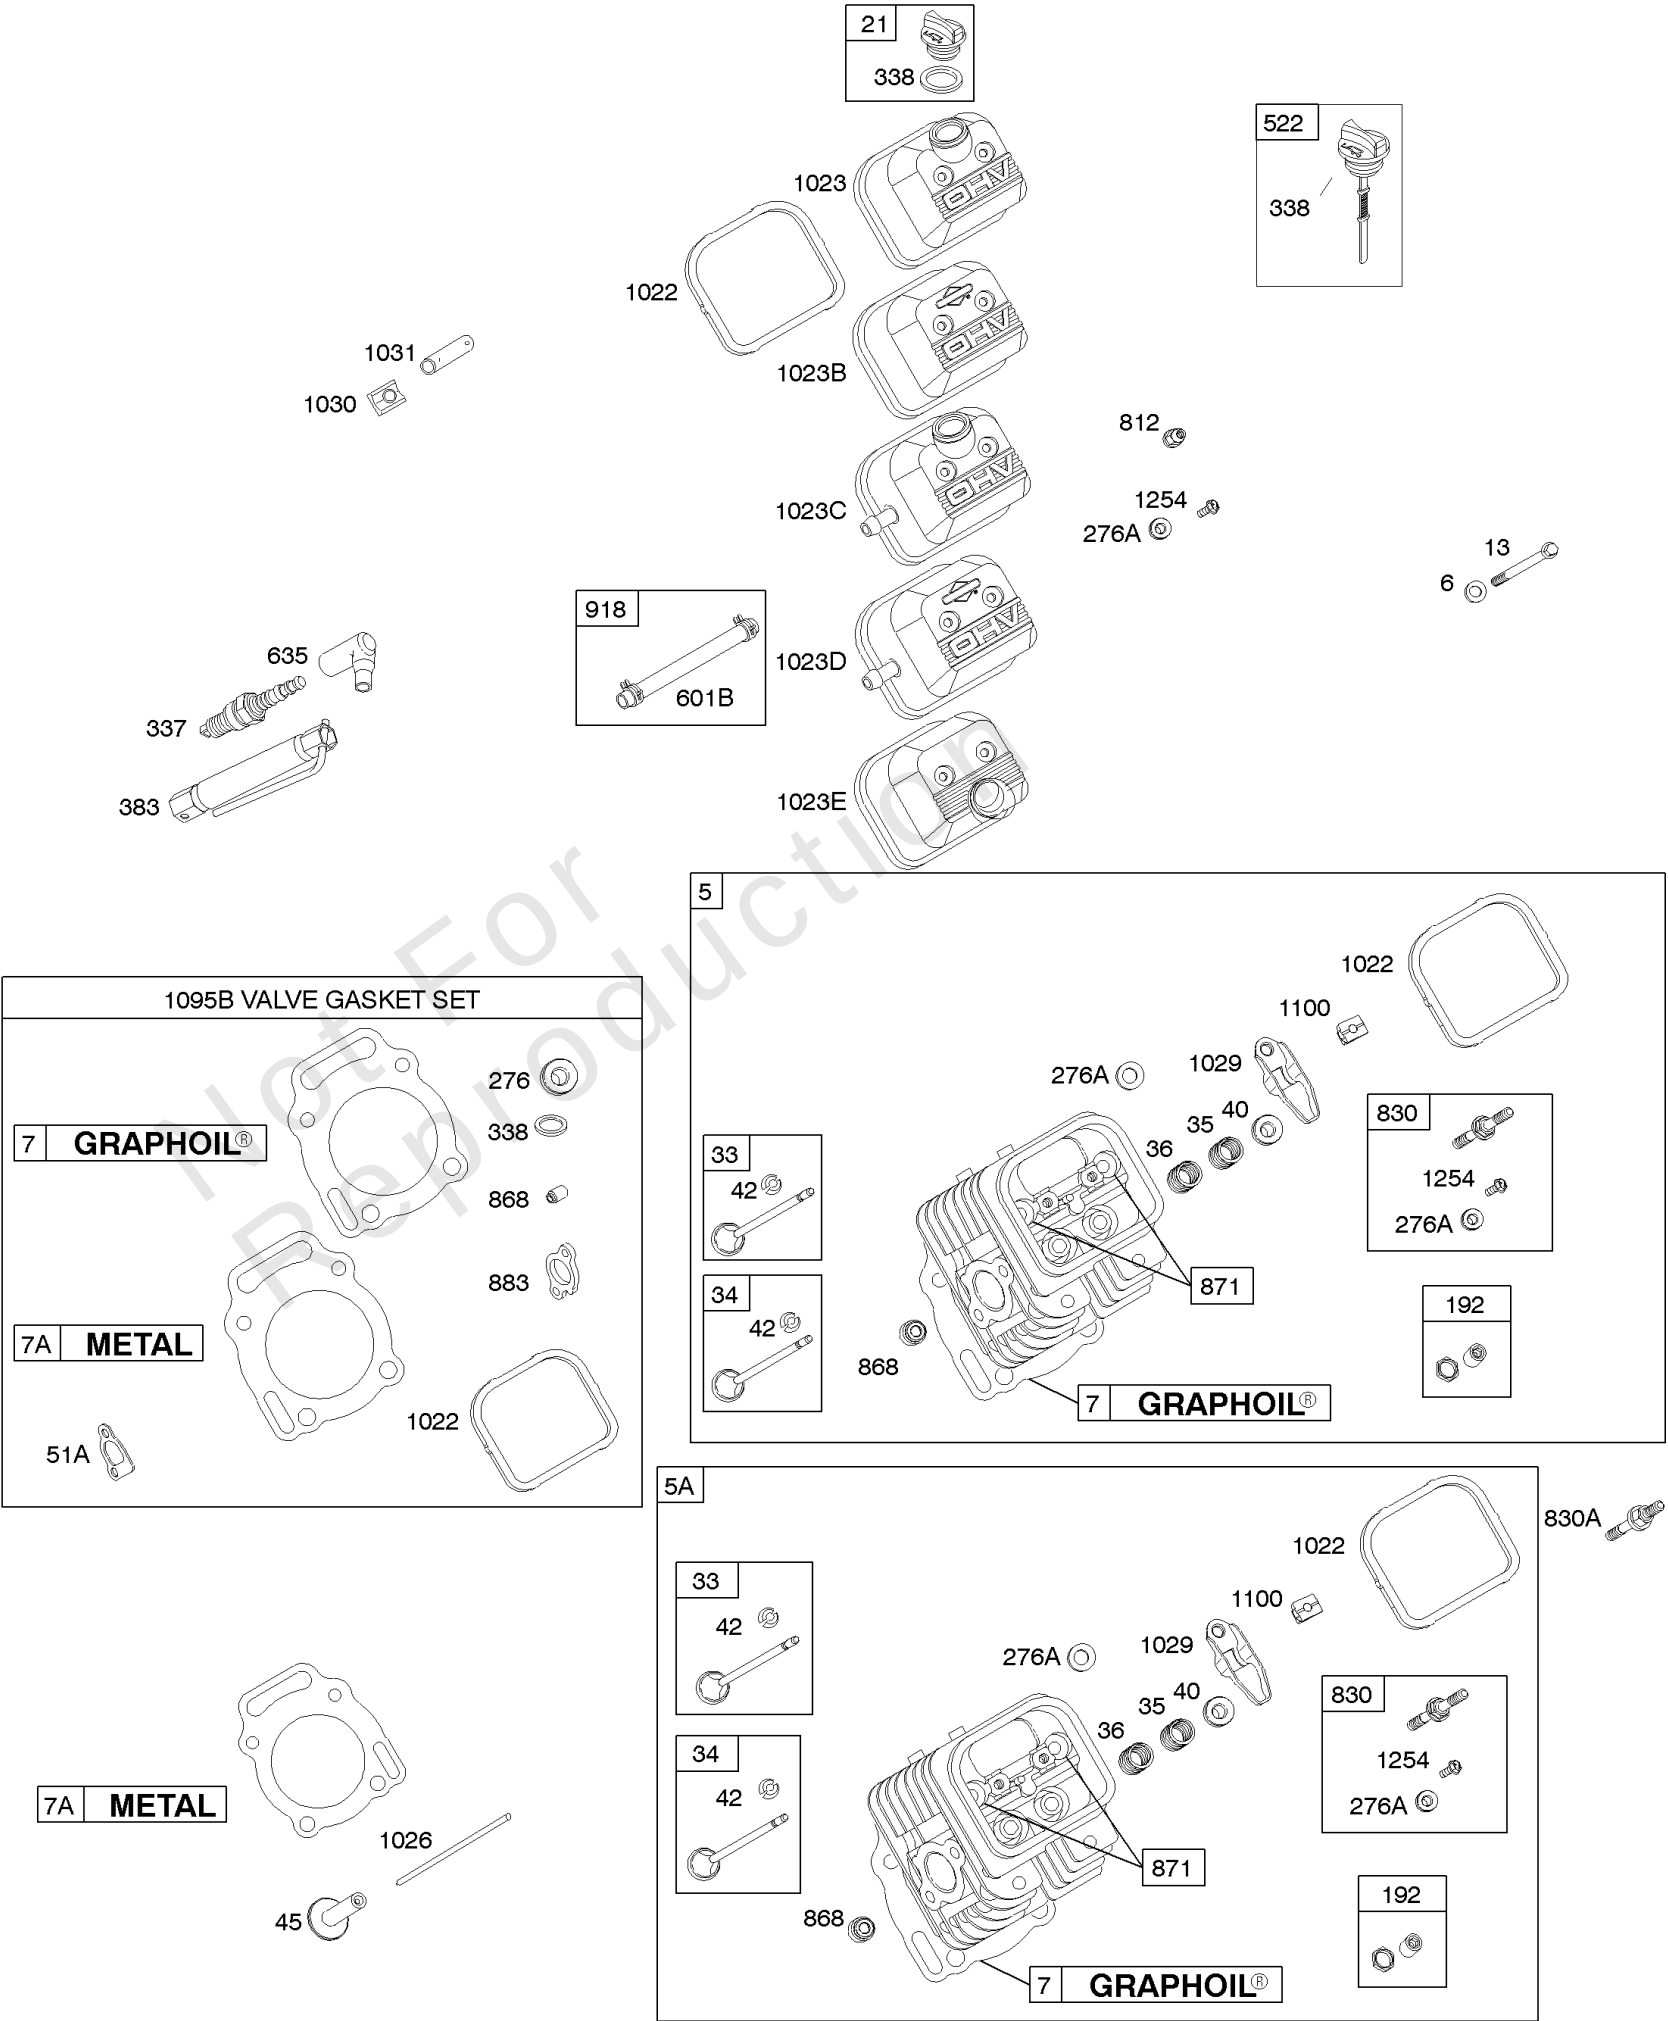


Cylinder Head, Valve Covers, Valve Gasket Set

REF NO	PART NO	QTY	DESCRIPTION
5	809200		HEAD, Cylinder -(Cylinder 1)
5A	809201		HEAD, Cylinder -(Cylinder 2)
6	805193		WASHER -(Cylinder Head) -Used Before Code Date 94050100
7	806085S		GASKET, Cylinder Head -(Graphoil) -Used After Code Date 96033100
7A	807986		GASKET, Cylinder Head -(Metal) -Used Before Code Date 96040100
13	692059		SCREW -(Cylinder Head)
21	809500		CAP, Oil Fill -Used Before Code Date 06020200
21	809500		CAP, Oil Fill -Used After Code Date 06020100
33	807681		VALVE, Exhaust
34	807680		VALVE, Intake
35	692084		SPRING, Valve -(Intake) -Used After Code Date 94011700
36	692084		SPRING, Valve -(Exhaust) -Used After Code Date 94011700
40	692058		RETAINER, Valve
42	807683		KEEPER, Valve
45	843379		TAPPET, Valve
51A	692035		GASKET, Intake -(Manifold to Cylinder Head)
192	807623		ADJUSTER, Rocker Arm
276	690704		WASHER -(Governor Crank)
276A	807085		WASHER, Sealing -(Rocker Arm Stud) -Used After Code Date 01120200
276A	691766		WASHER, Sealing -(Rocker Arm Stud) -Used Before Code Date 01120300
337	491055S		PLUG, Spark
337	84007216	2	PLUG, SPARK -(China Only)
383	19576S		WRENCH, Spark Plug
601B	791850		CLAMP, Hose
635	692076		BOOT, Spark Plug
812	692055		NUT -(Rocker Cover) -Used Before Code Date 01120300
830	809157		STUD, Rocker Arm -(Rocker Arm) -Used After Code Date 96033100
830A	691497		STUD, Rocker Arm -(Rocker Arm) -Used Before Code Date 96040100
868	691963		SEAL, Valve
871	692057		BUSHING, Valve Guide
883	691613		GASKET, Exhaust


Cylinder Head, Valve Covers, Valve Gasket Set

Mfg. No: 294446-0462-01

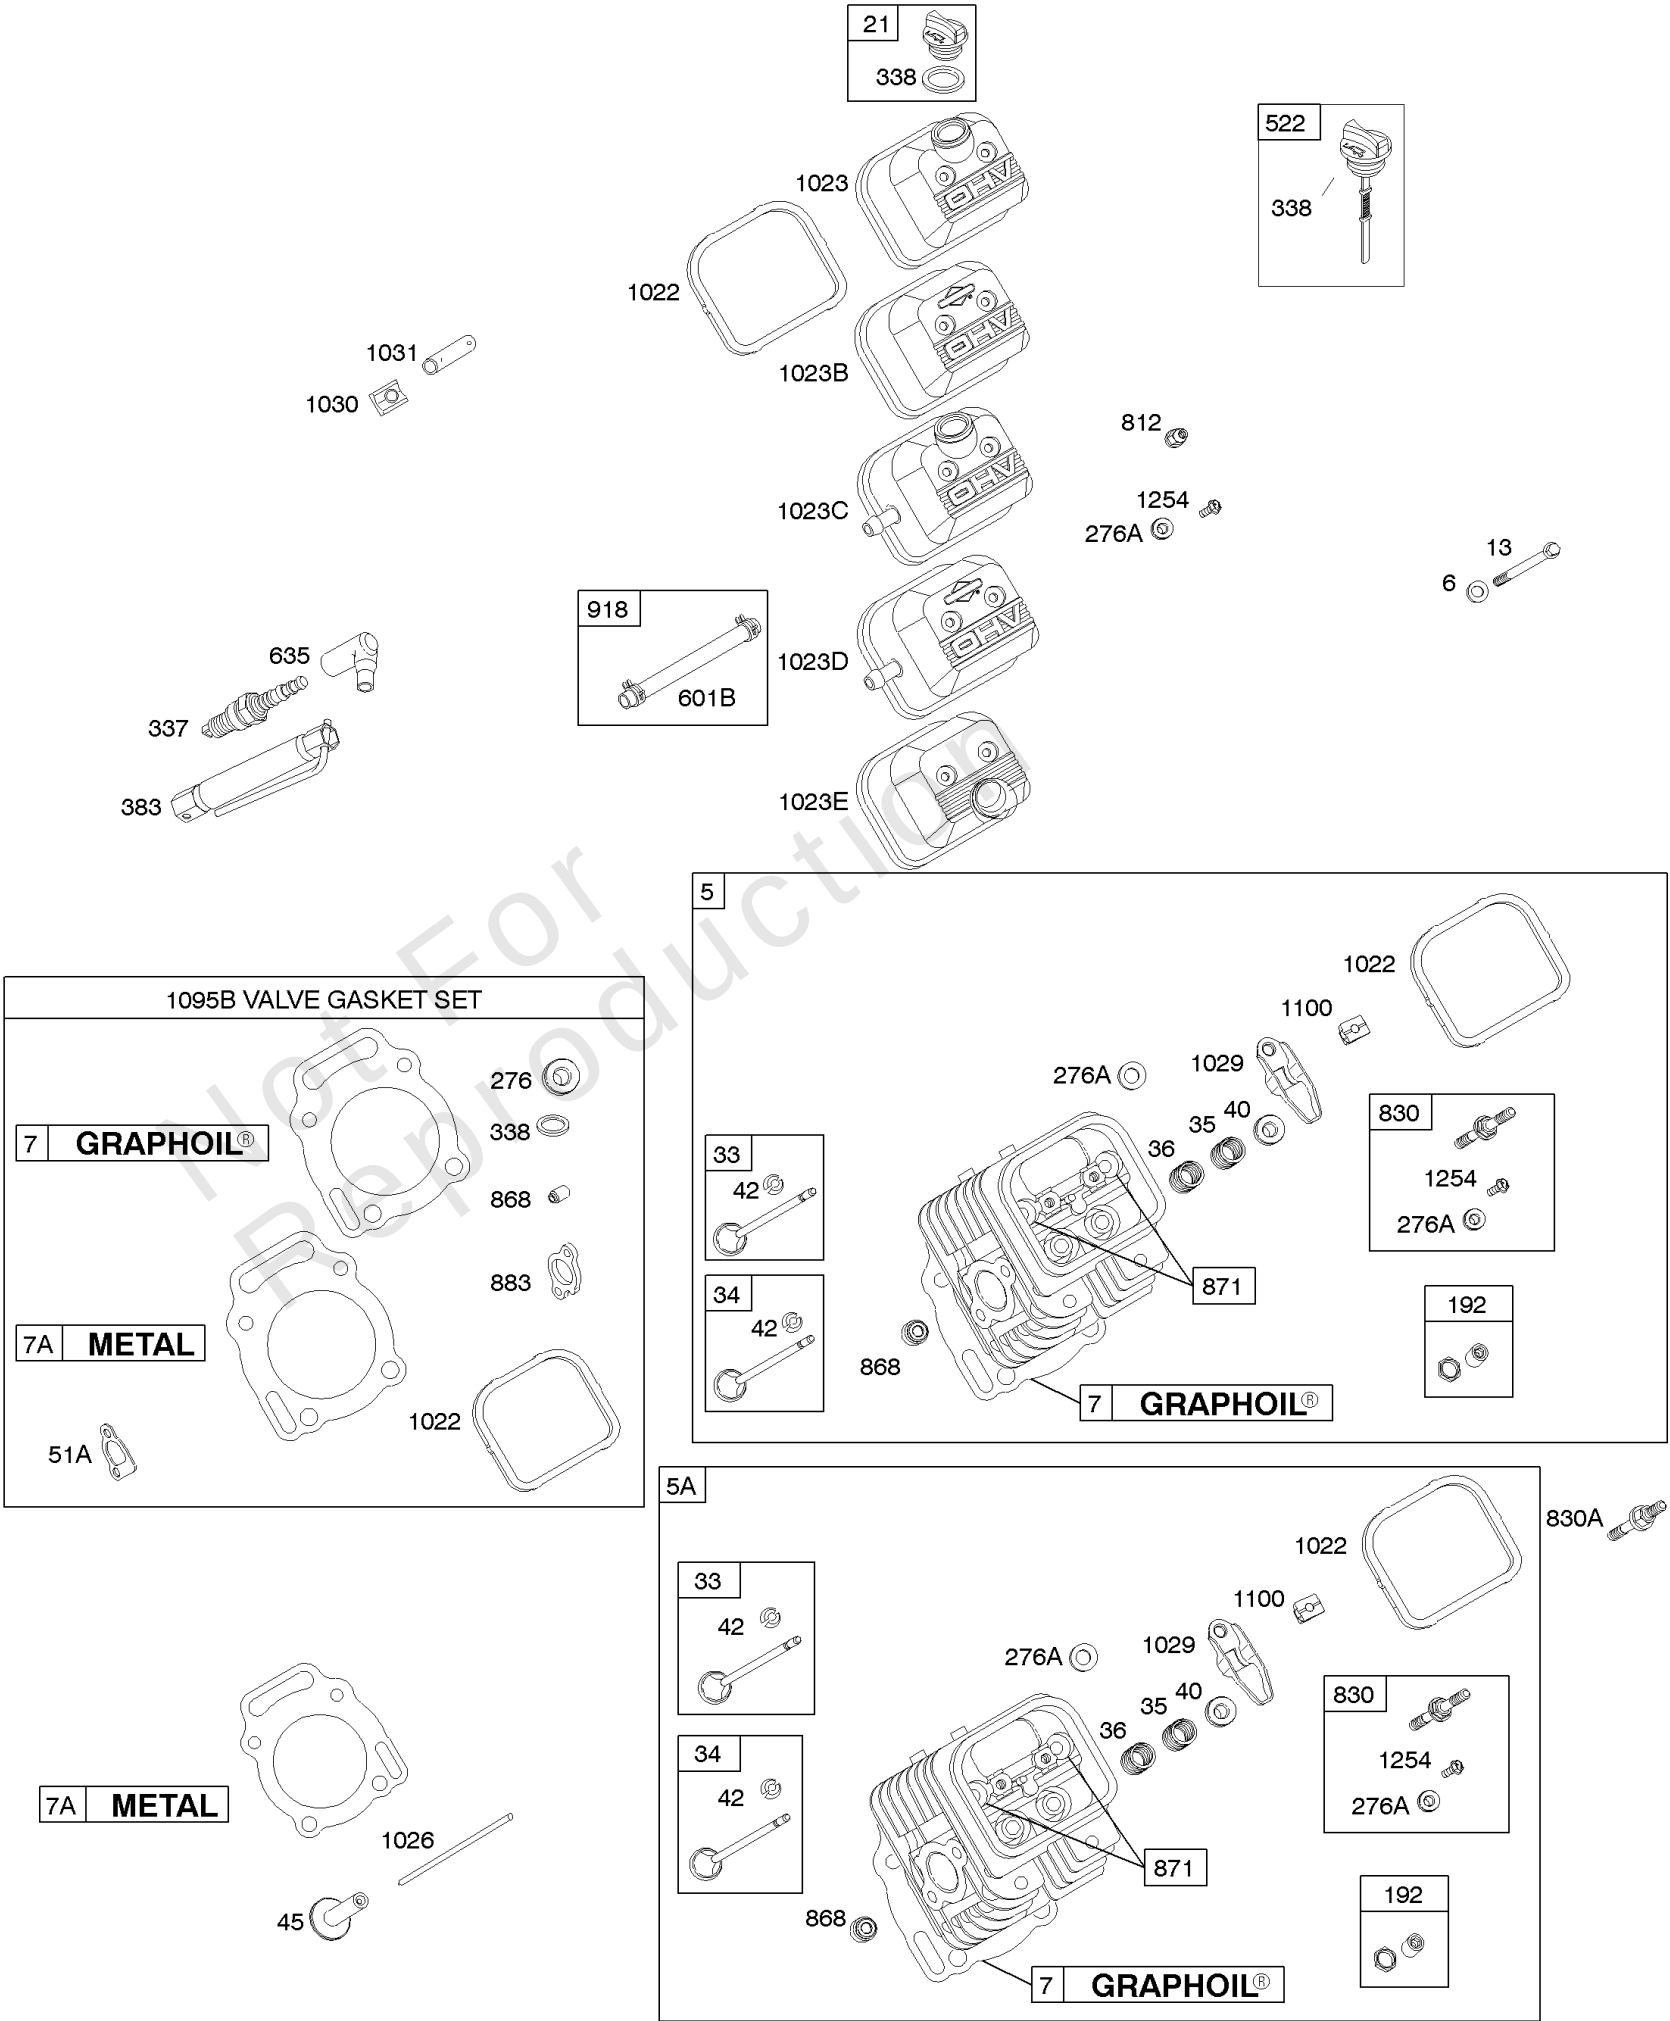


Cylinder Head, Valve Covers, Valve Gasket Set

REF NO	PART NO	QTY	DESCRIPTION
918	791880		HOSE, Vacuum -(Rocker Cover To Impulse Pump)(Cut To Required Length)
1022	806039S		GASKET, Rocker Cover
1023	843749		COVER, Rocker
1023B	691494		COVER, Rocker
1023E	691531		COVER, Rocker -(Used On Engines Equipped With 9 Quart Fuel Tanks)
1023D	691558		COVER, Rocker -(Cylinder 1) (With Fuel Pump) -Used Before Code Date 98060100
1023C	690910		COVER, Rocker -(Cylinder 1) (With Fuel Pump) -Used After Code Date 98053100
1026	691758		ROD, Push -(Exhaust)(Aluminum)
1026	691836		ROD, Push -(Intake)(Steel)
1029	807323		ARM, Rocker
1030	691496		SUPPORT, Rocker Arm
1031	690693		SHAFT, Rocker Arm
1095B	842723		GASKET SET, Valve -Used After Code Date 01120200
1095B	808392		GASKET SET, Valve -Used Before Code Date 01120300
1100	791959		PIVOT, Rocker Arm
1254	807084		SCREW -(Rocker Arm Stud) (Used on Stud For Rocker Cover) -Used After Code Date 01120200

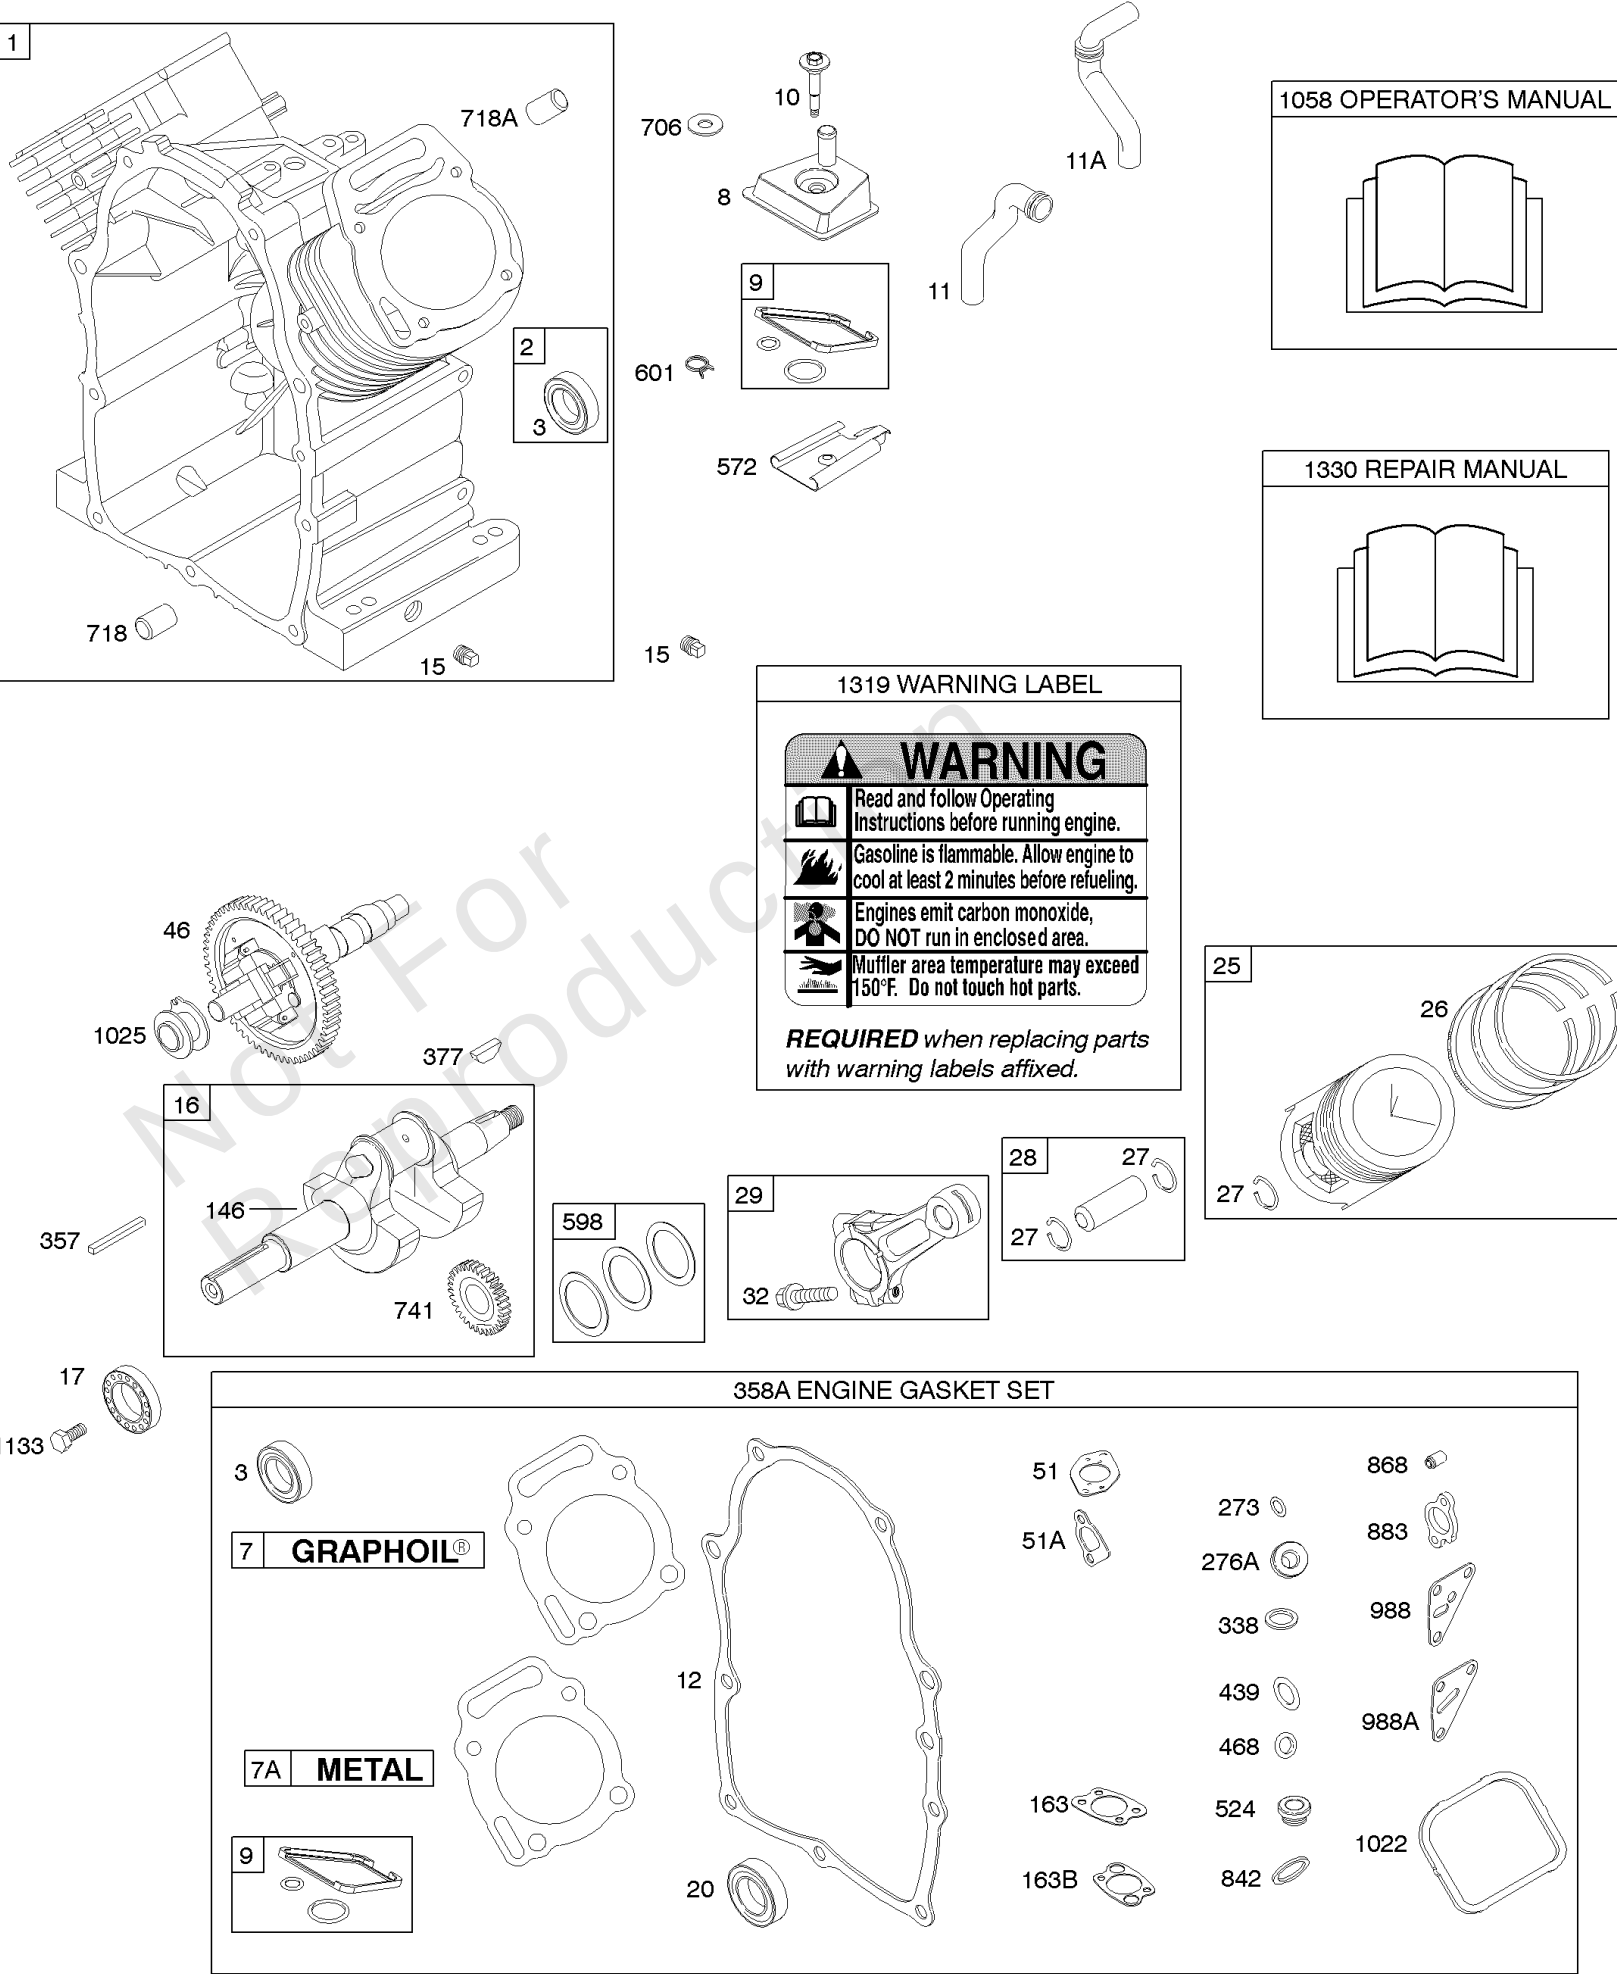




Cylinder, Piston/Rings/Connecting Rod, Engine Gasket Set

REF NO	PART NO	QTY	DESCRIPTION
1	692178		CYLINDER ASSEMBLY -Used After Code Date 97043000
1	807521		CYLINDER ASSEMBLY -Used Before Code Date 97050100
2	807687		KIT, Bushing/Seal -(Magneto Side) -Used Before Code Date 97050100
2	808534		KIT, Bushing/Seal -(Magneto Side) -Used After Code Date 97043000
3	805101S		SEAL, Oil -(Magneto Side)
7	806085S		GASKET, Cylinder Head -(Graphoil) -Used After Code Date 96033100
7A	807986		GASKET, Cylinder Head -(Metal) -Used Before Code Date 96040100
8	808984		BREATHER ASSEMBLY
9	844986		GASKET, Breather
10	690751		SCREW -(Breather Assembly) -Used After Code Date 90111400
10	805194		SCREW -(Breather Assembly) -Used Before Code Date 90111500
11	691556		TUBE, Breather
11A	806083S		TUBE, Breather
12	846487		GASKET, Crankcase
15	690946		PLUG, Oil Drain
16	807806		CRANKSHAFT
17	843827		BEARING, Ball
20	805049S		SEAL, Oil -(PTO Side)
25	807619		PISTON ASSEMBLY -(Standard)
25	807809		PISTON ASSEMBLY -(.020 Oversize)
26	807620		SET, Ring -(Standard)
26	807810		SET, Ring -(.020 Oversize)
27	690683		LOCK, Piston Pin
28	807621		PIN, Piston -(Standard)
29	807900S		ROD, Connecting -(Standard)
29	807803		ROD, Connecting -(.020 Undersize)
32	690698		SCREW -(Connecting Rod)
46	691557		CAMSHAFT
51	691694		GASKET, Intake -(Manifold To Carburetor)
51A	692035		GASKET, Intake -(Manifold to Cylinder Head)
146	691639		KEY, Woodruff
163	692081		GASKET, Air Cleaner -(Air Cleaner)

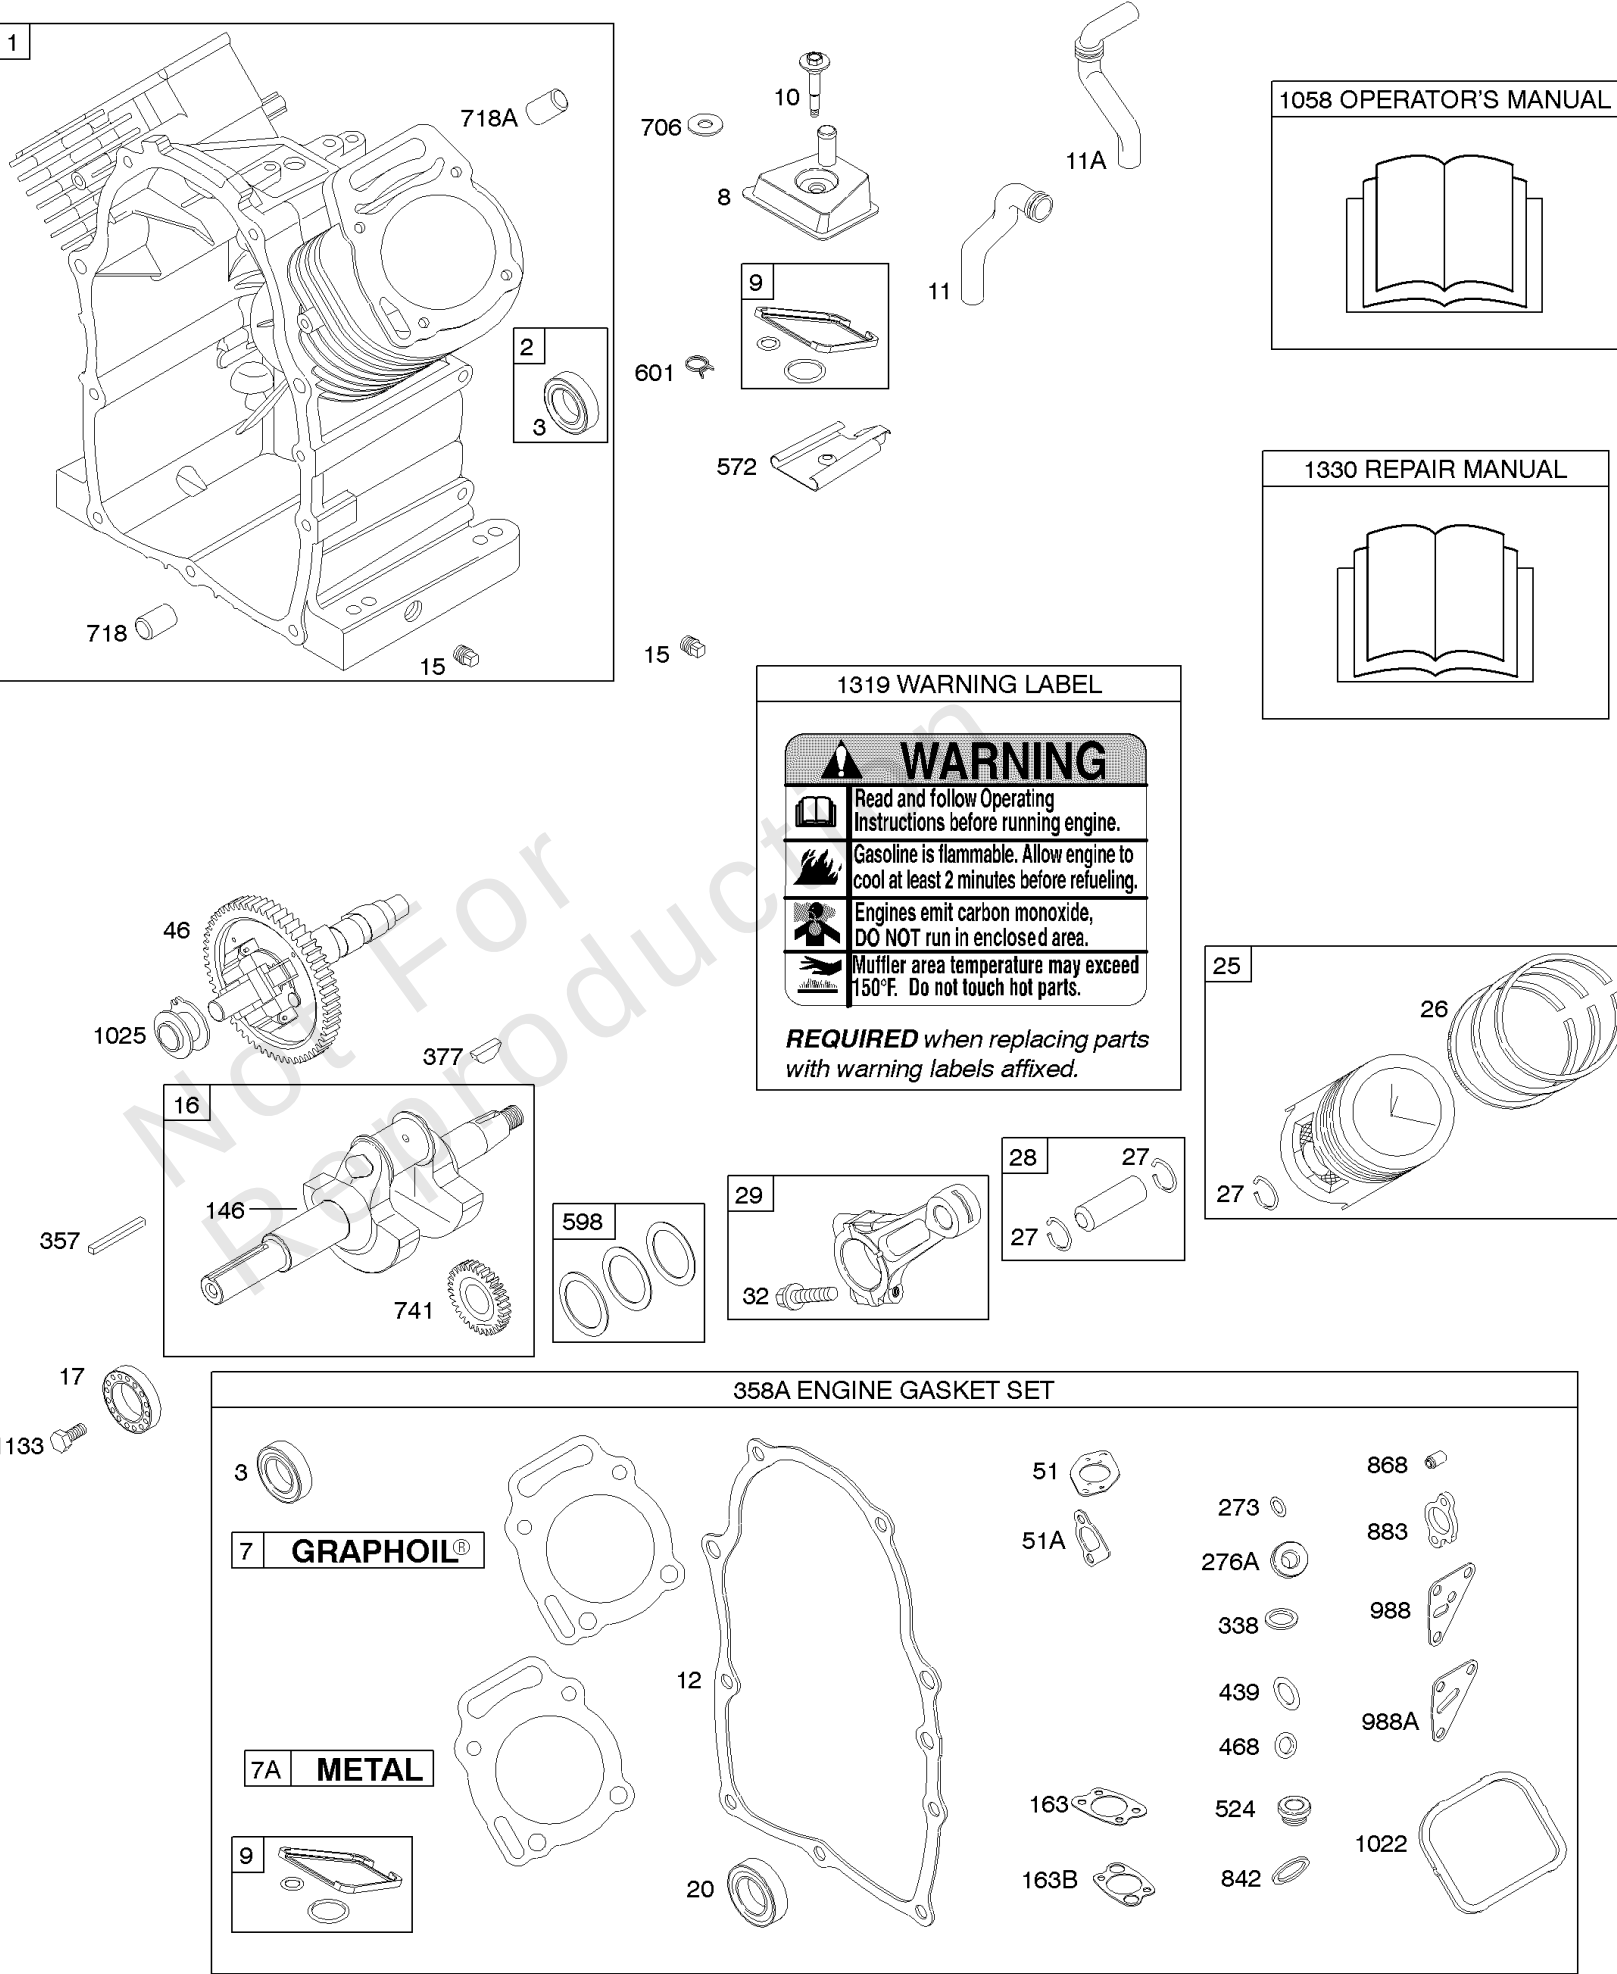



Cylinder, Piston/Rings/Connecting Rod, Engine Gasket Set

REF NO	PART NO	QTY	DESCRIPTION
163B	692052		GASKET, Air Cleaner -(Air Cleaner)
273	690681		SEAL, O-Ring -(Oil Pump)
276A	807085		WASHER, Sealing -(Rocker Arm Stud) -Used After Code Date 01120200
276A	691766		WASHER, Sealing -(Rocker Arm Stud) -Used Before Code Date 01120300
357	691483		KEY, Drive Pulley
358A	808704		GASKET SET, Engine -Used After Code Date 01120200
358A	808390		GASKET SET, Engine -Used Before Code Date 01120300
377	808095		KEY, Flywheel
439	805198		SEAL, O-Ring -(Crankcase Cover/Sump) or (Cylinder Assembly) -Used Before Code Date 97050100
439	692154		O-RING, Oil Gallery -(Crankcase Cover/Sump) or (Cylinder Assembly) -Used After Code Date 97043000
468	690690		SEAL, O-Ring -(Oil Pump Screen)
524	281370S		SEAL, Dipstick Tube -(Dipstick Tube) -Used Before Code Date 98060100
524	693172		SEAL, O-Ring -(Dipstick Tube) -Used After Code Date 98053100
572	690686		BAFFLE, Breather
598	807625		SHIM, End Play -(Crankshaft or Camshaft Bearing)
601	691038		CLAMP, Hose
706	805484		WASHER -(Breather Assembly) -Used Before Code Date 90111500
718	806469		PIN, Locating
718A	805102		PIN, Locating -Used Before Code Date 90091100
741	691530		GEAR, Timing
842	690611		SEAL, O-Ring -(Dipstick Tube)
868	691963		SEAL, Valve
883	691613		GASKET, Exhaust
988	692063		GASKET, Oil Adapter
988A	690687		GASKET, Oil Adapter
1022	806039S		GASKET, Rocker Cover
1025	690689		SPOOL, Governor
1058	276344TRI		MANUAL, Operator's
1133	690342		SCREW -(Crankshaft)
1319	794467		LABEL, Warning
1330	272144		MANUAL, Repair

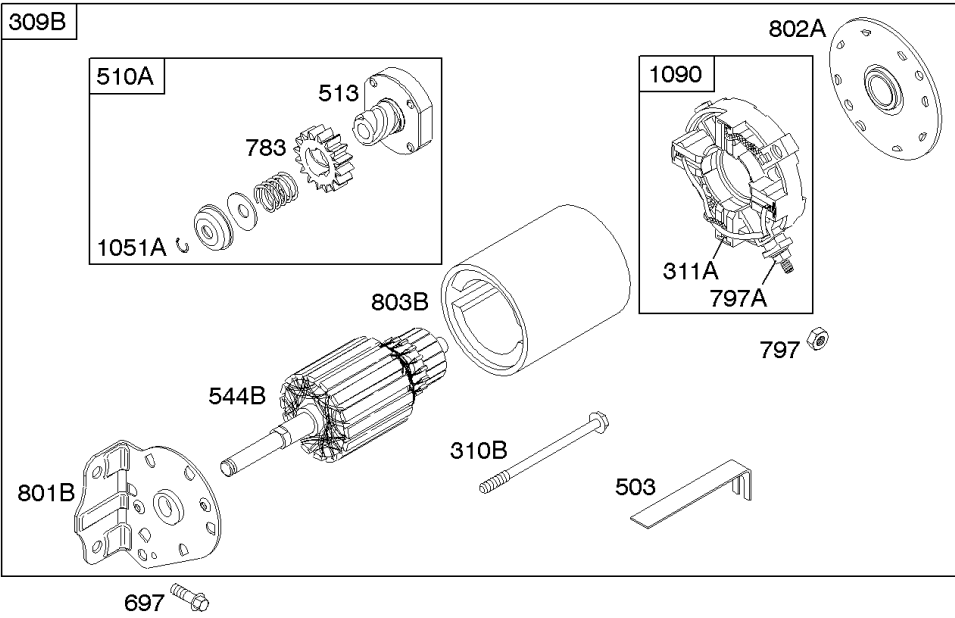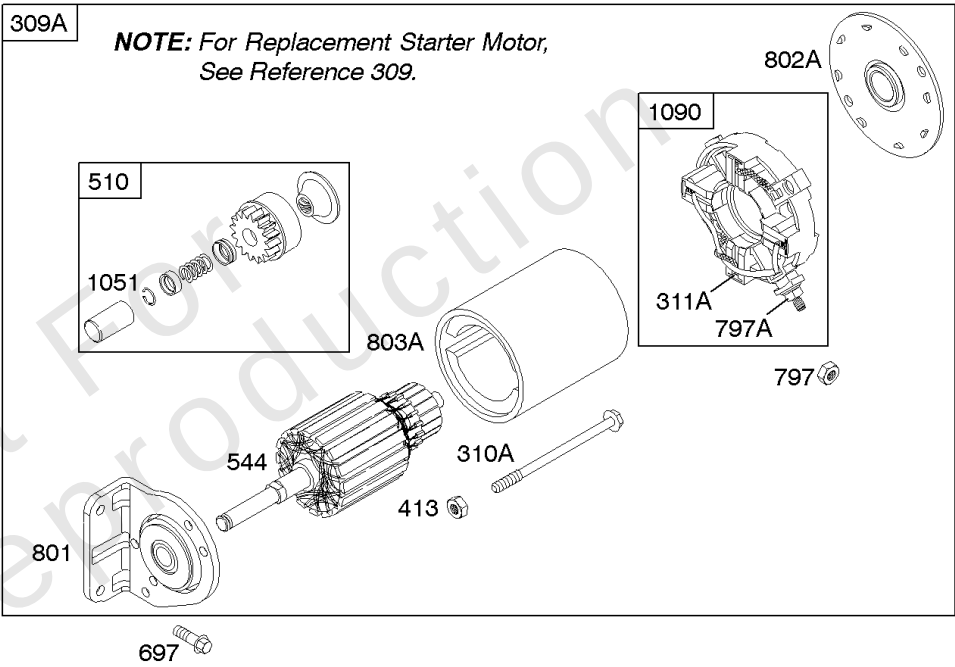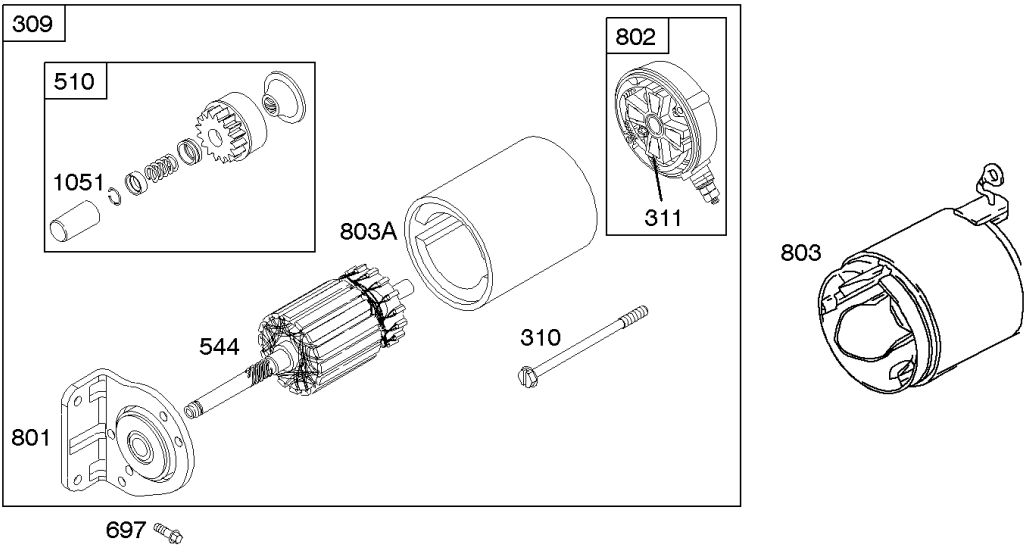


Electric Starter

REF NO	PART NO	QTY	DESCRIPTION
309	691564		MOTOR-STARTER -(Steel Ring Gear Only)
309B	795121		MOTOR-STARTER
310	496880		SCREW -(Starter Motor) (4 1/4)
310A	690323		SCREW -(Starter Motor) (4 7/16" Long)
311	496887		SET, Brush
311A	497608		SET, Brush
413	693587		NUT -(Starter Motor)
503	691532		STRAP, Starter
510	496881		DRIVE, Starter
510A	696541		DRIVE, Starter
513	692024		CLUTCH, Drive
544	SEE COMMENT		GASKET, Float Bowl -(Service With 691564 Starter Motor Only)
544	-----		Armature-Starter -(Service With 691564 Starter Motor Only)
697	692062		SCREW -(Drive Cap)
783	695708		GEAR-PINION -(Aluminum Ring Gear Only)
797	691029		NUT -(Brush Retainer)
797A	693167		NUT -(Brush Retainer)
801	808778		CAP, Drive
801B	691283		CAP, Drive
802	496813		RETAINER, Brush
802A	691286		CAP, End
803	690854		HOUSING, Starter -(Air Cleaner Base)
803A	693547		HOUSING, Starter
803B	-----		Housing-Starter -(Serviced By 499521 Starter Motor Only)
1051	691124		RING, Retaining
1051A	691265		RING, Retaining
1090	691293		RETAINER, Brush

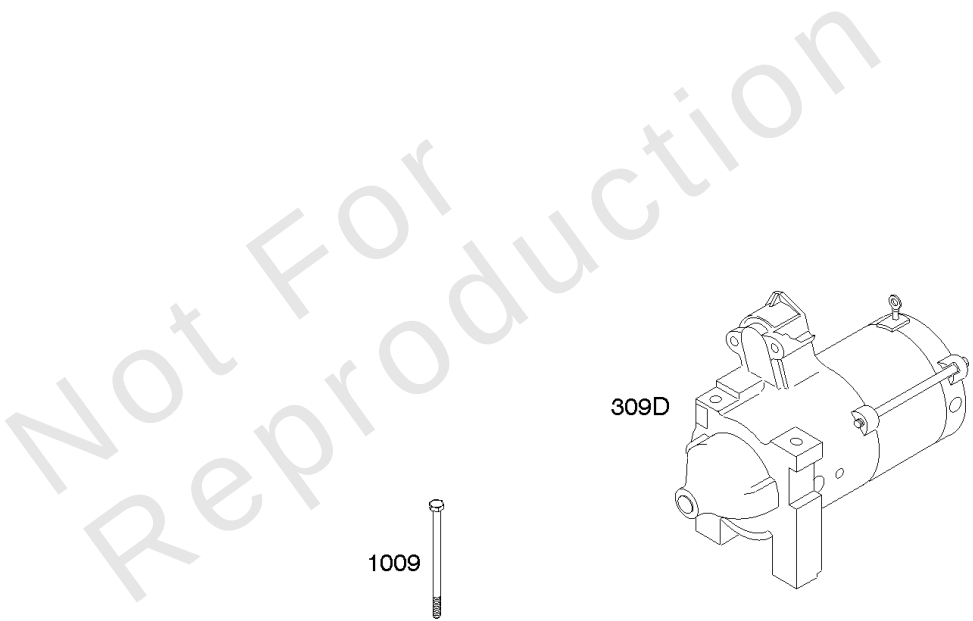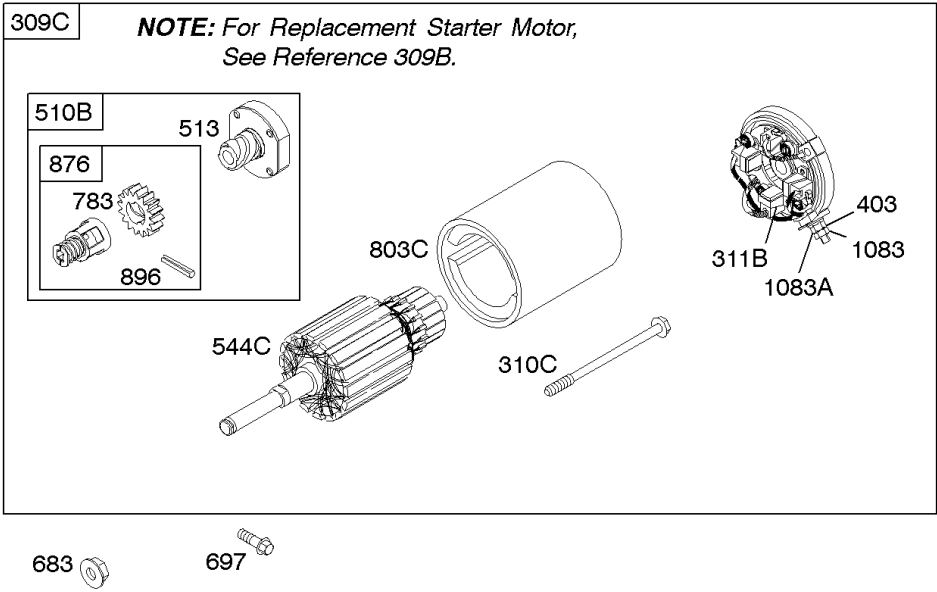


Electric Starter

REF NO	PART NO	QTY	DESCRIPTION
309C	-----		Motor-Starter -(Serviced By 499521 Starter Motor Only)
310C	691263		BOLT -(Starter Motor) (5-3/8) (4 3/8 Housing)
311B	490311		SET, Brush -(4 9/16 Housing)
403	690288		WASHER -(End Cap)
510B	696540		DRIVE, Starter
513	692024		CLUTCH, Drive
544C	490309		ARMATURE, Starter -(4 3/8 Housing)
683	691029		NUT -(Starter Solenoid)
697	692062		SCREW -(Drive Cap)
783	695708		GEAR-PINION -(Aluminum Ring Gear Only)
803C	494205		HOUSING, Starter -(4 3/8 Housing)
803C	398892		HOUSING, Starter -(4 9/16 Housing)
896	691641		PIN, Drive Retainer
1009	806474		SCREW -(Starter Motor)
1083	691626		NUT -(End Cap)
1083A	690958		NUT -(End Cap)

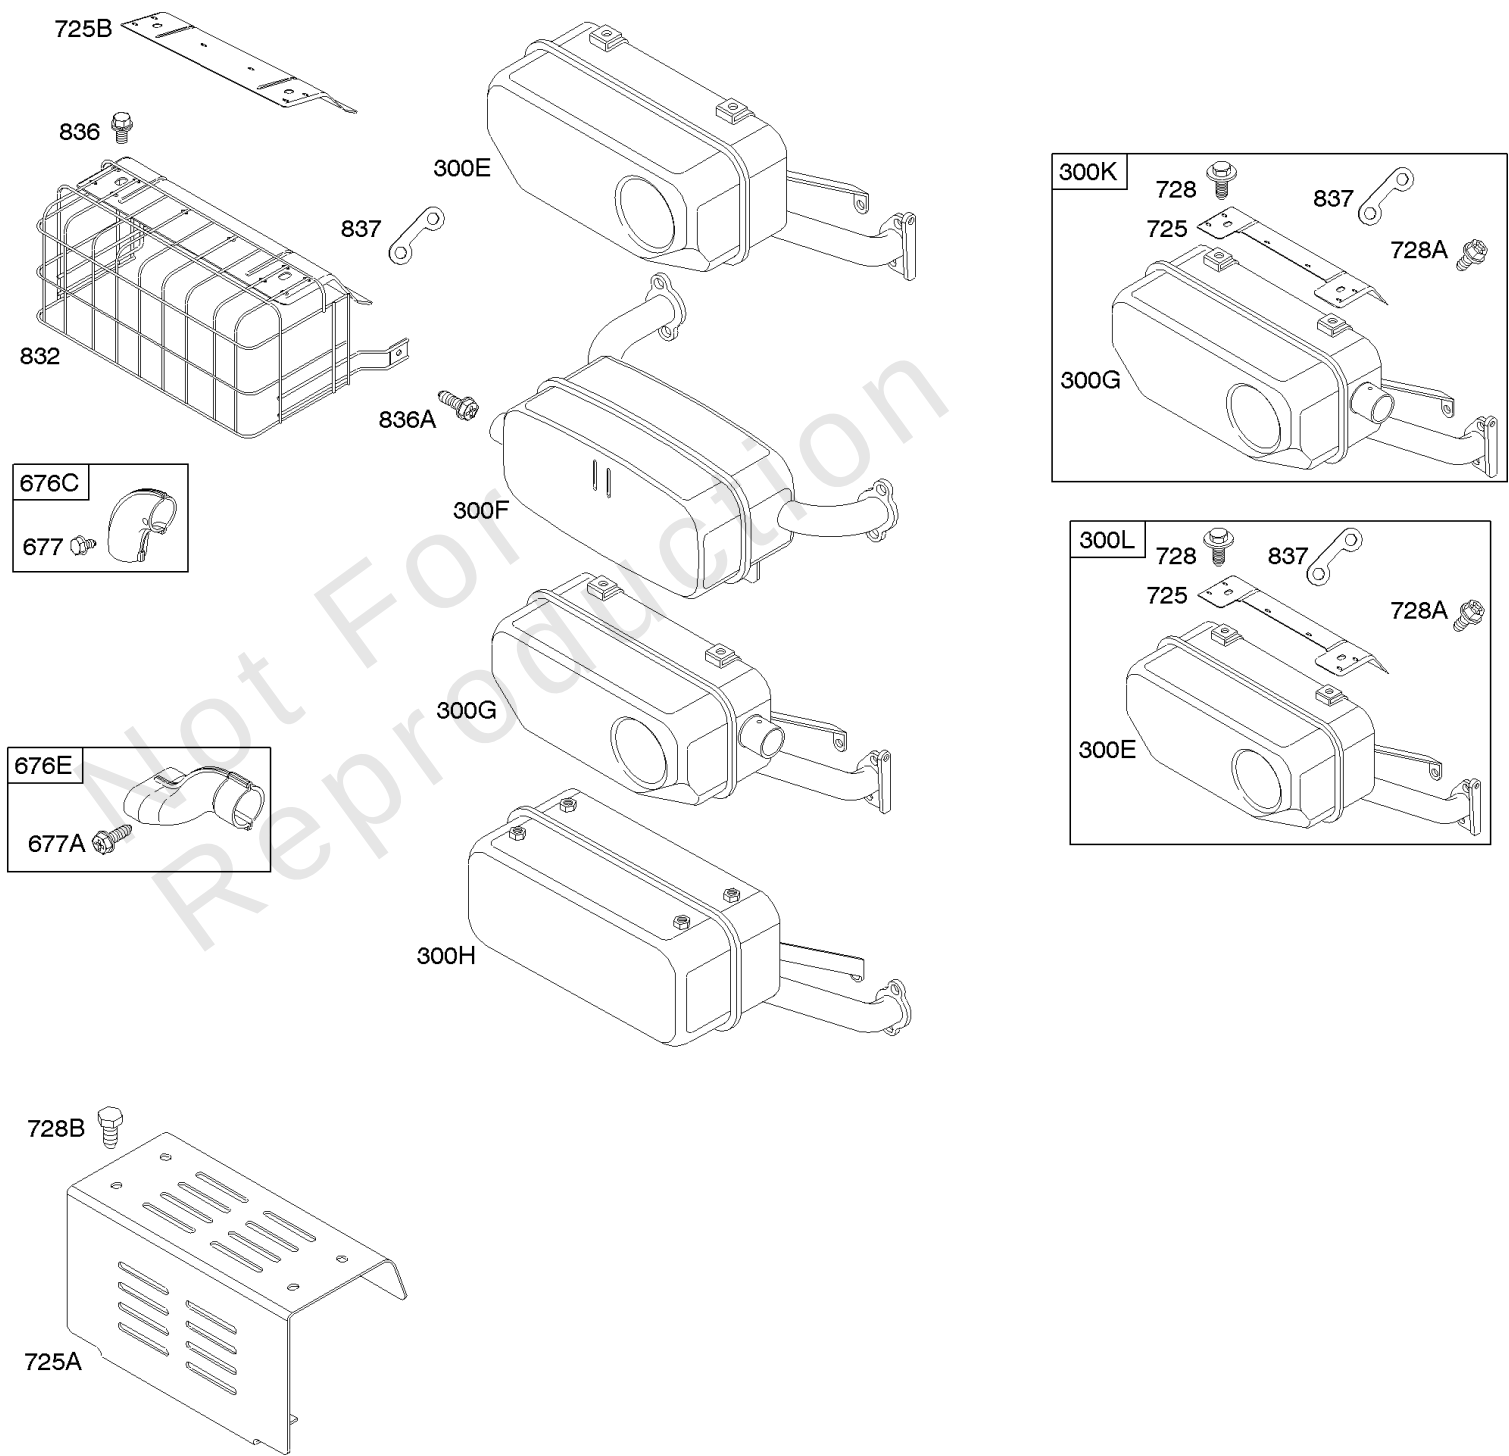


Exhaust System

REF NO	PART NO	QTY	DESCRIPTION
300E	690906		MUFFLER -(Cylinder 1) (Side Outlet)
300F	690931		MUFFLER -(Special High Mount)
300G	691562		MUFFLER -(Hi Mount)(Oil Filter Side Exit)
300H	807831		MUFFLER -(Cylinder 1)(Side Outlet)(Starter Motor Side)
300K	808379		MUFFLER -(Cylinder 2)(Side Outlet)(Oil Filter Side)
300L	808380		MUFFLER -(Cylinder 1)(Side Outlet)(Starter Motor Side)
676C	495518		DEFLECTOR, Muffler -(90 Degree Outlet)
676E	808393		DEFLECTOR, Muffler
677	810079		SCREW -(Muffler Deflector)
677A	690688		SCREW -(Muffler Deflector)
725	280866		SHIELD, Heat -(20)
725A	805702		SHIELD, Heat
725B	691498		SHIELD, Heat
728	691514		SCREW -(Heat Shield)
728A	692067		SCREW -(Heat Shield)
728B	805704		SCREW -(Heat Shield)
832	691571		GUARD, Muffler
836	691514		SCREW -(Muffler Guard)
836A	692067		SCREW -(Muffler Guard)
837	808085		SPACER, Muffler -(Includes 2)

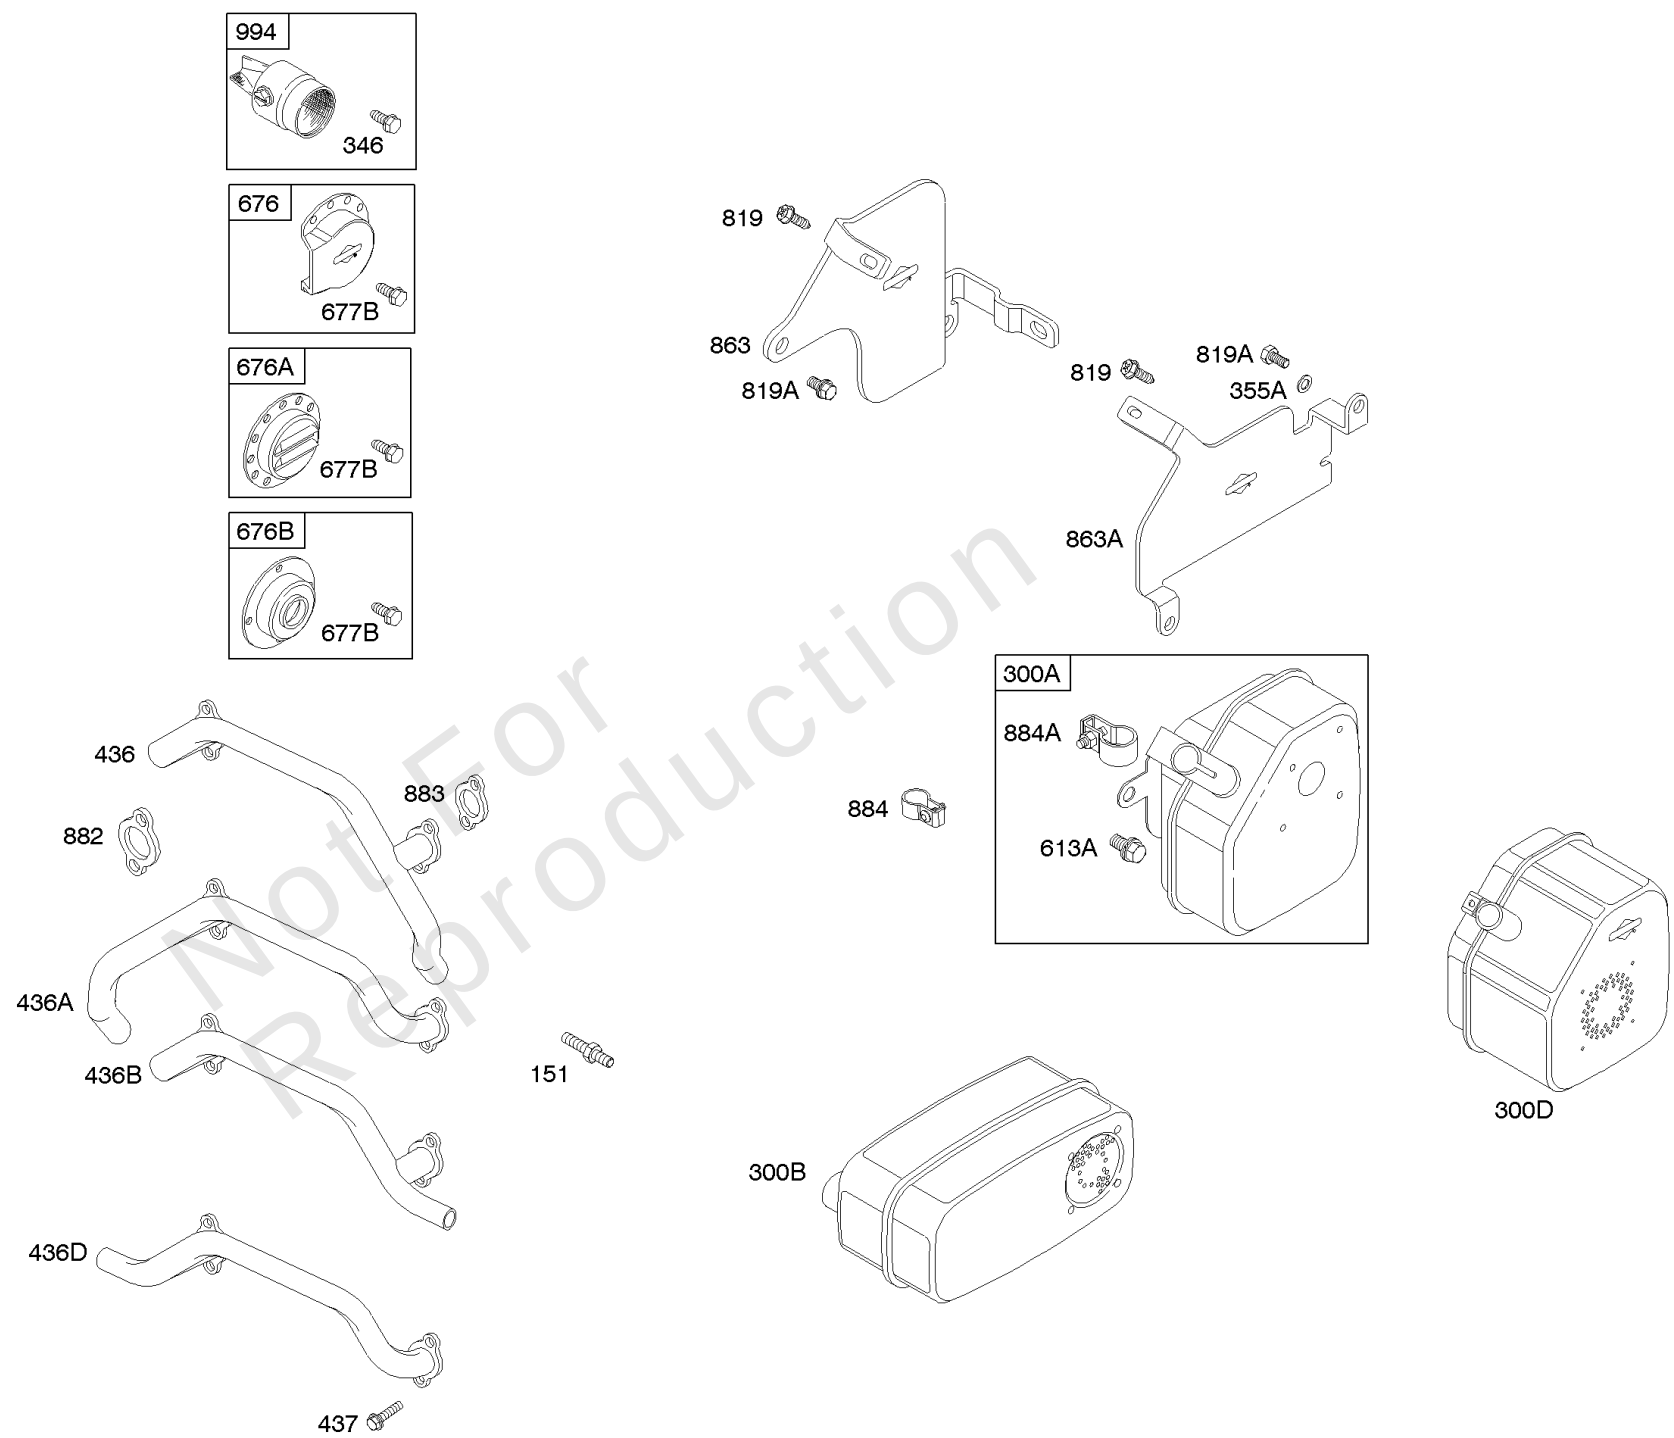


Exhaust System

REF NO	PART NO	QTY	DESCRIPTION
300A	807742		MUFFLER
300D	692099		MUFFLER -(Lo Mount)
346	690661		SCREW -(Spark Arrestor)
355A	690944		WASHER -(Muffler Bracket)
436	692061		MANIFOLD, Exhaust -(Used With Muffler 807742)
436A	691499		MANIFOLD, Exhaust -(Cylinder 2) (Side Outlet)
436B	691501		MANIFOLD, Exhaust -(Used With Muffler Supplied By Customer)
437	691902		SCREW -(Exhaust Manifold)
613A	692067		SCREW -(Muffler)
676	795036		DEFLECTOR, Muffler -(Side Out)
676A	795038		DEFLECTOR, Muffler -(Louvered)
676B	396903		DEFLECTOR, Muffler -(Direct Out)
677B	690661		SCREW -(Muffler Deflector)
819	692056		SCREW -(Muffler Bracket) (M8x14mm)
819	692067		SCREW -(Muffler Bracket) (M6x12mm)
819A	690943		SCREW -(Muffler Bracket) (M8x16mm)
863	691513		BRACKET, Muffler -(Cylinder 2) (Side Outlet)
863A	690756		BRACKET, Muffler -(Cylinder 1) (Side Outlet)
882	692074		FLANGE, Exhaust
883	691613		GASKET, Exhaust
884	690898		CLAMP, Muffler
884A	691956		CLAMP, Muffler
994	794945		ARRESTOR, Spark

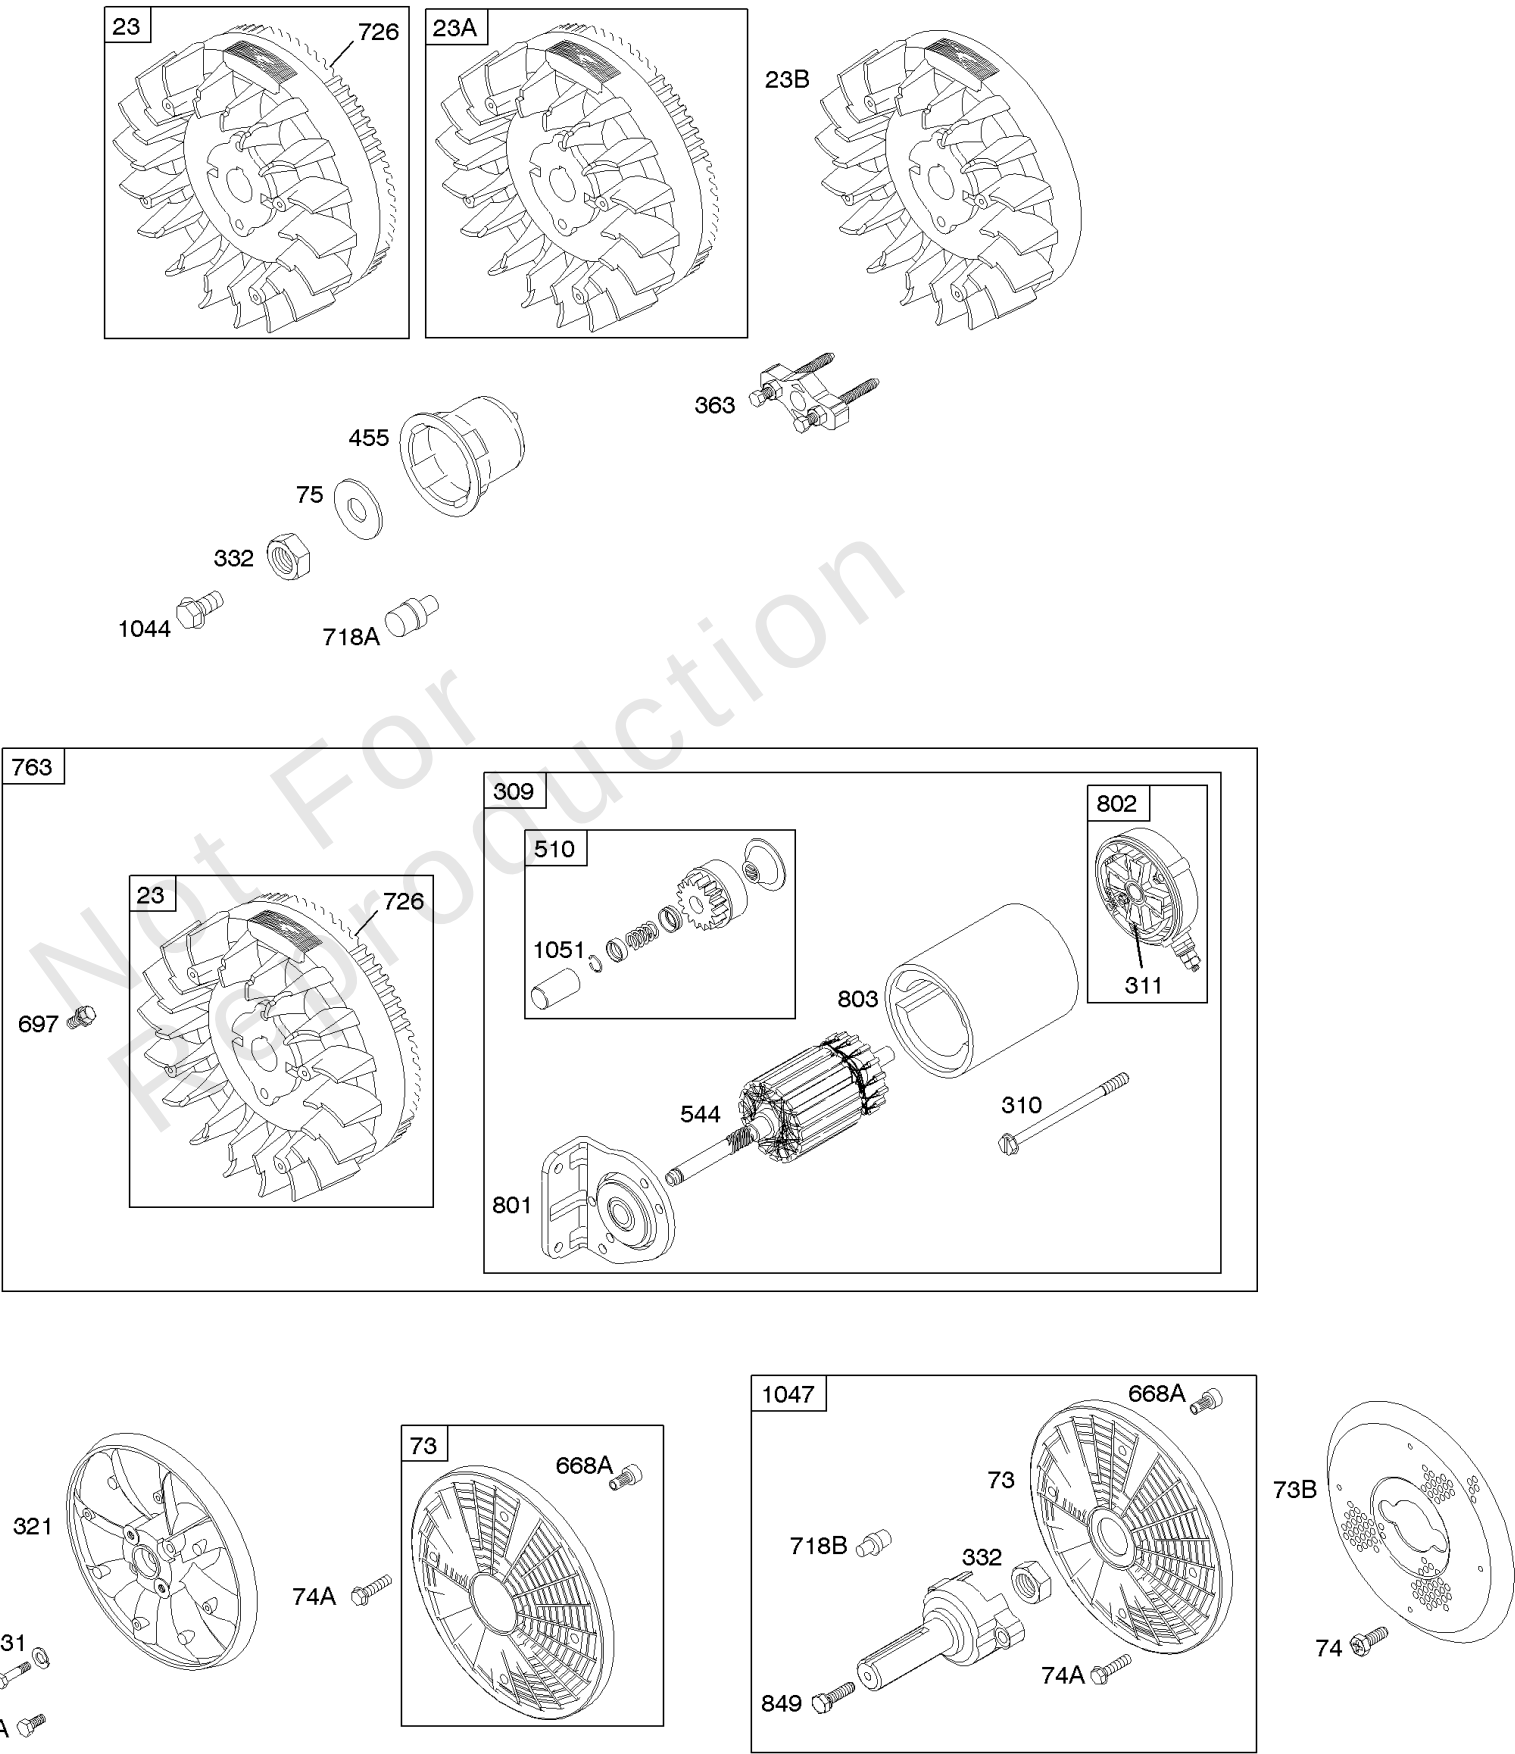

Flywheel, Starter Kit, Rotating Screen

REF NO	PART NO	QTY	DESCRIPTION
23	808770		FLYWHEEL -(Steel Ring Gear)
23A	-----		Flywheel -(For Replacement Flywheel, Order Part Number 808190, Starter Kit,Reference 763)
23B	690889		FLYWHEEL -(Rewind Starter)
73	494439		SCREEN, Rotating
73B	690478		SCREEN-ROTATING
74	691655		SCREW -(Rotating Screen)
74A	691647		SCREW -(Rotating Screen)
75	691490		WASHER -(Flywheel)
309	691564		MOTOR-STARTER -(Steel Ring Gear Only)
310	496880		SCREW -(Starter Motor) (4 1/4)
311	496887		SET, Brush
321	690379		FAN, Booster
331	691075		WASHER -(Booster Fan)
332	690887		NUT -(Flywheel)
363	19203		PULLER, Flywheel
440	690335		SCREW -(Booster Fan)
440A	690342		SCREW -(Booster Fan)
455	691517		CUP, Flywheel -Used After Code Date 93072500
455	805153		CUP, Flywheel -Used Before Code Date 93072600
510	496881		DRIVE, Starter
544	-----		Armature-Starter -(Service With 691564 Starter Motor Only)
544	SEE COMMENT		GASKET, Float Bowl -(Service With 691564 Starter Motor Only)
668A	691500		SPACER
697	692062		SCREW -(Drive Cap)
718A	805102		PIN, Locating -Used Before Code Date 90091100
718B	690740		PIN, Locating
726	-----		Gear-Ring -(Steel)(See Reference 23 for Service)
763	808190		KIT, Electric Starter -(12 Volt Gear Drive)
801	808778		CAP, Drive
802	496813		RETAINER, Brush
803	690854		HOUSING, Starter -(Air Cleaner Base)
849	691088		SCREW -(Stub Shaft)
1044	692056		SCREW -(Flywheel)
1047	841580		SHAFT, Stub








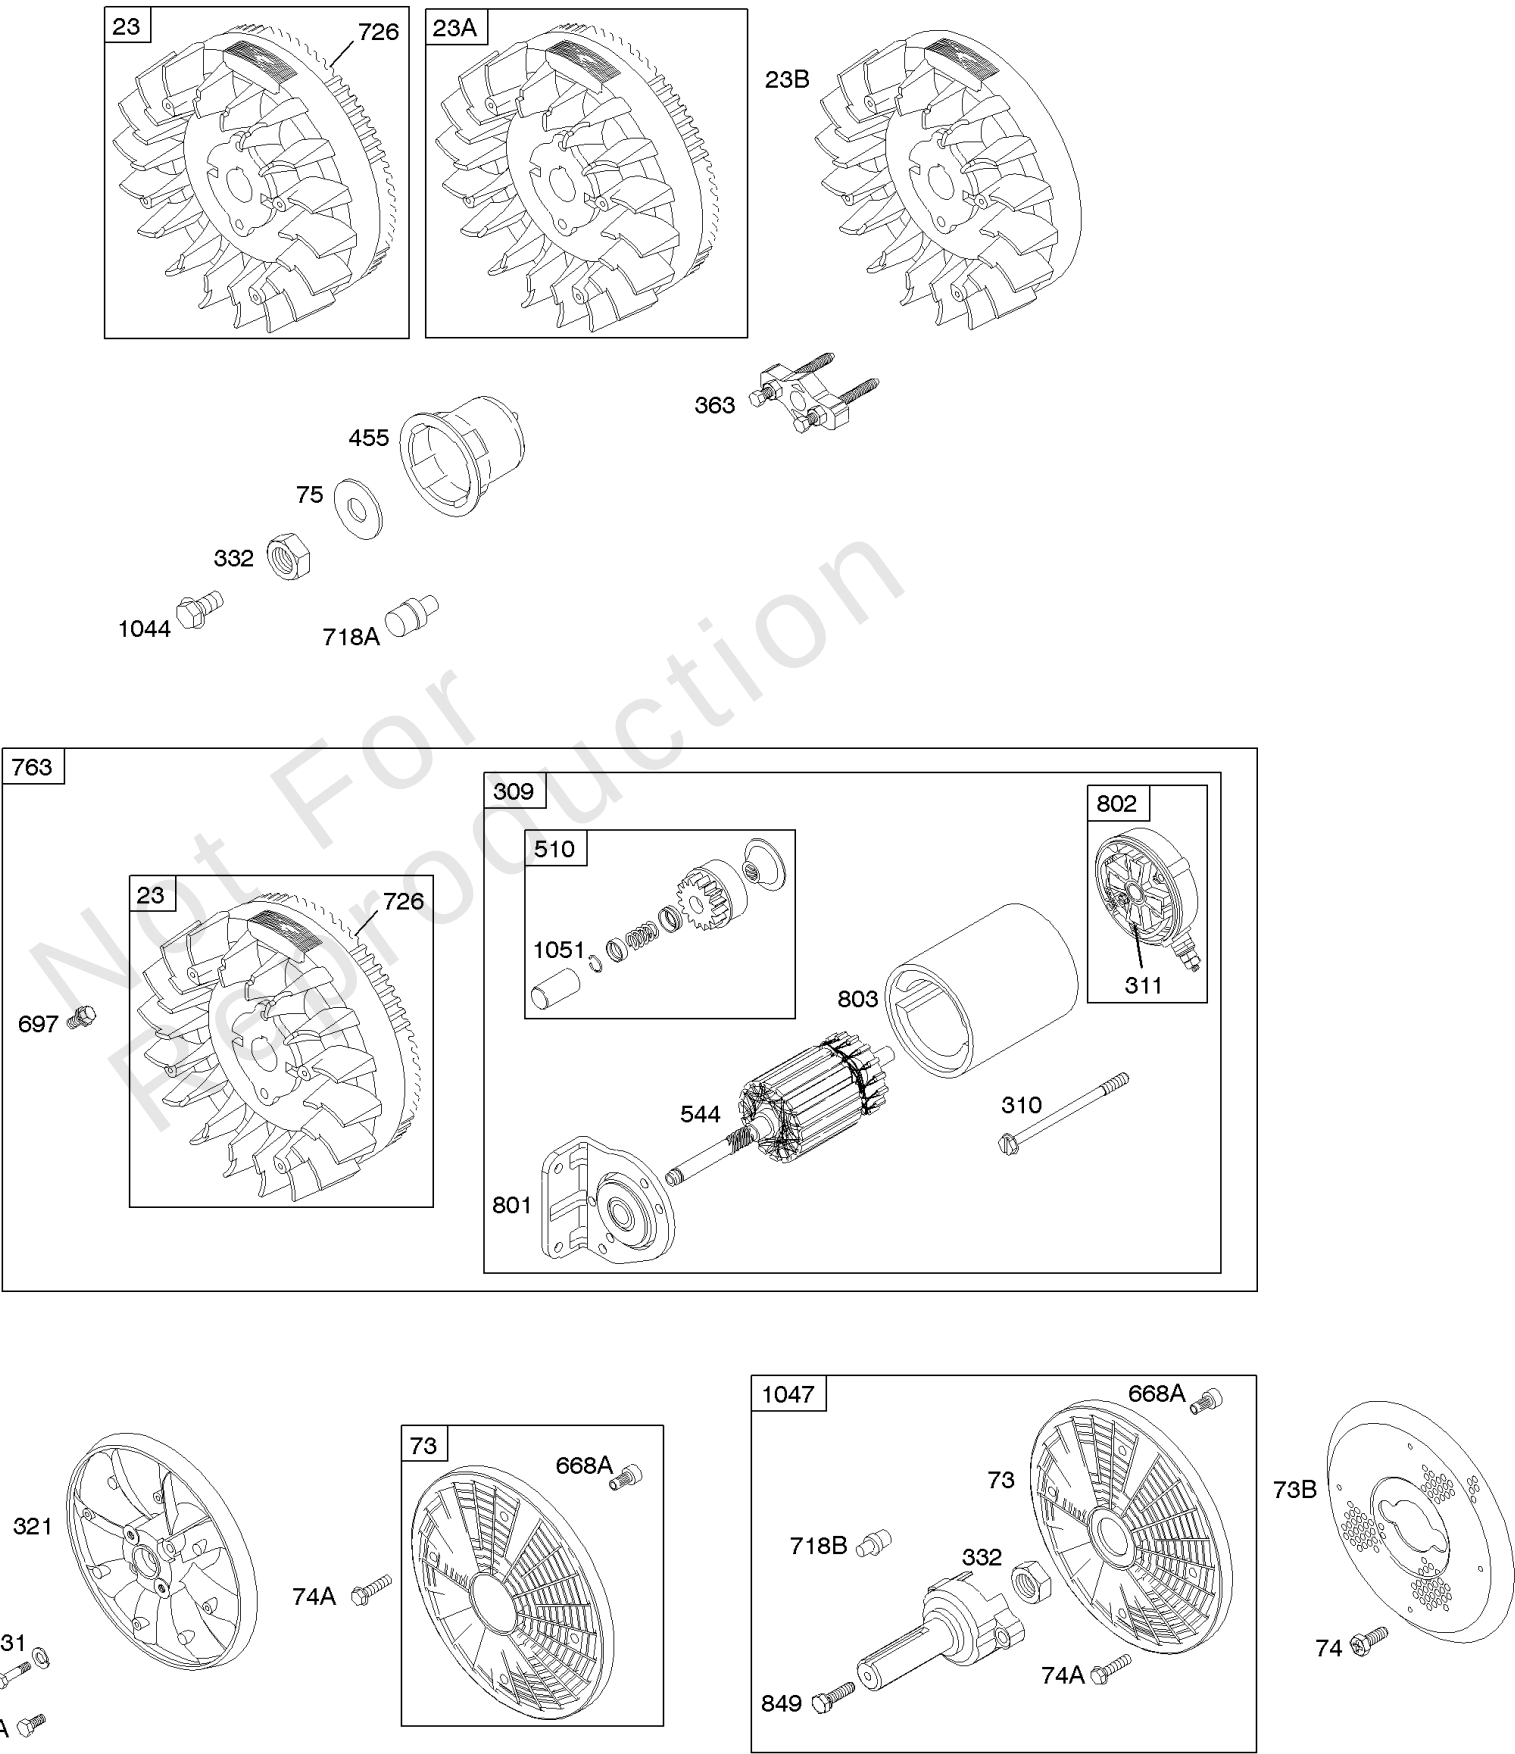


Flywheel, Starter Kit, Rotating Screen



REF NO	PART NO	QTY	DESCRIPTION
1051	691124		RING, Retaining

Not For Reproduction

 7 QUART

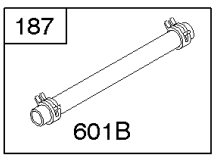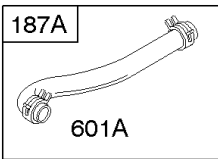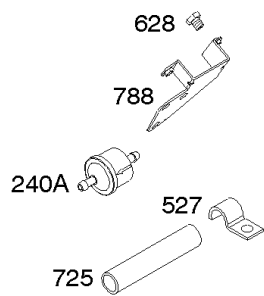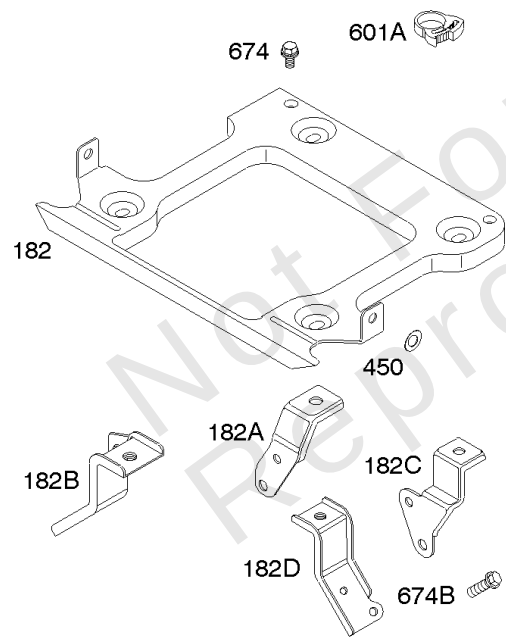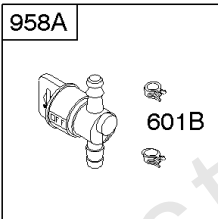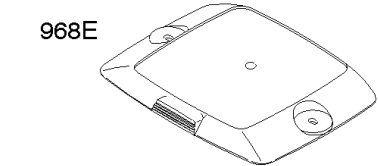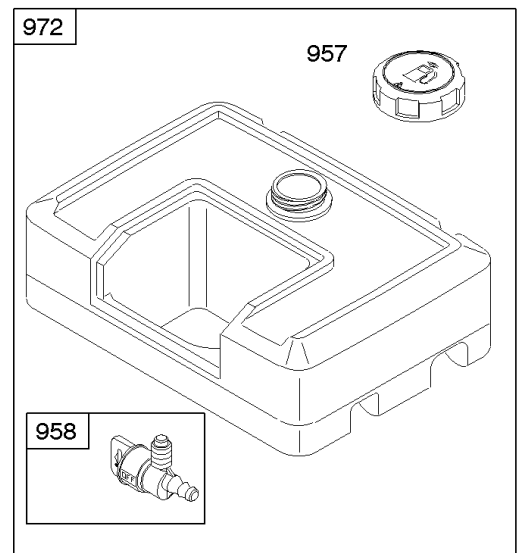


9 QUART

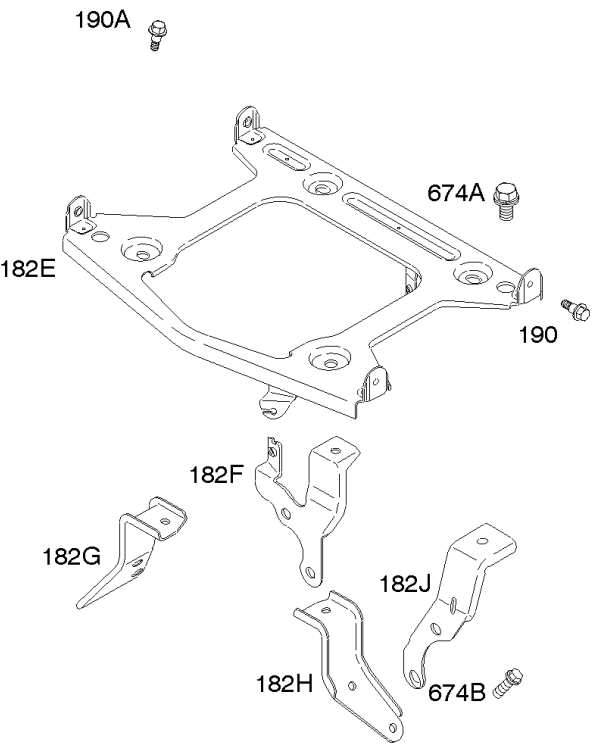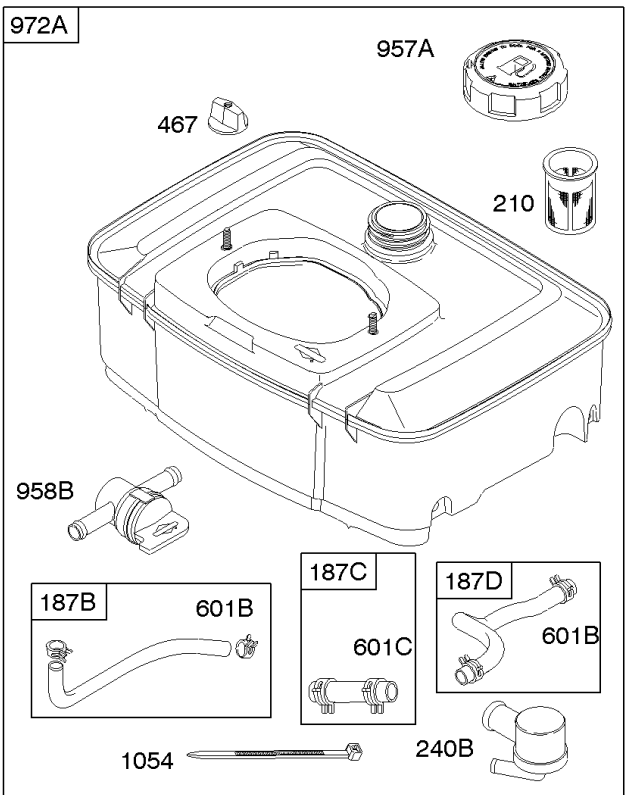







Fuel Tanks, Fuel Pumps, Fuel Hoses

REF NO	PART NO	QTY	DESCRIPTION
7	806085S		GASKET, Cylinder Head -(Graphoil) -Used After Code Date 96033100
9	844986		GASKET, Breather
182	492317		BRACKET, Fuel Tank
182A	690778		BRACKET, Fuel Tank
182B	690779		BRACKET, Fuel Tank
182C	690780		BRACKET, Fuel Tank
182D	690781		BRACKET, Fuel Tank
182F	691520		BRACKET, Fuel Tank
182G	691523		BRACKET-FUEL TANK -Used Before Code Date 04012100
182H	691524		BRACKET, Fuel Tank
182J	691525		BRACKET, Fuel Tank
182G	841600		BRACKET, Fuel Tank -Used After Code Date 04012000
182E	841601		BRACKET-FUEL TANK
187	791766		LINE, Fuel -(Cut To Required Length)
187A	791801		HOSE, Vacuum -(Molded)
187B	692107		LINE, Fuel -(Molded)
187D	692108		LINE, Fuel -(Molded)
187C	692106		LINE, Fuel -(Fuel Tank to Fuel Filter)
190	692199		SCREW -(Fuel Tank)
190A	692056		SCREW -(Fuel Tank) (M8x14mm)
210	691370		STRAINER, Fuel
240	298090S		FILTER, Fuel
240A	84001895		FILTER, Fuel
240B	808116S		FILTER, Fuel
385	807084		SCREW -(Fuel Pump)
387	808656		PUMP, Fuel
450	806497		WASHER -(Fuel Tank Bracket)
467	691985		KNOB, Air Cleaner Cover
527	690423		CLAMP, Tube
601A	805813		CLAMP, Hose
601B	791850		CLAMP, Hose
601C	691522		CLAMP, Hose
628	806660		SCREW -(Fuel Pump Bracket)
674	692056		SCREW -(Fuel Tank Bracket) (M8x14mm)
674A	94536		SCREW -(Fuel Tank Bracket) (M8x11mm)
674B	692062		SCREW -(Fuel Tank Bracket) (M8X18mm)
725	280866		SHIELD, Heat -(20)
788	691559		BRACKET, Fuel Pump



7 QUART

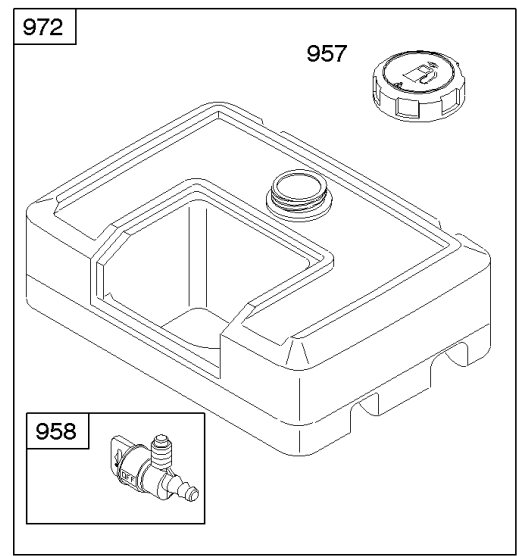

968E

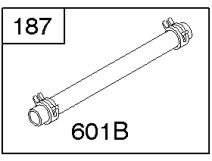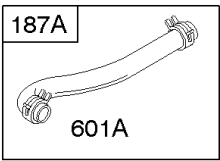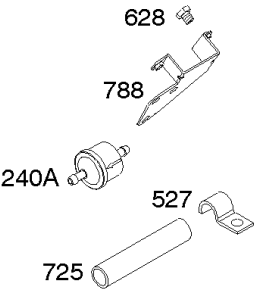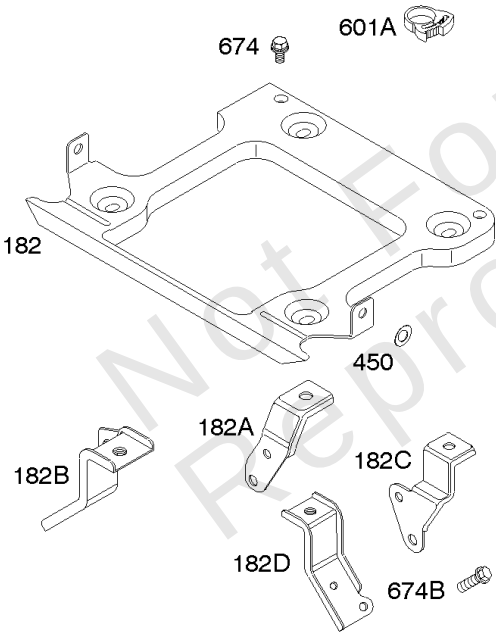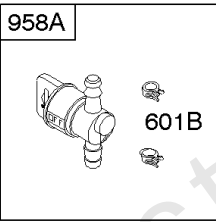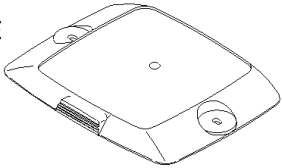


9 QUART

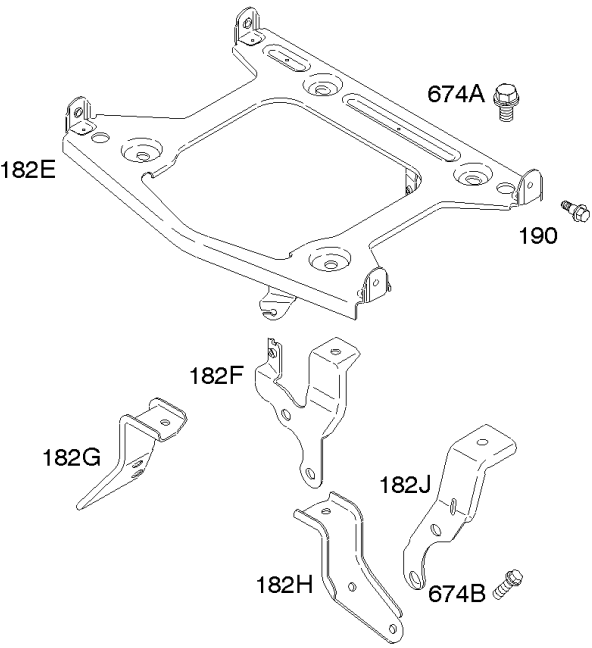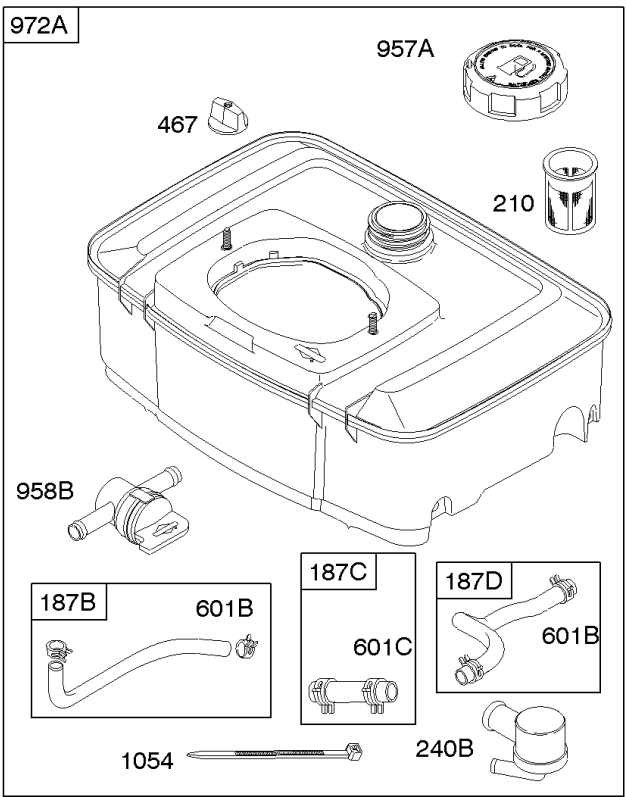

Fuel Tanks, Fuel Pumps, Fuel Hoses

REF NO	PART NO	QTY	DESCRIPTION
957	491367S		CAP, Fuel Tank -(Plastic)
957A	799719		CAP, Fuel Tank -(Plastic)
958	698182		VALVE, Fuel Shut Off -(Plastic)
958A	698183		VALVE, Fuel Shut Off -(Plastic)
958B	692008		VALVE, Fuel Shut Off -(Plastic)
968E	691334		COVER, Air Cleaner
972	492369		TANK, Fuel -(Plastic)
972A	845137		TANK-FUEL -(Plastic) (9 Quart)
1054	280275		TIE, Cable


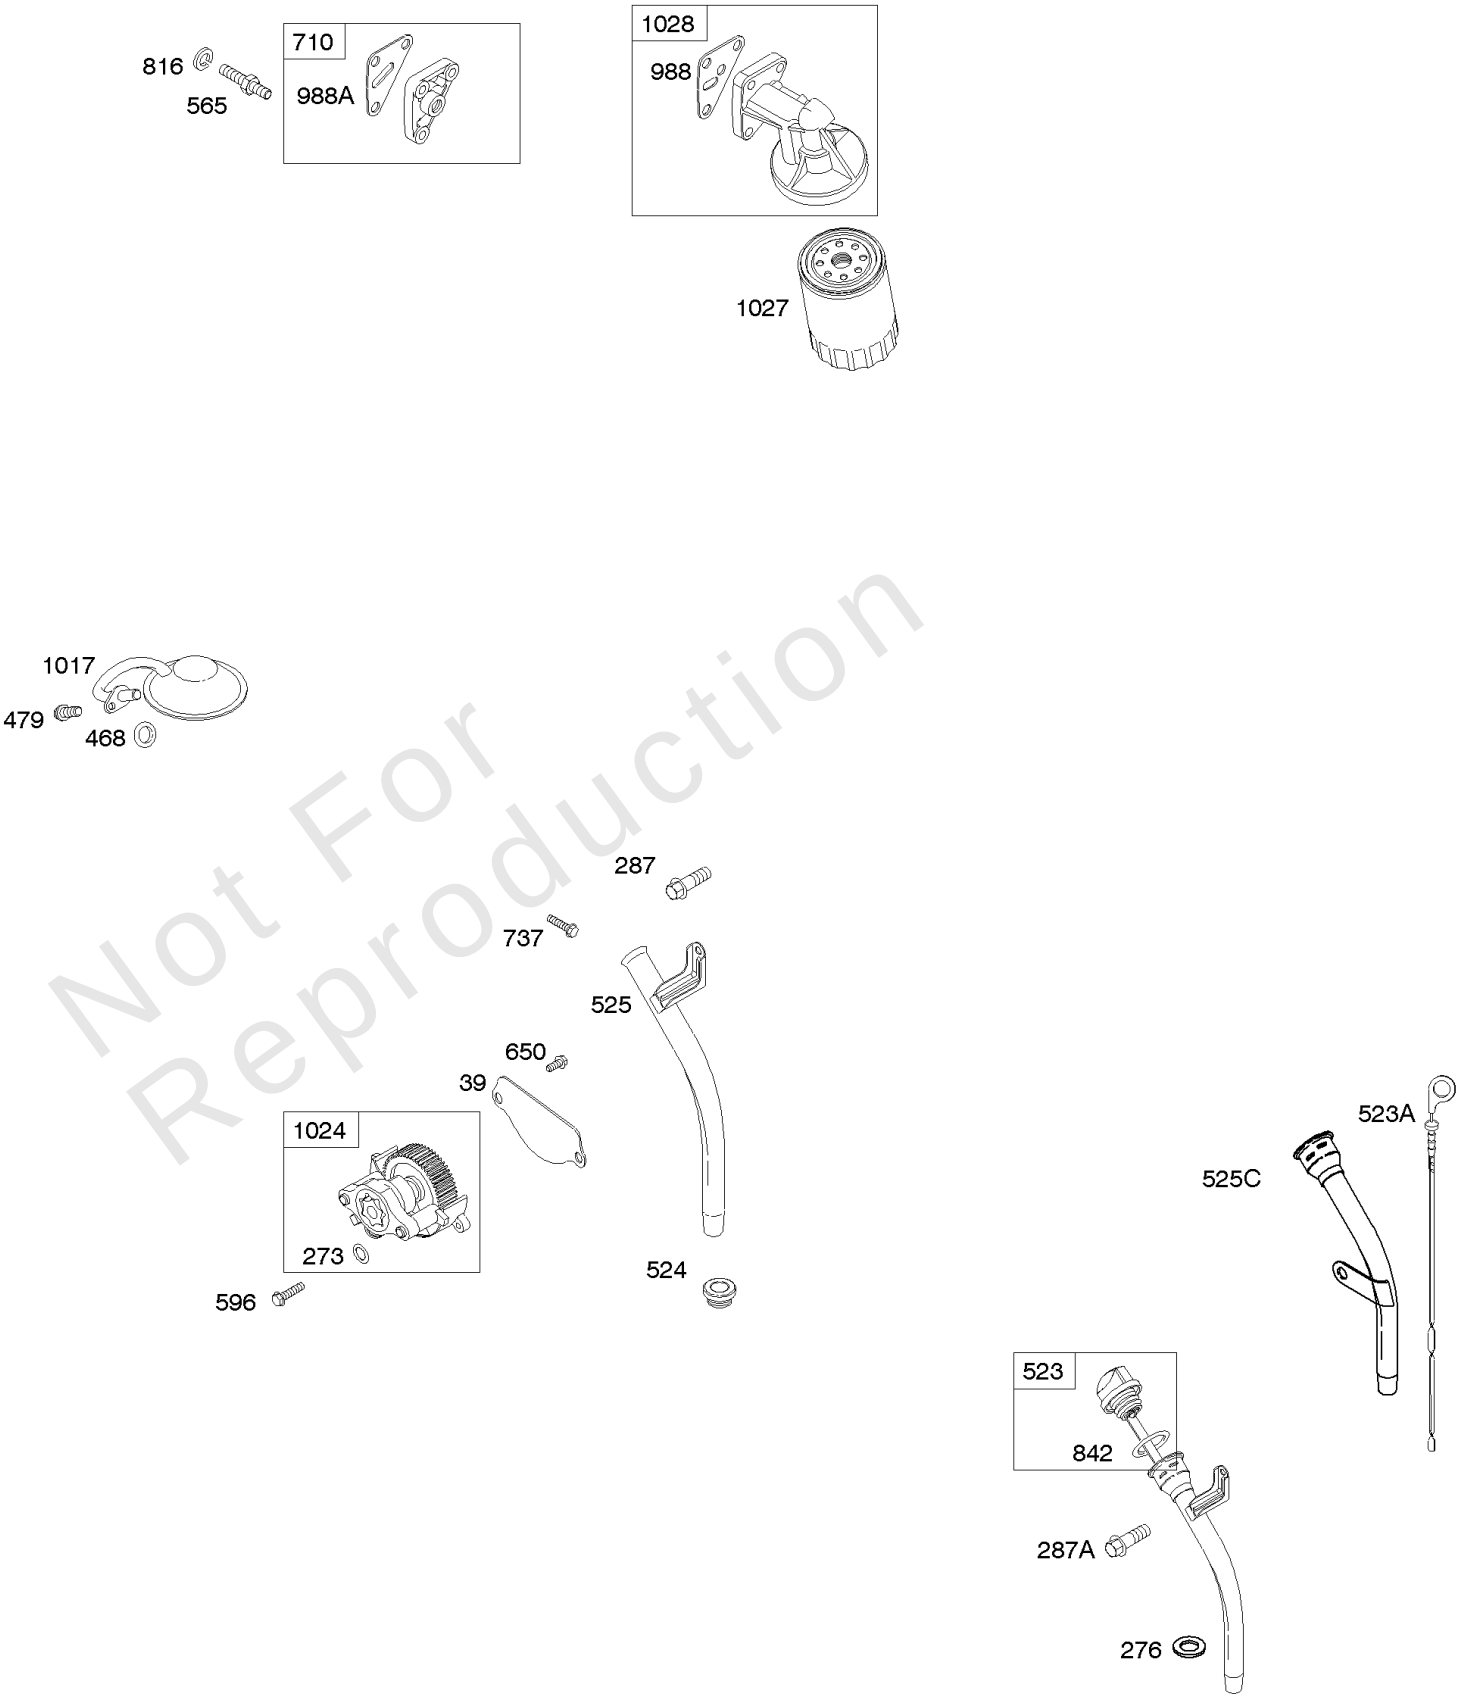


Lubrication

REF NO	PART NO	QTY	DESCRIPTION
39	690745		COVER, Gear
273	690681		SEAL, O-Ring -(Oil Pump)
276	690704		WASHER -(Governor Crank)
287	692062		SCREW -(Dipstick Tube)
287A	806660		SCREW -(Dipstick Tube) (Special Dipstick Tube)
468	690690		SEAL, O-Ring -(Oil Pump Screen)
479	807084		SCREW -(Oil Pump Screen)
523	692100		DIPSTICK
523A	693175		DIPSTICK
524	281370S		SEAL, Dipstick Tube -(Dipstick Tube) -Used Before Code Date 98060100
524	693172		SEAL, O-Ring -(Dipstick Tube) -Used After Code Date 98053100
525	693174		TUBE, Dipstick
525C	690897		TUBE, Dipstick -(Standard)
565	690682		STUD -(Oil Filter Adapter)
596	691492		SCREW -(Oil Pump)
650	841233		SCREW -(Oil Deflector)
710	807689		COVER, Oil Filter
737	690679		SCREW -(Oil Filter Adapter)
816	690706		WASHER -(Oil Filter Adapter)
842	690611		SEAL, O-Ring -(Dipstick Tube)
988	692063		GASKET, Oil Adapter
988A	690687		GASKET, Oil Adapter
1017	690900		SCREEN, Oil Pump
1024	693185		PUMP, Oil
1027	842921		FILTER, Oil -Used After Code Date 95010100
1027	491056		FILTER-OIL -(3-1/4) -Used Before Code Date 95010200
1028	808235		ADAPTER, Oil Filter
1028	808033		ADAPTER, Oil Filter -(Horizontal Mounted Oil Filter)

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	3054473075	1	Replacement Engine
	692165	1	CRANKSHAFT -Add Part
	805456	1	SPRING, Governor -Add Part
	692161	1	CRANKSHAFT -Remove Part
	805460	1	SPRING, Governor -Remove Part
-----			Top No-Load Speed: 2650 -Trim: ALL
-----			Service Note: For all Go-Karts use only a Model 136200 series engine as a replacement, regardless of the original Model.
-----			Service Note: Transfer the Muffler and/or Spark Arrester Assembly from the original engine if suitable for additional service, or add new parts as required. In some cases it maybe necessary to transfer the Oil Filter Adapter to the replacement engine.
-----			Service Note: Transfer the Air Cleaner Assembly and related parts to the replacement engine.
-----			Service Note: Transfer Blower Housing, Flywheel and Booster Fan Group to replacement engine. Transfer Electric Starter if original Flywheel is equipped with an aluminum ring gear .

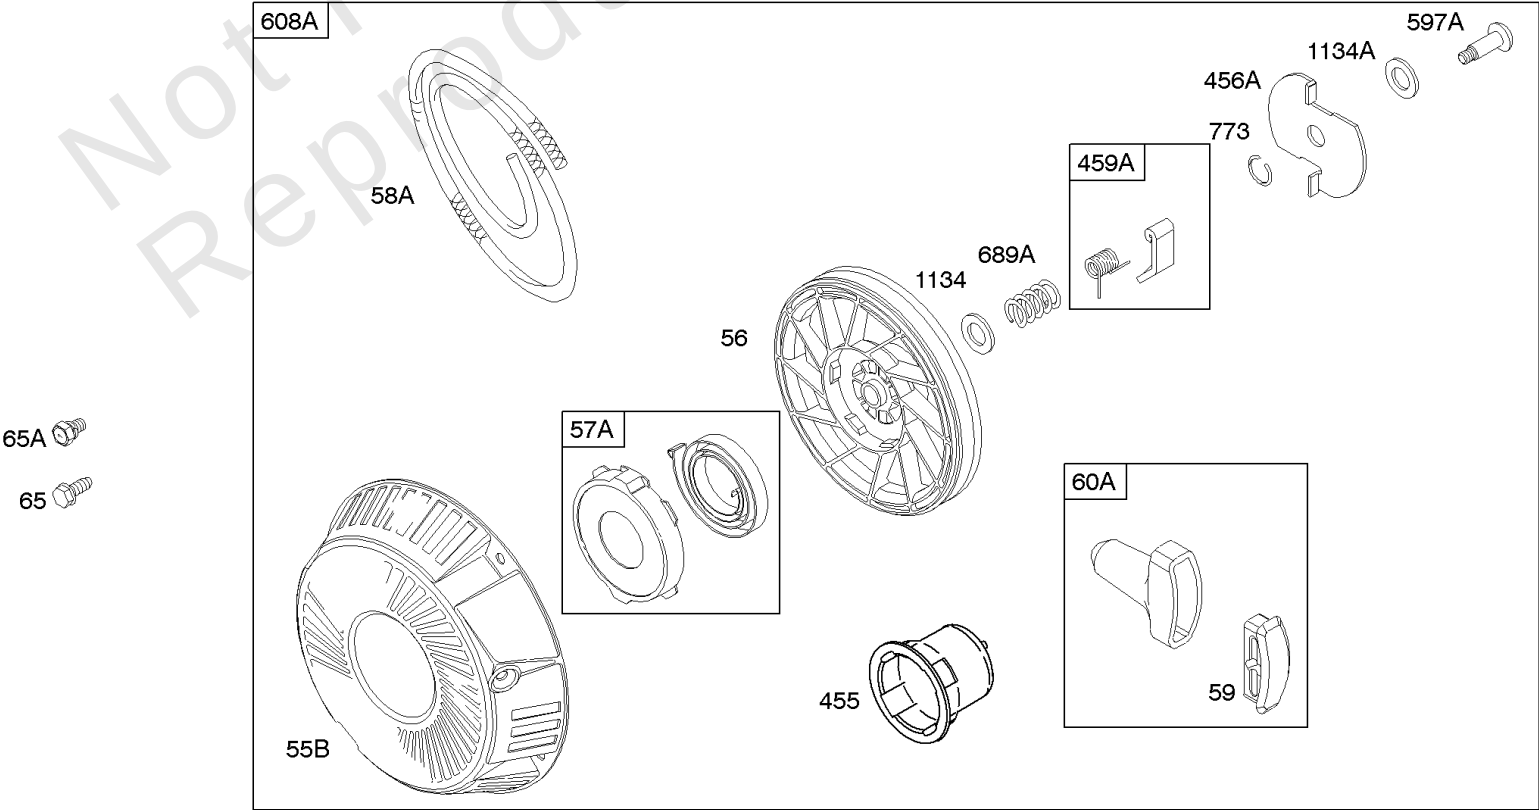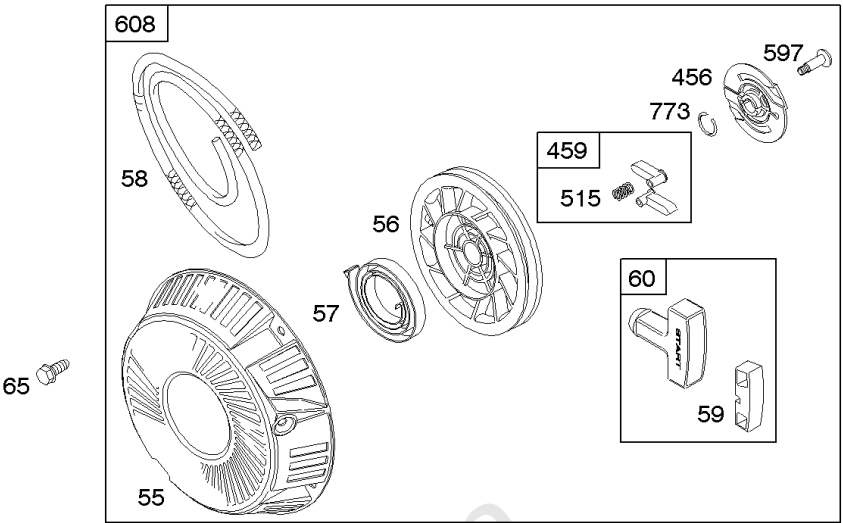

Rewind Starters

REF NO	PART NO	QTY	DESCRIPTION
55	691568		HOUSING, Rewind Starter
55B	492193		HOUSING, Rewind Starter
56	692085		PULLEY, Rope Starter
57	692086		SPRING, Rewind Starter
57A	492194		SPRING, Rewind Starter
58	66574		ROPE, Starter -(Cut To Required Length)
58A	695002		ROPE, Starter -(Cut To Required Length)
59	805957		INSERT, Grip
60	808167		GRIP, Starter Rope
60A	490652		GRIP-STARTER ROPE
65	691982		SCREW -(Rewind Starter) (M6X8mm)
65A	841233		SCREW -(Rewind Starter) (M6x10mm)
455	805153		CUP, Flywheel -Used Before Code Date 93072600
455	691517		CUP, Flywheel -Used After Code Date 93072500
456	691529		PLATE, Pawl Friction
456A	224228		PLATE, Pawl Friction
459	808166		PAWL, Ratchet
459A	492431		PAWL, Ratchet
515	691528		SPRING, Pawl
597	690876		SCREW -(Pawl Friction Plate)
597A	94463		SCREW -(Pawl Friction Plate)
608	692102		STARTER, Rewind -Used After Code Date 93072500
608A	808152		STARTER, Rewind -Used Before Code Date 93072600
689A	262564		SPRING, Friction
773	690875		RETAINER
1134	94464		WASHER -(Pawl Friction Plate)
1134A	94462		WASHER -(Pawl Friction Plate)




Model 29, 30, 35 & 38 Engine Accessories Catalog

Not For
Reproduction



Maintenance Kits

REF NO	PART NO	QTY	DESCRIPTION
9000	84004936		KIT, Maintenance -(Non-Oil Guard™ Engines) (20 - 23 HP)
9000A	84004937		KIT, Maintenance -(Non-Oil Guard™ Engines) (12.5 - 18 HP)
9000B	84002315		KIT, Maintenance -(Non-Oil Guard™ Engines)
240	845125	1	FILTER, Fuel
240A	84001895	1	FILTER, Fuel
337	491055S	2	PLUG, Spark
337	84007216	2	PLUG, Spark -(China Only)
445	692519	1	FILTER, A/C Cartridge -"Professional / PXi" & "Commercial / CXi".
445A	394018S	1	FILTER, A/C Cartridge -"Professional / PXi" & "Commercial / CXi".
445B	841497	1	FILTER, A/C Cartridge -"Professional / PXi" & "Commercial / CXi".
967	692520	1	FILTER, Pre Cleaner
967A	272490S	1	FILTER, Pre Cleaner
1027	842921	1	FILTER, Oil -(Vanguard®)
1505	100169		OIL-1QT VANGUARD (CASE) -(1 qt. Bottle)





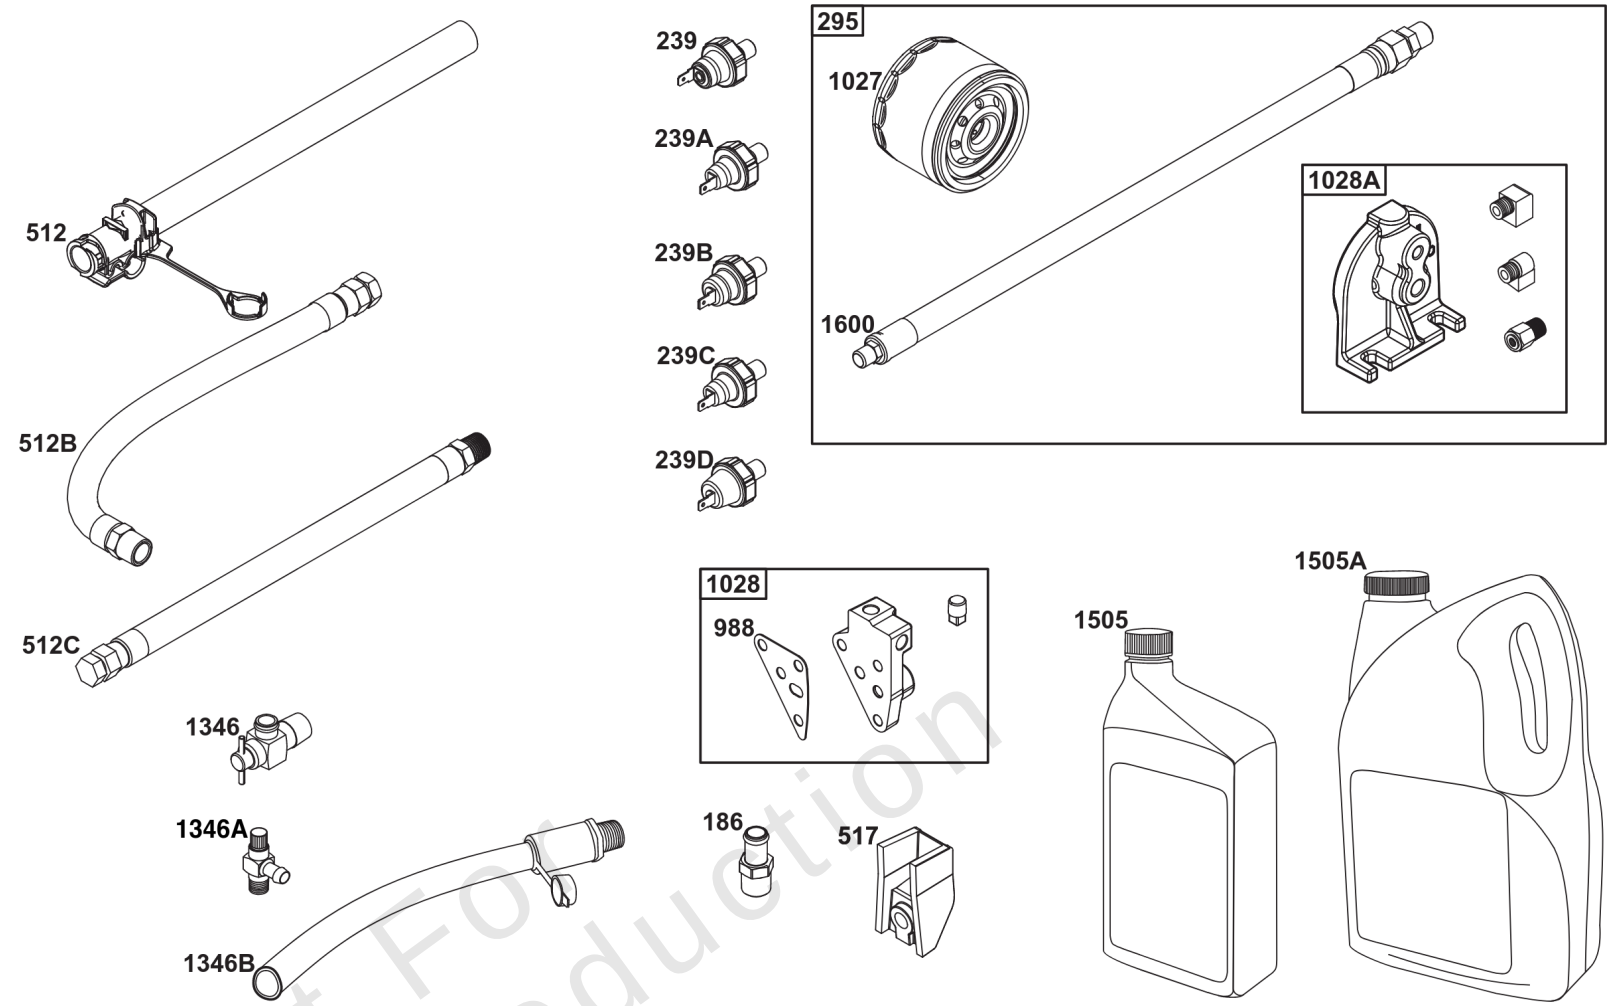


Lubrication

REF NO	PART NO	QTY	DESCRIPTION
186	796532	1	CONNECTOR, Hose -(Threaded Engine Block Connector for EZ-Oil Drain Hose)(Order hose separate)
239	690233	1	SWITCH, Oil Pressure -(2-4 PSI Normally-Closed Switch)
239A	491657S	1	SWITCH, Oil Pressure -(3-5 PSI Normally-Closed Switch)
239B	841281	1	SWITCH, Oil Pressure -(7-10 PSI Normally-Closed Switch)
239C	694115	1	SWITCH, Oil Pressure -(9-13 PSI Normally-Closed Switch)
239D	697049	1	SWITCH, Oil Pressure -(3-6 PSI Normally-Open Switch)
295	492061	1	ADAPTER, Remote Oil Filter -(Remote oil filter head with 18" (48 cm) hoses)
295	492062	1	ADAPTER, Remote Oil Filter -(Remote oil filter head with 30" (76 cm) hoses)
512	594200	1	HOSE, Oil Drain -(EZ-Oil Drain Hose, 10.5")(Order threaded engine block connector separate)
512	593635	1	HOSE, Oil Drain -(EZ-Oil Drain Hose, 13.75")(Order threaded engine block connector separate)
512B	1723165SM	1	HOSE, Oil Drain, 10-1/2" Long, 3/8-18 Fittings -(10.5")
512C	5048681SM	1	HOSE, OIL DRAIN -(12.5")
517	593633	1	RETAINER, Oil Drain
988	692063	1	GASKET, Oil Adapter
1027	492932S	1	FILTER, Oil
1028	492687	1	ADAPTER, Oil Filter -(Adapter Kit for mounting remote oil filter)
1028A	495244	1	ADAPTER-OIL FILTER -(Remote oil filter mounting head with fittings)
1346	844802	1	VALVE, Oil Drain Shut Off
1346A	492031	1	VALVE, Oil Drain Shut Off
1346B	5401WEB	1	VALVE, Oil Drain Shut Off -(1/4 Turn Oil Drain Valve with Hose)
1505	100169		OIL-1QT VANGUARD (CASE) -(1 qt. Bottle)
1505A	100170		OIL-5QT VANGUARD (CASE) -(5 qt. Bottle)
1600	494724	2	HOSE, Remote Oil Filter -(Hoses only (2) 18" (48 cm))
1600	494725	2	HOSE, Remote Oil Filter -(Hoses only (2) 30" (76 cm))








Starter Motor Side Outlet Mufflers

Model 29, 30, 35 & 38 Engine Accessories Catalog

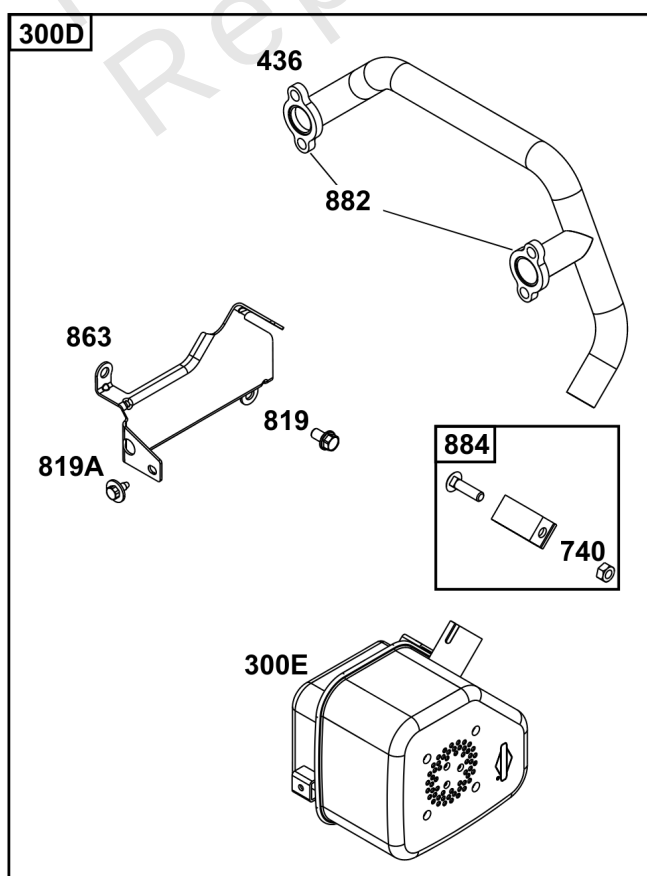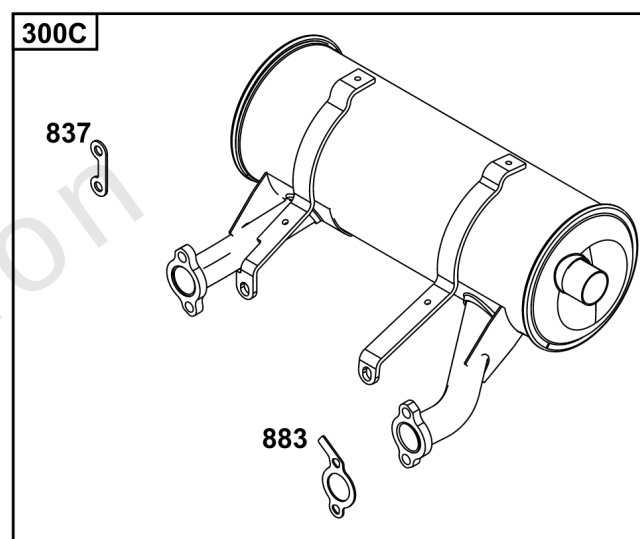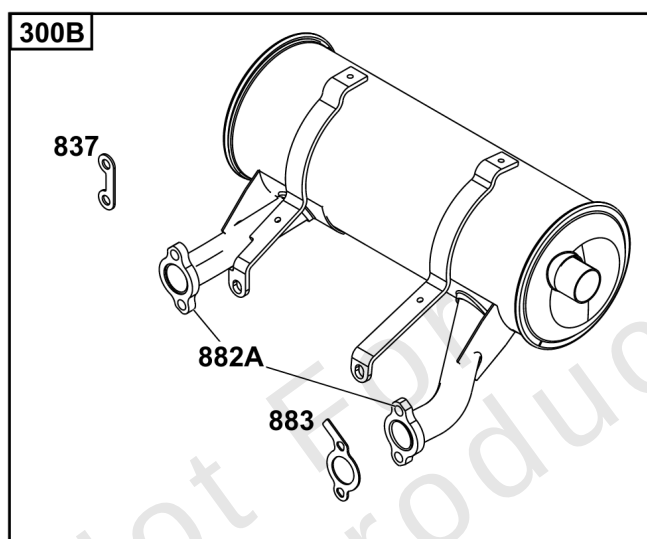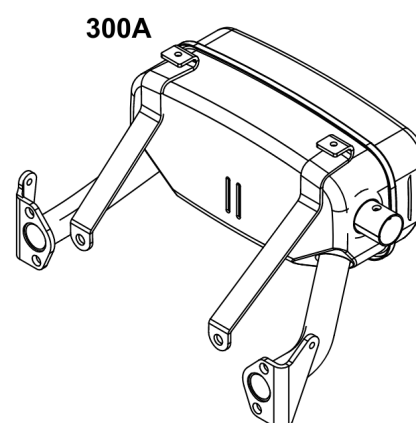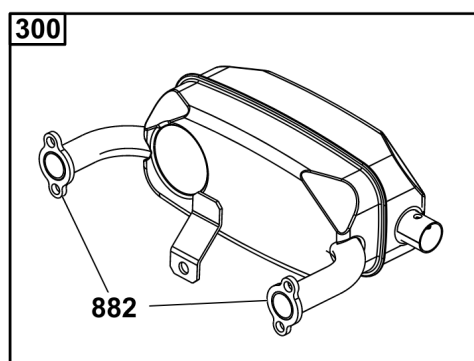






Starter Motor Side Outlet Mufflers

REF NO	PART NO	QTY	DESCRIPTION
300	690931	1	MUFFLER -(Super Lo-Tone) (Horizontal: 3054, 3564)
300A	690906	1	MUFFLER -(Super Lo-Tone) (Horizontal: 3054, 3564)
300B	808705	1	MUFFLER -(5" Round) (Horizontal: 3854, 3864)
300C	845873	1	MUFFLER -(5" Round, Stainless Steel) (Horizontal: 3854, 3864)
300D	995005	1	MUFFLER ASSY -(Lo-Tone) (Horizontal: 3054, 3564)
300E	692099	1	MUFFLER -(Lo Mount)
436	691499	1	MANIFOLD, Exhaust -(Cylinder 1) (Side Outlet)
740	793859	1	NUT
819	692056	2	SCREW -(Muffler Bracket) (M8x1.25)
819A	691514	2	SCREW -(Muffler Bracket) (M6 X 1.0)
837	808085	2	SPACER, Muffler -(Includes 2)
863	690756	1	BRACKET, Muffler -(Cylinder 1) (Side Outlet)
882	692074	2	FLANGE, Exhaust
882A	806965	2	FLANGE, Exhaust
883	806425	2	GASKET, Exhaust
884	690898	1	CLAMP, Muffler

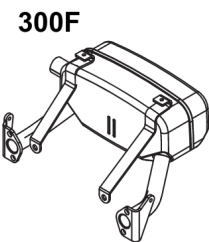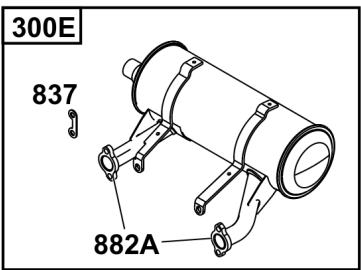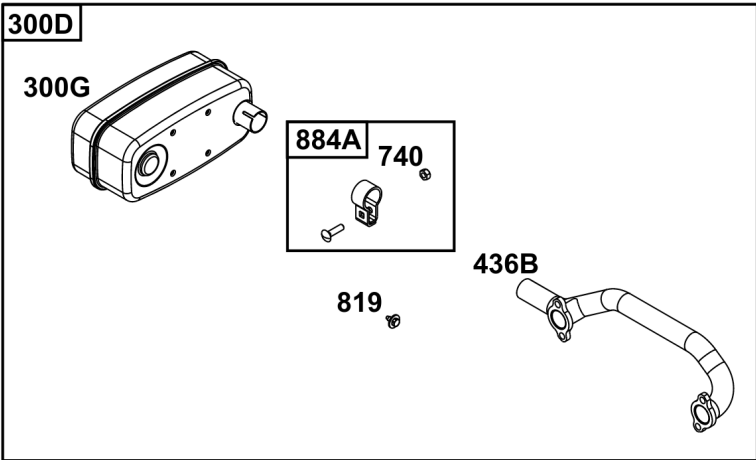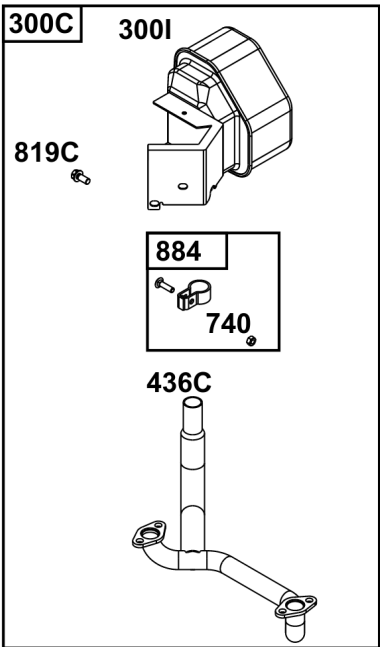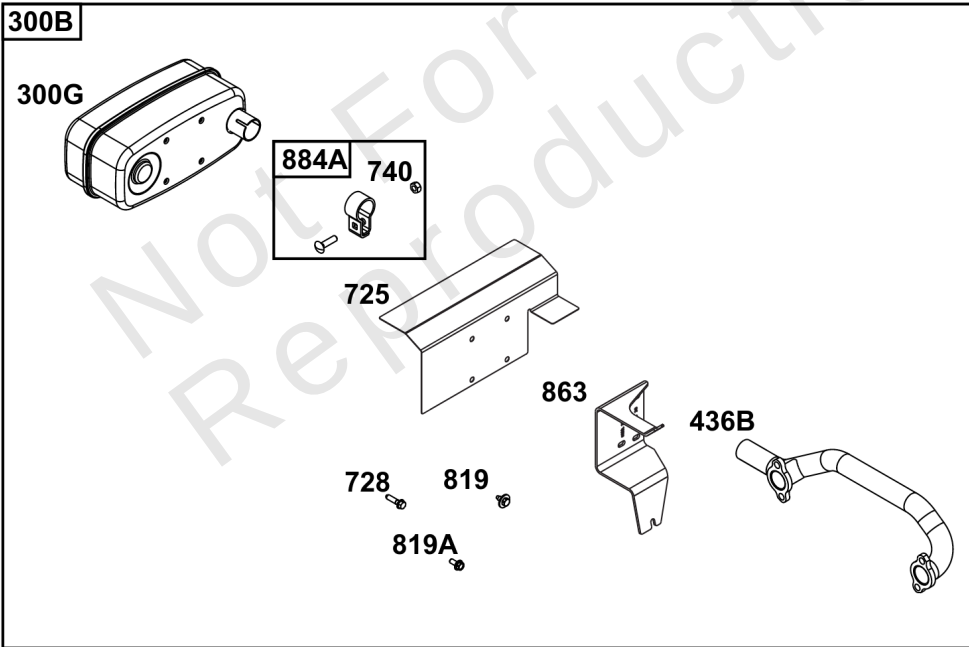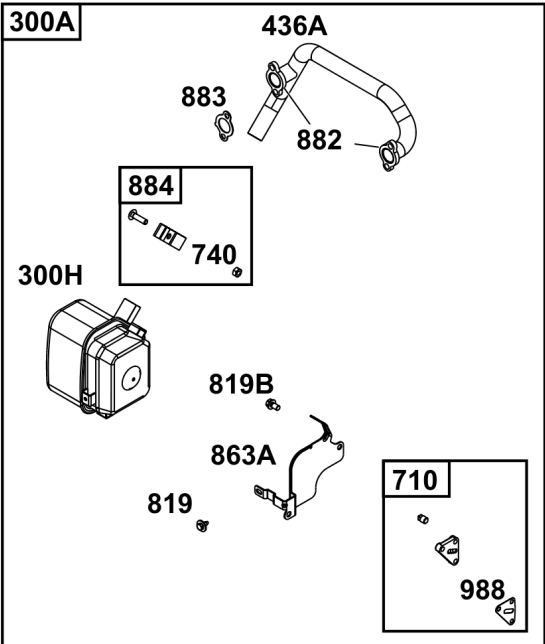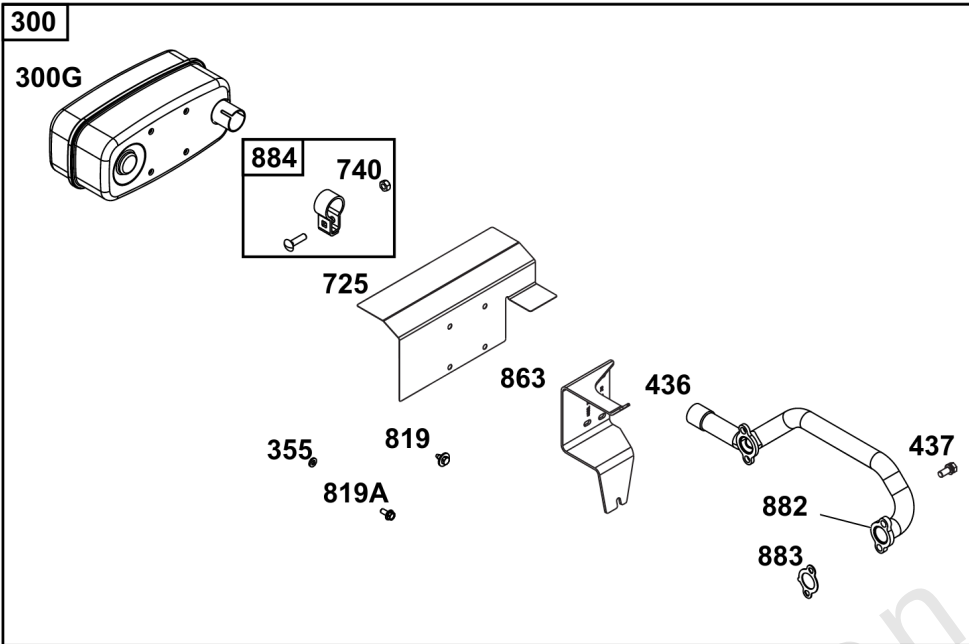




Oil Filter Side Outlet Mufflers

REF NO	PART NO	QTY	DESCRIPTION
300	995002	1	HIGH MNT SPR LO-TONE OIL FLTR SIDE -(Super Lo-Tone) (Horizontal: 3054, 3564) (Vertical: 3567)
300A	995000	1	OIL FILTER SIDE LO-MT -(Lo-Tone) (Horizontal: 3054, 3564) (Requires 808033 Oil Filter Adaptor)
300B	995004	1	HI MNT SPR LO-TONE OIL FLT SIDE -(Super Lo-Tone) (Horizontal: 3854, 3864) (Vertical: 3867)
300C	995009	1	COMMERCIAL MOWERS KIT -(For Wide Area Walker) (Vertical: 3567)
300D	995010	1	COMMERCIAL MOWERS KIT -(Vertical: 3867)
300E	808896	1	MUFFLER
300F	691562	1	MUFFLER -(Super Lo-Tone) (Horizontal: 3054, 3564)
300G	498984S	1	MUFFLER -(Super Lo Tone)
300H	807948	1	MUFFLER -(Lo Mount)
300I	807953	1	MUFFLER
355	842122	2	WASHER -(Muffler Bracket)
436	805609	1	MANIFOLD, Exhaust -(Cylinder 2) (Side Outlet)
436A	692061	1	MANIFOLD, Exhaust -(Cylinder 2) (Side Outlet)
436B	808916	1	MANIFOLD, Exhaust -(Cylinder 2) (Side Outlet)
436C	805778	1	MANIFOLD, Exhaust -(Wide Area Walker)
437	691902	4	SCREW -(Exhaust Manifold)
710	807689	1	COVER, Oil Filter
725	806102	1	SHIELD, Heat
728	690297	2	SCREW
740	793859	1	NUT
819	691514	2	SCREW -(Muffler Bracket) (M6 X 1.0)
819A	807084	2	SCREW -(Muffler Bracket)
819B	692056	2	SCREW -(Muffler Bracket) (M8x1.25)
819C	692062	2	SCREW -(Muffler Bracket)
837	808085	2	SPACER, Muffler -(Includes 2)
863	806759	1	BRACKET, Muffler
863A	691513	1	BRACKET, Muffler
882	692074	2	FLANGE, Exhaust -(3054 & 3564)
882A	806965	2	FLANGE, Exhaust
883	691613	2	GASKET, Exhaust
884	690898	1	CLAMP, Muffler
884A	691956	1	CLAMP, Muffler
988	690687	1	GASKET, Oil Adapter

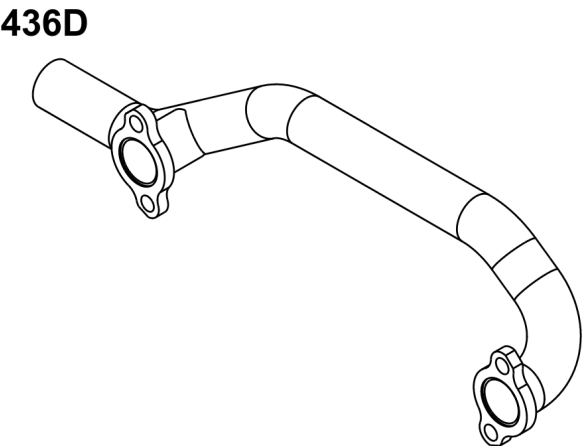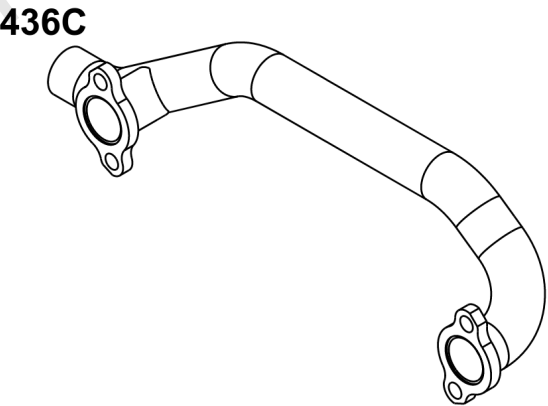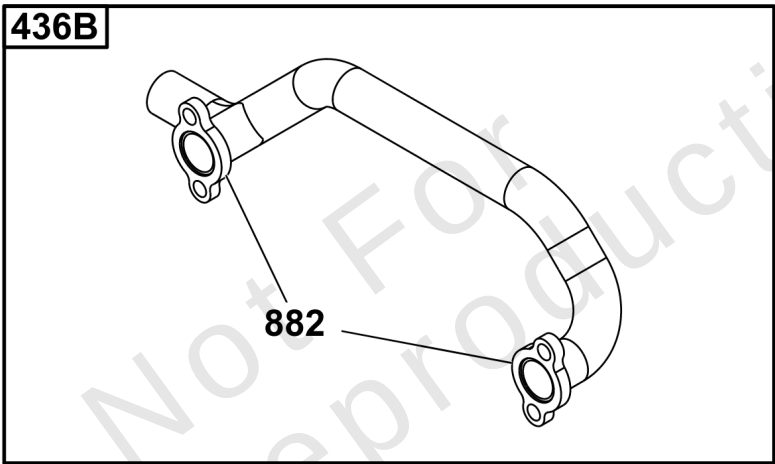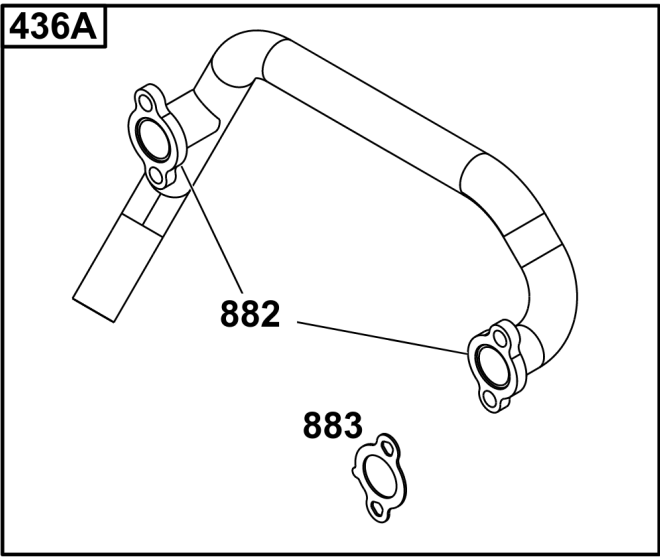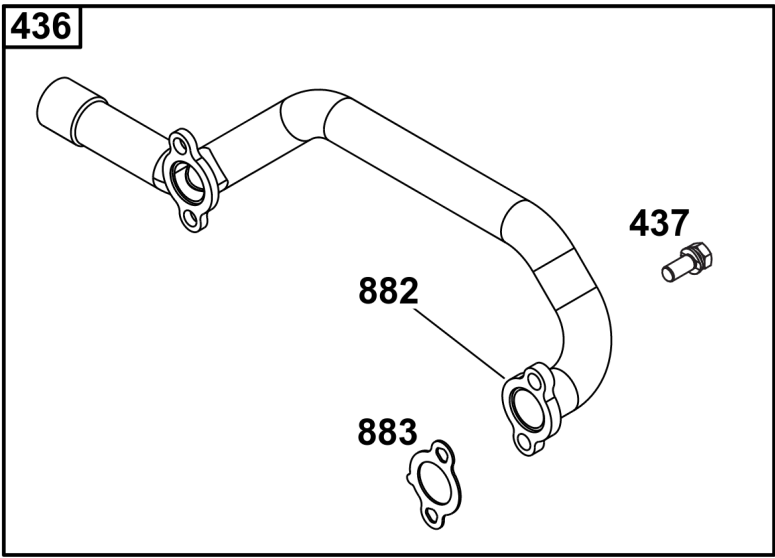

Oil Filter Side Outlet Manifolds


REF NO	PART NO	QTY	DESCRIPTION
436	805609	1	MANIFOLD, Exhaust -(Vertical: 3567)
436A	692061	1	MANIFOLD, Exhaust -(Horizontal: 3054, 3564)
436B	691501	1	MANIFOLD, Exhaust -(Horizontal: 3054, 3564)
436C	808908	1	MANIFOLD, Exhaust -(Horizontal: 3854, 3864)
436D	808916	1	MANIFOLD, Exhaust -(Horizontal: 3854, 3864) (Vertical: 3867)
437	691902	4	SCREW -(Exhaust Manifold)
882	692074	2	FLANGE, Exhaust
883	691613	2	GASKET, Exhaust

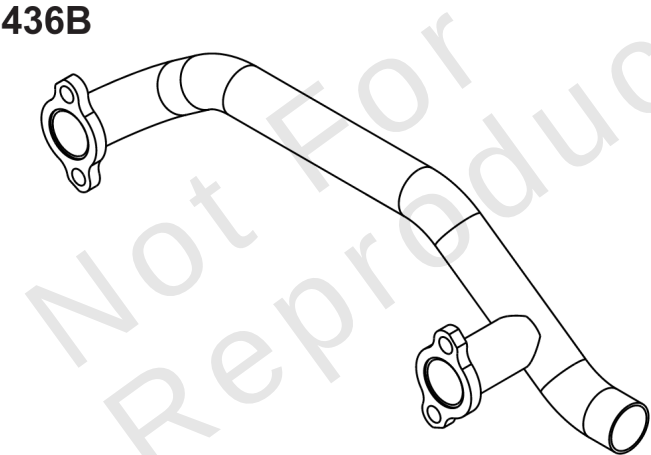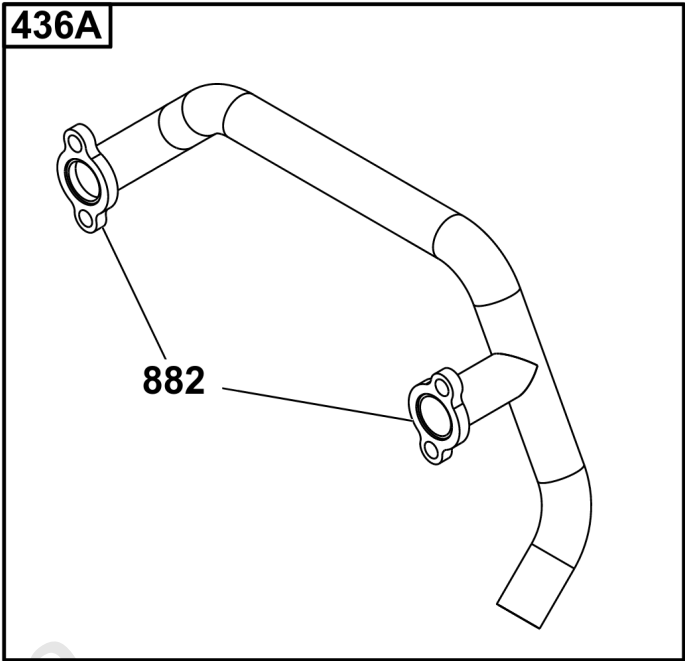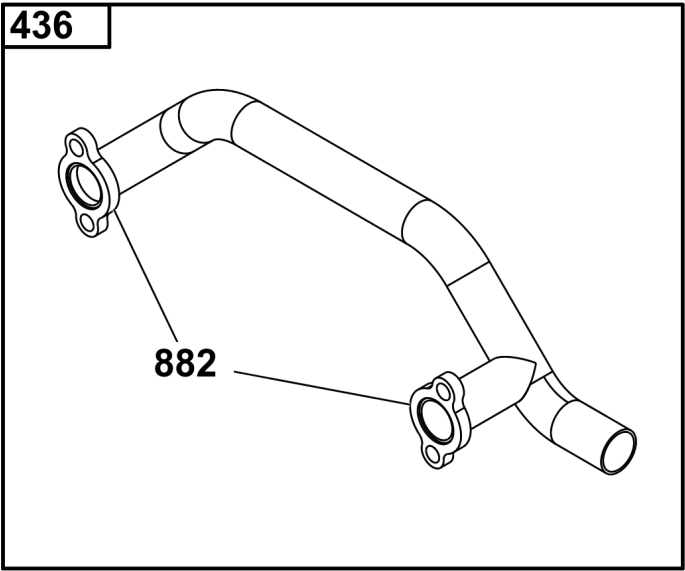

Starter Motor Side Outlet Manifolds

REF NO	PART NO	QTY	DESCRIPTION
436	691502	1	MANIFOLD, Exhaust -(Horizontal: 3054, 3564)
436A	691499	1	MANIFOLD, Exhaust -(Horizontal: 3054, 3564)
436B	808909	1	MANIFOLD, Exhaust -(Horizontal: 3854, 3864) (Vertical: 3867)
882	692074	2	FLANGE, Exhaust


Not For Reproduction

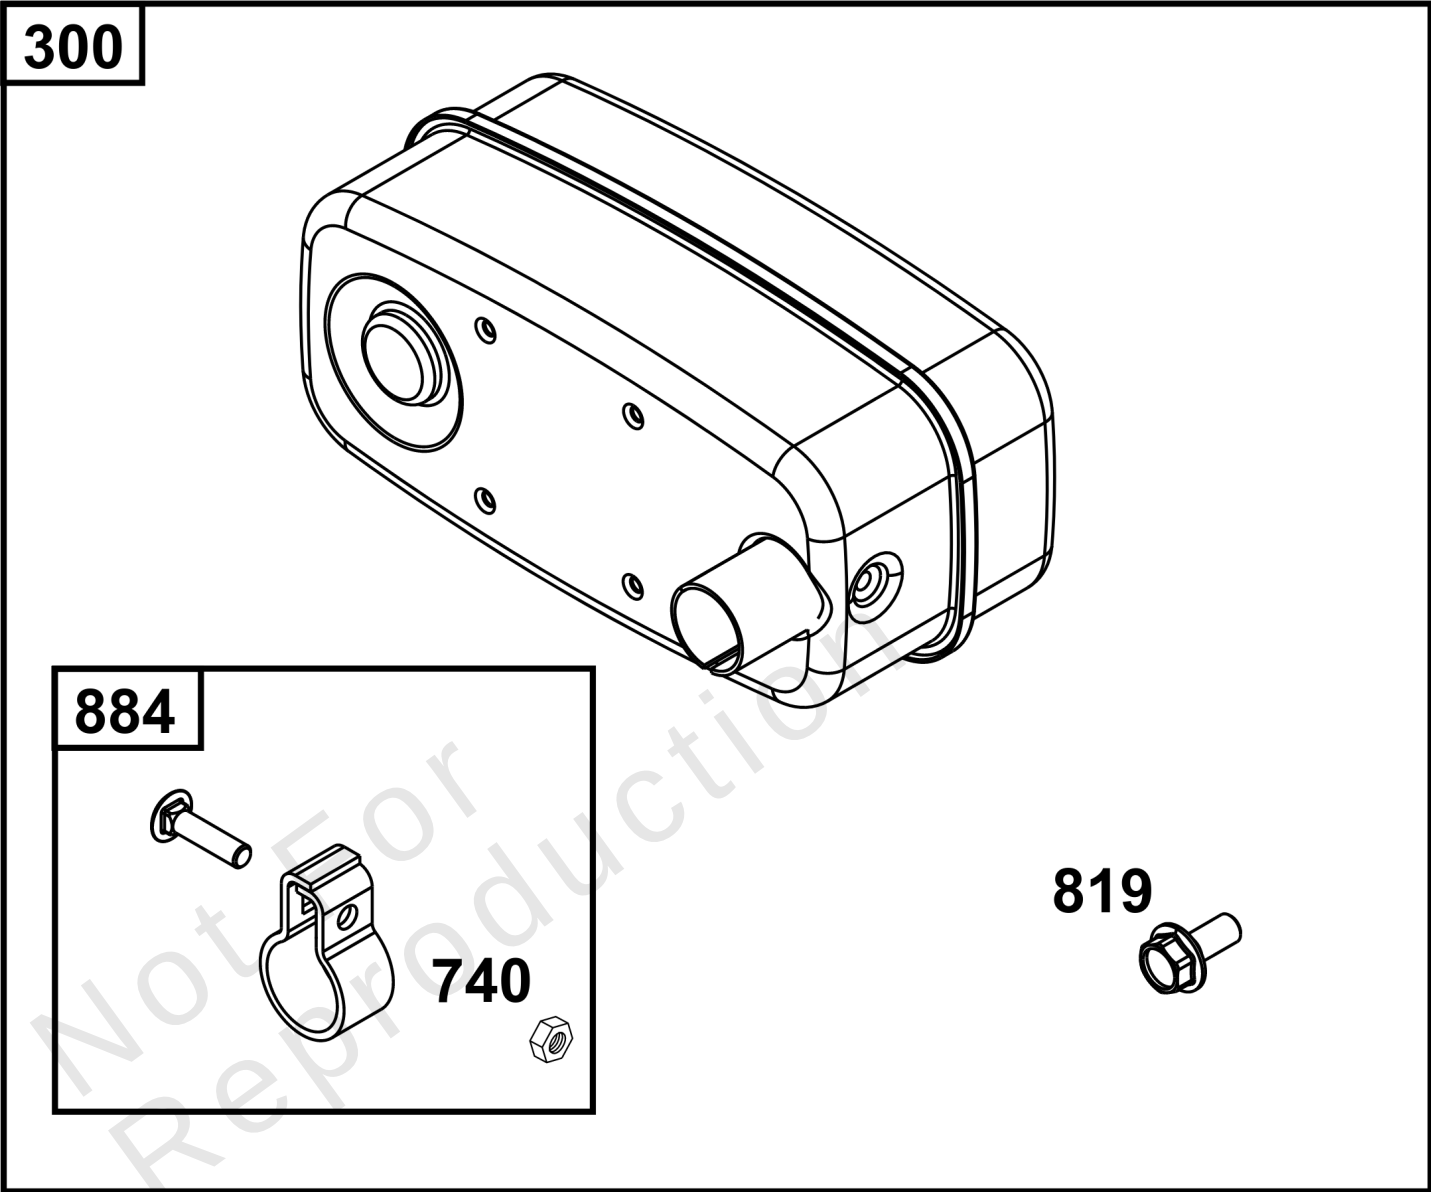

Mufflers

REF NO	PART NO	QTY	DESCRIPTION
300	995018	1	MUFFLER -(Inlet I.D. 1.14" (28.9mm))
740	793859	1	NUT
819	807084	4	SCREW
884	691956	1	CLAMP, Muffler



Not For Reproduction

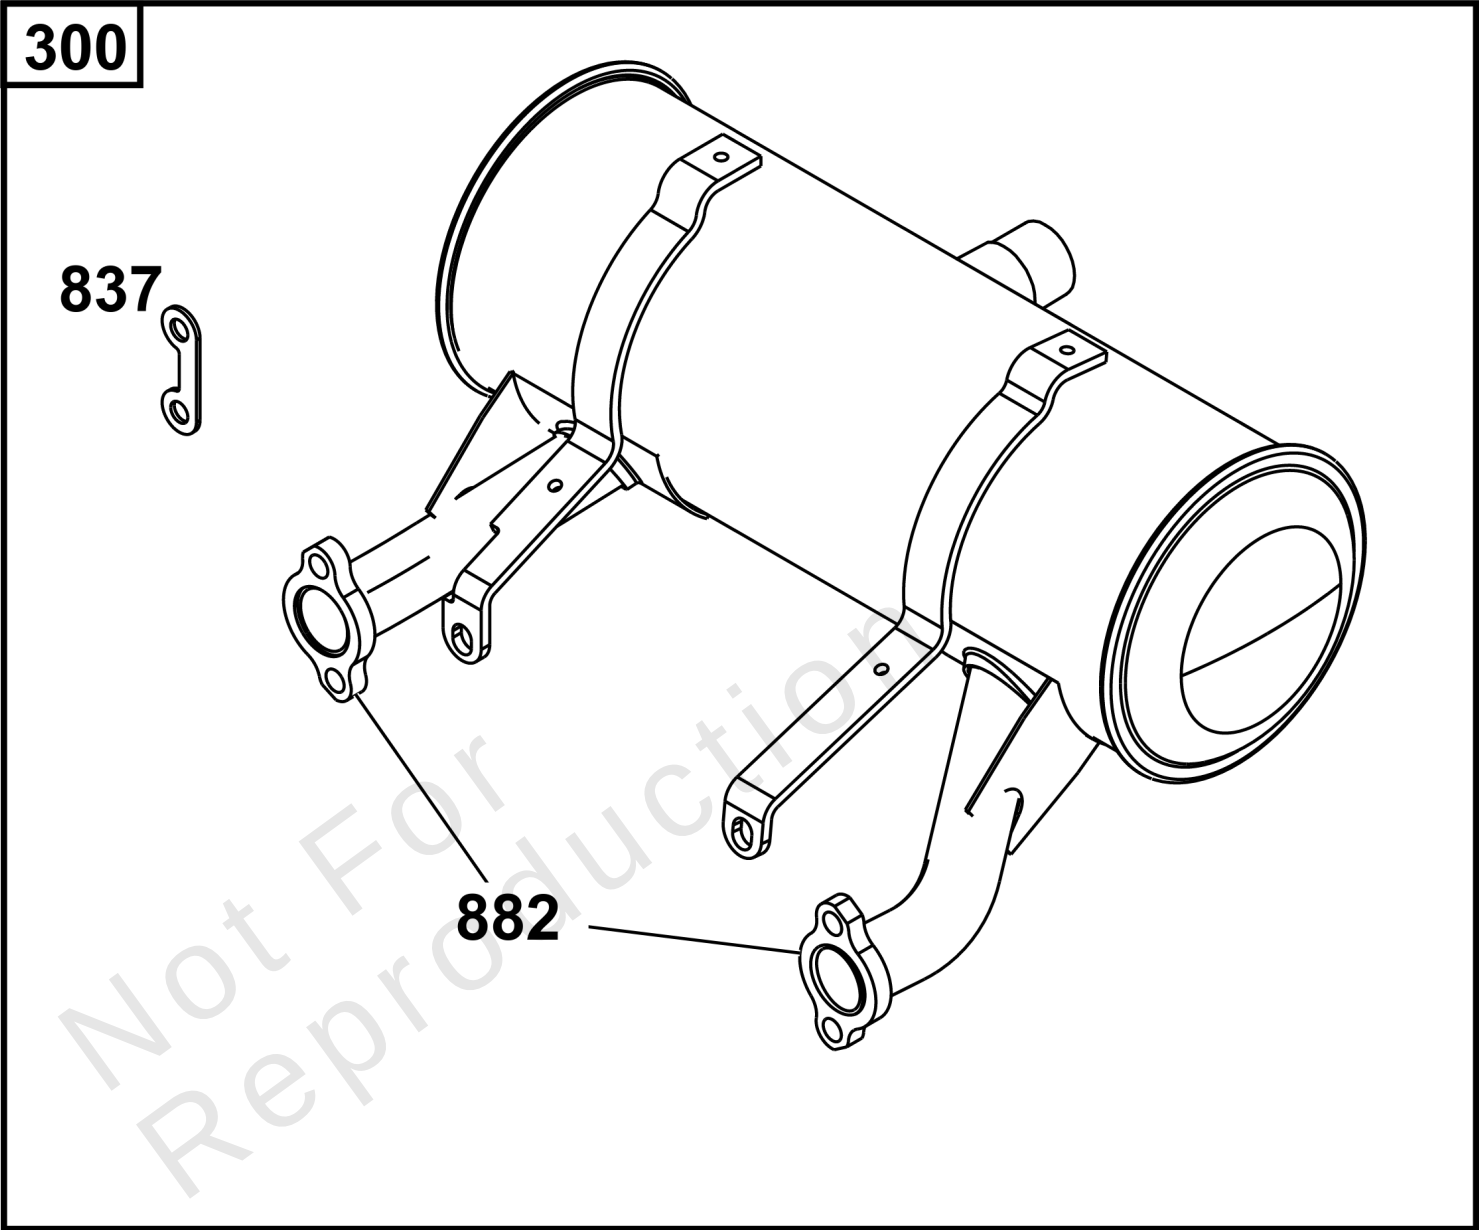

Center Outlet Mufflers

REF NO	PART NO	QTY	DESCRIPTION
300	808911	1	MUFFLER -(5" Round) (Horizontal: 3854, 3864)
837	808085	2	SPACER, Muffler
882	806965	2	FLANGE, Exhaust

Not For Reproduction





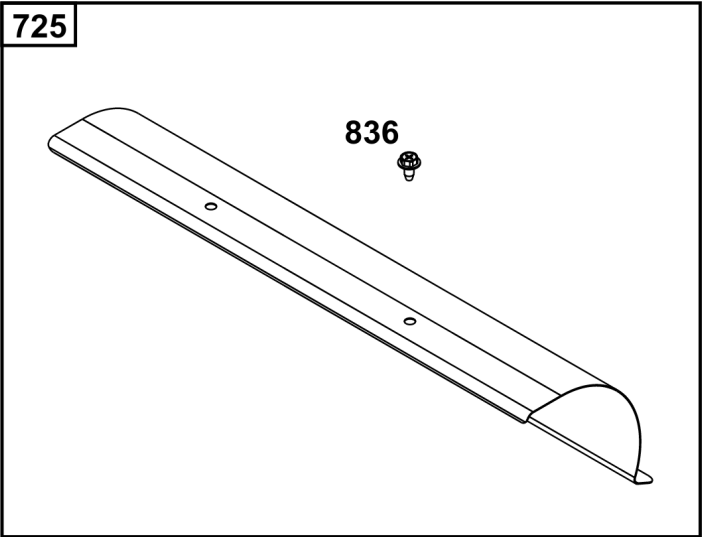
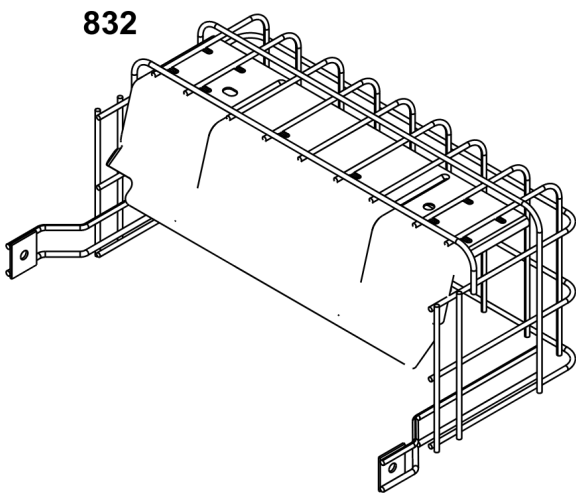


Not For
Reproduction

Muffler Guards and Shields

REF NO	PART NO	QTY	DESCRIPTION
725	846568	1	SHIELD, Heat -(For 5" Round Mufflers) (Horizontal: 3854, 3864)
832	691571	1	GUARD, Muffler -(Assembly for 690906 & 691562) (Horizontal: 3054, 3564)
836	692067	4	SCREW

Not For Reproduction

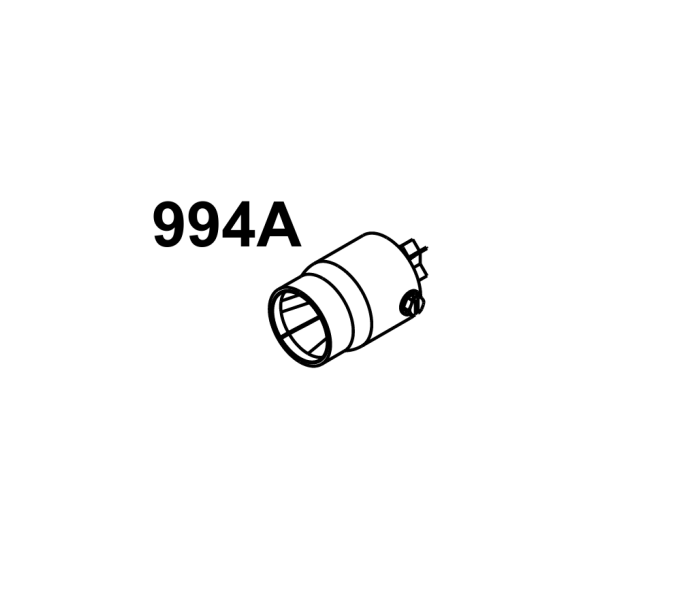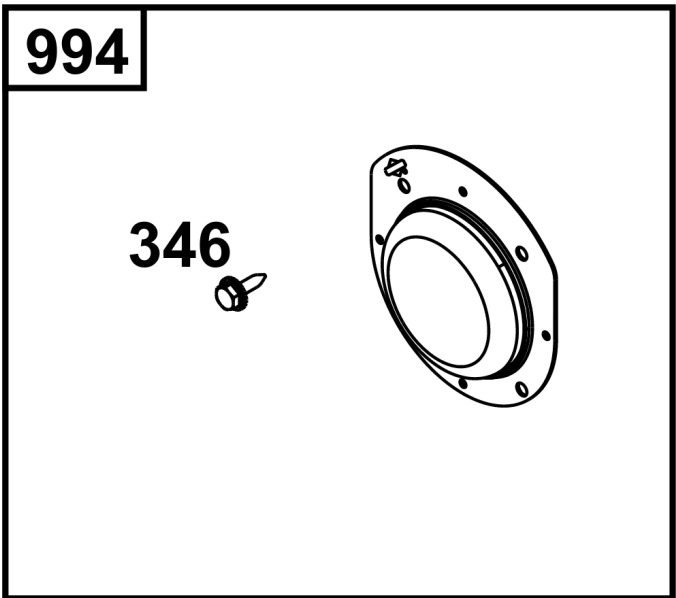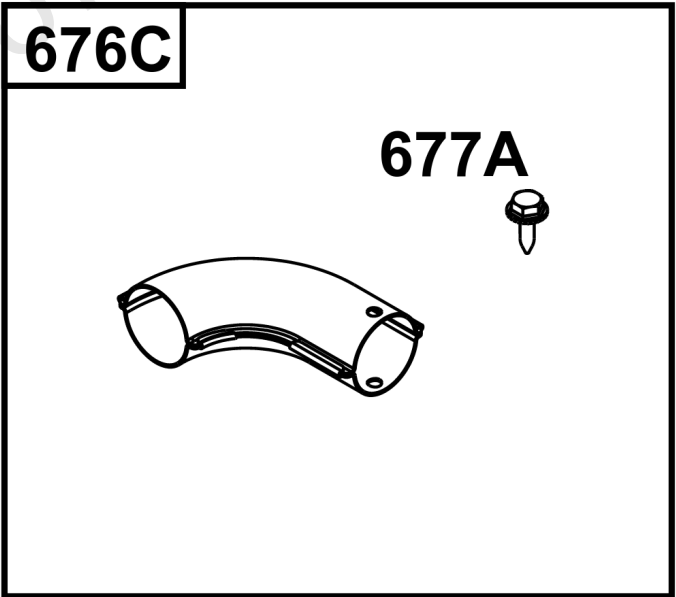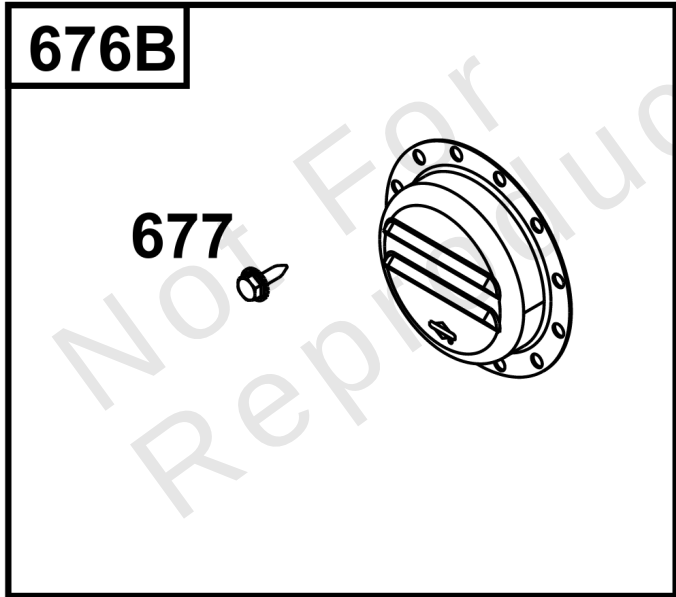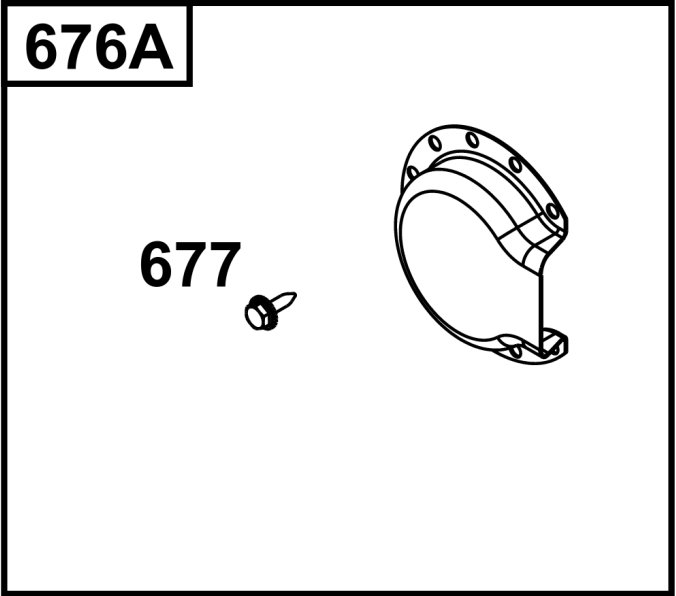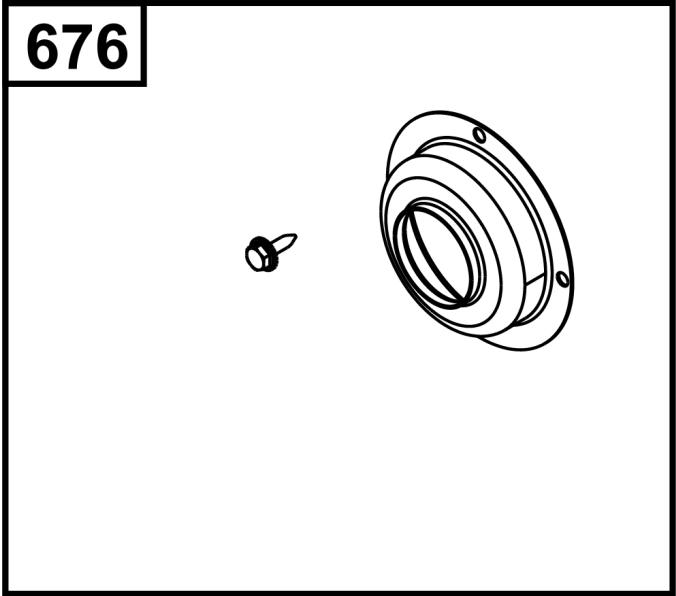

Spark Arrestors and Deflectors

REF NO	PART NO	QTY	DESCRIPTION
346	794845	4	SCREW -(Spark Arrestor)
676	396903	1	DEFLECTOR, Muffler -(Direct Outlet) (Face Mounting with 4 Screws)
676A	795036	1	DEFLECTOR, Muffler -(Deflector 90 Degree) (Face Mounting with 4 Screws)
676B	795038	1	DEFLECTOR, Muffler -(Deflector Louvered) (Face Mounting with 4 Screws)
676C	495518	1	DEFLECTOR, Muffler -(Elbow for Muffler Assembly) (For Exit Pipe O.D. of 1.10" (28mm))
677	794845	4	SCREW -(Muffler Deflector)
677A	810079	1	SCREW -(Muffler Deflector)
994	794945	1	ARRESTOR, Spark -(Spark Arrestor) (Face Mounting with 4 Screws)
994A	594562	1	ARRESTOR, Spark -(Spark Arrestor) (For Exit Pipe O.D. of 1.10" (28mm))

 
613



1177



296




883




883A



882



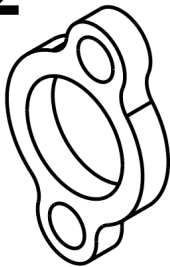


882A

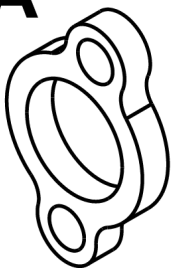

Muffler Mounting Hardware



REF NO	PART NO	QTY	DESCRIPTION
296	841185	4	STUD -(Mounting Mufflers)
613	691902	4	SCREW -(Mounting Mufflers)
882	692074	2	FLANGE, Exhaust -(3054 & 3564)
882A	806965	2	FLANGE, Exhaust -(3854 & 3864)
883	806425	2	GASKET, Exhaust -(Horizontal: 3854, 3864) (Vertical: 3567)
883A	691613	2	GASKET, Exhaust -(Horizontal: 3054, 3564) (Vertical: 3567)
1177	842067	4	NUT -(Required if Using 841185)

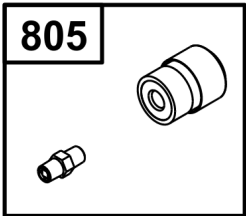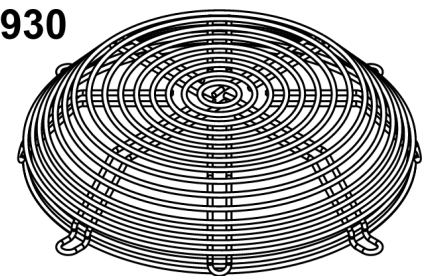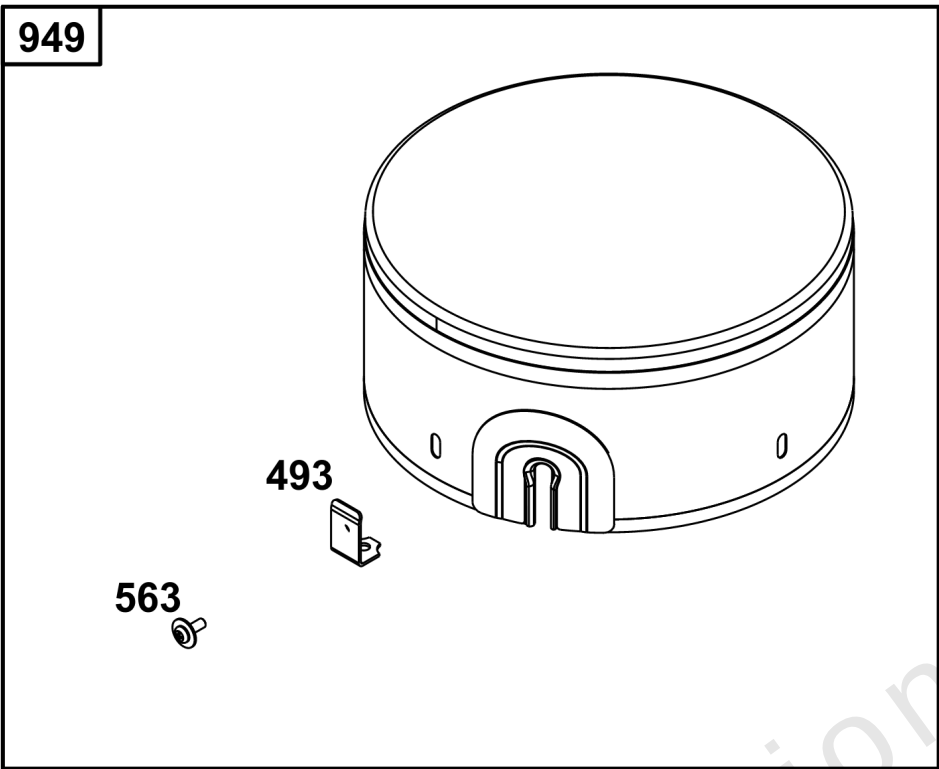

Flywheel and Air Intake Guards





REF NO	PART NO	QTY	DESCRIPTION
493	845729	4	BRACKET, Mounting
563	841441	4	SCREW
805	843024	1	MINDER, Filter -(For Engines with Cyclonic Air Filter)
930	846284	1	GUARD, Flywheel Fan
949	845728	1	GUARD, Debris Screen -(Vertical: 3867)

Not For Reproduction

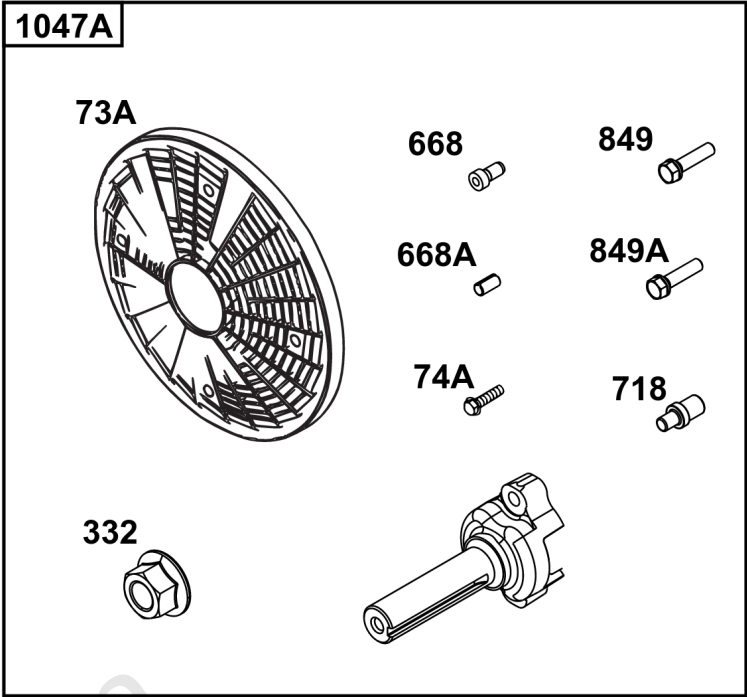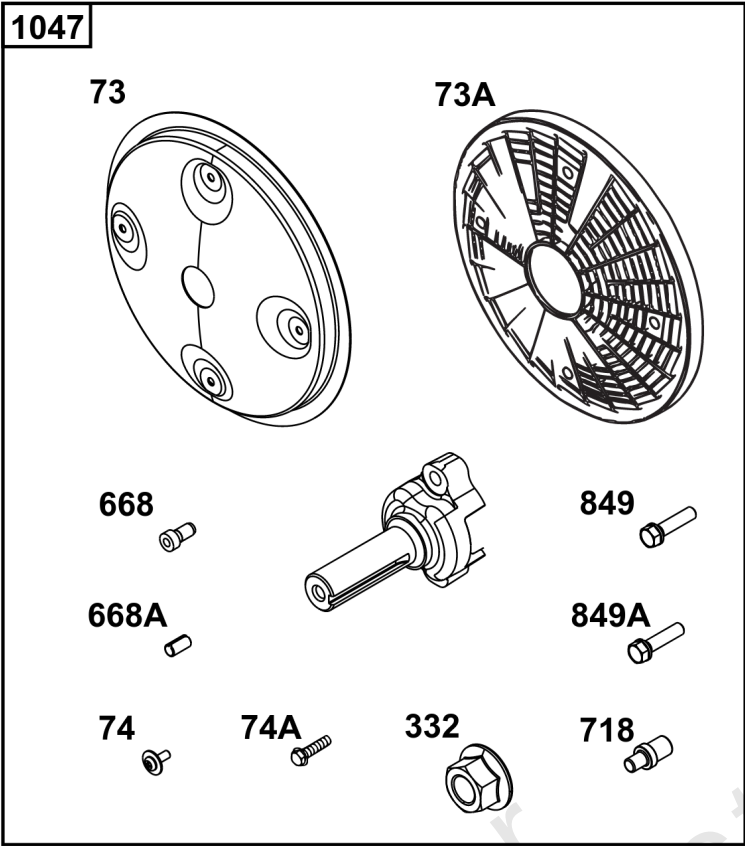

PTO

REF NO	PART NO	QTY	DESCRIPTION
73	841582	1	SCREEN, Rotating
73A	494439	1	SCREEN, Rotating
74	841441	4	SCREW -(Rotating Screen)
74A	691647	4	SCREW -(Rotating Screen)
332	690887	1	NUT -(Flywheel)
668	691500	4	SPACER -(Rotating Screen)
668A	691215	4	SPACER -(Rotating Screen)
718	841581	1	PIN, Locating -(32MM)
849	691088	2	SCREW -(Stub Shaft)
849A	846236	2	SCREW -(Stub Shaft)
1047	841580	1	SHAFT, Stub -(1" Diameter) (4.75" Length)
1047A	842655	1	SHAFT, Stub -(1" Diameter) (5.43" Length)

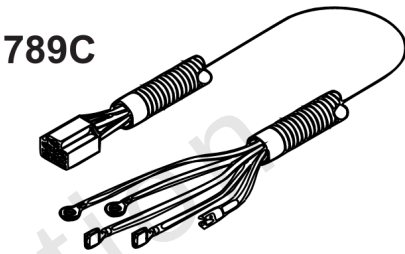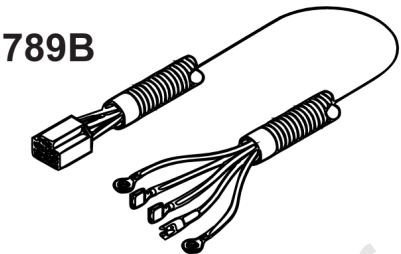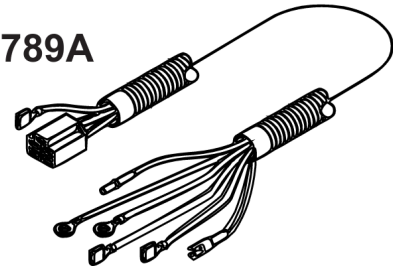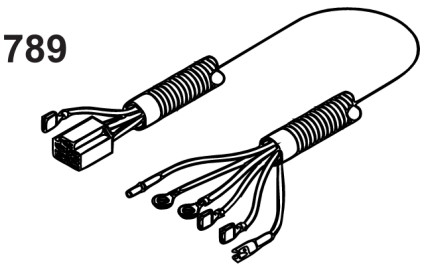


578

LOOSE CONNECTOR:
TE # 1-480704-0
MATE-N-LOK 6 POSITION HOUSING

Electrical

REF NO	PART NO	QTY	DESCRIPTION
415	1714480SM	1	PLUG -(Plug for Ignition Switch Removal)
578	84007350	1	WIRE ASSEMBLY -(Aids in Repowering Engine Application with 6-Pin Connector and Wires with Terminals to Create Custom Adapter Configurations)
789	691996	1	HARNESS, Wiring -(For 16 Amp Alternators)
789A	841318	1	HARNESS, Wiring -(For 16 Amp Alternators with Solenoid Shift Starter)
789B	847601	1	HARNESS, Wiring -(For 20 Amp Alternators)
789C	847602	1	HARNESS, Wiring -(For 20 Amp Alternators with Solenoid Shift Starter)

 265



265A



416




267




268



269

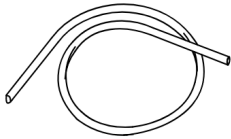


269A

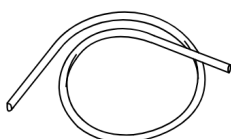


270




271

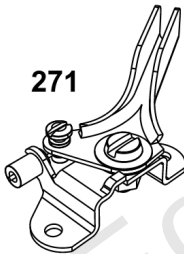

271A

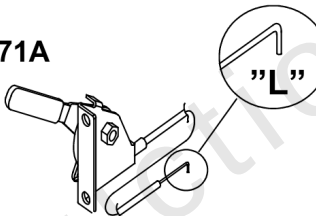

271B

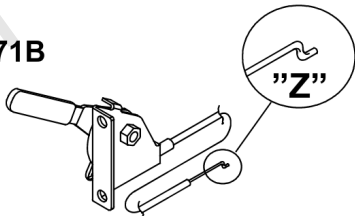

620

265



262



 
561




347




356




271B

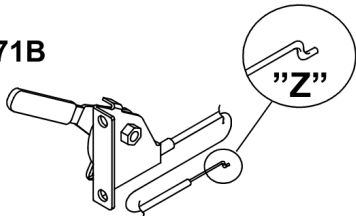



281

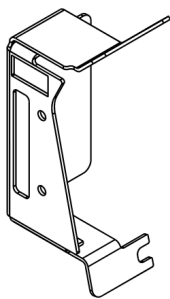

356A

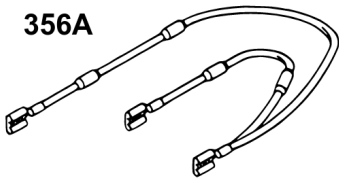

416A

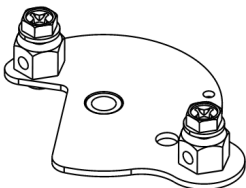 

1619



Speed Control

REF NO	PART NO	QTY	DESCRIPTION
262	841552	1	SCREW
265	691024	1	CLAMP, Casing -(Casing Clamp for Hard Casing)
265A	690798	1	CLAMP, Casing -(Casing Clamp for Soft Casing)
267	792629	1	SCREW -(Screw for Casing Clamp)
268	691025	1	CASING, Control Wire -(Wire Casing 72")
269	26634	1	WIRE, Control -(Control Wire 78")
269A	93907	1	WIRE, Control -(Control Wire 100")
270	691027	1	NUT -(Nut for Wire Casing)
271	691028	1	LEVER, Control -(Speed Control Lever Assembly)
271A	692105	1	LEVER, Control -(Speed Control Lever Assembly) ('L' Shaped End)
271B	692541	1	LEVER, Control -(Speed Control Lever Assembly) ('Z' Shaped End)
281	690742	1	PANEL, Control
347	691995	1	SWITCH-ROCKER
356	690796	1	WIRE, Stop
356A	691999	1	WIRE ASSEMBLY
416	595196	1	BRACKET, Throttle Cable -(Casing Clamp for Snap-In Casing)
416A	84006945	1	BRACKET, Throttle Cable
561	806447	1	NUT
620	494052	1	BRACKET, Control -(Throttle Control for Vanguard V-Twin Horizontal Small Block)
1619	691693	1	SCREW

