 




Parts Manual



Mfg. No: 305447-0607-G1

Model Components	Page
Air Cleaner Group.	4
Alternator Group.	6
Blower Housing Group.	8
Carburetor Group.	10
Controls Group.	12
Crankcase Cover/Sump Group.	14
Crankshaft Group.	18
Cylinder Group.	20
Cylinder Head Group.	24
Exhaust Group.	28
Flywheel, Ignition, and Starter Group.	30
Fuel Supply Group.	32
Lubrication Group.	34
Replacement Engine - US & Canada.	36
Model 29, 30, 35 & 38 Engine Accessories Catalog.	37
Maintenance Kits.	38
Lubrication.	40
Starter Motor Side Outlet Mufflers.	42
Oil Filter Side Outlet Mufflers.	44
Oil Filter Side Outlet Manifolds.	46
Starter Motor Side Outlet Manifolds.	48
Mufflers.	50
Center Outlet Mufflers.	52
Muffler Guards and Shields.	54
Spark Arrestors and Deflectors.	56
Muffler Mounting Hardware.	58
Flywheel and Air Intake Guards.	60
PTO.	62
Electrical.	64
Speed Control.	66

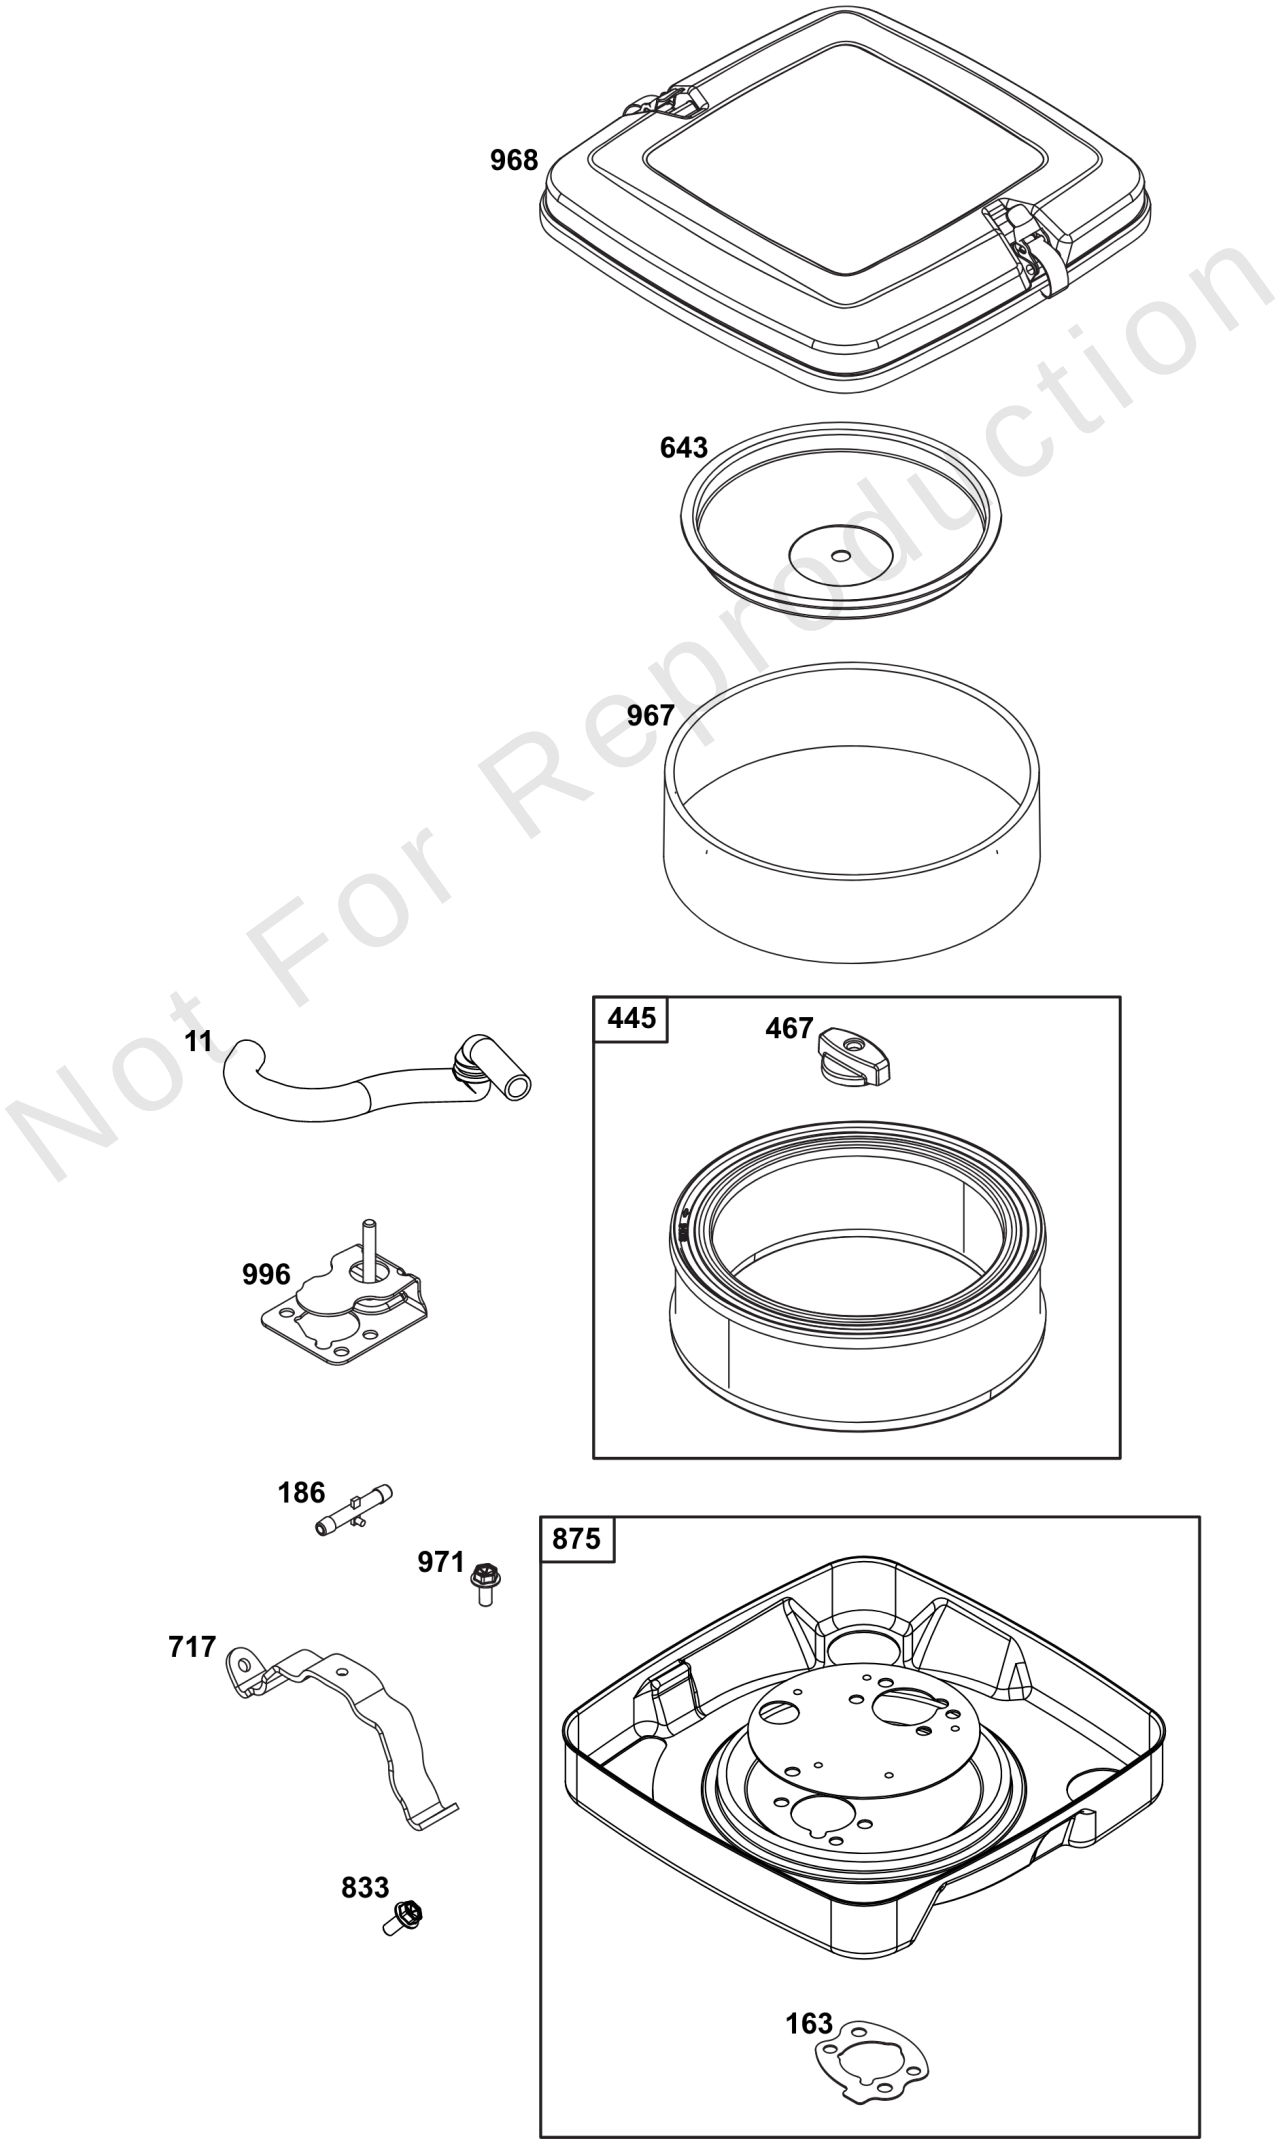

Air Cleaner Group


REF NO	PART NO	QTY	DESCRIPTION
11	-----	1	TUBE, Breather -(Part information located in Cylinder Group.)
163	844931	1	GASKET, Air Cleaner
186	-----	1	CONNECTOR, Hose -(Part information located in Fuel Supply Group.)
445	394018S	1	FILTER, A/C Cartridge
467	846431	1	KNOB, Air Cleaner Cover
643	844932	1	RETAINER, Air Cleaner
717	692153	1	BRACKET, Air Cleaner
833	807084	1	SCREW -(Air Cleaner Mounting Strap/Stud)
875	845142	1	BASE, Air Cleaner
967	272490S	1	FILTER, Pre Cleaner
968	699959	1	COVER, Air Cleaner
971	807084	5	SCREW
996	844930	1	SHIELD, Carburetor

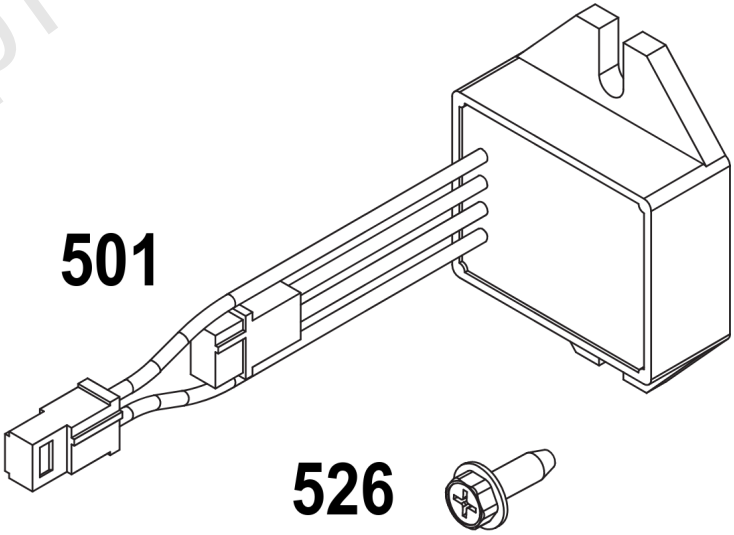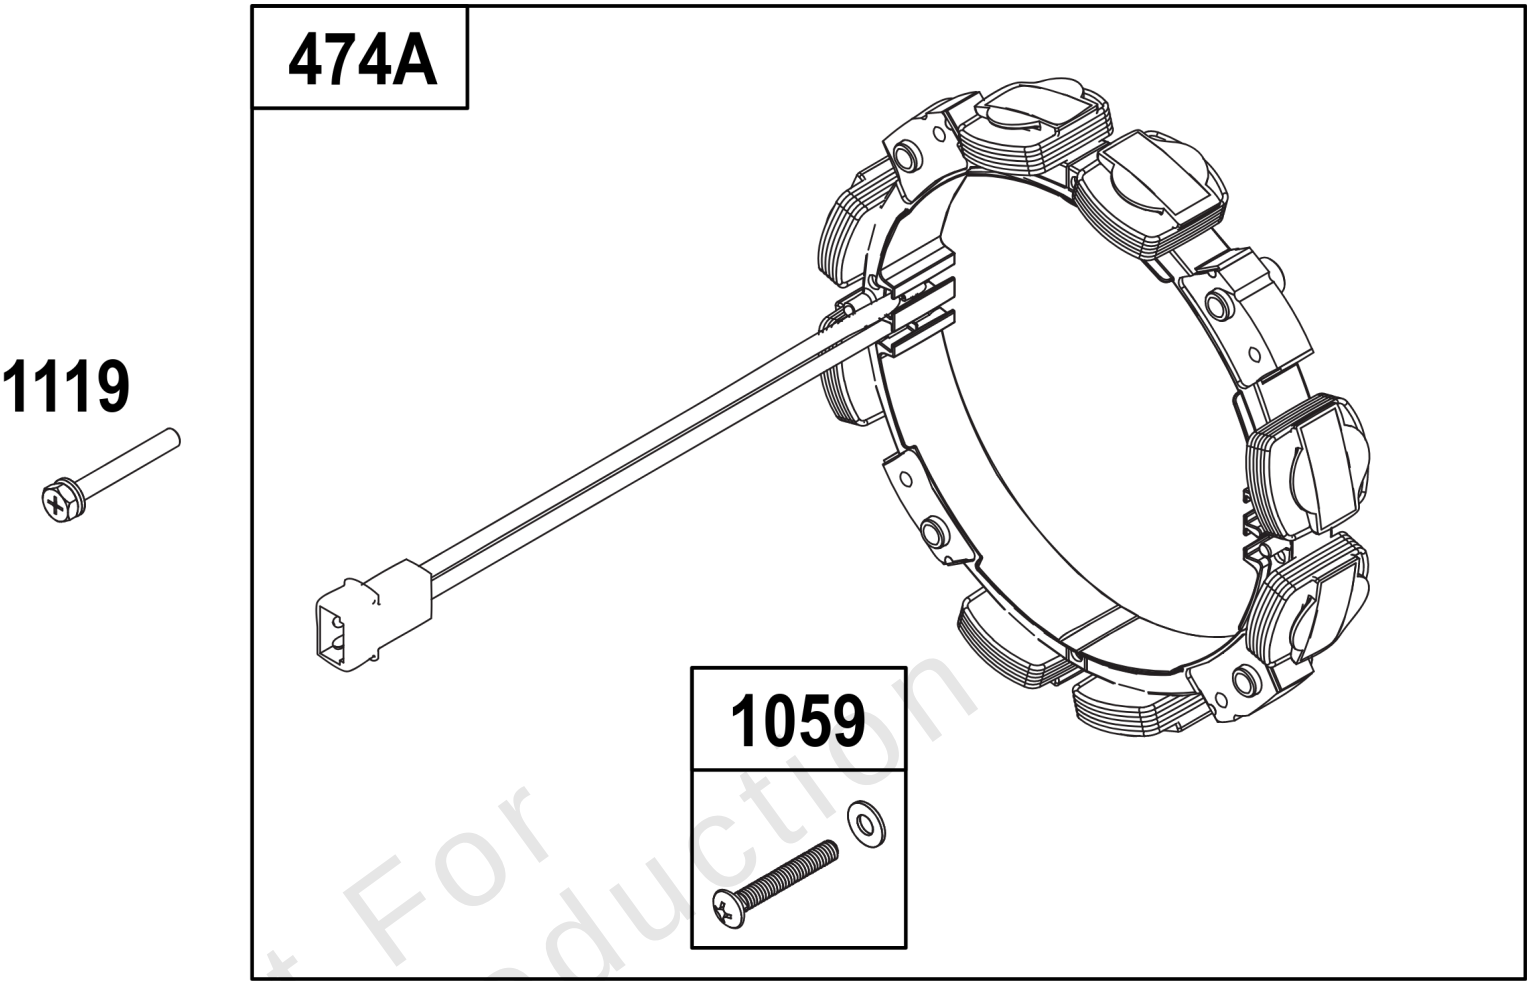  

Alternator Group


REF NO	PART NO	QTY	DESCRIPTION
474A	592830	1	ALTERNATOR
501	845907	1	REGULATOR
526	692067	2	SCREW -(Regulator)
1059	698516	4	KIT, Screw/Washer
1119	691552	4	SCREW -(Alternator)

 Not For Reproduction

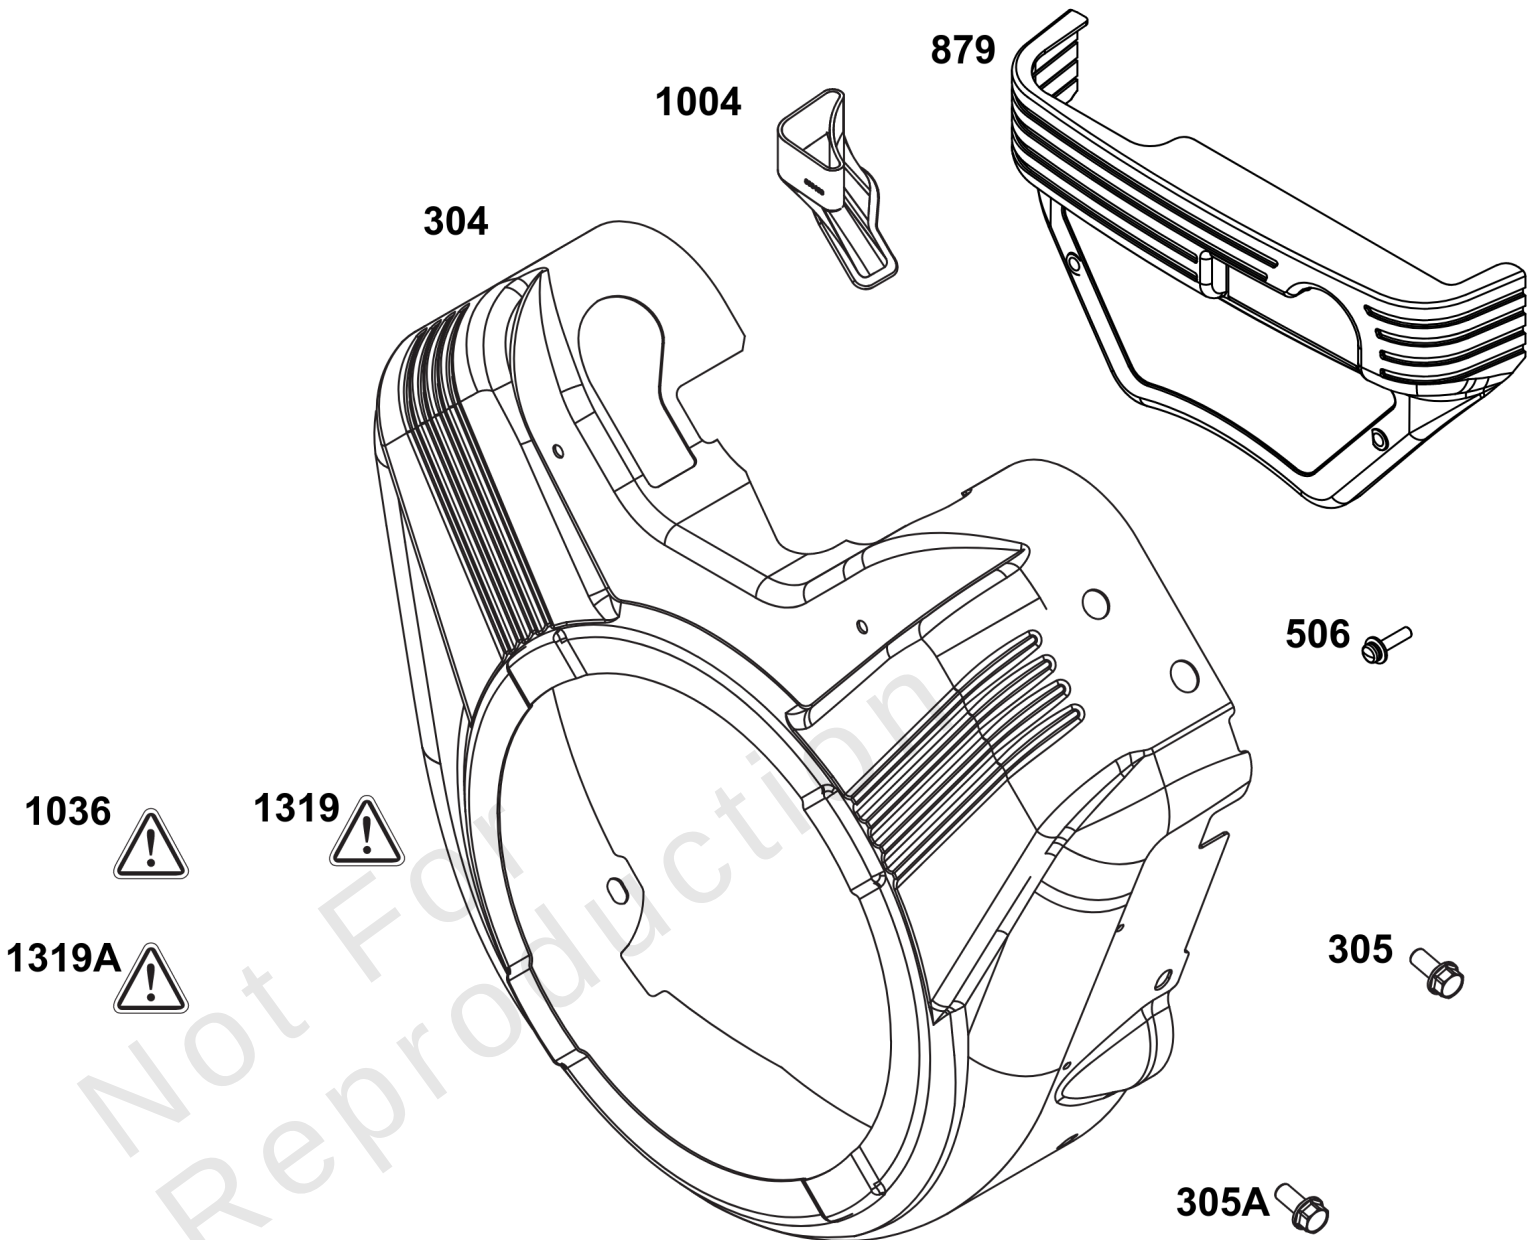


Blower Housing Group

REF NO	PART NO	QTY	DESCRIPTION
304	842681	1	HOUSING, Blower
305	807084	4	SCREW -(Blower Housing)
305A	841233	4	SCREW -(Blower Housing)
506	807120	2	SCREW -(Carburetor/EFI Cover)
879	807460	1	COVER, Carburetor/EFI
1004	841656	1	DUCT, Air
1036	-----	1	LABEL, Emissions -(Available from a Briggs & Stratton Authorized Dealer)
1319	797669	1	LABEL, Warning -(REQUIRED When Replacing Parts With Warning Labels Affixed)
1319A	278911GS	1	LABEL, Warning -(REQUIRED When Replacing Parts With Warning Labels Affixed)

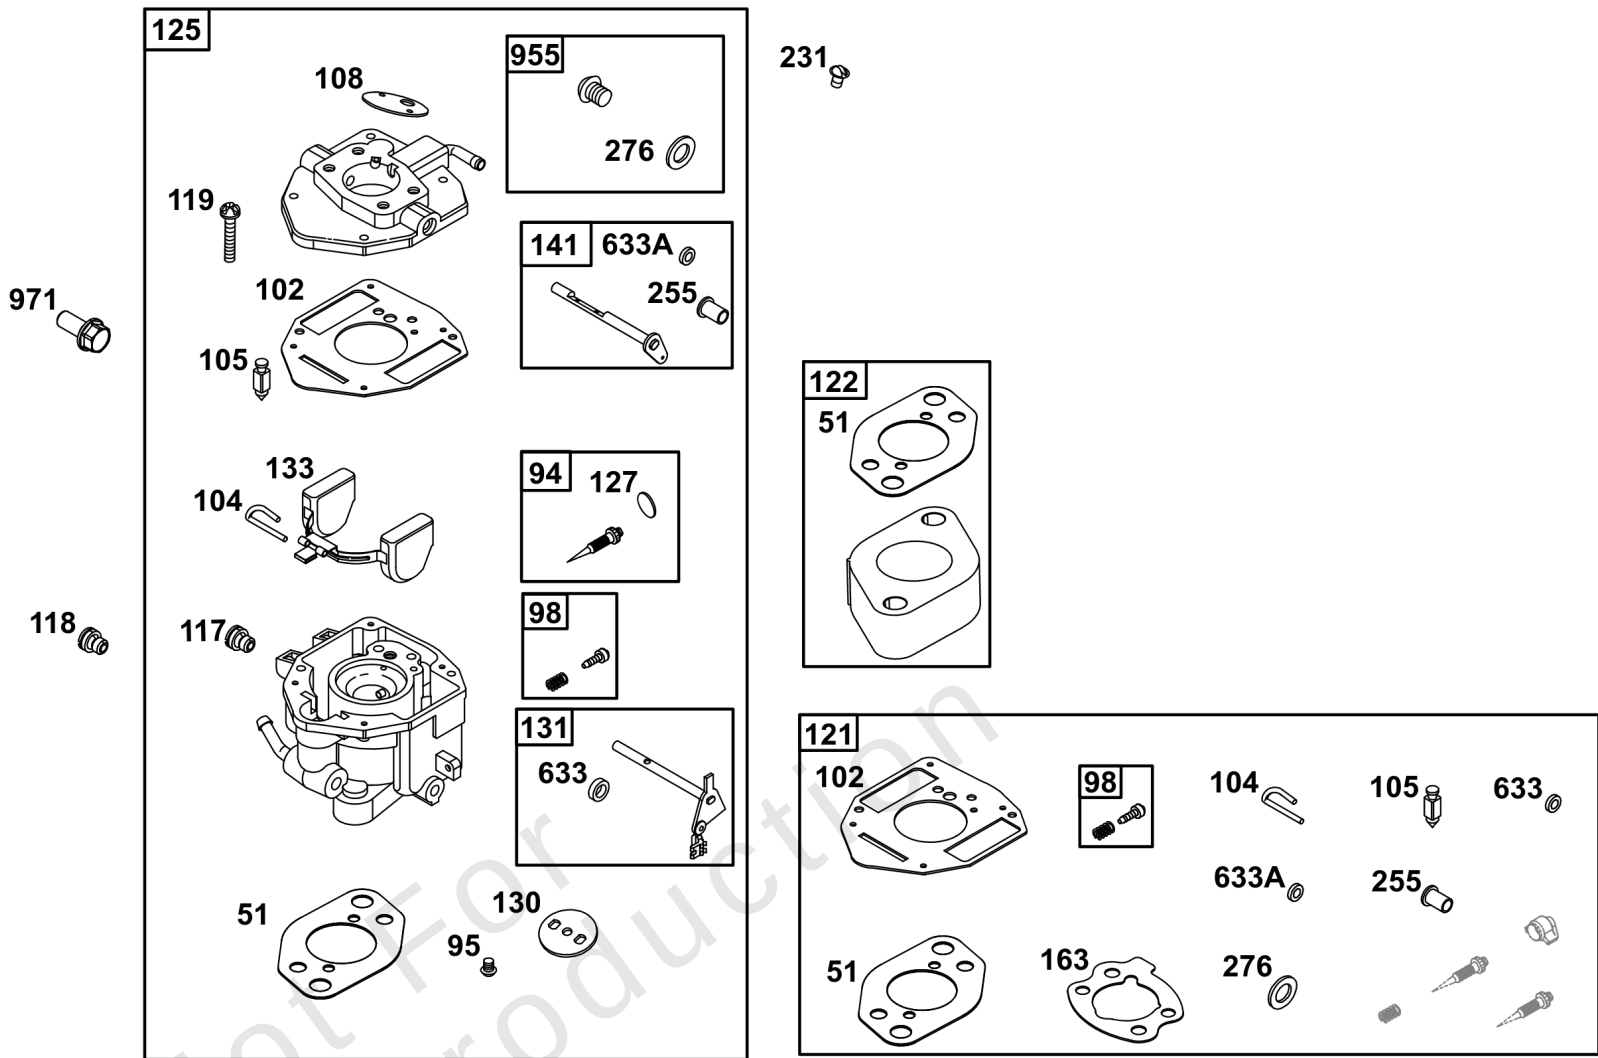 


Carburetor Group

REF NO	PART NO	QTY	DESCRIPTION
51	-----	2	GASKET, Intake -(Part information located in Cylinder Head Group.)
94	847026	1	KIT, Idle Mixture
95	690718	3	SCREW -(Throttle Valve)
98	808177	1	KIT, Idle Speed
102	692077	1	GASKET, Carburetor Body
104	690723	1	PIN, Float Hinge
105	797410	1	VALVE, Float Needle
108	844989	1	VALVE, Choke
117	690881	1	JET, Main -(Standard)
118	844990	1	JET, Main -(High Altitude)
119	690720	4	SCREW -(Upper Carburetor Body To Lower Carburetor Body)
121	845146	1	KIT, Carburetor Overhaul -(Service Kits can include parts not for this engine.)
122	690691	1	SPACER, Carburetor
125	844992	1	CARBURETOR
127	847028	1	PLUG, Welch
130	690726	1	VALVE, Throttle
131	809007	1	KIT, Throttle Shaft
133	844546	1	FLOAT, Carburetor
141	808398	1	KIT, Choke Shaft
163	-----	1	GASKET, Air Cleaner -(Part information located in Air Cleaner Group.)
231	690711	2	SCREW -(Choke Valve)
255	690721	1	BUSHING, Choke Shaft
276	690724	1	WASHER, Sealing
633	806131	1	SEAL, Choke/Throttle Shaft
633A	690722	1	SEAL, Choke/Throttle Shaft
955	807723	1	PLUG, Carburetor
971	-----	5	SCREW -(Part information located in Air Cleaner Group.)

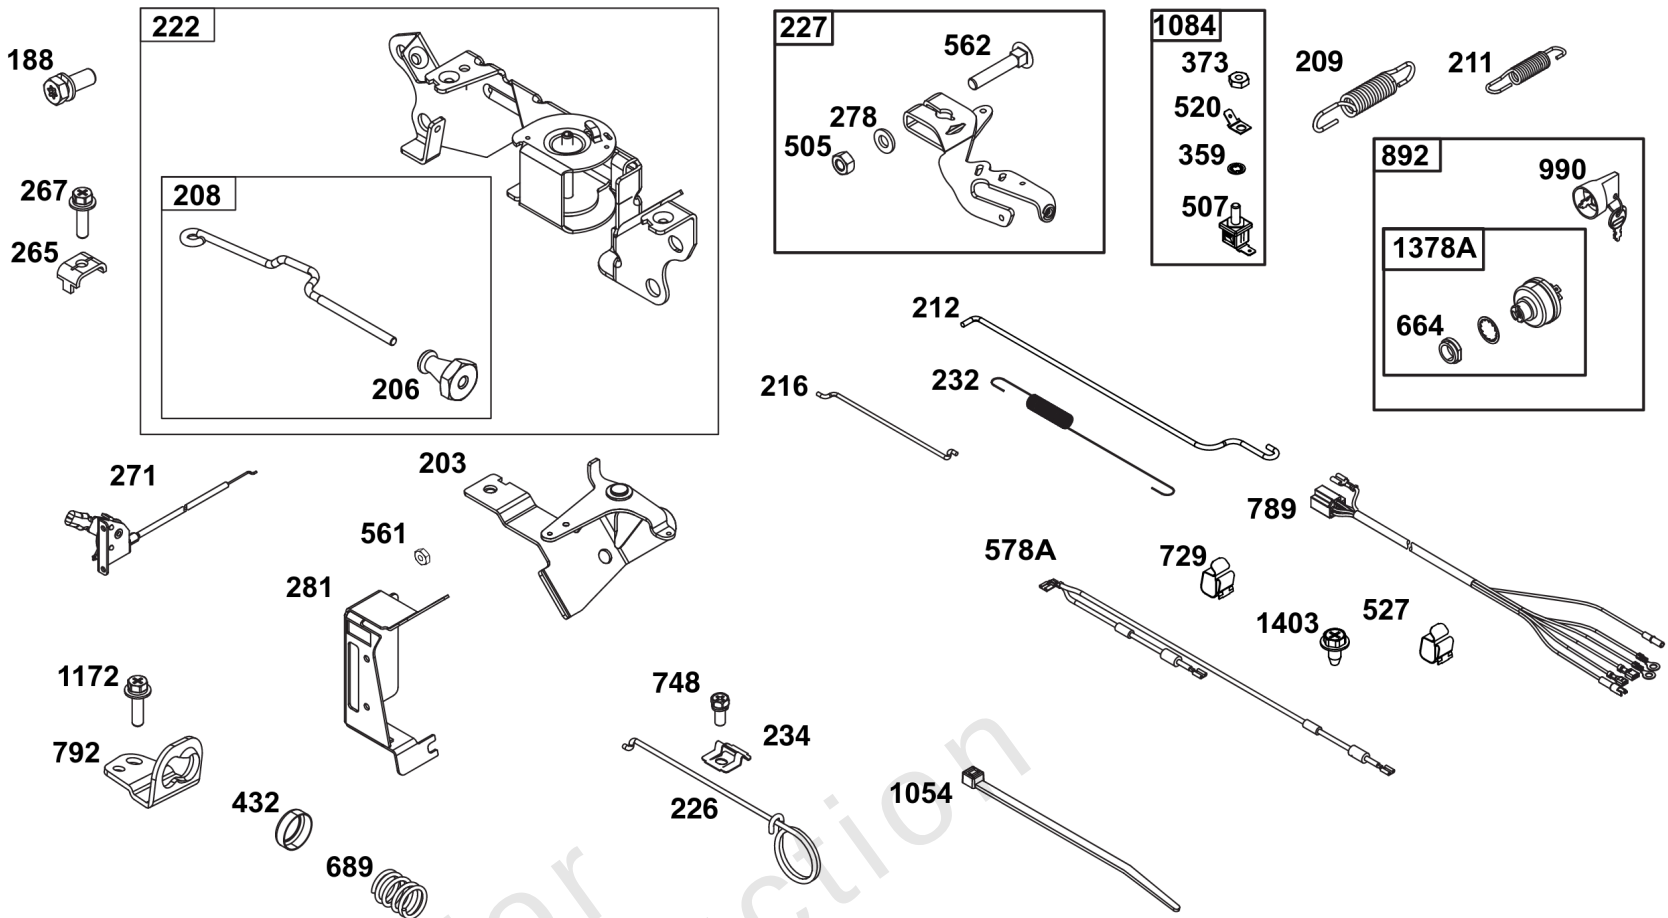 


Controls Group

REF NO	PART NO	QTY	DESCRIPTION
188	692062	3	SCREW -(Control Bracket)
203	690923	1	CRANK, Bell
206	691244	1	NUT, Governor Adjusting
208	808453	1	ROD, Governor Control
209	692070	1	SPRING, Governor
211	692069	1	SPRING, Governed Idle
212	847015	1	LINK, Throttle
216	690705	1	LINK, Choke
222	808454	1	BRACKET, Control
226	692075	1	ROD, Choke
227	690236	1	LEVER, Governor Control
232	692073	1	SPRING, Governor Link
234	691723	1	CLIP, Control Rod
265	691024	1	CLAMP, Casing
267	841552	1	SCREW -(Casing Clamp)
271	692541	1	LEVER, Control
278	842122	1	WASHER -(Governor Control Lever)
281	690742	1	PANEL, Control
359	691077	1	WASHER -(Ground Terminal)
373	845823	1	NUT -(Ground Terminal)
432	691509	1	CAP, Spring
505	844752	1	NUT -(Governor Control Lever)
507	691972	1	INSULATOR
520	691084	1	TERMINAL, Ground
527	690423	1	CLAMP, Tube
561	690713	1	NUT -(Control Lever)
562	690239	1	BOLT -(Governor Control Lever)
578A	844547	1	HARNESS, Wiring
664	691087	1	NUT -(Key Switch)
689	691272	1	SPRING, Friction
729	593826	1	CLIP, Wire
748	692083	1	SCREW -(Control Rod Clip)
789	691996	1	HARNESS, Wiring
792	691526	1	BRACKET, Fixed Speed
892	995012	1	KIT, Ignition Switch
990	691959	1	SET, Key
1054	280275	2	TIE, Cable
1084	848341	1	CONNECTOR, Terminal
1172	841552	2	SCREW -(Fixed Speed Bracket)
1378A	847144	1	SET, Washer/Nut
1403	692067	1	SCREW

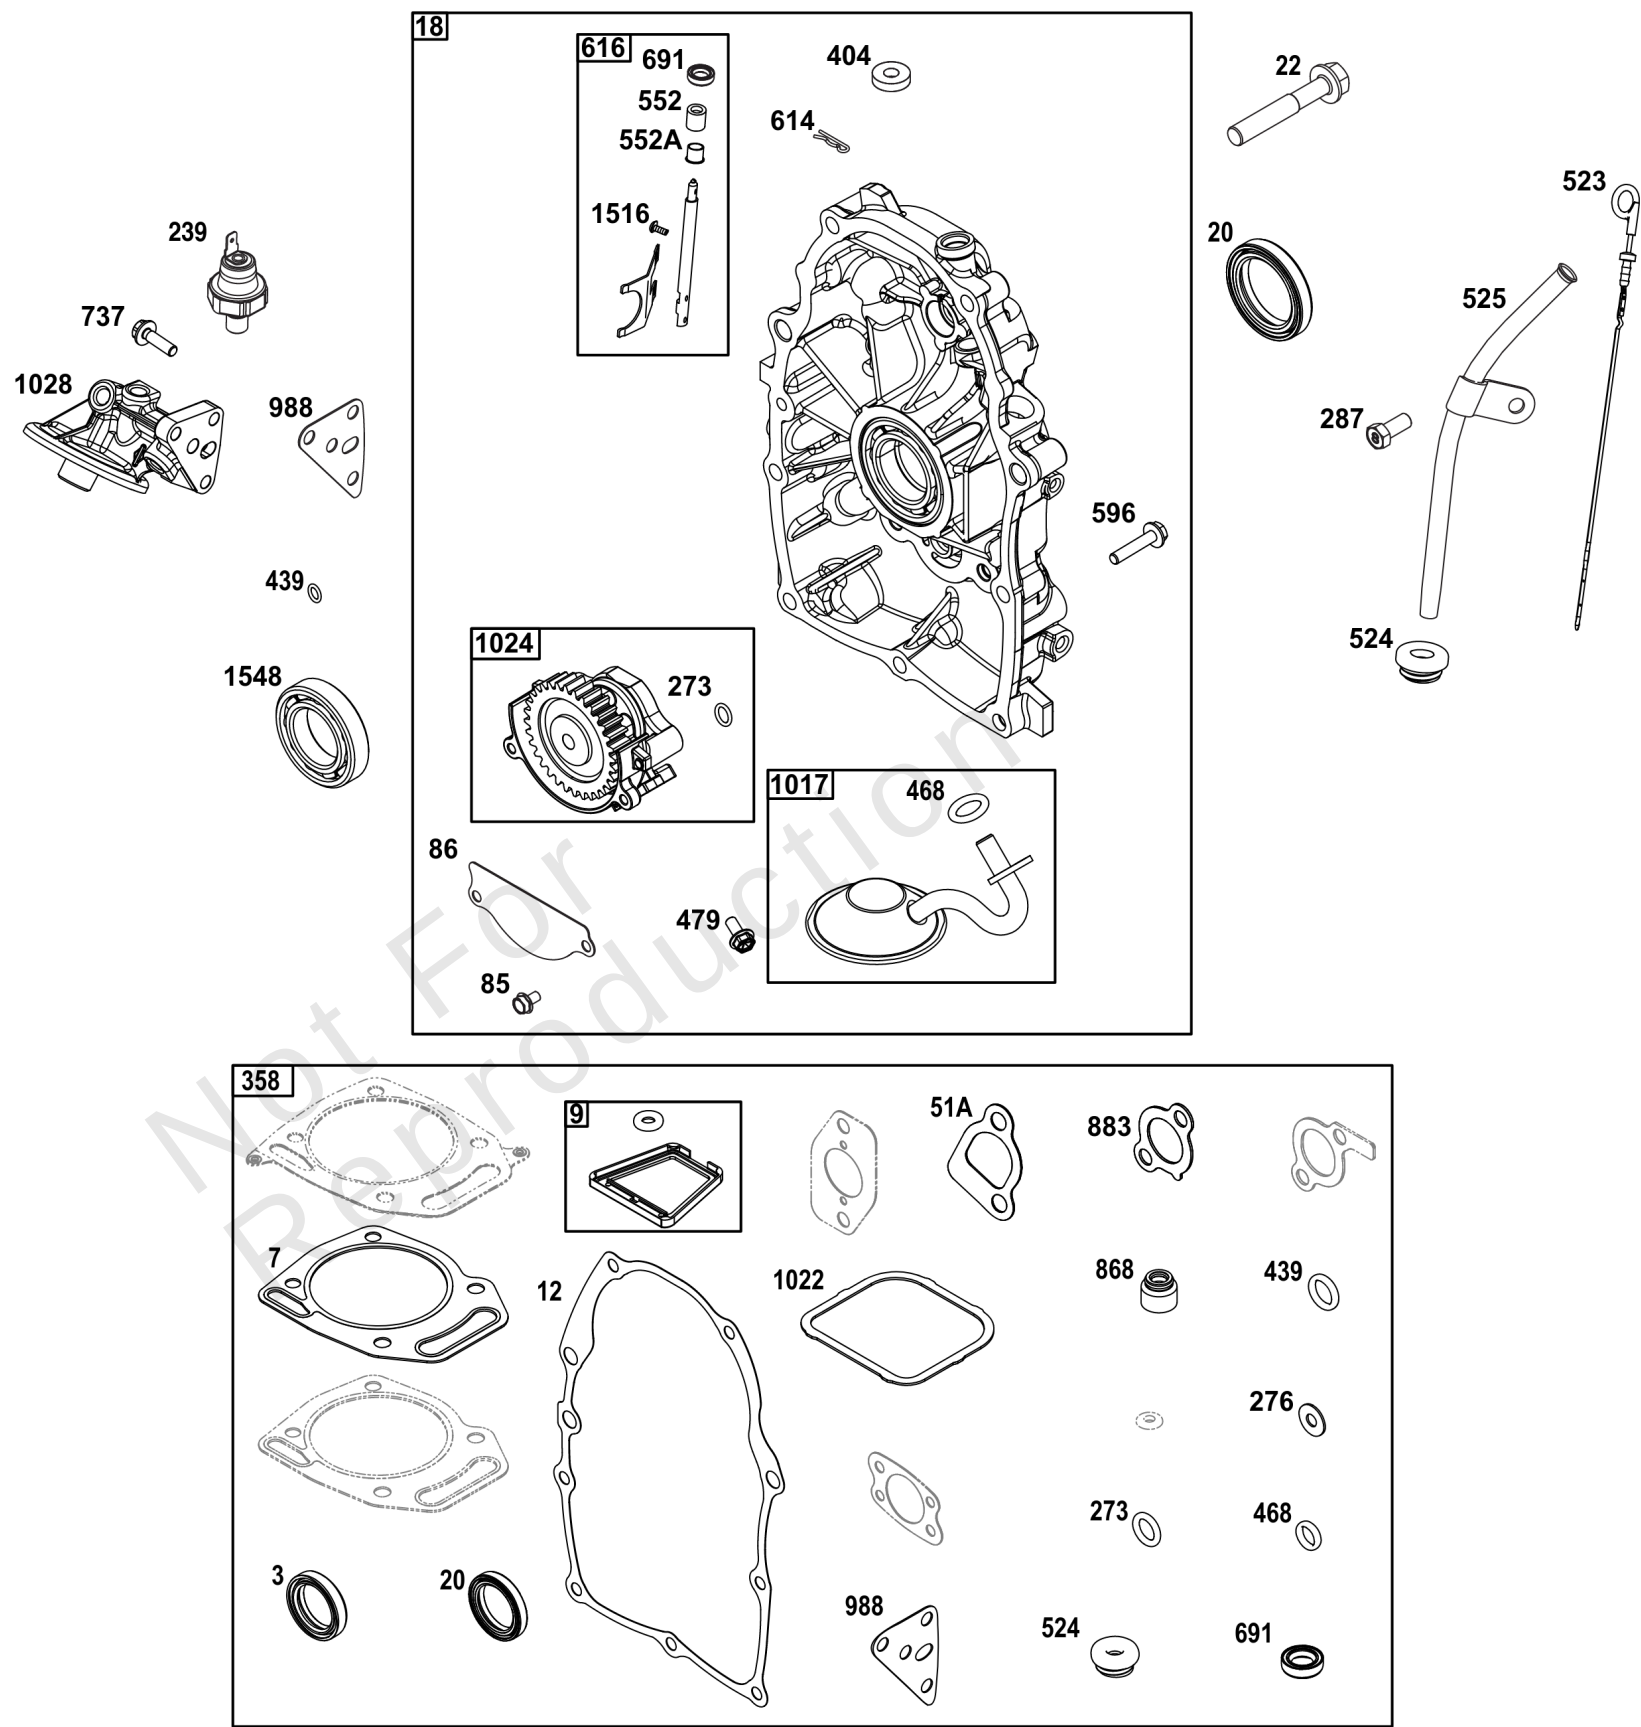 






Crankcase Cover/Sump Group

REF NO	PART NO	QTY	DESCRIPTION
3	-----	1	SEAL, Oil -(Part information located in Cylinder Group.)
7	-----	2	GASKET, Cylinder Head -(Part information located in Cylinder Head Group.)
9	-----	1	GASKET, Breather -(Part information located in Cylinder Group.)
12	846487	1	GASKET, Crankcase
18	84002116	1	COVER, Crankcase
20	805049S	1	SEAL, Oil -(PTO Side)
22	807362	9	SCREW -(Crankcase Cover/Sump)
51A	-----	2	GASKET, Intake -(Part information located in Cylinder Head Group.)
85	841233	2	SCREW -(Gear Cover)
86	690745	1	COVER, Gear
239	690233	1	SWITCH, Oil Pressure
273	-----	2	SEAL, O-Ring -(Part information located in Lubrication Group.)
276	-----	4	WASHER, Sealing -(Part information located in Cylinder Head Group.)
287	-----	1	SCREW -(Part information located in Lubrication Group.)
358	-----		GASKET SET, Engine -(Part information located in Cylinder Group.)
404	-----	1	WASHER -(Part information located in Cylinder Group.)
439	-----	1	O-RING, Oil Gallery -(Part information located in Lubrication Group.)
468	-----	1	SEAL, O-Ring -(Part information located in Lubrication Group.)
479	-----	1	SCREW -(Part information located in Lubrication Group.)
523	-----	1	DIPSTICK -(Part information located in Lubrication Group.)
524	-----	1	SEAL, O-Ring -(Part information located in Lubrication Group.)
525	-----	1	TUBE, Dipstick -(Part information located in Lubrication Group.)
552	690701	1	BUSHING, Governor Crank
552A	806686	1	BUSHING, Governor Crank
596	-----	2	SCREW -(Part information located in Lubrication Group.)
614	-----	1	PIN, Cotter -(Part information located in Cylinder Group.)
616	806685	1	CRANK, Governor
691	842826	1	SEAL, Governor Shaft
737	84006523	3	SCREW -(Oil Filter Adapter)
868	-----	2	SEAL, Valve -(Part information located in Cylinder Head Group.)
883	-----	2	GASKET, Exhaust -(Part information located in Cylinder Head Group.)
988	-----	1	GASKET, Oil Adapter -(Part information located in Lubrication Group.)
1017	-----	1	SCREEN, Oil Pump -(Part information located in Lubrication Group.)

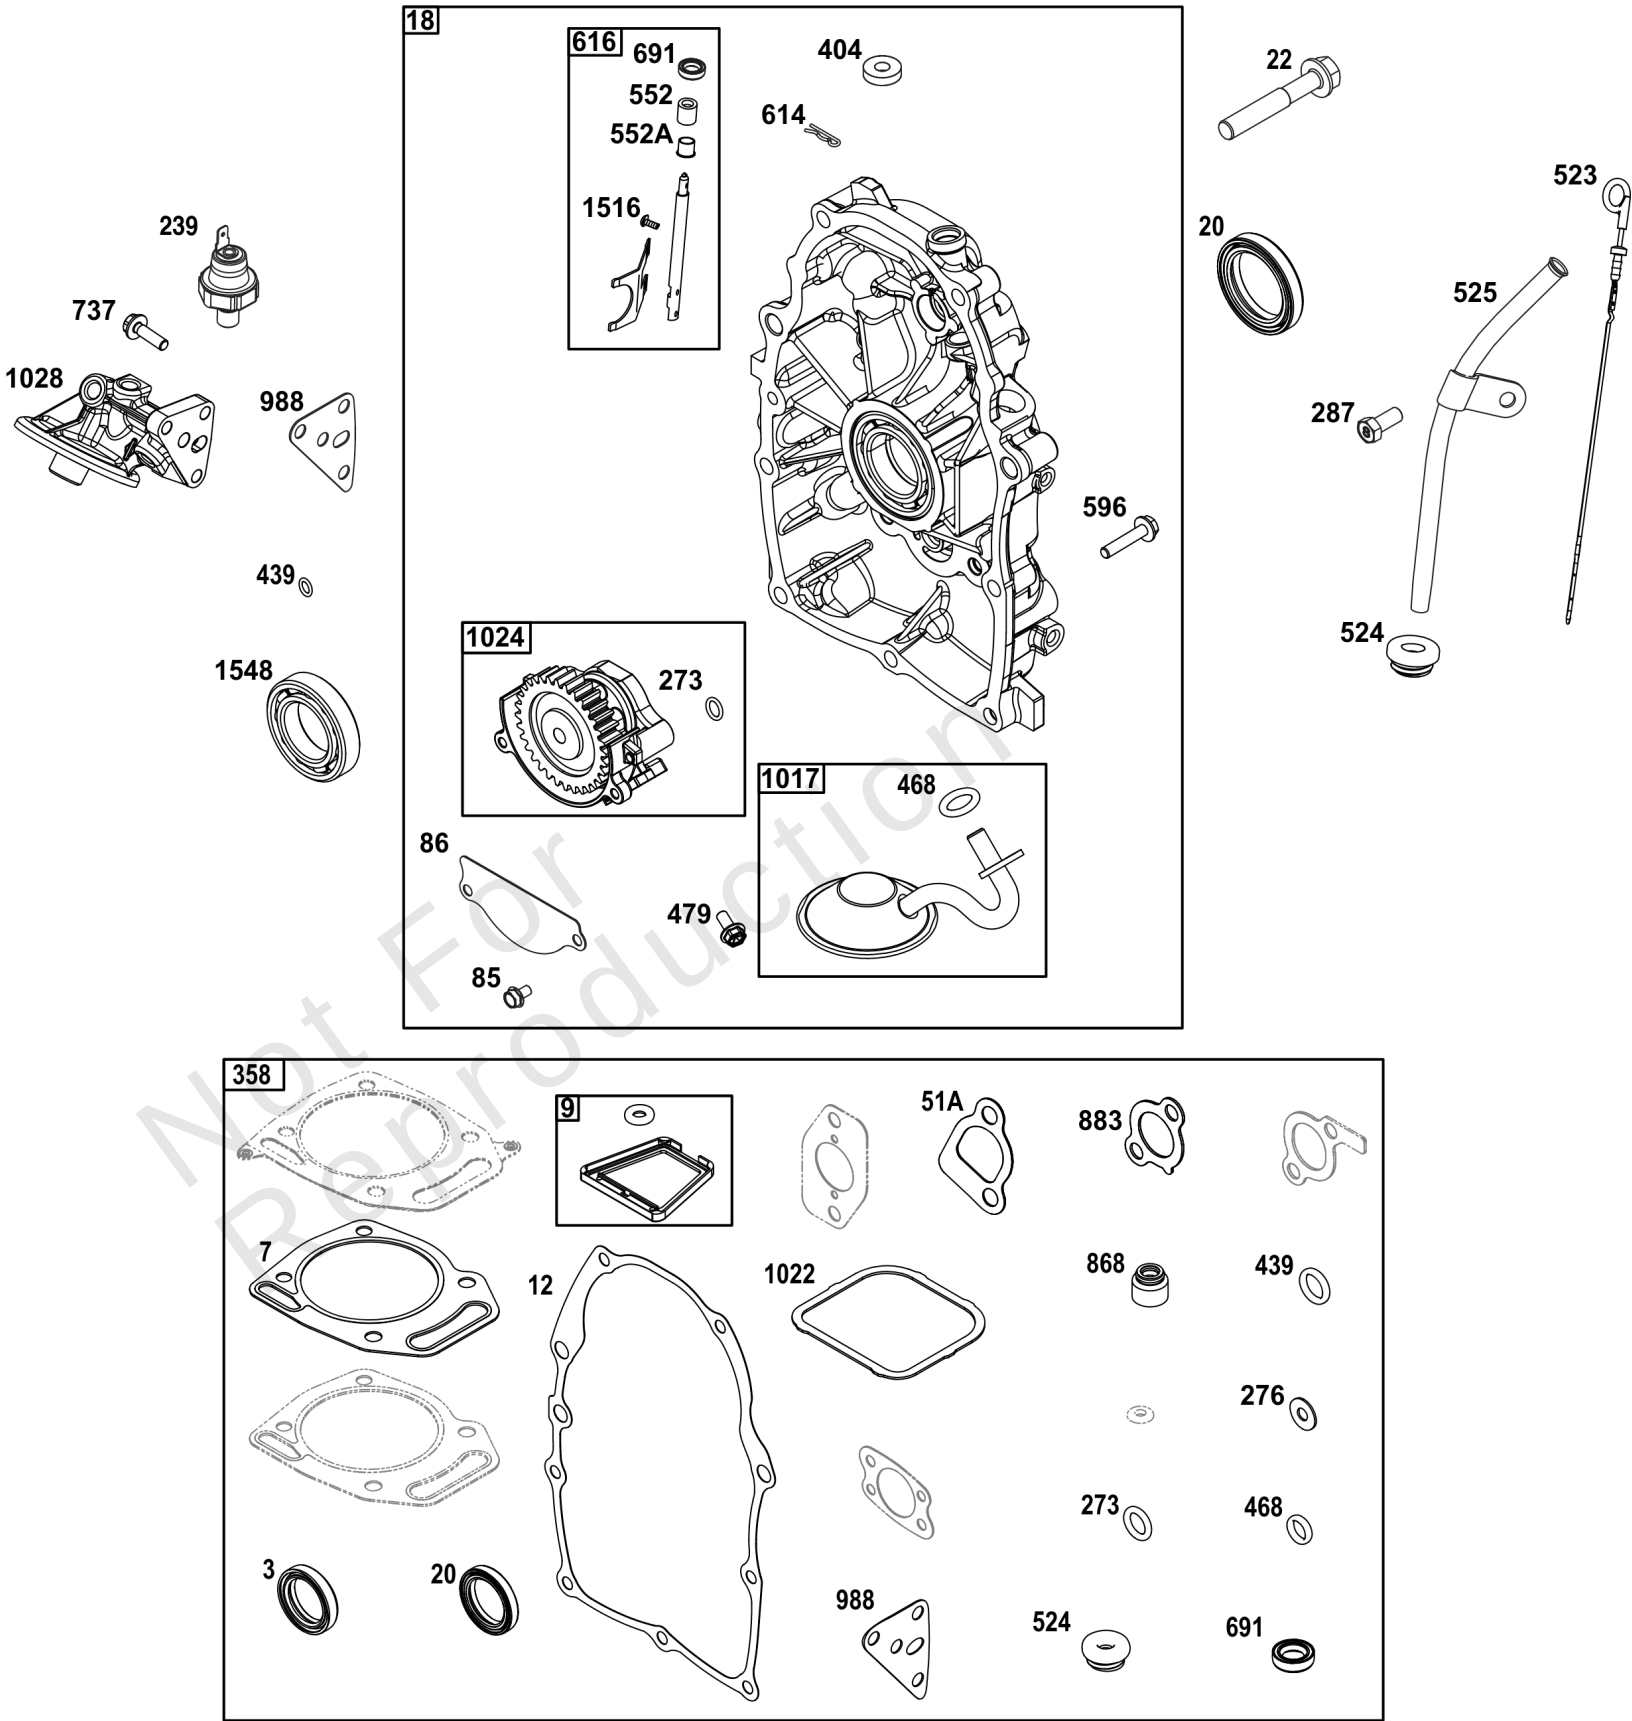 


Crankcase Cover/Sump Group

REF NO	PART NO	QTY	DESCRIPTION
1022	-----	2	GASKET, Rocker Cover -(Part information located in Cylinder Head Group.)
1024	-----	1	PUMP, Oil -(Part information located in Lubrication Group.)
1028	-----	1	ADAPTER, Oil Filter -(Part information located in Lubrication Group.)
1516	846459	2	SCREW -(Governor Crank)
1548	843827	2	BEARING, Ball -(Crankcase Cover/Sump)

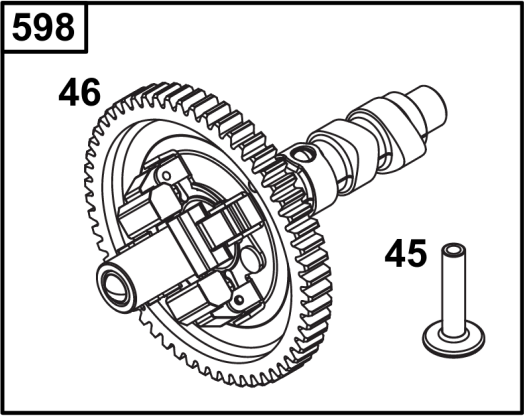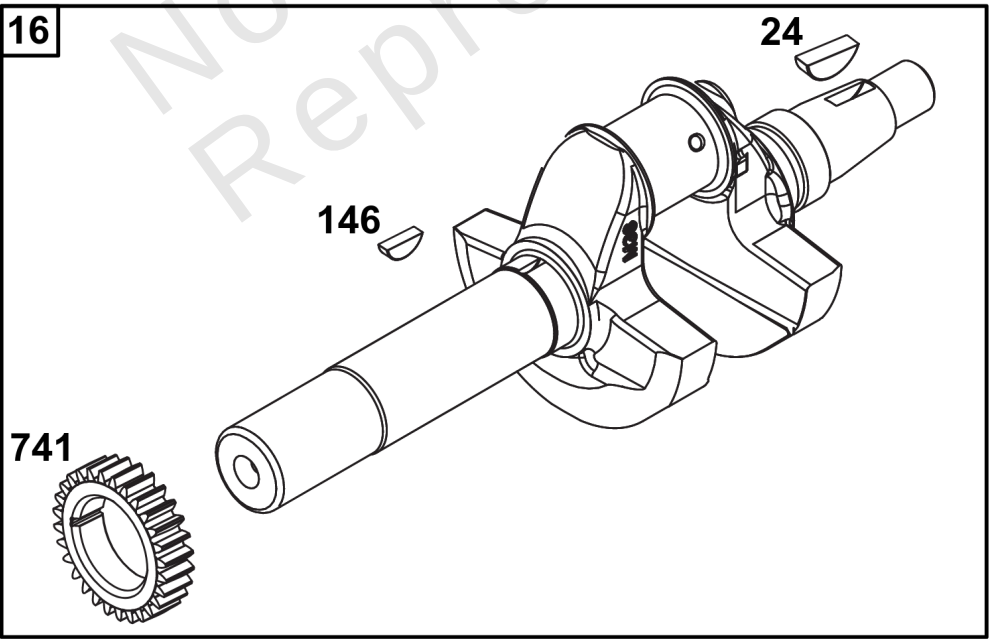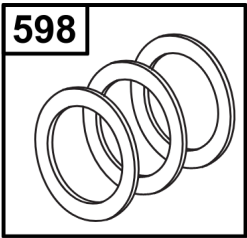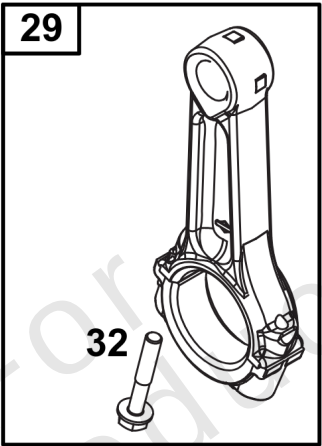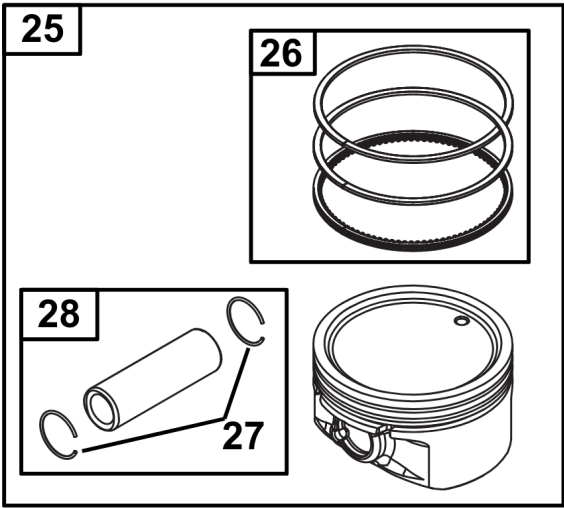     


Crankshaft Group

REF NO	PART NO	QTY	DESCRIPTION
16	84004501	1	CRANKSHAFT
24	808095	1	KEY, Flywheel
25	843951	1	PISTON ASSEMBLY -(Standard)
25	843958	1	PISTON ASSEMBLY -(.020" Oversize)
26	843953	1	SET, Ring -(Standard)
26	843957	1	SET, Ring -(.020" Oversize)
27	690683	4	LOCK, Piston Pin
28	844541	2	PIN, Piston
29	807900S	2	ROD, Connecting
32	690698	2	SCREW -(Connecting Rod)
45	-----	2	TAPPET, Valve -(Part information located in Cylinder Head Group.)
46	845649	1	CAMSHAFT
146	691639	1	KEY, Woodruff
598	807625	1	SHIM, End Play -(Crankshaft or Camshaft Bearing)
741	846085	1	GEAR, Timing
1025	690689	1	SPOOL, Governor

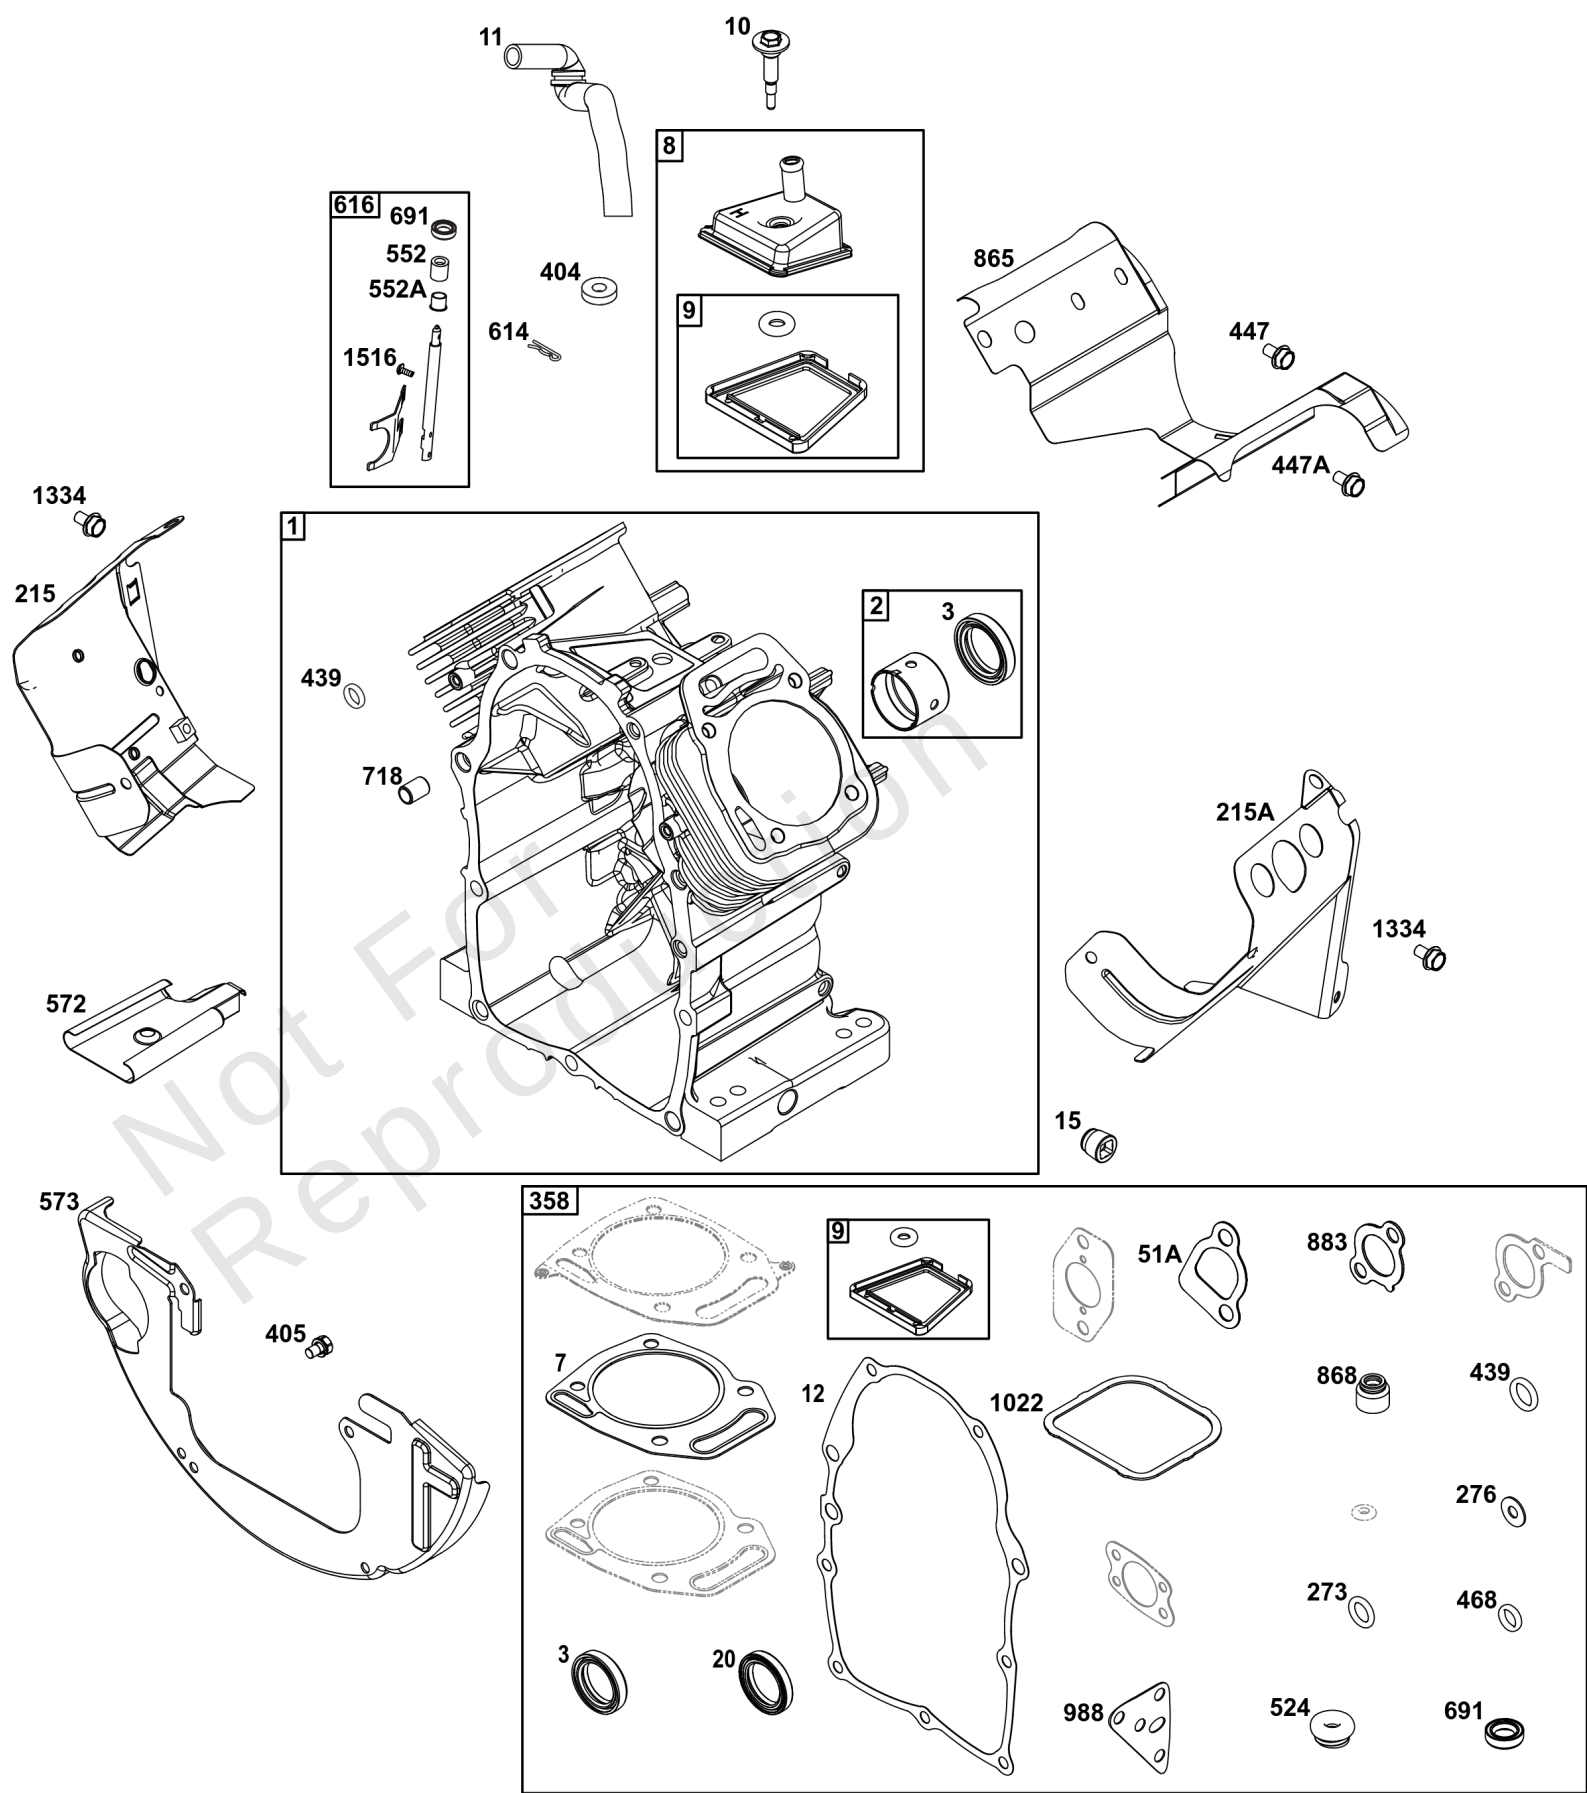 

Cylinder Group


REF NO	PART NO	QTY	DESCRIPTION
1	84004598	1	CYLINDER ASSEMBLY
2	808534	1	KIT, Bushing/Seal -(Magneto Side)
3	805101S	1	SEAL, Oil -(Magneto Side)
7	-----	2	GASKET, Cylinder Head -(Part information located in Cylinder Head Group.)
8	808984	1	BREATHER ASSEMBLY
9	844986	1	GASKET, Breather
10	690751	1	SCREW -(Breather Assembly)
11	844921	1	TUBE, Breather
12	-----	1	GASKET, Crankcase -(Part information located in Crankcase Cover/Sump Group.)
15	690946	2	PLUG, Oil Drain
20	-----	1	SEAL, Oil -(Part information located in Crankcase Cover/Sump Group.)
51A	-----	2	GASKET, Intake -(Part information located in Cylinder Head Group.)
215	841183	1	GUIDE, Air
215A	841182	1	GUIDE, Air
273	-----	2	SEAL, O-Ring -(Part information located in Lubrication Group.)
276	-----	4	WASHER, Sealing -(Part information located in Cylinder Head Group.)
358	808704	1	GASKET SET, Engine -(Service Kits may include extra parts not specific to this engine.)
404	690704	1	WASHER -(Governor Crank)
405	807163	4	SCREW -(Back Plate)
439	-----	1	O-RING, Oil Gallery -(Part information located in Lubrication Group.)
447	807084	3	SCREW -(Air Guide Cover)
447A	841233	1	SCREW -(Air Guide Cover)
468	-----	1	SEAL, O-Ring -(Part information located in Lubrication Group.)
524	-----	1	SEAL, O-Ring -(Part information located in Lubrication Group.)
552	-----	1	BUSHING, Governor Crank -(Part information located in Crankcase Cover/Sump Group.)
552A	-----	1	BUSHING, Governor Crank -(Part information located in Crankcase Cover/Sump Group.)
572	690686	1	BAFFLE, Breather
573	841310	1	PLATE, Back
614	691550	1	PIN, Cotter
616	-----	1	CRANK, Governor -(Part information located in Crankcase Cover/Sump Group.)
691	-----	1	SEAL, Governor Shaft -(Part information located in Crankcase Cover/Sump Group.)
718	806469	2	PIN, Locating
865	843768	1	COVER, Air Guide
868	-----	2	SEAL, Valve -(Part information located in Cylinder Head Group.)
883	-----	2	GASKET, Exhaust -(Part information located in Exhaust Group.)

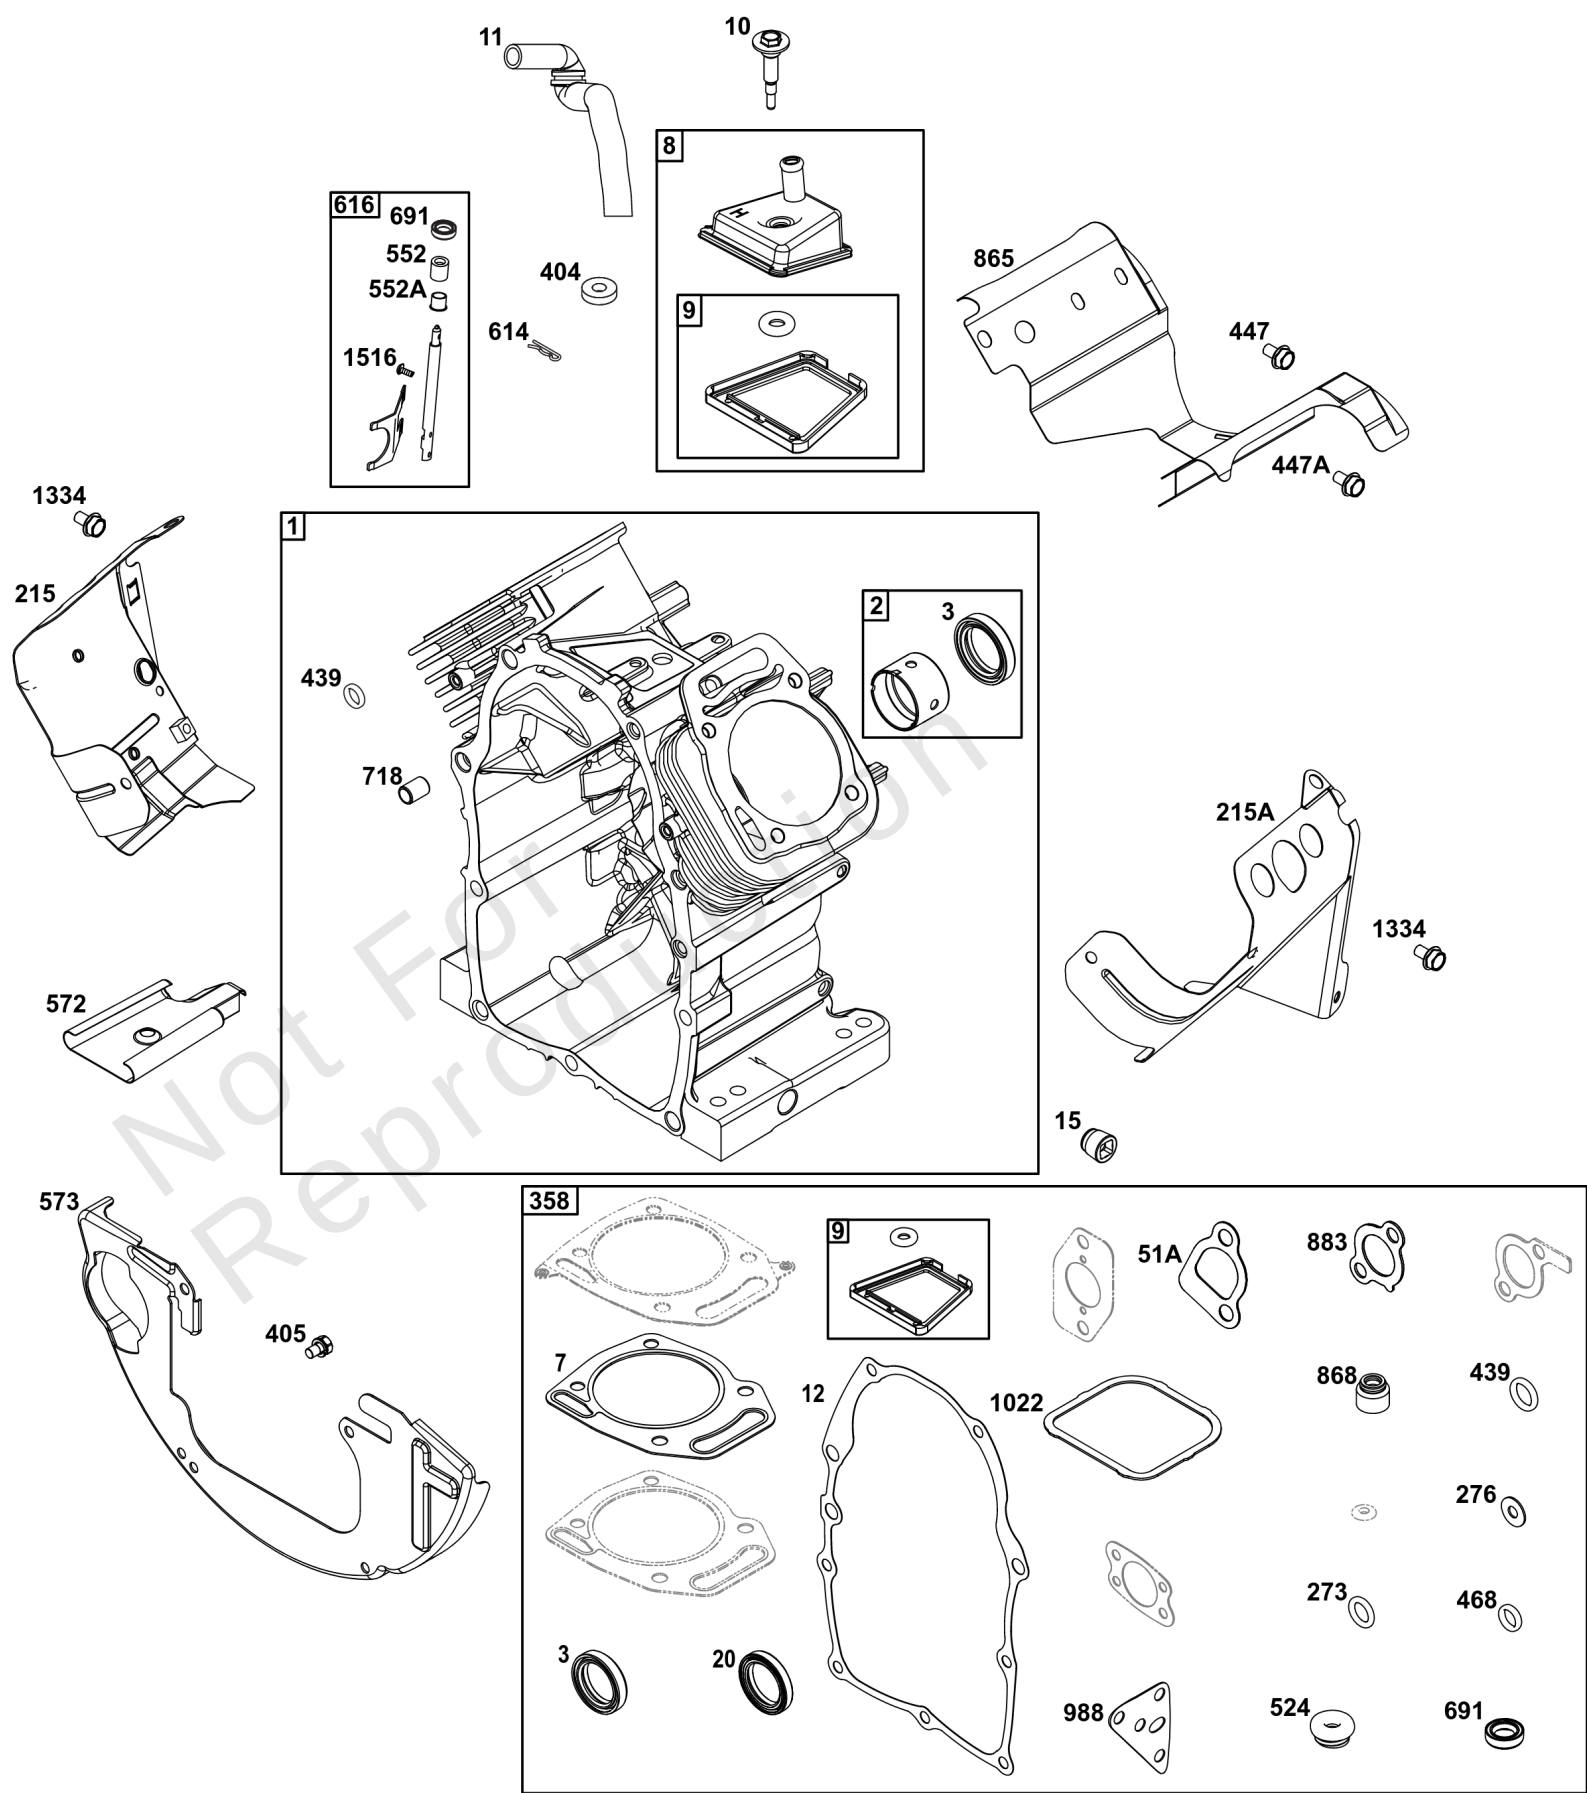 

Cylinder Group


REF NO	PART NO	QTY	DESCRIPTION
988	-----	1	GASKET, Oil Adapter -(Part information located in Lubrication Group.)
1022	-----	2	GASKET, Rocker Cover -(Part information located in Cylinder Head Group.)
1334	841233	1	SCREW -(Air Guide)
1516	-----	2	SCREW -(Part information located in Crankcase Cover/Sump Group.)

 Not For Reproduction

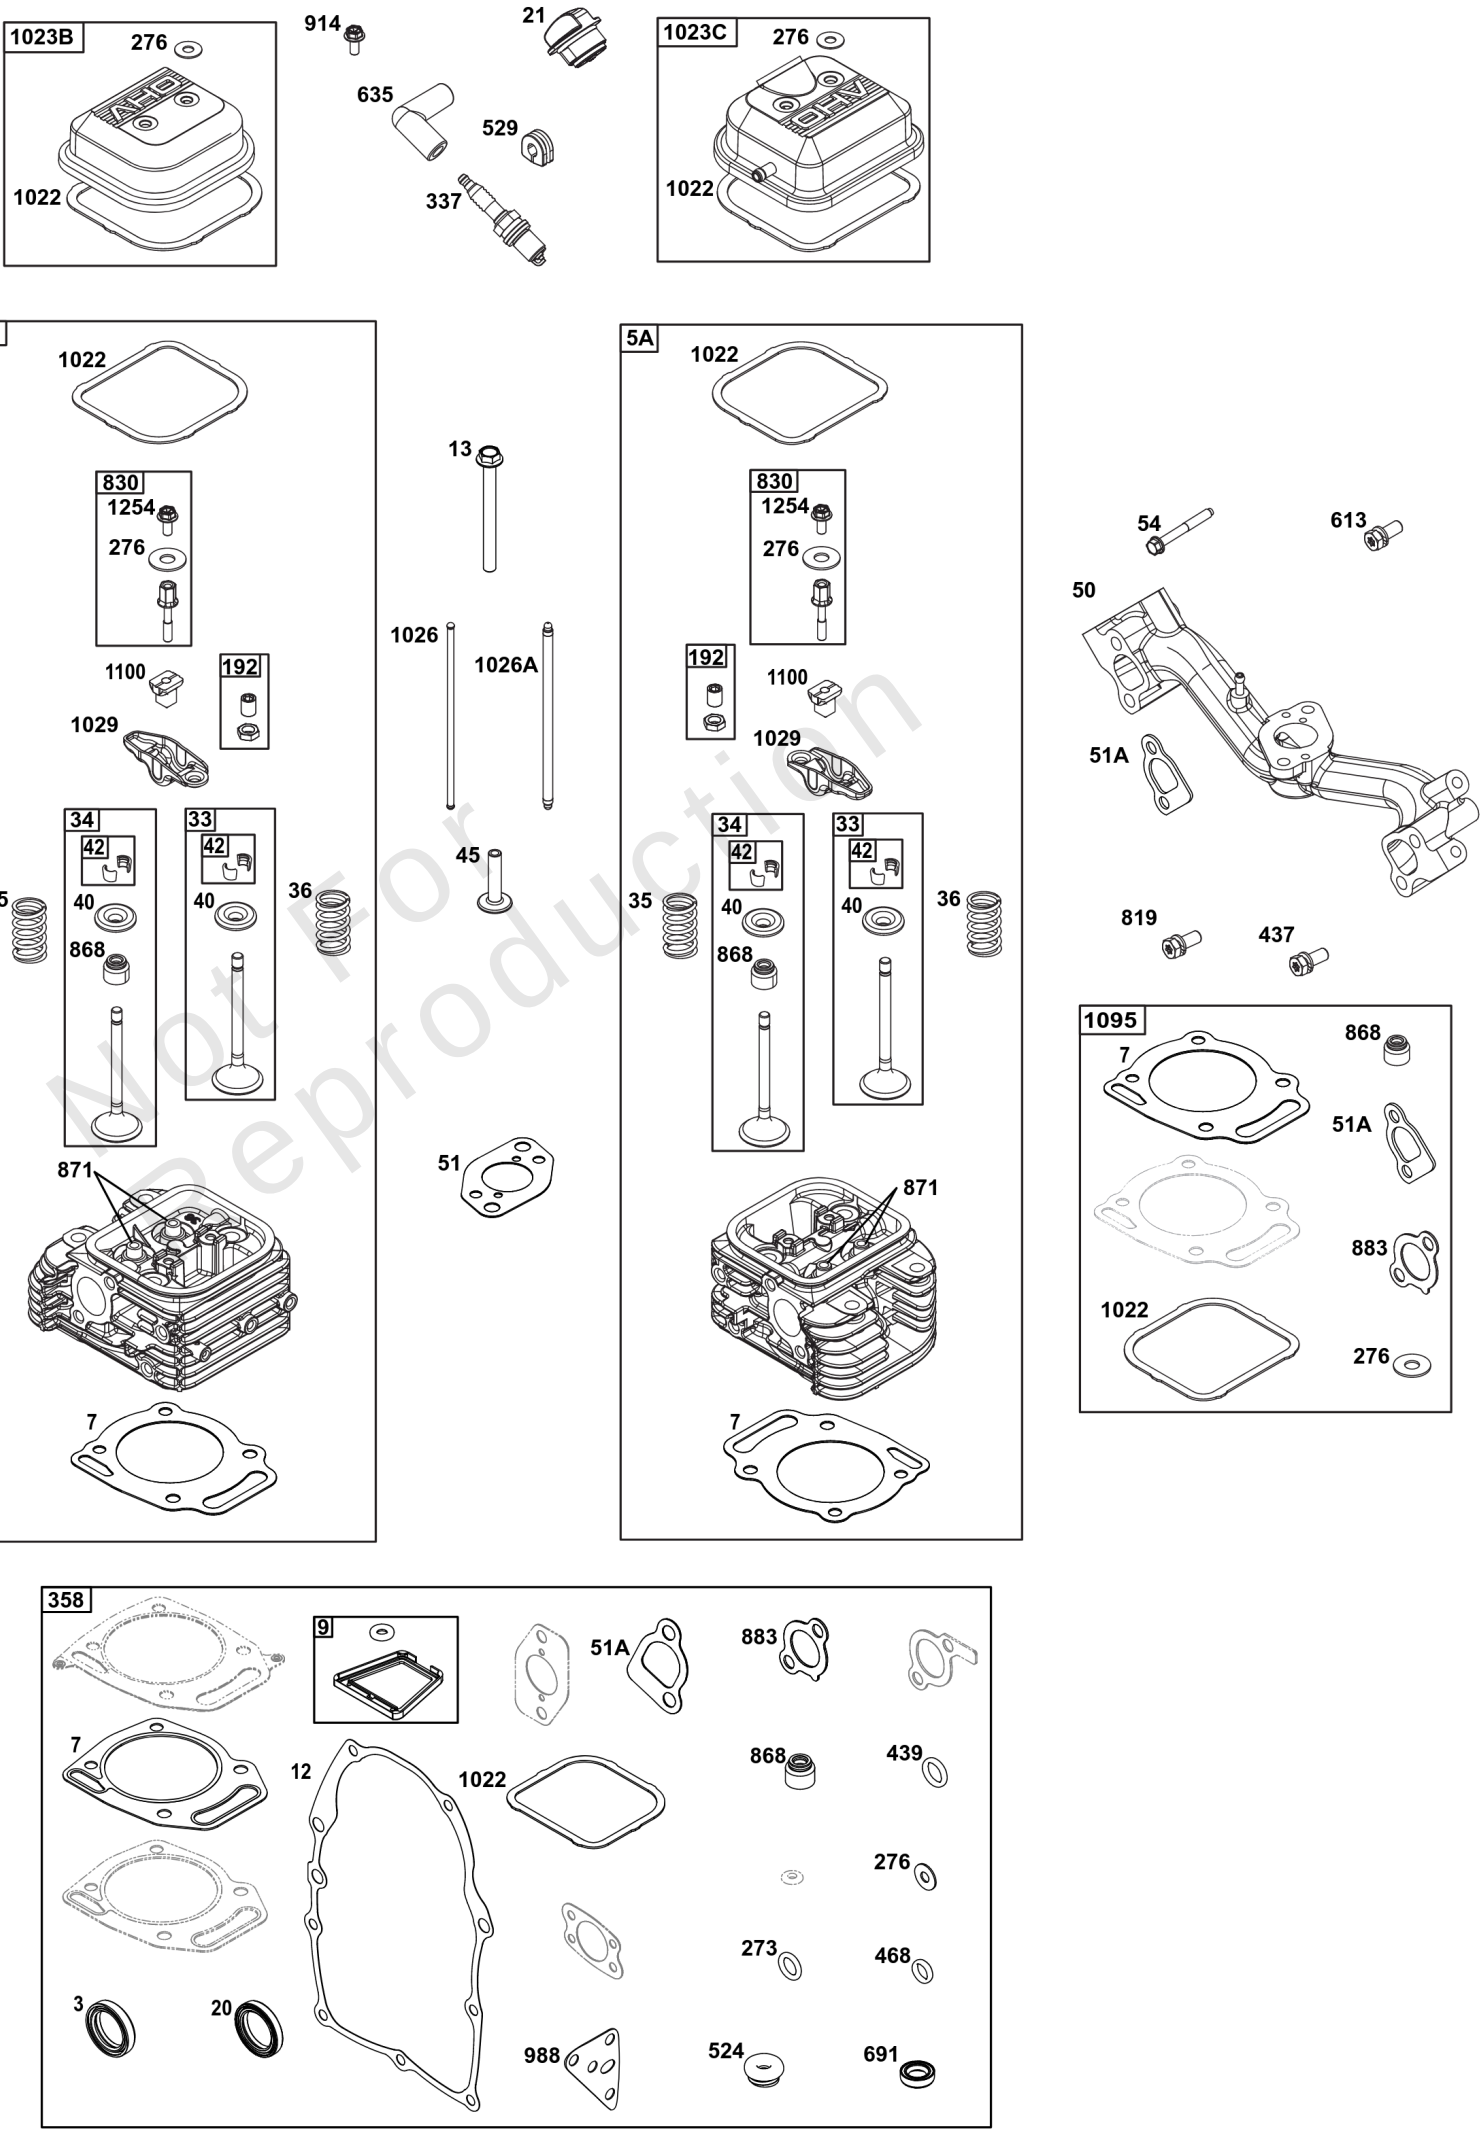



Cylinder Head Group

REF NO	PART NO	QTY	DESCRIPTION
3	-----	1	SEAL, Oil -(Part information located in Cylinder Group.)
5	84002008	1	HEAD, Cylinder -(Cylinder #1)
5A	84002009	1	HEAD, Cylinder -(Cylinder #2)
7	806085S	2	GASKET, Cylinder Head
9	-----	1	GASKET, Breather -(Part information located in Cylinder Group.)
12	-----	1	GASKET, Crankcase -(Part information located in Crankcase Cover/Sump Group.)
13	692059	8	SCREW -(Cylinder Head)
20	-----	1	SEAL, Oil -(Part information located in Crankcase Cover/Sump Group.)
21	809500	1	CAP, Oil Fill
33	808687	2	VALVE, Exhaust
34	807680	2	VALVE, Intake
35	692084	2	SPRING, Valve -(Intake)
36	692084	2	SPRING, Valve -(Exhaust)
40	692058	4	RETAINER, Valve
42	807683	8	KEEPER, Valve
45	843379	4	TAPPET, Valve
50	690754	1	MANIFOLD, Intake
51	691694	2	GASKET, Intake
51A	692035	2	GASKET, Intake
54	846604	4	SCREW -(Intake Manifold)
192	807623	2	ADJUSTER, Rocker Arm
273	-----	2	SEAL, O-Ring -(Part information located in Lubrication Group.)
276	807085	4	WASHER, Sealing
337	792015	2	PLUG, Spark
358	-----	1	GASKET SET, Engine -(Part information located in Cylinder Group.)
437	-----	4	SCREW -(Part information located in Exhaust Group.)
439	-----	1	O-RING, Oil Gallery -(Part information located in Lubrication Group.)
468	-----	1	SEAL, O-Ring -(Part information located in Lubrication Group.)
524	-----	1	SEAL, O-Ring -(Part information located in Lubrication Group.)
529	690744	2	GROMMET
613	-----	2	SCREW -(Part information located in Exhaust Group.)
635	84005066	1	BOOT, Spark Plug
691	-----	1	SEAL, Governor Shaft -(Part information located in Crankcase Cover/Sump Group.)
819	692056	2	SCREW
830	809157	4	STUD, Rocker Arm
868	691963	2	SEAL, Valve
871	692057	4	BUSHING, Valve Guide
883	-----	2	GASKET, Exhaust -(Part information located in Exhaust Group.)

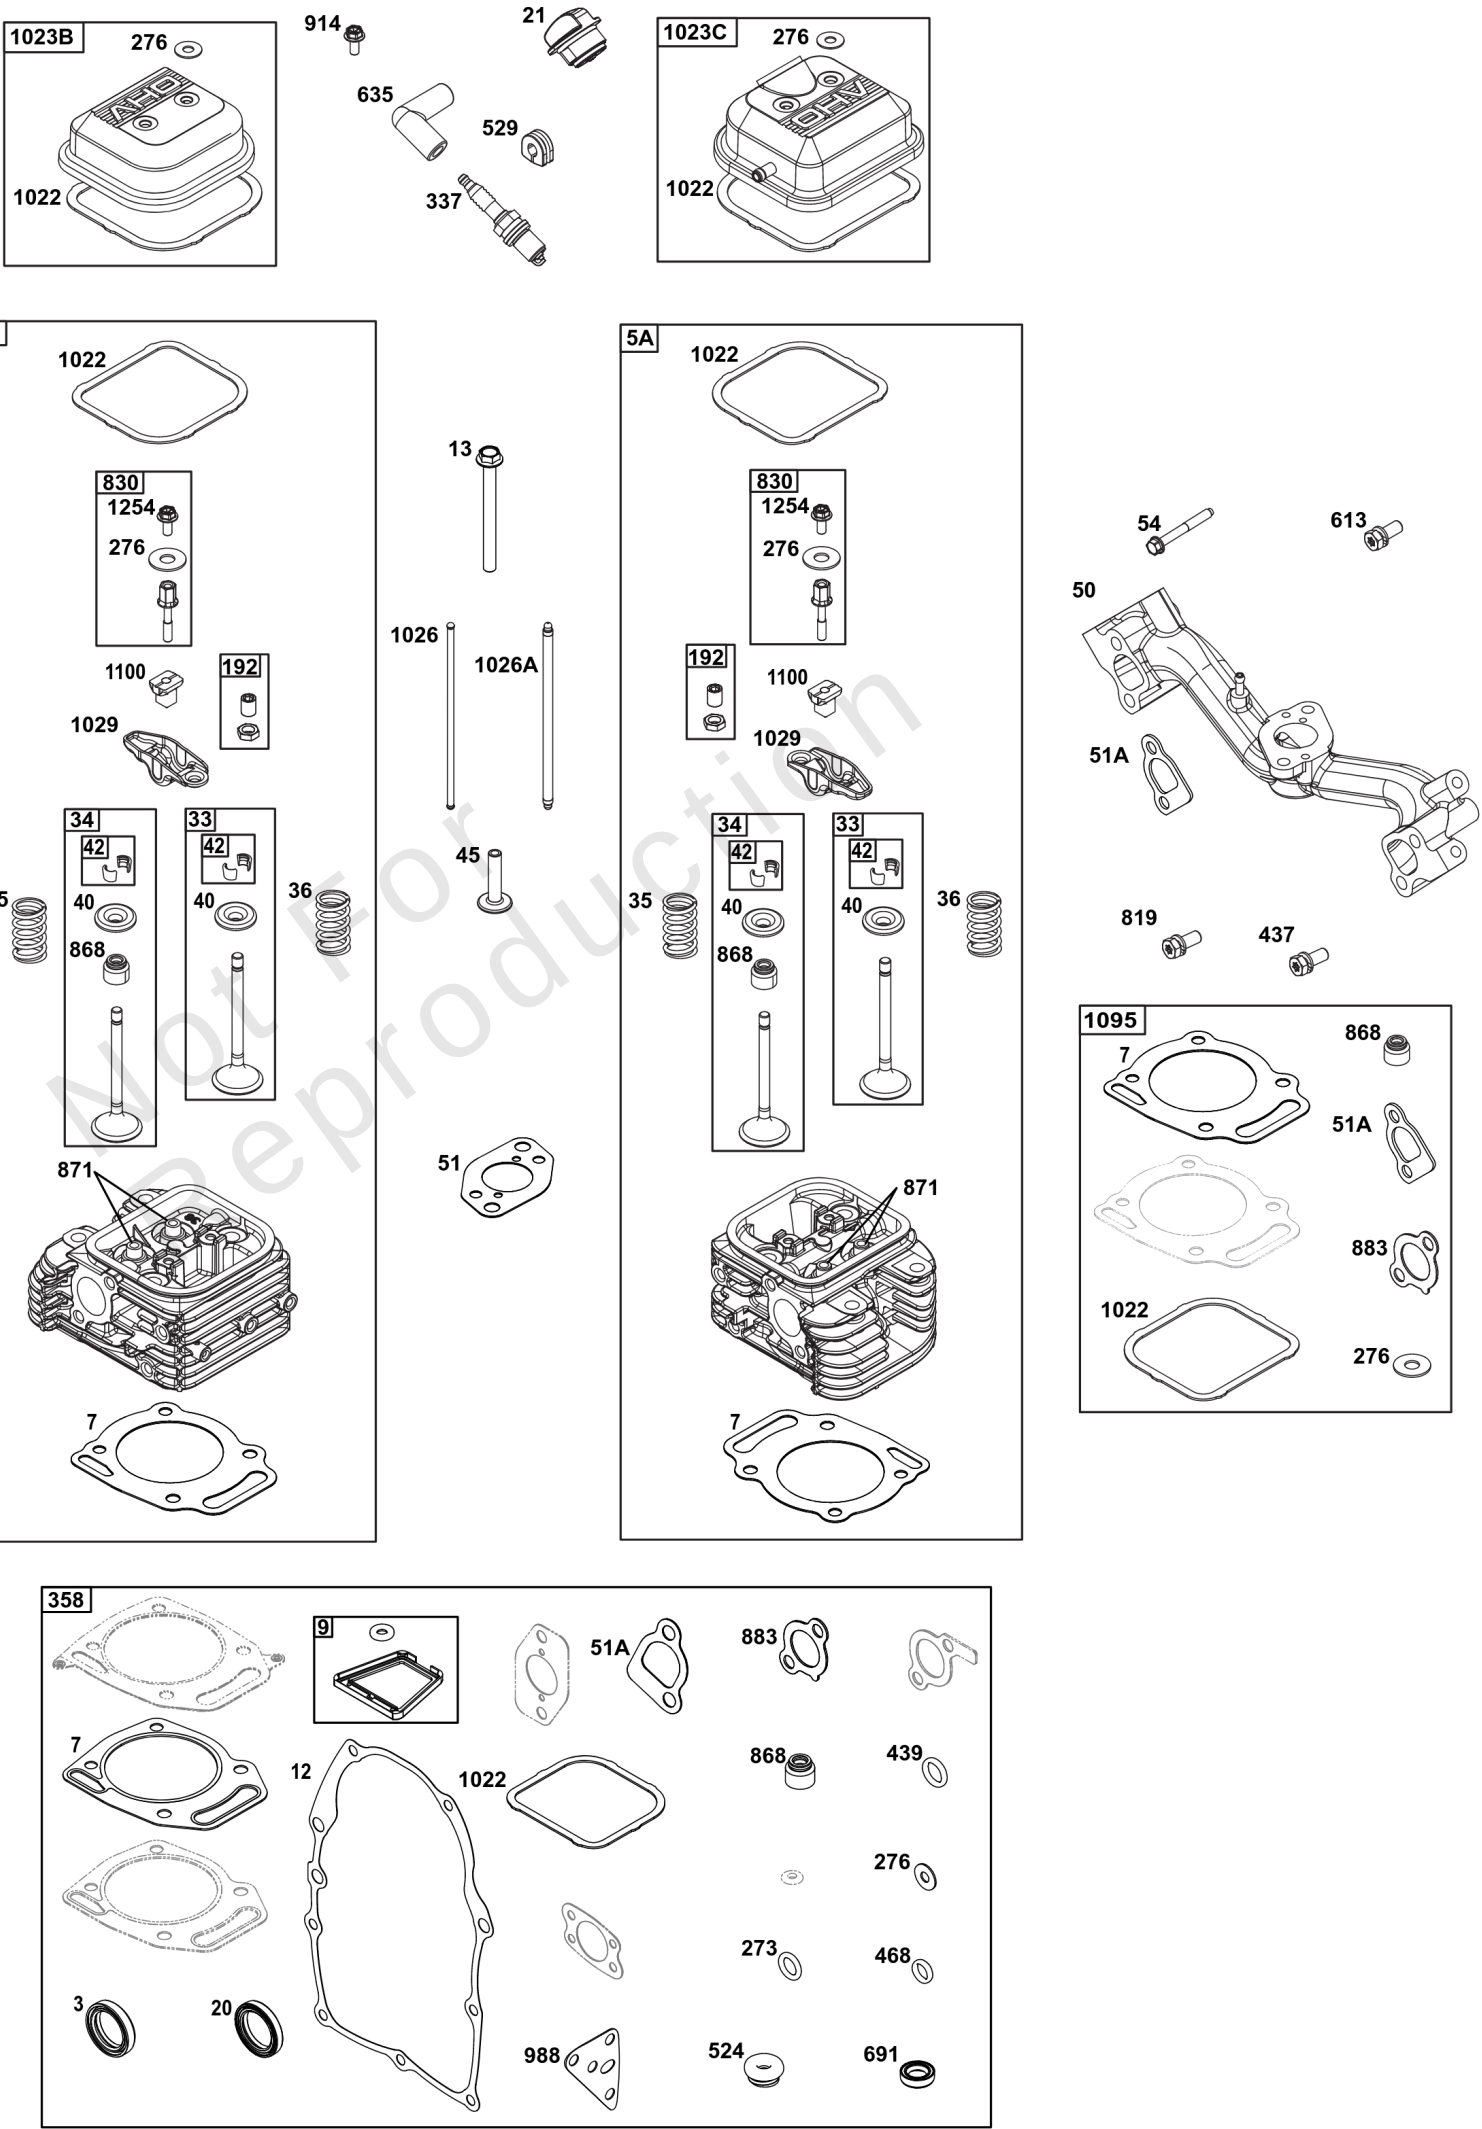 

Cylinder Head Group


REF NO	PART NO	QTY	DESCRIPTION
914	807084	4	SCREW -(Rocker Cover)
988	-----	1	GASKET, Oil Adapter -(Part information located in Lubrication Group.)
1022	806039S	2	GASKET, Rocker Cover
1023B	691494	1	COVER, Rocker
1023C	690910	1	COVER, Rocker
1026	691836	2	ROD, Push -(Intake)
1026A	691758	2	ROD, Push -(Exhaust)
1029	807323	1	ARM, Rocker
1095	842723	1	GASKET SET, Valve -(Service Kits can include parts not for this engine.)
1100	791959	4	PIVOT, Rocker Arm
1254	807084	4	SCREW -(Rocker Arm Stud)

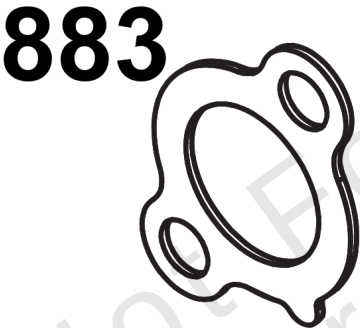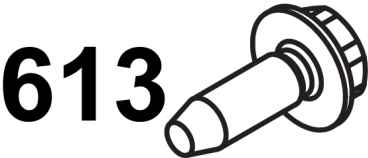  

Exhaust Group


REF NO	PART NO	QTY	DESCRIPTION
437	691902	4	SCREW -(Exhaust Manifold)
613	691902	2	SCREW -(Muffler)
819	692067	2	SCREW -(Muffler Bracket)
883	691613	2	GASKET, Exhaust

 Not For Reproduction

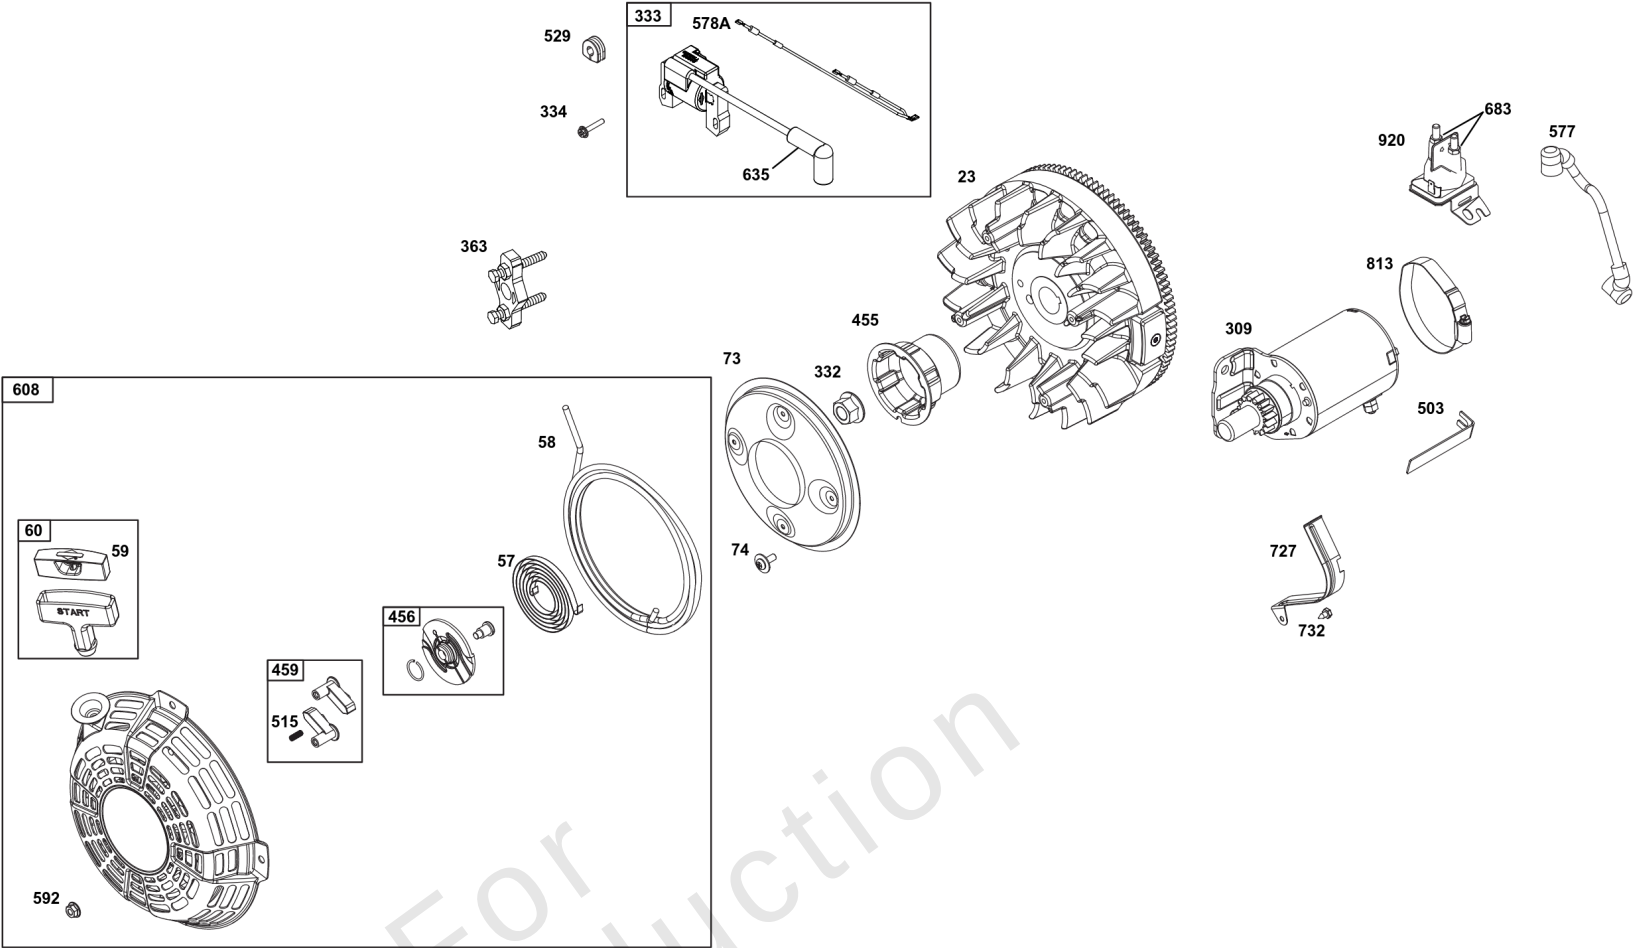


Flywheel, Ignition, and Starter Group

REF NO	PART NO	QTY	DESCRIPTION
23	842514	1	FLYWHEEL
57	692086	1	SPRING, Rewind Starter
58	66574	1	ROPE, Starter
59	805957	1	INSERT, Grip
60	808167	1	GRIP, Starter Rope
73	841662	1	SCREEN, Rotating
74	841441	4	SCREW -(Rotating Screen)
309	844717	1	MOTOR, Starter
332	690887	1	NUT -(Flywheel)
333	84003819	2	ARMATURE, Magneto
334	692066	4	SCREW -(Magneto Armature)
363	19203	1	PULLER, Flywheel
455	841794	1	CUP, Flywheel
456	845219	1	PLATE, Pawl Friction -(NLA - Please see Ref 608 to Service)
459	845218	1	PAWL, Ratchet
503	845016	1	STRAP, Starter
515	691528	2	SPRING, Pawl
529	-----	2	GROMMET -(Part information located in Cylinder Head Group.)
577	690795	1	CABLE, Starter
578A	-----	1	WIRE ASSEMBLY -(Part information located in Controls Group.)
592	690939	4	NUT -(Rewind Starter)
608	841729	1	STARTER, Rewind
635	-----	1	BOOT, Spark Plug -(Part information located in Cylinder Head Group.)
683	691029	2	NUT -(Starter Solenoid)
727	841313	1	COVER, Starter Drive
732	690688	1	SCREW -(Starter Drive Cover)
813	690635	1	CLAMP
920	846820	1	SOLENOID, Starter

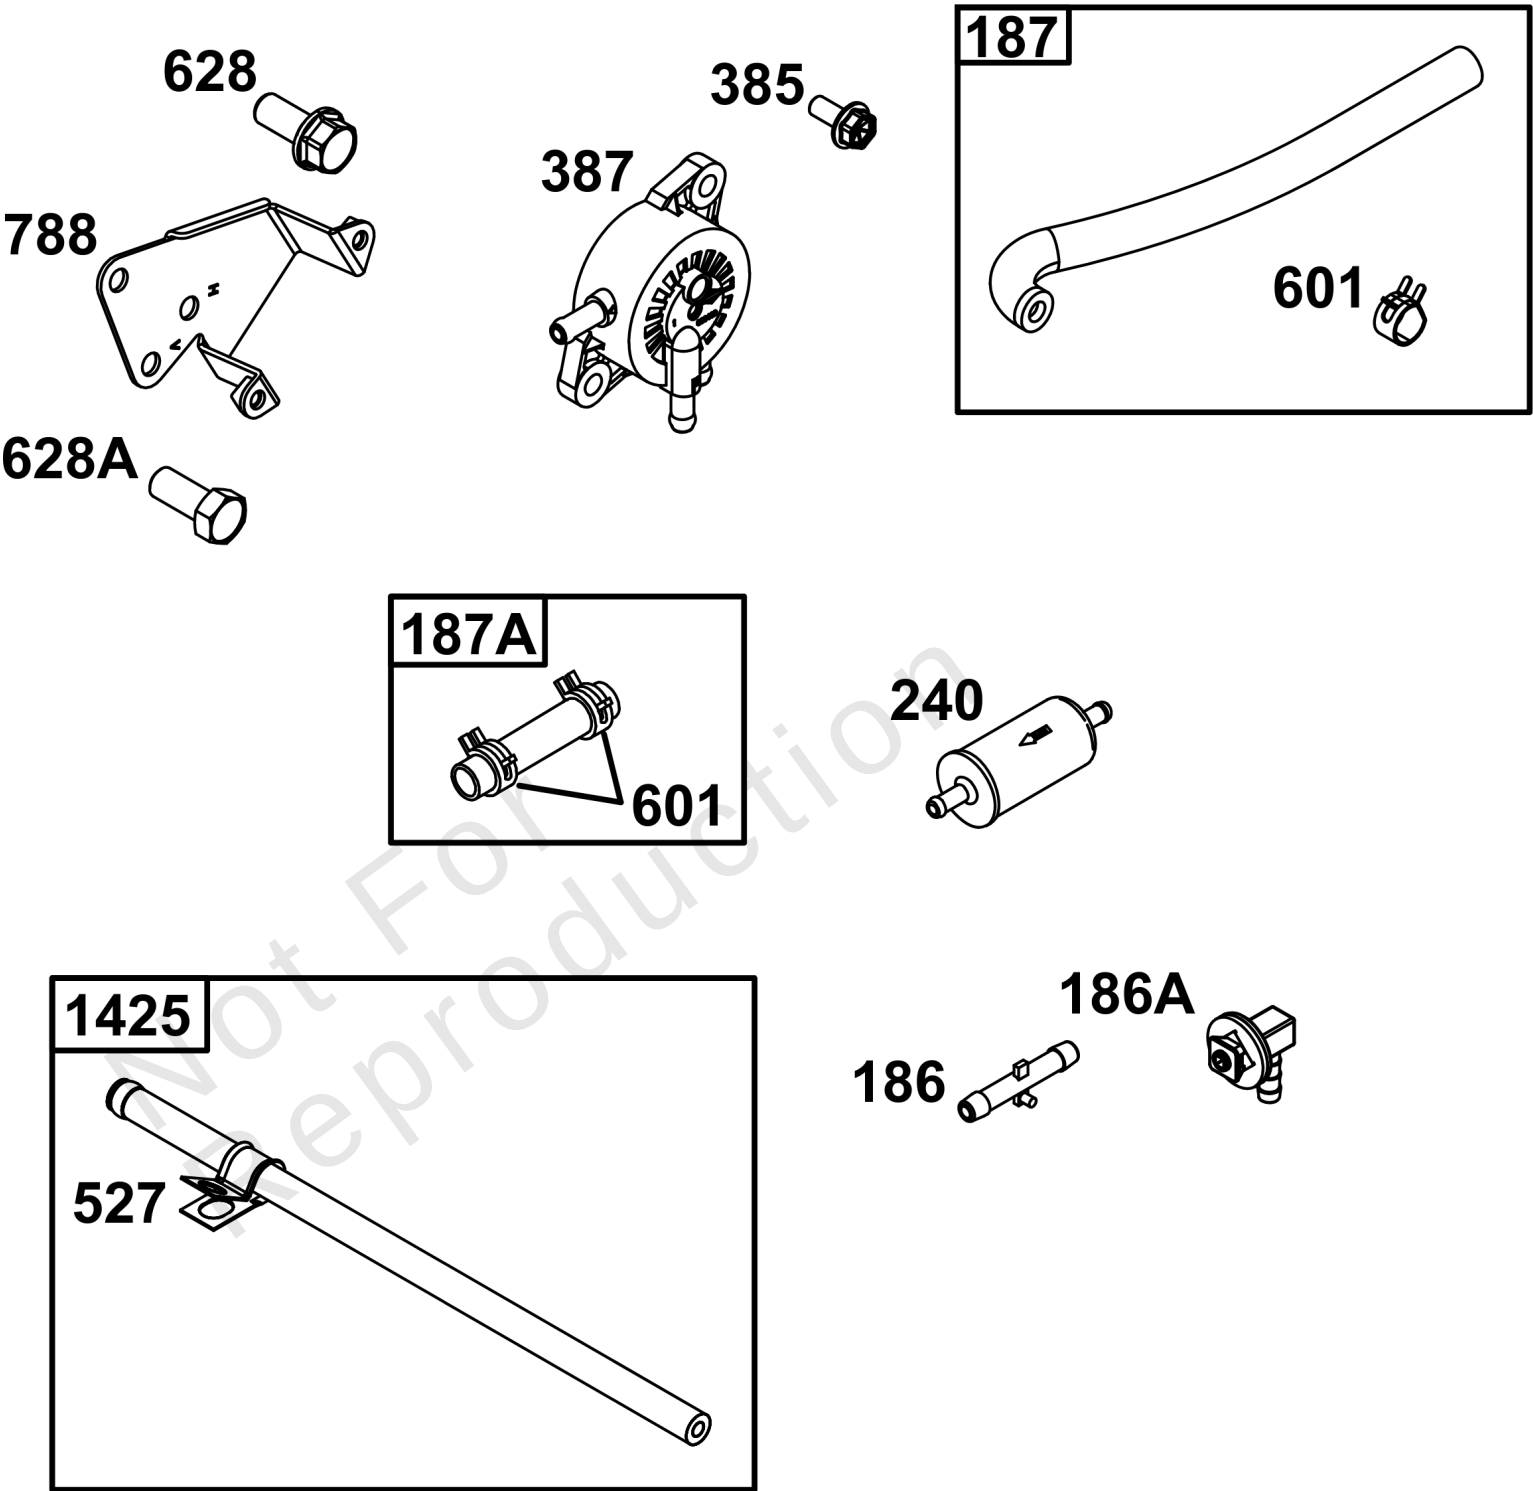 

Fuel Supply Group

REF NO	PART NO	QTY	DESCRIPTION
186	845121	1	CONNECTOR, Hose
186A	845141	1	CONNECTOR, Hose
187	791766	1	LINE, Fuel
187A	791880	1	HOSE, Vacuum
240	845125	1	FILTER, Fuel
385	807084	2	SCREW -(Fuel Pump)
387	597338	1	PUMP, Fuel
527	807116	1	CLAMP, Tube
601	691038	4	CLAMP, Hose
628	692062	1	SCREW -(Fuel Pump Bracket)
628A	806660	1	SCREW -(Fuel Pump Bracket)
788	691559	1	BRACKET, Fuel Pump
1425	844712	1	HOSE, Purge Line

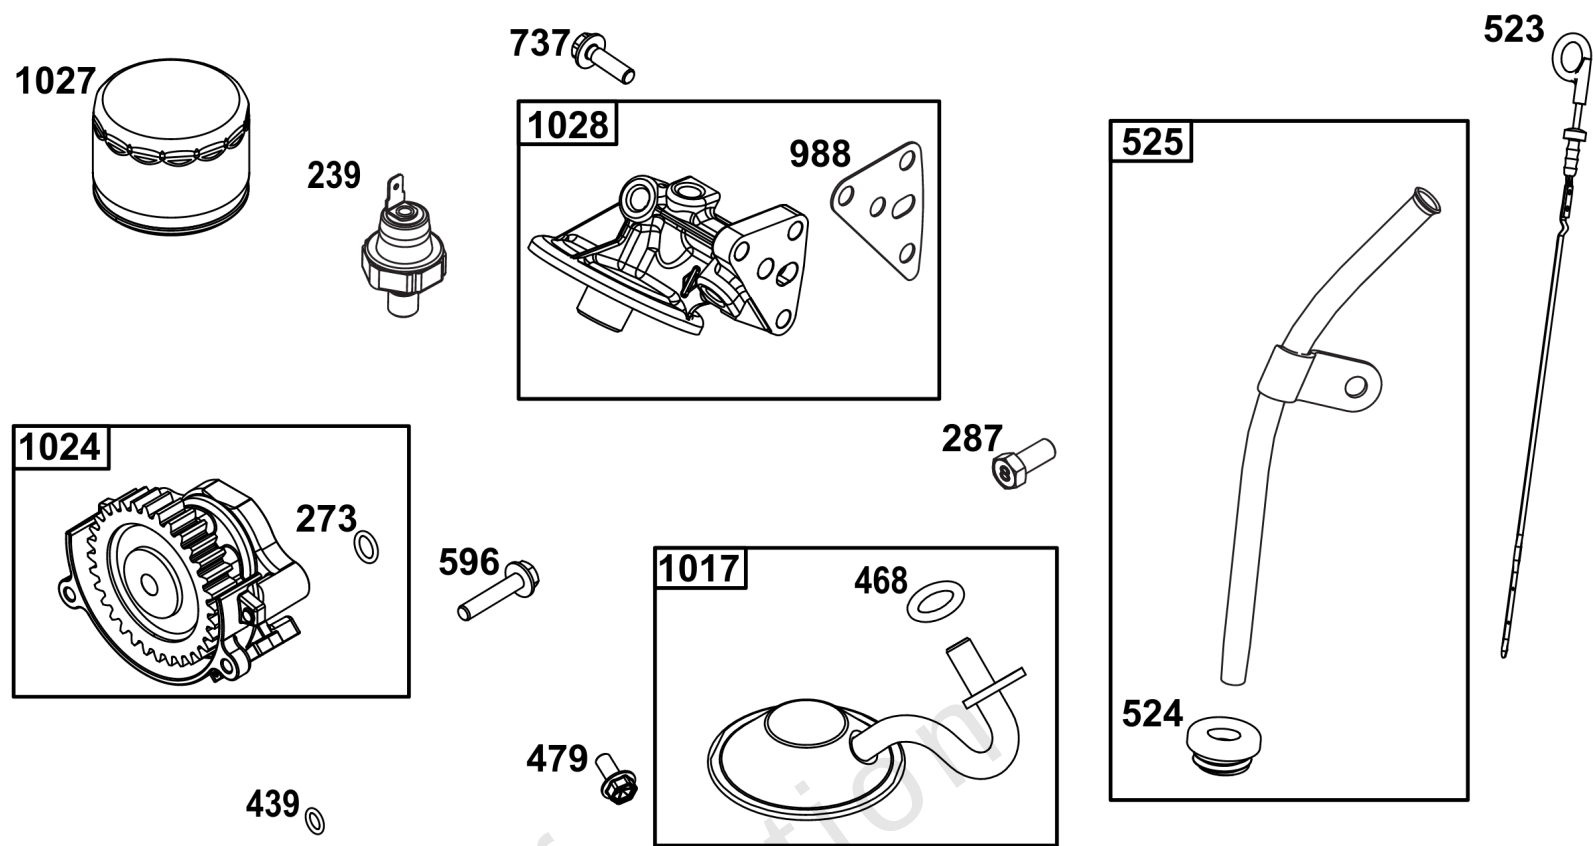 

Lubrication Group

REF NO	PART NO	QTY	DESCRIPTION
239	690233	1	SWITCH, Oil Pressure
273	690681	2	SEAL, O-Ring -(Oil Pump)
287	692062	1	SCREW -(Dipstick Tube)
439	692154	1	O-RING, Oil Gallery -(Crankcase Cover/Sump or Cylinder Assembly)
468	690690	1	SEAL, O-Ring -(Oil Pump Screen)
479	807084	1	SCREW -(Oil Pump Screen)
523	693175	1	DIPSTICK
524	693172	1	SEAL, O-Ring -(Dipstick Tube)
525	693174	1	TUBE, Dipstick
596	691492	2	SCREW -(Oil Pump)
737	84006523	3	SCREW -(Oil Filter Adapter)
988	692063	1	GASKET, Oil Adapter
1017	690900	1	SCREEN, Oil Pump
1024	843825	1	PUMP, Oil
1027	842921	1	FILTER, Oil
1028	808235	1	ADAPTER, Oil Filter

Replacement Engine - US & Canada



REF NO	PART NO	QTY	DESCRIPTION
	3054470609G1		Replacement Engine
	494054	1	Replacement Short Block
	-----		Idle Speed: 1750
	-----		Top No-Load Speed: 3600

Not For Reproduction




Model 29, 30, 35 & 38 Engine Accessories Catalog

  Not For
Reproduction

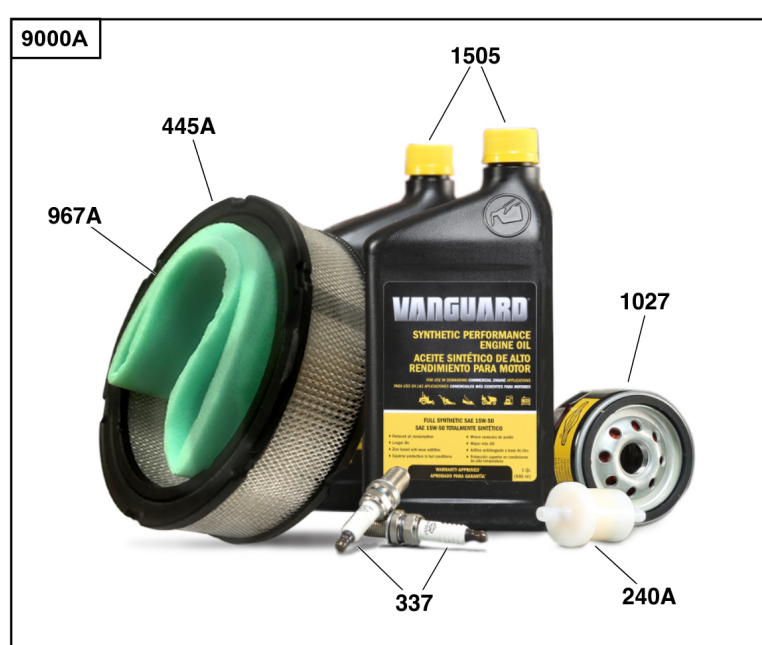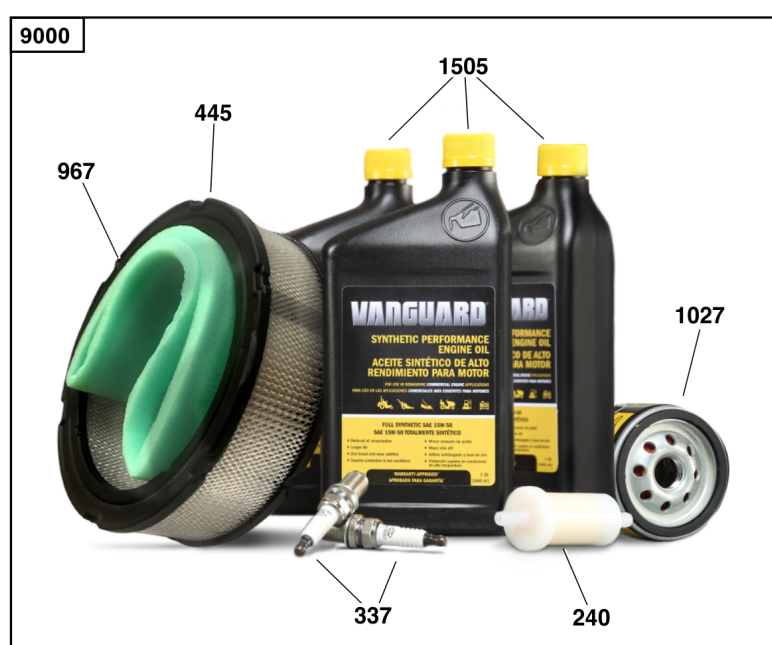






Maintenance Kits

REF NO	PART NO	QTY	DESCRIPTION
9000	84004936		KIT, Maintenance -(Non-Oil Guard™ Engines) (20 - 23 HP)
9000A	84004937		KIT, Maintenance -(Non-Oil Guard™ Engines) (12.5 - 18 HP)
9000B	84002315		KIT, Maintenance -(Non-Oil Guard™ Engines)
240	845125	1	FILTER, Fuel
240A	84001895	1	FILTER, Fuel
337	491055S	2	PLUG, Spark
337	84007216	2	PLUG, Spark -(China Only)
445	692519	1	FILTER, A/C Cartridge -"Professional / PXi" & "Commercial / CXi".
445A	394018S	1	FILTER, A/C Cartridge -"Professional / PXi" & "Commercial / CXi".
445B	841497	1	FILTER, A/C Cartridge -"Professional / PXi" & "Commercial / CXi".
967	692520	1	FILTER, Pre Cleaner
967A	272490S	1	FILTER, Pre Cleaner
1027	842921	1	FILTER, Oil -(Vanguard®)
1505	100169		OIL-1QT VANGUARD (CASE) -(1 qt. Bottle)

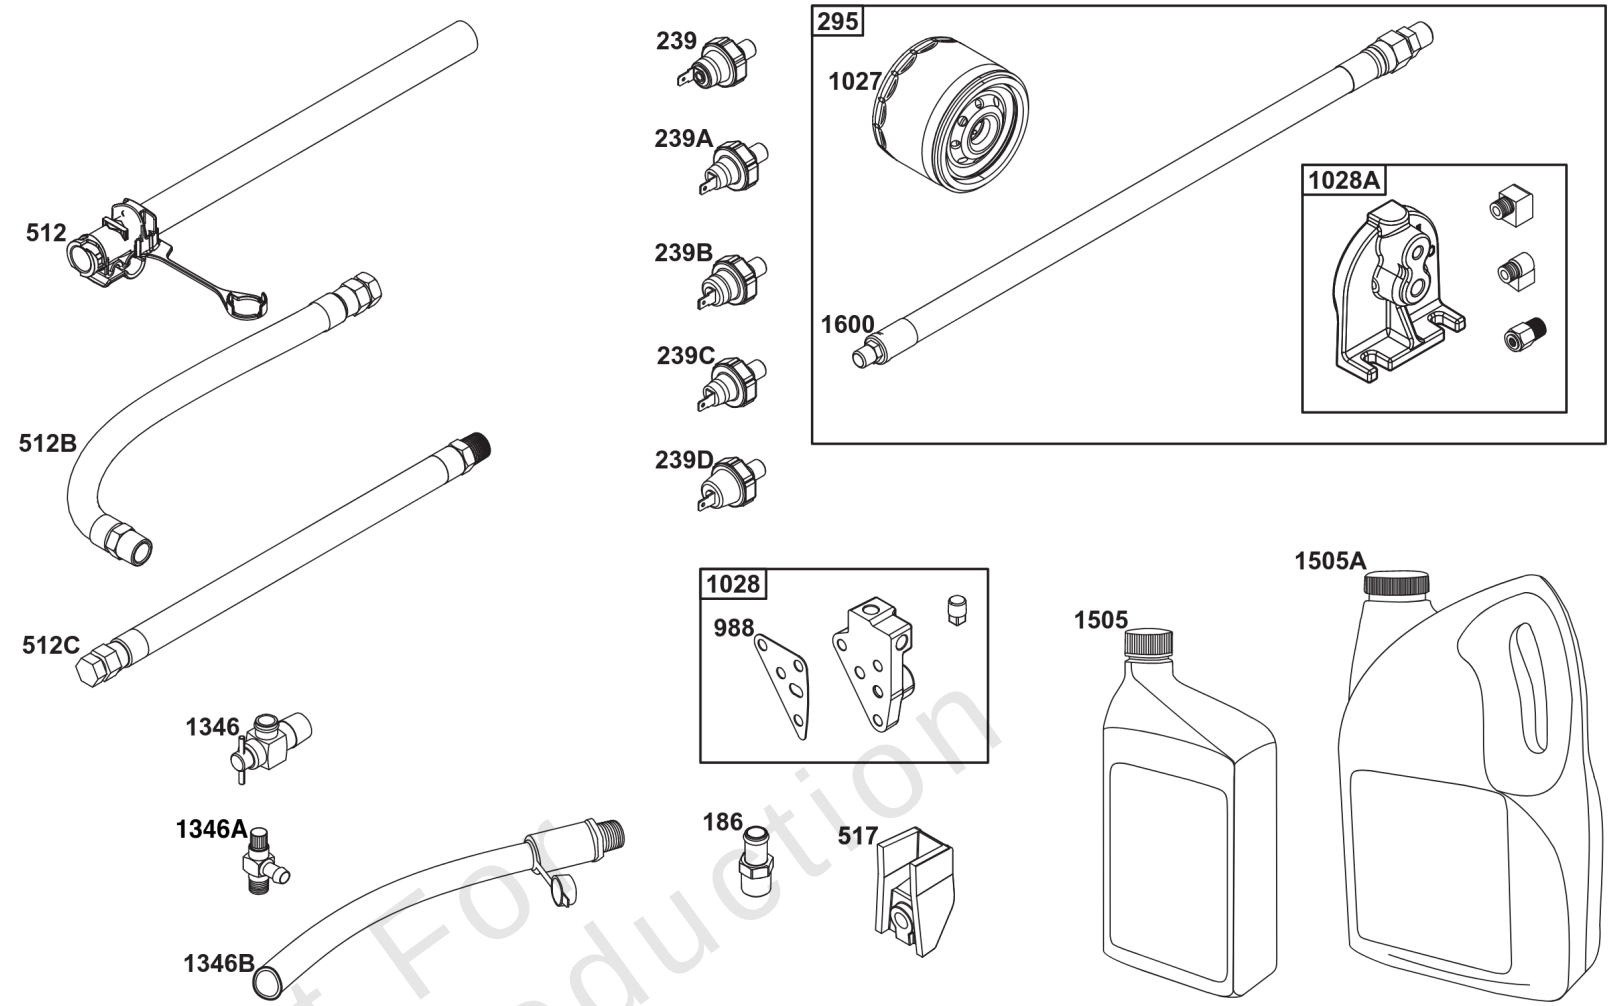 








Lubrication

REF NO	PART NO	QTY	DESCRIPTION
186	796532	1	CONNECTOR, Hose -(Threaded Engine Block Connector for EZ-Oil Drain Hose)(Order hose separate)
239	690233	1	SWITCH, Oil Pressure -(2-4 PSI Normally-Closed Switch)
239A	491657S	1	SWITCH, Oil Pressure -(3-5 PSI Normally-Closed Switch)
239B	841281	1	SWITCH, Oil Pressure -(7-10 PSI Normally-Closed Switch)
239C	694115	1	SWITCH, Oil Pressure -(9-13 PSI Normally-Closed Switch)
239D	697049	1	SWITCH, Oil Pressure -(3-6 PSI Normally-Open Switch)
295	492061	1	ADAPTER, Remote Oil Filter -(Remote oil filter head with 18" (48 cm) hoses)
295	492062	1	ADAPTER, Remote Oil Filter -(Remote oil filter head with 30" (76 cm) hoses)
512	594200	1	HOSE, Oil Drain -(EZ-Oil Drain Hose, 10.5")(Order threaded engine block connector separate)
512	593635	1	HOSE, Oil Drain -(EZ-Oil Drain Hose, 13.75")(Order threaded engine block connector separate)
512B	1723165SM	1	HOSE, Oil Drain, 10-1/2" Long, 3/8-18 Fittings -(10.5")
512C	5048681SM	1	HOSE, OIL DRAIN -(12.5")
517	593633	1	RETAINER, Oil Drain
988	692063	1	GASKET, Oil Adapter
1027	492932S	1	FILTER, Oil
1028	492687	1	ADAPTER, Oil Filter -(Adapter Kit for mounting remote oil filter)
1028A	495244	1	ADAPTER-OIL FILTER -(Remote oil filter mounting head with fittings)
1346	844802	1	VALVE, Oil Drain Shut Off
1346A	492031	1	VALVE, Oil Drain Shut Off
1346B	5401WEB	1	VALVE, Oil Drain Shut Off -(1/4 Turn Oil Drain Valve with Hose)
1505	100169		OIL-1QT VANGUARD (CASE) -(1 qt. Bottle)
1505A	100170		OIL-5QT VANGUARD (CASE) -(5 qt. Bottle)
1600	494724	2	HOSE, Remote Oil Filter -(Hoses only (2) 18" (48 cm))
1600	494725	2	HOSE, Remote Oil Filter -(Hoses only (2) 30" (76 cm))

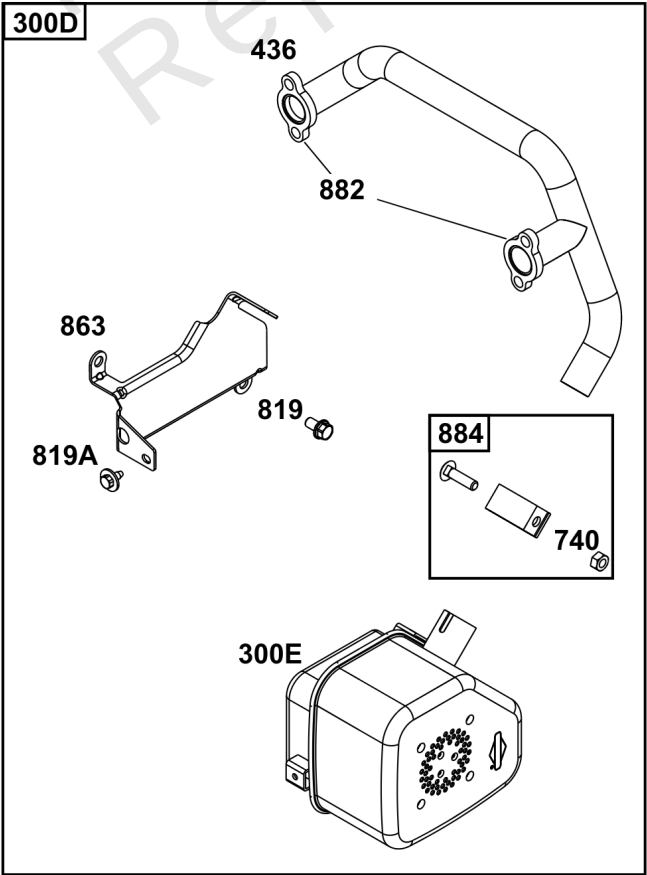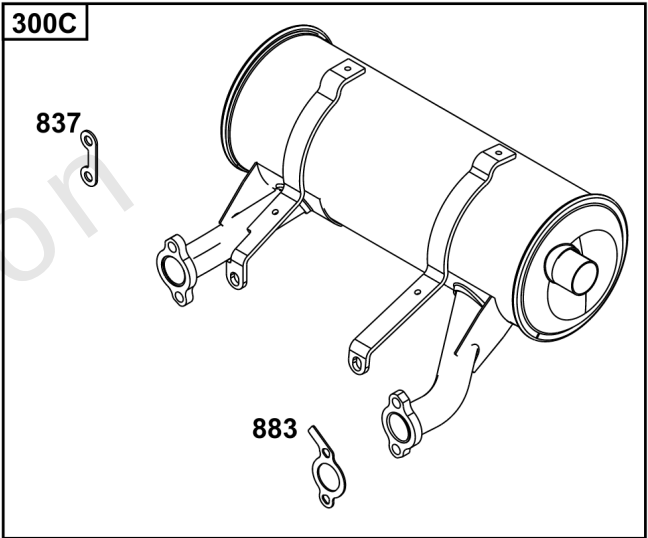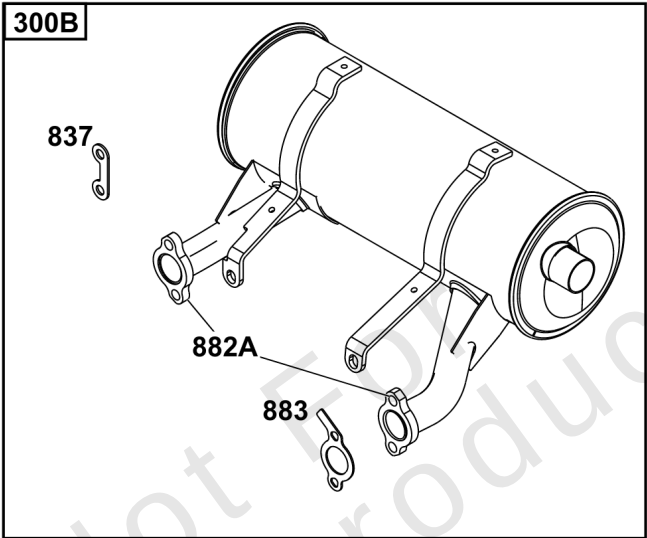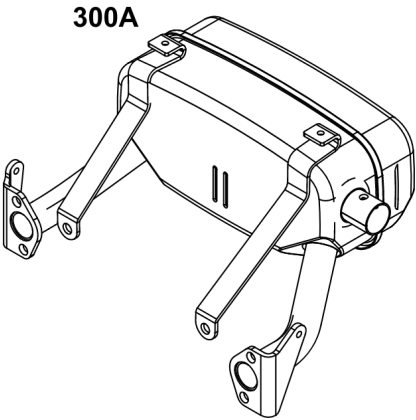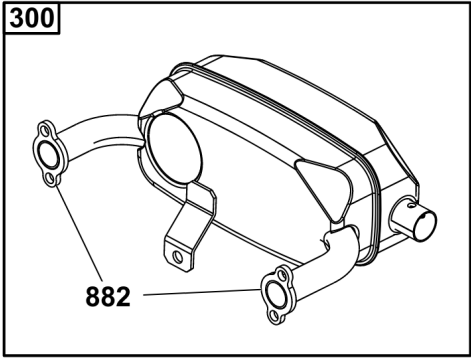     






Starter Motor Side Outlet Mufflers

REF NO	PART NO	QTY	DESCRIPTION
300	690931	1	MUFFLER -(Super Lo-Tone) (Horizontal: 3054, 3564)
300A	690906	1	MUFFLER -(Super Lo-Tone) (Horizontal: 3054, 3564)
300B	808705	1	MUFFLER -(5" Round) (Horizontal: 3854, 3864)
300C	845873	1	MUFFLER -(5" Round, Stainless Steel) (Horizontal: 3854, 3864)
300D	995005	1	MUFFLER ASSY -(Lo-Tone) (Horizontal: 3054, 3564)
300E	692099	1	MUFFLER -(Lo Mount)
436	691499	1	MANIFOLD, Exhaust -(Cylinder 1) (Side Outlet)
740	793859	1	NUT
819	692056	2	SCREW -(Muffler Bracket) (M8x1.25)
819A	691514	2	SCREW -(Muffler Bracket) (M6 X 1.0)
837	808085	2	SPACER, Muffler -(Includes 2)
863	690756	1	BRACKET, Muffler -(Cylinder 1) (Side Outlet)
882	692074	2	FLANGE, Exhaust
882A	806965	2	FLANGE, Exhaust
883	806425	2	GASKET, Exhaust
884	690898	1	CLAMP, Muffler

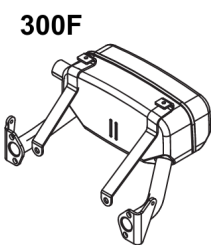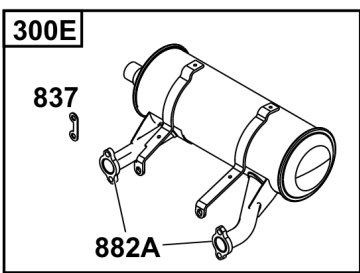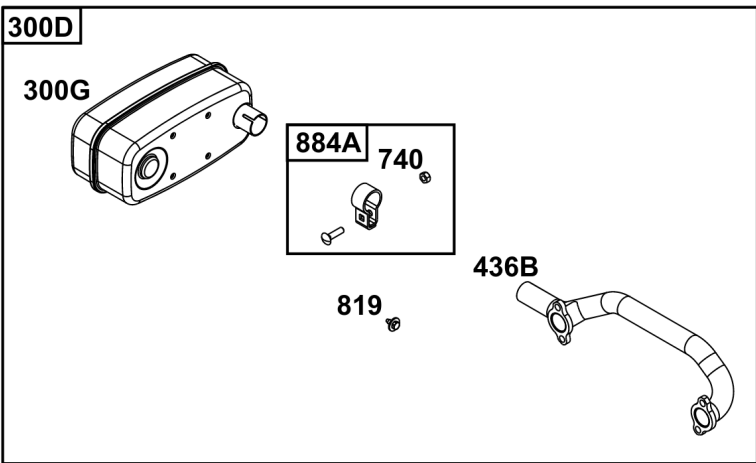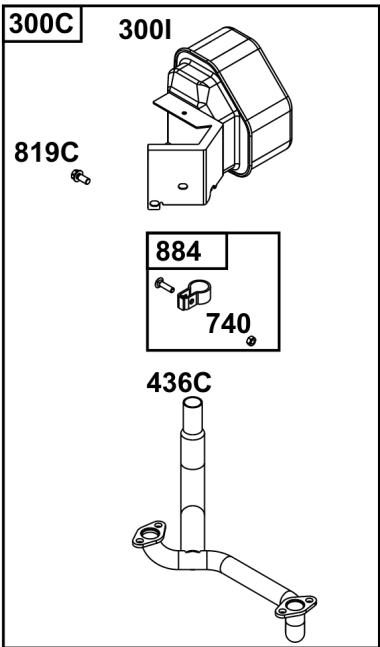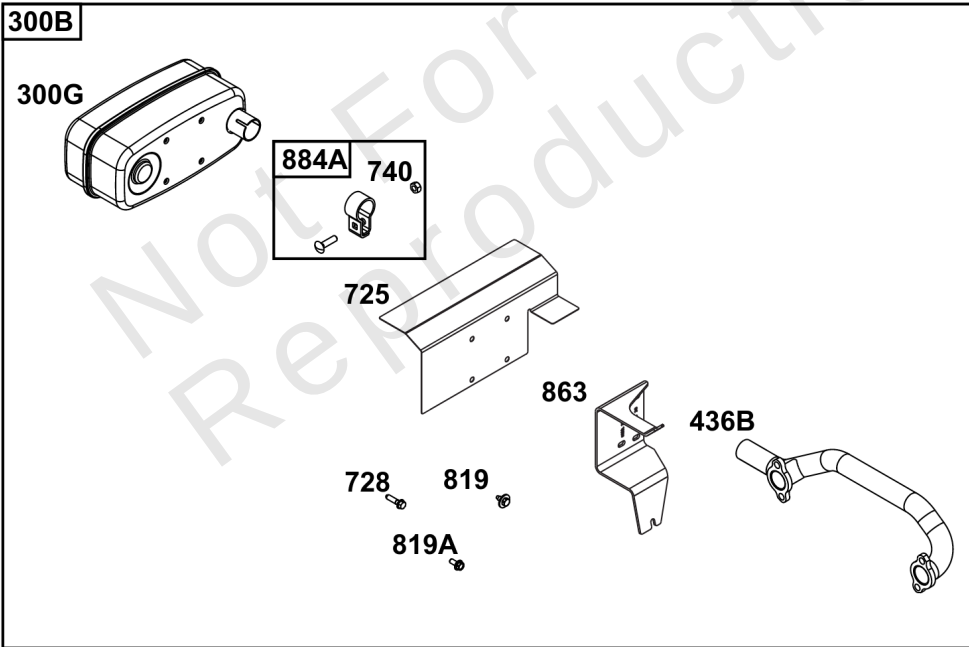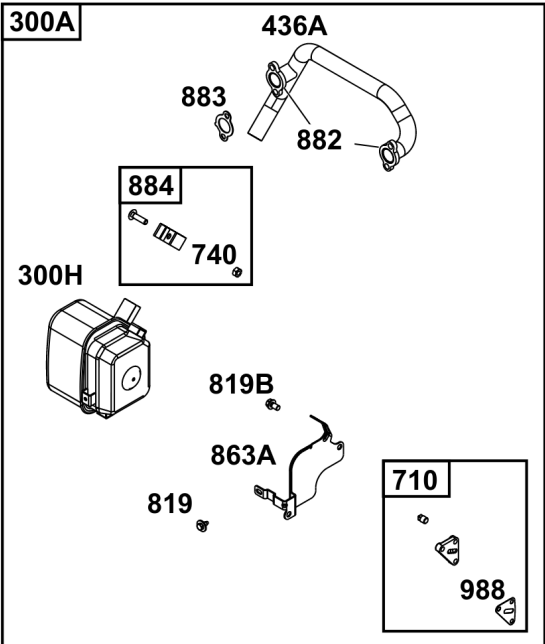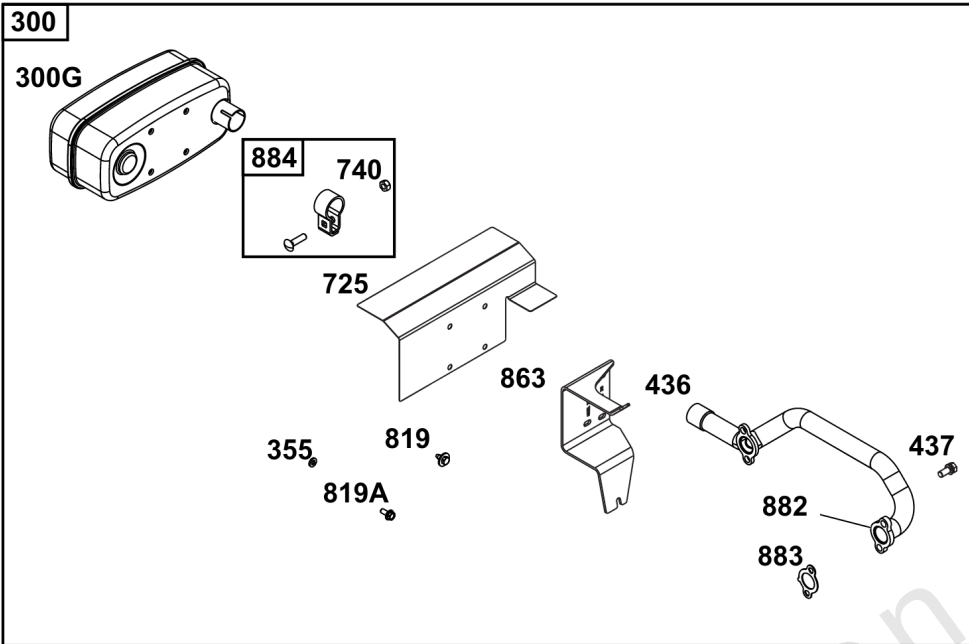       




Oil Filter Side Outlet Mufflers

REF NO	PART NO	QTY	DESCRIPTION
300	995002	1	HIGH MNT SPR LO-TONE OIL FLTR SIDE -(Super Lo-Tone) (Horizontal: 3054, 3564) (Vertical: 3567)
300A	995000	1	OIL FILTER SIDE LO-MT -(Lo-Tone) (Horizontal: 3054, 3564) (Requires 808033 Oil Filter Adaptor)
300B	995004	1	HI MNT SPR LO-TONE OIL FLT SIDE -(Super Lo-Tone) (Horizontal: 3854, 3864) (Vertical: 3867)
300C	995009	1	COMMERCIAL MOWERS KIT -(For Wide Area Walker) (Vertical: 3567)
300D	995010	1	COMMERCIAL MOWERS KIT -(Vertical: 3867)
300E	808896	1	MUFFLER
300F	691562	1	MUFFLER -(Super Lo-Tone) (Horizontal: 3054, 3564)
300G	498984S	1	MUFFLER -(Super Lo Tone)
300H	807948	1	MUFFLER -(Lo Mount)
300I	807953	1	MUFFLER
355	842122	2	WASHER -(Muffler Bracket)
436	805609	1	MANIFOLD, Exhaust -(Cylinder 2) (Side Outlet)
436A	692061	1	MANIFOLD, Exhaust -(Cylinder 2) (Side Outlet)
436B	808916	1	MANIFOLD, Exhaust -(Cylinder 2) (Side Outlet)
436C	805778	1	MANIFOLD, Exhaust -(Wide Area Walker)
437	691902	4	SCREW -(Exhaust Manifold)
710	807689	1	COVER, Oil Filter
725	806102	1	SHIELD, Heat
728	690297	2	SCREW
740	793859	1	NUT
819	691514	2	SCREW -(Muffler Bracket) (M6 X 1.0)
819A	807084	2	SCREW -(Muffler Bracket)
819B	692056	2	SCREW -(Muffler Bracket) (M8x1.25)
819C	692062	2	SCREW -(Muffler Bracket)
837	808085	2	SPACER, Muffler -(Includes 2)
863	806759	1	BRACKET, Muffler
863A	691513	1	BRACKET, Muffler
882	692074	2	FLANGE, Exhaust -(3054 & 3564)
882A	806965	2	FLANGE, Exhaust
883	691613	2	GASKET, Exhaust
884	690898	1	CLAMP, Muffler
884A	691956	1	CLAMP, Muffler
988	690687	1	GASKET, Oil Adapter

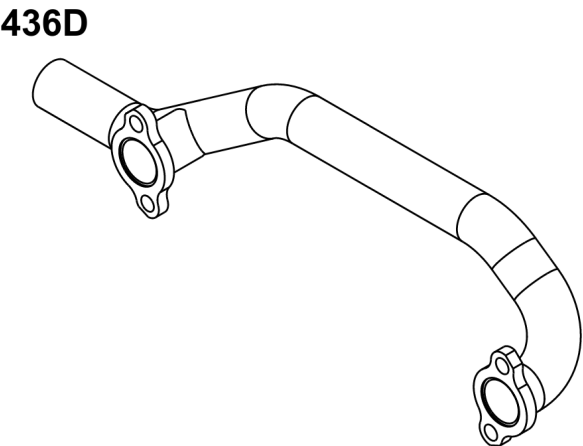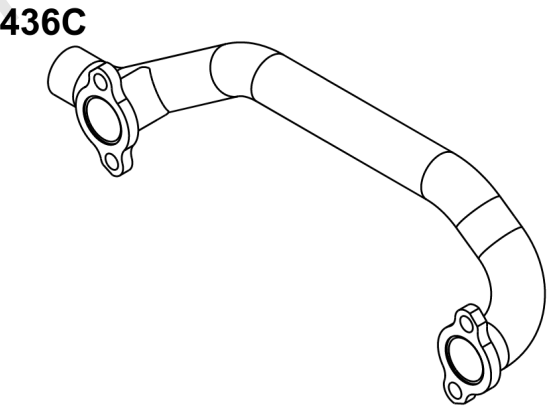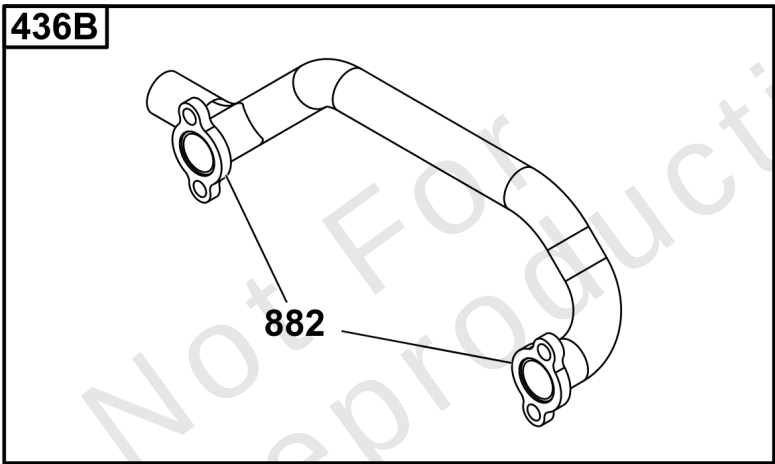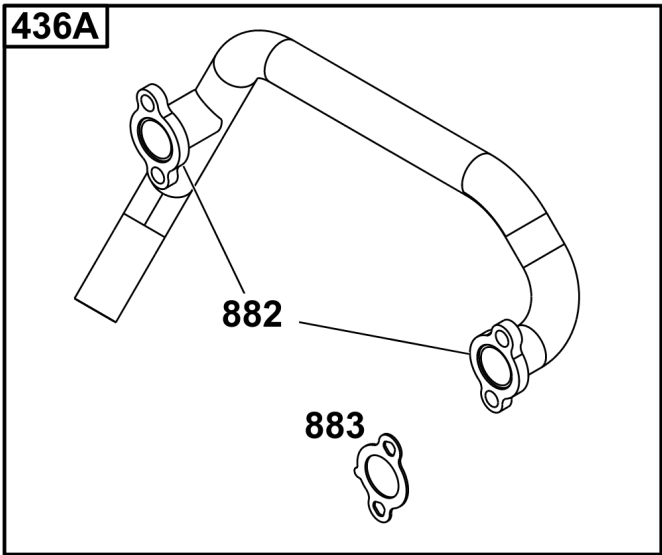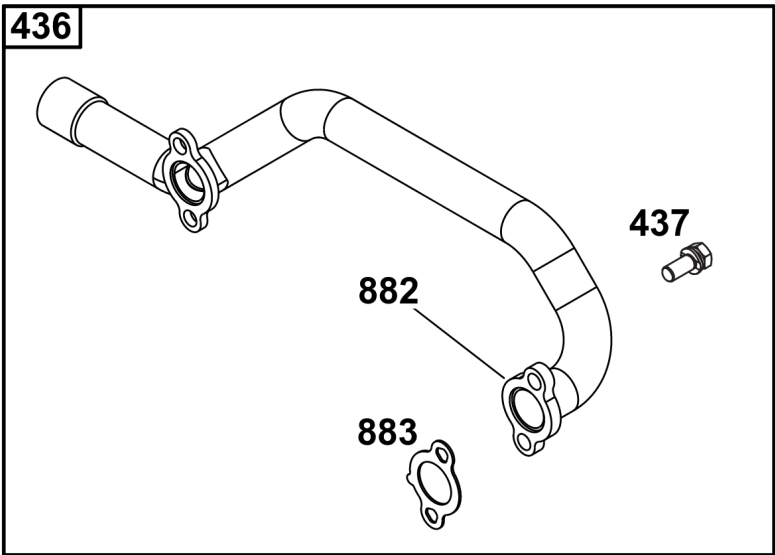     

Oil Filter Side Outlet Manifolds


REF NO	PART NO	QTY	DESCRIPTION
436	805609	1	MANIFOLD, Exhaust -(Vertical: 3567)
436A	692061	1	MANIFOLD, Exhaust -(Horizontal: 3054, 3564)
436B	691501	1	MANIFOLD, Exhaust -(Horizontal: 3054, 3564)
436C	808908	1	MANIFOLD, Exhaust -(Horizontal: 3854, 3864)
436D	808916	1	MANIFOLD, Exhaust -(Horizontal: 3854, 3864) (Vertical: 3867)
437	691902	4	SCREW -(Exhaust Manifold)
882	692074	2	FLANGE, Exhaust
883	691613	2	GASKET, Exhaust

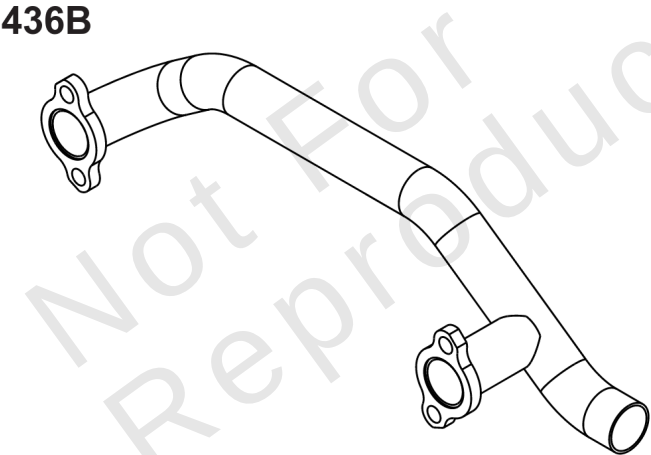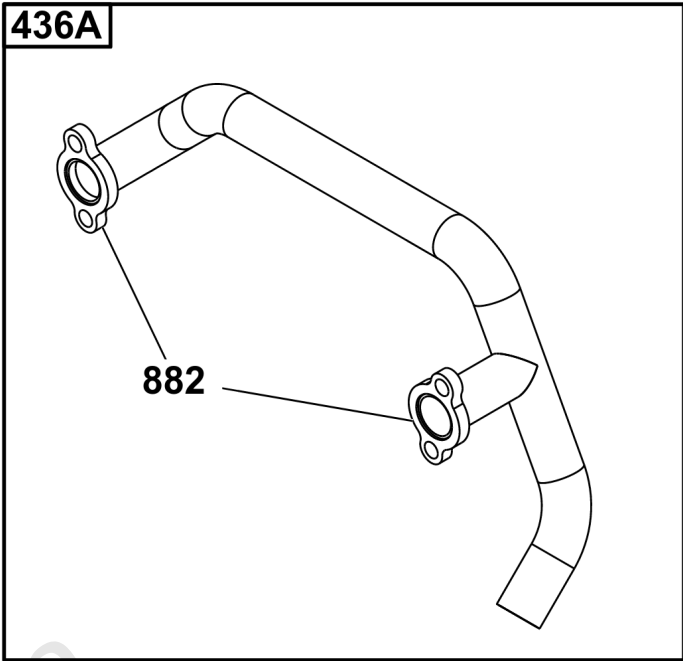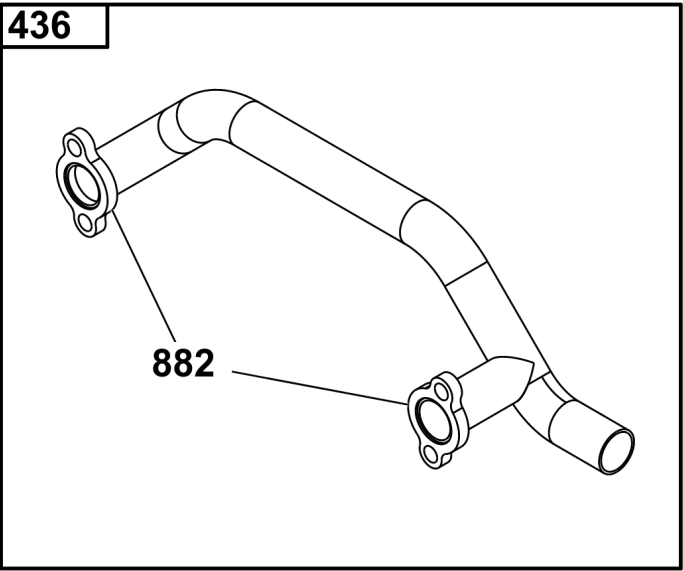   

Starter Motor Side Outlet Manifolds

REF NO	PART NO	QTY	DESCRIPTION
436	691502	1	MANIFOLD, Exhaust -(Horizontal: 3054, 3564)
436A	691499	1	MANIFOLD, Exhaust -(Horizontal: 3054, 3564)
436B	808909	1	MANIFOLD, Exhaust -(Horizontal: 3854, 3864) (Vertical: 3867)
882	692074	2	FLANGE, Exhaust

 
Not For Reproduction

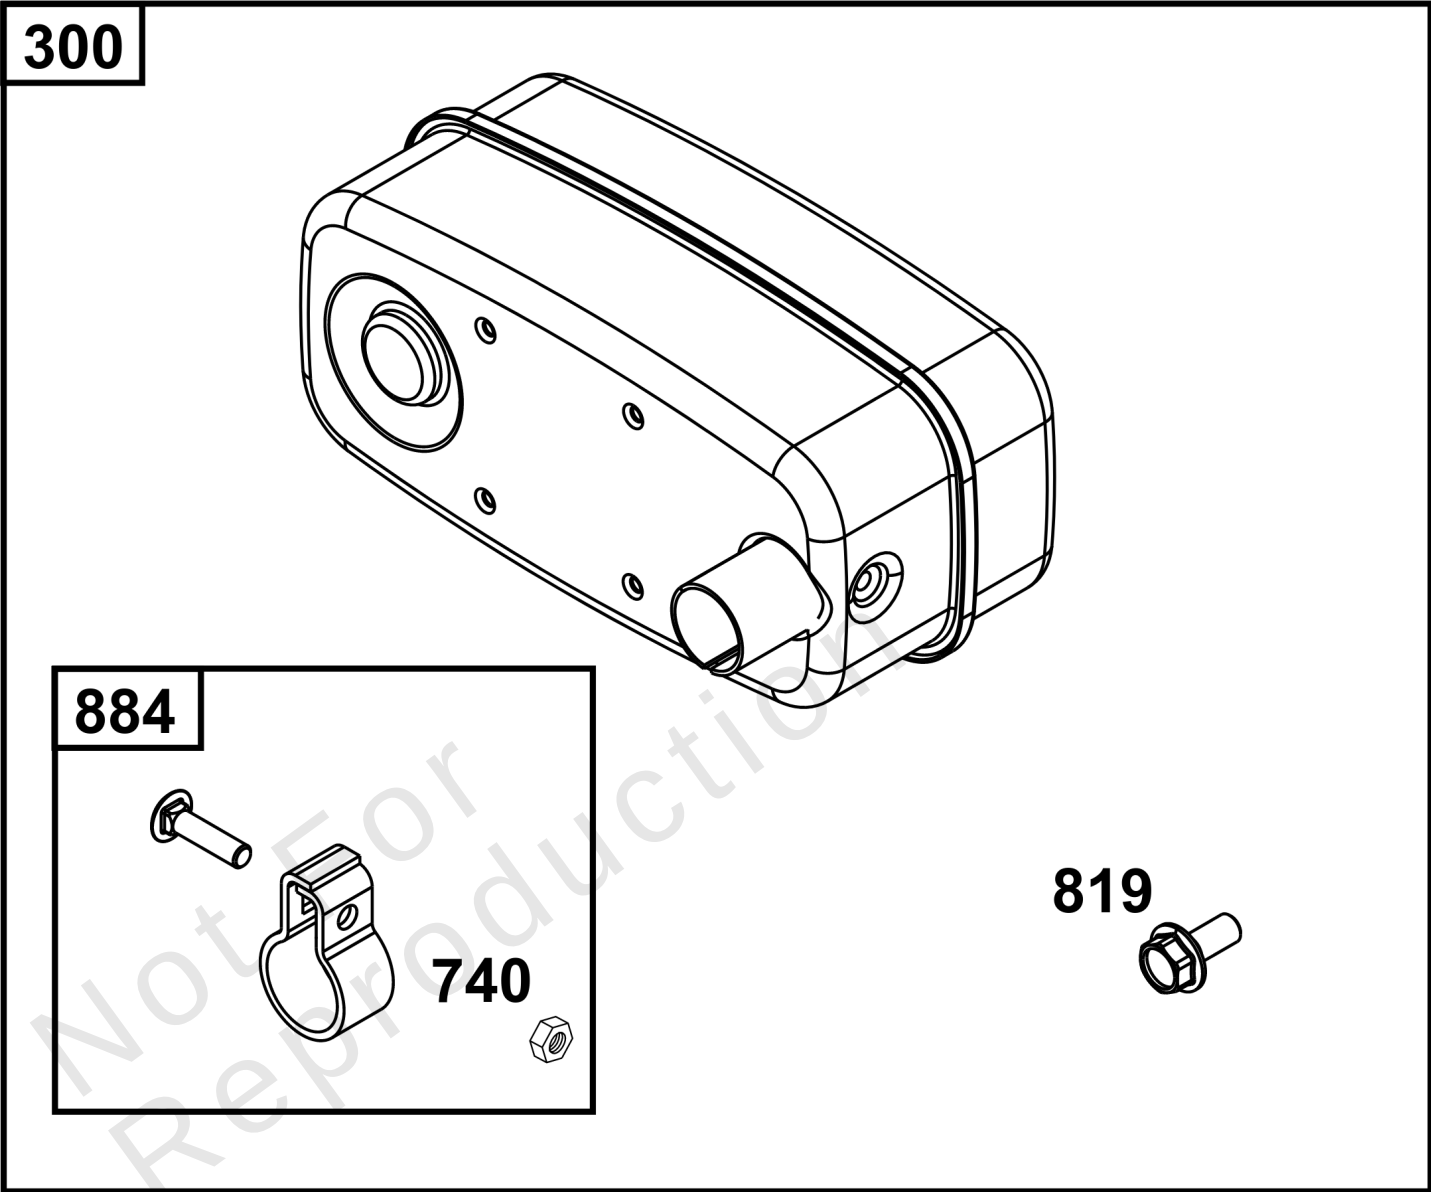

Mufflers

REF NO	PART NO	QTY	DESCRIPTION
300	995018	1	MUFFLER -(Inlet I.D. 1.14" (28.9mm))
740	793859	1	NUT
819	807084	4	SCREW
884	691956	1	CLAMP, Muffler


 
Not For Reproduction

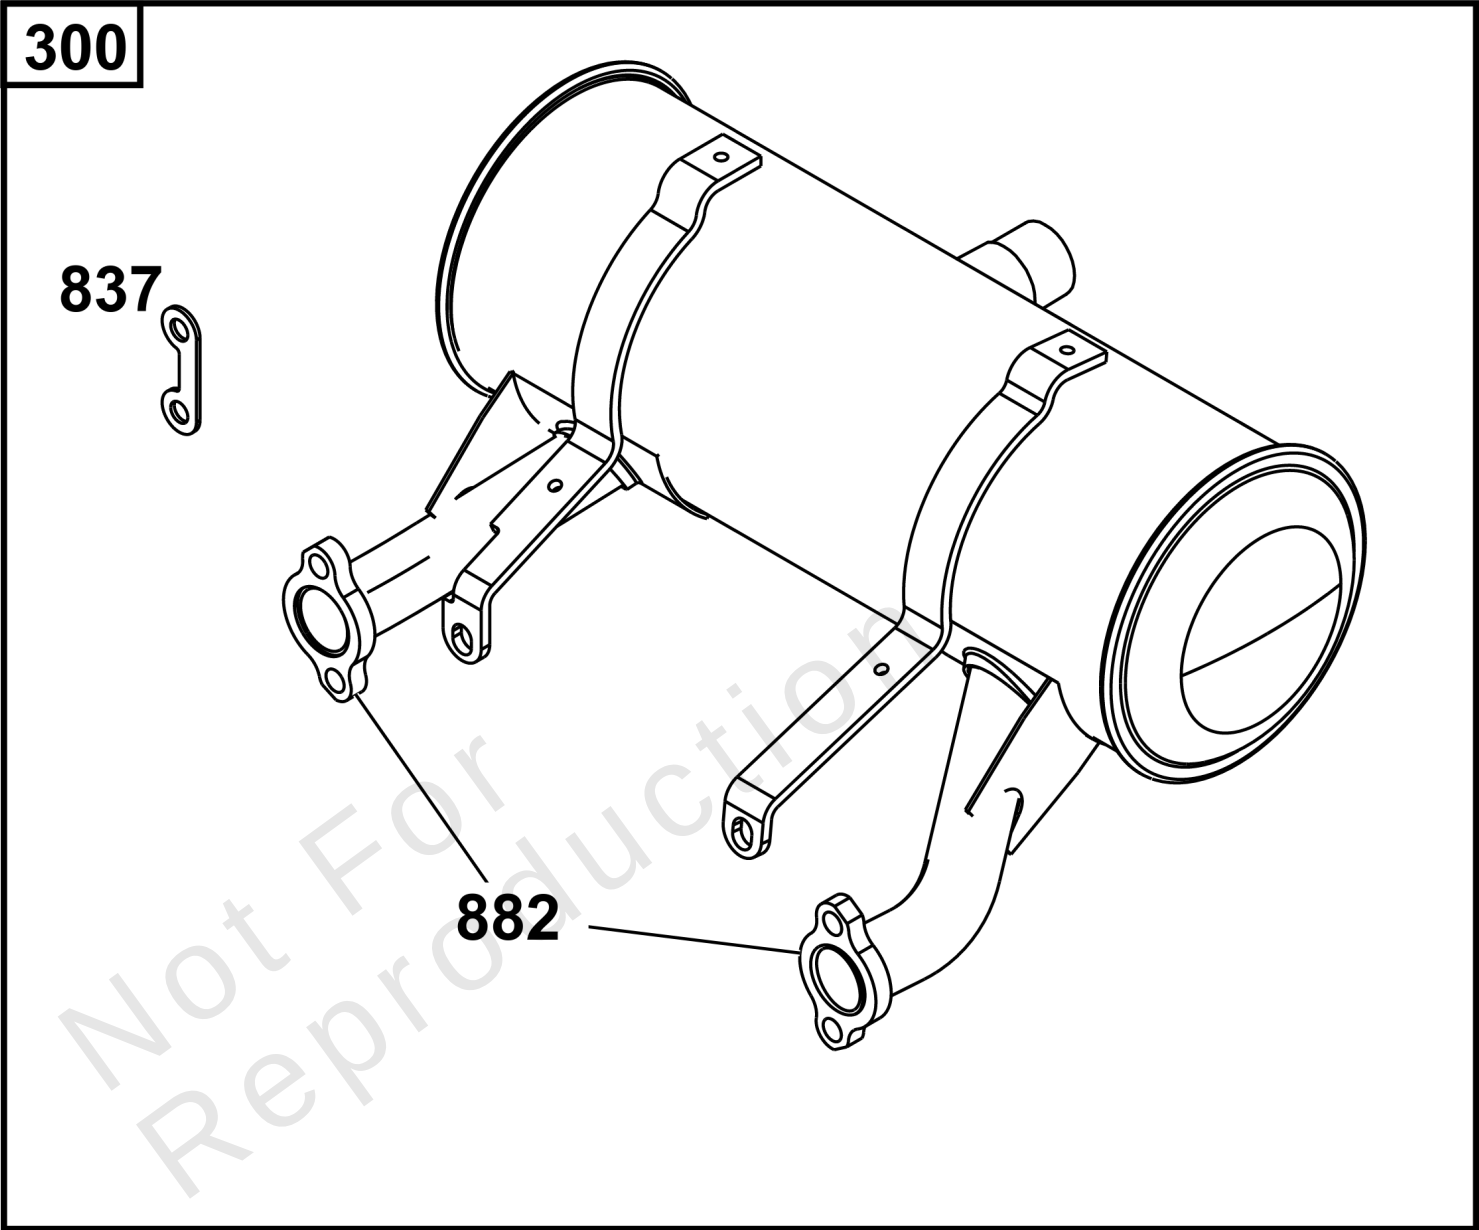

Center Outlet Mufflers

REF NO	PART NO	QTY	DESCRIPTION
300	808911	1	MUFFLER -(5" Round) (Horizontal: 3854, 3864)
837	808085	2	SPACER, Muffler
882	806965	2	FLANGE, Exhaust

  Not For Reproduction





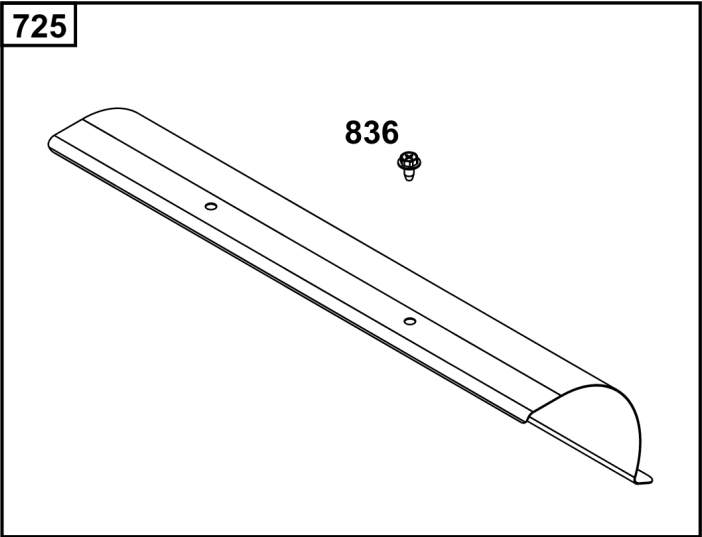
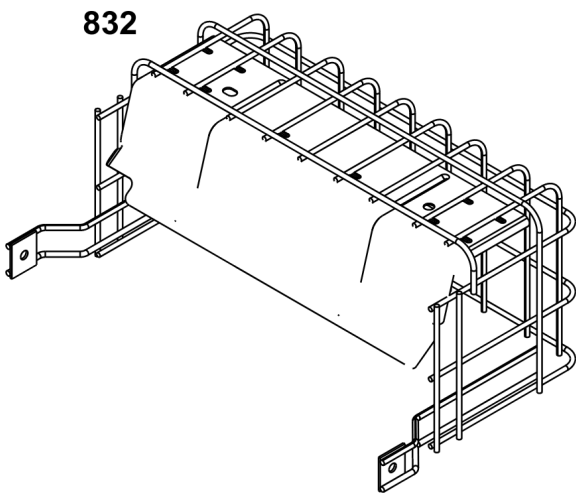


Not For
Reproduction

Muffler Guards and Shields

REF NO	PART NO	QTY	DESCRIPTION
725	846568	1	SHIELD, Heat -(For 5" Round Mufflers) (Horizontal: 3854, 3864)
832	691571	1	GUARD, Muffler -(Assembly for 690906 & 691562) (Horizontal: 3054, 3564)
836	692067	4	SCREW

      Not For Reproduction

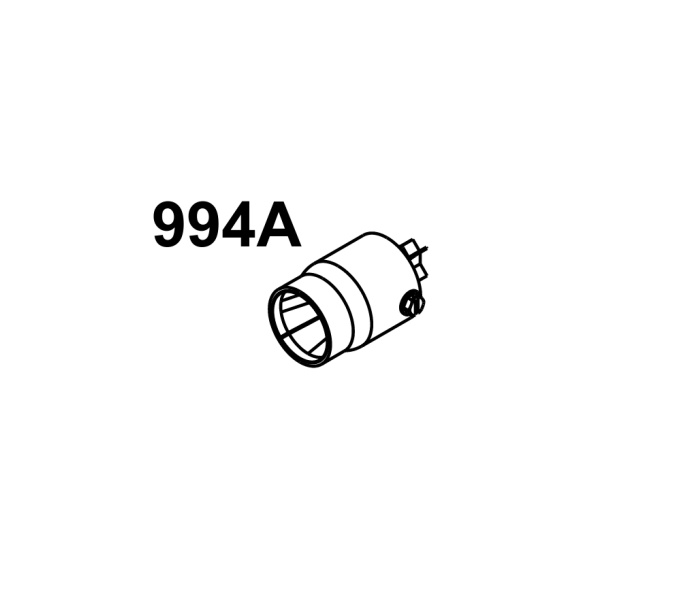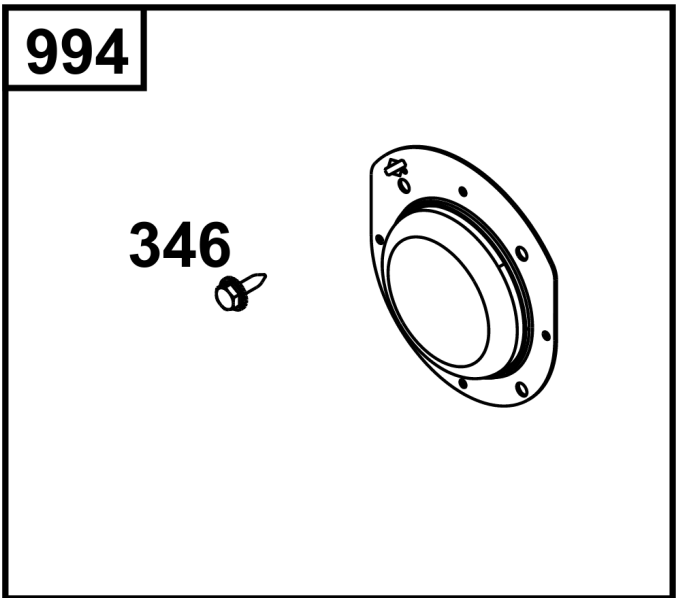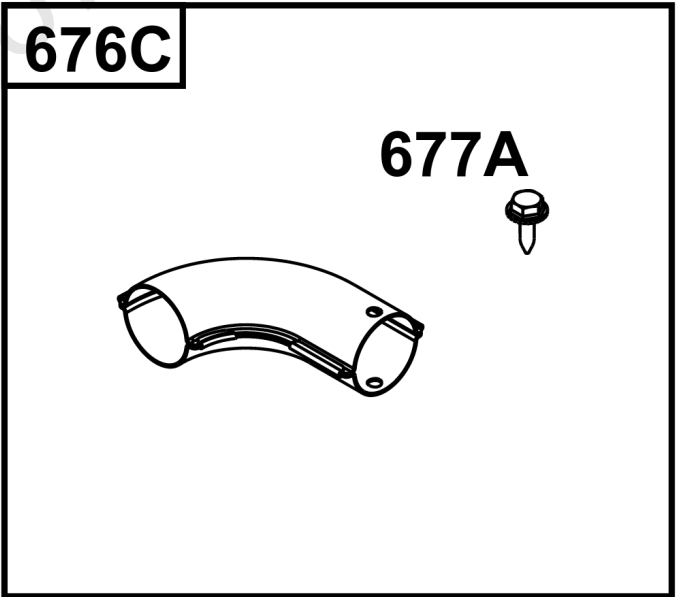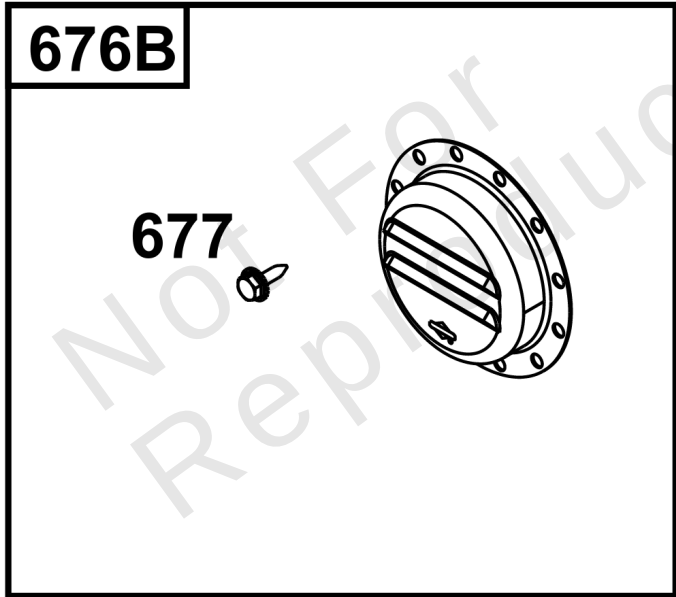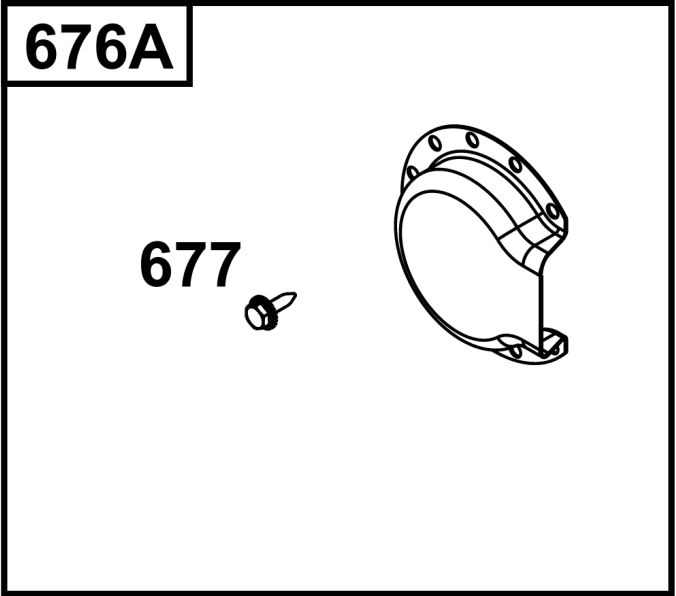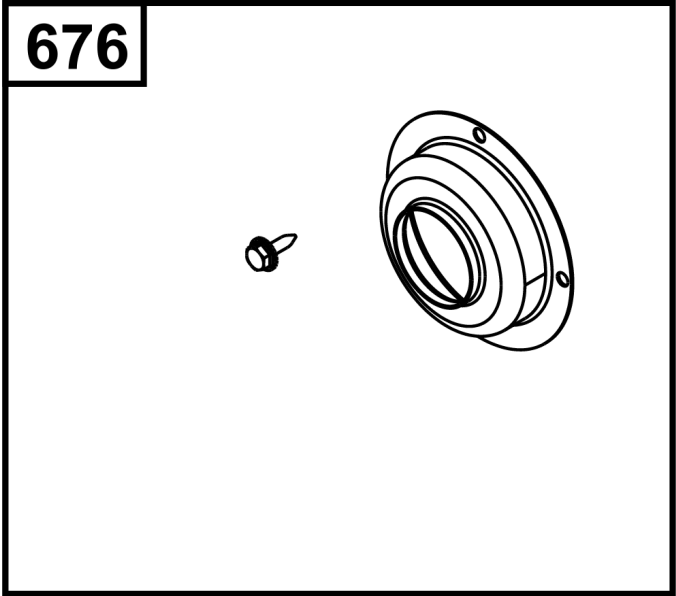

Spark Arrestors and Deflectors

REF NO	PART NO	QTY	DESCRIPTION
346	794845	4	SCREW -(Spark Arrestor)
676	396903	1	DEFLECTOR, Muffler -(Direct Outlet) (Face Mounting with 4 Screws)
676A	795036	1	DEFLECTOR, Muffler -(Deflector 90 Degree) (Face Mounting with 4 Screws)
676B	795038	1	DEFLECTOR, Muffler -(Deflector Louvered) (Face Mounting with 4 Screws)
676C	495518	1	DEFLECTOR, Muffler -(Elbow for Muffler Assembly) (For Exit Pipe O.D. of 1.10" (28mm))
677	794845	4	SCREW -(Muffler Deflector)
677A	810079	1	SCREW -(Muffler Deflector)
994	794945	1	ARRESTOR, Spark -(Spark Arrestor) (Face Mounting with 4 Screws)
994A	594562	1	ARRESTOR, Spark -(Spark Arrestor) (For Exit Pipe O.D. of 1.10" (28mm))

 
613



1177



296




883




883A



 882



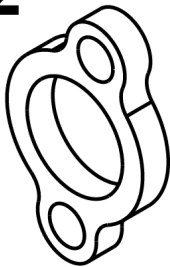


882A

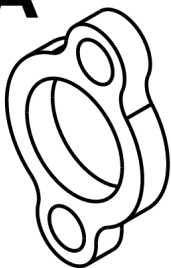 

Muffler Mounting Hardware



REF NO	PART NO	QTY	DESCRIPTION
296	841185	4	STUD -(Mounting Mufflers)
613	691902	4	SCREW -(Mounting Mufflers)
882	692074	2	FLANGE, Exhaust -(3054 & 3564)
882A	806965	2	FLANGE, Exhaust -(3854 & 3864)
883	806425	2	GASKET, Exhaust -(Horizontal: 3854, 3864) (Vertical: 3567)
883A	691613	2	GASKET, Exhaust -(Horizontal: 3054, 3564) (Vertical: 3567)
1177	842067	4	NUT -(Required if Using 841185)

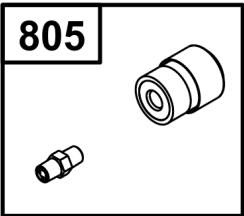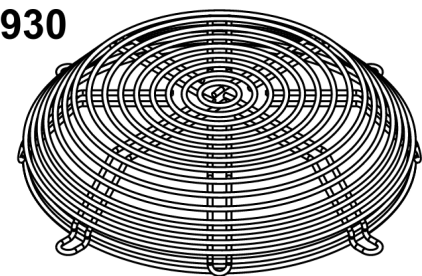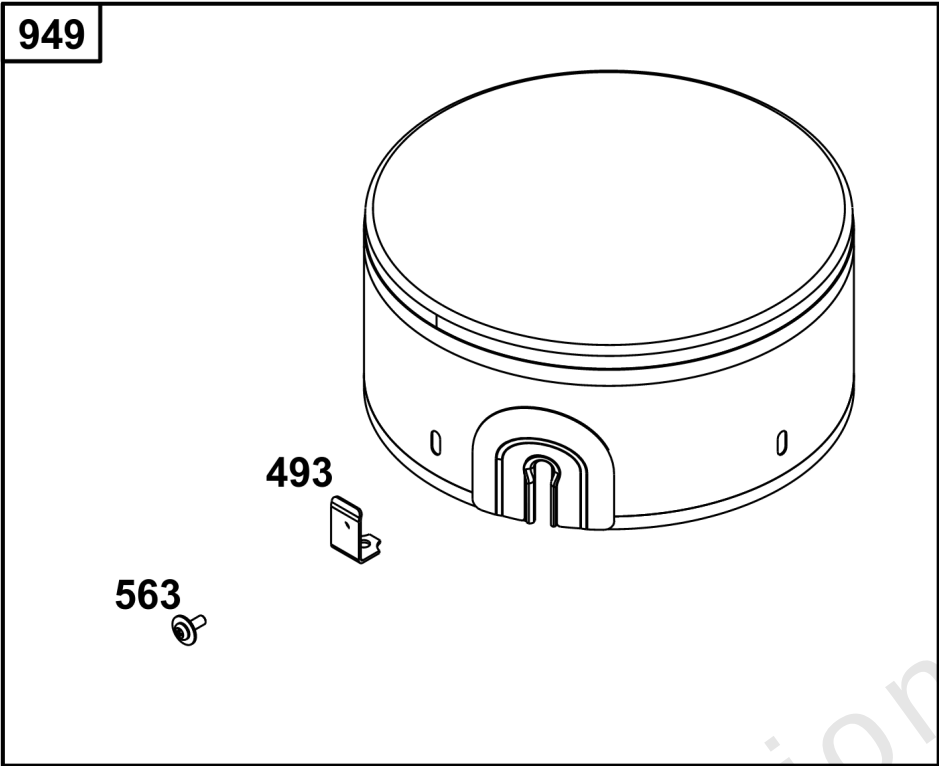   

Flywheel and Air Intake Guards





REF NO	PART NO	QTY	DESCRIPTION
493	845729	4	BRACKET, Mounting
563	841441	4	SCREW
805	843024	1	MINDER, Filter -(For Engines with Cyclonic Air Filter)
930	846284	1	GUARD, Flywheel Fan
949	845728	1	GUARD, Debris Screen -(Vertical: 3867)

  Not For Reproduction

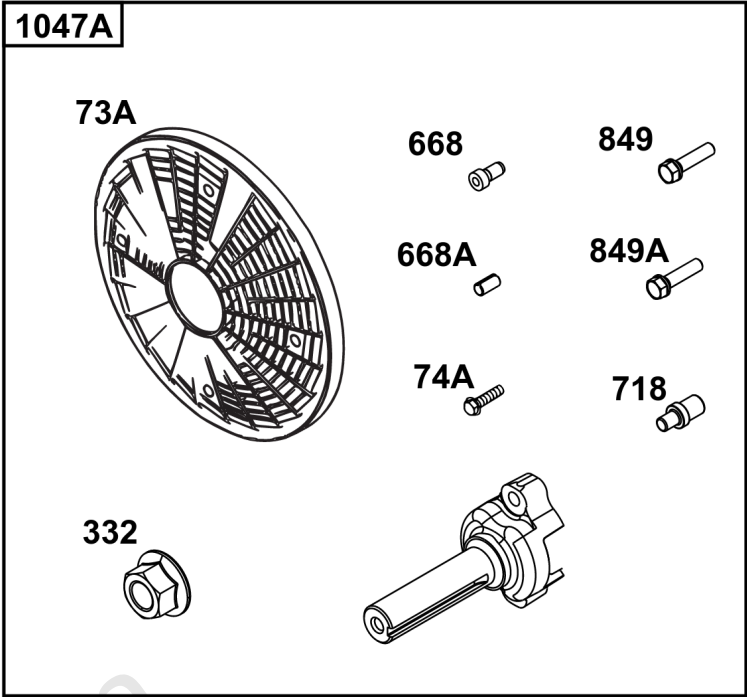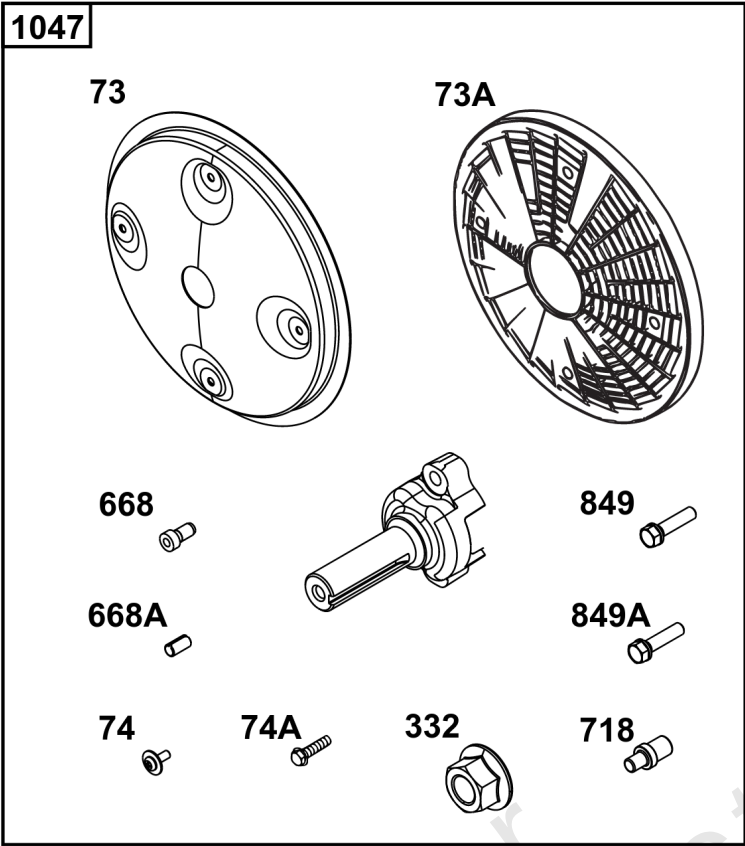

PTO

REF NO	PART NO	QTY	DESCRIPTION
73	841582	1	SCREEN, Rotating
73A	494439	1	SCREEN, Rotating
74	841441	4	SCREW -(Rotating Screen)
74A	691647	4	SCREW -(Rotating Screen)
332	690887	1	NUT -(Flywheel)
668	691500	4	SPACER -(Rotating Screen)
668A	691215	4	SPACER -(Rotating Screen)
718	841581	1	PIN, Locating -(32MM)
849	691088	2	SCREW -(Stub Shaft)
849A	846236	2	SCREW -(Stub Shaft)
1047	841580	1	SHAFT, Stub -(1" Diameter) (4.75" Length)
1047A	842655	1	SHAFT, Stub -(1" Diameter) (5.43" Length)

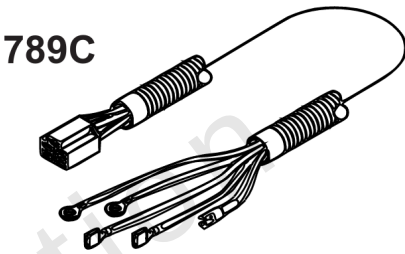 
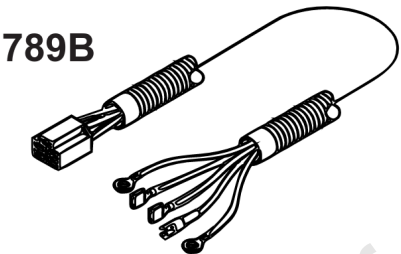 
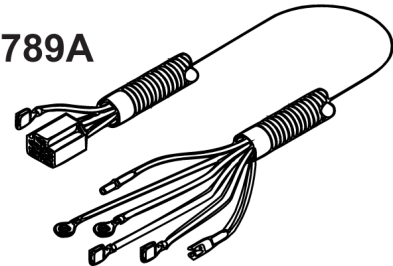 
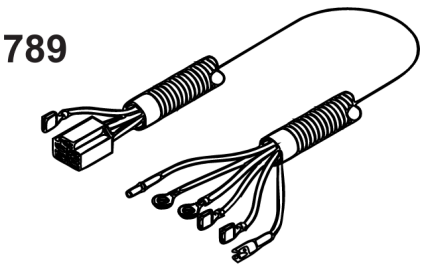 


578

LOOSE CONNECTOR:
TE # 1-480704-0
MATE-N-LOK 6 POSITION HOUSING

Electrical

REF NO	PART NO	QTY	DESCRIPTION
415	1714480SM	1	PLUG -(Plug for Ignition Switch Removal)
578	84007350	1	WIRE ASSEMBLY -(Aids in Repowering Engine Application with 6-Pin Connector and Wires with Terminals to Create Custom Adapter Configurations)
789	691996	1	HARNESS, Wiring -(For 16 Amp Alternators)
789A	841318	1	HARNESS, Wiring -(For 16 Amp Alternators with Solenoid Shift Starter)
789B	847601	1	HARNESS, Wiring -(For 20 Amp Alternators)
789C	847602	1	HARNESS, Wiring -(For 20 Amp Alternators with Solenoid Shift Starter)

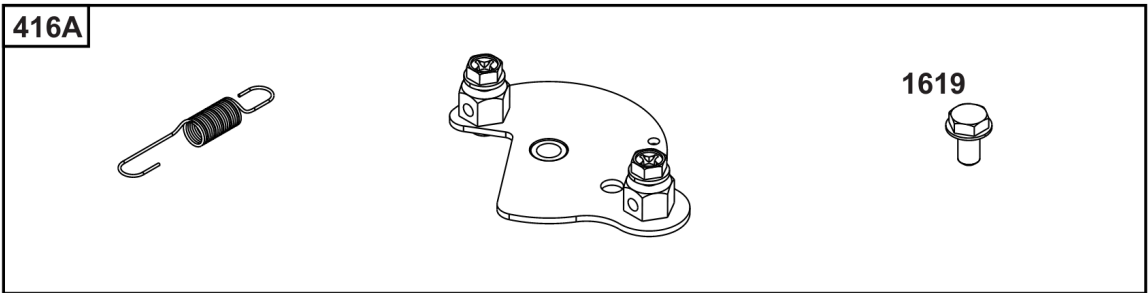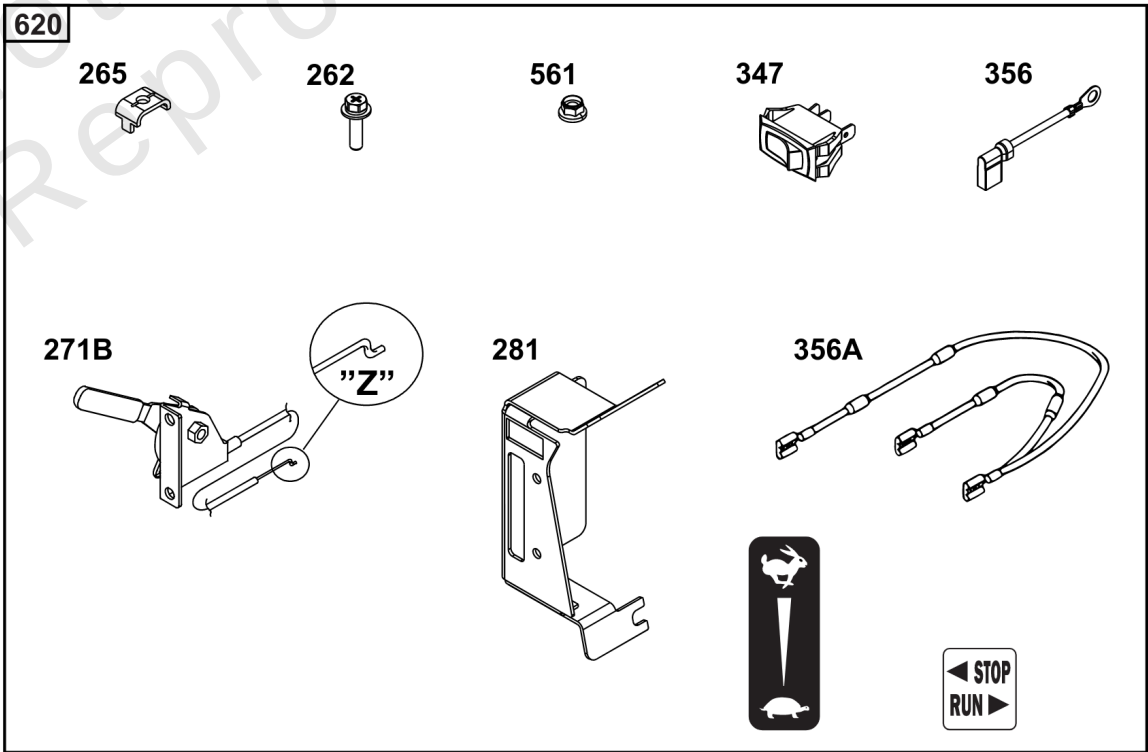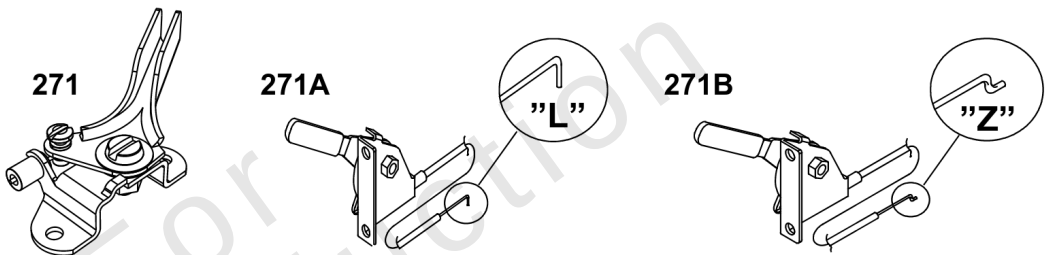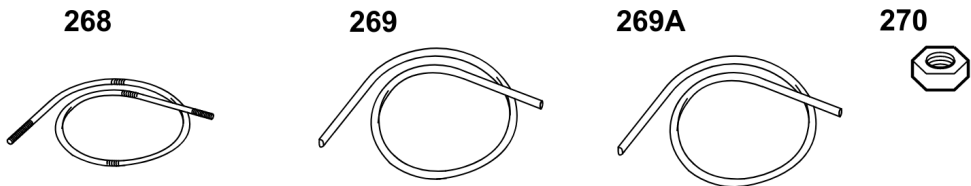    

Speed Control

REF NO	PART NO	QTY	DESCRIPTION
262	841552	1	SCREW
265	691024	1	CLAMP, Casing -(Casing Clamp for Hard Casing)
265A	690798	1	CLAMP, Casing -(Casing Clamp for Soft Casing)
267	792629	1	SCREW -(Screw for Casing Clamp)
268	691025	1	CASING, Control Wire -(Wire Casing 72")
269	26634	1	WIRE, Control -(Control Wire 78")
269A	93907	1	WIRE, Control -(Control Wire 100")
270	691027	1	NUT -(Nut for Wire Casing)
271	691028	1	LEVER, Control -(Speed Control Lever Assembly)
271A	692105	1	LEVER, Control -(Speed Control Lever Assembly) ('L' Shaped End)
271B	692541	1	LEVER, Control -(Speed Control Lever Assembly) ('Z' Shaped End)
281	690742	1	PANEL, Control
347	691995	1	SWITCH-ROCKER
356	690796	1	WIRE, Stop
356A	691999	1	WIRE ASSEMBLY
416	595196	1	BRACKET, Throttle Cable -(Casing Clamp for Snap-In Casing)
416A	84006945	1	BRACKET, Throttle Cable
561	806447	1	NUT
620	494052	1	BRACKET, Control -(Throttle Control for Vanguard V-Twin Horizontal Small Block)
1619	691693	1	SCREW

