

 


Parts Manual

Mfg. No: 326431-0709-01

Model Components	Page
Air Cleaner.	4
Alternators.	8
Armatures, Wires.	16
Back Plates.	26
Bearing Supports, Gaskets.	34
Blower Housings.	38
Booster Fans, Rotating Screens.	40
Carburetor.	44
Carburetor, Choke Shaft.	54
Counterweight Cover, Oil Fill.	56
Crankshaft.	62
Cylinder, Head, Spark Plug.	64
Electric Starter 1.	74
Electric Starter 2.	80
Engine Base.	86
Engine/Valve/Carburetor Gasket Sets.	88
Flywheels.	100
Fuel Pump, Fuel Filter.	102
Fuel Tank.	110
Muffler, Shields.	112
Panel Kit, Gages, Wires.	122
Panel Kit, Regulator, Key Switch.	130
Piston, Rings, Connecting Rod, Camshaft, Valves.	140
Regulator, Vee Belt.	152
Replacement Engine - US & Canada.	156
Rewind Starter, Rope.	157
Springs, Controls.	165
Starter Clutch.	171

Not For Production
Reproduction

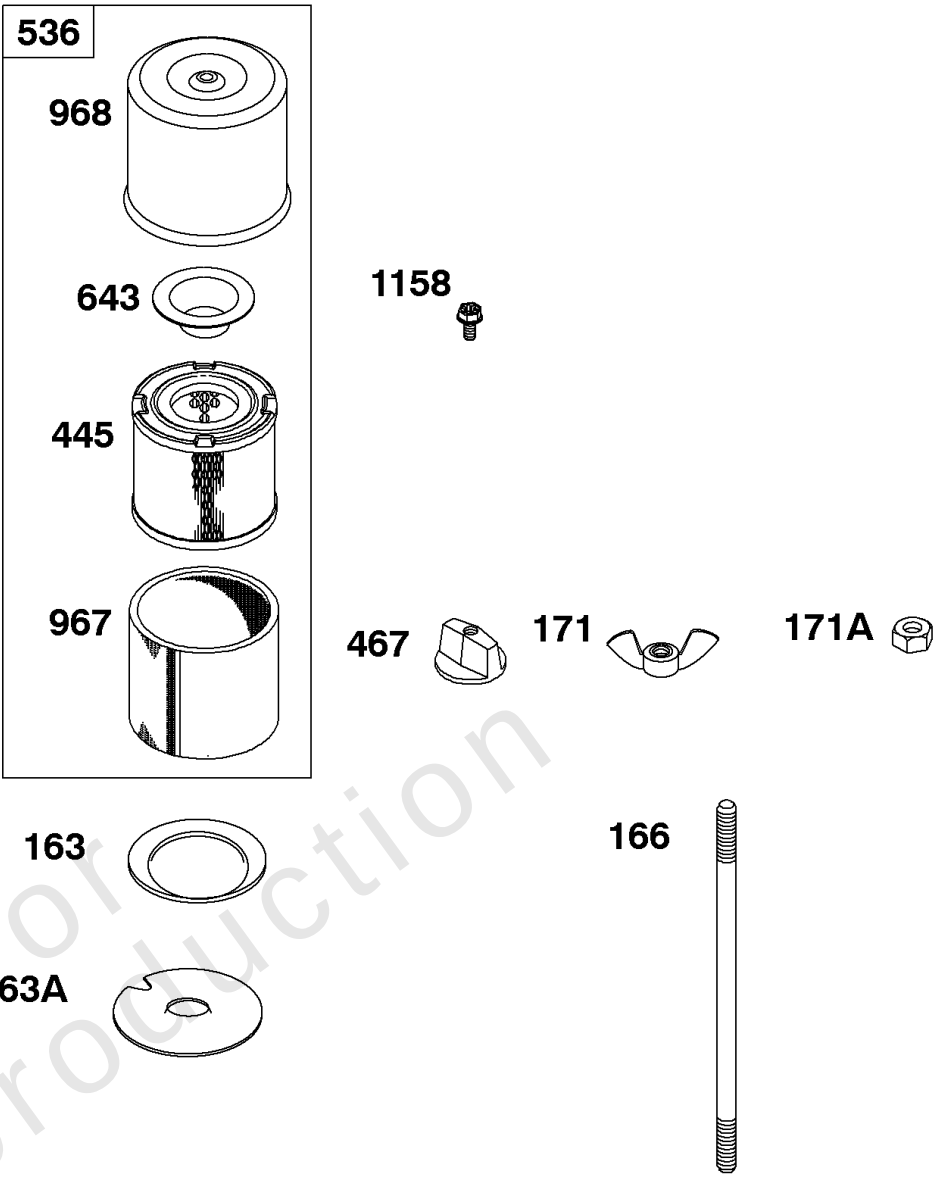


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
163	67247	Gasket-Air Cleaner Used on Type No(s). 0308.	171	691331	Nut (Air Cleaner)	643	691730	Retainer-Air Filter
163A	270987	Gasket-Air Cleaner	171A	690284	Nut (Air Cleaner)	967	271794S	Filter-Pre Cleaner
166	691241	Stud-Air Cleaner (9 1/2" Long)	445	393957S	Filter-Air Cleaner Cartridge	968	691755	Cover-Air Cleaner
			467	691668	Knob-Air Cleaner	1158	690293	Screw (Carburetor) (Used to Plug Air Cleaner Stud Hole) Used on Type No(s). 0262, 0630.
			536	391063	Cleaner-Air			

Air Cleaner

REF NO	PART NO	QTY	DESCRIPTION
163A	270987		GASKET, Air Cleaner -(Air Cleaner)
163A	270987		GASKET, Air Cleaner -(Air Cleaner)
163A	270987		GASKET, Air Cleaner -(Air Cleaner)
163A	270987		GASKET, Air Cleaner -(Air Cleaner)
163A	270987		GASKET, Air Cleaner -(Air Cleaner)
166	691241		STUD -(Air Cleaner) (9 1/2)
166	691241		STUD -(Air Cleaner) (9 1/2)
166	691241		STUD -(Air Cleaner) (9 1/2)
166	691241		STUD -(Air Cleaner) (9 1/2)
166	691241		STUD -(Air Cleaner) (9 1/2)
171	691331		NUT -(Air Cleaner)
171	691331		NUT -(Air Cleaner)
171	691331		NUT -(Air Cleaner)
171	691331		NUT -(Air Cleaner)
171	691331		NUT -(Air Cleaner)
171A	690284		NUT -(Air Cleaner)
171A	690284		NUT -(Air Cleaner)
171A	690284		NUT -(Air Cleaner)
171A	690284		NUT -(Air Cleaner)
171A	690284		NUT -(Air Cleaner)
445	393957S		FILTER, A/C Cartridge
445	393957S		FILTER, A/C Cartridge
445	393957S		FILTER, A/C Cartridge
445	393957S		FILTER, A/C Cartridge
445	393957S		FILTER, A/C Cartridge
467	691668		KNOB, Air Cleaner Cover
467	691668		KNOB, Air Cleaner Cover
467	691668		KNOB, Air Cleaner Cover
467	691668		KNOB, Air Cleaner Cover
467	691668		KNOB, Air Cleaner Cover
536	391063		CLEANER, Air
536	391063		CLEANER, Air
536	391063		CLEANER, Air
536	391063		CLEANER, Air
536	391063		CLEANER, Air
643	691730		RETAINER, Air Filter
643	691730		RETAINER, Air Filter

 Not For Production
Reproduction









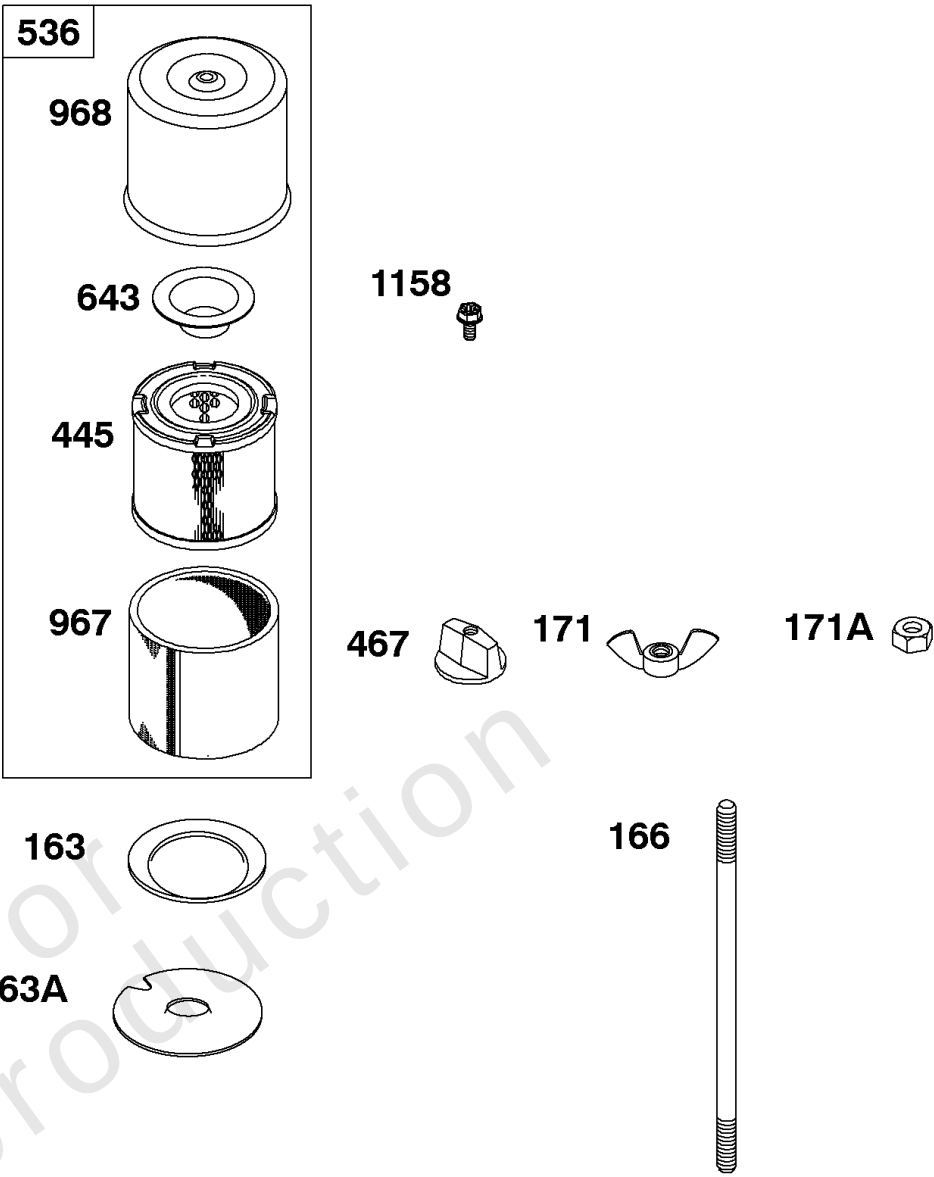



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
163	67247	Gasket-Air Cleaner Used on Type No(s). 0308.	171	691331	Nut (Air Cleaner)	643	691730	Retainer-Air Filter
163A	270987	Gasket-Air Cleaner	171A	690284	Nut (Air Cleaner)	967	271794S	Filter-Pre Cleaner
166	691241	Stud-Air Cleaner (9 1/2" Long)	445	393957S	Filter-Air Cleaner Cartridge	968	691755	Cover-Air Cleaner
			467	691668	Knob-Air Cleaner	1158	690293	Screw (Carburetor) (Used to Plug Air Cleaner Stud Hole) Used on Type No(s). 0262, 0630.
			536	391063	Cleaner-Air			

Air Cleaner

REF NO	PART NO	QTY	DESCRIPTION
643	691730		RETAINER, Air Filter
643	691730		RETAINER, Air Filter
643	691730		RETAINER, Air Filter
967	271794S		FILTER, Pre Cleaner
967	271794S		FILTER, Pre Cleaner
967	271794S		FILTER, Pre Cleaner
967	271794S		FILTER, Pre Cleaner
967	271794S		FILTER, Pre Cleaner
968	691755		COVER, Air Cleaner
968	691755		COVER, Air Cleaner
968	691755		COVER, Air Cleaner
968	691755		COVER, Air Cleaner
968	691755		COVER, Air Cleaner

         SEE REPAIR INSTRUCTION MANUAL FOR PROPER AMPERAGE OF ALTERNATOR

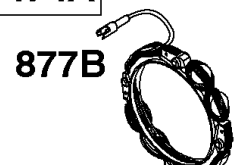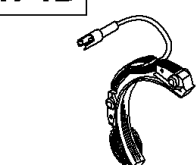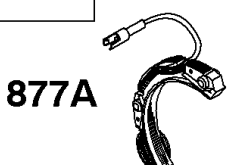DUAL CIRCUIT	REGULATED	10 AMP	AC ONLY	DC ONLY
474  877  1059 	474A  877B  1059 	474C  877C  1059 	474D  1059 	474E  877A  1059 
878 	878C 	578A 	578 	578A 










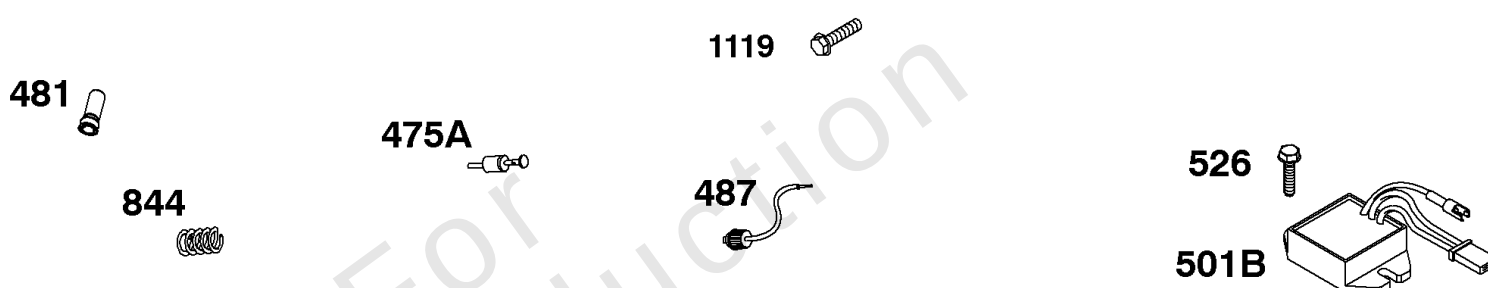 



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
474	696459	Alternator (Dual Circuit)	501B	691185	Regulator (10 Amp)	878	398661	Harness-Alternator
474A	696457	Alternator (Tri-Circuit)	526	690297	Screw (Regulator)	878C	691955	Harness-Alternator (Tri-Circuit)
474C	696458	Alternator (10 Amp) (Key Switch)	578	390867	Wire Assembly	1059	698516	Kit-Screw/Washer (Alternator)
474D	391595	Alternator (AC Only)	578A	692306	Wire Assembly	1119	691183	Screw (Alternator)
474E	696578	Alternator (DC Only)	844	261269	Spring-Diode			
475A	391507	Rectifier	877	393456	Wire/Connector-Alternator (Dual Circuit)			
481	230976	Bushing-Alternator	877A	393814	Wire/Connector-Alternator (DC Only)			
487	390888	Cap-Wire/Fuse	877B	393537	Wire/Connector-Alternator (Tri-Circuit)			
			877C	399916	Wire/Connector-Alternator (10 AMP)			

Alternators

REF NO	PART NO	QTY	DESCRIPTION
10	690294		SCREW -(Breather Assembly)
10	690294		SCREW -(Breather Assembly)
10	690294		SCREW -(Breather Assembly)
10	690294		SCREW -(Breather Assembly)
10	690294		SCREW -(Breather Assembly)
474	696459		ALTERNATOR
474	696459		ALTERNATOR
474	696459		ALTERNATOR
474	696459		ALTERNATOR
474	696459		ALTERNATOR
474A	696457		ALTERNATOR -(Tri Circuit)
474A	696457		ALTERNATOR -(Tri Circuit)
474A	696457		ALTERNATOR -(Tri Circuit)
474A	696457		ALTERNATOR -(Tri Circuit)
474A	696457		ALTERNATOR -(Tri Circuit)
474C	696458		ALTERNATOR -(10, 13, 16 Amp)(Key Switch)
474D	391595		ALTERNATOR -(AC Only)
474E	696578		ALTERNATOR -(DC Only)
474E	696578		ALTERNATOR -(DC Only)
474C	696458		ALTERNATOR -(10, 13, 16 Amp)(Key Switch)
474D	391595		ALTERNATOR -(AC Only)
474E	696578		ALTERNATOR -(DC Only)
474D	391595		ALTERNATOR -(AC Only)
474C	696458		ALTERNATOR -(10, 13, 16 Amp)(Key Switch)
474D	391595		ALTERNATOR -(AC Only)
474E	696578		ALTERNATOR -(DC Only)
474C	696458		ALTERNATOR -(10, 13, 16 Amp)(Key Switch)
474E	696578		ALTERNATOR -(DC Only)
474D	391595		ALTERNATOR -(AC Only)
474C	696458		ALTERNATOR -(10, 13, 16 Amp)(Key Switch)
475A	391507		RECTIFIER
475A	391507		RECTIFIER
475A	391507		RECTIFIER

          SEE REPAIR INSTRUCTION MANUAL FOR PROPER AMPERAGE OF ALTERNATOR

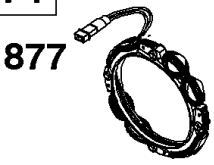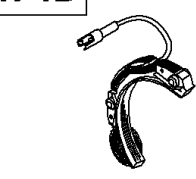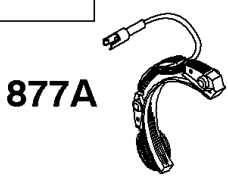DUAL CIRCUIT	REGULATED	10 AMP	AC ONLY	DC ONLY
474  877  1059 	474A  877B  1059 	474C  877C  1059 	474D  1059 	474E  877A  1059 
878 	878C 	578A 	578 	578A 











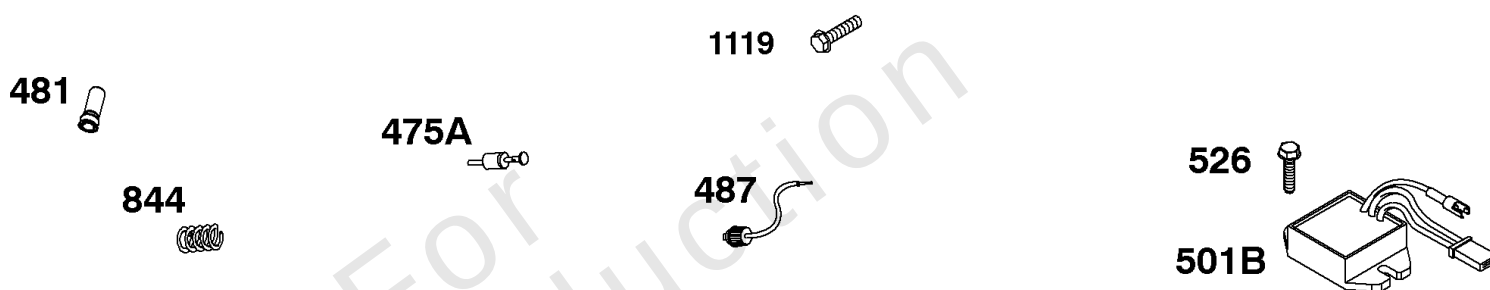 



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
474	696459	Alternator (Dual Circuit)	501B	691185	Regulator (10 Amp)	878	398661	Harness-Alternator
474A	696457	Alternator (Tri-Circuit)	526	690297	Screw (Regulator)	878C	691955	Harness-Alternator (Tri-Circuit)
474C	696458	Alternator (10 Amp) (Key Switch)	578	390867	Wire Assembly	1059	698516	Kit-Screw/Washer (Alternator)
474D	391595	Alternator (AC Only)	578A	692306	Wire Assembly	1119	691183	Screw (Alternator)
474E	696578	Alternator (DC Only)	844	261269	Spring-Diode			
475A	391507	Rectifier	877	393456	Wire/Connector-Alternator (Dual Circuit)			
481	230976	Bushing-Alternator	877A	393814	Wire/Connector-Alternator (DC Only)			
487	390888	Cap-Wire/Fuse	877B	393537	Wire/Connector-Alternator (Tri-Circuit)			
			877C	399916	Wire/Connector-Alternator (10 AMP)			

Alternators

REF NO	PART NO	QTY	DESCRIPTION
475A	391507		RECTIFIER
475A	391507		RECTIFIER
481	230976		BUSHING, Alternator -(Loose)
481	230976		BUSHING, Alternator -(Loose)
481	230976		BUSHING, Alternator -(Loose)
481	230976		BUSHING, Alternator -(Loose)
481	230976		BUSHING, Alternator -(Loose)
487	390888		CAP, Wire/Fuse
487	390888		CAP, Wire/Fuse
487	390888		CAP, Wire/Fuse
487	390888		CAP, Wire/Fuse
487	390888		CAP, Wire/Fuse
501B	691185		REGULATOR -(10 Amp Regulated)
501B	691185		REGULATOR -(10 Amp Regulated)
501B	691185		REGULATOR -(10 Amp Regulated)
501B	691185		REGULATOR -(10 Amp Regulated)
501B	691185		REGULATOR -(10 Amp Regulated)
526	690297		SCREW -(Regulator)
526	690297		SCREW -(Regulator)
526	690297		SCREW -(Regulator)
526	690297		SCREW -(Regulator)
526	690297		SCREW -(Regulator)
578	390867		HARNESS, Alternator -(Ac Only)
578	390867		HARNESS, Alternator -(Ac Only)
578	390867		HARNESS, Alternator -(Ac Only)
578	390867		HARNESS, Alternator -(Ac Only)
578	390867		HARNESS, Alternator -(Ac Only)
578A	298582		WIRE ASSEMBLY -(2 Wires, 5-7/16, And 3-7/8)(Insulated Support Ring Terminal,Insulated Support Ring Terminal, And Flag Ring Terminal)
578A	692306		WIRE ASSEMBLY
578A	298582		WIRE ASSEMBLY -(2 Wires, 5-7/16, And 3-7/8)(Insulated Support Ring Terminal,Insulated Support Ring Terminal, And Flag Ring Terminal)
578A	692306		WIRE ASSEMBLY
578A	692306		WIRE ASSEMBLY
578A	298582		WIRE ASSEMBLY -(2 Wires, 5-7/16, And 3-7/8)(Insulated Support Ring Terminal,Insulated Support Ring Terminal, And Flag Ring Terminal)

           SEE REPAIR INSTRUCTION MANUAL FOR PROPER AMPERAGE OF ALTERNATOR

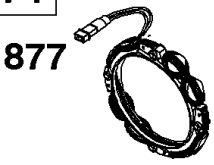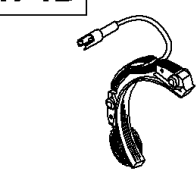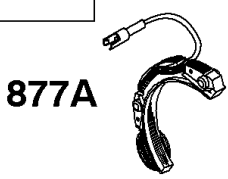DUAL CIRCUIT	REGULATED	10 AMP	AC ONLY	DC ONLY
474  877  1059 	474A  877B  1059 	474C  877C  1059 	474D  1059 	474E  877A  1059 
878 	878C 	578A 	578 	578A 

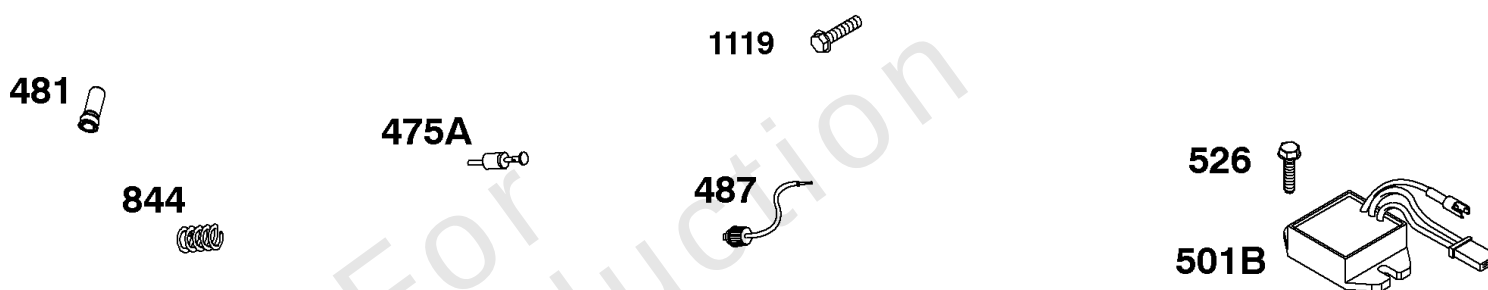 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
474	696459	Alternator (Dual Circuit)	501B	691185	Regulator (10 Amp)	878	398661	Harness-Alternator
474A	696457	Alternator (Tri-Circuit)	526	690297	Screw (Regulator)	878C	691955	Harness-Alternator (Tri-Circuit)
474C	696458	Alternator (10 Amp) (Key Switch)	578	390867	Wire Assembly	1059	698516	Kit-Screw/Washer (Alternator)
474D	391595	Alternator (AC Only)	578A	692306	Wire Assembly	1119	691183	Screw (Alternator)
474E	696578	Alternator (DC Only)	844	261269	Spring-Diode			
475A	391507	Rectifier	877	393456	Wire/Connector-Alternator (Dual Circuit)			
481	230976	Bushing-Alternator	877A	393814	Wire/Connector-Alternator (DC Only)			
487	390888	Cap-Wire/Fuse	877B	393537	Wire/Connector-Alternator (Tri-Circuit)			
			877C	399916	Wire/Connector-Alternator (10 AMP)			

Alternators

REF NO	PART NO	QTY	DESCRIPTION
578A	692306		WIRE ASSEMBLY
578A	298582		WIRE ASSEMBLY -(2 Wires, 5-7/16, And 3-7/8)(Insulated Support Ring Terminal,Insulated Support Ring Terminal, And Flag Ring Terminal)
578A	692306		WIRE ASSEMBLY
578A	298582		WIRE ASSEMBLY -(2 Wires, 5-7/16, And 3-7/8)(Insulated Support Ring Terminal,Insulated Support Ring Terminal, And Flag Ring Terminal)
844	261269		SPRING, Diode
844	261269		SPRING, Diode
844	261269		SPRING, Diode
844	261269		SPRING, Diode
844	261269		SPRING, Diode
877	393456		WIRE/CONNECTOR, Alternator -(Dual Circuit)
877	393456		WIRE/CONNECTOR, Alternator -(Dual Circuit)
877	393456		WIRE/CONNECTOR, Alternator -(Dual Circuit)
877	393456		WIRE/CONNECTOR, Alternator -(Dual Circuit)
877	393456		WIRE/CONNECTOR, Alternator -(Dual Circuit)
877A	393814		WIRE/CONNECTOR, Alternator -(DC Only)
877A	393814		WIRE/CONNECTOR, Alternator -(DC Only)
877A	393814		WIRE/CONNECTOR, Alternator -(DC Only)
877A	393814		WIRE/CONNECTOR, Alternator -(DC Only)
877A	393814		WIRE/CONNECTOR, Alternator -(DC Only)
877B	393537		WIRE/CONNECTOR, Alternator -(Tri Circuit)
877C	399916		WIRE/CONN-ALTERNATOR -(10 Amp Regulated)
877B	393537		WIRE/CONNECTOR, Alternator -(Tri Circuit)
877B	393537		WIRE/CONNECTOR, Alternator -(Tri Circuit)
877C	399916		WIRE/CONN-ALTERNATOR -(10 Amp Regulated)
877C	399916		WIRE/CONN-ALTERNATOR -(10 Amp Regulated)
877B	393537		WIRE/CONNECTOR, Alternator -(Tri Circuit)
877C	399916		WIRE/CONN-ALTERNATOR -(10 Amp Regulated)
877C	399916		WIRE/CONN-ALTERNATOR -(10 Amp Regulated)
877B	393537		WIRE/CONNECTOR, Alternator -(Tri Circuit)
878	398661		HARNESS, Wiring
878	398661		HARNESS, Wiring
878	398661		HARNESS, Wiring
878	398661		HARNESS, Wiring
878	398661		HARNESS, Wiring

SEE REPAIR INSTRUCTION MANUAL FOR PROPER AMPERAGE OF ALTERNATOR


DUAL CIRCUIT	REGULATED	10 AMP	AC ONLY	DC ONLY
474 877 1059	474A 877B 1059	474C 877C 1059	474D 1059	474E 877A 1059
878	878C	578A	578	578A



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
474	696459	Alternator (Dual Circuit)	501B	691185	Regulator (10 Amp)	878	398661	Harness-Alternator
474A	696457	Alternator (Tri-Circuit)	526	690297	Screw (Regulator)	878C	691955	Harness-Alternator (Tri-Circuit)
474C	696458	Alternator (10 Amp) (Key Switch)	578	390867	Wire Assembly	1059	698516	Kit-Screw/Washer (Alternator)
474D	391595	Alternator (AC Only)	578A	692306	Wire Assembly	1119	691183	Screw (Alternator)
474E	696578	Alternator (DC Only)	844	261269	Spring-Diode			
475A	391507	Rectifier	877	393456	Wire/Connector-Alternator (Dual Circuit)			
481	230976	Bushing-Alternator	877A	393814	Wire/Connector-Alternator (DC Only)			
487	390888	Cap-Wire/Fuse	877B	393537	Wire/Connector-Alternator (Tri-Circuit)			
			877C	399916	Wire/Connector-Alternator (10 AMP)			

Alternators


REF NO	PART NO	QTY	DESCRIPTION
878C	691955		HARNESS, Alternator
878C	691955		HARNESS, Alternator
878C	691955		HARNESS, Alternator
878C	691955		HARNESS, Alternator
878C	691955		HARNESS, Alternator
1059	698516		KIT, Screw/Washer
1059	698516		KIT, Screw/Washer
1059	698516		KIT, Screw/Washer
1059	698516		KIT, Screw/Washer
1059	698516		KIT, Screw/Washer
1119	691183		SCREW -(Alternator)
1119	691183		SCREW -(Alternator)
1119	691183		SCREW -(Alternator)
1119	691183		SCREW -(Alternator)
1119	691183		SCREW -(Alternator)

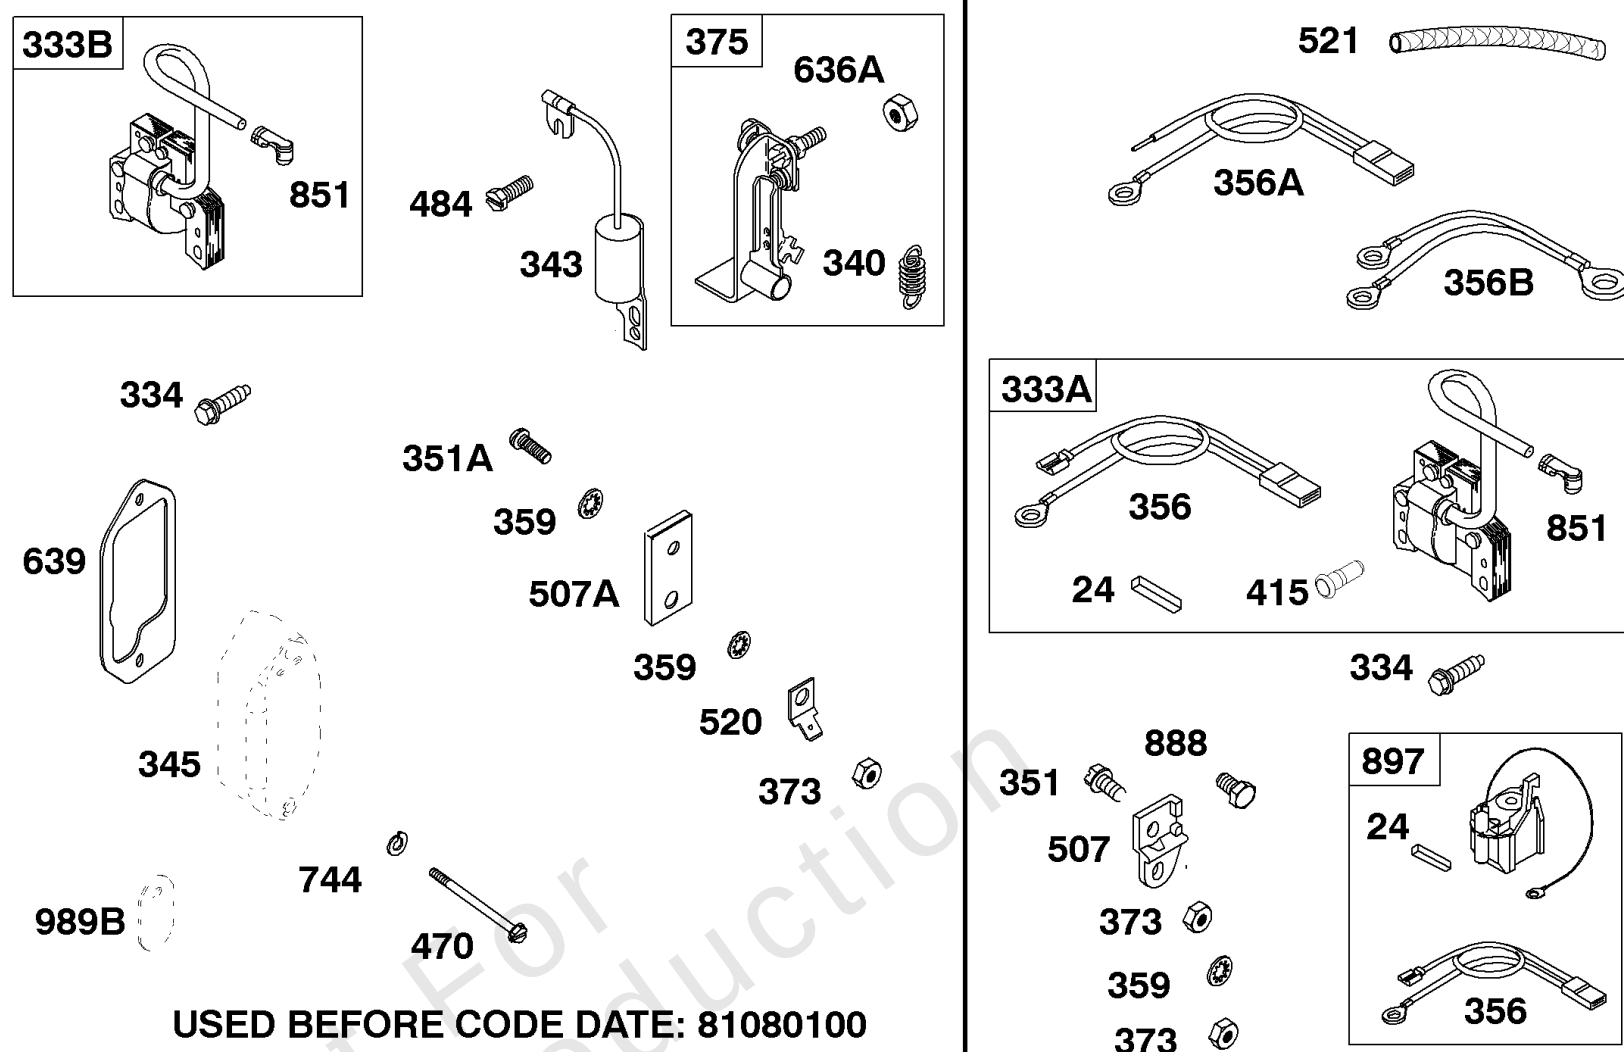 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
24	222698S	Key-Flywheel	356	398808	Wire-Stop	507	690584	Insulator
333A	398811	Armature-Magneto (Breaker Ignition) (Used After Code Date 81073100).	356A	690650	Wire-Stop (Used With Magneto Armature, Reference 333A)	507A	66895	Insulator
333B	298968	Armature-Magneto (Breaker Ignition) (Used Before Code Date 81080100).	356B	396585	Wire-Stop Used on Type No(s). 0643, 0646, 0735.	----- Note ----- 299598 Insulator Used on Type No(s). 0131.		
334	691061	Screw (Magneto Armature)	359	691077	Washer (Ground Terminal)	520	691084	Terminal-Ground
340	26018	Spring-Breaker Arm	373	691612	Nut (Ground Terminal)	521	291508	Shield-Cable
343	298060	Condenser	375	298185	Breaker-Ignition	636A	230783	Nut (Starting Switch)
345		Cover-Breaker (NO LONGER AVAILABLE)	415	692882	Plug	639	692913	Gasket-Breaker Box
351	690292	Screw (Ground Terminal)	470	692836	Screw (Breaker Cover)	744	690277	Washer (Breaker Cover)
351A	690295	Screw (Ground Terminal)	484	690294	Screw (Condenser)	851	493880S	Terminal-Spark Plug
						888	690295	Screw (Insulator)
						897	394970	Kit-MAGNETRON® Ignition (Used After Code Date 81080100 and Before Code Date 85012200).
						989B		Stop Switch-Spark Plug (NO LONGER AVAILABLE)

Armatures, Wires


REF NO	PART NO	QTY	DESCRIPTION
24	222698S		KEY, Flywheel
24	222698S		KEY, Flywheel
24	222698S		KEY, Flywheel
24	222698S		KEY, Flywheel
24	222698S		KEY, Flywheel
333A	398811		ARMATURE, Magneto -(Breaker Ignition) -Used After Code Date 81073100
333A	398811		ARMATURE, Magneto -(Breaker Ignition) -Used After Code Date 81073100
333A	398811		ARMATURE, Magneto -(Breaker Ignition) -Used After Code Date 81073100
333A	398811		ARMATURE, Magneto -(Breaker Ignition) -Used After Code Date 81073100
333A	398811		ARMATURE, Magneto -(Breaker Ignition) -Used After Code Date 81073100
333B	298968		ARMATURE, Magneto -(Breaker Ignition) -Used Before Code Date 81080100
333B	298968		ARMATURE, Magneto -(Breaker Ignition) -Used Before Code Date 81080100
333B	298968		ARMATURE, Magneto -(Breaker Ignition) -Used Before Code Date 81080100
333B	298968		ARMATURE, Magneto -(Breaker Ignition) -Used Before Code Date 81080100
333B	298968		ARMATURE, Magneto -(Breaker Ignition) -Used Before Code Date 81080100
334	691061		SCREW -(Magneto Armature)
334	691061		SCREW -(Magneto Armature)
334	691061		SCREW -(Magneto Armature)
334	691061		SCREW -(Magneto Armature)
334	691061		SCREW -(Magneto Armature)
340	26018		SPRING, Breaker Arm
340	26018		SPRING, Breaker Arm
340	26018		SPRING, Breaker Arm
340	26018		SPRING, Breaker Arm
340	26018		SPRING, Breaker Arm
343	298060		CONDENSER
343	298060		CONDENSER
343	298060		CONDENSER
343	298060		CONDENSER
343	298060		CONDENSER
345	-----		Cover-Breaker -(NO LONGER AVAILABLE)
345	-----		Cover-Breaker -(NO LONGER AVAILABLE)

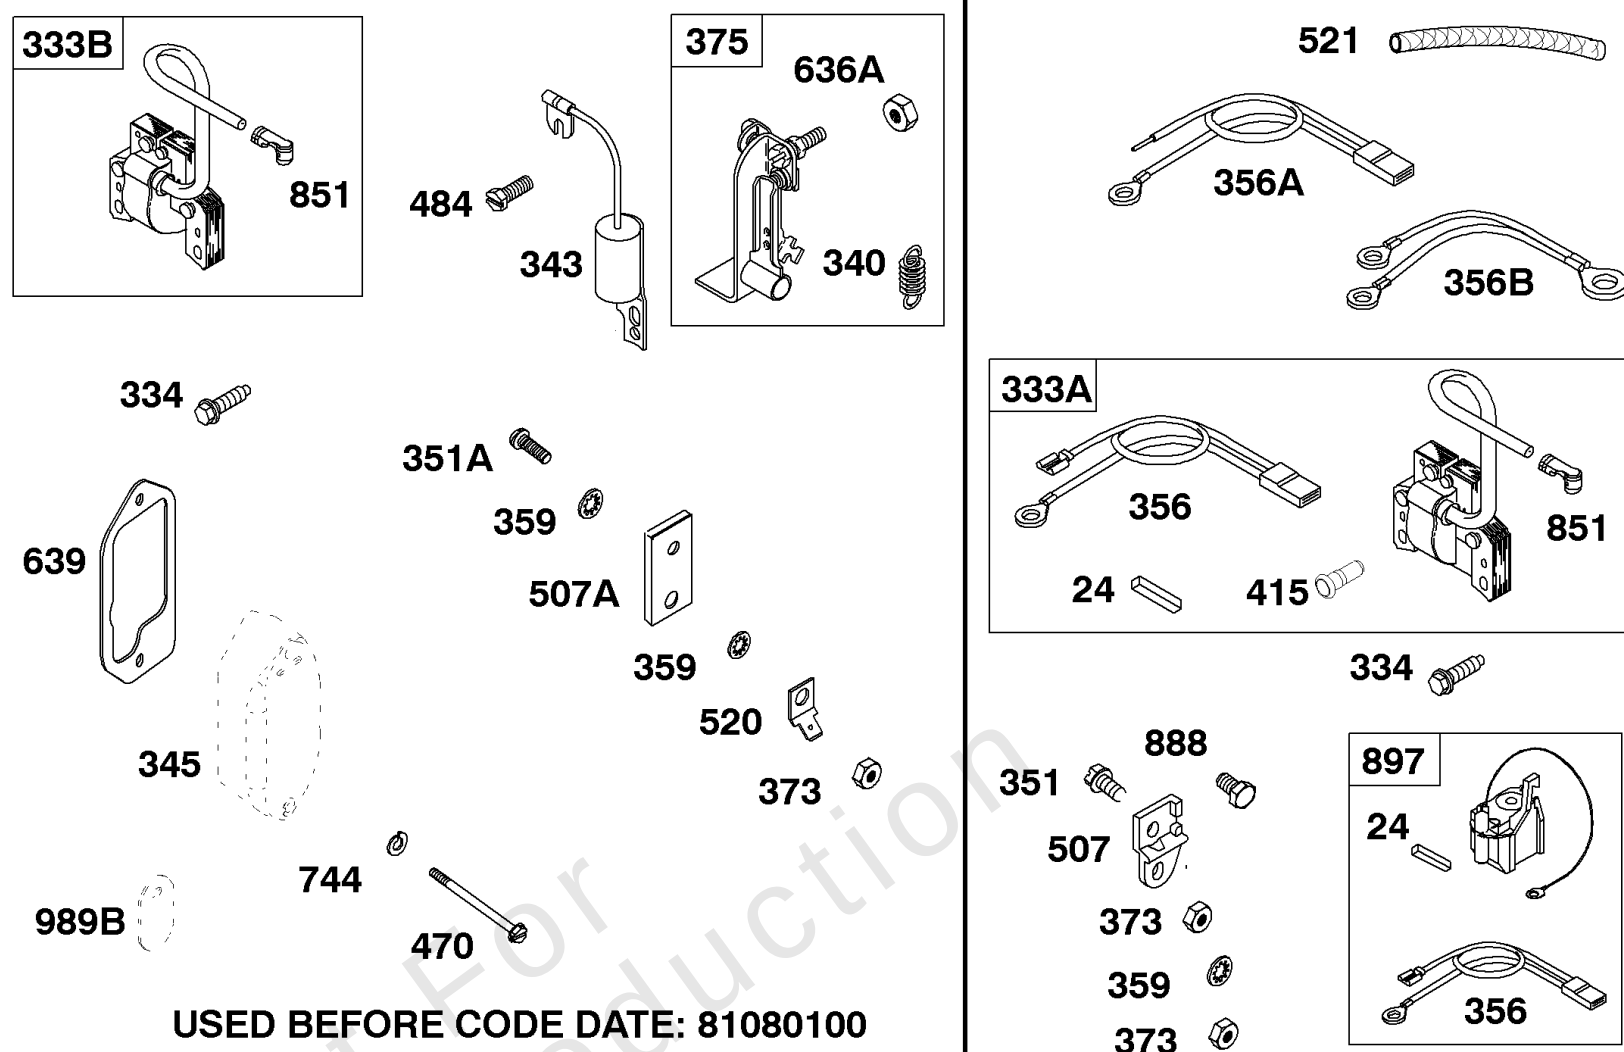 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
24	222698S	Key-Flywheel	356	398808	Wire-Stop	507	690584	Insulator
333A	398811	Armature-Magneto (Breaker Ignition) (Used After Code Date 81073100).	356A	690650	Wire-Stop (Used With Magneto Armature, Reference 333A)	507A	66895	Insulator
333B	298968	Armature-Magneto (Breaker Ignition) (Used Before Code Date 81080100).	356B	396585	Wire-Stop Used on Type No(s). 0643, 0646, 0735.	----- Note ----- 299598 Insulator Used on Type No(s). 0131.		
334	691061	Screw (Magneto Armature)	359	691077	Washer (Ground Terminal)	520	691084	Terminal-Ground
340	26018	Spring-Breaker Arm	373	691612	Nut (Ground Terminal)	521	291508	Shield-Cable
343	298060	Condenser	375	298185	Breaker-Ignition	636A	230783	Nut (Starting Switch)
345		Cover-Breaker (NO LONGER AVAILABLE)	415	692882	Plug	639	692913	Gasket-Breaker Box
351	690292	Screw (Ground Terminal)	470	692836	Screw (Breaker Cover)	744	690277	Washer (Breaker Cover)
351A	690295	Screw (Ground Terminal)	484	690294	Screw (Condenser)	851	493880S	Terminal-Spark Plug
						888	690295	Screw (Insulator)
						897	394970	Kit-MAGNETRON® Ignition (Used After Code Date 81080100 and Before Code Date 85012200).
						989B		Stop Switch-Spark Plug (NO LONGER AVAILABLE)

Armatures, Wires


REF NO	PART NO	QTY	DESCRIPTION
345	-----		Cover-Breaker -(NO LONGER AVAILABLE)
345	-----		Cover-Breaker -(NO LONGER AVAILABLE)
345	-----		Cover-Breaker -(NO LONGER AVAILABLE)
351	690292		SCREW -(Ground Terminal)
351	690292		SCREW -(Ground Terminal)
351	690292		SCREW -(Ground Terminal)
351	690292		SCREW -(Ground Terminal)
351	690292		SCREW -(Ground Terminal)
351A	690295		SCREW -(Ground Terminal)
351A	690295		SCREW -(Ground Terminal)
351A	690295		SCREW -(Ground Terminal)
351A	690295		SCREW -(Ground Terminal)
351A	690295		SCREW -(Ground Terminal)
356	398808		WIRE, Stop -(Cut To Required Length)
356	398808		WIRE, Stop -(Cut To Required Length)
356	398808		WIRE, Stop -(Cut To Required Length)
356	398808		WIRE, Stop -(Cut To Required Length)
356	398808		WIRE, Stop -(Cut To Required Length)
356A	690650		WIRE, Stop -(Used With Armature Magneto, Reference 333A)
356A	690650		WIRE, Stop -(Used With Armature Magneto, Reference 333A)
356A	690650		WIRE, Stop -(Used With Armature Magneto, Reference 333A)
356A	690650		WIRE, Stop -(Used With Armature Magneto, Reference 333A)
356A	690650		WIRE, Stop -(Used With Armature Magneto, Reference 333A)
359	691077		WASHER -(Ground Terminal)
359	691077		WASHER -(Ground Terminal)
359	691077		WASHER -(Ground Terminal)
359	691077		WASHER -(Ground Terminal)
359	691077		WASHER -(Ground Terminal)
373	691612		NUT -(Ground Terminal)
373	691612		NUT -(Ground Terminal)

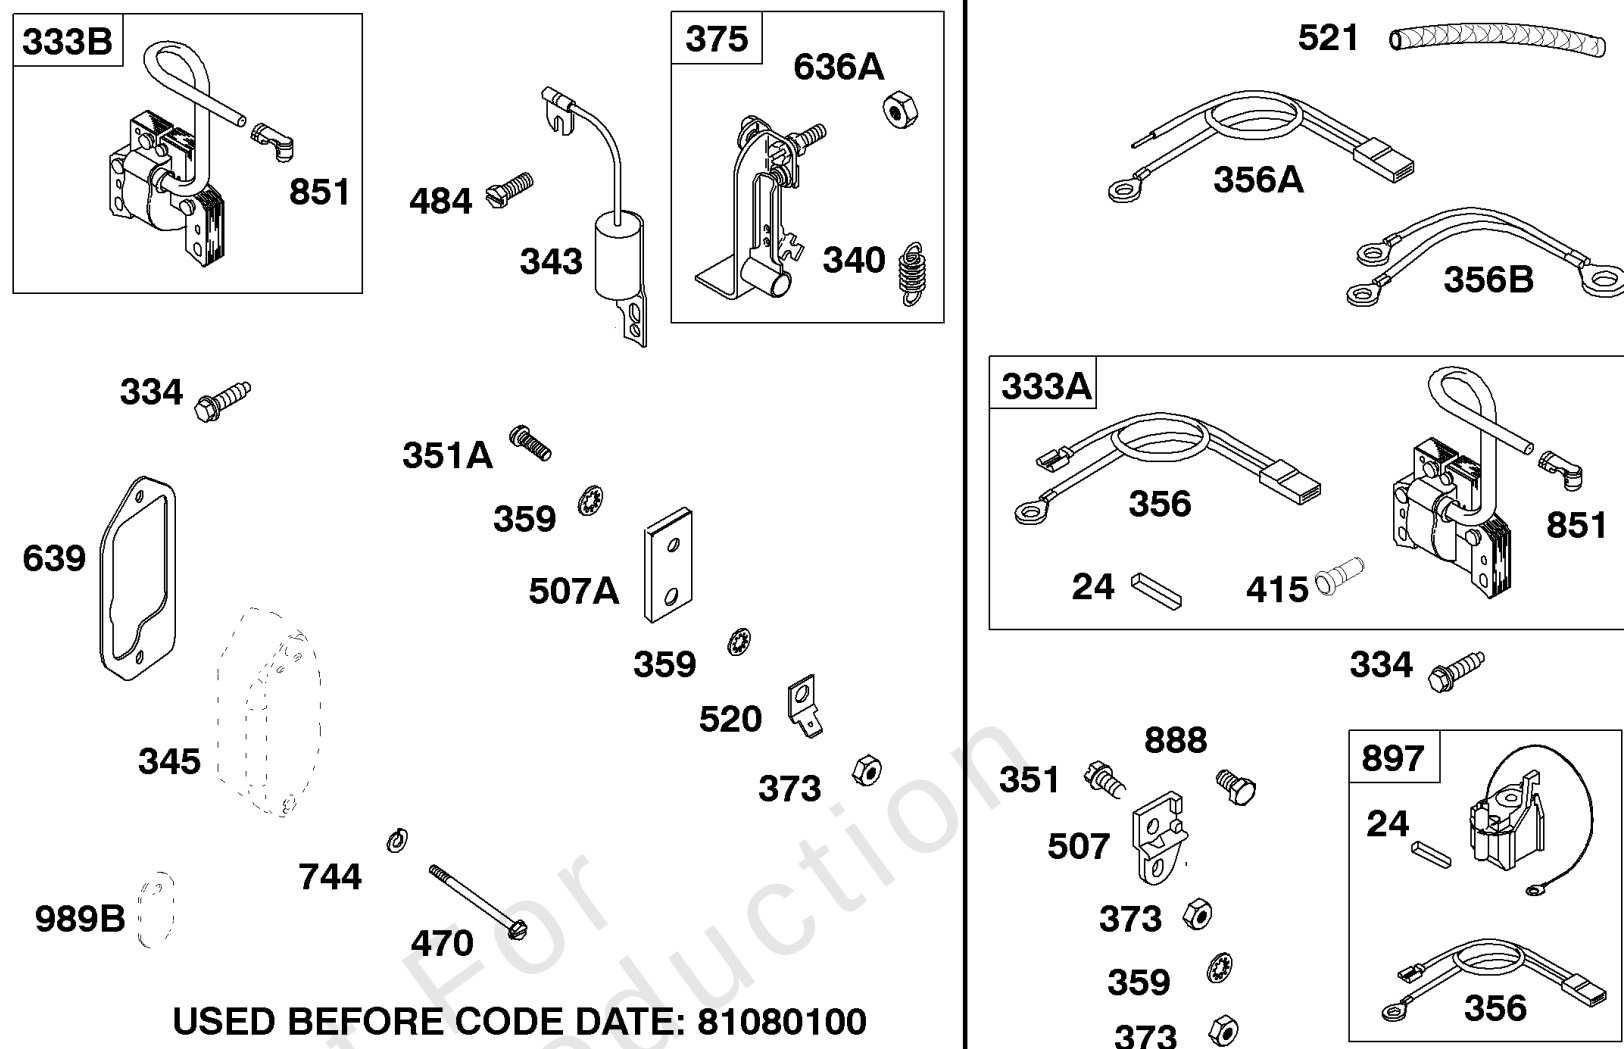 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
24	222698S	Key-Flywheel	356	398808	Wire-Stop	507	690584	Insulator
333A	398811	Armature-Magneto (Breaker Ignition) (Used After Code Date 81073100).	356A	690650	Wire-Stop (Used With Magneto Armature, Reference 333A)	507A	66895	Insulator
333B	298968	Armature-Magneto (Breaker Ignition) (Used Before Code Date 81080100).	356B	396585	Wire-Stop Used on Type No(s). 0643, 0646, 0735.	----- Note ----- 299598 Insulator Used on Type No(s). 0131.		
334	691061	Screw (Magneto Armature)	359	691077	Washer (Ground Terminal)	520	691084	Terminal-Ground
340	26018	Spring-Breaker Arm	373	691612	Nut (Ground Terminal)	521	291508	Shield-Cable
343	298060	Condenser	375	298185	Breaker-Ignition	636A	230783	Nut (Starting Switch)
345		Cover-Breaker (NO LONGER AVAILABLE)	415	692882	Plug	639	692913	Gasket-Breaker Box
351	690292	Screw (Ground Terminal)	470	692836	Screw (Breaker Cover)	744	690277	Washer (Breaker Cover)
351A	690295	Screw (Ground Terminal)	484	690294	Screw (Condenser)	851	493880S	Terminal-Spark Plug
						888	690295	Screw (Insulator)
						897	394970	Kit-MAGNETRON® Ignition (Used After Code Date 81080100 and Before Code Date 85012200).
						989B		Stop Switch-Spark Plug (NO LONGER AVAILABLE)

Armatures, Wires


REF NO	PART NO	QTY	DESCRIPTION
373	691612		NUT -(Ground Terminal)
373	691612		NUT -(Ground Terminal)
373	691612		NUT -(Ground Terminal)
375	298185		BREAKER, Ignition
375	298185		BREAKER, Ignition
375	298185		BREAKER, Ignition
375	298185		BREAKER, Ignition
375	298185		BREAKER, Ignition
415	692882		PLUG
415	692882		PLUG
415	692882		PLUG
415	692882		PLUG
415	692882		PLUG
470	692836		SCREW -(Breaker Cover)
470	692836		SCREW -(Breaker Cover)
470	692836		SCREW -(Breaker Cover)
470	692836		SCREW -(Breaker Cover)
470	692836		SCREW -(Breaker Cover)
484	690294		SCREW -(Condensor)
484	690294		SCREW -(Condensor)
484	690294		SCREW -(Condensor)
484	690294		SCREW -(Condensor)
484	690294		SCREW -(Condensor)
507	690584		INSULATOR
507	690584		INSULATOR
507	690584		INSULATOR
507	690584		INSULATOR
507	690584		INSULATOR
507A	66895		INSULATOR
507A	66895		INSULATOR
507A	66895		INSULATOR
507A	66895		INSULATOR
507A	66895		INSULATOR
520	691084		TERMINAL, Ground
520	691084		TERMINAL, Ground
520	691084		TERMINAL, Ground
520	691084		TERMINAL, Ground
520	691084		TERMINAL, Ground
521	291508		SHIELD, Protective
521	291508		SHIELD, Protective
521	291508		SHIELD, Protective
521	291508		SHIELD, Protective

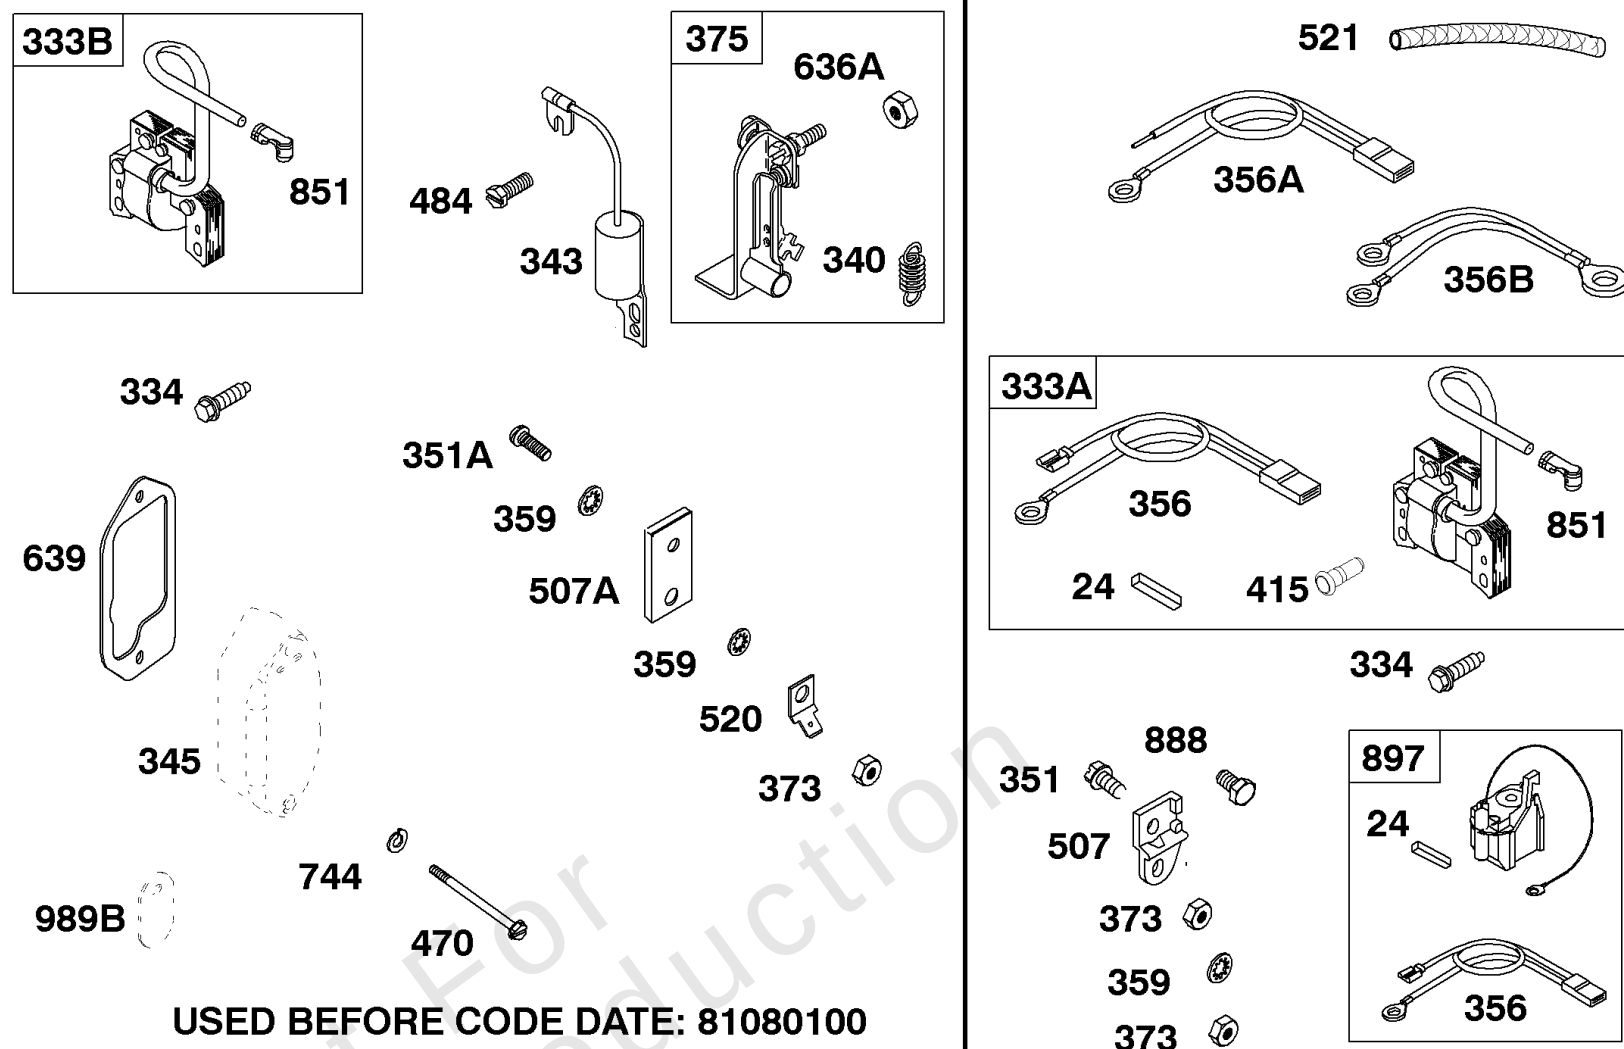 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
24	222698S	Key-Flywheel	356	398808	Wire-Stop	507	690584	Insulator
333A	398811	Armature-Magneto (Breaker Ignition) (Used After Code Date 81073100).	356A	690650	Wire-Stop (Used With Magneto Armature, Reference 333A)	507A	66895	Insulator
333B	298968	Armature-Magneto (Breaker Ignition) (Used Before Code Date 81080100).	356B	396585	Wire-Stop Used on Type No(s). 0643, 0646, 0735.	----- Note ----- 299598 Insulator Used on Type No(s). 0131.		
334	691061	Screw (Magneto Armature)	359	691077	Washer (Ground Terminal)	520	691084	Terminal-Ground
340	26018	Spring-Breaker Arm	373	691612	Nut (Ground Terminal)	521	291508	Shield-Cable
343	298060	Condenser	375	298185	Breaker-Ignition	636A	230783	Nut (Starting Switch)
345		Cover-Breaker (NO LONGER AVAILABLE)	415	692882	Plug	639	692913	Gasket-Breaker Box
351	690292	Screw (Ground Terminal)	470	692836	Screw (Breaker Cover)	744	690277	Washer (Breaker Cover)
351A	690295	Screw (Ground Terminal)	484	690294	Screw (Condenser)	851	493880S	Terminal-Spark Plug
						888	690295	Screw (Insulator)
						897	394970	Kit-MAGNETRON® Ignition (Used After Code Date 81080100 and Before Code Date 85012200).
						989B		Stop Switch-Spark Plug (NO LONGER AVAILABLE)

Armatures, Wires

REF NO	PART NO	QTY	DESCRIPTION
521	291508		SHIELD, Protective
636A	230783		NUT -(Starting Switch)
636A	230783		NUT -(Starting Switch)
636A	230783		NUT -(Starting Switch)
636A	230783		NUT -(Starting Switch)
636A	230783		NUT -(Starting Switch)
639	692913		GASKET, Breaker Box
639	692913		GASKET, Breaker Box
639	692913		GASKET, Breaker Box
639	692913		GASKET, Breaker Box
639	692913		GASKET, Breaker Box
744	690277		WASHER -(Breaker Cover)
744	690277		WASHER -(Breaker Cover)
744	690277		WASHER -(Breaker Cover)
744	690277		WASHER -(Breaker Cover)
744	690277		WASHER -(Breaker Cover)
851	493880S		TERMINAL, Spark Plug
851	493880S		TERMINAL, Spark Plug
851	493880S		TERMINAL, Spark Plug
851	493880S		TERMINAL, Spark Plug
851	493880S		TERMINAL, Spark Plug
888	690295		SCREW -(Insulator)
888	690295		SCREW -(Insulator)
888	690295		SCREW -(Insulator)
888	690295		SCREW -(Insulator)
888	690295		SCREW -(Insulator)
897	394970		KIT, Magnetron Ignition -Used After Code Date 81080100 -Used Before Code Date 85012200
897	394970		KIT, Magnetron Ignition -Used After Code Date 81080100 -Used Before Code Date 85012200
897	394970		KIT, Magnetron Ignition -Used After Code Date 81080100 -Used Before Code Date 85012200
897	394970		KIT, Magnetron Ignition -Used After Code Date 81080100 -Used Before Code Date 85012200
897	394970		KIT, Magnetron Ignition -Used After Code Date 81080100 -Used Before Code Date 85012200
989B	-----		Stop Switch-Spark Plug -(NO LONGER AVAILABLE)
989B	-----		Stop Switch-Spark Plug -(NO LONGER AVAILABLE)

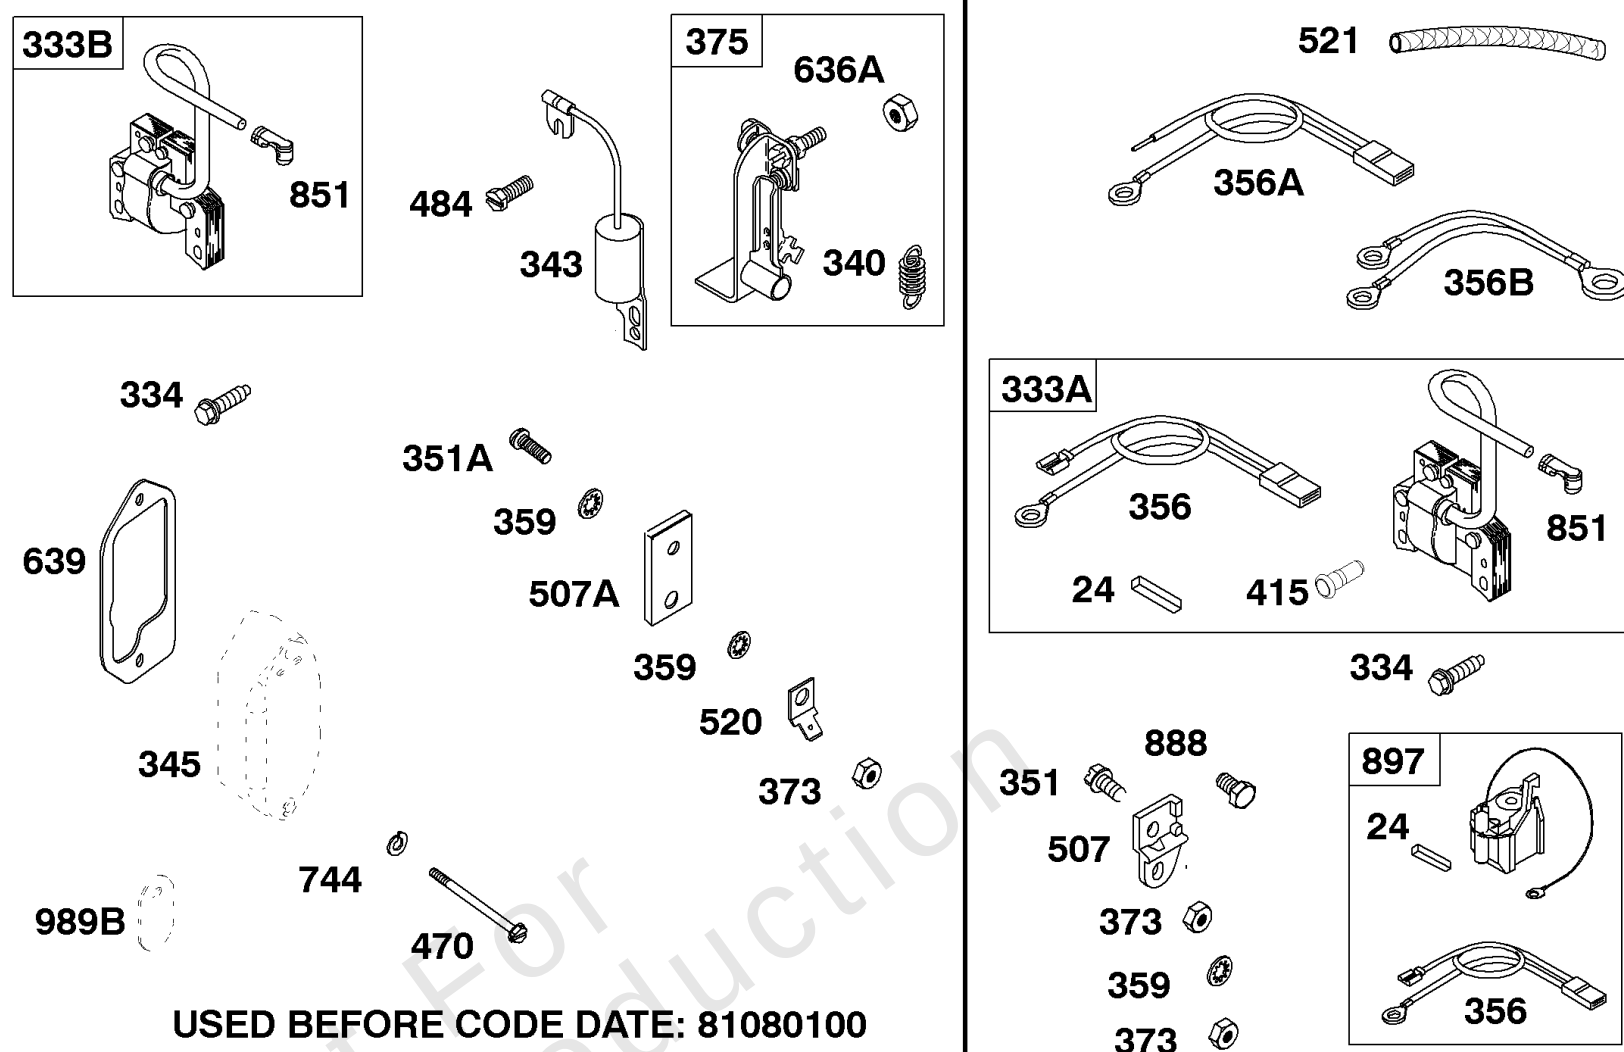 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
24	222698S	Key-Flywheel	356	398808	Wire-Stop	507	690584	Insulator
333A	398811	Armature-Magneto (Breaker Ignition) (Used After Code Date 81073100).	356A	690650	Wire-Stop (Used With Magneto Armature, Reference 333A)	507A	66895	Insulator
333B	298968	Armature-Magneto (Breaker Ignition) (Used Before Code Date 81080100).	356B	396585	Wire-Stop Used on Type No(s). 0643, 0646, 0735.	----- Note ----- 299598 Insulator Used on Type No(s). 0131.		
334	691061	Screw (Magneto Armature)	359	691077	Washer (Ground Terminal)	520	691084	Terminal-Ground
340	26018	Spring-Breaker Arm	373	691612	Nut (Ground Terminal)	521	291508	Shield-Cable
343	298060	Condenser	375	298185	Breaker-Ignition	636A	230783	Nut (Starting Switch)
345		Cover-Breaker (NO LONGER AVAILABLE)	415	692882	Plug	639	692913	Gasket-Breaker Box
351	690292	Screw (Ground Terminal)	470	692836	Screw (Breaker Cover)	744	690277	Washer (Breaker Cover)
351A	690295	Screw (Ground Terminal)	484	690294	Screw (Condenser)	851	493880S	Terminal-Spark Plug
						888	690295	Screw (Insulator)
						897	394970	Kit-MAGNETRON® Ignition (Used After Code Date 81080100 and Before Code Date 85012200).
						989B		Stop Switch-Spark Plug (NO LONGER AVAILABLE)

Armatures, Wires

REF NO	PART NO	QTY	DESCRIPTION
989B	-----		Stop Switch-Spark Plug -(NO LONGER AVAILABLE)
989B	-----		Stop Switch-Spark Plug -(NO LONGER AVAILABLE)
989B	-----		Stop Switch-Spark Plug -(NO LONGER AVAILABLE)

 Not For Reproduction

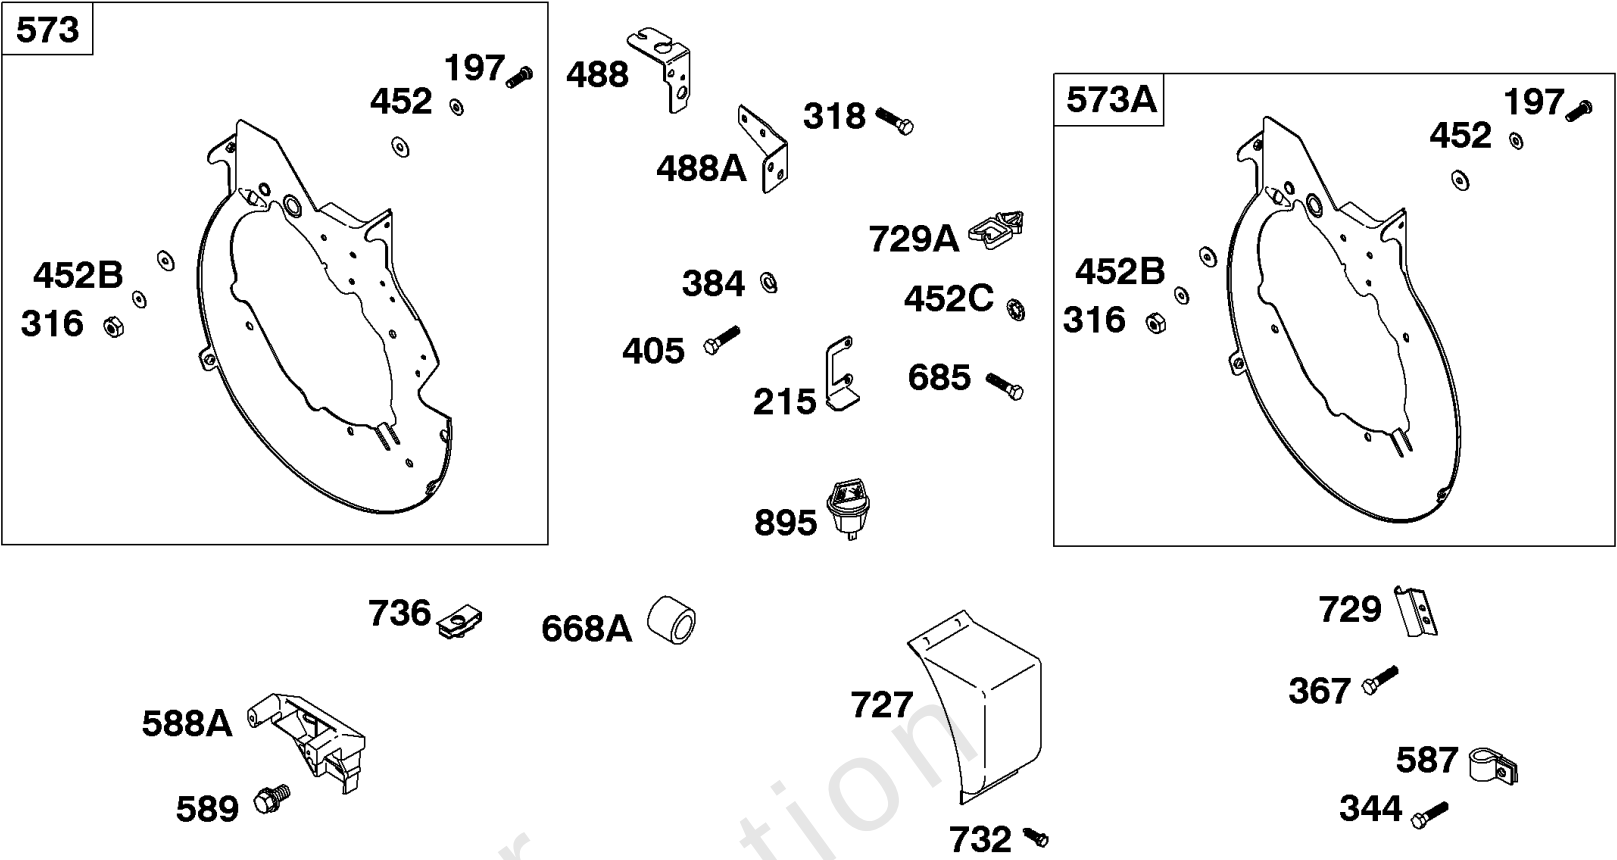

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
197	90072	Screw (Back Plate)	452	92864	Washer (Back Plate)	668A	231065	Spacer Used on Type No(s). 0164, 0240.
215	222445	Guide-Air	452B	26404	Washer (Back Plate)	685	690661	Screw (Rectifier)
316	691612	Nut (Back Plate)	452C	691077	Washer (Back Plate)	727	692338	Cover-Starter Drive
318	691666	Screw (Mounting Bracket)	488	222211	Bracket-Fuse	729	690432	Clip-Wire (Alternator)
344	690305	Screw (Cable Clamp)	488A	222345	Bracket-Fuse	729A	690588	Clip-Wire
367	690305	Screw (Wire Clip)	573	391220	Plate-Back (Used on Engines With Electric Start Only)	732	93410	Screw (Starter Drive Cover)
384	690371	Washer (Back Plate)	573A	299450	Plate-Back	736	690302	Nut-Clip
405	690290	Screw (Back Plate)	587	690389	Clamp-Cable	895	692309	Switch-Rotary
			588A	690375	Bracket-Armature (Used on Engines With Electric Starter)			
			589	690300	Screw (Armature Bracket)			

Back Plates


REF NO	PART NO	QTY	DESCRIPTION
197	90072		SCREW -(Back Plate)
197	90072		SCREW -(Back Plate)
197	90072		SCREW -(Back Plate)
197	90072		SCREW -(Back Plate)
197	90072		SCREW -(Back Plate)
215	222445		GUIDE, Air
215	222445		GUIDE, Air
215	222445		GUIDE, Air
215	222445		GUIDE, Air
215	222445		GUIDE, Air
316	691612		NUT -(Back Plate)
316	691612		NUT -(Back Plate)
316	691612		NUT -(Back Plate)
316	691612		NUT -(Back Plate)
316	691612		NUT -(Back Plate)
318	691666		SCREW -(Mounting Bracket)
318	691666		SCREW -(Mounting Bracket)
318	691666		SCREW -(Mounting Bracket)
318	691666		SCREW -(Mounting Bracket)
318	691666		SCREW -(Mounting Bracket)
344	690305		SCREW -(Cable Clamp)
344	690305		SCREW -(Cable Clamp)
344	690305		SCREW -(Cable Clamp)
344	690305		SCREW -(Cable Clamp)
344	690305		SCREW -(Cable Clamp)
367	690305		SCREW -(Wire Clip)
367	690305		SCREW -(Wire Clip)
367	690305		SCREW -(Wire Clip)
367	690305		SCREW -(Wire Clip)
367	690305		SCREW -(Wire Clip)
384	690371		WASHER -(Back Plate)
384	690371		WASHER -(Back Plate)



73

Back Plates


REF NO	PART NO	QTY	DESCRIPTION
384	690371		WASHER -(Back Plate)
384	690371		WASHER -(Back Plate)
384	690371		WASHER -(Back Plate)
405	690290		SCREW -(Back Plate)
405	690290		SCREW -(Back Plate)
405	690290		SCREW -(Back Plate)
405	690290		SCREW -(Back Plate)
405	690290		SCREW -(Back Plate)
452	92864		WASHER -(Back Plate)
452	92864		WASHER -(Back Plate)
452	92864		WASHER -(Back Plate)
452	92864		WASHER -(Back Plate)
452	92864		WASHER -(Back Plate)
452B	26404		WASHER -(Back Plate)
452B	26404		WASHER -(Back Plate)
452B	26404		WASHER -(Back Plate)
452B	26404		WASHER -(Back Plate)
452B	26404		WASHER -(Back Plate)
452C	691077		WASHER -(Back Plate)
452C	691077		WASHER -(Back Plate)
452C	691077		WASHER -(Back Plate)
452C	691077		WASHER -(Back Plate)
452C	691077		WASHER -(Back Plate)
488	222211		BRACKET, Mounting
488	222211		BRACKET, Mounting
488	222211		BRACKET, Mounting
488	222211		BRACKET, Mounting
488	222211		BRACKET, Mounting
488A	222345		BRACKET, Mounting
488A	222345		BRACKET, Mounting
488A	222345		BRACKET, Mounting
488A	222345		BRACKET, Mounting
488A	222345		BRACKET, Mounting
573	391220		PLATE, Back -(Number 0484)

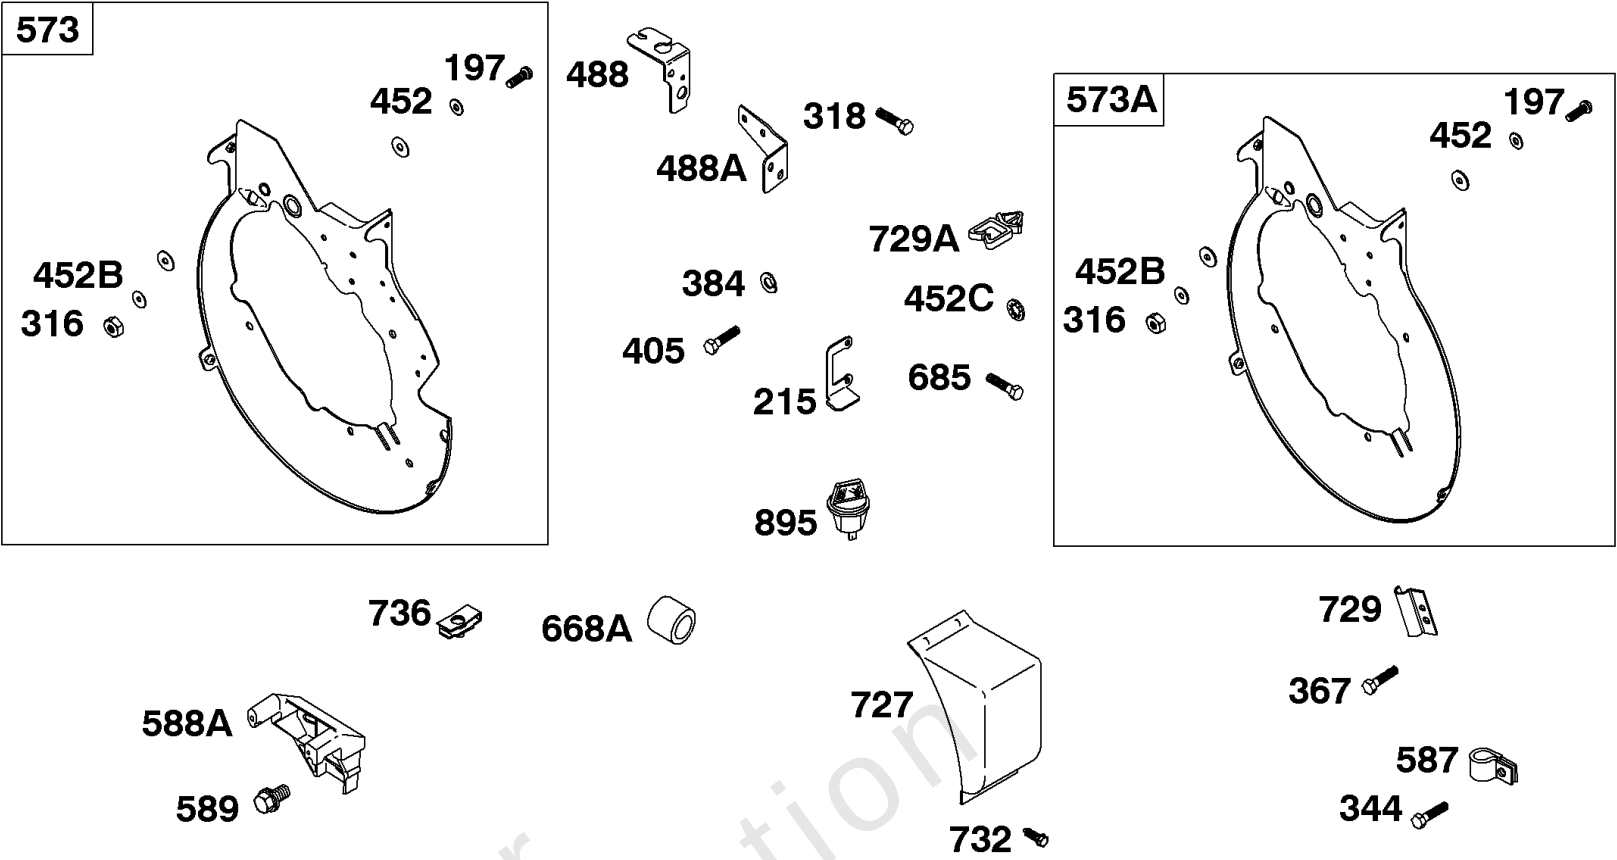 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
197	90072	Screw (Back Plate)	452	92864	Washer (Back Plate)	668A	231065	Spacer Used on Type No(s). 0164, 0240.
215	222445	Guide-Air	452B	26404	Washer (Back Plate)	685	690661	Screw (Rectifier)
316	691612	Nut (Back Plate)	452C	691077	Washer (Back Plate)	727	692338	Cover-Starter Drive
318	691666	Screw (Mounting Bracket)	488	222211	Bracket-Fuse	729	690432	Clip-Wire (Alternator)
344	690305	Screw (Cable Clamp)	488A	222345	Bracket-Fuse	729A	690588	Clip-Wire
367	690305	Screw (Wire Clip)	573	391220	Plate-Back (Used on Engines With Electric Start Only)	732	93410	Screw (Starter Drive Cover)
384	690371	Washer (Back Plate)	573A	299450	Plate-Back	736	690302	Nut-Clip
405	690290	Screw (Back Plate)	587	690389	Clamp-Cable	895	692309	Switch-Rotary
			588A	690375	Bracket-Armature (Used on Engines With Electric Starter)			
			589	690300	Screw (Armature Bracket)			

Back Plates


REF NO	PART NO	QTY	DESCRIPTION
573	391220		PLATE, Back -(Number 0484)
573	391220		PLATE, Back -(Number 0484)
573	391220		PLATE, Back -(Number 0484)
573	391220		PLATE, Back -(Number 0484)
573A	299450		PLATE, Back
573A	299450		PLATE, Back
573A	299450		PLATE, Back
573A	299450		PLATE, Back
573A	299450		PLATE, Back
587	690389		CLAMP, Cable
587	690389		CLAMP, Cable
587	690389		CLAMP, Cable
587	690389		CLAMP, Cable
587	690389		CLAMP, Cable
588A	690375		BRACKET, Armature -(Number 0484)
588A	690375		BRACKET, Armature -(Number 0484)
588A	690375		BRACKET, Armature -(Number 0484)
588A	690375		BRACKET, Armature -(Number 0484)
588A	690375		BRACKET, Armature -(Number 0484)
589	690300		SCREW -(Armature Bracket)
589	690300		SCREW -(Armature Bracket)
589	690300		SCREW -(Armature Bracket)
589	690300		SCREW -(Armature Bracket)
589	690300		SCREW -(Armature Bracket)
685	690661		SCREW -(Rectifier)
685	690661		SCREW -(Rectifier)
685	690661		SCREW -(Rectifier)
685	690661		SCREW -(Rectifier)
685	690661		SCREW -(Rectifier)
727	692338		COVER-STARTER DRIVE
727	692338		COVER-STARTER DRIVE
727	692338		COVER-STARTER DRIVE
727	692338		COVER-STARTER DRIVE
727	692338		COVER-STARTER DRIVE
729	690432		CLIP, Wire -(Alternator)
729	690432		CLIP, Wire -(Alternator)

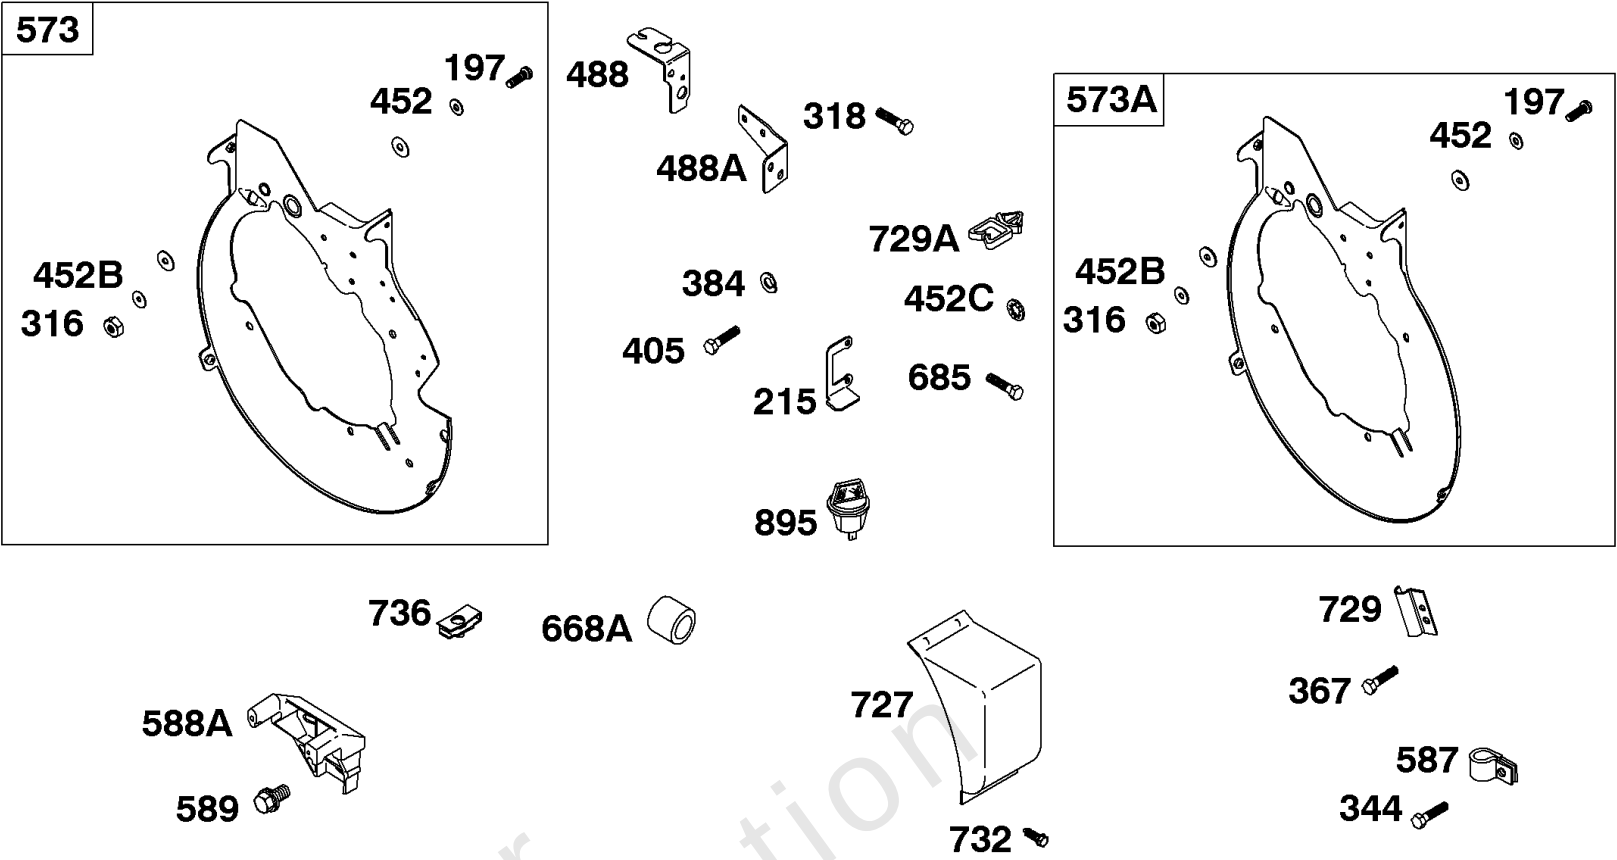 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
197	90072	Screw (Back Plate)	452	92864	Washer (Back Plate)	668A	231065	Spacer Used on Type No(s). 0164, 0240.
215	222445	Guide-Air	452B	26404	Washer (Back Plate)	685	690661	Screw (Rectifier)
316	691612	Nut (Back Plate)	452C	691077	Washer (Back Plate)	727	692338	Cover-Starter Drive
318	691666	Screw (Mounting Bracket)	488	222211	Bracket-Fuse	729	690432	Clip-Wire (Alternator)
344	690305	Screw (Cable Clamp)	488A	222345	Bracket-Fuse	729A	690588	Clip-Wire
367	690305	Screw (Wire Clip)	573	391220	Plate-Back (Used on Engines With Electric Start Only)	732	93410	Screw (Starter Drive Cover)
384	690371	Washer (Back Plate)	573A	299450	Plate-Back	736	690302	Nut-Clip
405	690290	Screw (Back Plate)	587	690389	Clamp-Cable	895	692309	Switch-Rotary
			588A	690375	Bracket-Armature (Used on Engines With Electric Starter)			
			589	690300	Screw (Armature Bracket)			

Back Plates


REF NO	PART NO	QTY	DESCRIPTION
729	690432		CLIP, Wire -(Alternator)
729	690432		CLIP, Wire -(Alternator)
729	690432		CLIP, Wire -(Alternator)
729A	690588		CLIP, Wire
729A	690588		CLIP, Wire
729A	690588		CLIP, Wire
729A	690588		CLIP, Wire
729A	690588		CLIP, Wire
732	93410		SCREW -(Starter Drive Cover)
732	93410		SCREW -(Starter Drive Cover)
732	93410		SCREW -(Starter Drive Cover)
732	93410		SCREW -(Starter Drive Cover)
732	93410		SCREW -(Starter Drive Cover)
736	690302		NUT
736	690302		NUT
736	690302		NUT
736	690302		NUT
736	690302		NUT
895	692309		SWITCH, Rotary
895	692309		SWITCH, Rotary
895	692309		SWITCH, Rotary
895	692309		SWITCH, Rotary
895	692309		SWITCH, Rotary

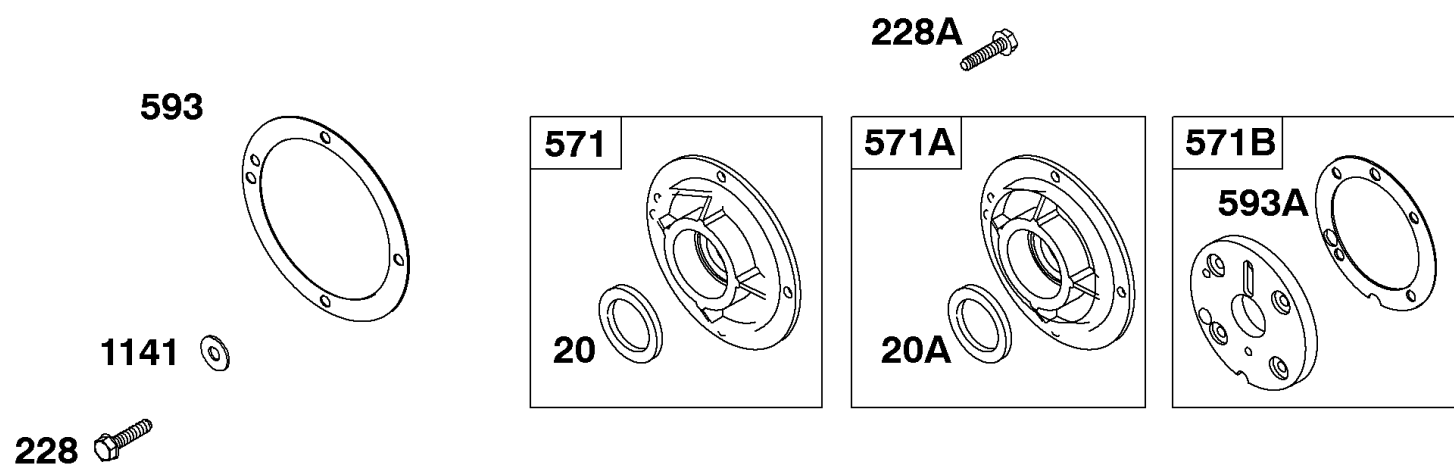 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
20	691948	Seal-Oil (PTO Side)			0359, 0361, 0368, 0373, 0374, 0383, 0385, 0395, 0396, 0634, 0636, 0648, 0650, 0656, 0661, 0666, 0670, 0671, 0674, 0675, 0684, 0686, 0690, 0692, 0693, 0696, 0698, 0699, 0702, 0703, 0706, 0708, 0709, 0714, 0717, 0721, 0724, 0726, 0732, 0733, 0735, 0737, 0739, 0740, 0743, 0744, 0745, 0746, 0750, 0751, 0752, 0753, 0754, 0755, 0757, 0759, 0771, 0776, 0780, 0783, 0784, 0789, 0794, 0801, 0802, 2522, 2550, 2562, 2563, 2596.	571B	299705	Support-Bearing (Magnetto Side)
20A	291675S	Seal-Oil (PTO Side)				593	691311	Gasket-Bearing Support
228	691681	Screw (Bearing Support)				593A	270513	Gasket-Bearing Support (.015" Thick)
228A	691058	Screw (Bearing Support)				----- Note -----		
571	391062	Support-Bearing					270514	Gasket-Bearing Support (.010" Thick)
571A	291665	Support-Bearing Used on Type No(s). 0022, 0050, 0062, 0063, 0112, 0113, 0114, 0116, 0130, 0143, 0147, 0149, 0150, 0151, 0153, 0156, 0160, 0167, 0171, 0172, 0173, 0174, 0175, 0176, 0183, 0185, 0186, 0188, 0192, 0193, 0196, 0197, 0198, 0205, 0208, 0209, 0216, 0217, 0219, 0224, 0233, 0235, 0236, 0241, 0242, 0244, 0247, 0255, 0256, 0257, 0260, 0261, 0265, 0266, 0269, 0272, 0273, 0277, 0278, 0279, 0285, 0286, 0287, 0290, 0291, 0292, 0296, 0297, 0302, 0303, 0304, 0310, 0312, 0318, 0327, 0329, 0334, 0337, 0338, 0340, 0344, 0345, 0347, 0357,					270515	Gasket-Bearing Support (.005" Thick)
					----- Note ----- 291710 Support-Bearing Used on Type No(s). 0647, 0668, 0682, 0713, 0717, 0755, 0772, 0782, 0788, 0790, 0792, 0793, 0801, 0804, 2521, 2530.	1141	690402	Washer (Bearing Support)

Bearing Supports, Gaskets



REF NO	PART NO	QTY	DESCRIPTION
20	691948		SEAL, Oil -(PTO Side)
20	691948		SEAL, Oil -(PTO Side)
20	691948		SEAL, Oil -(PTO Side)
20	691948		SEAL, Oil -(PTO Side)
20	691948		SEAL, Oil -(PTO Side)
20A	291675S		SEAL, Oil -(PTO Side)
20A	291675S		SEAL, Oil -(PTO Side)
20A	291675S		SEAL, Oil -(PTO Side)
20A	291675S		SEAL, Oil -(PTO Side)
20A	291675S		SEAL, Oil -(PTO Side)
228	691681		SCREW -(Bearing Support)
228	691681		SCREW -(Bearing Support)
228	691681		SCREW -(Bearing Support)
228	691681		SCREW -(Bearing Support)
228	691681		SCREW -(Bearing Support)
228A	691058		SCREW -(Bearing Support)
228A	691058		SCREW -(Bearing Support)
228A	691058		SCREW -(Bearing Support)
228A	691058		SCREW -(Bearing Support)
228A	691058		SCREW -(Bearing Support)
571A	291665		SUPPORT, Bearing -(Ball Bearing)
571A	291665		SUPPORT, Bearing -(Ball Bearing)
571A	291665		SUPPORT, Bearing -(Ball Bearing)
571A	291665		SUPPORT, Bearing -(Ball Bearing)
571A	291665		SUPPORT, Bearing -(Ball Bearing)
593	691311		GASKET, Crankcase Cover
593	691311		GASKET, Crankcase Cover
593	691311		GASKET, Crankcase Cover
593	691311		GASKET, Crankcase Cover
593	691311		GASKET, Crankcase Cover
593A	270514		GASKET, Bearing Support -(.010)
593A	270513		GASKET, Bearing Support -(.015)

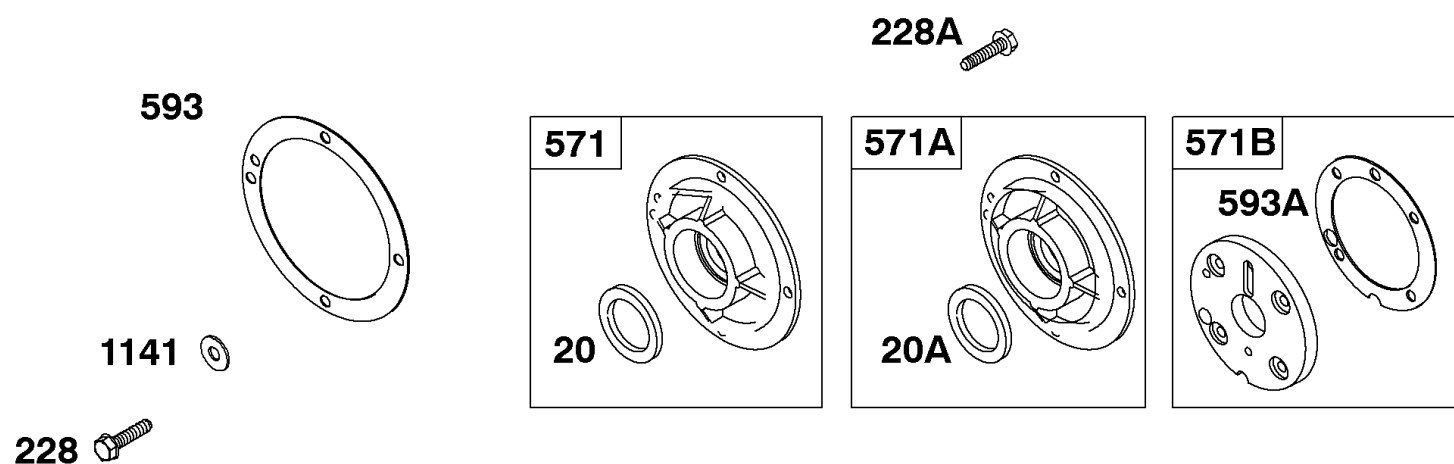 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
20	691948	Seal-Oil (PTO Side)			0359, 0361, 0368, 0373, 0374, 0383, 0385, 0395, 0396, 0634, 0636, 0648, 0650, 0656, 0661, 0666, 0670, 0671, 0674, 0675, 0684, 0686, 0690, 0692, 0693, 0696, 0698, 0699, 0702, 0703, 0706, 0708, 0709, 0714, 0717, 0721, 0724, 0726, 0732, 0733, 0735, 0737, 0739, 0740, 0743, 0744, 0745, 0746, 0750, 0751, 0752, 0753, 0754, 0755, 0757, 0759, 0771, 0776, 0780, 0783, 0784, 0789, 0794, 0801, 0802, 2522, 2550, 2562, 2563, 2596.	571B	299705	Support-Bearing (Magnetto Side)
20A	291675S	Seal-Oil (PTO Side)				593	691311	Gasket-Bearing Support
228	691681	Screw (Bearing Support)				593A	270513	Gasket-Bearing Support (.015" Thick)
228A	691058	Screw (Bearing Support)				----- Note -----		
571	391062	Support-Bearing					270514	Gasket-Bearing Support (.010" Thick)
571A	291665	Support-Bearing Used on Type No(s). 0022, 0050, 0062, 0063, 0112, 0113, 0114, 0116, 0130, 0143, 0147, 0149, 0150, 0151, 0153, 0156, 0160, 0167, 0171, 0172, 0173, 0174, 0175, 0176, 0183, 0185, 0186, 0188, 0192, 0193, 0196, 0197, 0198, 0205, 0208, 0209, 0216, 0217, 0219, 0224, 0233, 0235, 0236, 0241, 0242, 0244, 0247, 0255, 0256, 0257, 0260, 0261, 0265, 0266, 0269, 0272, 0273, 0277, 0278, 0279, 0285, 0286, 0287, 0290, 0291, 0292, 0296, 0297, 0302, 0303, 0304, 0310, 0312, 0318, 0327, 0329, 0334, 0337, 0338, 0340, 0344, 0345, 0347, 0357,					270515	Gasket-Bearing Support (.005" Thick)
					----- Note ----- 291710 Support-Bearing Used on Type No(s). 0647, 0668, 0682, 0713, 0717, 0755, 0772, 0782, 0788, 0790, 0792, 0793, 0801, 0804, 2521, 2530.	1141	690402	Washer (Bearing Support)

Bearing Supports, Gaskets


REF NO	PART NO	QTY	DESCRIPTION
593A	270513		GASKET, Bearing Support -(.015)
593A	270514		GASKET, Bearing Support -(.010)
593A	270515		GASKET, Bearing Support -(.005)
593A	270514		GASKET, Bearing Support -(.010)
593A	270513		GASKET, Bearing Support -(.015)
593A	270515		GASKET, Bearing Support -(.005)
593A	270515		GASKET, Bearing Support -(.005)
593A	270514		GASKET, Bearing Support -(.010)
593A	270515		GASKET, Bearing Support -(.005)
593A	270513		GASKET, Bearing Support -(.015)
593A	270515		GASKET, Bearing Support -(.005)
593A	270514		GASKET, Bearing Support -(.010)
593A	270513		GASKET, Bearing Support -(.015)
1141	690402		WASHER -(Bearing Support)
1141	690402		WASHER -(Bearing Support)
1141	690402		WASHER -(Bearing Support)
1141	690402		WASHER -(Bearing Support)
1141	690402		WASHER -(Bearing Support)

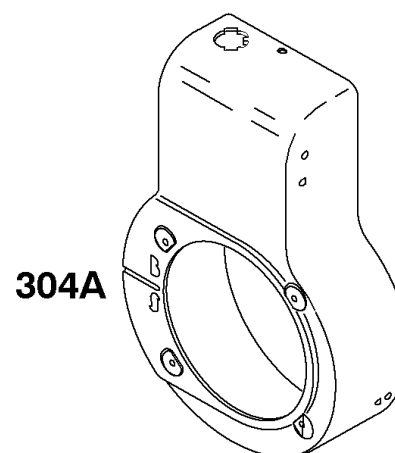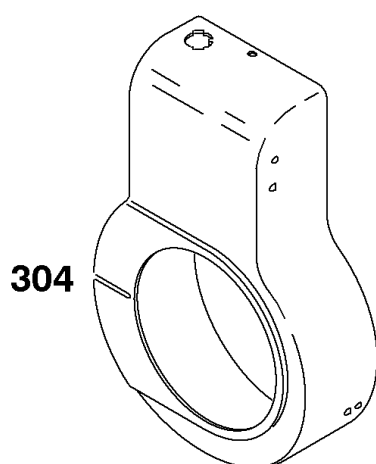  

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
304	294698	Housing-Blower ----- Note ----- 297010 Housing-Blower Used on Type No(s). 0060, 0119, 0160, 0197, 0216, 0223, 0237. 297453 Housing-Blower Used on Type No(s). 0020, 0023, 0050, 0136, 0139, 0140, 0145, 0150, 0151, 0152, 0155, 0159, 0175, 0181, 0183, 0191, 0199, 0203, 0204, 0205, 0206, 0208, 0212, 0218, 0219, 0226, 0227, 0228, 0254, 0255, 0259. 391229 Housing-Blower Used on Type No(s). 0027, 0028, 0063, 0115, 0123, 0126, 0135, 0143, 0148, 0149, 0162, 0163, 0165, 0167, 0168, 0170, 0171, 0172, 0174, 0178, 0180, 0182, 0184, 0185, 0188, 0189, 0192, 0193, 0198, 0201, 0209, 0210, 0211, 0213, 0215, 0217, 0221, 0224, 0229, 0230, 0231, 0234, 0235, 0236, 0238,			0248, 0249, 0259, 0251, 0252, 0257, 0261, 0262, 0265, 0271, 0273, 0275, 0276, 0277, 0278, 0279, 0281, 0282, 0283, 0284, 0285, 0286, 0287, 0288, 0296, 0298, 0303, 0304, 0306, 0307, 0309, 0310, 0311, 0315, 0316, 0317, 0318, 0319, 0320, 0321, 0322, 0323, 0324, 0325, 0326, 0328, 0330, 0331, 0332, 0333, 0334, 0337, 0338, 0340, 0343, 0347, 0348, 0349, 0350, 0351, 0353, 0355, 0358, 0359, 0360, 0363, 0364, 0367, 0370, 0371, 0372, 0374, 0375, 0376, 0377, 0378, 0379, 0381, 0382, 0383, 0388, 0389, 0392, 0394, 0399, 0630, 0634, 0636, 0638, 0640, 0643, 0649, 0653, 0654, 0658, 0660, 0661, 0663, 0665, 0666, 0667, 0668, 0669, 0671, 0672, 0673, 0675, 0676, 0678, 0679, 0680, 0684, 0685, 0687, 0688, 0692, 0693, 0697, 0698, 0699,			0701, 0702, 0703, 0704, 0705, 0707, 0708, 0712, 0714, 0715, 0716, 0718, 0720, 0721, 0724, 0725, 0729, 0731, 0733, 0736, 0738, 0741, 0742, 0746, 0748, 0749, 0751, 0752, 0753, 0754, 0760, 0761, 0764, 0765, 0770, 0771, 0772, 0774, 0776, 0779, 0782, 0783, 0784, 0787, 0789, 0797, 2527, 2528, 2563, 2596. 692359 Housing-Blower Used on Type No(s). 0682. 395513 Housing-Blower Used on Type No(s). 0711, 0719, 0732, 0740, 0781, 2529. 399177 Housing-Blower Used on Type No(s). 0758, 0788. 304A 392343 Housing-Blower (Low Profile) Used on Type No(s). 0713, 0744, 0750, 0755, 0759, 0780, 0785, 0786, 2561, 2562. 305 692198 Screw (Blower Housing)

Blower Housings


REF NO	PART NO	QTY	DESCRIPTION
304	294698		HOUSING, Blower
304	294698		HOUSING, Blower
304	294698		HOUSING, Blower
304	294698		HOUSING, Blower
304	294698		HOUSING, Blower
305	692198		SCREW -(Blower Housing)
305	692198		SCREW -(Blower Housing)
305	692198		SCREW -(Blower Housing)
305	692198		SCREW -(Blower Housing)
305	692198		SCREW -(Blower Housing)

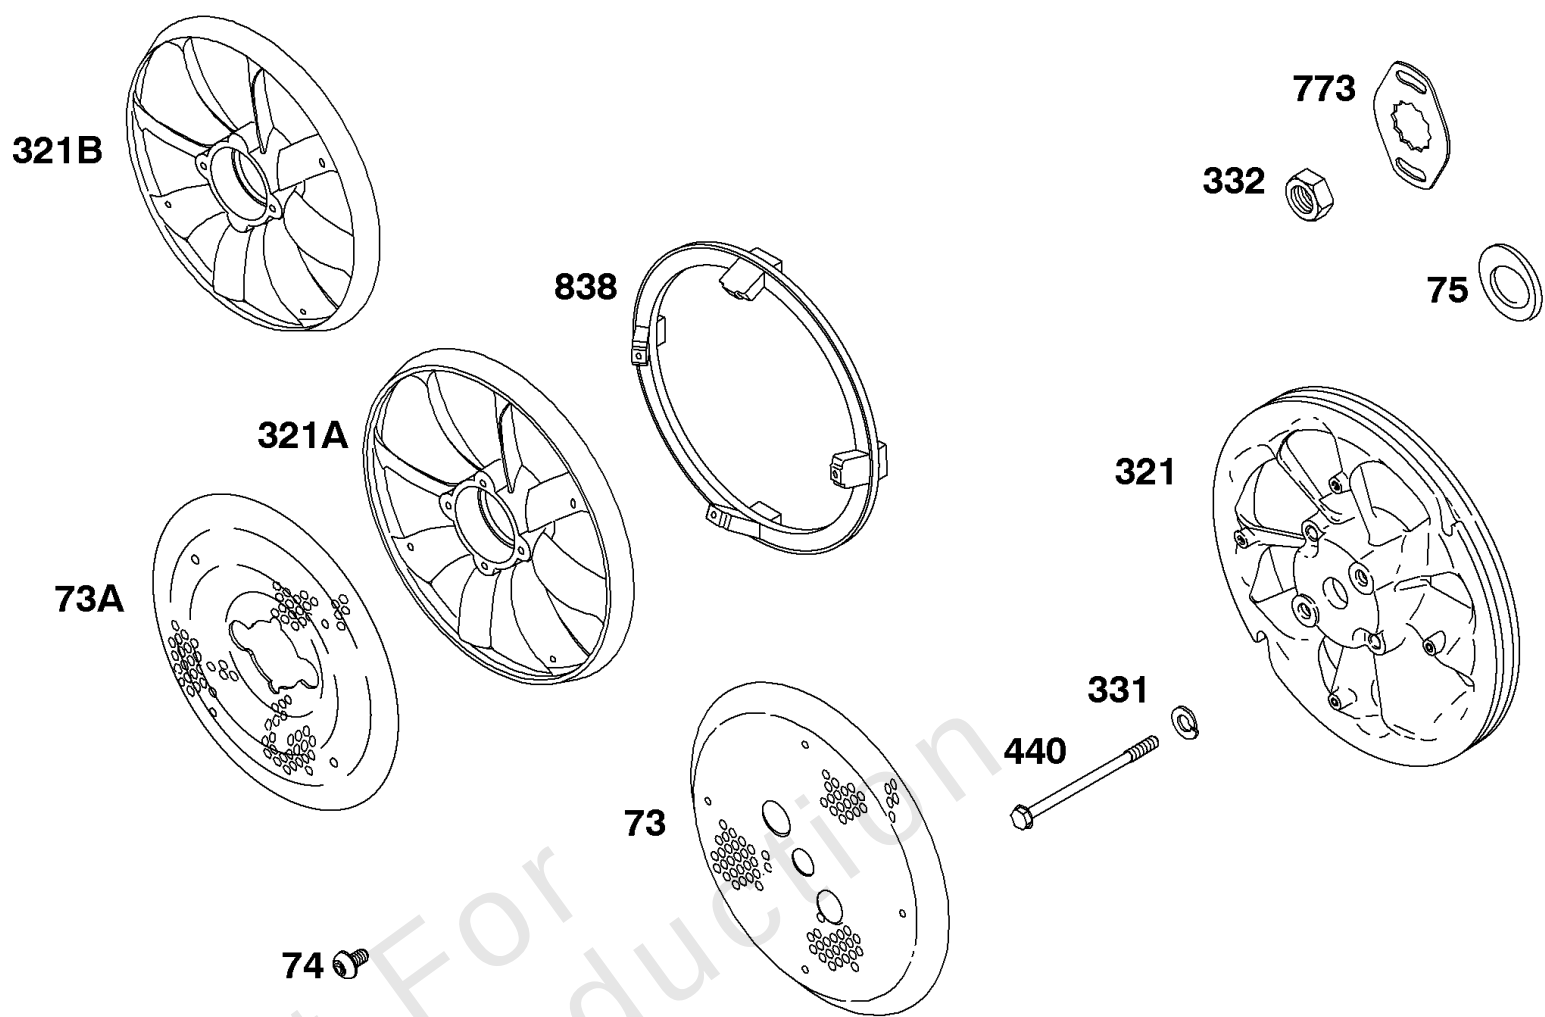 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
73	691171	Screen-Rotating ----- Note ----- 690404 Screen-Rotating Used on Type No(s). 0127, 0133, 0182, 0190, 0210, 0222, 0252, 0262, 0315, 0333, 0630, 0649, 2582, 2583.	74	691655	Screw (Rotating Screen)	440	691076	Screw (Booster Fan)
73A	690410	Screen-Rotating	75	691056	Washer (Flywheel)	773	690265	Retainer
			321	691151	Fan-Booster	838	211983	Adapter-Blower Housing Ring
			321A	690377	Fan-Booster			
			321B	212000	Fan-Booster			
			331	691075	Washer (Booster Fan)			
			332	691059	Nut (Flywheel)			

Booster Fans, Rotating Screens


REF NO	PART NO	QTY	DESCRIPTION
73	691171		SCREEN, Rotating
73	691171		SCREEN, Rotating
73	691171		SCREEN, Rotating
73	691171		SCREEN, Rotating
73	691171		SCREEN, Rotating
73A	690410		SCREEN, Rotating
73A	690410		SCREEN, Rotating
73A	690410		SCREEN, Rotating
73A	690410		SCREEN, Rotating
73A	690410		SCREEN, Rotating
74	691655		SCREW -(Rotating Screen)
74	691655		SCREW -(Rotating Screen)
74	691655		SCREW -(Rotating Screen)
74	691655		SCREW -(Rotating Screen)
74	691655		SCREW -(Rotating Screen)
75	691056		WASHER -(Flywheel)
75	691056		WASHER -(Flywheel)
75	691056		WASHER -(Flywheel)
75	691056		WASHER -(Flywheel)
75	691056		WASHER -(Flywheel)
321	691151		FAN, Booster
321	691151		FAN, Booster
321	691151		FAN, Booster
321	691151		FAN, Booster
321	691151		FAN, Booster
321A	690377		FAN-BOOSTER
321A	690377		FAN-BOOSTER
321A	690377		FAN-BOOSTER
321A	690377		FAN-BOOSTER
321A	690377		FAN-BOOSTER
321B	212000		FAN, Booster
321B	212000		FAN, Booster
321B	212000		FAN, Booster
321B	212000		FAN, Booster
321B	212000		FAN, Booster
331	691075		WASHER -(Booster Fan)
331	691075		WASHER -(Booster Fan)
331	691075		WASHER -(Booster Fan)
331	691075		WASHER -(Booster Fan)
331	691075		WASHER -(Booster Fan)

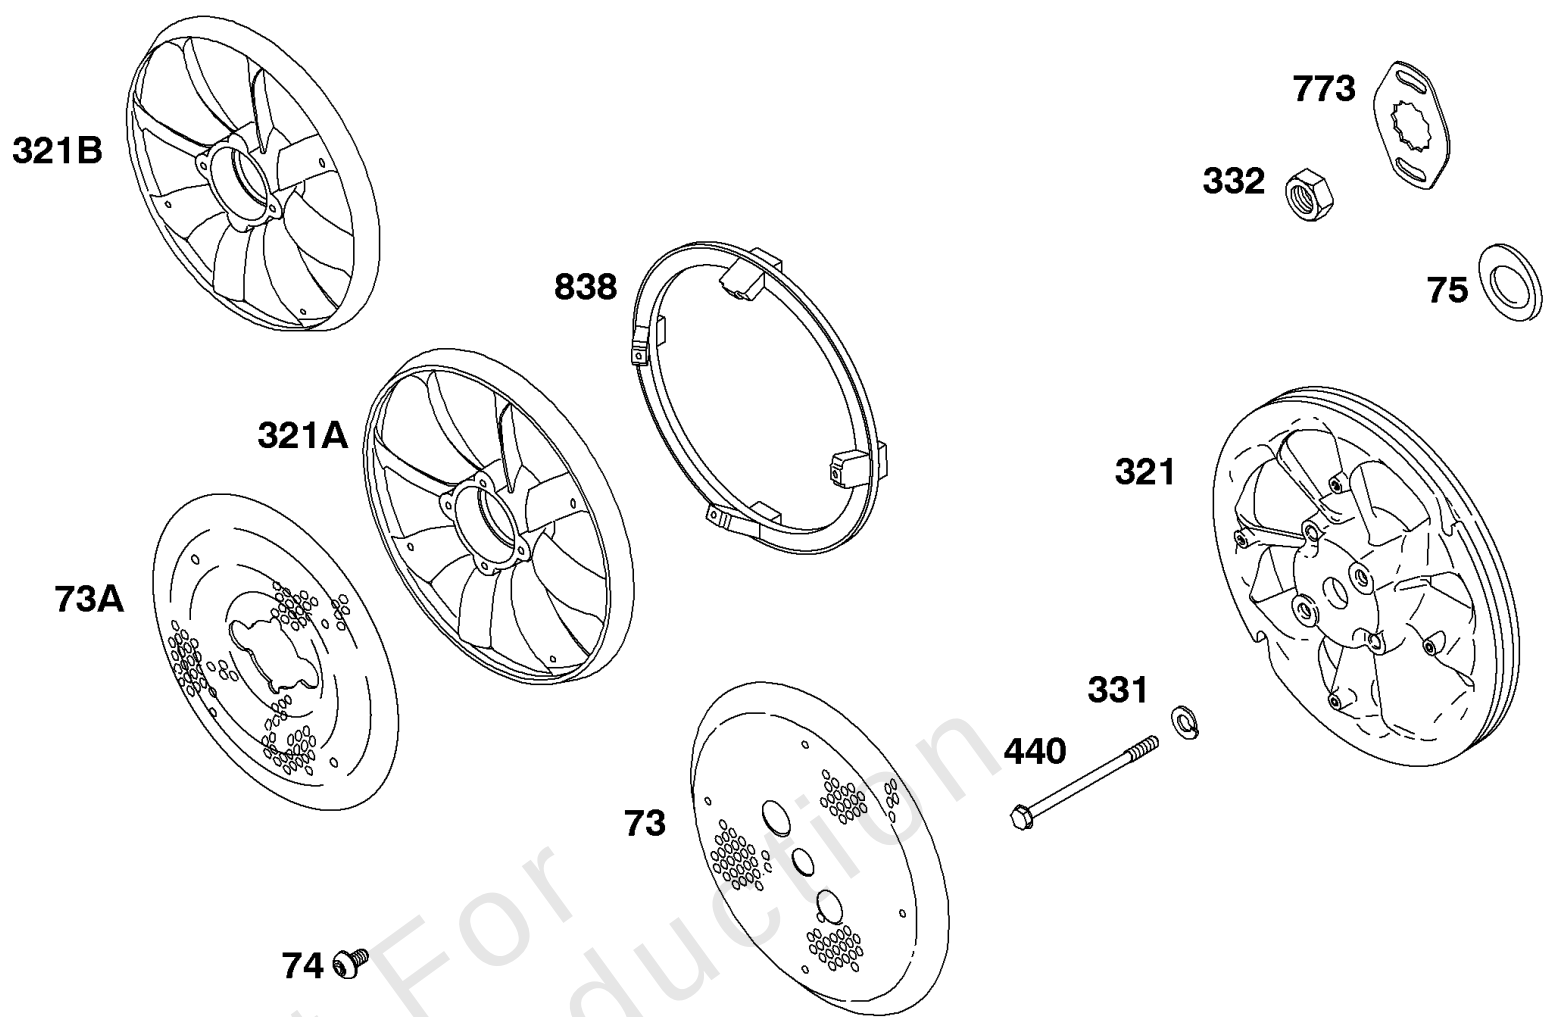 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
73	691171	Screen-Rotating ----- Note ----- 690404 Screen-Rotating Used on Type No(s). 0127, 0133, 0182, 0190, 0210, 0222, 0252, 0262, 0315, 0333, 0630, 0649, 2582, 2583.	74	691655	Screw (Rotating Screen)	440	691076	Screw (Booster Fan)
73A	690410	Screen-Rotating	75	691056	Washer (Flywheel)	773	690265	Retainer
			321	691151	Fan-Booster	838	211983	Adapter-Blower Housing Ring
			321A	690377	Fan-Booster			
			321B	212000	Fan-Booster			
			331	691075	Washer (Booster Fan)			
			332	691059	Nut (Flywheel)			

Booster Fans, Rotating Screens


REF NO	PART NO	QTY	DESCRIPTION
332	691059		NUT -(Flywheel)
332	691059		NUT -(Flywheel)
332	691059		NUT -(Flywheel)
332	691059		NUT -(Flywheel)
332	691059		NUT -(Flywheel)
440	691076		SCREW -(Booster Fan)
440	691076		SCREW -(Booster Fan)
440	691076		SCREW -(Booster Fan)
440	691076		SCREW -(Booster Fan)
440	691076		SCREW -(Booster Fan)
773	690265		RETAINER
773	690265		RETAINER
773	690265		RETAINER
773	690265		RETAINER
773	690265		RETAINER
838	211983		ADAPTER, Blower Housing Ring
838	211983		ADAPTER, Blower Housing Ring
838	211983		ADAPTER, Blower Housing Ring
838	211983		ADAPTER, Blower Housing Ring
838	211983		ADAPTER, Blower Housing Ring

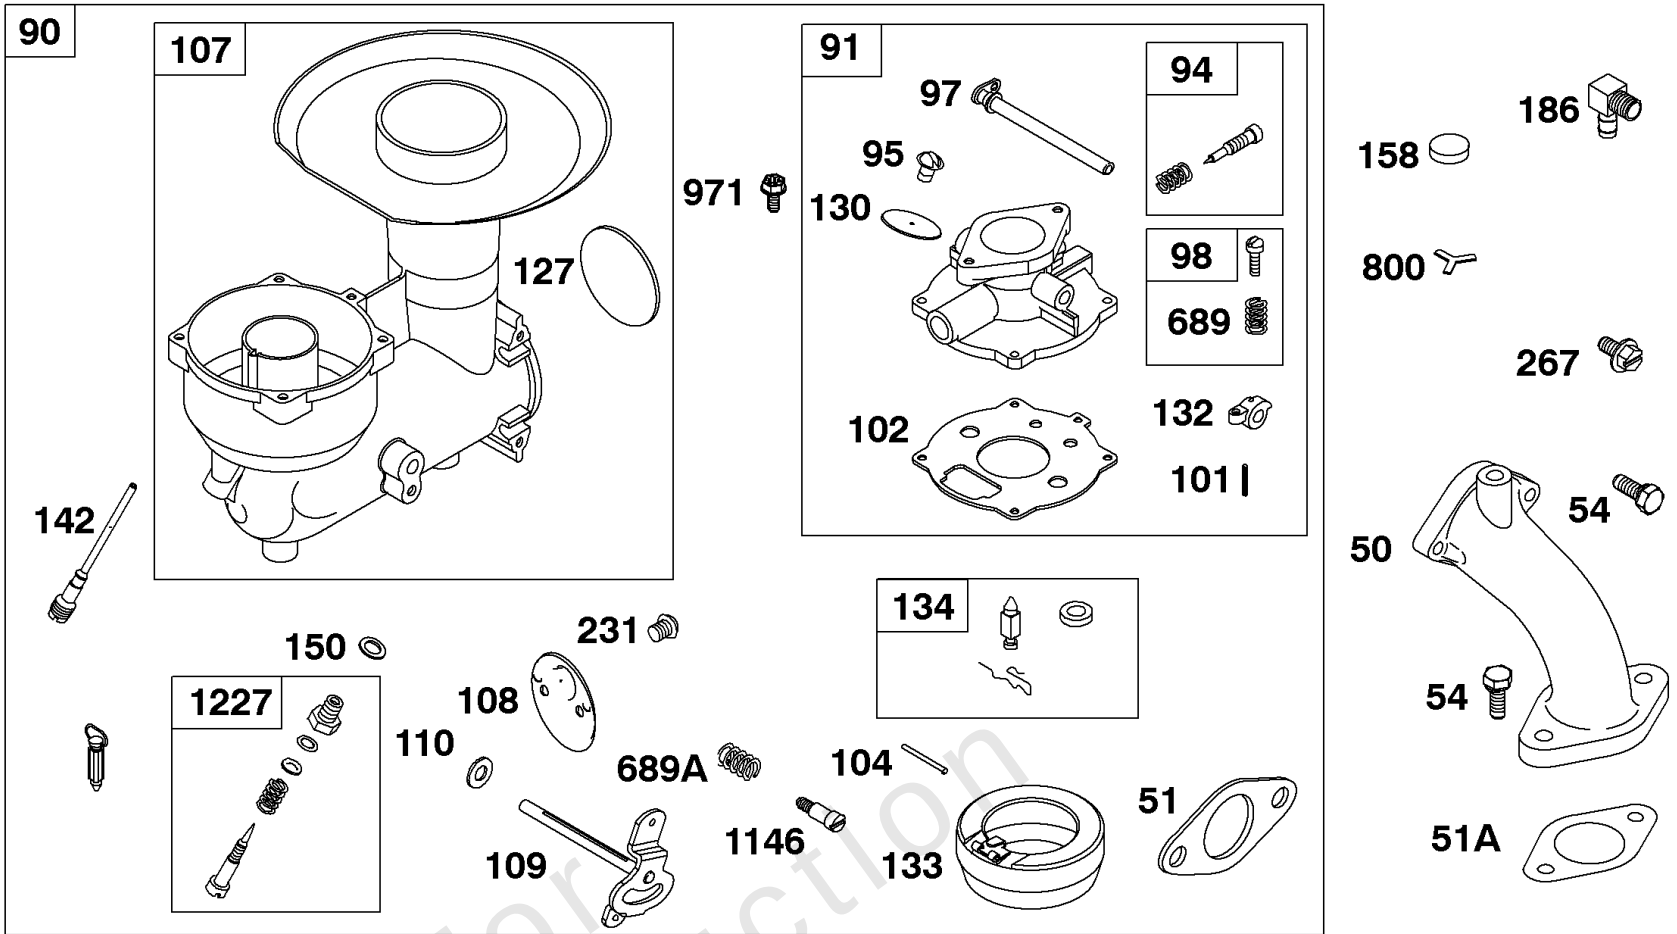 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
50	691152	Manifold-Intake	94	292681	Kit-Idle Mixture			----- Note -----
		----- Note -----	95	691437	Screw			390950 Nozzle-
		692525 Manifold-Intake	97	691944	Shaft-Throttle			Carburetor
		Used on Type No(s).	98	693942	Kit-Idle Speed			(Standard)
		0248, 0308, 0358,	101	691616	Pin-Shaft			(Labeled 40)
		0638, 0707, 0770.	102	692215	Gasket-Carburetor Body			(Used Before Code Date 81090900).
51	27381	Gasket-Intake	104	691775	Pin-Float Hinge	150	691610	Gasket-Nozzle
51A	692214	Gasket-Intake	107	391069	Body-Lower Carburetor	158	27590	Plug-Carburetor Filter/Drain
54	691681	Screw	108	690621	Valve-Choke	186	691764	Connector-Hose
		(Intake Manifold)	109		Shaft-Choke	231	691437	Screw
90		Carburetor			(See Previous Page)			(Choke Valve)
91	299687	Body-Upper Carburetor	110	691186	Washer	267	691082	Screw
		----- Note -----			(Choke Shaft)			(Casing Clamp)
		391067 Body-Upper Carburetor	127	690627	Plug-Welch	689	691591	Spring-Friction
		Used on Type No(s).	130	691727	Valve-Throttle	689A	691590	Spring-Friction
		0121, 0144, 0157,	132	691708	Stop-Throttle	800	220521	Retainer-Carburetor Drain
		0158, 0164, 0165,	133	692265	Float-Carburetor			
		0169, 0170, 0182,	134		Kit-Needle/Seat	971	691090	Screw
		0184, 0192, 0240,			(See Previous Page)			(Air Cleaner Base to Carburetor)
		0309, 0331, 0630,	142	691966	Nozzle-Carburetor	1146	691587	Screw
		0707, 0724, 0770.			(Standard)			(Choke Shaft)
					(Labeled B)	1227		Valve-High Speed
					(Used After Code Date 81090800).			(See Previous Page)

Carburetor


REF NO	PART NO	QTY	DESCRIPTION
50	691152		MANIFOLD, Intake
50	691152		MANIFOLD, Intake
50	691152		MANIFOLD, Intake
50	691152		MANIFOLD, Intake
50	691152		MANIFOLD, Intake
51	27381S		GASKET, Intake
51	27381S		GASKET, Intake
51	27381S		GASKET, Intake
51	27381S		GASKET, Intake
51	27381S		GASKET, Intake
51A	692214		GASKET, Intake
51A	692214		GASKET, Intake
51A	692214		GASKET, Intake
51A	692214		GASKET, Intake
51A	692214		GASKET, Intake
54	691681		SCREW -(Intake Manifold)
54	691681		SCREW -(Intake Manifold)
54	691681		SCREW -(Intake Manifold)
54	691681		SCREW -(Intake Manifold)
54	691681		SCREW -(Intake Manifold)
90	391065		CARBURETOR
90	391065		CARBURETOR
90	391065		CARBURETOR
90	391065		CARBURETOR
90	391065		CARBURETOR
91	299687		BODY, Upper Carburetor
91	299687		BODY, Upper Carburetor
91	299687		BODY, Upper Carburetor
91	299687		BODY, Upper Carburetor
91	299687		BODY, Upper Carburetor
94	292681		VALVE, Idle Mixture
94	292681		VALVE, Idle Mixture
94	292681		VALVE, Idle Mixture
94	292681		VALVE, Idle Mixture
94	292681		VALVE, Idle Mixture
95	691437		SCREW -(Throttle Valve)
95	691437		SCREW -(Throttle Valve)
95	691437		SCREW -(Throttle Valve)
95	691437		SCREW -(Throttle Valve)
95	691437		SCREW -(Throttle Valve)
97	691944		SHAFT, Throttle
97	691944		SHAFT, Throttle
97	691944		SHAFT, Throttle
97	691944		SHAFT, Throttle

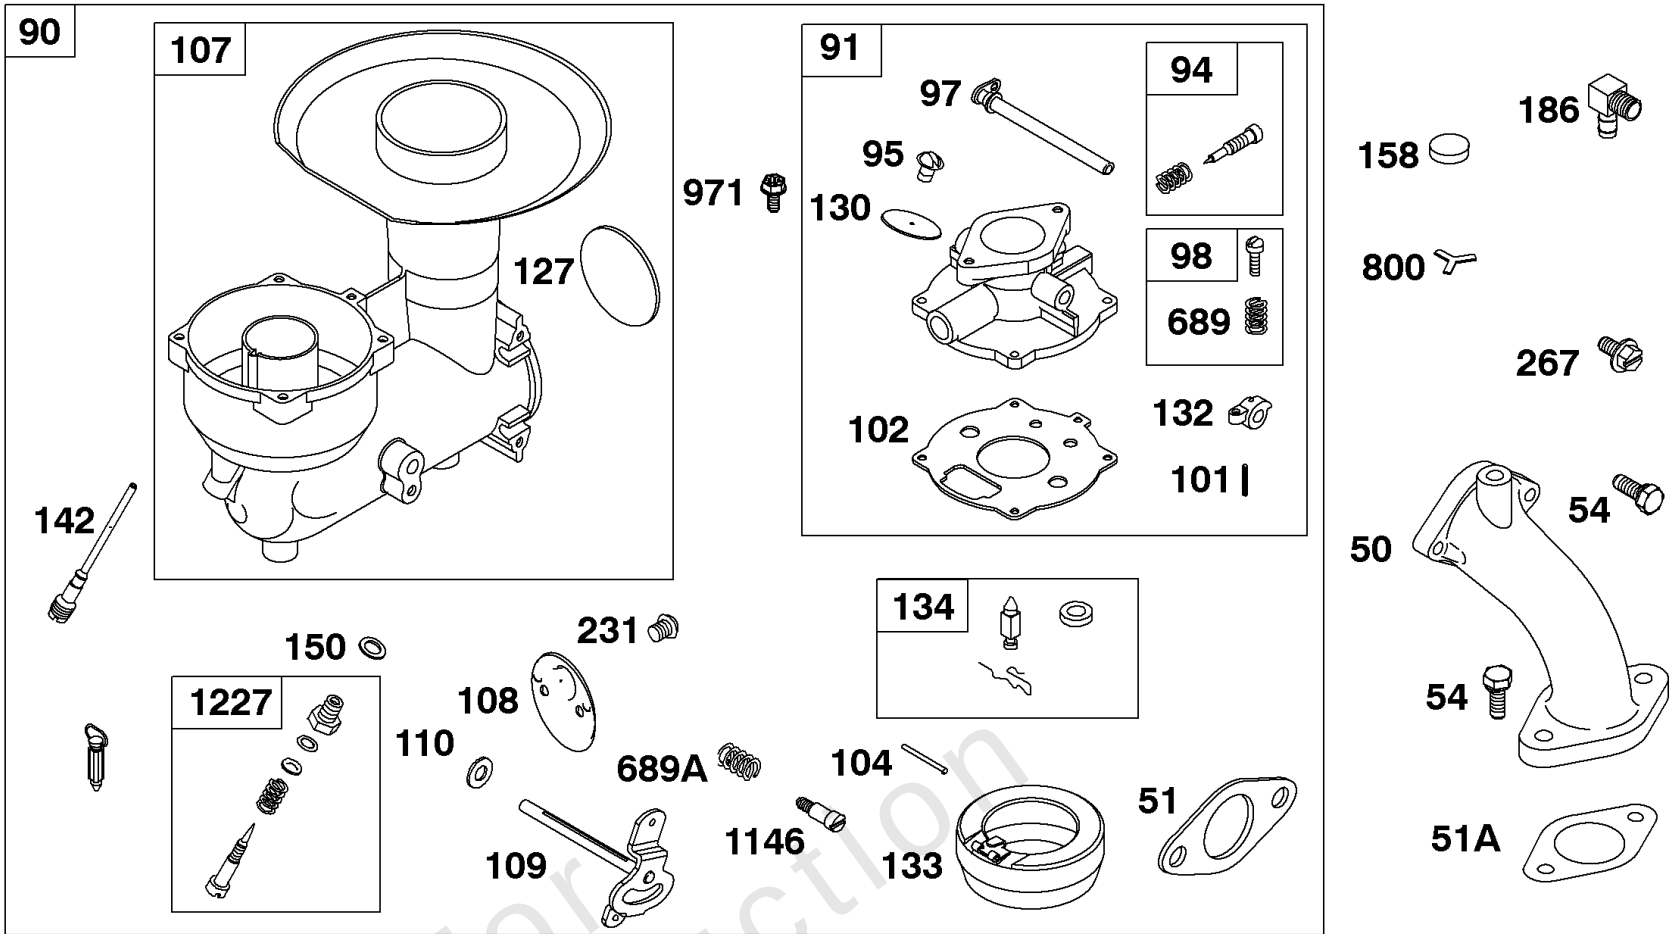 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
50	691152	Manifold-Intake	94	292681	Kit-Idle Mixture			----- Note -----
		----- Note -----	95	691437	Screw			390950 Nozzle-
		692525 Manifold-Intake	97	691944	Shaft-Throttle			Carburetor
		Used on Type No(s).	98	693942	Kit-Idle Speed			(Standard)
		0248, 0308, 0358,	101	691616	Pin-Shaft			(Labeled 40)
		0638, 0707, 0770.	102	692215	Gasket-Carburetor			(Used Before Code
					Body			Date 81090900).
51	27381	Gasket-Intake	104	691775	Pin-Float Hinge	150	691610	Gasket-Nozzle
51A	692214	Gasket-Intake	107	391069	Body-Lower	158	27590	Plug-Carburetor
54	691681	Screw			Carburetor			Filter/Drain
		(Intake Manifold)	108	690621	Valve-Choke	186	691764	Connector-Hose
90		Carburetor	109		Shaft-Choke	231	691437	Screw
		(See Previous Page)			(See Previous Page)			(Choke Valve)
91	299687	Body-Upper	110	691186	Washer	267	691082	Screw
		Carburetor			(Choke Shaft)			(Casing Clamp)
		----- Note -----	127	690627	Plug-Welch	689	691591	Spring-Friction
		391067 Body-Upper	130	691727	Valve-Throttle	689A	691590	Spring-Friction
		Carburetor	132	691708	Stop-Throttle	800	220521	Retainer-Carburetor
		Used on Type No(s).	133	692265	Float-Carburetor			Drain
		0121, 0144, 0157,	134		Kit-Needle/Seat	971	691090	Screw
		0158, 0164, 0165,			(See Previous Page)			(Air Cleaner Base
		0169, 0170, 0182,	142	691966	Nozzle-Carburetor			to Carburetor)
		0184, 0192, 0240,			(Standard)	1146	691587	Screw
		0309, 0331, 0630,			(Labeled B)			(Choke Shaft)
		0707, 0724, 0770.			(Used After Code Date	1227		Valve-High Speed
					81090800).			(See Previous Page)

Carburetor


REF NO	PART NO	QTY	DESCRIPTION
97	691944		SHAFT, Throttle
98	693942		KIT, Idle Speed
98	693942		KIT, Idle Speed
98	693942		KIT, Idle Speed
98	693942		KIT, Idle Speed
98	693942		KIT, Idle Speed
101	691616		PIN, Shaft
101	691616		PIN, Shaft
101	691616		PIN, Shaft
101	691616		PIN, Shaft
101	691616		PIN, Shaft
102	692215		GASKET, Carburetor Body
102	692215		GASKET, Carburetor Body
102	692215		GASKET, Carburetor Body
102	692215		GASKET, Carburetor Body
102	692215		GASKET, Carburetor Body
104	691775		PIN, Float Hinge
104	691775		PIN, Float Hinge
104	691775		PIN, Float Hinge
104	691775		PIN, Float Hinge
104	691775		PIN, Float Hinge
107	391069		BODY, Lower Carburetor
107	391069		BODY, Lower Carburetor
107	391069		BODY, Lower Carburetor
107	391069		BODY, Lower Carburetor
107	391069		BODY, Lower Carburetor
108	690621		VALVE, Choke
108	690621		VALVE, Choke
108	690621		VALVE, Choke
108	690621		VALVE, Choke
108	690621		VALVE, Choke
109	691353		SHAFT, Choke
109	691353		SHAFT, Choke
109	691353		SHAFT, Choke
109	691353		SHAFT, Choke
109	691353		SHAFT, Choke
110	691186		WASHER -(Choke Shaft)
110	691186		WASHER -(Choke Shaft)
110	691186		WASHER -(Choke Shaft)
110	691186		WASHER -(Choke Shaft)
110	691186		WASHER -(Choke Shaft)
127	690627		PLUG, Welch
127	690627		PLUG, Welch
127	690627		PLUG, Welch
127	690627		PLUG, Welch
127	690627		PLUG, Welch
130	691727		VALVE, Throttle
130	691727		VALVE, Throttle

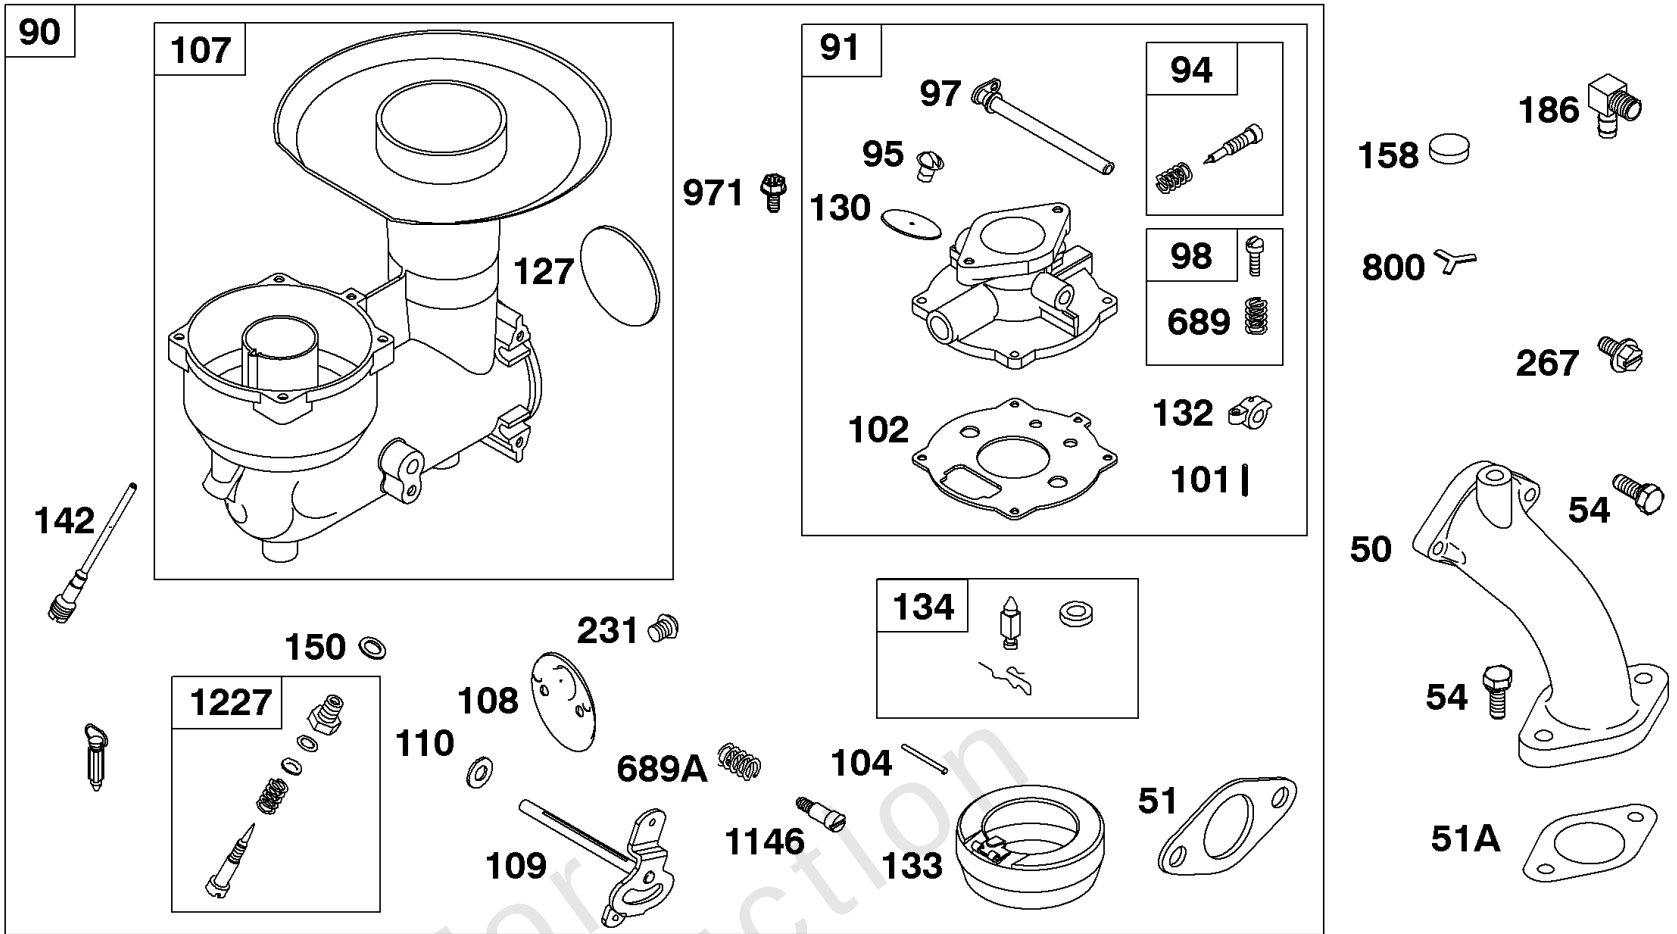 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
50	691152	Manifold-Intake	94	292681	Kit-Idle Mixture			----- Note -----
		----- Note -----	95	691437	Screw			390950 Nozzle-
		692525 Manifold-Intake	97	691944	Shaft-Throttle			Carburetor
		Used on Type No(s).	98	693942	Kit-Idle Speed			(Standard)
		0248, 0308, 0358,	101	691616	Pin-Shaft			(Labeled 40)
		0638, 0707, 0770.	102	692215	Gasket-Carburetor			(Used Before Code
51	27381	Gasket-Intake			Body	150	691610	Date 81090900).
51A	692214	Gasket-Intake	104	691775	Pin-Float Hinge	158	27590	Gasket-Nozzle
54	691681	Screw	107	391069	Body-Lower			Plug-Carburetor
		(Intake Manifold)			Carburetor			Filter/Drain
90		Carburetor	108	690621	Valve-Choke	186	691764	Connector-Hose
		(See Previous Page)	109		Shaft-Choke	231	691437	Screw
91	299687	Body-Upper			(See Previous Page)			(Choke Valve)
		Carburetor	110	691186	Washer	267	691082	Screw
		----- Note -----			(Choke Shaft)			(Casing Clamp)
		391067 Body-Upper	127	690627	Plug-Welch	689	691591	Spring-Friction
		Carburetor	130	691727	Valve-Throttle	689A	691590	Spring-Friction
		Used on Type No(s).	132	691708	Stop-Throttle	800	220521	Retainer-Carburetor
		0121, 0144, 0157,	133	692265	Float-Carburetor			Drain
		0158, 0164, 0165,	134		Kit-Needle/Seat	971	691090	Screw
		0169, 0170, 0182,			(See Previous Page)			(Air Cleaner Base
		0184, 0192, 0240,	142	691966	Nozzle-Carburetor			to Carburetor)
		0309, 0331, 0630,			(Standard)	1146	691587	Screw
		0707, 0724, 0770.			(Labeled B)			(Choke Shaft)
					(Used After Code Date	1227		Valve-High Speed
					81090800).			(See Previous Page)

Carburetor


REF NO	PART NO	QTY	DESCRIPTION
130	691727		VALVE, Throttle
130	691727		VALVE, Throttle
130	691727		VALVE, Throttle
132	691708		STOP, Throttle
132	691708		STOP, Throttle
132	691708		STOP, Throttle
132	691708		STOP, Throttle
132	691708		STOP, Throttle
133	692265		FLOAT, Carburetor
133	692265		FLOAT, Carburetor
133	692265		FLOAT, Carburetor
133	692265		FLOAT, Carburetor
133	692265		FLOAT, Carburetor
134	394683		KIT, Needle/Seat -(Includes Brass Seat)(Use With Impulse Pump)
134	394681		KIT, Needle/Seat -(Gravity Feed)
134	394681		KIT, Needle/Seat -(Gravity Feed)
134	394682		KIT, Needle/Seat -(Includes Brass Seat)
134	394683		KIT, Needle/Seat -(Includes Brass Seat)(Use With Impulse Pump)
134	394681		KIT, Needle/Seat -(Gravity Feed)
134	394682		KIT, Needle/Seat -(Includes Brass Seat)
134	394683		KIT, Needle/Seat -(Includes Brass Seat)(Use With Impulse Pump)
134	394682		KIT, Needle/Seat -(Includes Brass Seat)
134	394681		KIT, Needle/Seat -(Gravity Feed)
134	394682		KIT, Needle/Seat -(Includes Brass Seat)
134	394683		KIT, Needle/Seat -(Includes Brass Seat)(Use With Impulse Pump)
134	394683		KIT, Needle/Seat -(Includes Brass Seat)(Use With Impulse Pump)
134	394682		KIT, Needle/Seat -(Includes Brass Seat)
134	394681		KIT, Needle/Seat -(Gravity Feed)
142	390950		NOZZLE, Carburetor -(Standard) (Labeled 40) -Used Before Code Date 81090900
142	691966		NOZZLE, Carburetor -(Standard) (Labeled B) -Used After Code Date 81090800
142	691966		NOZZLE, Carburetor -(Standard) (Labeled B) -Used After Code Date 81090800
142	390950		NOZZLE, Carburetor -(Standard) (Labeled 40) -Used Before Code Date 81090900
142	390950		NOZZLE, Carburetor -(Standard) (Labeled 40) -Used Before Code Date 81090900

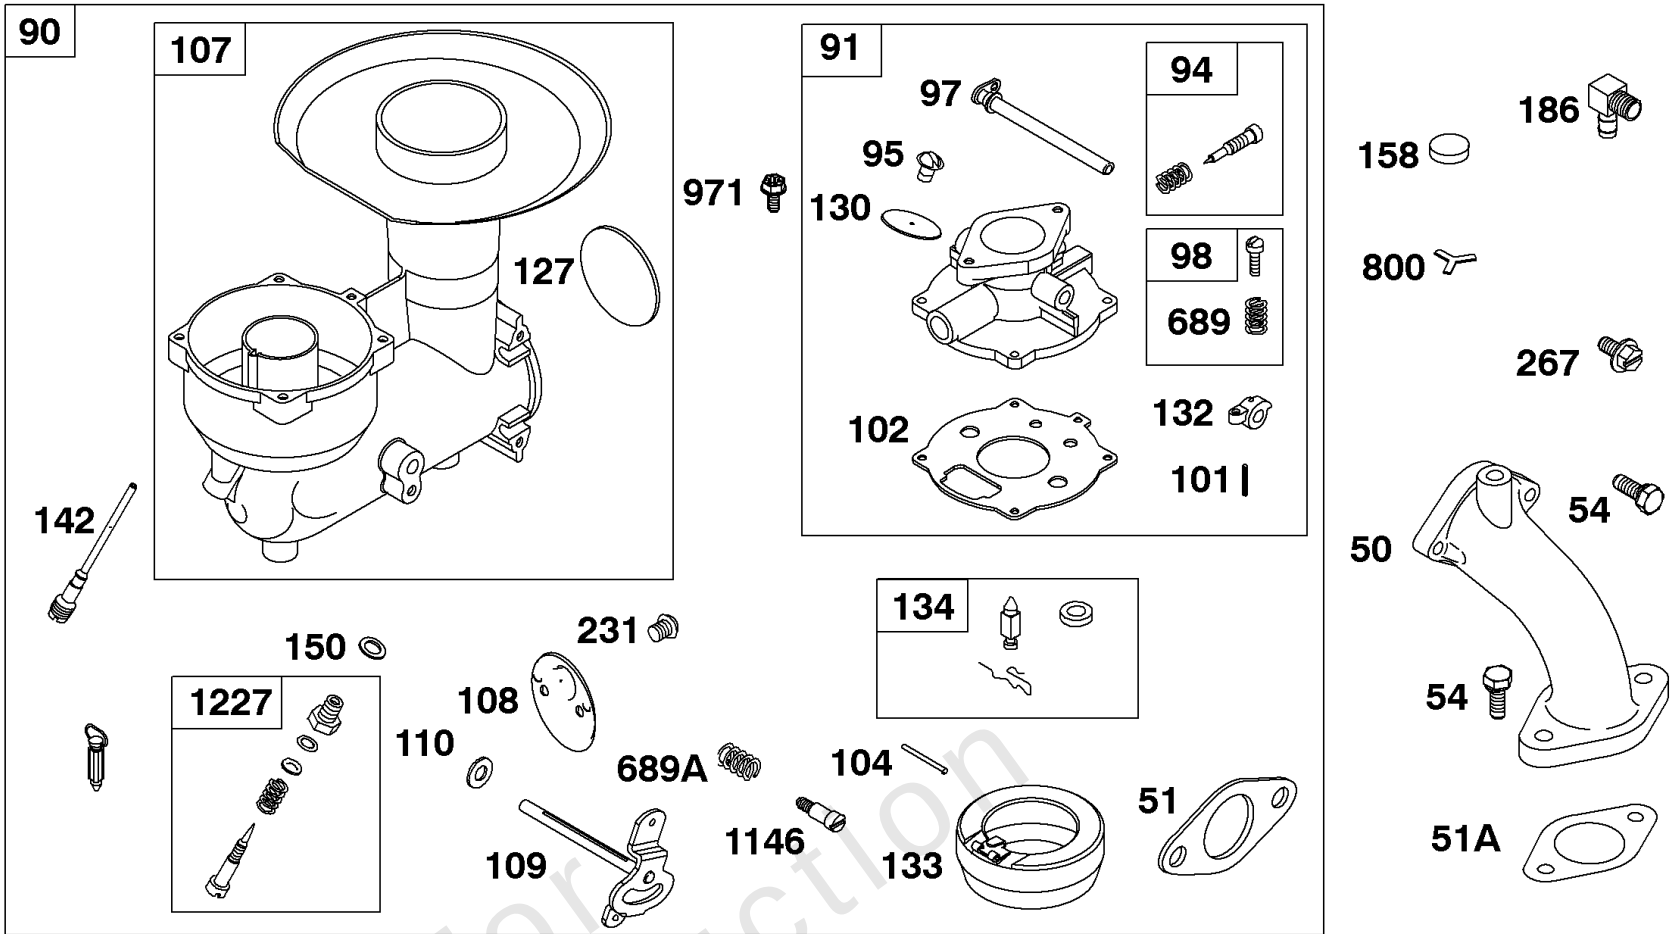 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
50	691152	Manifold-Intake	94	292681	Kit-Idle Mixture			----- Note -----
		----- Note -----	95	691437	Screw			390950 Nozzle-
		692525 Manifold-Intake	97	691944	Shaft-Throttle			Carburetor
		Used on Type No(s).	98	693942	Kit-Idle Speed			(Standard)
		0248, 0308, 0358,	101	691616	Pin-Shaft			(Labeled 40)
		0638, 0707, 0770.	102	692215	Gasket-Carburetor Body			(Used Before Code Date 81090900).
51	27381	Gasket-Intake	104	691775	Pin-Float Hinge	150	691610	Gasket-Nozzle
51A	692214	Gasket-Intake	107	391069	Body-Lower Carburetor	158	27590	Plug-Carburetor Filter/Drain
54	691681	Screw	108	690621	Valve-Choke	186	691764	Connector-Hose
		(Intake Manifold)	109		Shaft-Choke	231	691437	Screw
90		Carburetor			(See Previous Page)			(Choke Valve)
91	299687	Body-Upper Carburetor	110	691186	Washer	267	691082	Screw
		----- Note -----			(Choke Shaft)			(Casing Clamp)
		391067 Body-Upper Carburetor	127	690627	Plug-Welch	689	691591	Spring-Friction
		Used on Type No(s).	130	691727	Valve-Throttle	689A	691590	Spring-Friction
		0121, 0144, 0157,	132	691708	Stop-Throttle	800	220521	Retainer-Carburetor Drain
		0158, 0164, 0165,	133	692265	Float-Carburetor			
		0169, 0170, 0182,	134		Kit-Needle/Seat	971	691090	Screw
		0184, 0192, 0240,			(See Previous Page)			(Air Cleaner Base to Carburetor)
		0309, 0331, 0630,	142	691966	Nozzle-Carburetor	1146	691587	Screw
		0707, 0724, 0770.			(Standard)			(Choke Shaft)
					(Labeled B)	1227		Valve-High Speed
					(Used After Code Date 81090800).			(See Previous Page)

Carburetor


REF NO	PART NO	QTY	DESCRIPTION
142	691966		NOZZLE, Carburetor -(Standard) (Labeled B) -Used After Code Date 81090800
142	390950		NOZZLE, Carburetor -(Standard) (Labeled 40) -Used Before Code Date 81090900
142	691966		NOZZLE, Carburetor -(Standard) (Labeled B) -Used After Code Date 81090800
142	390950		NOZZLE, Carburetor -(Standard) (Labeled 40) -Used Before Code Date 81090900
142	691966		NOZZLE, Carburetor -(Standard) (Labeled B) -Used After Code Date 81090800
150	691610		GASKET, Nozzle
150	691610		GASKET, Nozzle
150	691610		GASKET, Nozzle
150	691610		GASKET, Nozzle
150	691610		GASKET, Nozzle
158	27590		PLUG, Carburetor Filter/Drain
158	27590		PLUG, Carburetor Filter/Drain
158	27590		PLUG, Carburetor Filter/Drain
158	27590		PLUG, Carburetor Filter/Drain
158	27590		PLUG, Carburetor Filter/Drain
186	691764		CONNECTOR-HOSE -(Pulse Line)
186	691764		CONNECTOR-HOSE -(Pulse Line)
186	691764		CONNECTOR-HOSE -(Pulse Line)
186	691764		CONNECTOR-HOSE -(Pulse Line)
186	691764		CONNECTOR-HOSE -(Pulse Line)
231	691437		SCREW -(Choke Valve)
231	691437		SCREW -(Choke Valve)
231	691437		SCREW -(Choke Valve)
231	691437		SCREW -(Choke Valve)
231	691437		SCREW -(Choke Valve)
267	691082		SCREW -(Casing Clamp)
267	691082		SCREW -(Casing Clamp)
267	691082		SCREW -(Casing Clamp)
267	691082		SCREW -(Casing Clamp)
267	691082		SCREW -(Casing Clamp)
689	691591		SPRING, Friction
689	691591		SPRING, Friction
689	691591		SPRING, Friction

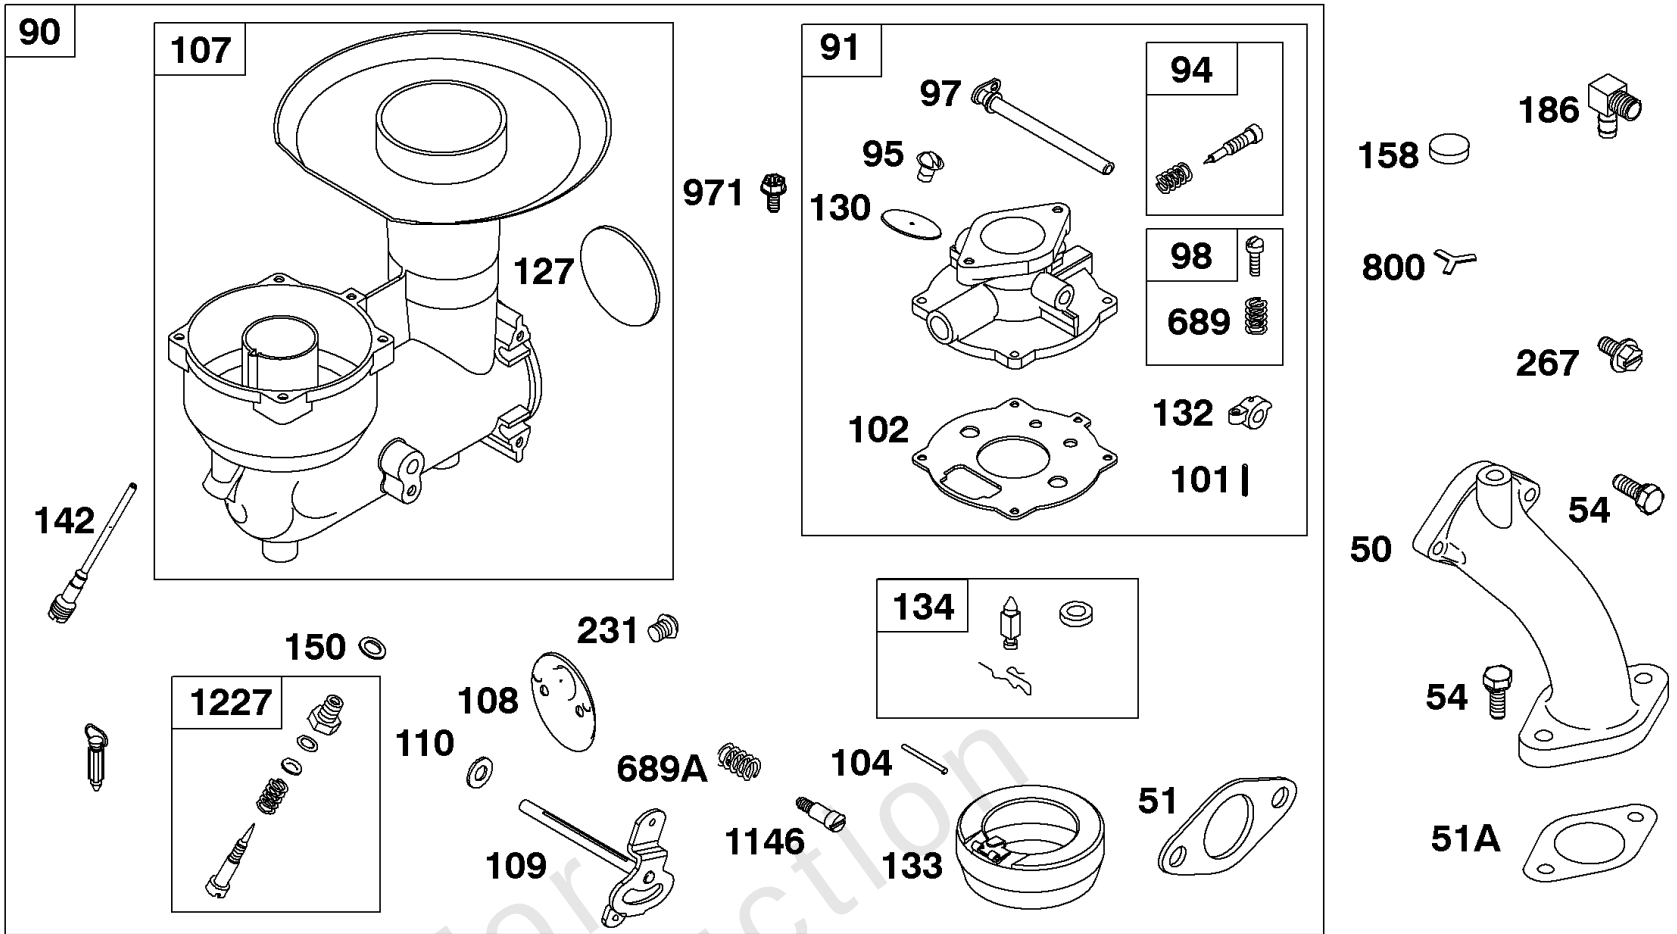 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
50	691152	Manifold-Intake	94	292681	Kit-Idle Mixture			----- Note -----
		----- Note -----	95	691437	Screw			390950 Nozzle-
		692525 Manifold-Intake	97	691944	Shaft-Throttle			Carburetor
		Used on Type No(s).	98	693942	Kit-Idle Speed			(Standard)
		0248, 0308, 0358,	101	691616	Pin-Shaft			(Labeled 40)
		0638, 0707, 0770.	102	692215	Gasket-Carburetor			(Used Before Code
51	27381	Gasket-Intake			Body	150	691610	Date 81090900).
51A	692214	Gasket-Intake	104	691775	Pin-Float Hinge	158	27590	Gasket-Nozzle
54	691681	Screw	107	391069	Body-Lower			Plug-Carburetor
		(Intake Manifold)			Carburetor			Filter/Drain
90		Carburetor	108	690621	Valve-Choke	186	691764	Connector-Hose
		(See Previous Page)	109		Shaft-Choke	231	691437	Screw
91	299687	Body-Upper			(See Previous Page)			(Choke Valve)
		Carburetor	110	691186	Washer	267	691082	Screw
		----- Note -----			(Choke Shaft)			(Casing Clamp)
		391067 Body-Upper	127	690627	Plug-Welch	689	691591	Spring-Friction
		Carburetor	130	691727	Valve-Throttle	689A	691590	Spring-Friction
		Used on Type No(s).	132	691708	Stop-Throttle	800	220521	Retainer-Carburetor
		0121, 0144, 0157,	133	692265	Float-Carburetor			Drain
		0158, 0164, 0165,	134		Kit-Needle/Seat	971	691090	Screw
		0169, 0170, 0182,			(See Previous Page)			(Air Cleaner Base
		0184, 0192, 0240,	142	691966	Nozzle-Carburetor			to Carburetor)
		0309, 0331, 0630,			(Standard)	1146	691587	Screw
		0707, 0724, 0770.			(Labeled B)			(Choke Shaft)
					(Used After Code Date	1227		Valve-High Speed
					81090800).			(See Previous Page)

Carburetor


REF NO	PART NO	QTY	DESCRIPTION
689	691591		SPRING, Friction
689	691591		SPRING, Friction
689A	691590		SPRING, Friction
689A	691590		SPRING, Friction
689A	691590		SPRING, Friction
689A	691590		SPRING, Friction
689A	691590		SPRING, Friction
800	220521		RETAINER, Carburetor Drain
800	220521		RETAINER, Carburetor Drain
800	220521		RETAINER, Carburetor Drain
800	220521		RETAINER, Carburetor Drain
800	220521		RETAINER, Carburetor Drain
971	691090		SCREW -(Air Cleaner Base) (Remote Choke)
971	691090		SCREW -(Air Cleaner Base) (Remote Choke)
971	691090		SCREW -(Air Cleaner Base) (Remote Choke)
971	691090		SCREW -(Air Cleaner Base) (Remote Choke)
971	691090		SCREW -(Air Cleaner Base) (Remote Choke)
1146	691587		SCREW -(Choke Shaft)
1146	691587		SCREW -(Choke Shaft)
1146	691587		SCREW -(Choke Shaft)
1146	691587		SCREW -(Choke Shaft)
1146	691587		SCREW -(Choke Shaft)
1227	99525S		VALVE, High Speed
1227	99525S		VALVE, High Speed
1227	99525S		VALVE, High Speed
1227	99525S		VALVE, High Speed
1227	99525S		VALVE, High Speed

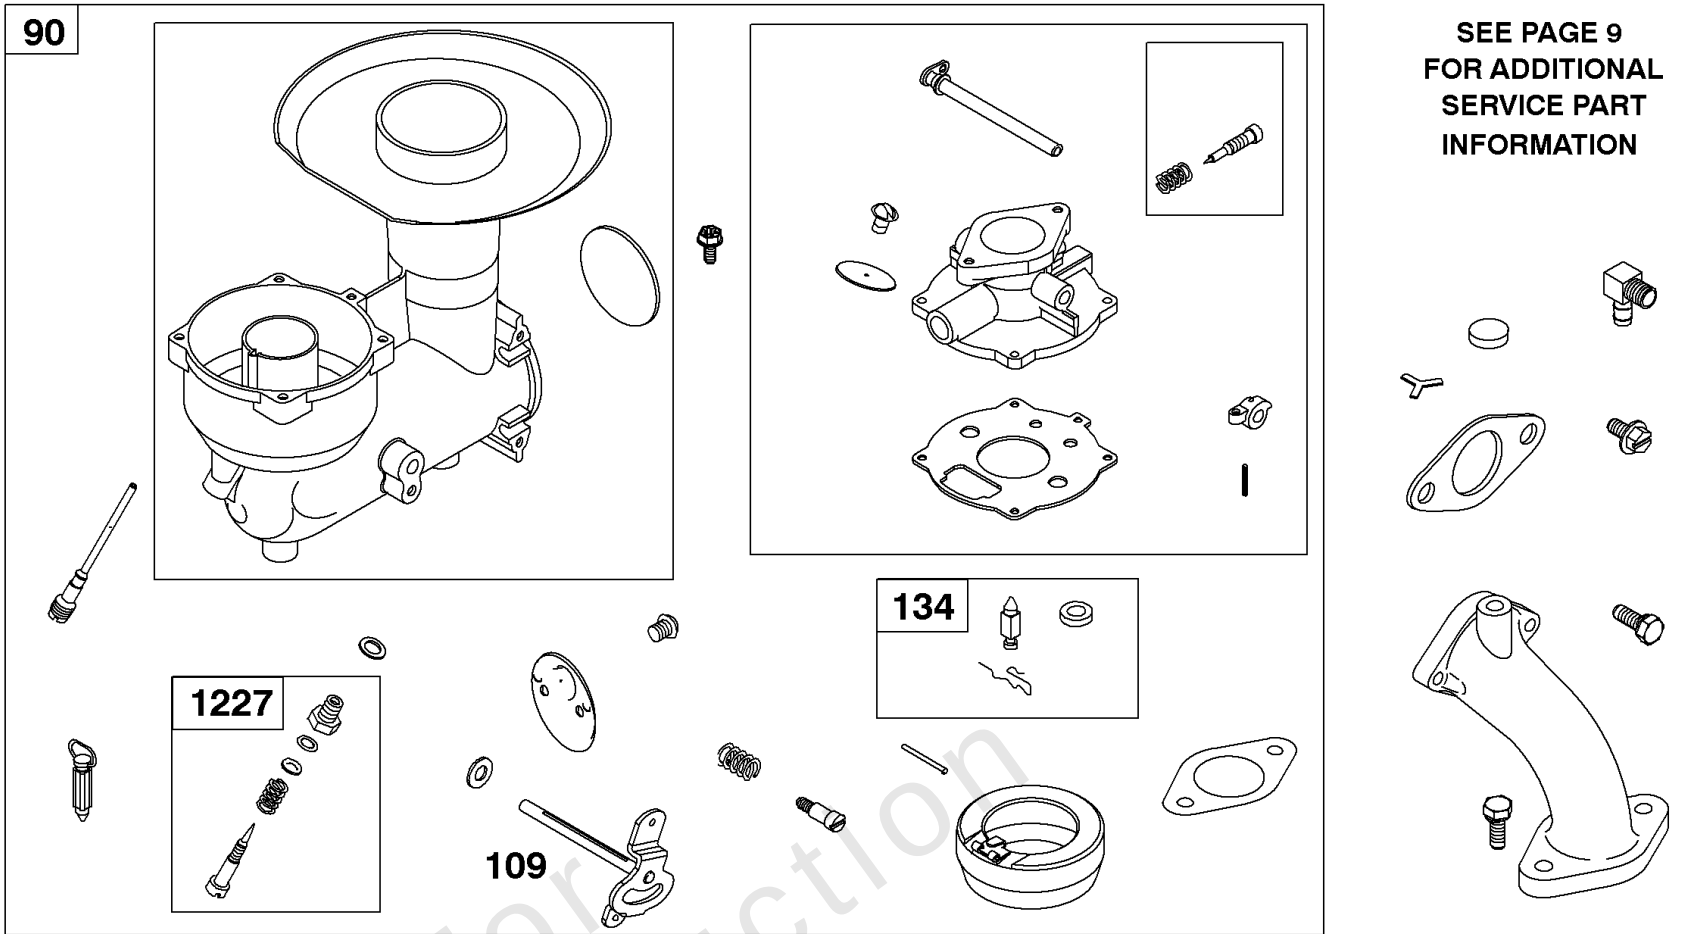 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
90	391065	Carburetor ----- Note ----- 391068 Carburetor Used on Type No(s). 0121, 0144, 0157, 0158, 0164, 0165, 0169, 0170, 0184, 0192, 0240, 0331. 391070 Carburetor Used on Type No(s). 0127, 0133, 0134, 0135, 0136, 0139, 0140, 0149, 0162, 0163, 0166, 0172, 0173, 0180, 0185, 0186, 0201, 0204, 0206, 0211, 0212, 0213, 0226, 0227, 0228, 0229, 0249, 0251, 0271, 0298, 0326, 0328, 0332. 392035 Carburetor Used on Type No(s). 0182, 0210, 0222, 0309. 393431 Carburetor Used on Type No(s). 0262, 0630.			392235 Carburetor Used on Type No(s). 0198, 0234, 0235, 0248, 0266, 0312, 0316, 0338, 0341, 0351, 0358, 0707, 0724, 0744, 0750, 0759, 0770.		134	394681 Kit-Needle/Seat ----- Note ----- 394682 Kit-Needle/ Seat (Includes Brass Seat) 394683 Kit-Needle/ Seat (Includes Brass Seat) (For Use With Impulse Pump)
			109	691353	Shaft-Choke ----- Note ----- 690617 Shaft-Choke Used on Type No(s). 0121, 0127, 0133, 0134, 0135, 0136, 0139, 0140, 0144, 0149, 0157, 0158, 0162, 0163, 0164, 0165, 0166, 0169, 0170, 0172, 0180, 0184, 0185, 0186, 0192, 0201, 0204, 0206, 0211, 0212, 0213, 0226, 0227, 0228, 0229, 0249, 0251, 0271, 0298, 0326, 0328, 0332, 2581, 2582.		1227	99525S Valve-High Speed

Carburetor, Choke Shaft


REF NO	PART NO	QTY	DESCRIPTION
90	391065		CARBURETOR
90	391065		CARBURETOR
90	391065		CARBURETOR
90	391065		CARBURETOR
90	391065		CARBURETOR
109	691353		SHAFT, Choke
109	691353		SHAFT, Choke
109	691353		SHAFT, Choke
109	691353		SHAFT, Choke
109	691353		SHAFT, Choke
134	394681		KIT, Needle/Seat -(Gravity Feed)
134	394682		KIT, Needle/Seat -(Includes Brass Seat)
134	394683		KIT, Needle/Seat -(Includes Brass Seat)(Use With Impulse Pump)
134	394682		KIT, Needle/Seat -(Includes Brass Seat)
134	394681		KIT, Needle/Seat -(Gravity Feed)
134	394683		KIT, Needle/Seat -(Includes Brass Seat)(Use With Impulse Pump)
134	394681		KIT, Needle/Seat -(Gravity Feed)
134	394682		KIT, Needle/Seat -(Includes Brass Seat)
134	394683		KIT, Needle/Seat -(Includes Brass Seat)(Use With Impulse Pump)
134	394681		KIT, Needle/Seat -(Gravity Feed)
134	394682		KIT, Needle/Seat -(Includes Brass Seat)
134	394681		KIT, Needle/Seat -(Gravity Feed)
134	394682		KIT, Needle/Seat -(Includes Brass Seat)
134	394683		KIT, Needle/Seat -(Includes Brass Seat)(Use With Impulse Pump)
134	394683		KIT, Needle/Seat -(Includes Brass Seat)(Use With Impulse Pump)
1227	99525S		VALVE, High Speed
1227	99525S		VALVE, High Speed
1227	99525S		VALVE, High Speed
1227	99525S		VALVE, High Speed
1227	99525S		VALVE, High Speed

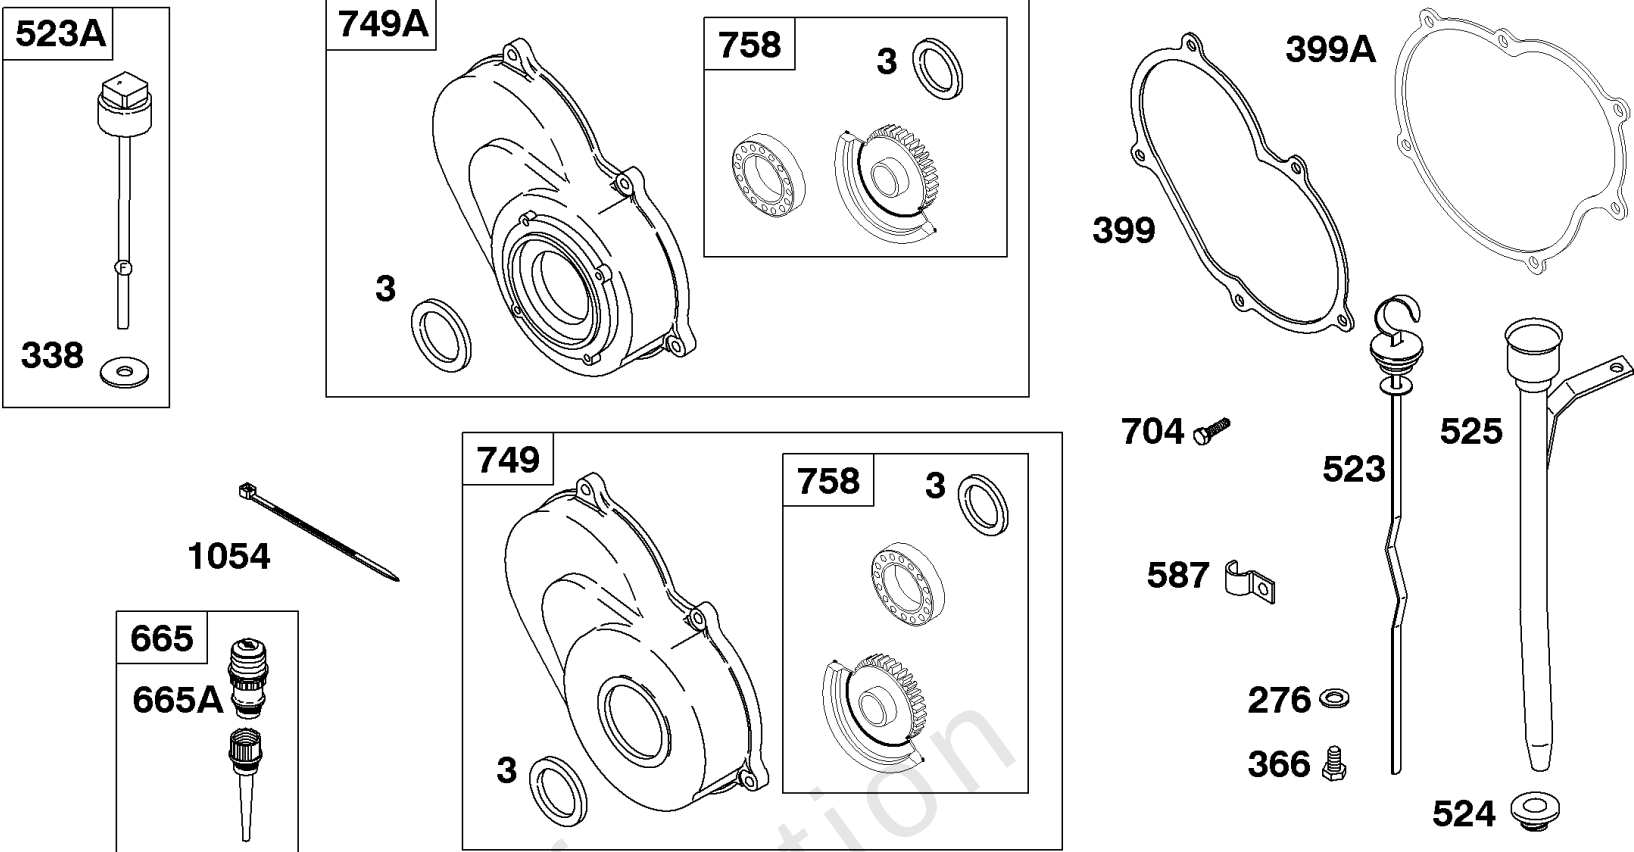 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	691948	Seal-Oil (Magneto Side)	525	690622	Tube-Dipstick ----- Note ----- 690623 Tube-Dipstick Used on Type No(s). 0121, 0144, 0157, 0158, 0164, 0165, 0169, 0170, 0182, 0184, 0192, 0198, 0210, 0222, 0234, 0235, 0240, 0248, 0262, 0266, 0309, 0312, 0316, 0331, 0338, 0341, 0351, 0358, 0630, 0638, 0679, 0705, 0707, 0724, 0744, 0750, 0755, 0770, 1160, 2581.	587	690389	Clamp-Cable
276	690258	Washer-Sealing				665	298860	Minder-Oil
338	690270	Gasket-Dipstick				665A	692939	Minder-Oil
366	690304	Screw (Timing Hole Plug)				704	691083	Screw (Counterweight Cover)
399	691310	Gasket-Counterweight Cover (Magneto Side)				749	391061	Cover-Counterweight
399A	692914	Gasket-Counterweight Cover (PTO Side)				749A	391361	Cover-Counterweight (Used on Alternator Equipped Engines)
523	691352	Dipstick				758	393164	Counterweight
523A	690620	Dipstick				1054	280275	Tie-Cable
524	281370S	Seal-Dipstick Tube						

Counterweight Cover, Oil Fill


REF NO	PART NO	QTY	DESCRIPTION
3	691948		SEAL, Oil -(Magneto Side)
3	691948		SEAL, Oil -(Magneto Side)
3	691948		SEAL, Oil -(Magneto Side)
3	691948		SEAL, Oil -(Magneto Side)
3	691948		SEAL, Oil -(Magneto Side)
276	690258		WASHER, Sealing
276	690258		WASHER, Sealing
276	690258		WASHER, Sealing
276	690258		WASHER, Sealing
276	690258		WASHER, Sealing
338	690270		SEAL, O-Ring -(Dipstick Tube)
338	690270		SEAL, O-Ring -(Dipstick Tube)
338	690270		SEAL, O-Ring -(Dipstick Tube)
338	690270		SEAL, O-Ring -(Dipstick Tube)
338	690270		SEAL, O-Ring -(Dipstick Tube)
366	690304		SCREW -(Timing Hole Plug)
366	690304		SCREW -(Timing Hole Plug)
366	690304		SCREW -(Timing Hole Plug)
366	690304		SCREW -(Timing Hole Plug)
366	690304		SCREW -(Timing Hole Plug)
399	691310		GASKET, Counterweight Cover -(Magneto Side)
399	691310		GASKET, Counterweight Cover -(Magneto Side)
399	691310		GASKET, Counterweight Cover -(Magneto Side)
399	691310		GASKET, Counterweight Cover -(Magneto Side)
399	691310		GASKET, Counterweight Cover -(Magneto Side)
399A	692914		GASKET, Counterweight Cover -(PTO Side)
399A	692914		GASKET, Counterweight Cover -(PTO Side)
399A	692914		GASKET, Counterweight Cover -(PTO Side)
399A	692914		GASKET, Counterweight Cover -(PTO Side)
399A	692914		GASKET, Counterweight Cover -(PTO Side)
523	691352		DIPSTICK
523	691352		DIPSTICK
523	691352		DIPSTICK

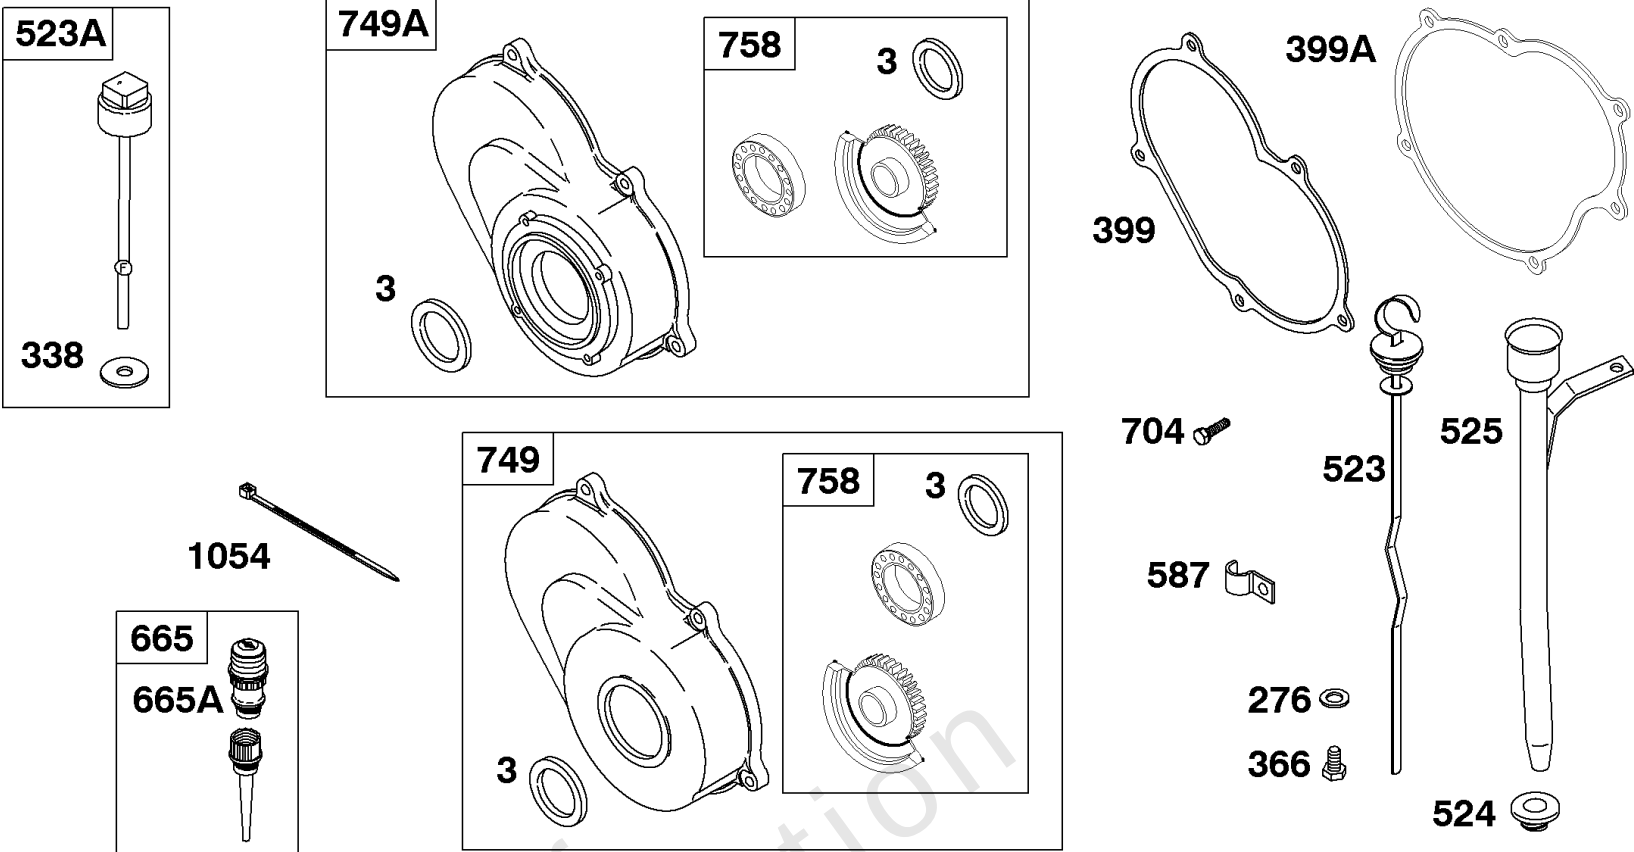 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	691948	Seal-Oil (Magneto Side)	525	690622	Tube-Dipstick ----- Note ----- 690623 Tube-Dipstick Used on Type No(s). 0121, 0144, 0157, 0158, 0164, 0165, 0169, 0170, 0182, 0184, 0192, 0198, 0210, 0222, 0234, 0235, 0240, 0248, 0262, 0266, 0309, 0312, 0316, 0331, 0338, 0341, 0351, 0358, 0630, 0638, 0679, 0705, 0707, 0724, 0744, 0750, 0755, 0770, 1160, 2581.	587	690389	Clamp-Cable
276	690258	Washer-Sealing				665	298860	Minder-Oil
338	690270	Gasket-Dipstick				665A	692939	Minder-Oil
366	690304	Screw (Timing Hole Plug)				704	691083	Screw (Counterweight Cover)
399	691310	Gasket-Counterweight Cover (Magneto Side)				749	391061	Cover-Counterweight
399A	692914	Gasket-Counterweight Cover (PTO Side)				749A	391361	Cover-Counterweight (Used on Alternator Equipped Engines)
523	691352	Dipstick				758	393164	Counterweight
523A	690620	Dipstick				1054	280275	Tie-Cable
524	281370S	Seal-Dipstick Tube						

Counterweight Cover, Oil Fill


REF NO	PART NO	QTY	DESCRIPTION
523	691352		DIPSTICK
523	691352		DIPSTICK
523A	690620		PIN, Cotter
523A	690620		PIN, Cotter
523A	690620		PIN, Cotter
523A	690620		PIN, Cotter
523A	690620		PIN, Cotter
524	281370S		SEAL, Dipstick Tube -(Dipstick Tube)
524	281370S		SEAL, Dipstick Tube -(Dipstick Tube)
524	281370S		SEAL, Dipstick Tube -(Dipstick Tube)
524	281370S		SEAL, Dipstick Tube -(Dipstick Tube)
524	281370S		SEAL, Dipstick Tube -(Dipstick Tube)
525	690622		TUBE, Dipstick
525	690622		TUBE, Dipstick
525	690622		TUBE, Dipstick
525	690622		TUBE, Dipstick
525	690622		TUBE, Dipstick
587	690389		CLAMP, Cable
587	690389		CLAMP, Cable
587	690389		CLAMP, Cable
587	690389		CLAMP, Cable
587	690389		CLAMP, Cable
665	298860		MINDER, Oil
665	298860		MINDER, Oil
665	298860		MINDER, Oil
665	298860		MINDER, Oil
665	298860		MINDER, Oil
665A	692939		MINDER, Oil
665A	692939		MINDER, Oil
665A	692939		MINDER, Oil
665A	692939		MINDER, Oil
665A	692939		MINDER, Oil
704	691083		SCREW -(Counterweight Cover)
704	691083		SCREW -(Counterweight Cover)
704	691083		SCREW -(Counterweight Cover)
704	691083		SCREW -(Counterweight Cover)
704	691083		SCREW -(Counterweight Cover)
749	391061		COVER, Gear
749	391061		COVER, Gear
749	391061		COVER, Gear
749	391061		COVER, Gear
749	391061		COVER, Gear
749A	391361		COVER, Gear -(Used on Alternator Equipped Engines)

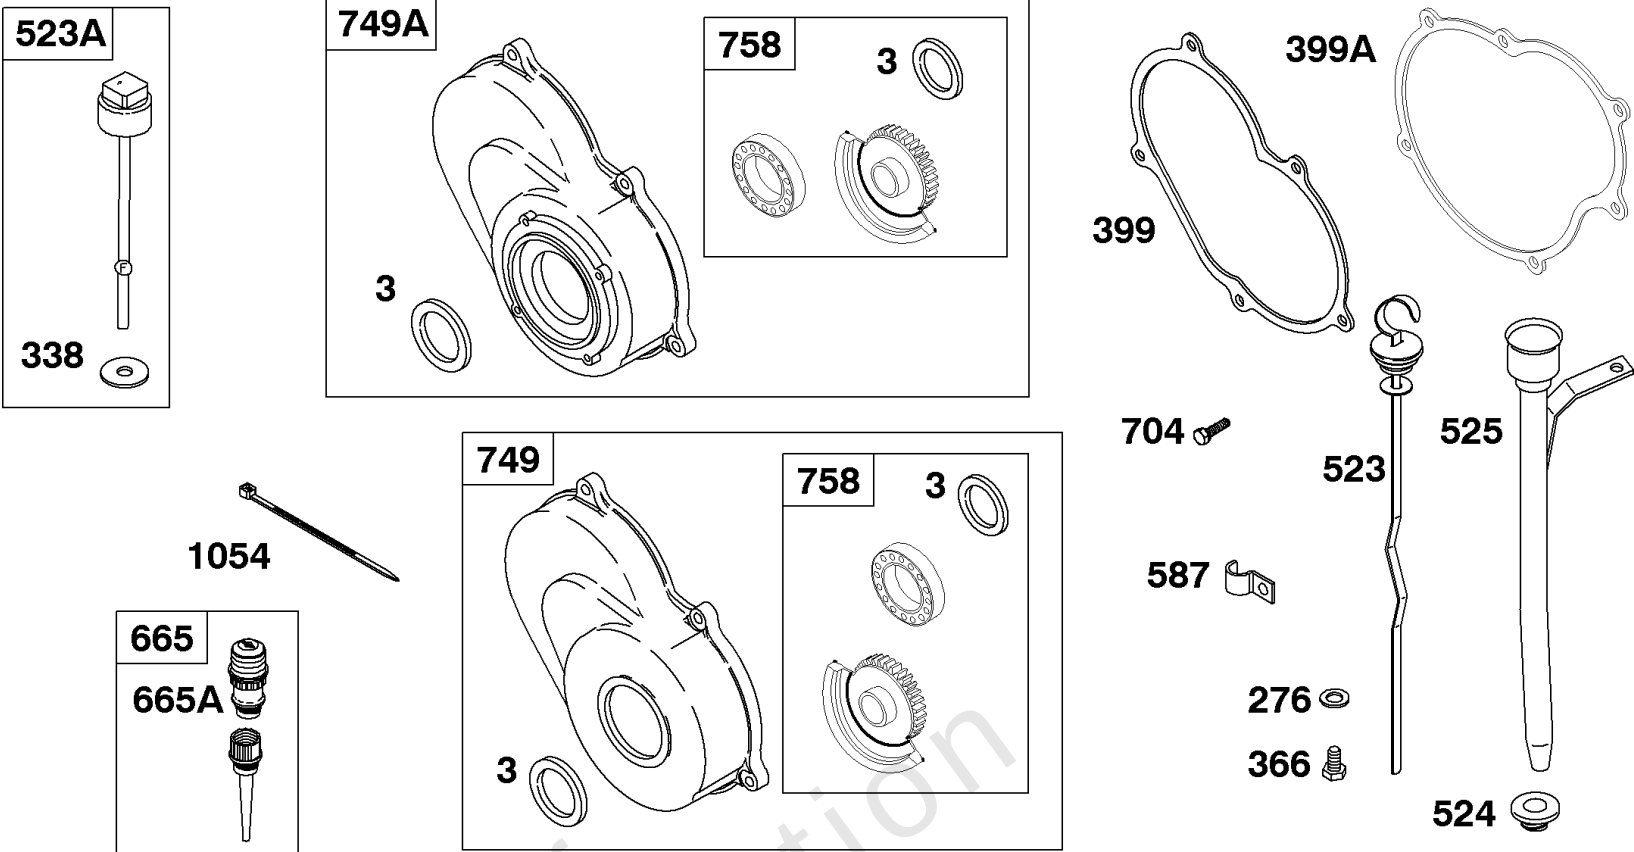 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	691948	Seal-Oil (Magneto Side)	525	690622	Tube-Dipstick ----- Note ----- 690623 Tube-Dipstick Used on Type No(s). 0121, 0144, 0157, 0158, 0164, 0165, 0169, 0170, 0182, 0184, 0192, 0198, 0210, 0222, 0234, 0235, 0240, 0248, 0262, 0266, 0309, 0312, 0316, 0331, 0338, 0341, 0351, 0358, 0630, 0638, 0679, 0705, 0707, 0724, 0744, 0750, 0755, 0770, 1160, 2581.	587	690389	Clamp-Cable
276	690258	Washer-Sealing				665	298860	Minder-Oil
338	690270	Gasket-Dipstick				665A	692939	Minder-Oil
366	690304	Screw (Timing Hole Plug)				704	691083	Screw (Counterweight Cover)
399	691310	Gasket-Counterweight Cover (Magneto Side)				749	391061	Cover-Counterweight
399A	692914	Gasket-Counterweight Cover (PTO Side)				749A	391361	Cover-Counterweight (Used on Alternator Equipped Engines)
523	691352	Dipstick				758	393164	Counterweight
523A	690620	Dipstick				1054	280275	Tie-Cable
524	281370S	Seal-Dipstick Tube						

Counterweight Cover, Oil Fill


REF NO	PART NO	QTY	DESCRIPTION
749A	391361		COVER, Gear -(Used on Alternator Equipped Engines)
749A	391361		COVER, Gear -(Used on Alternator Equipped Engines)
749A	391361		COVER, Gear -(Used on Alternator Equipped Engines)
749A	391361		COVER, Gear -(Used on Alternator Equipped Engines)
758	393164		COUNTERWEIGHT
758	393164		COUNTERWEIGHT
758	393164		COUNTERWEIGHT
758	393164		COUNTERWEIGHT
758	393164		COUNTERWEIGHT
1054	280275		TIE, Cable
1054	280275		TIE, Cable
1054	280275		TIE, Cable
1054	280275		TIE, Cable
1054	280275		TIE, Cable

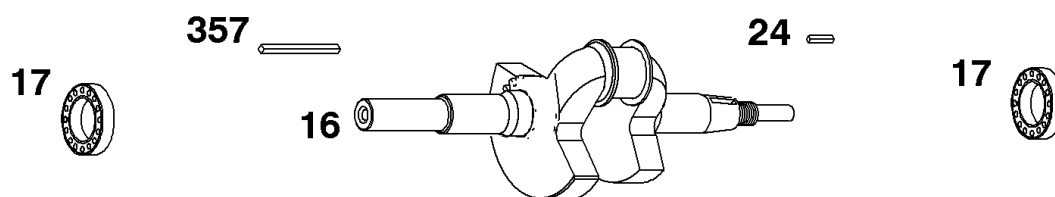 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16	691797	Crankshaft ----- Note ----- 690534 Crankshaft Used on Type No(s). 0237, 0133, 0190, 0252, 0315, 0788, 2582. 261222 Crankshaft Used on Type No(s). 0139, 0204, 0228, 0328, 0678. 690535 Crankshaft Used on Type No(s). 0050, 0116, 0130, 0143, 0147, 0149, 0150, 0151, 0156, 0167, 0170, 0172, 0173, 0174, 0185, 0186, 0188, 0192, 0193, 0208, 0219, 0231, 0248, 0257, 0286, 0290, 0310, 0317, 0318, 0329, 0337, 0343, 0371, 0636, 0638, 0666, 0669, 0684, 0690, 0706, 0721, 0751, 2550. 690536 Crankshaft Used on Type No(s). 0022, 0063, 0114, 0129, 0153, 0175, 0176, 0183, 0198, 0205, 0217, 0224, 0233, 0235, 0236, 0238, 0247, 0255, 0261, 0265, 0266, 0273, 0277, 0278, 0279, 0285, 0287, 0291, 0296, 0303, 0320, 0334, 0338, 0340, 0344, 0345, 0346, 0347, 0348, 0353, 0359, 0361, 0363, 0366, 0367, 0374, 0375, 0383, 0385, 0394, 0396, 0633, 0634, 0648, 0650, 0654, 0661,			0671, 0674, 0676, 0680, 0687, 0692, 0693, 0694, 0696, 0698, 0699, 0702, 0703, 0708, 0714, 0718, 0722, 0724, 0729, 0733, 0736, 0746, 0753, 0754, 0757, 0764, 0771, 0772, 0774, 0776, 0782, 0787, 2522, 2563, 2596. Crankshaft (NO LONGER AVAILABLE) Used on Type No(s). 0158, 0160, 0197, 0216, 0237. 690537 Crankshaft Used on Type No(s). 0210, 0262, 0630. 690540 Crankshaft Used on Type No(s). 0062, 0241, 0242, 0243, 0244, 0260, 0269, 0272, 0292, 0295, 0297, 0300, 0302, 0312, 0327, 0352, 0365, 0369, 0373, 0391, 0635, 0670, 0681, 0686, 0691, 0719, 0723, 0726, 0730, 0732, 0735, 0737, 0740, 0744, 0745, 0750, 0755, 0759, 0780, 0786, 2562. 690541 Crankshaft Used on Type No(s). 0061, 0124, 0246, 0253, 0305, 0308, 0335, 0341, 0342, 0646, 0710, 0711, 0713, 0728, 0781, 0785, 2529, 2561.			690543 Crankshaft Used on Type No(s). 0259, 0293, 0647, 0756. 691806 Crankshaft (Used After Code Date 77072410). Used on Type No(s). 0021, 0112, 0128, 0181, 0189, 0203, 0209, 0254, 0256, 0258, 0314, 0321, 0357, 0362, 0368, 0395, 0656, 0668, 0675, 0709, 0717, 0739, 0743, 0752, 0765, 0778, 0779, 0784, 0789, 0790, 0792, 0793, 0794, 0801, 0802, 0804, 2521, 2526, 2530. Crankshaft (Used Before Code Date 77072510). (NO LONGER AVAILABLE) Used on Type No(s). 0021, 0112, 0128, 0181, 0189, 0203, 0209, 0254, 0256, 0258, 0314, 0321, 0357, 0362, 0368, 0395, 0656, 0668, 0675, 0709, 0717, 0739, 0743, 0752, 0765, 0778, 0779, 0784, 0789, 0790, 0792, 0793, 0794, 0801, 0802, 0804, 2521, 2526, 2530. 690546 Crankshaft Used on Type No(s). 0682, 2560. 261944 Crankshaft Used on Type No(s). 0720, 0758, 0788.
						17	691938	Bearing-Ball
						24	222698s	Key-Flywheel
						357	601482	Key-Drive Pulley

Crankshaft


REF NO	PART NO	QTY	DESCRIPTION
16	-----		Crankshaft -(NO LONGER AVAILABLE) -Used Before Code Date 77072500
16	691806		CRANKSHAFT -Used After Code Date 77072400
16	-----		Crankshaft -(NO LONGER AVAILABLE) -Used Before Code Date 77072500
16	691806		CRANKSHAFT -Used After Code Date 77072400
16	-----		Crankshaft -(NO LONGER AVAILABLE) -Used Before Code Date 77072500
16	-----		Crankshaft -(NO LONGER AVAILABLE) -Used Before Code Date 77072500
16	691806		CRANKSHAFT -Used After Code Date 77072400
16	691806		CRANKSHAFT -Used After Code Date 77072400
16	691806		CRANKSHAFT -Used After Code Date 77072400
16	-----		Crankshaft -(NO LONGER AVAILABLE) -Used Before Code Date 77072500
17	691938		BEARING, Ball
17	691938		BEARING, Ball
17	691938		BEARING, Ball
17	691938		BEARING, Ball
17	691938		BEARING, Ball
24	222698S		KEY, Flywheel
24	222698S		KEY, Flywheel
24	222698S		KEY, Flywheel
24	222698S		KEY, Flywheel
24	222698S		KEY, Flywheel
357	691483		KEY, Drive Pulley
357	691483		KEY, Drive Pulley
357	691483		KEY, Drive Pulley
357	691483		KEY, Drive Pulley
357	691483		KEY, Drive Pulley

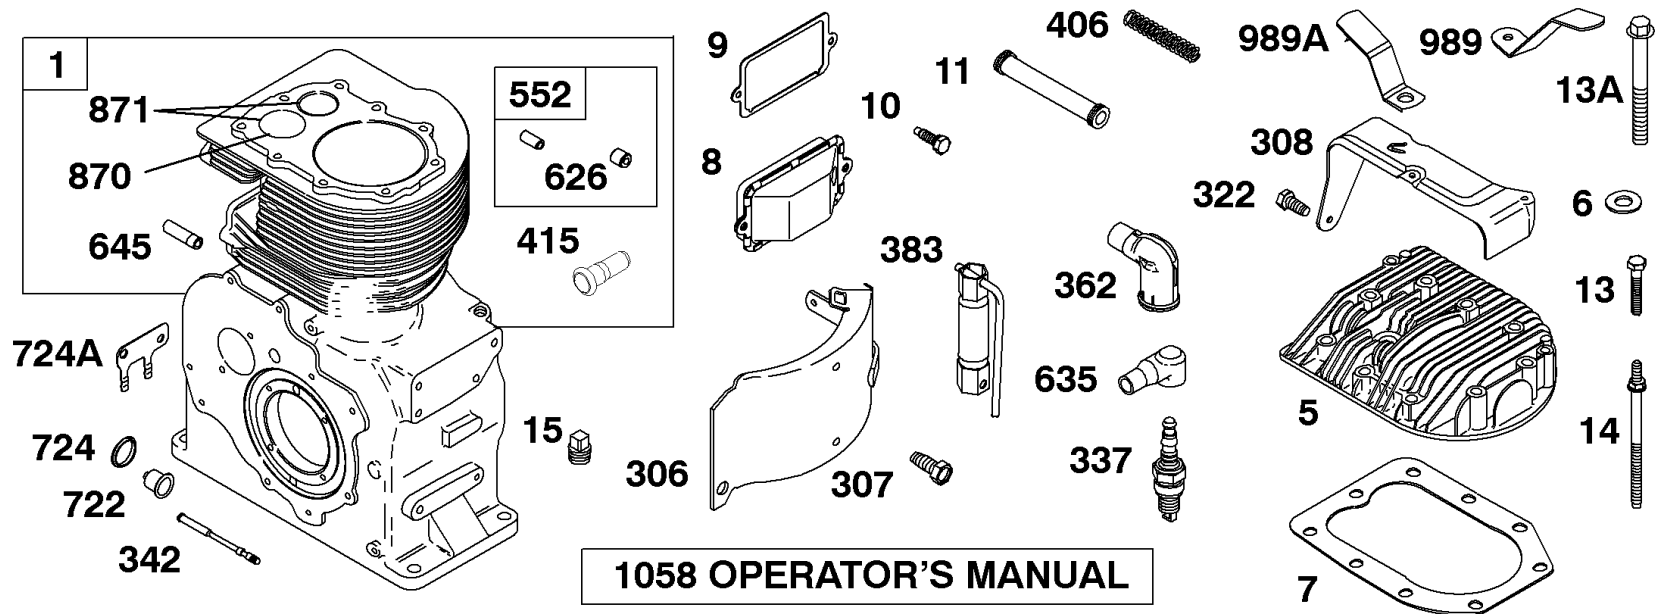 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	395663	Cylinder Assembly	308	691731	Cover-Cylinder Head (Used After Code Date 75060800).	870	691583	Seat-Valve (Exhaust)
5	691712	Head-Cylinder				871	231218	Bushing-Valve Guide
6	691261	Washer (Cylinder Head)			----- Note -----	989	690578	Stop Switch- Spark Plug
7	692231	Gasket-Cylinder Head			221953 Cover-Cylinder Head (Used Before Code Date 75060900). Used on Type No(s). 0291, 0648.			----- Note -----
8	495738	Breather Assembly						293739 Stop Switch- Spark Plug
9	27803S	Gasket-Breather						Used on Type No(s). 0200.
10	690294	Screw (Breather Assembly)	322	692198	Screw (Cylinder Head Cover)			298926 Stop Switch- Spark Plug
11	691512	Tube-Breather	337	802592S	Plug-Spark			Used on Type No(s). 0028, 0062, 0138, 0187, 0195, 0220, 0232, 0237, 0238, 0243, 0266, 0295, 0320, 0327, 0658, 0663, 0675, 0680, 0681, 0687, 0691, 0729, 0730, 0735, 2528, 2562.
13	691614	Screw (Cylinder Head) (1 3/4" Long)	342	298125S	Plunger-Breaker			390785 Stop Switch- Spark Plug
		----- Note -----	362	691954	Shield-Spark Plug			Used on Type No(s). 0640, 0734.
		691640 Screw (Cylinder Head) (2 1/16" Long)	383	89838	Wrench-Spark Plug	989A	690633	Stop Switch- Spark Plug
13A	691441	Screw (Cylinder Head) (2 7/16" Long)	406	690533	Spring-Breather Tube			
14	691690	Stud (Cylinder Head)	415	692882	Plug	1058	270373	Operator's Manual
15	692833	Plug-Oil Drain	552	393666	Bushing-Governor Crank			
306	299536	Shield-Cylinder	626	690512	Spacer-Governor Crank			
307	690294	Screw (Cylinder Shield)	635	66538S	Boot-Spark Plug			
			645	692880	Bushing-Plunger			
			722	68768	Seal-Plunger			
			724	93516	Retainer-Seal			
			724A	221873	Retainer-Seal			

Cylinder, Head, Spark Plug


REF NO	PART NO	QTY	DESCRIPTION
1	395663		CYLINDER ASSEMBLY
1	395663		CYLINDER ASSEMBLY
1	395663		CYLINDER ASSEMBLY
1	395663		CYLINDER ASSEMBLY
1	395663		CYLINDER ASSEMBLY
5	691712		HEAD, Cylinder
5	691712		HEAD, Cylinder
5	691712		HEAD, Cylinder
5	691712		HEAD, Cylinder
5	691712		HEAD, Cylinder
6	691261		WASHER -(Cylinder Head)
6	691261		WASHER -(Cylinder Head)
6	691261		WASHER -(Cylinder Head)
6	691261		WASHER -(Cylinder Head)
6	691261		WASHER -(Cylinder Head)
7	692231		GASKET, Cylinder Head
7	692231		GASKET, Cylinder Head
7	692231		GASKET, Cylinder Head
7	692231		GASKET, Cylinder Head
7	692231		GASKET, Cylinder Head
8	495738		BREATHER ASSEMBLY
8	495738		BREATHER ASSEMBLY
8	495738		BREATHER ASSEMBLY
8	495738		BREATHER ASSEMBLY
8	495738		BREATHER ASSEMBLY
9	27803S		GASKET, Breather
9	27803S		GASKET, Breather
9	27803S		GASKET, Breather
9	27803S		GASKET, Breather
9	27803S		GASKET, Breather
10	690294		SCREW -(Breather Assembly)
10	690294		SCREW -(Breather Assembly)
10	690294		SCREW -(Breather Assembly)
10	690294		SCREW -(Breather Assembly)
10	690294		SCREW -(Breather Assembly)
11	691512		TUBE, Breather
11	691512		TUBE, Breather
11	691512		TUBE, Breather
11	691512		TUBE, Breather
11	691512		TUBE, Breather
13	691614		SCREW -(Cylinder Head) (1 3/4)
13	691614		SCREW -(Cylinder Head) (1 3/4)
13	691640		SCREW -(Cylinder Head) (2 1/16)

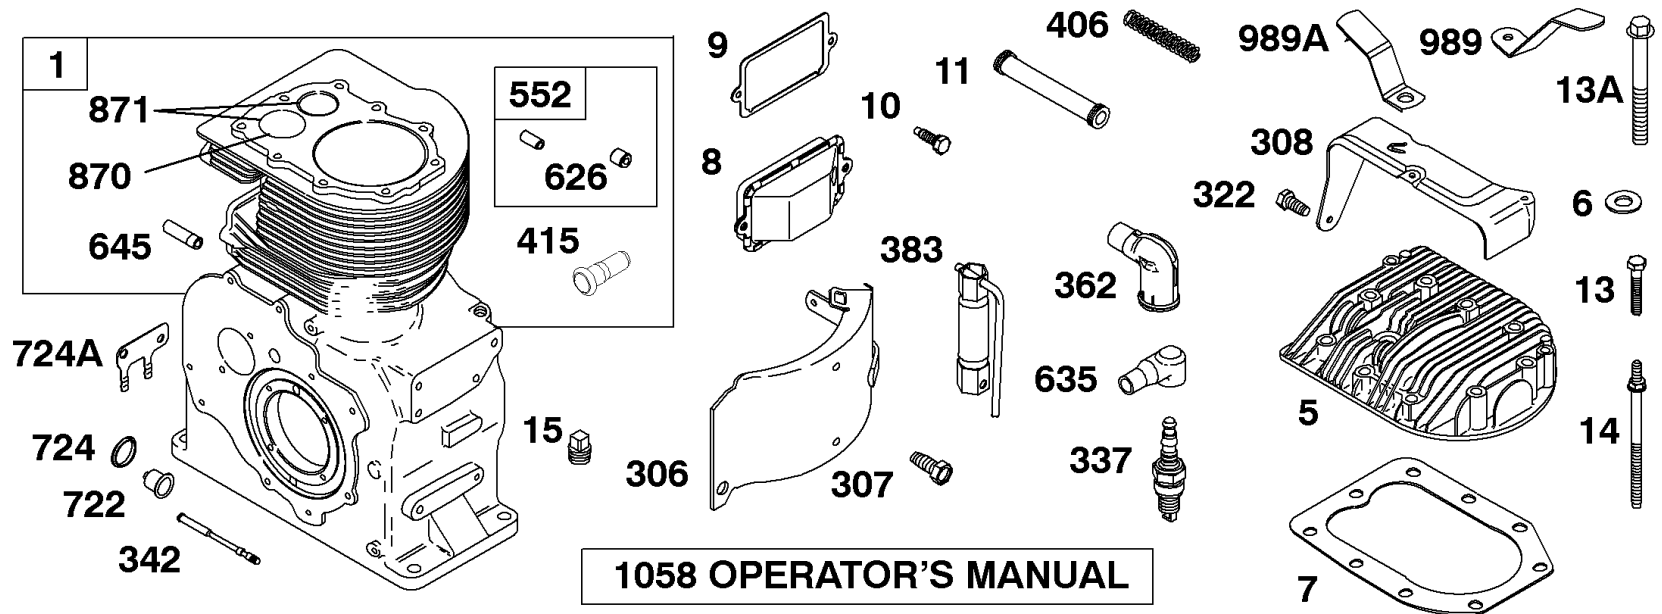 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	395663	Cylinder Assembly	308	691731	Cover-Cylinder Head (Used After Code Date 75060800).	870	691583	Seat-Valve (Exhaust)
5	691712	Head-Cylinder				871	231218	Bushing-Valve Guide
6	691261	Washer (Cylinder Head)			----- Note -----	989	690578	Stop Switch-Spark Plug
7	692231	Gasket-Cylinder Head			221953 Cover-Cylinder Head (Used Before Code Date 75060900). Used on Type No(s). 0291, 0648.			----- Note -----
8	495738	Breather Assembly						293739 Stop Switch-Spark Plug Used on Type No(s). 0200.
9	27803S	Gasket-Breather	322	692198	Screw (Cylinder Head Cover)			298926 Stop Switch-Spark Plug Used on Type No(s). 0028, 0062, 0138, 0187, 0195, 0220, 0232, 0237, 0238, 0243, 0266, 0295, 0320, 0327, 0658, 0663, 0675, 0680, 0681, 0687, 0691, 0729, 0730, 0735, 2528, 2562.
10	690294	Screw (Breather Assembly)	337	802592S	Plug-Spark			390785 Stop Switch-Spark Plug Used on Type No(s). 0640, 0734.
11	691512	Tube-Breather	342	298125S	Plunger-Breaker	989A	690633	Stop Switch-Spark Plug
13	691614	Screw (Cylinder Head) (1 3/4" Long)	362	691954	Shield-Spark Plug	1058	270373	Operator's Manual
		----- Note -----	383	89838	Wrench-Spark Plug			
		691640 Screw (Cylinder Head) (2 1/16" Long)	406	690533	Spring-Breather Tube			
13A	691441	Screw (Cylinder Head) (2 7/16" Long)	415	692882	Plug			
14	691690	Stud (Cylinder Head)	552	393666	Bushing-Governor Crank			
15	692833	Plug-Oil Drain	626	690512	Spacer-Governor Crank			
306	299536	Shield-Cylinder	635	66538S	Boot-Spark Plug			
307	690294	Screw (Cylinder Shield)	645	692880	Bushing-Plunger			
			722	68768	Seal-Plunger			
			724	93516	Retainer-Seal			
			724A	221873	Retainer-Seal			

Cylinder, Head, Spark Plug


REF NO	PART NO	QTY	DESCRIPTION
13	691640		SCREW -(Cylinder Head) (2 1/16)
13	691614		SCREW -(Cylinder Head) (1 3/4)
13	691614		SCREW -(Cylinder Head) (1 3/4)
13	691640		SCREW -(Cylinder Head) (2 1/16)
13	691640		SCREW -(Cylinder Head) (2 1/16)
13	691614		SCREW -(Cylinder Head) (1 3/4)
13	691640		SCREW -(Cylinder Head) (2 1/16)
13A	691441		SCREW -(Cylinder Head) (2 7/16)
13A	691441		SCREW -(Cylinder Head) (2 7/16)
13A	691441		SCREW -(Cylinder Head) (2 7/16)
13A	691441		SCREW -(Cylinder Head) (2 7/16)
13A	691441		SCREW -(Cylinder Head) (2 7/16)
14	691690		STUD -(Cylinder Head)
14	691690		STUD -(Cylinder Head)
14	691690		STUD -(Cylinder Head)
14	691690		STUD -(Cylinder Head)
14	691690		STUD -(Cylinder Head)
15	692833		PLUG, Oil Drain
15	692833		PLUG, Oil Drain
15	692833		PLUG, Oil Drain
15	692833		PLUG, Oil Drain
15	692833		PLUG, Oil Drain
306	299536		SHIELD, Cylinder
306	299536		SHIELD, Cylinder
306	299536		SHIELD, Cylinder
306	299536		SHIELD, Cylinder
306	299536		SHIELD, Cylinder
307	690294		SCREW -(Cylinder Shield)
307	690294		SCREW -(Cylinder Shield)
307	690294		SCREW -(Cylinder Shield)
307	690294		SCREW -(Cylinder Shield)
307	690294		SCREW -(Cylinder Shield)
308	691731		COVER, Cylinder Head -Used After Code Date 75060800
308	691731		COVER, Cylinder Head -Used After Code Date 75060800

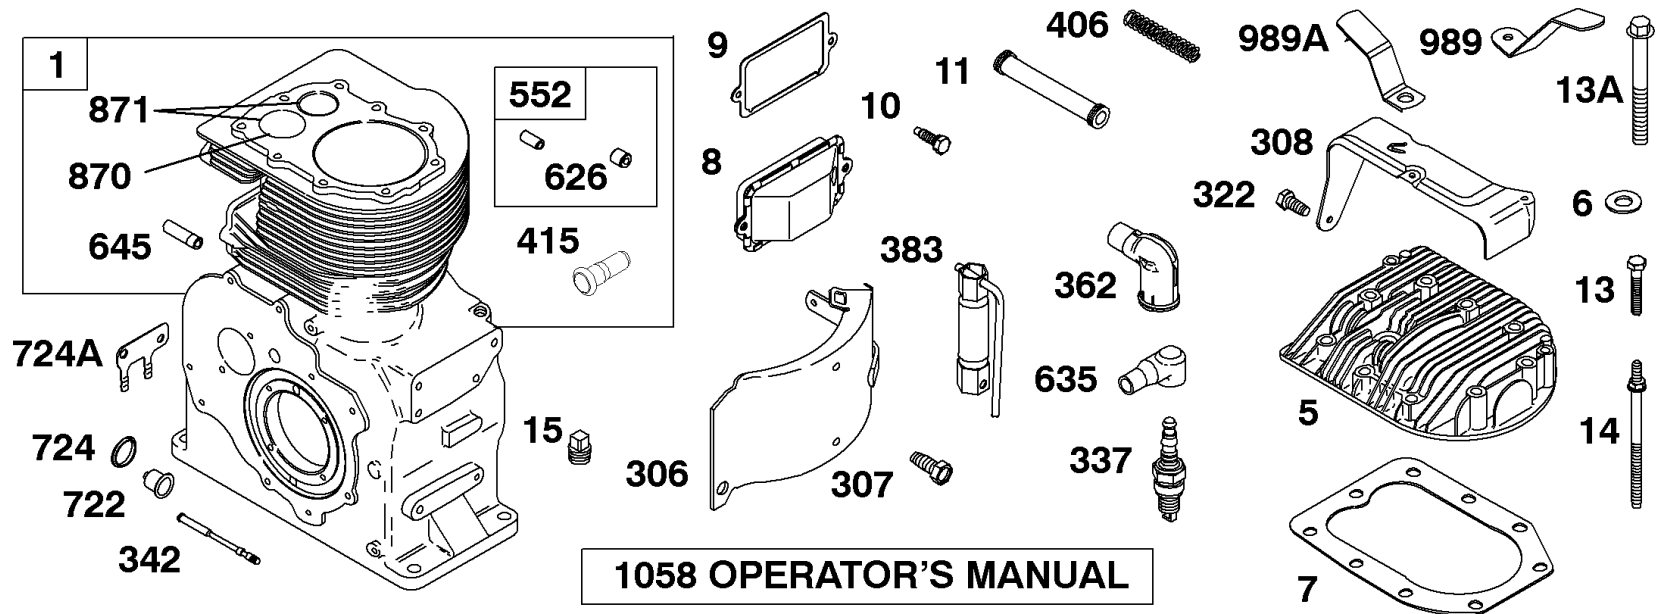 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	395663	Cylinder Assembly	308	691731	Cover-Cylinder Head (Used After Code Date 75060800).	870	691583	Seat-Valve (Exhaust)
5	691712	Head-Cylinder				871	231218	Bushing-Valve Guide
6	691261	Washer (Cylinder Head)			----- Note -----	989	690578	Stop Switch-Spark Plug
7	692231	Gasket-Cylinder Head			221953 Cover-Cylinder Head			----- Note -----
8	495738	Breather Assembly			(Used Before Code Date 75060900).			293739 Stop Switch-Spark Plug
9	27803S	Gasket-Breather			Used on Type No(s). 0291, 0648.			Used on Type No(s). 0200.
10	690294	Screw (Breather Assembly)	322	692198	Screw (Cylinder Head Cover)			298926 Stop Switch-Spark Plug
11	691512	Tube-Breather			Plug-Spark			Used on Type No(s). 0028, 0062, 0138, 0187, 0195, 0220, 0232, 0237, 0238, 0243, 0266, 0295, 0320, 0327, 0658, 0663, 0675, 0680, 0681, 0687, 0691, 0729, 0730, 0735, 2528, 2562.
13	691614	Screw (Cylinder Head) (1 3/4" Long)	337	802592S	Plunger-Breaker			390785 Stop Switch-Spark Plug
		----- Note -----	342	298125S	Shield-Spark Plug			Used on Type No(s). 0640, 0734.
		691640 Screw (Cylinder Head) (2 1/16" Long)	362	691954	Wrench-Spark Plug			
13A	691441	Screw (Cylinder Head) (2 7/16" Long)	383	89838	Spring-Breather Tube			
			406	690533	Plug			
14	691690	Stud (Cylinder Head)	415	692882	Bushing-Governor Crank			
15	692833	Plug-Oil Drain	552	393666	Spacer-Governor Crank			
306	299536	Shield-Cylinder	626	690512	Boot-Spark Plug			
307	690294	Screw (Cylinder Shield)	635	66538S	Bushing-Plunger			
			645	692880	Seal-Plunger			
			722	68768	Retainer-Seal			
			724	93516	Retainer-Seal			
			724A	221873		989A	690633	Stop Switch-Spark Plug
						1058	270373	Operator's Manual

Cylinder, Head, Spark Plug


REF NO	PART NO	QTY	DESCRIPTION
308	691731		COVER, Cylinder Head -Used After Code Date 75060800
308	691731		COVER, Cylinder Head -Used After Code Date 75060800
308	691731		COVER, Cylinder Head -Used After Code Date 75060800
322	692198		SCREW -(Cylinder Head Cover)
322	692198		SCREW -(Cylinder Head Cover)
322	692198		SCREW -(Cylinder Head Cover)
322	692198		SCREW -(Cylinder Head Cover)
322	692198		SCREW -(Cylinder Head Cover)
337	802592S		PLUG, Spark -(Resistor)
337	802592S		PLUG, Spark -(Resistor)
337	802592S		PLUG, Spark -(Resistor)
337	802592S		PLUG, Spark -(Resistor)
337	802592S		PLUG, Spark -(Resistor)
342	298125S		PLUNGER, Breaker
342	298125S		PLUNGER, Breaker
342	298125S		PLUNGER, Breaker
342	298125S		PLUNGER, Breaker
342	298125S		PLUNGER, Breaker
362	691954		SHIELD, Spark Plug
362	691954		SHIELD, Spark Plug
362	691954		SHIELD, Spark Plug
362	691954		SHIELD, Spark Plug
362	691954		SHIELD, Spark Plug
383	89838S		WRENCH, Spark Plug
383	89838S		WRENCH, Spark Plug
383	89838S		WRENCH, Spark Plug
383	89838S		WRENCH, Spark Plug
383	89838S		WRENCH, Spark Plug
406	690533		SPRING, Breather Tube
406	690533		SPRING, Breather Tube
406	690533		SPRING, Breather Tube
406	690533		SPRING, Breather Tube
406	690533		SPRING, Breather Tube
415	692882		PLUG
415	692882		PLUG
415	692882		PLUG
415	692882		PLUG
415	692882		PLUG
552	393666		BUSHING, Governor Crank
552	393666		BUSHING, Governor Crank
552	393666		BUSHING, Governor Crank
552	393666		BUSHING, Governor Crank

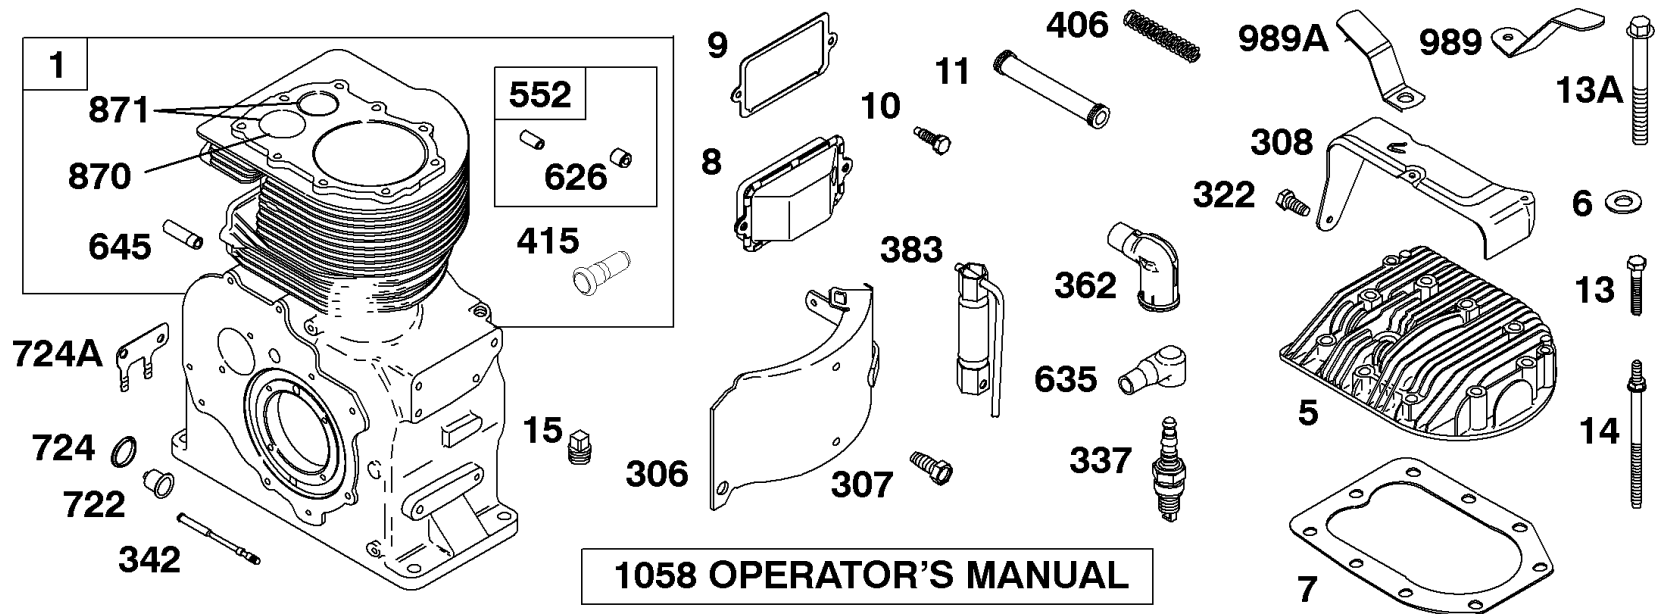 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	395663	Cylinder Assembly	308	691731	Cover-Cylinder Head (Used After Code Date 75060800).	870	691583	Seat-Valve (Exhaust)
5	691712	Head-Cylinder				871	231218	Bushing-Valve Guide
6	691261	Washer (Cylinder Head)			----- Note -----	989	690578	Stop Switch-Spark Plug
7	692231	Gasket-Cylinder Head			221953 Cover-Cylinder Head (Used Before Code Date 75060900). Used on Type No(s). 0291, 0648.			----- Note -----
8	495738	Breather Assembly						293739 Stop Switch-Spark Plug Used on Type No(s). 0200.
9	27803S	Gasket-Breather						298926 Stop Switch-Spark Plug Used on Type No(s). 0028, 0062, 0138, 0187, 0195, 0220, 0232, 0237, 0238, 0243, 0266, 0295, 0320, 0327, 0658, 0663, 0675, 0680, 0681, 0687, 0691, 0729, 0730, 0735, 2528, 2562.
10	690294	Screw (Breather Assembly)	322	692198	Screw (Cylinder Head Cover)			390785 Stop Switch-Spark Plug Used on Type No(s). 0640, 0734.
11	691512	Tube-Breather	337	802592S	Plug-Spark	989A	690633	Stop Switch-Spark Plug
13	691614	Screw (Cylinder Head) (1 3/4" Long)	342	298125S	Plunger-Breaker	1058	270373	Operator's Manual
		----- Note -----	362	691954	Shield-Spark Plug			
		691640 Screw (Cylinder Head) (2 1/16" Long)	383	89838	Wrench-Spark Plug			
13A	691441	Screw (Cylinder Head) (2 7/16" Long)	406	690533	Spring-Breather Tube			
14	691690	Stud (Cylinder Head)	415	692882	Plug			
15	692833	Plug-Oil Drain	552	393666	Bushing-Governor Crank			
306	299536	Shield-Cylinder	626	690512	Spacer-Governor Crank			
307	690294	Screw (Cylinder Shield)	635	66538S	Boot-Spark Plug			
			645	692880	Bushing-Plunger			
			722	68768	Seal-Plunger			
			724	93516	Retainer-Seal			
			724A	221873	Retainer-Seal			

Cylinder, Head, Spark Plug


REF NO	PART NO	QTY	DESCRIPTION
552	393666		BUSHING, Governor Crank
626	690512		SPACER -(Governor Lever)
626	690512		SPACER -(Governor Lever)
626	690512		SPACER -(Governor Lever)
626	690512		SPACER -(Governor Lever)
626	690512		SPACER -(Governor Lever)
635	66538S		BOOT, Spark PLug
635	66538S		BOOT, Spark PLug
635	66538S		BOOT, Spark PLug
635	66538S		BOOT, Spark PLug
635	66538S		BOOT, Spark PLug
645	692880		BUSHING, Plunger
645	692880		BUSHING, Plunger
645	692880		BUSHING, Plunger
645	692880		BUSHING, Plunger
645	692880		BUSHING, Plunger
722	68768		SEAL, Plunger
722	68768		SEAL, Plunger
722	68768		SEAL, Plunger
722	68768		SEAL, Plunger
722	68768		SEAL, Plunger
724	93516		RETAINER, Seal
724	93516		RETAINER, Seal
724	93516		RETAINER, Seal
724	93516		RETAINER, Seal
724	93516		RETAINER, Seal
724A	221873		RETAINER, Seal
724A	221873		RETAINER, Seal
724A	221873		RETAINER, Seal
724A	221873		RETAINER, Seal
724A	221873		RETAINER, Seal
870	691583		SEAT, Valve -(Exhaust)
870	691583		SEAT, Valve -(Exhaust)
870	691583		SEAT, Valve -(Exhaust)
870	691583		SEAT, Valve -(Exhaust)
870	691583		SEAT, Valve -(Exhaust)
871	231218		BUSHING, Valve Guide -(Intake)
871	231218		BUSHING, Valve Guide -(Intake)
871	231218		BUSHING, Valve Guide -(Intake)
871	231218		BUSHING, Valve Guide -(Intake)
871	231218		BUSHING, Valve Guide -(Intake)

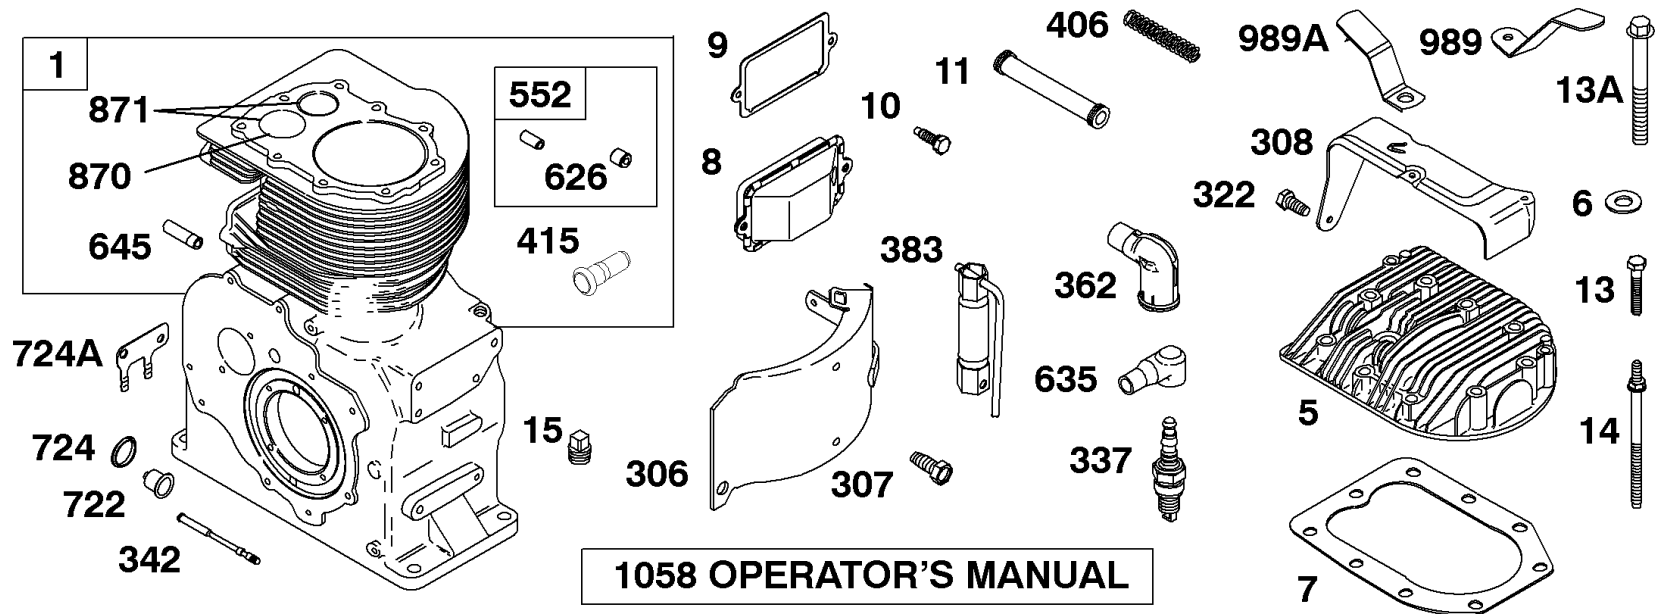 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	395663	Cylinder Assembly	308	691731	Cover-Cylinder Head (Used After Code Date 75060800).	870	691583	Seat-Valve (Exhaust)
5	691712	Head-Cylinder				871	231218	Bushing-Valve Guide
6	691261	Washer (Cylinder Head)			----- Note -----	989	690578	Stop Switch-Spark Plug
7	692231	Gasket-Cylinder Head			221953 Cover-Cylinder Head (Used Before Code Date 75060900). Used on Type No(s). 0291, 0648.			----- Note -----
8	495738	Breather Assembly						293739 Stop Switch-Spark Plug Used on Type No(s). 0200.
9	27803S	Gasket-Breather						298926 Stop Switch-Spark Plug Used on Type No(s). 0028, 0062, 0138, 0187, 0195, 0220, 0232, 0237, 0238, 0243, 0266, 0295, 0320, 0327, 0658, 0663, 0675, 0680, 0681, 0687, 0691, 0729, 0730, 0735, 2528, 2562.
10	690294	Screw (Breather Assembly)	322	692198	Screw (Cylinder Head Cover)			390785 Stop Switch-Spark Plug Used on Type No(s). 0640, 0734.
11	691512	Tube-Breather	337	802592S	Plug-Spark	989A	690633	Stop Switch-Spark Plug
13	691614	Screw (Cylinder Head) (1 3/4" Long)	342	298125S	Plunger-Breaker	1058	270373	Operator's Manual
		----- Note -----	362	691954	Shield-Spark Plug			
		691640 Screw (Cylinder Head) (2 1/16" Long)	383	89838	Wrench-Spark Plug			
13A	691441	Screw (Cylinder Head) (2 7/16" Long)	406	690533	Spring-Breather Tube			
14	691690	Stud (Cylinder Head)	415	692882	Plug			
15	692833	Plug-Oil Drain	552	393666	Bushing-Governor Crank			
306	299536	Shield-Cylinder	626	690512	Spacer-Governor Crank			
307	690294	Screw (Cylinder Shield)	635	66538S	Boot-Spark Plug			
			645	692880	Bushing-Plunger			
			722	68768	Seal-Plunger			
			724	93516	Retainer-Seal			
			724A	221873	Retainer-Seal			

Cylinder, Head, Spark Plug


REF NO	PART NO	QTY	DESCRIPTION
989	690578		SWITCH, Spark Plug Stop
989	690578		SWITCH, Spark Plug Stop
989	690578		SWITCH, Spark Plug Stop
989	690578		SWITCH, Spark Plug Stop
989	690578		SWITCH, Spark Plug Stop
989A	690633		SWITCH, Spark Plug Stop
989A	690633		SWITCH, Spark Plug Stop
989A	690633		SWITCH, Spark Plug Stop
989A	690633		SWITCH, Spark Plug Stop
989A	690633		SWITCH, Spark Plug Stop
1058	270373		MANUAL, Operator's
1058	270373		MANUAL, Operator's
1058	270373		MANUAL, Operator's
1058	270373		MANUAL, Operator's
1058	270373		MANUAL, Operator's

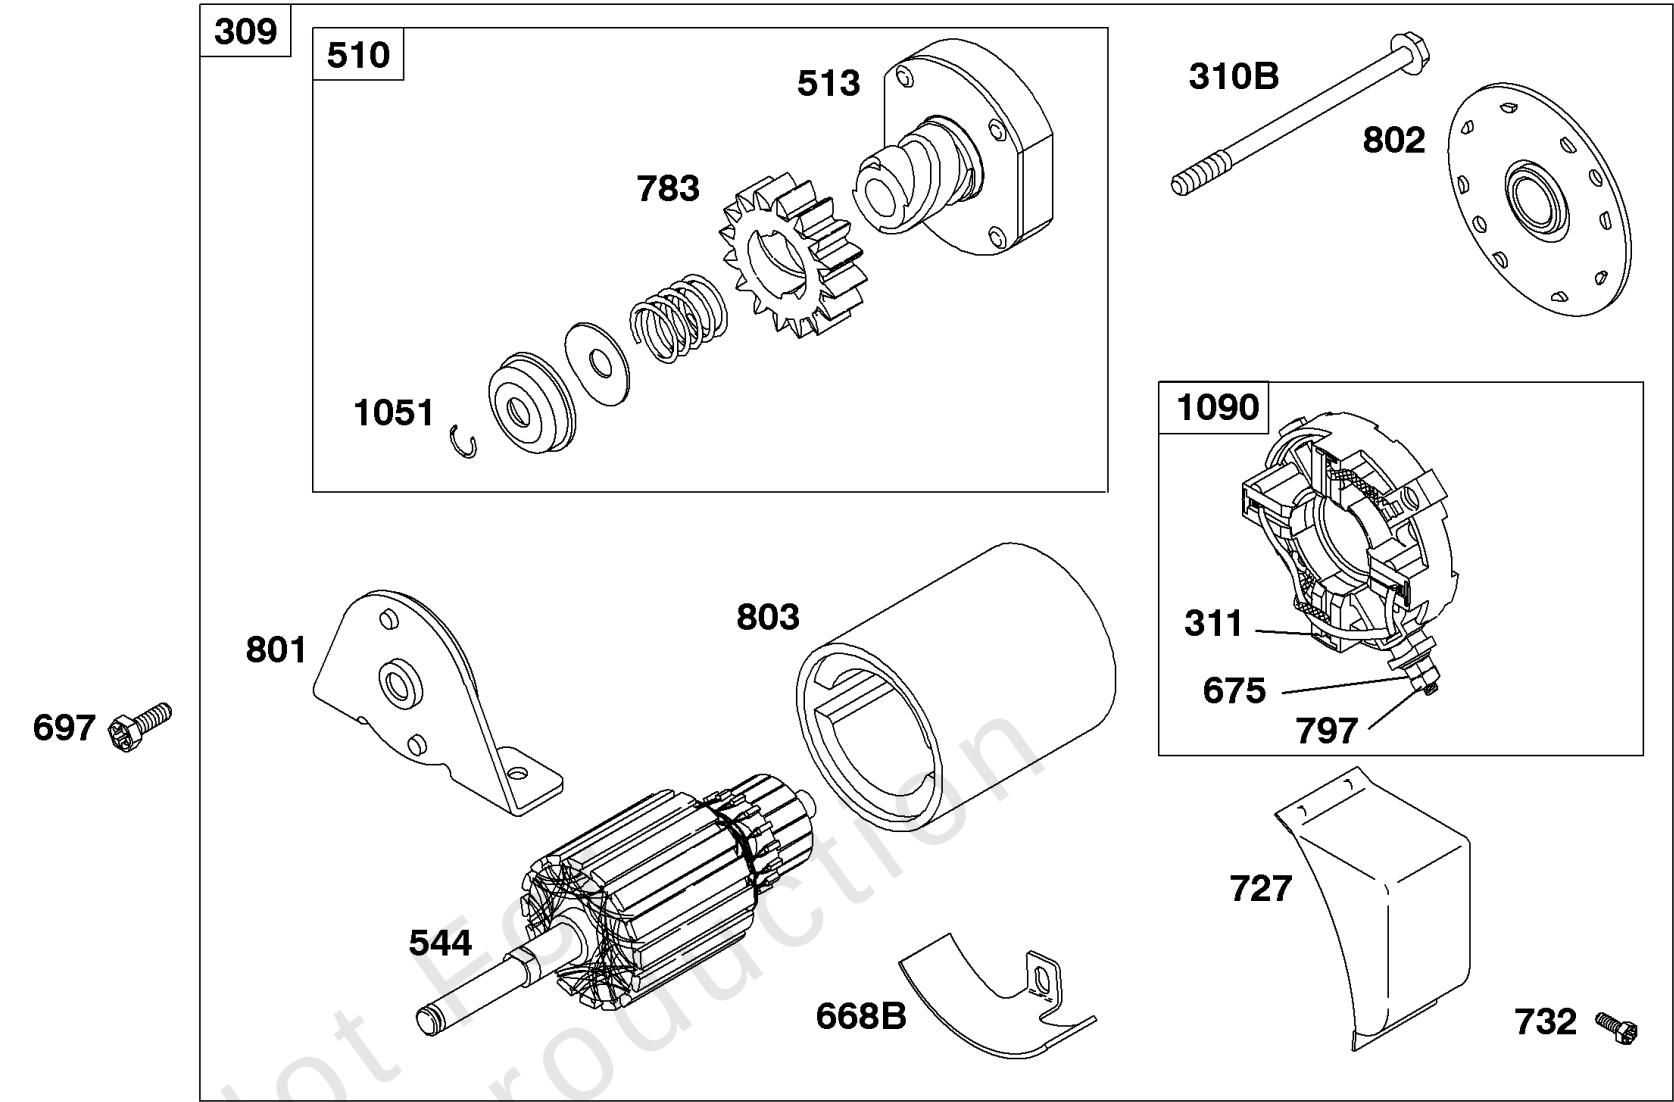 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309	396306	Motor-Starter	668B	396515	Spacer	797	691029	Nut
310B	691263	Screw	675	691261	Washer			(Brush Retainer)
		(Starter Motor)	697	691058	Screw	801	394802	Cap-Drive
		(4 3/4" Long)			(Drive Cap)	802	691286	Cap-End
311	497608	Brush Set	727	692338	Cover-Starter Drive	803		Housing-Starter
510	696541	Drive-Starter	732	93410	Screw			(Serviced By 396306
513	692024	Clutch-Drive			(Starter Drive Cover)			Starter Motor Only)
544		Armature-Starter	783	695708	Gear-Pinion	1051	691265	Ring-Retaining
		(Serviced By 396306				1090	691293	Retainer-Brush
		Starter Motor Only)						

Electric Starter 1


REF NO	PART NO	QTY	DESCRIPTION
309	396306		MOTOR, Starter
309	396306		MOTOR, Starter
309	396306		MOTOR, Starter
309	396306		MOTOR, Starter
309	396306		MOTOR, Starter
310B	691263		BOLT -(Starter Motor) (4 3/4) (4 3/8 Housing)
310B	691263		BOLT -(Starter Motor) (4 3/4) (4 3/8 Housing)
310B	691263		BOLT -(Starter Motor) (4 3/4) (4 3/8 Housing)
310B	691263		BOLT -(Starter Motor) (4 3/4) (4 3/8 Housing)
310B	691263		BOLT -(Starter Motor) (4 3/4) (4 3/8 Housing)
311	497608		SET, Brush
311	497608		SET, Brush
311	497608		SET, Brush
311	497608		SET, Brush
311	497608		SET, Brush
510	696541		DRIVE, Starter
510	696541		DRIVE, Starter
510	696541		DRIVE, Starter
510	696541		DRIVE, Starter
510	696541		DRIVE, Starter
513	692024		CLUTCH, Drive
513	692024		CLUTCH, Drive
513	692024		CLUTCH, Drive
513	692024		CLUTCH, Drive
513	692024		CLUTCH, Drive
544	-----		Armature-Starter -(Service With 396306 Starter Motor Only)
544	-----		Armature-Starter -(Service With 396306 Starter Motor Only)
544	-----		Armature-Starter -(Service With 396306 Starter Motor Only)
544	-----		Armature-Starter -(Service With 396306 Starter Motor Only)
544	-----		Armature-Starter -(Service With 396306 Starter Motor Only)
668B	396515		SPACER
668B	396515		SPACER
668B	396515		SPACER
668B	396515		SPACER
668B	396515		SPACER
675	691261		WASHER -(Brush Retainer)
675	691261		WASHER -(Brush Retainer)
675	691261		WASHER -(Brush Retainer)
675	691261		WASHER -(Brush Retainer)
675	691261		WASHER -(Brush Retainer)

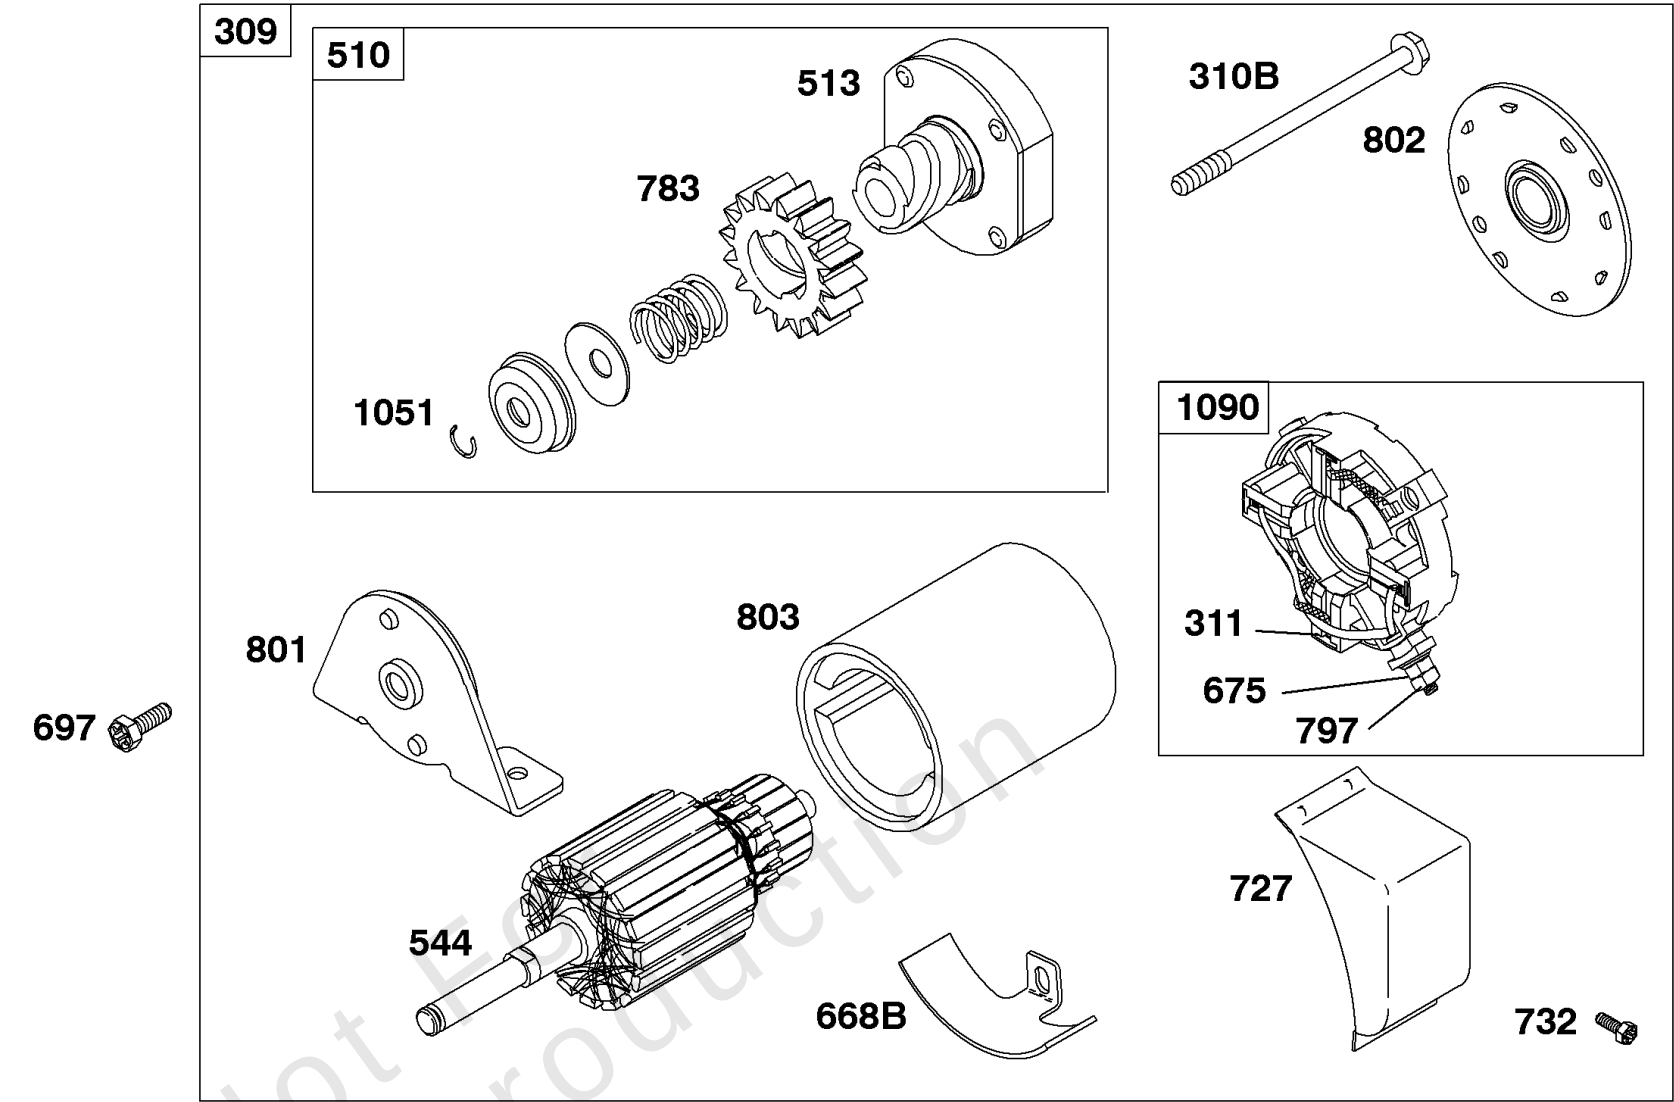 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309	396306	Motor-Starter	668B	396515	Spacer	797	691029	Nut (Brush Retainer)
310B	691263	Screw (Starter Motor) (4 3/4" Long)	675	691261	Washer (Brush Retainer)	801	394802	Cap-Drive
311	497608	Brush Set	697	691058	Screw (Drive Cap)	802	691286	Cap-End
510	696541	Drive-Starter	727	692338	Cover-Starter Drive	803		Housing-Starter (Serviced By 396306 Starter Motor Only)
513	692024	Clutch-Drive	732	93410	Screw (Starter Drive Cover)	1051	691265	Ring-Retaining
544		Armature-Starter (Serviced By 396306 Starter Motor Only)	783	695708	Gear-Pinion	1090	691293	Retainer-Brush

Electric Starter 1


REF NO	PART NO	QTY	DESCRIPTION
697	691058		SCREW -(Drive Cap)
697	691058		SCREW -(Drive Cap)
697	691058		SCREW -(Drive Cap)
697	691058		SCREW -(Drive Cap)
697	691058		SCREW -(Drive Cap)
727	692338		COVER-STARTER DRIVE
727	692338		COVER-STARTER DRIVE
727	692338		COVER-STARTER DRIVE
727	692338		COVER-STARTER DRIVE
727	692338		COVER-STARTER DRIVE
732	93410		SCREW -(Starter Drive Cover)
732	93410		SCREW -(Starter Drive Cover)
732	93410		SCREW -(Starter Drive Cover)
732	93410		SCREW -(Starter Drive Cover)
732	93410		SCREW -(Starter Drive Cover)
783	695708		GEAR-PINION
783	695708		GEAR-PINION
783	695708		GEAR-PINION
783	695708		GEAR-PINION
783	695708		GEAR-PINION
797	691029		NUT -(Brush Retainer)
797	691029		NUT -(Brush Retainer)
797	691029		NUT -(Brush Retainer)
797	691029		NUT -(Brush Retainer)
797	691029		NUT -(Brush Retainer)
801	394802		CAP, Drive
801	394802		CAP, Drive
801	394802		CAP, Drive
801	394802		CAP, Drive
801	394802		CAP, Drive
802	691286		CAP, End
802	691286		CAP, End
802	691286		CAP, End
802	691286		CAP, End
802	691286		CAP, End
803	-----		Housing-Starter -(Service With 396306 Starter Motor Only)
803	-----		Housing-Starter -(Service With 396306 Starter Motor Only)
803	-----		Housing-Starter -(Service With 396306 Starter Motor Only)

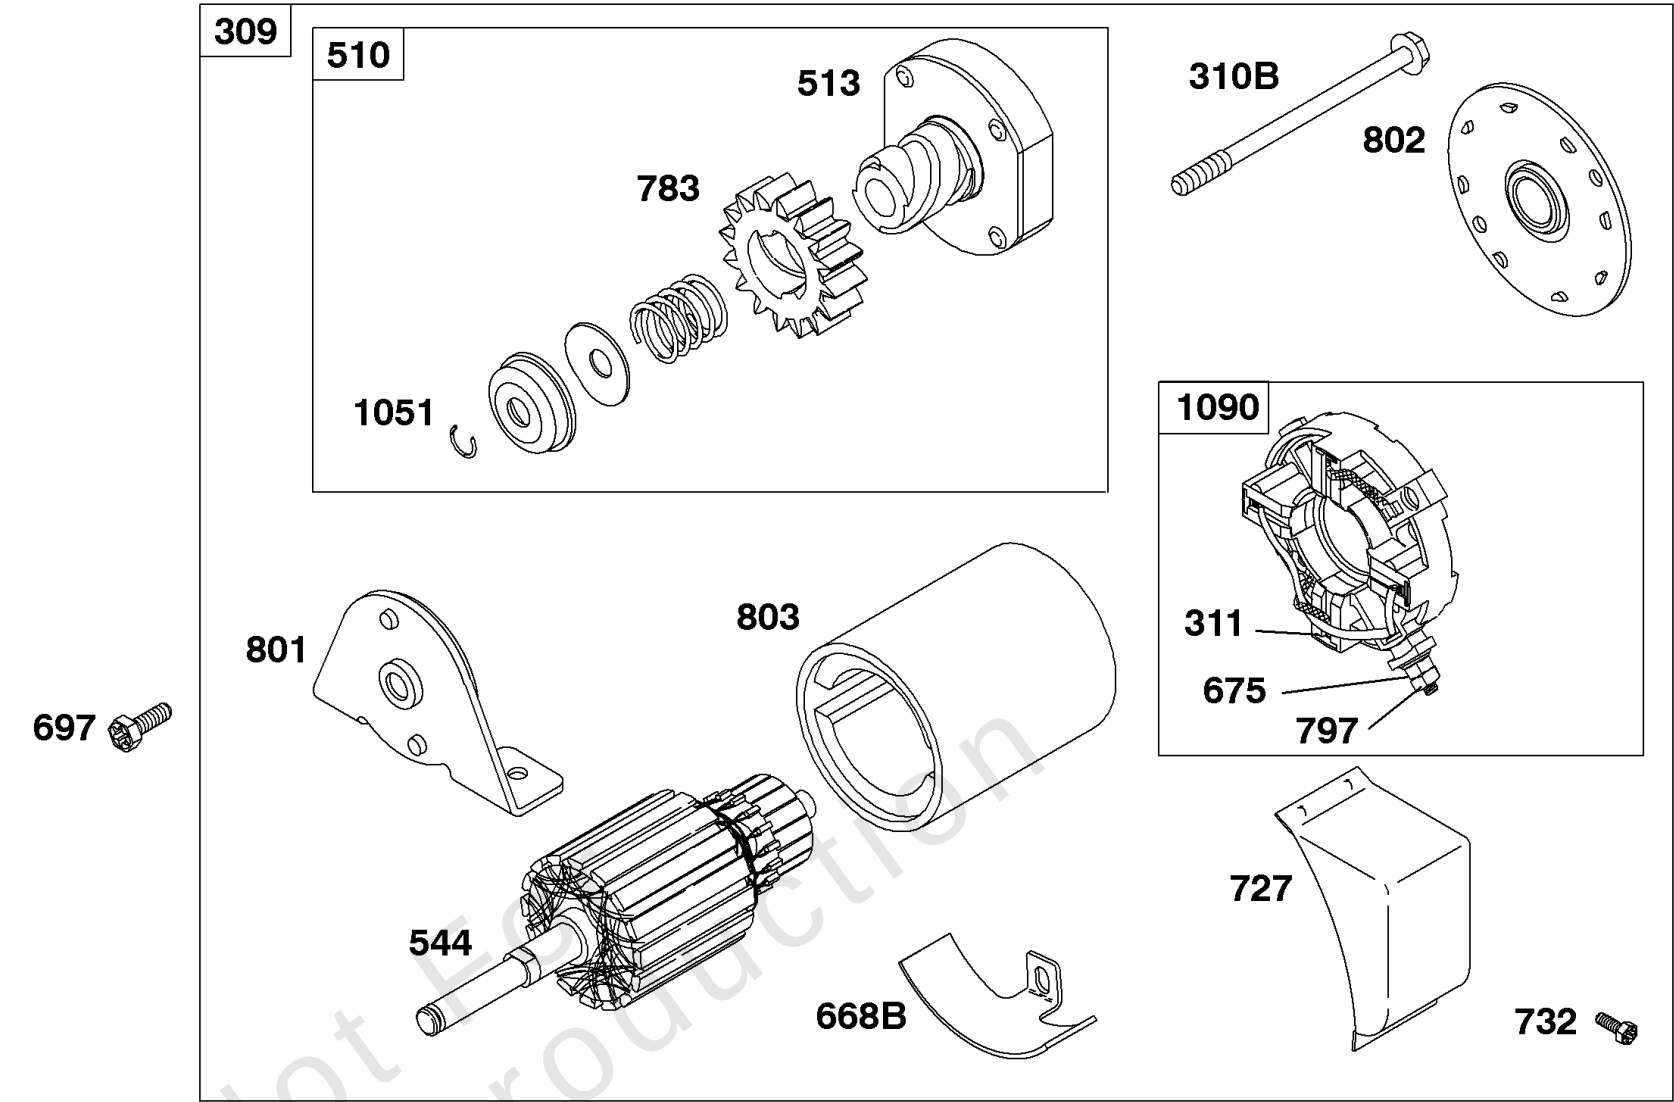 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309	396306	Motor-Starter	668B	396515	Spacer	797	691029	Nut
310B	691263	Screw	675	691261	Washer			(Brush Retainer)
		(Starter Motor)	697	691058	Screw	801	394802	Cap-Drive
		(4 3/4" Long)			(Drive Cap)	802	691286	Cap-End
311	497608	Brush Set	727	692338	Cover-Starter Drive	803		Housing-Starter
510	696541	Drive-Starter	732	93410	Screw			(Serviced By 396306
513	692024	Clutch-Drive			(Starter Drive Cover)			Starter Motor Only)
544		Armature-Starter	783	695708	Gear-Pinion	1051	691265	Ring-Retaining
		(Serviced By 396306				1090	691293	Retainer-Brush
		Starter Motor Only)						

Electric Starter 1


REF NO	PART NO	QTY	DESCRIPTION
803	-----		Housing-Starter -(Service With 396306 Starter Motor Only)
803	-----		Housing-Starter -(Service With 396306 Starter Motor Only)
1051	691265		RING, Retaining
1051	691265		RING, Retaining
1051	691265		RING, Retaining
1051	691265		RING, Retaining
1051	691265		RING, Retaining
1090	691293		RETAINER, Brush
1090	691293		RETAINER, Brush
1090	691293		RETAINER, Brush
1090	691293		RETAINER, Brush
1090	691293		RETAINER, Brush

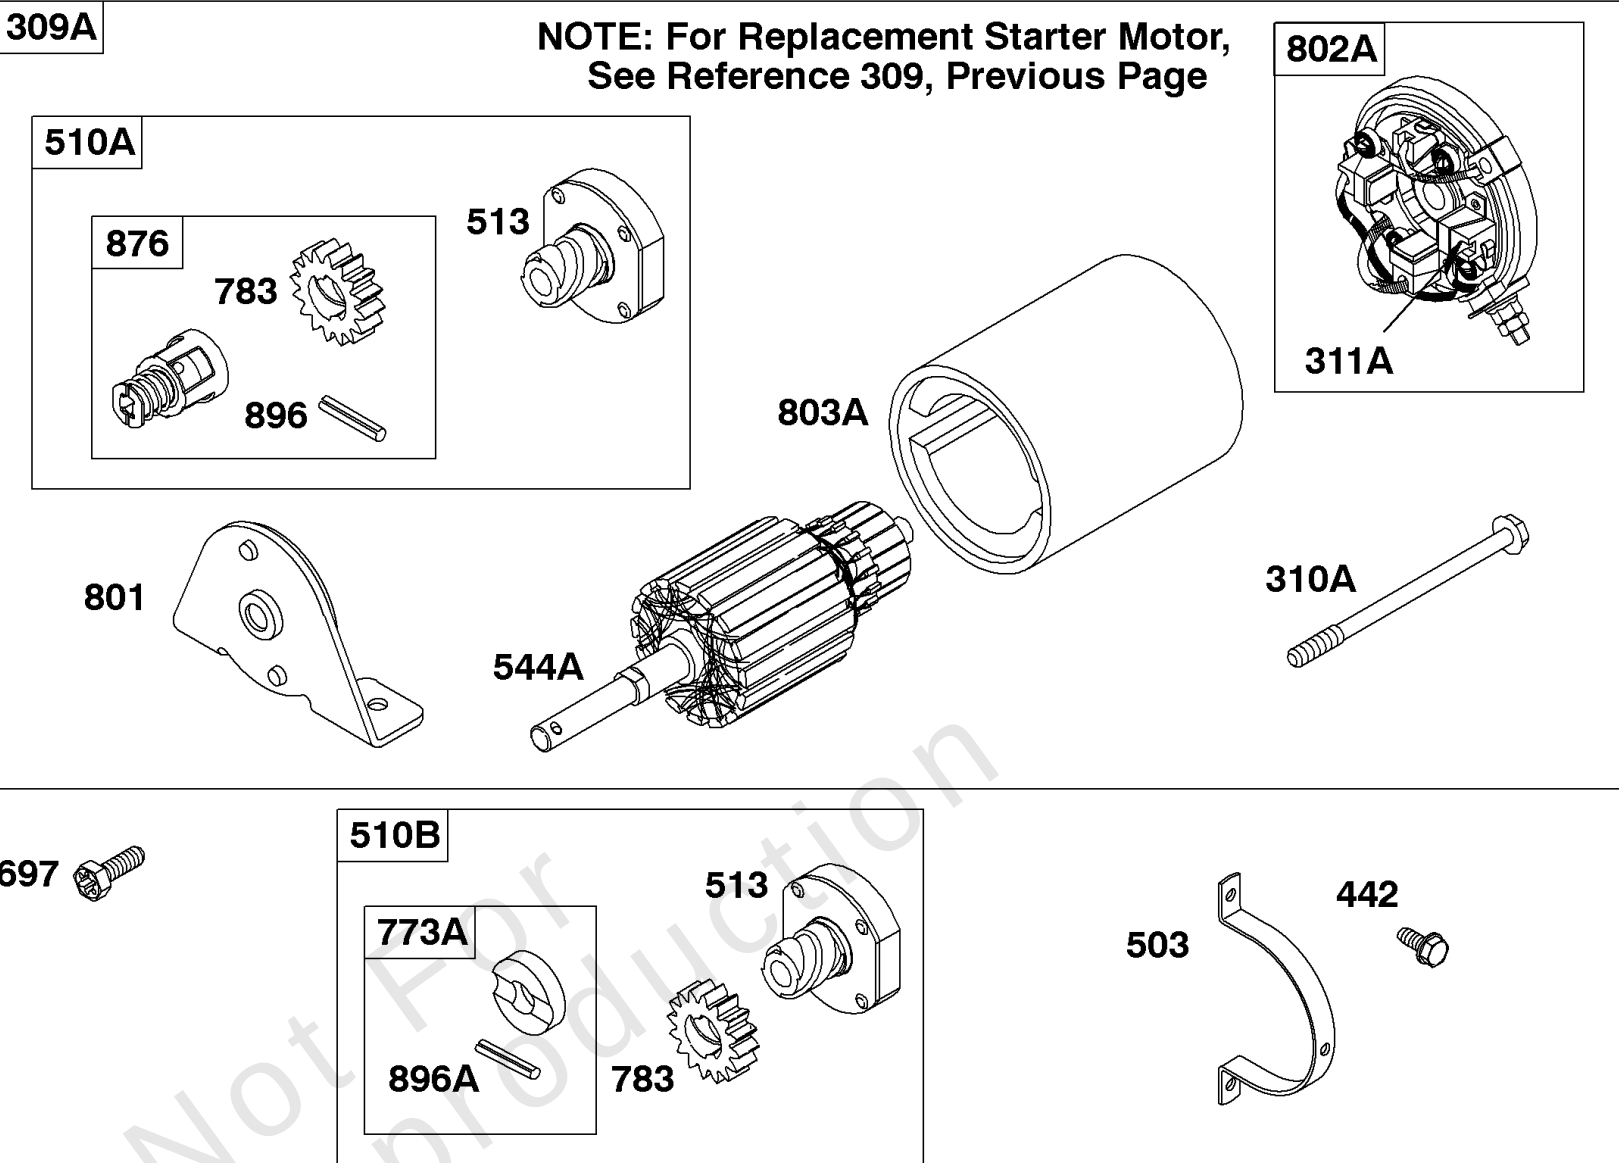 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309A		Motor-Starter (For Replacement Starter Motor, See Reference 309, Previous Page)	503	690406	Strap-Starter	801	394802	Cap-Drive
			510A	696540	Drive-Starter	802A	395537	Cap-End
			510B	696535	Drive-Starter	803A	494205	Housing-Starter
			513	692024	Clutch-Drive	876	696539	Kit-Pinion Spring
310A	692329	Screw (Starter Motor) (5" Long)	544A	490309	Armature Starter	896	691641	Pin-Drive Retainer (Copper)
			697	691058	Screw (Drive Cap)	896A	94192	Pin-Drive Retainer (Black)
311A	395538	Brush Set	773A	391462	Retainer			
442	691693	Screw (Starter Strap)	783	693059	Gear-Pinion			

Electric Starter 2


REF NO	PART NO	QTY	DESCRIPTION
309A	-----		Motor-Starter -(For Replacement Starter Motor, Order Reference 309)
309A	-----		Motor-Starter -(For Replacement Starter Motor, Order Reference 309)
309A	-----		Motor-Starter -(For Replacement Starter Motor, Order Reference 309)
309A	-----		Motor-Starter -(For Replacement Starter Motor, Order Reference 309)
309A	-----		Motor-Starter -(For Replacement Starter Motor, Order Reference 309)
310A	692329		BOLT -(Starter Motor) (5) (4 1/2 And 4 3/8 Housing)
310A	692329		BOLT -(Starter Motor) (5) (4 1/2 And 4 3/8 Housing)
310A	692329		BOLT -(Starter Motor) (5) (4 1/2 And 4 3/8 Housing)
310A	692329		BOLT -(Starter Motor) (5) (4 1/2 And 4 3/8 Housing)
310A	692329		BOLT -(Starter Motor) (5) (4 1/2 And 4 3/8 Housing)
311A	395538		SET, Brush -(3 5/8 Housing)
311A	395538		SET, Brush -(3 5/8 Housing)
311A	395538		SET, Brush -(3 5/8 Housing)
311A	395538		SET, Brush -(3 5/8 Housing)
311A	395538		SET, Brush -(3 5/8 Housing)
442	691693		SCREW -(Starter Strap)
442	691693		SCREW -(Starter Strap)
442	691693		SCREW -(Starter Strap)
442	691693		SCREW -(Starter Strap)
442	691693		SCREW -(Starter Strap)
503	690406		STRAP, Starter
503	690406		STRAP, Starter
503	690406		STRAP, Starter
503	690406		STRAP, Starter
503	690406		STRAP, Starter
510A	696540		DRIVE, Starter
510A	696540		DRIVE, Starter
510A	696540		DRIVE, Starter
510A	696540		DRIVE, Starter
510A	696540		DRIVE, Starter
510B	696535		DRIVE, Starter
510B	696535		DRIVE, Starter
510B	696535		DRIVE, Starter
510B	696535		DRIVE, Starter
510B	696535		DRIVE, Starter
513	692024		CLUTCH, Drive
513	692024		CLUTCH, Drive

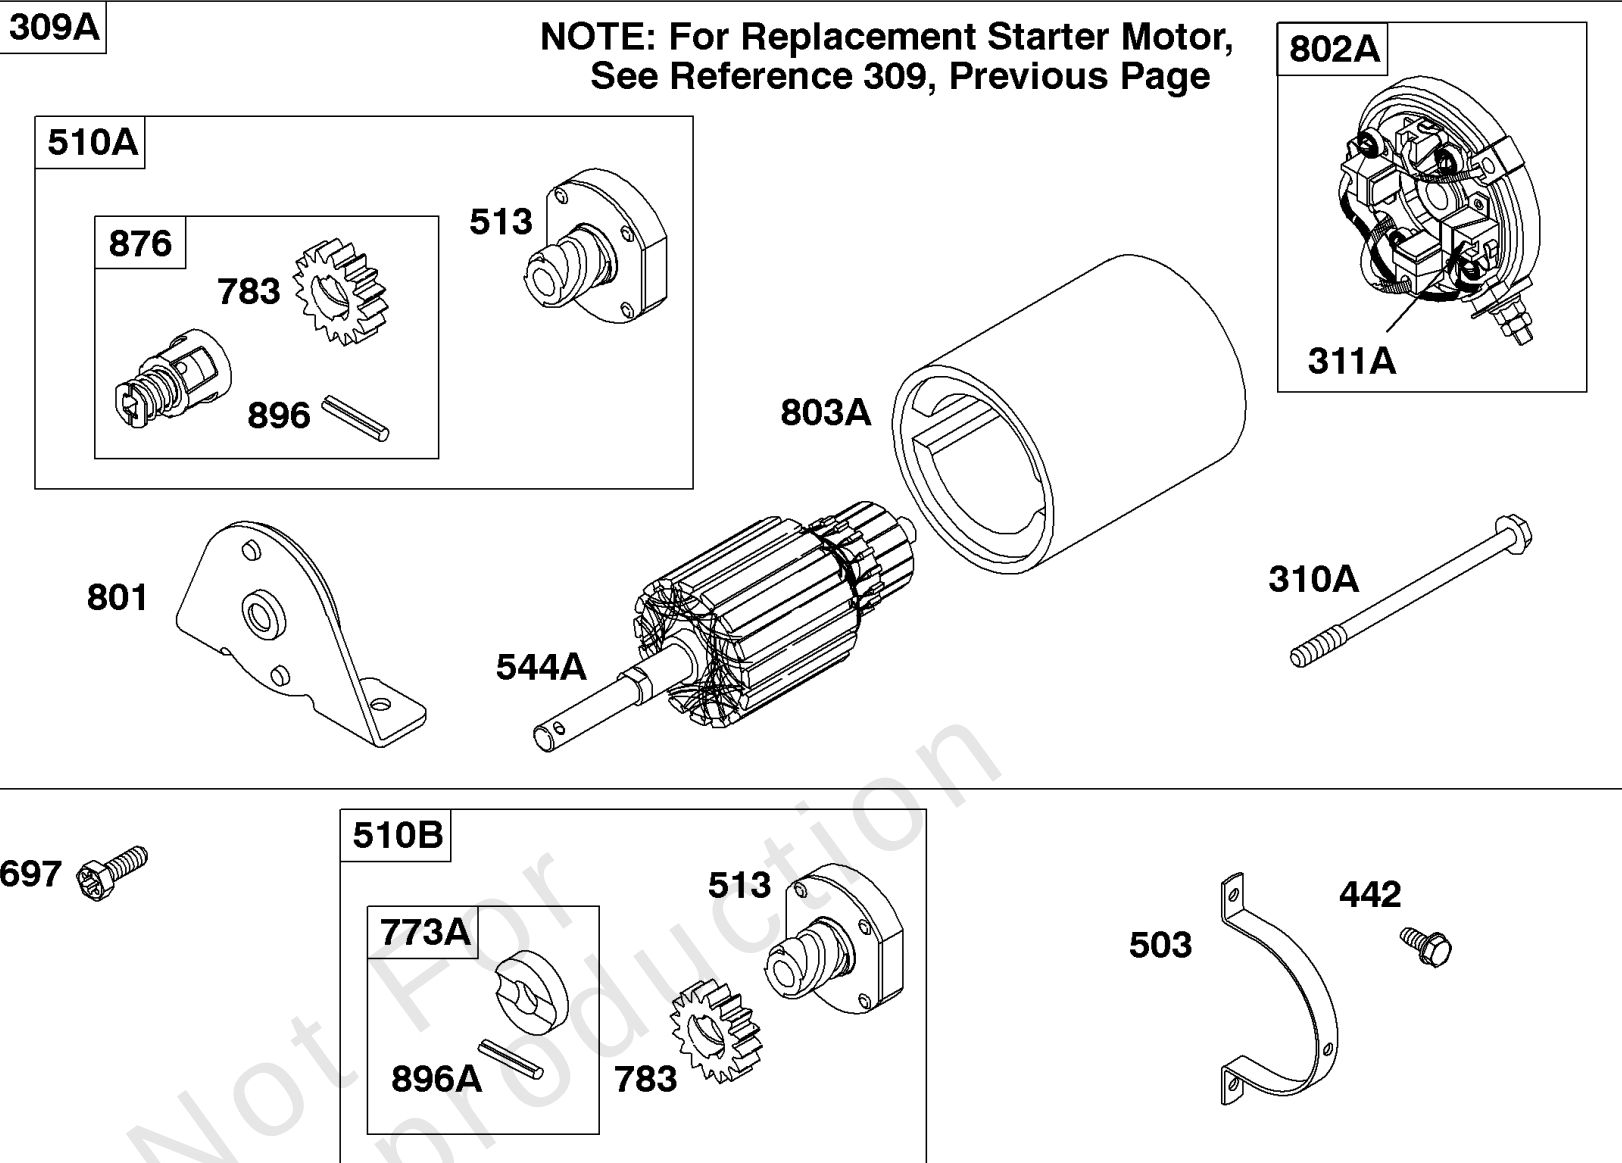 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309A		Motor-Starter (For Replacement Starter Motor, See Reference 309, Previous Page)	503	690406	Strap-Starter	801	394802	Cap-Drive
310A	692329	Screw (Starter Motor) (5" Long)	510A	696540	Drive-Starter	802A	395537	Cap-End
311A	395538	Brush Set	510B	696535	Drive-Starter	803A	494205	Housing-Starter
442	691693	Screw (Starter Strap)	513	692024	Clutch-Drive	876	696539	Kit-Pinion Spring
			544A	490309	Armature Starter	896	691641	Pin-Drive Retainer (Copper)
			697	691058	Screw (Drive Cap)	896A	94192	Pin-Drive Retainer (Black)
			773A	391462	Retainer			
			783	693059	Gear-Pinion			

Electric Starter 2




REF NO	PART NO	QTY	DESCRIPTION
513	692024		CLUTCH, Drive
513	692024		CLUTCH, Drive
513	692024		CLUTCH, Drive
544A	490309		ARMATURE, Starter -(4 1/2 And 4 3/8 Housing)
544A	490309		ARMATURE, Starter -(4 1/2 And 4 3/8 Housing)
544A	490309		ARMATURE, Starter -(4 1/2 And 4 3/8 Housing)
544A	490309		ARMATURE, Starter -(4 1/2 And 4 3/8 Housing)
544A	490309		ARMATURE, Starter -(4 1/2 And 4 3/8 Housing)
697	691058		SCREW -(Drive Cap)
697	691058		SCREW -(Drive Cap)
697	691058		SCREW -(Drive Cap)
697	691058		SCREW -(Drive Cap)
697	691058		SCREW -(Drive Cap)
773A	391462		RETAINER
773A	391462		RETAINER
773A	391462		RETAINER
773A	391462		RETAINER
773A	391462		RETAINER
783	695708		GEAR-PINION
783	695708		GEAR-PINION
783	695708		GEAR-PINION
783	695708		GEAR-PINION
783	695708		GEAR-PINION
801	394802		CAP, Drive
801	394802		CAP, Drive
801	394802		CAP, Drive
801	394802		CAP, Drive
801	394802		CAP, Drive
802A	395537		CAP, End -(3 5/8 Housing)
802A	395537		CAP, End -(3 5/8 Housing)
802A	395537		CAP, End -(3 5/8 Housing)
802A	395537		CAP, End -(3 5/8 Housing)
802A	395537		CAP, End -(3 5/8 Housing)
803A	494205		HOUSING, Starter -(4 3/8 Housing)
803A	494205		HOUSING, Starter -(4 3/8 Housing)
803A	494205		HOUSING, Starter -(4 3/8 Housing)
803A	494205		HOUSING, Starter -(4 3/8 Housing)
803A	494205		HOUSING, Starter -(4 3/8 Housing)

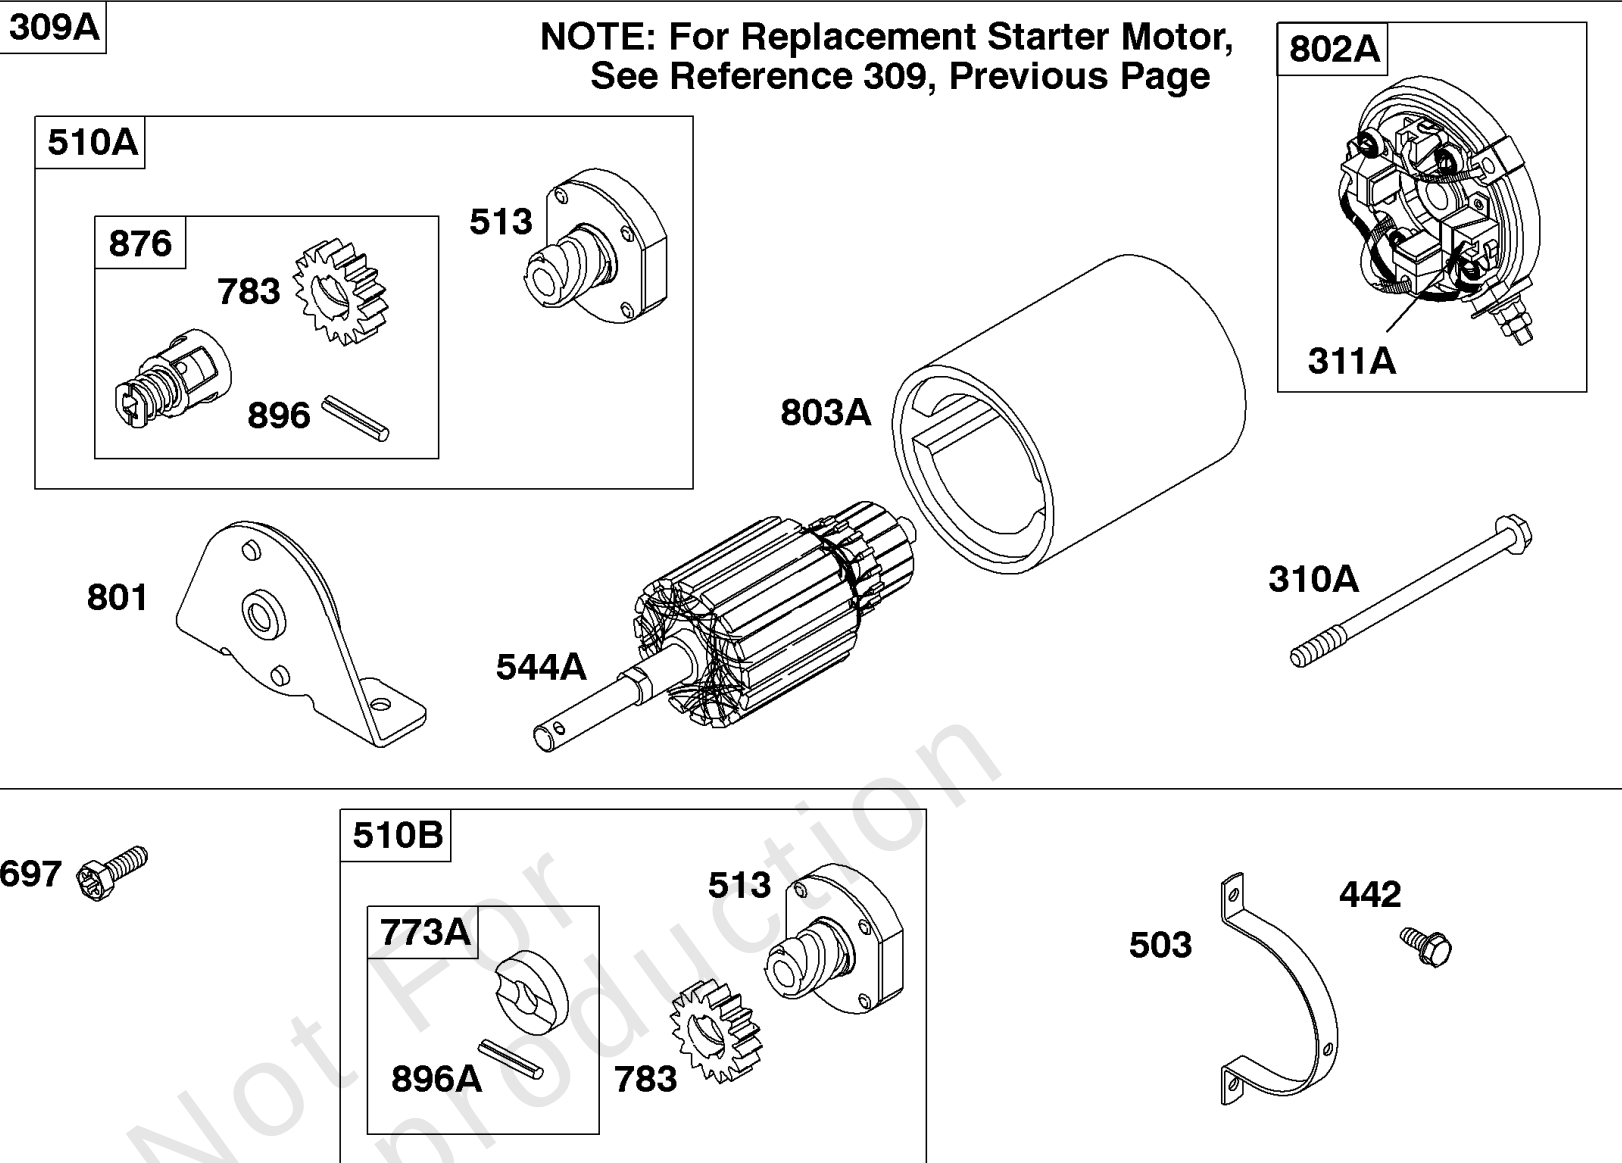 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
309A		Motor-Starter (For Replacement Starter Motor, See Reference 309, Previous Page)	503	690406	Strap-Starter	801	394802	Cap-Drive
			510A	696540	Drive-Starter	802A	395537	Cap-End
			510B	696535	Drive-Starter	803A	494205	Housing-Starter
			513	692024	Clutch-Drive	876	696539	Kit-Pinion Spring
310A	692329	Screw (Starter Motor) (5" Long)	544A	490309	Armature Starter	896	691641	Pin-Drive Retainer (Copper)
			697	691058	Screw (Drive Cap)	896A	94192	Pin-Drive Retainer (Black)
311A	395538	Brush Set	773A	391462	Retainer			
442	691693	Screw (Starter Strap)	783	693059	Gear-Pinion			

Electric Starter 2

REF NO	PART NO	QTY	DESCRIPTION
876	696539		KIT, Pinion Spring
876	696539		KIT, Pinion Spring
876	696539		KIT, Pinion Spring
876	696539		KIT, Pinion Spring
876	696539		KIT, Pinion Spring
896	691641		PIN, Drive Retainer -(Copper)
896	691641		PIN, Drive Retainer -(Copper)
896	691641		PIN, Drive Retainer -(Copper)
896	691641		PIN, Drive Retainer -(Copper)
896	691641		PIN, Drive Retainer -(Copper)
896A	94192		PIN, Drive Retainer -(Black)
896A	94192		PIN, Drive Retainer -(Black)
896A	94192		PIN, Drive Retainer -(Black)
896A	94192		PIN, Drive Retainer -(Black)
896A	94192		PIN, Drive Retainer -(Black)

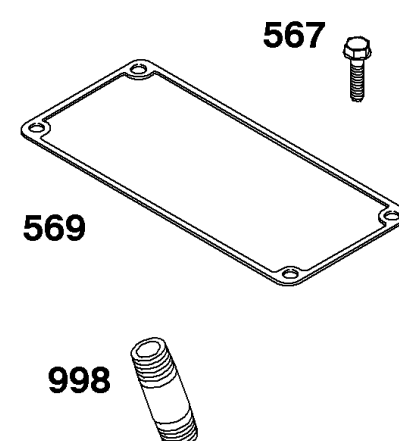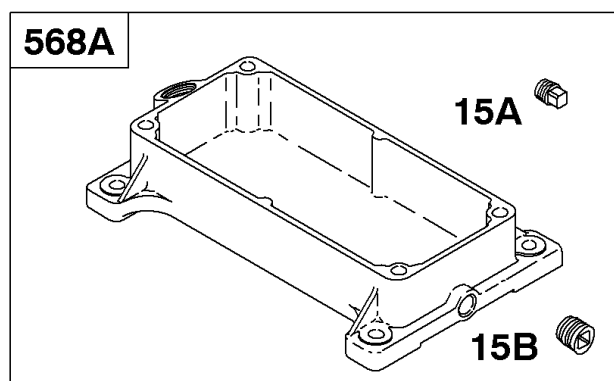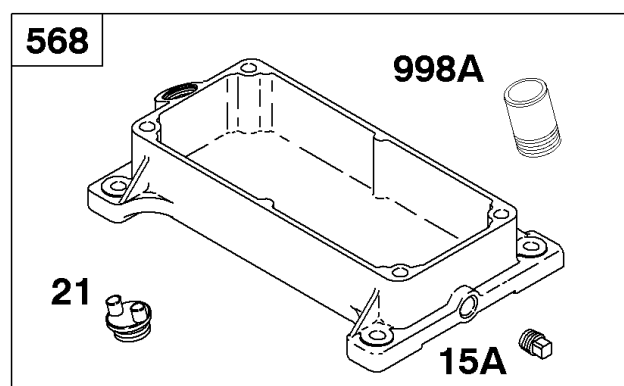   


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
15A	690946	Plug-Oil Drain	568A	391165	Base-Engine	569	691569	Gasket-Engine Base
15B	691680	Plug-Oil Drain			Used on Type No(s).	998	690307	Pipe-Oil
21	281658S	Cap-Oil Fill			0062, 0120, 0121,	998A	690502	Pipe-Oil
567	691104	Screw			0123, 0126, 0127,			
		(Engine Base)			0133, 0135, 0136,			
568	294751	Base-Engine			0140, 0144, 0149,			
		Used on Type No(s).			0157, 0158, 0162,			
		0020, 0023, 0050,			0163, 0164, 0165,			
		0139, 0145, 0150,			0169, 0170, 0172,			
		0151, 0152, 0155,			0173, 0174, 0178,			
		0159, 0175, 0191,			0180, 0182, 0183,			
		0199, 0203, 0206,			0184, 0185, 0186,			
		0208, 0212, 0218,			0190, 0192, 0198,			
		0219, 0226, 0356,			0201, 0204, 0205,			
		0804, 2527, 2583.			0210, 0215, 0222,			
		----- Note -----			0223, 0227, 0228,			
		291404 Base-			0230, 0234, 0235,			
		Engine			0240, 0246, 0248,			
		Used on Type No(s).			0252, 0253, 0254,			
		0134, 0135.			0255, 0259, 0262,			
					0283, 0284, 0291,			
					0293, 0306, 0308,			
					0310, 0311, 0312,			
					0315, 0316, 0326,			
					0328, 0331, 0333,			
					0341, 0351, 0354,			
					0360, 0384, 0392,			
					0630, 0638, 0647,			
					0648, 0649, 0659,			
					0660, 0669, 0673,			
					0678, 0679, 0686,			
					0705, 0712, 0723,			
					0724, 0725, 0726,			
					0732, 0735, 0737,			
					0740, 0744, 0750,			
					0755, 0756, 0759,			
					0780, 0781, 0786,			
					2562, 2581, 2582.			


Engine Base

REF NO	PART NO	QTY	DESCRIPTION
15A	690946		PLUG, Oil Drain
15A	690946		PLUG, Oil Drain
15A	690946		PLUG, Oil Drain
15A	690946		PLUG, Oil Drain
15A	690946		PLUG, Oil Drain
15B	691680		PLUG, Oil Drain
15B	691680		PLUG, Oil Drain
15B	691680		PLUG, Oil Drain
15B	691680		PLUG, Oil Drain
15B	691680		PLUG, Oil Drain
21	281658S		CAP, Oil Fill
21	281658S		CAP, Oil Fill
21	281658S		CAP, Oil Fill
21	281658S		CAP, Oil Fill
21	281658S		CAP, Oil Fill
567	691104		SCREW -(Engine Base)
567	691104		SCREW -(Engine Base)
567	691104		SCREW -(Engine Base)
567	691104		SCREW -(Engine Base)
567	691104		SCREW -(Engine Base)
569	691569		GASKET, Crankcase
569	691569		GASKET, Crankcase
569	691569		GASKET, Crankcase
569	691569		GASKET, Crankcase
569	691569		GASKET, Crankcase
998	690307		PIPE, Oil
998	690307		PIPE, Oil
998	690307		PIPE, Oil
998	690307		PIPE, Oil
998	690307		PIPE, Oil
998A	690502		PIPE, Oil
998A	690502		PIPE, Oil
998A	690502		PIPE, Oil
998A	690502		PIPE, Oil
998A	690502		PIPE, Oil

 
1095 VALVE GASKET SET

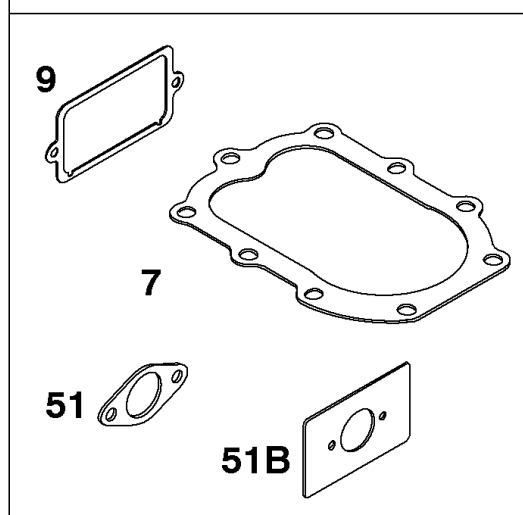

358 ENGINE GASKET SET

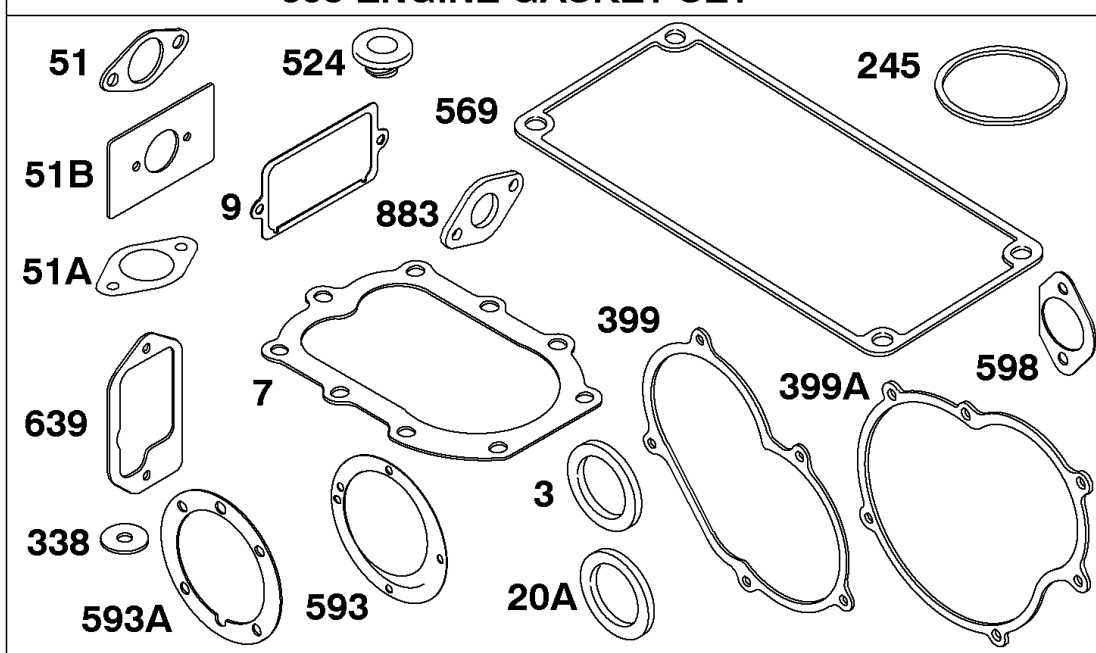 

121 CARBURETOR OVERHAUL KIT

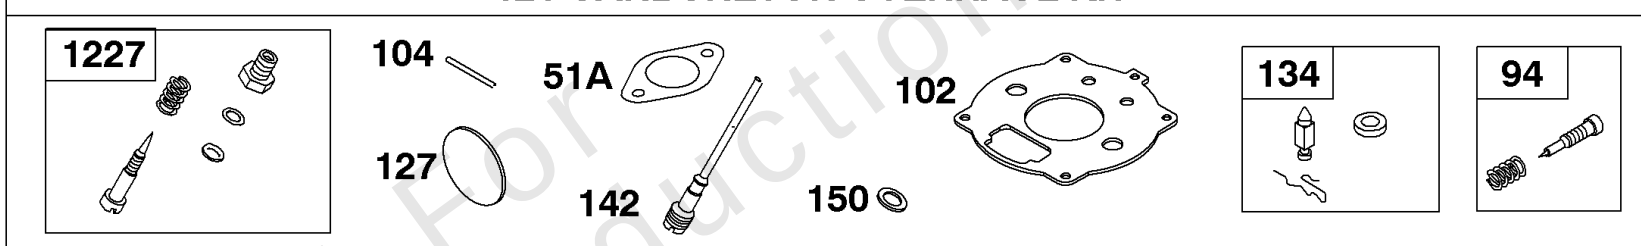 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	691948	Seal-Oil (Magnetoside)	142	691966	Nozzle-Carburetor (Labeled B)	598	270516	Shim-End Play (Camshaft Bearing) (.009" Thick)
7	272166	Gasket-Cylinder Head	150	691610	Gasket-Nozzle	----- Note ----- 270517 Shim-End Play (Camshaft Bearing) (.007" Thick) 270518 Shim-End Play (Camshaft Bearing) (.005" Thick)		
9	27803S	Gasket-Breather	245	692190	Gasket-Fuel Bowl			
20A	291675S	Seal-Oil (PTO Side)	338	690270	Gasket-Dipstick			
51	27381	Gasket-Intake	358	299719	Gasket Set-Engine	639	692913	Gasket-Breaker Box
51A	692214	Gasket-Intake	399	691310	Gasket-Counterweight Cover (Magnetoside)	883	692236	Gasket-Exhaust
51B	692917	Gasket-Intake	399A	692914	Gasket-Counterweight Cover (PTO Side)	1095	498540	Gasket Set-Valve
94	292681	Kit-Idle Mixture	524	281370S	Seal-Dipstick Tube	1227	99525S	Valve-High Speed
102	692215	Gasket-Carburetor Body	569	691569	Gasket-Engine Base			
104	691775	Pin-Float Hinge	593	691311	Gasket-Bearing Support			
121	394989	Kit-Carburetor Overhaul (Used After Code Date 81090800).	593A	270513	Gasket-Bearing Support (.015" Thick)			
		----- Note ----- 391071 Kit-Carburetor Overhaul (Used Before Code Date 81090900).			----- Note ----- 270514 Gasket-Bearing Support (.010" Thick) 270515 Gasket-Bearing Support (.005" Thick)			
127	690627	Plug-Welch						
134	394681	Kit-Needle/Seat						


Engine/Valve/Carburetor Gasket Sets

REF NO	PART NO	QTY	DESCRIPTION
3	691948		SEAL, Oil -(Magneto Side)
3	691948		SEAL, Oil -(Magneto Side)
3	691948		SEAL, Oil -(Magneto Side)
3	691948		SEAL, Oil -(Magneto Side)
3	691948		SEAL, Oil -(Magneto Side)
7	692231		GASKET, Cylinder Head
7	692231		GASKET, Cylinder Head
7	692231		GASKET, Cylinder Head
7	692231		GASKET, Cylinder Head
7	692231		GASKET, Cylinder Head
9	27803S		GASKET, Breather
9	27803S		GASKET, Breather
9	27803S		GASKET, Breather
9	27803S		GASKET, Breather
9	27803S		GASKET, Breather
20A	291675S		SEAL, Oil -(PTO Side)
20A	291675S		SEAL, Oil -(PTO Side)
20A	291675S		SEAL, Oil -(PTO Side)
20A	291675S		SEAL, Oil -(PTO Side)
20A	291675S		SEAL, Oil -(PTO Side)
51	27381S		GASKET, Intake
51	27381S		GASKET, Intake
51	27381S		GASKET, Intake
51	27381S		GASKET, Intake
51	27381S		GASKET, Intake
51A	692214		GASKET, Intake
51A	692214		GASKET, Intake
51A	692214		GASKET, Intake
51A	692214		GASKET, Intake
51A	692214		GASKET, Intake
51B	692917		GASKET, Intake
51B	692917		GASKET, Intake
51B	692917		GASKET, Intake
51B	692917		GASKET, Intake
51B	692917		GASKET, Intake
94	292681		VALVE, Idle Mixture
94	292681		VALVE, Idle Mixture
94	292681		VALVE, Idle Mixture
94	292681		VALVE, Idle Mixture
94	292681		VALVE, Idle Mixture
102	692215		GASKET, Carburetor Body
102	692215		GASKET, Carburetor Body
102	692215		GASKET, Carburetor Body
102	692215		GASKET, Carburetor Body

 
1095 VALVE GASKET SET

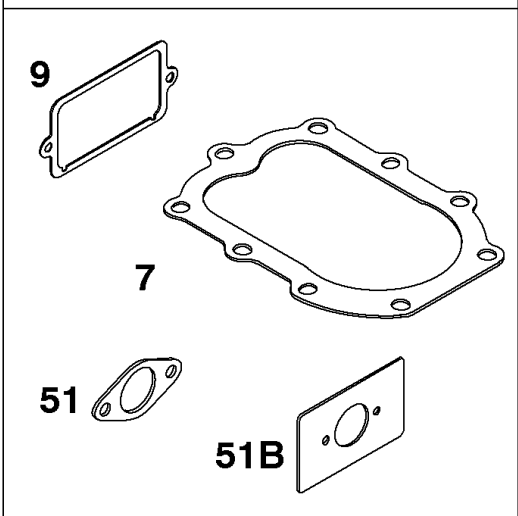

358 ENGINE GASKET SET

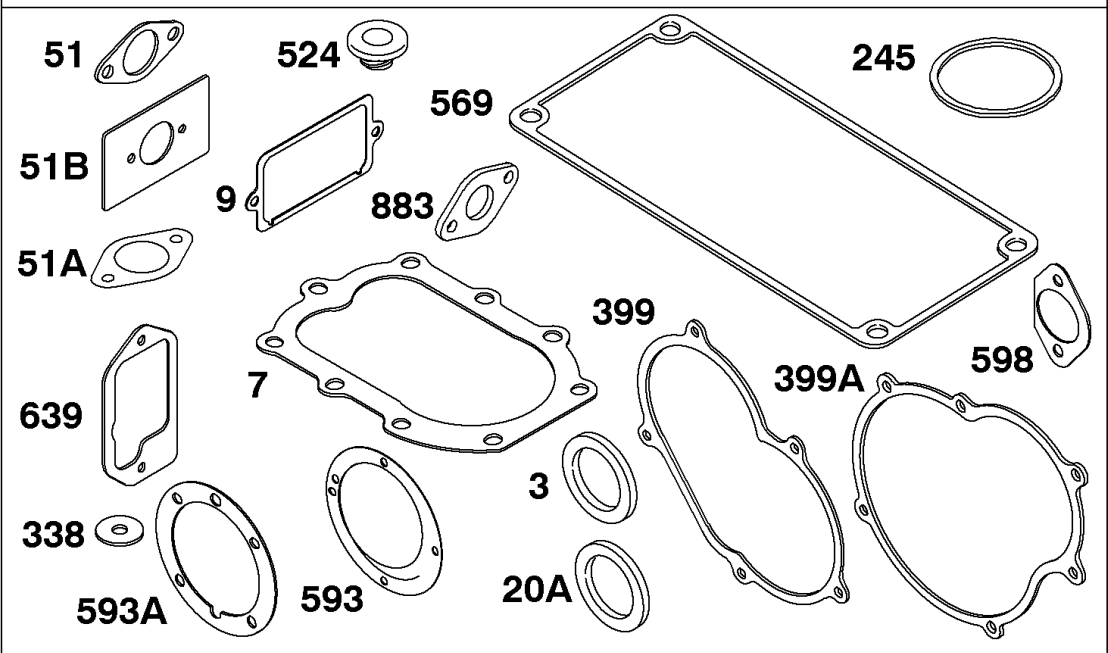 

121 CARBURETOR OVERHAUL KIT


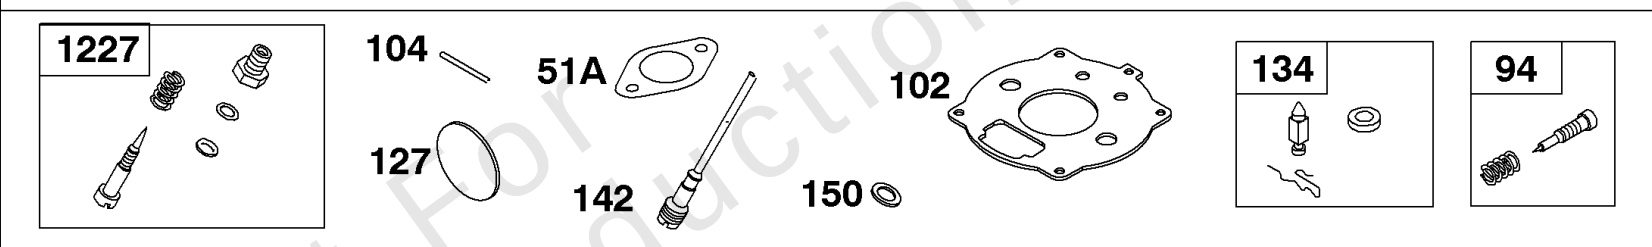 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	691948	Seal-Oil (Magneto Side)	142	691966	Nozzle-Carburetor (Labeled B)	598	270516	Shim-End Play (Camshaft Bearing) (.009" Thick)
7	272166	Gasket-Cylinder Head	150	691610	Gasket-Nozzle	----- Note ----- 270517 Shim- End Play (Camshaft Bearing) (.007" Thick) 270518 Shim- End Play (Camshaft Bearing) (.005" Thick)		
9	27803S	Gasket-Breather	245	692190	Gasket-Fuel Bowl			
20A	291675S	Seal-Oil (PTO Side)	338	690270	Gasket-Dipstick			
51	27381	Gasket-Intake	358	299719	Gasket Set-Engine			
51A	692214	Gasket-Intake	399	691310	Gasket-Counterweight Cover (Magneto Side)	639	692913	Gasket-Breaker Box
51B	692917	Gasket-Intake	399A	692914	Gasket-Counterweight Cover (PTO Side)	883	692236	Gasket-Exhaust
94	292681	Kit-Idle Mixture	524	281370S	Seal-Dipstick Tube	1095	498540	Gasket Set-Valve
102	692215	Gasket-Carburetor Body	569	691569	Gasket-Engine Base	1227	99525S	Valve-High Speed
104	691775	Pin-Float Hinge	593	691311	Gasket-Bearing Support			
121	394989	Kit-Carburetor Overhaul (Used After Code Date 81090800).	593A	270513	Gasket-Bearing Support (.015" Thick)			
		----- Note ----- 391071 Kit-Carburetor Overhaul (Used Before Code Date 81090900).			----- Note ----- 270514 Gasket- Bearing Support (.010" Thick) 270515 Gasket- Bearing Support (.005" Thick)			
127	690627	Plug-Welch						
134	394681	Kit-Needle/Seat						


Engine/Valve/Carburetor Gasket Sets

REF NO	PART NO	QTY	DESCRIPTION
102	692215		GASKET, Carburetor Body
104	691775		PIN, Float Hinge
104	691775		PIN, Float Hinge
104	691775		PIN, Float Hinge
104	691775		PIN, Float Hinge
104	691775		PIN, Float Hinge
121	391071		KIT, Carburetor Overhaul -Used Before Code Date 81090900
121	391071		KIT, Carburetor Overhaul -Used Before Code Date 81090900
121	394989		KIT, Carburetor Overhaul -Used After Code Date 81090800
121	391071		KIT, Carburetor Overhaul -Used Before Code Date 81090900
121	394989		KIT, Carburetor Overhaul -Used After Code Date 81090800
121	394989		KIT, Carburetor Overhaul -Used After Code Date 81090800
121	391071		KIT, Carburetor Overhaul -Used Before Code Date 81090900
121	394989		KIT, Carburetor Overhaul -Used After Code Date 81090800
121	391071		KIT, Carburetor Overhaul -Used Before Code Date 81090900
121	394989		KIT, Carburetor Overhaul -Used After Code Date 81090800
127	690627		PLUG, Welch
127	690627		PLUG, Welch
127	690627		PLUG, Welch
127	690627		PLUG, Welch
127	690627		PLUG, Welch
134	394682		KIT, Needle/Seat -(Includes Brass Seat)
134	394681		KIT, Needle/Seat -(Gravity Feed)
134	394683		KIT, Needle/Seat -(Includes Brass Seat)(Use With Impulse Pump)
134	394683		KIT, Needle/Seat -(Includes Brass Seat)(Use With Impulse Pump)
134	394681		KIT, Needle/Seat -(Gravity Feed)
134	394682		KIT, Needle/Seat -(Includes Brass Seat)
134	394683		KIT, Needle/Seat -(Includes Brass Seat)(Use With Impulse Pump)
134	394681		KIT, Needle/Seat -(Gravity Feed)
134	394683		KIT, Needle/Seat -(Includes Brass Seat)(Use With Impulse Pump)
134	394681		KIT, Needle/Seat -(Gravity Feed)
134	394683		KIT, Needle/Seat -(Includes Brass Seat)(Use With Impulse Pump)
134	394682		KIT, Needle/Seat -(Includes Brass Seat)
134	394681		KIT, Needle/Seat -(Gravity Feed)
134	394682		KIT, Needle/Seat -(Includes Brass Seat)

  1095 VALVE GASKET SET

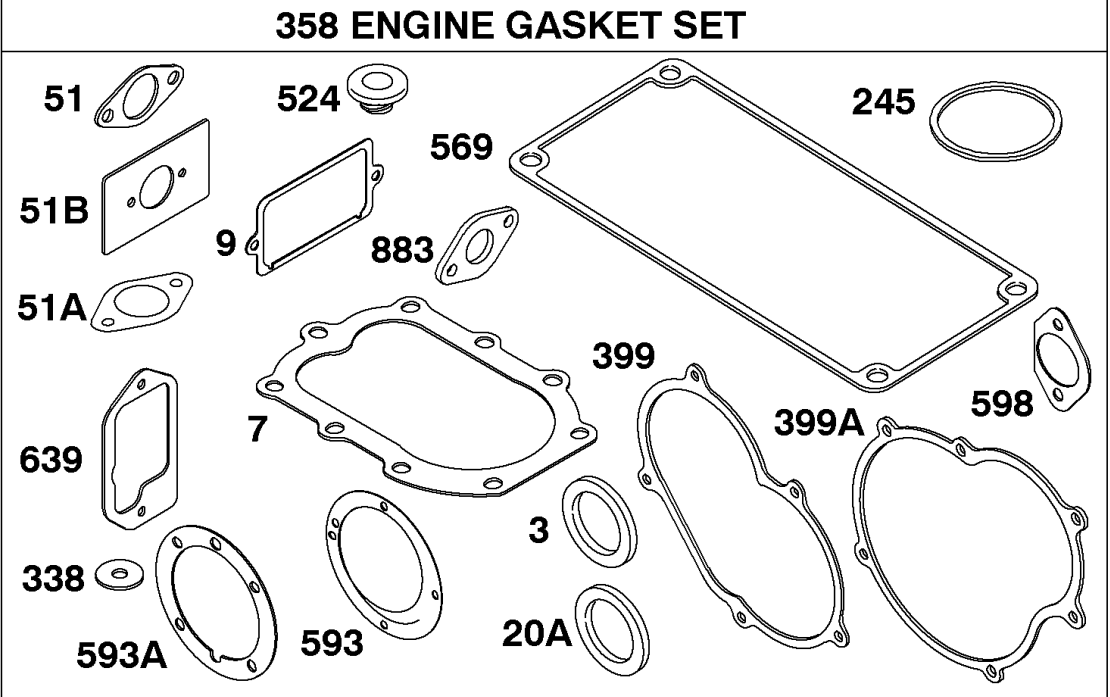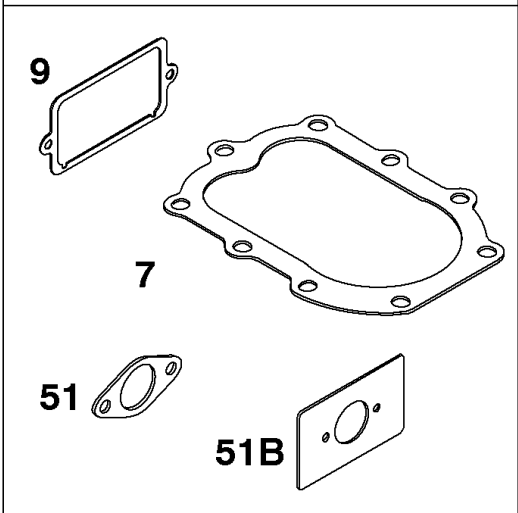

121 CARBURETOR OVERHAUL KIT

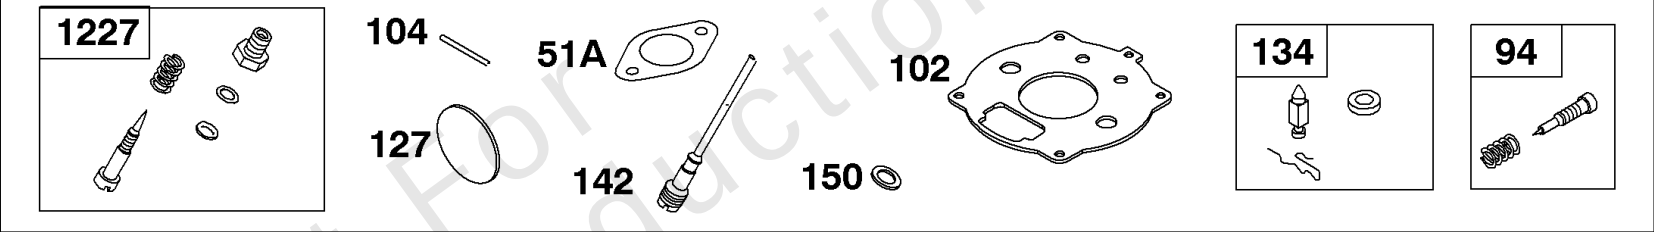 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	691948	Seal-Oil (Magneto Side)	142	691966	Nozzle-Carburetor (Labeled B)	598	270516	Shim-End Play (Camshaft Bearing) (.009" Thick)
7	272166	Gasket-Cylinder Head	150	691610	Gasket-Nozzle	----- Note ----- 270517 Shim-End Play (Camshaft Bearing) (.007" Thick) 270518 Shim-End Play (Camshaft Bearing) (.005" Thick)		
9	27803S	Gasket-Breather	245	692190	Gasket-Fuel Bowl			
20A	291675S	Seal-Oil (PTO Side)	338	690270	Gasket-Dipstick			
51	27381	Gasket-Intake	358	299719	Gasket Set-Engine	639	692913	Gasket-Breaker Box
51A	692214	Gasket-Intake	399	691310	Gasket-Counterweight Cover (Magneto Side)	883	692236	Gasket-Exhaust
51B	692917	Gasket-Intake	399A	692914	Gasket-Counterweight Cover (PTO Side)	1095	498540	Gasket Set-Valve
94	292681	Kit-Idle Mixture	524	281370S	Seal-Dipstick Tube	1227	99525S	Valve-High Speed
102	692215	Gasket-Carburetor Body	569	691569	Gasket-Engine Base			
104	691775	Pin-Float Hinge	593	691311	Gasket-Bearing Support			
121	394989	Kit-Carburetor Overhaul (Used After Code Date 81090800).	593A	270513	Gasket-Bearing Support (.015" Thick)			
		----- Note ----- 391071 Kit-Carburetor Overhaul (Used Before Code Date 81090900).			----- Note ----- 270514 Gasket-Bearing Support (.010" Thick) 270515 Gasket-Bearing Support (.005" Thick)			
127	690627	Plug-Welch						
134	394681	Kit-Needle/Seat						


Engine/Valve/Carburetor Gasket Sets

REF NO	PART NO	QTY	DESCRIPTION
134	394682		KIT, Needle/Seat -(Includes Brass Seat)
142	390950		NOZZLE, Carburetor -(Standard) (Labeled 40) -Used Before Code Date 81090900
142	691966		NOZZLE, Carburetor -(Standard) (Labeled B) -Used After Code Date 81090800
142	691966		NOZZLE, Carburetor -(Standard) (Labeled B) -Used After Code Date 81090800
142	390950		NOZZLE, Carburetor -(Standard) (Labeled 40) -Used Before Code Date 81090900
142	390950		NOZZLE, Carburetor -(Standard) (Labeled 40) -Used Before Code Date 81090900
142	691966		NOZZLE, Carburetor -(Standard) (Labeled B) -Used After Code Date 81090800
142	390950		NOZZLE, Carburetor -(Standard) (Labeled 40) -Used Before Code Date 81090900
142	390950		NOZZLE, Carburetor -(Standard) (Labeled 40) -Used Before Code Date 81090900
142	691966		NOZZLE, Carburetor -(Standard) (Labeled B) -Used After Code Date 81090800
142	691966		NOZZLE, Carburetor -(Standard) (Labeled B) -Used After Code Date 81090800
150	691610		GASKET, Nozzle
150	691610		GASKET, Nozzle
150	691610		GASKET, Nozzle
150	691610		GASKET, Nozzle
150	691610		GASKET, Nozzle
245	692190		GASKET, Fuel Bowl
245	692190		GASKET, Fuel Bowl
245	692190		GASKET, Fuel Bowl
245	692190		GASKET, Fuel Bowl
245	692190		GASKET, Fuel Bowl
338	690270		SEAL, O-Ring -(Dipstick Tube)
338	690270		SEAL, O-Ring -(Dipstick Tube)
338	690270		SEAL, O-Ring -(Dipstick Tube)
338	690270		SEAL, O-Ring -(Dipstick Tube)
338	690270		SEAL, O-Ring -(Dipstick Tube)
358	299719		GASKET SET, Engine
358	299719		GASKET SET, Engine
358	299719		GASKET SET, Engine
358	299719		GASKET SET, Engine
358	299719		GASKET SET, Engine
399	691310		GASKET, Counterweight Cover -(Magneto Side)

 
1095 VALVE GASKET SET

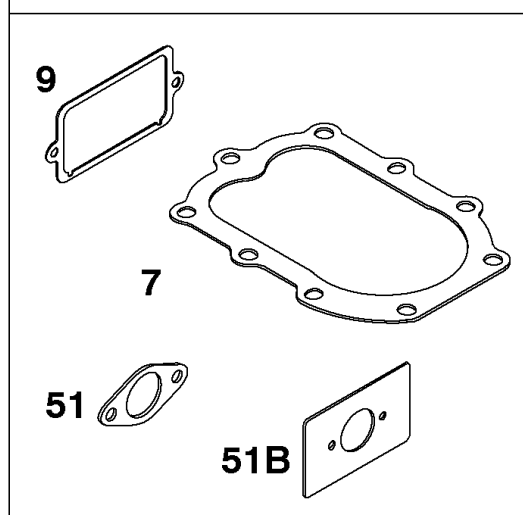

358 ENGINE GASKET SET

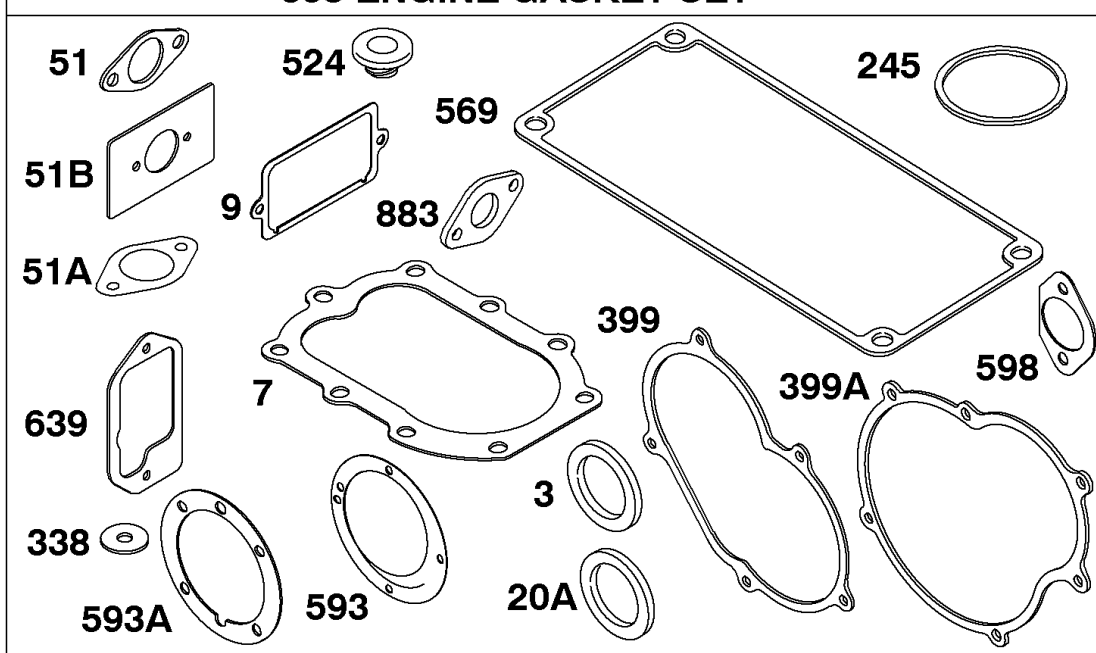 

121 CARBURETOR OVERHAUL KIT

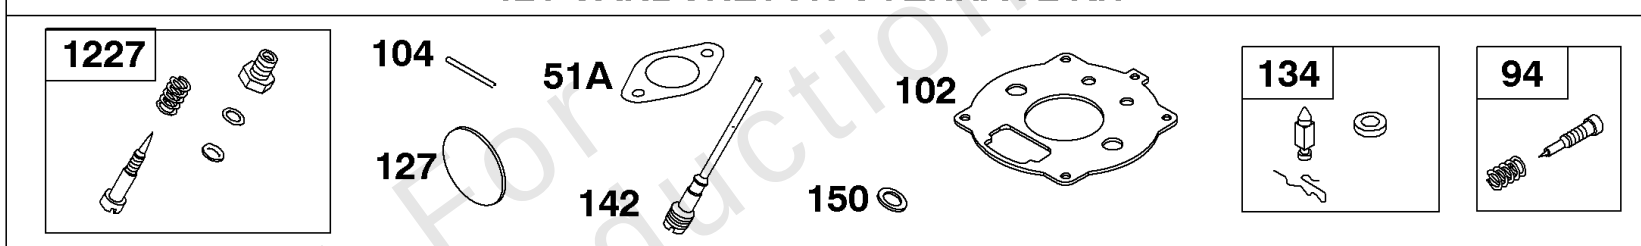 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	691948	Seal-Oil (Magnetos Side)	142	691966	Nozzle-Carburetor (Labeled B)	598	270516	Shim-End Play (Camshaft Bearing) (.009" Thick)
7	272166	Gasket-Cylinder Head	150	691610	Gasket-Nozzle	----- Note ----- 270517 Shim-End Play (Camshaft Bearing) (.007" Thick) 270518 Shim-End Play (Camshaft Bearing) (.005" Thick)		
9	27803S	Gasket-Breather	245	692190	Gasket-Fuel Bowl			
20A	291675S	Seal-Oil (PTO Side)	338	690270	Gasket-Dipstick			
51	27381	Gasket-Intake	358	299719	Gasket Set-Engine	639	692913	Gasket-Breaker Box
51A	692214	Gasket-Intake	399	691310	Gasket-Counterweight Cover (Magnetos Side)	883	692236	Gasket-Exhaust
51B	692917	Gasket-Intake	399A	692914	Gasket-Counterweight Cover (PTO Side)	1095	498540	Gasket Set-Valve
94	292681	Kit-Idle Mixture	524	281370S	Seal-Dipstick Tube	1227	99525S	Valve-High Speed
102	692215	Gasket-Carburetor Body	569	691569	Gasket-Engine Base			
104	691775	Pin-Float Hinge	593	691311	Gasket-Bearing Support			
121	394989	Kit-Carburetor Overhaul (Used After Code Date 81090800).	593A	270513	Gasket-Bearing Support (.015" Thick)			
		----- Note ----- 391071 Kit-Carburetor Overhaul (Used Before Code Date 81090900).			----- Note ----- 270514 Gasket-Bearing Support (.010" Thick) 270515 Gasket-Bearing Support (.005" Thick)			
127	690627	Plug-Welch						
134	394681	Kit-Needle/Seat						


Engine/Valve/Carburetor Gasket Sets

REF NO	PART NO	QTY	DESCRIPTION
399	691310		GASKET, Counterweight Cover -(Magneto Side)
399	691310		GASKET, Counterweight Cover -(Magneto Side)
399	691310		GASKET, Counterweight Cover -(Magneto Side)
399	691310		GASKET, Counterweight Cover -(Magneto Side)
399A	692914		GASKET, Counterweight Cover -(PTO Side)
399A	692914		GASKET, Counterweight Cover -(PTO Side)
399A	692914		GASKET, Counterweight Cover -(PTO Side)
399A	692914		GASKET, Counterweight Cover -(PTO Side)
399A	692914		GASKET, Counterweight Cover -(PTO Side)
524	281370S		SEAL, Dipstick Tube -(Dipstick Tube)
524	281370S		SEAL, Dipstick Tube -(Dipstick Tube)
524	281370S		SEAL, Dipstick Tube -(Dipstick Tube)
524	281370S		SEAL, Dipstick Tube -(Dipstick Tube)
524	281370S		SEAL, Dipstick Tube -(Dipstick Tube)
569	691569		GASKET, Crankcase
569	691569		GASKET, Crankcase
569	691569		GASKET, Crankcase
569	691569		GASKET, Crankcase
569	691569		GASKET, Crankcase
593	691311		GASKET, Crankcase Cover
593	691311		GASKET, Crankcase Cover
593	691311		GASKET, Crankcase Cover
593	691311		GASKET, Crankcase Cover
593	691311		GASKET, Crankcase Cover
593A	270514		GASKET, Bearing Support -(.010)
593A	270513		GASKET, Bearing Support -(.015)
593A	270515		GASKET, Bearing Support -(.005)
593A	270514		GASKET, Bearing Support -(.010)
593A	270513		GASKET, Bearing Support -(.015)
593A	270513		GASKET, Bearing Support -(.015)
593A	270513		GASKET, Bearing Support -(.015)
593A	270514		GASKET, Bearing Support -(.010)
593A	270514		GASKET, Bearing Support -(.010)
593A	270515		GASKET, Bearing Support -(.005)

 
1095 VALVE GASKET SET

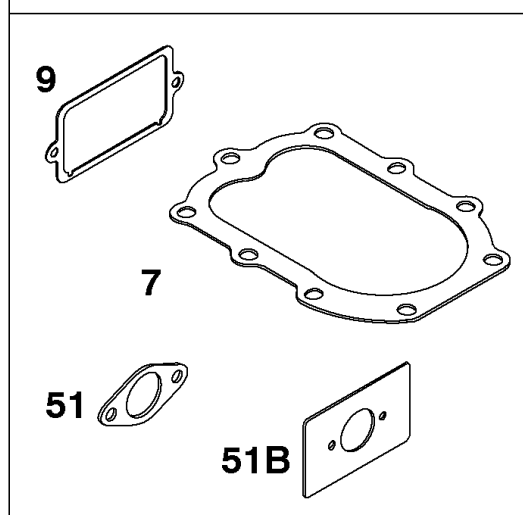

358 ENGINE GASKET SET

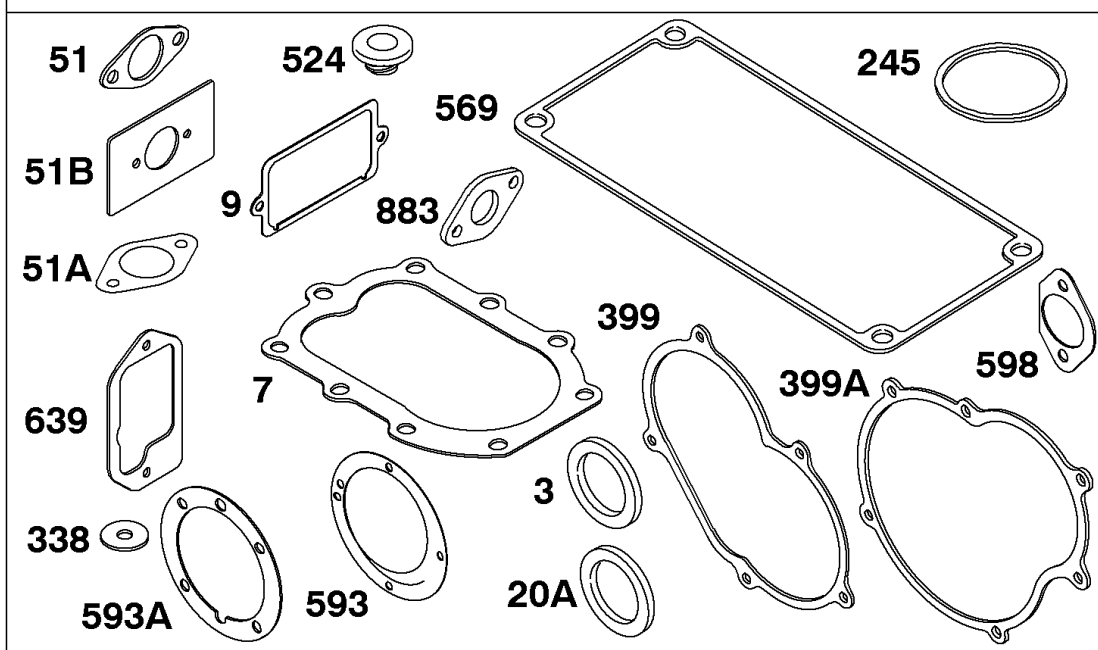 

121 CARBURETOR OVERHAUL KIT

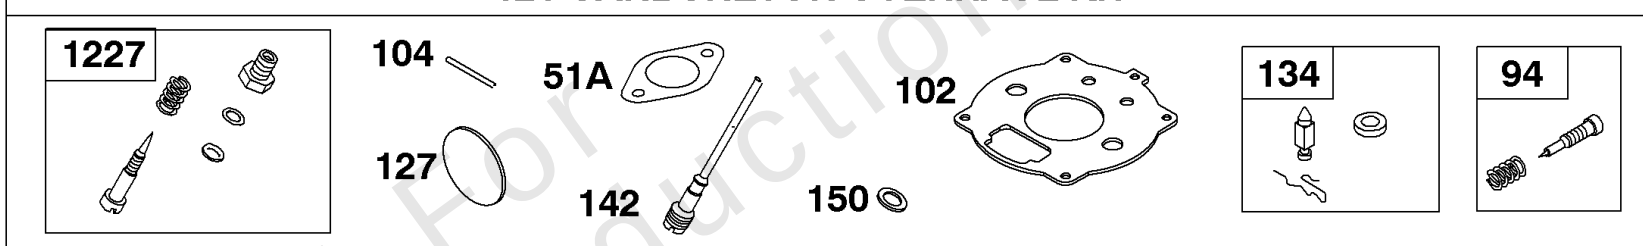 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	691948	Seal-Oil (Magneto Side)	142	691966	Nozzle-Carburetor (Labeled B)	598	270516	Shim-End Play (Camshaft Bearing) (.009" Thick)
7	272166	Gasket-Cylinder Head	150	691610	Gasket-Nozzle	----- Note ----- 270517 Shim- End Play (Camshaft Bearing) (.007" Thick) 270518 Shim- End Play (Camshaft Bearing) (.005" Thick)		
9	27803S	Gasket-Breather	245	692190	Gasket-Fuel Bowl			
20A	291675S	Seal-Oil (PTO Side)	338	690270	Gasket-Dipstick			
51	27381	Gasket-Intake	358	299719	Gasket Set-Engine			
51A	692214	Gasket-Intake	399	691310	Gasket-Counterweight Cover (Magneto Side)	639	692913	Gasket-Breaker Box
51B	692917	Gasket-Intake	399A	692914	Gasket-Counterweight Cover (PTO Side)	883	692236	Gasket-Exhaust
94	292681	Kit-Idle Mixture	524	281370S	Seal-Dipstick Tube	1095	498540	Gasket Set-Valve
102	692215	Gasket-Carburetor Body	569	691569	Gasket-Engine Base	1227	99525S	Valve-High Speed
104	691775	Pin-Float Hinge	593	691311	Gasket-Bearing Support			
121	394989	Kit-Carburetor Overhaul (Used After Code Date 81090800). ----- Note ----- 391071 Kit-Carburetor Overhaul (Used Before Code Date 81090900).	593A	270513	Gasket-Bearing Support (.015" Thick) ----- Note ----- 270514 Gasket- Bearing Support (.010" Thick) 270515 Gasket- Bearing Support (.005" Thick)			
127	690627	Plug-Welch						
134	394681	Kit-Needle/Seat						


Engine/Valve/Carburetor Gasket Sets

REF NO	PART NO	QTY	DESCRIPTION
593A	270515		GASKET, Bearing Support -(.005)
593A	270515		GASKET, Bearing Support -(.005)
593A	270514		GASKET, Bearing Support -(.010)
593A	270513		GASKET, Bearing Support -(.015)
593A	270515		GASKET, Bearing Support -(.005)
598	270518		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.005)
598	270516		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.009)
598	270517		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.007)
598	270518		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.005)
598	270518		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.005)
598	270517		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.007)
598	270516		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.009)
598	270517		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.007)
598	270516		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.009)
598	270516		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.009)
598	270517		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.007)
598	270516		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.009)
598	270517		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.007)
598	270518		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.005)
598	270518		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.005)
639	692913		GASKET, Breaker Box
639	692913		GASKET, Breaker Box
639	692913		GASKET, Breaker Box
639	692913		GASKET, Breaker Box
639	692913		GASKET, Breaker Box
883	692236		GASKET, Exhaust
883	692236		GASKET, Exhaust
883	692236		GASKET, Exhaust
883	692236		GASKET, Exhaust
883	692236		GASKET, Exhaust
1095	498540		GASKET SET, Valve
1095	498540		GASKET SET, Valve
1095	498540		GASKET SET, Valve
1095	498540		GASKET SET, Valve
1095	498540		GASKET SET, Valve
1227	99525S		VALVE, High Speed
1227	99525S		VALVE, High Speed

 
1095 VALVE GASKET SET

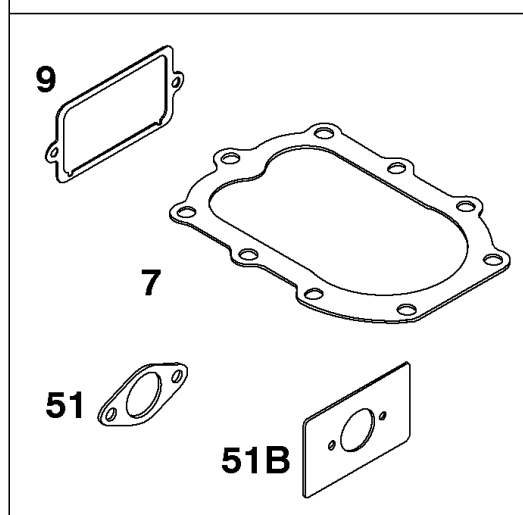

358 ENGINE GASKET SET

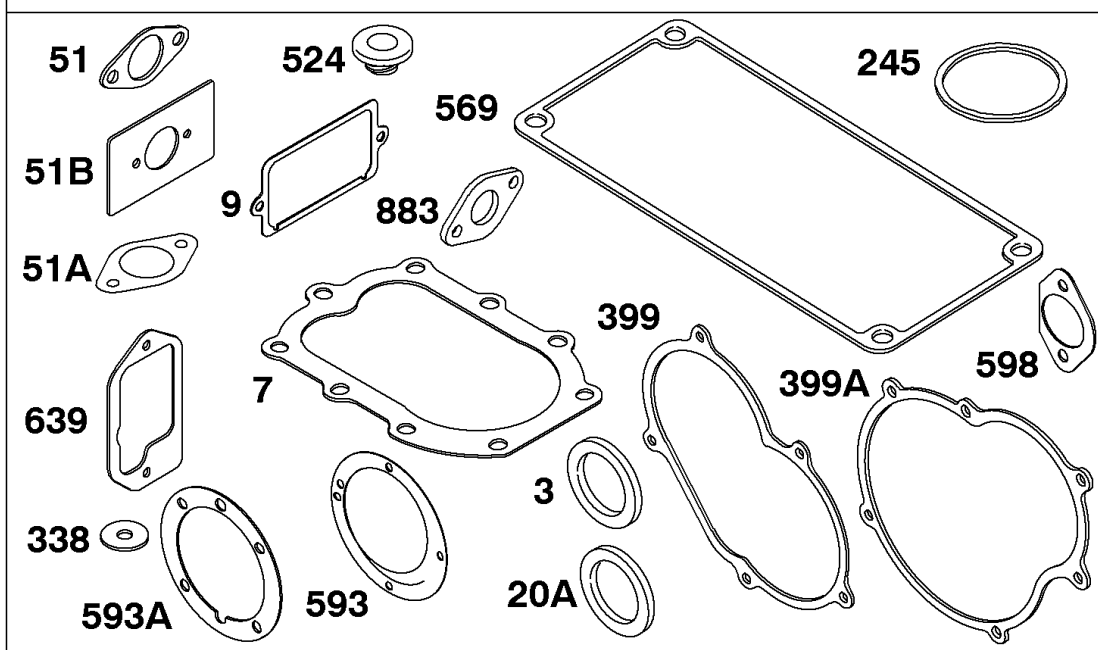 

121 CARBURETOR OVERHAUL KIT

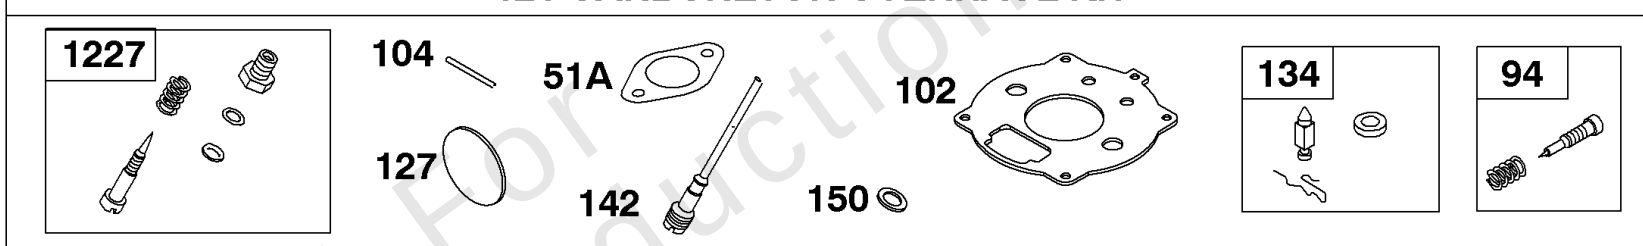 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
3	691948	Seal-Oil (Magneto Side)	142	691966	Nozzle-Carburetor (Labeled B)	598	270516	Shim-End Play (Camshaft Bearing) (.009" Thick)
7	272166	Gasket-Cylinder Head	150	691610	Gasket-Nozzle	----- Note ----- 270517 Shim-End Play (Camshaft Bearing) (.007" Thick) 270518 Shim-End Play (Camshaft Bearing) (.005" Thick)		
9	27803S	Gasket-Breather	245	692190	Gasket-Fuel Bowl			
20A	291675S	Seal-Oil (PTO Side)	338	690270	Gasket-Dipstick			
51	27381	Gasket-Intake	358	299719	Gasket Set-Engine	639	692913	Gasket-Breaker Box
51A	692214	Gasket-Intake	399	691310	Gasket-Counterweight Cover (Magneto Side)	883	692236	Gasket-Exhaust
51B	692917	Gasket-Intake	399A	692914	Gasket-Counterweight Cover (PTO Side)	1095	498540	Gasket Set-Valve
94	292681	Kit-Idle Mixture	524	281370S	Seal-Dipstick Tube	1227	99525S	Valve-High Speed
102	692215	Gasket-Carburetor Body	569	691569	Gasket-Engine Base			
104	691775	Pin-Float Hinge	593	691311	Gasket-Bearing Support			
121	394989	Kit-Carburetor Overhaul (Used After Code Date 81090800).	593A	270513	Gasket-Bearing Support (.015" Thick)			
		----- Note ----- 391071 Kit-Carburetor Overhaul (Used Before Code Date 81090900).			----- Note ----- 270514 Gasket-Bearing Support (.010" Thick) 270515 Gasket-Bearing Support (.005" Thick)			
127	690627	Plug-Welch						
134	394681	Kit-Needle/Seat						

Engine/Valve/Carburetor Gasket Sets

REF NO	PART NO	QTY	DESCRIPTION
1227	99525S		VALVE, High Speed
1227	99525S		VALVE, High Speed
1227	99525S		VALVE, High Speed

 
Not For Reproduction

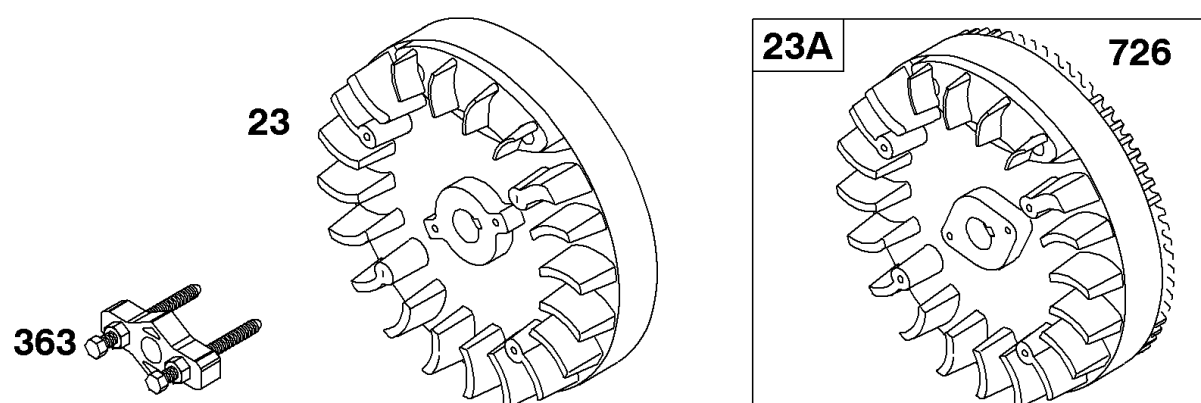

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
23	395250	Flywheel (For Magnetron Ignition, Identified by Two Red Stripes) Used on Type No(s). 0611, 0620, 0632, 0633, 0635, 0637, 0640, 0641, 0642, 0644, 0645, 0646, 0647, 0648, 0650, 0651, 0652, 0655, 0656, 0657, 0659, 0662, 0664, 0670, 0674, 0677, 0681, 0683, 0686, 0689, 0690, 0691, 0694, 0695, 0696, 0700, 0706, 0709, 0710, 0713, 0717, 0722, 0723, 0727, 0728, 0730, 0734, 0735, 0737, 0739, 0743, 0744, 0745, 0747, 0750, 0755, 0756, 0757, 0759, 0762, 0763, 0766, 0775, 0778, 0780, 0785, 0786, 0790, 0791, 0792, 0793, 0794, 0799, 0801, 0802, 0803, 0804, 2520, 2521, 2522, 2529, 2530, 2550, 2560, 2561, 2562, 2580, 2581, 2582, 2583.	23A	395251	Flywheel (For Magnetron Ignition, Identified by Two Red Stripes) ----- Note ----- Flywheel (NO LONGER AVAILABLE) (For Magnetron Ignition, Identified by Two Red Stripes) Used on Type No(s). 0736. 391363 Flywheel (10 Amp) (Used With Breaker Points and Condenser System) Used on Type No(s). 0027, 0028, 0063, 0115, 0123, 0126, 0135, 0143, 0148, 0149, 0162, 0163, 0164, 0165, 0167, 0168, 0170, 0171, 0172, 0174, 0178, 0180, 0182, 0184, 0185, 0188, 0189, 0192, 0193, 0198, 0201, 0209, 0210, 0211, 0213, 0215, 0217, 0221, 0222, 0224, 0229, 0230, 0231, 0234, 0235, 0236, 0238, 0240, 0248, 0249, 0250, 0251, 0252, 0257, 0261, 0262, 0265, 0271, 0273, 0274, 0275, 0276, 0277, 0278, 0279, 0281,			0282, 0283, 0284, 0285, 0286, 0287, 0288, 0296, 0298, 0303, 0304, 0306, 0307, 0309, 0310, 0311, 0315, 0316, 0317, 0318, 0319, 0320, 0321, 0322, 0323, 0324, 0325, 0326, 0328, 0330, 0331, 0332, 0333, 0334, 0337, 0338, 0340, 0343, 0347, 0348, 0349, 0350, 0351, 0353, 0355, 0358, 0359, 0360, 0363, 0364, 0367, 0370, 0371, 0372, 0374, 0375, 0376, 0377, 0378, 0379, 0381, 0382, 0383, 0388, 0389, 0392, 0394, 0399. 363 19203 Puller-Flywheel 726 391362 Gear-Ring (Includes Mounting Hardware)

Flywheels


REF NO	PART NO	QTY	DESCRIPTION
23	395250		FLYWHEEL -(Magnetron Ignition, Identified by Two Red Stripes)
23	395250		FLYWHEEL -(Magnetron Ignition, Identified by Two Red Stripes)
23	395250		FLYWHEEL -(Magnetron Ignition, Identified by Two Red Stripes)
23	395250		FLYWHEEL -(Magnetron Ignition, Identified by Two Red Stripes)
23	395250		FLYWHEEL -(Magnetron Ignition, Identified by Two Red Stripes)
363	19203		PULLER, Flywheel
363	19203		PULLER, Flywheel
363	19203		PULLER, Flywheel
363	19203		PULLER, Flywheel
363	19203		PULLER, Flywheel
726	391362		GEAR, Ring -(Includes Mounting Hardware)
726	391362		GEAR, Ring -(Includes Mounting Hardware)
726	391362		GEAR, Ring -(Includes Mounting Hardware)
726	391362		GEAR, Ring -(Includes Mounting Hardware)
726	391362		GEAR, Ring -(Includes Mounting Hardware)

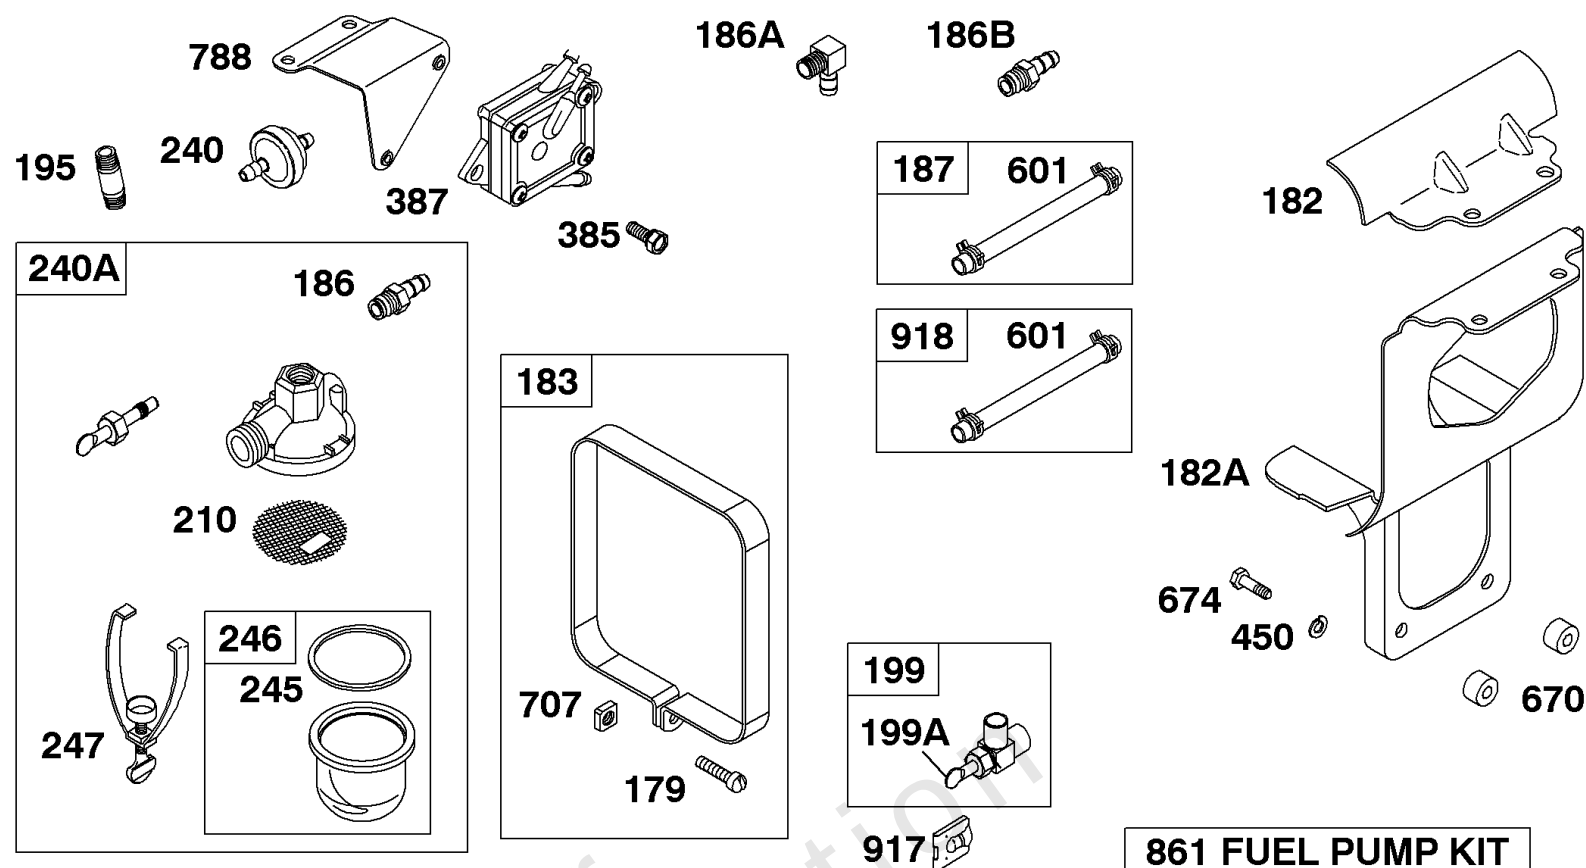 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
179	690280	Screw (Fuel Tank Strap)	187	499167	Line-Fuel (Cut to Required Length)	387	808656	Pump-Fuel
182	691068	Bracket-Fuel Tank				450	691075	Washer (Fuel Tank Bracket)
		----- Note -----			----- Note -----	601	791850	Clamp-Hose
		222669 Bracket-Fuel Tank			89248 Line-Fuel (2 1/4" Long)	670	690505	Spacer-Fuel Tank
		Used on Type No(s). 0205, 0291, 0648.			Used on Type No(s). 0080, 0386, 0387, 0393, 0395, 0396, 0397, 0631, 0640, 0641, 0662, 2580.	674	690303	Screw (Fuel Tank Bracket)
182A	690262	Bracket-Fuel Tank	195	91635	Nipple-Fuel	707	690279	Nut (Fuel Tank Strap)
183	691937	Strap-Fuel Tank	199	692302	Valve-Fuel Shut Off	788	224123	Bracket-Fuel Pump
		----- Note -----	199A	691940	Valve-Fuel Shut Off	861	394462	Kit-Fuel Pump (Walbro)
		291367 Strap-Fuel Tank (4 Quart) Used on Type No(s). 0206, 0211, 0213, 0229, 0271.	210	691962	Strainer-Fuel			----- Note -----
186	691764	Connector-Hose	240	298090S	Filter-Fuel			791885 Kit-Fuel Pump Used on Type No(s). 0170, 0182, 0198, 0248, 0309, 0331, 0638, 0679, 0744, 0755, 0759.
186A	691609	Connector-Hose			----- Note -----	917	691737	Handle-Shut Off Valve
186B	231238	Connector-Hose			394358S Filter-Fuel Used on Type No(s). 0630, 0705, 0707, 0724, 0744, 0750, 0755, 0759, 0770, 0774, 2581.	918	393815	Hose-Vacuum (Cylinder To Impulse Pump) (Cut to Required Length)
			240A	690612	Filter-Fuel			
			245	692190	Gasket-Fuel Bowl			
			246	298683	Bowl-Fuel Filter			
			247	691700	Yoke-Bowl			
			385	692198	Screw (Fuel Pump)			

Fuel Pump, Fuel Filter


REF NO	PART NO	QTY	DESCRIPTION
179	690280		SCREW -(Fuel Tank Strap)
179	690280		SCREW -(Fuel Tank Strap)
179	690280		SCREW -(Fuel Tank Strap)
179	690280		SCREW -(Fuel Tank Strap)
179	690280		SCREW -(Fuel Tank Strap)
182	691068		BRACKET, Fuel Tank
182	691068		BRACKET, Fuel Tank
182	691068		BRACKET, Fuel Tank
182	691068		BRACKET, Fuel Tank
182	691068		BRACKET, Fuel Tank
182A	690262		BRACKET, Fuel Tank
182A	690262		BRACKET, Fuel Tank
182A	690262		BRACKET, Fuel Tank
182A	690262		BRACKET, Fuel Tank
182A	690262		BRACKET, Fuel Tank
183	691937		STRAP, Fuel Tank
183	691937		STRAP, Fuel Tank
183	691937		STRAP, Fuel Tank
183	691937		STRAP, Fuel Tank
183	691937		STRAP, Fuel Tank
186	691764		CONNECTOR-HOSE -(Pulse Line)
186	691764		CONNECTOR-HOSE -(Pulse Line)
186	691764		CONNECTOR-HOSE -(Pulse Line)
186	691764		CONNECTOR-HOSE -(Pulse Line)
186	691764		CONNECTOR-HOSE -(Pulse Line)
186A	691609		CONNECTOR, Hose
186A	691609		CONNECTOR, Hose
186A	691609		CONNECTOR, Hose
186A	691609		CONNECTOR, Hose
186A	691609		CONNECTOR, Hose
186B	231238		CONNECTOR, Hose -(Metal Fuel Pipe)
186B	231238		CONNECTOR, Hose -(Metal Fuel Pipe)
186B	231238		CONNECTOR, Hose -(Metal Fuel Pipe)
186B	231238		CONNECTOR, Hose -(Metal Fuel Pipe)
186B	231238		CONNECTOR, Hose -(Metal Fuel Pipe)
187	499167		LINE, Fuel -(Cut To Required Length)
187	499167		LINE, Fuel -(Cut To Required Length)
187	499167		LINE, Fuel -(Cut To Required Length)

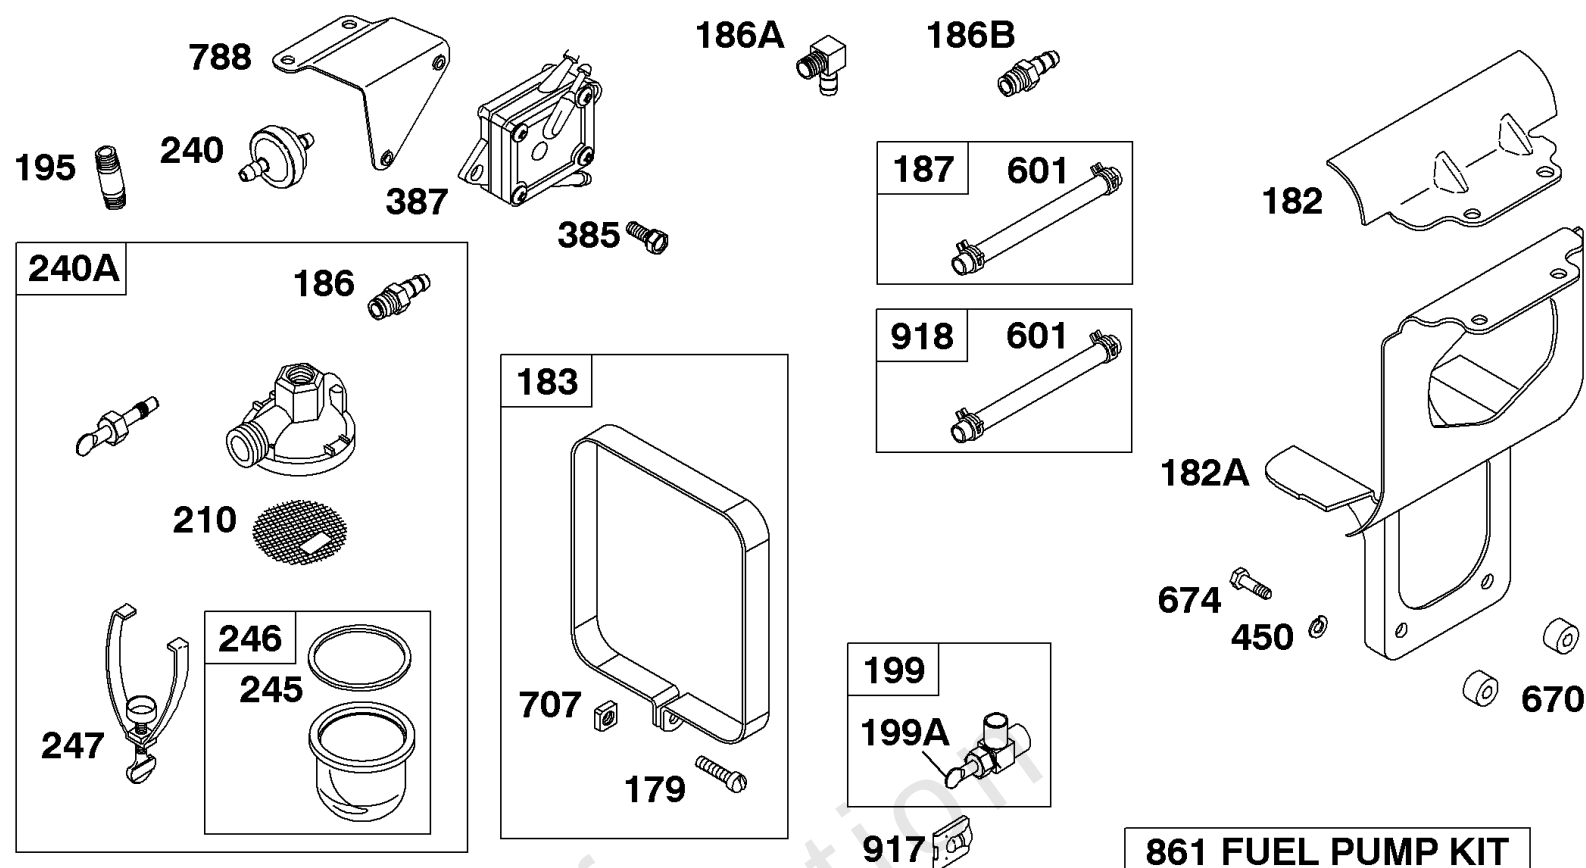 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
179	690280	Screw (Fuel Tank Strap)	187	499167	Line-Fuel (Cut to Required Length)	387	808656	Pump-Fuel
182	691068	Bracket-Fuel Tank				450	691075	Washer (Fuel Tank Bracket)
		----- Note -----			----- Note -----	601	791850	Clamp-Hose
		222669 Bracket-Fuel Tank			89248 Line-Fuel (2 1/4" Long)	670	690505	Spacer-Fuel Tank
		Used on Type No(s). 0205, 0291, 0648.			Used on Type No(s). 0080, 0386, 0387, 0393, 0395, 0396, 0397, 0631, 0640, 0641, 0662, 2580.	674	690303	Screw (Fuel Tank Bracket)
182A	690262	Bracket-Fuel Tank	195	91635	Nipple-Fuel	707	690279	Nut (Fuel Tank Strap)
183	691937	Strap-Fuel Tank	199	692302	Valve-Fuel Shut Off	788	224123	Bracket-Fuel Pump
		----- Note -----	199A	691940	Valve-Fuel Shut Off	861	394462	Kit-Fuel Pump (Walbro)
		291367 Strap-Fuel Tank (4 Quart) Used on Type No(s). 0206, 0211, 0213, 0229, 0271.	210	691962	Strainer-Fuel			----- Note -----
186	691764	Connector-Hose	240	298090S	Filter-Fuel			791885 Kit-Fuel Pump Used on Type No(s). 0170, 0182, 0198, 0248, 0309, 0331, 0638, 0679, 0744, 0755, 0759.
186A	691609	Connector-Hose			----- Note -----	917	691737	Handle-Shut Off Valve
186B	231238	Connector-Hose			394358S Filter-Fuel Used on Type No(s). 0630, 0705, 0707, 0724, 0744, 0750, 0755, 0759, 0770, 0774, 2581.	918	393815	Hose-Vacuum (Cylinder To Impulse Pump) (Cut to Required Length)
			240A	690612	Filter-Fuel			
			245	692190	Gasket-Fuel Bowl			
			246	298683	Bowl-Fuel Filter			
			247	691700	Yoke-Bowl			
			385	692198	Screw (Fuel Pump)			

Fuel Pump, Fuel Filter


REF NO	PART NO	QTY	DESCRIPTION
187	499167		LINE, Fuel -(Cut To Required Length)
187	499167		LINE, Fuel -(Cut To Required Length)
195	91635		NIPPLE, Fuel
195	91635		NIPPLE, Fuel
195	91635		NIPPLE, Fuel
195	91635		NIPPLE, Fuel
195	91635		NIPPLE, Fuel
199	692302		VALVE, Fuel Shut Off -(Metal)
199	692302		VALVE, Fuel Shut Off -(Metal)
199	692302		VALVE, Fuel Shut Off -(Metal)
199	692302		VALVE, Fuel Shut Off -(Metal)
199	692302		VALVE, Fuel Shut Off -(Metal)
199A	691940		VALVE, Fuel Shut Off -(Metal)
199A	691940		VALVE, Fuel Shut Off -(Metal)
199A	691940		VALVE, Fuel Shut Off -(Metal)
199A	691940		VALVE, Fuel Shut Off -(Metal)
199A	691940		VALVE, Fuel Shut Off -(Metal)
210	691962		STRAINER, Fuel
210	691962		STRAINER, Fuel
210	691962		STRAINER, Fuel
210	691962		STRAINER, Fuel
210	691962		STRAINER, Fuel
240	298090S		FILTER, Fuel
240	298090S		FILTER, Fuel
240	298090S		FILTER, Fuel
240	298090S		FILTER, Fuel
240	298090S		FILTER, Fuel
240A	690612		FILTER, Fuel
240A	690612		FILTER, Fuel
240A	690612		FILTER, Fuel
240A	690612		FILTER, Fuel
240A	690612		FILTER, Fuel
245	692190		GASKET, Fuel Bowl
245	692190		GASKET, Fuel Bowl
245	692190		GASKET, Fuel Bowl
245	692190		GASKET, Fuel Bowl
245	692190		GASKET, Fuel Bowl
246	298683		BOWL, Fuel Filter
246	298683		BOWL, Fuel Filter
246	298683		BOWL, Fuel Filter
246	298683		BOWL, Fuel Filter
246	298683		BOWL, Fuel Filter
247	691700		YOKE, Bowl

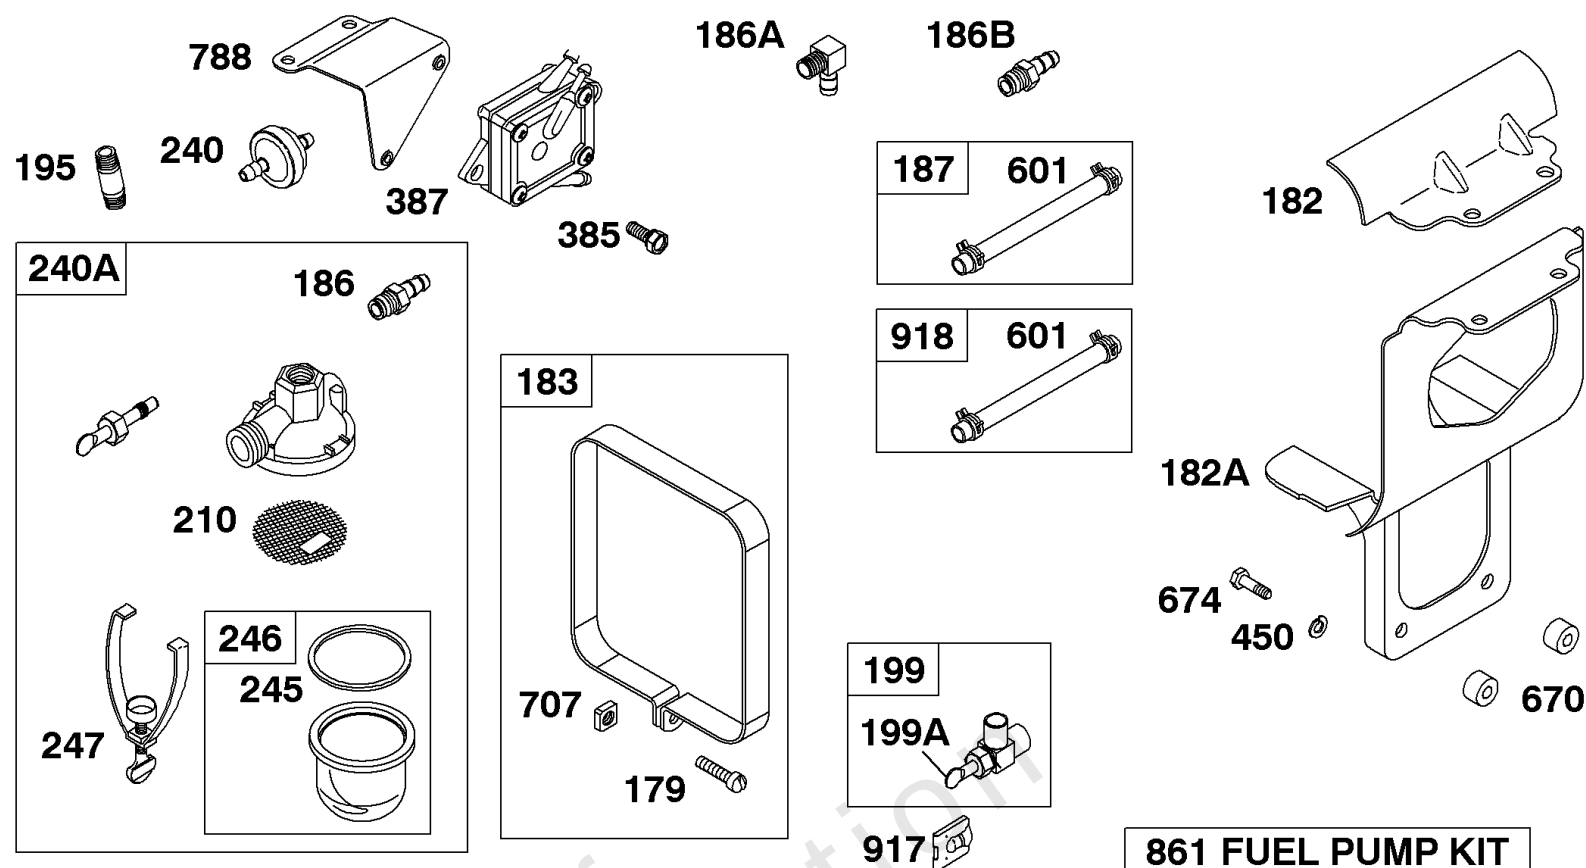 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
179	690280	Screw (Fuel Tank Strap)	187	499167	Line-Fuel (Cut to Required Length)	387	808656	Pump-Fuel
182	691068	Bracket-Fuel Tank				450	691075	Washer (Fuel Tank Bracket)
		----- Note -----			----- Note -----	601	791850	Clamp-Hose
		222669 Bracket-Fuel Tank			89248 Line-Fuel (2 1/4" Long)	670	690505	Spacer-Fuel Tank
		Used on Type No(s). 0205, 0291, 0648.			Used on Type No(s). 0080, 0386, 0387, 0393, 0395, 0396, 0397, 0631, 0640, 0641, 0662, 2580.	674	690303	Screw (Fuel Tank Bracket)
182A	690262	Bracket-Fuel Tank	195	91635	Nipple-Fuel	707	690279	Nut (Fuel Tank Strap)
183	691937	Strap-Fuel Tank	199	692302	Valve-Fuel Shut Off	788	224123	Bracket-Fuel Pump
		----- Note -----	199A	691940	Valve-Fuel Shut Off	861	394462	Kit-Fuel Pump (Walbro)
		291367 Strap-Fuel Tank (4 Quart) Used on Type No(s). 0206, 0211, 0213, 0229, 0271.	210	691962	Strainer-Fuel			----- Note -----
186	691764	Connector-Hose	240	298090S	Filter-Fuel			791885 Kit-Fuel Pump Used on Type No(s). 0170, 0182, 0198, 0248, 0309, 0331, 0638, 0679, 0744, 0755, 0759.
186A	691609	Connector-Hose			----- Note -----	917	691737	Handle-Shut Off Valve
186B	231238	Connector-Hose			394358S Filter-Fuel Used on Type No(s). 0630, 0705, 0707, 0724, 0744, 0750, 0755, 0759, 0770, 0774, 2581.	918	393815	Hose-Vacuum (Cylinder To Impulse Pump) (Cut to Required Length)
			240A	690612	Filter-Fuel			
			245	692190	Gasket-Fuel Bowl			
			246	298683	Bowl-Fuel Filter			
			247	691700	Yoke-Bowl			
			385	692198	Screw (Fuel Pump)			

Fuel Pump, Fuel Filter


REF NO	PART NO	QTY	DESCRIPTION
247	691700		YOKE, Bowl
247	691700		YOKE, Bowl
247	691700		YOKE, Bowl
247	691700		YOKE, Bowl
385	692198		SCREW -(Fuel Pump)
385	692198		SCREW -(Fuel Pump)
385	692198		SCREW -(Fuel Pump)
385	692198		SCREW -(Fuel Pump)
385	692198		SCREW -(Fuel Pump)
387	808656		PUMP, Fuel
387	808656		PUMP, Fuel
387	808656		PUMP, Fuel
387	808656		PUMP, Fuel
387	808656		PUMP, Fuel
450	691075		WASHER -(Fuel Tank Bracket)
450	691075		WASHER -(Fuel Tank Bracket)
450	691075		WASHER -(Fuel Tank Bracket)
450	691075		WASHER -(Fuel Tank Bracket)
450	691075		WASHER -(Fuel Tank Bracket)
601	791850		CLAMP, Hose
601	791850		CLAMP, Hose
601	791850		CLAMP, Hose
601	791850		CLAMP, Hose
601	791850		CLAMP, Hose
670	690505		SPACER, Fuel Tank
670	690505		SPACER, Fuel Tank
670	690505		SPACER, Fuel Tank
670	690505		SPACER, Fuel Tank
670	690505		SPACER, Fuel Tank
674	690303		SCREW -(Fuel Tank Bracket)
674	690303		SCREW -(Fuel Tank Bracket)
674	690303		SCREW -(Fuel Tank Bracket)
674	690303		SCREW -(Fuel Tank Bracket)
674	690303		SCREW -(Fuel Tank Bracket)
707	690279		NUT -(Fuel Tank Strap)
707	690279		NUT -(Fuel Tank Strap)
707	690279		NUT -(Fuel Tank Strap)
707	690279		NUT -(Fuel Tank Strap)

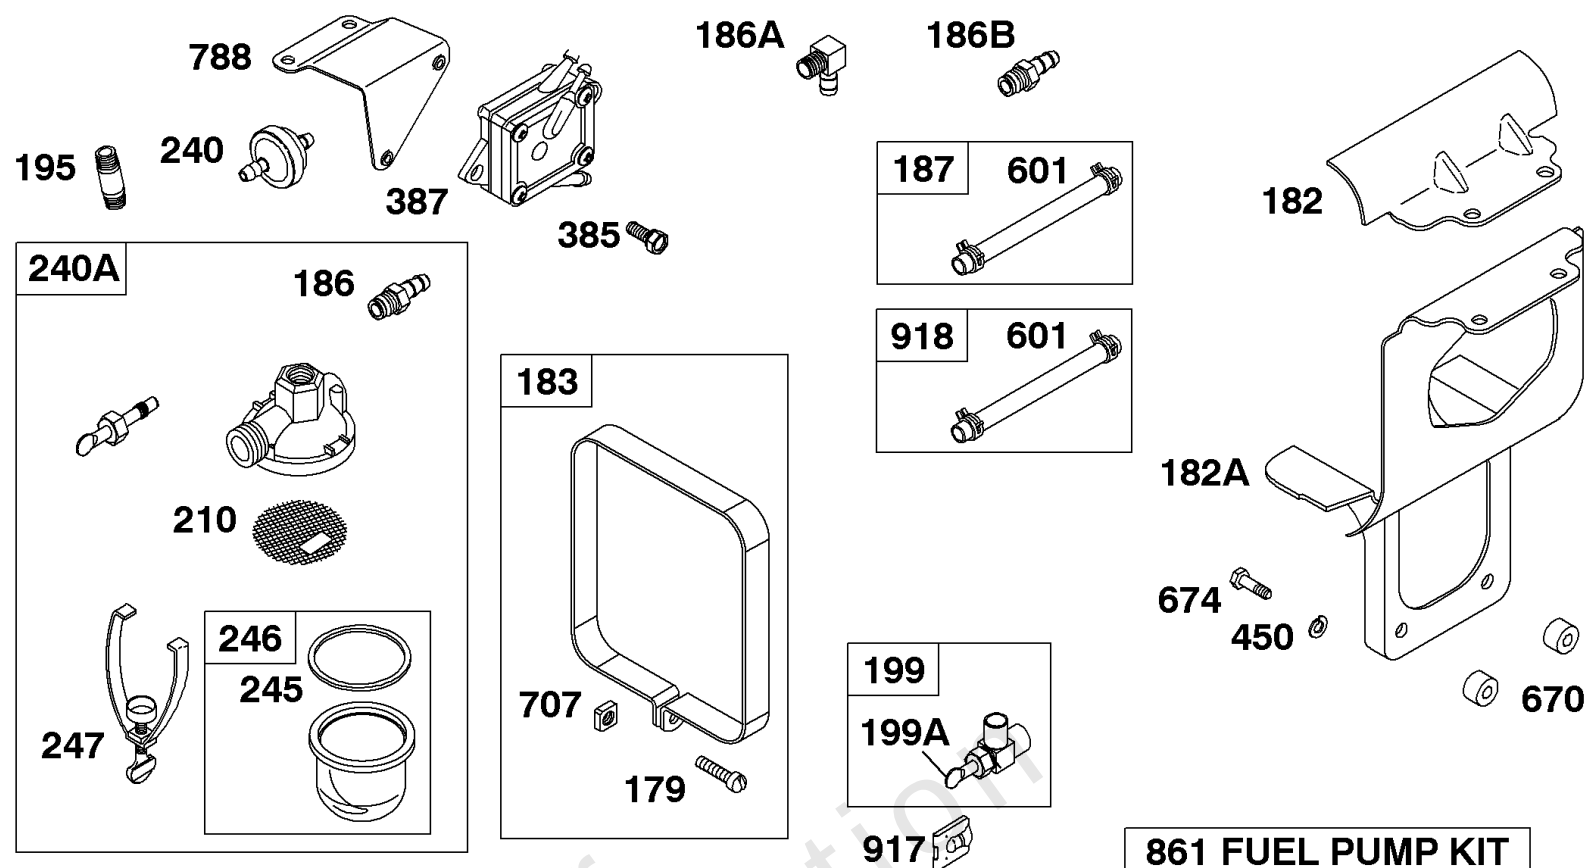 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
179	690280	Screw (Fuel Tank Strap)	187	499167	Line-Fuel (Cut to Required Length)	387	808656	Pump-Fuel
182	691068	Bracket-Fuel Tank				450	691075	Washer (Fuel Tank Bracket)
		----- Note -----			----- Note -----	601	791850	Clamp-Hose
		222669 Bracket-Fuel Tank			89248 Line-Fuel (2 1/4" Long)	670	690505	Spacer-Fuel Tank
		Used on Type No(s). 0205, 0291, 0648.			Used on Type No(s). 0080, 0386, 0387, 0393, 0395, 0396, 0397, 0631, 0640, 0641, 0662, 2580.	674	690303	Screw (Fuel Tank Bracket)
182A	690262	Bracket-Fuel Tank	195	91635	Nipple-Fuel	707	690279	Nut (Fuel Tank Strap)
183	691937	Strap-Fuel Tank	199	692302	Valve-Fuel Shut Off	788	224123	Bracket-Fuel Pump
		----- Note -----	199A	691940	Valve-Fuel Shut Off	861	394462	Kit-Fuel Pump (Walbro)
		291367 Strap-Fuel Tank	210	691962	Strainer-Fuel			----- Note -----
		(4 Quart)	240	298090S	Filter-Fuel			791885 Kit-Fuel Pump
		Used on Type No(s). 0206, 0211, 0213, 0229, 0271.			----- Note -----			Used on Type No(s). 0170, 0182, 0198, 0248, 0309, 0331, 0638, 0679, 0744, 0755, 0759.
186	691764	Connector-Hose			394358S Filter-Fuel			
186A	691609	Connector-Hose			Used on Type No(s). 0630, 0705, 0707, 0724, 0744, 0750, 0755, 0759, 0770, 0774, 2581.	917	691737	Handle-Shut Off Valve
186B	231238	Connector-Hose	240A	690612	Filter-Fuel	918	393815	Hose-Vacuum (Cylinder To Impulse Pump) (Cut to Required Length)
			245	692190	Gasket-Fuel Bowl			
			246	298683	Bowl-Fuel Filter			
			247	691700	Yoke-Bowl			
			385	692198	Screw (Fuel Pump)			

Fuel Pump, Fuel Filter


REF NO	PART NO	QTY	DESCRIPTION
707	690279		NUT -(Fuel Tank Strap)
788	224123		BRACKET, Fuel Pump
788	224123		BRACKET, Fuel Pump
788	224123		BRACKET, Fuel Pump
788	224123		BRACKET, Fuel Pump
788	224123		BRACKET, Fuel Pump
861	394462		KIT, Fuel Pump -(Walbro)(Pump Reference 387A Only)
861	394462		KIT, Fuel Pump -(Walbro)(Pump Reference 387A Only)
861	394462		KIT, Fuel Pump -(Walbro)(Pump Reference 387A Only)
861	394462		KIT, Fuel Pump -(Walbro)(Pump Reference 387A Only)
861	394462		KIT, Fuel Pump -(Walbro)(Pump Reference 387A Only)
917	691737		VALVE, Handle Shutoff
917	691737		VALVE, Handle Shutoff
917	691737		VALVE, Handle Shutoff
917	691737		VALVE, Handle Shutoff
917	691737		VALVE, Handle Shutoff
918	393815		HOSE, Vacuum -(Cylinder To Impulse Pump)(Cut to Required Length)
918	393815		HOSE, Vacuum -(Cylinder To Impulse Pump)(Cut to Required Length)
918	393815		HOSE, Vacuum -(Cylinder To Impulse Pump)(Cut to Required Length)
918	393815		HOSE, Vacuum -(Cylinder To Impulse Pump)(Cut to Required Length)
918	393815		HOSE, Vacuum -(Cylinder To Impulse Pump)(Cut to Required Length)

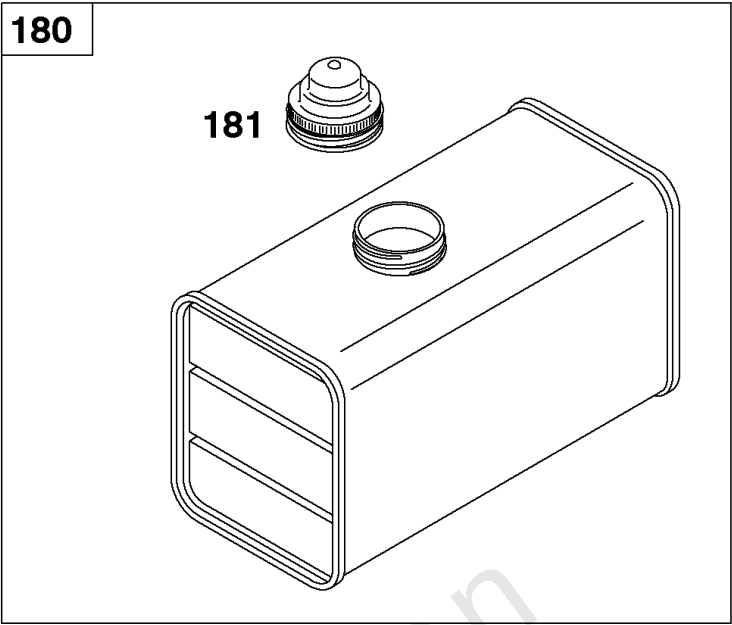 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
180	291488	Tank-Fuel (6 Quart) ----- Note ----- 290816 Tank-Fuel (4 Quart) 292415 Fuel Tank (8 Quart) Used on Type No(s). 0137, 0140, 0141, 0143, 0148, 0151, 0152, 0153, 0156, 0162, 0163, 0167, 0172, 0173, 0175, 0176, 0178, 0180, 0181, 0183, 0185, 0186, 0197, 0199, 0201, 0203, 0205, 0212, 0215, 0219, 0226, 0227, 0242, 0245, 0249, 0254, 0255, 0257, 0259, 0273, 0282, 0284, 0286, 0289, 0291, 0293, 0300, 0303, 0307, 0311, 0318,			0330, 0336, 0347, 0354, 0369, 0372, 0376, 0377, 0381, 0384, 0392, 0635, 0640, 0647, 0648, 0657, 0659, 0661, 0664, 0666, 0674, 0682, 0685, 0690, 0694, 0696, 0697, 0698, 0704, 0712, 0714, 0721, 0723, 0729, 0730, 0743, 0745, 0746, 0754, 0757, 0771, 0772.	181	791545	Cap-Fuel Tank (Chrome)

Fuel Tank


REF NO	PART NO	QTY	DESCRIPTION
180	290816		TANK, Fuel -(Metal) (4 Quart)
180	291488		TANK, Fuel -(Metal) (6 Quart)
180	290816		TANK, Fuel -(Metal) (4 Quart)
180	290816		TANK, Fuel -(Metal) (4 Quart)
180	291488		TANK, Fuel -(Metal) (6 Quart)
180	291488		TANK, Fuel -(Metal) (6 Quart)
180	290816		TANK, Fuel -(Metal) (4 Quart)
180	291488		TANK, Fuel -(Metal) (6 Quart)
180	290816		TANK, Fuel -(Metal) (4 Quart)
180	291488		TANK, Fuel -(Metal) (6 Quart)
181	791545		CAP, Fuel Tank -(Metal) (Chrome)
181	791545		CAP, Fuel Tank -(Metal) (Chrome)
181	791545		CAP, Fuel Tank -(Metal) (Chrome)
181	791545		CAP, Fuel Tank -(Metal) (Chrome)
181	791545		CAP, Fuel Tank -(Metal) (Chrome)

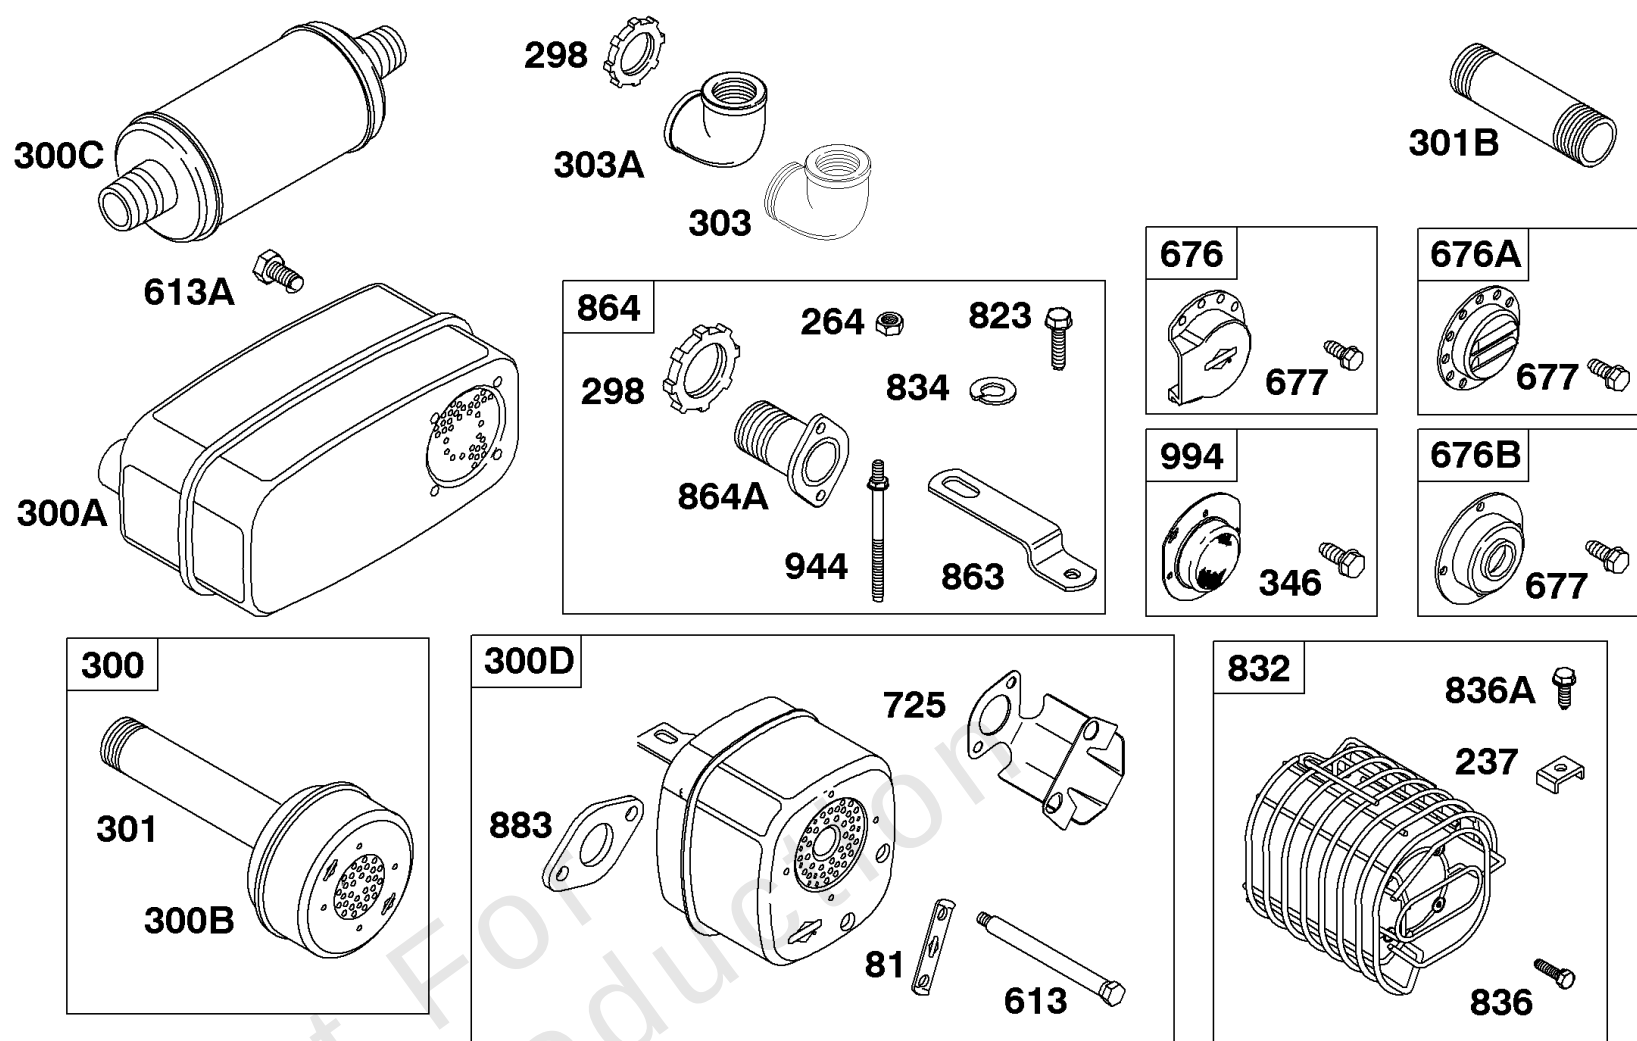 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
81	691178	Lock-Muffler Screw	303	690281	Elbow-Exhaust (1", 90 Degree)	676	393761	Deflector-Muffler
237	690409	Retainer-Muffler Guard	303A	91296	Elbow-Exhaust (1", 90 Degree) Used on Type No(s). 0391, 0686, 0726, 0732, 0737, 0744, 0750, 0759, 0781.	676A	397630	Deflector-Muffler
264	691105	Nut (Muffler Adapter)			----- Note -----	676B	396903	Deflector-Muffler
298	691808	Locknut-Muffler/Elbow			91415 Elbow-Exhaust (1", 45 Degree)	677	690661	Screw (Muffler Deflector)
300	393232S	Muffler	346	690661	Screw (Spark Arrestor)	725	690420	Shield-Heat
300A	498984S	Muffler	613	691416	Screw (Muffler)	823	690810	Screw (Muffler Adapter)
300B	392989	Muffler	613A	690297	Screw (Muffler) (Used After Code Date 97012300).	832	690648	Guard-Muffler
300C	291519	Muffler			----- Note -----	834	691075	Washer (Muffler Adapter)
300D	399635	Muffler			692198 Screw (Exhaust Muffler) (Used Before Code Date 97012400).	836	691083	Screw (Muffler Guard) (1" Long)
301	93734	Pipe-Exhaust (8" Long)				836A	690367	Screw (Muffler Guard) (2/3" Long)
301B	91416	Pipe-Exhaust (1 1/2" Long) Used on Type No(s). 0163, 0327.				863	694016	Bracket-Muffler
						864	394584	Adapter-Muffler
						864A	690637	Adapter-Muffler
						883	692236	Gasket-Exhaust
						944	691690	Stud (Muffler Adapter)
						994	392390	Arrestor-Spark

Muffler, Shields


REF NO	PART NO	QTY	DESCRIPTION
81	691178		LOCK, Muffler Screw
81	691178		LOCK, Muffler Screw
81	691178		LOCK, Muffler Screw
81	691178		LOCK, Muffler Screw
81	691178		LOCK, Muffler Screw
237	690409		RETAINER, Muffler Guard
237	690409		RETAINER, Muffler Guard
237	690409		RETAINER, Muffler Guard
237	690409		RETAINER, Muffler Guard
237	690409		RETAINER, Muffler Guard
264	691105		LOCKNUT -(Muffler Adapter)
264	691105		LOCKNUT -(Muffler Adapter)
264	691105		LOCKNUT -(Muffler Adapter)
264	691105		LOCKNUT -(Muffler Adapter)
264	691105		LOCKNUT -(Muffler Adapter)
298	691808		LOCKNUT -(Muffler and Elbow)
298	691808		LOCKNUT -(Muffler and Elbow)
298	691808		LOCKNUT -(Muffler and Elbow)
298	691808		LOCKNUT -(Muffler and Elbow)
298	691808		LOCKNUT -(Muffler and Elbow)
300	393232S		MUFFLER
300	393232S		MUFFLER
300	393232S		MUFFLER
300	393232S		MUFFLER
300	393232S		MUFFLER
300A	498984S		MUFFLER
300A	498984S		MUFFLER
300A	498984S		MUFFLER
300A	498984S		MUFFLER
300A	498984S		MUFFLER
300B	392989		MUFFLER
300C	291519		MUFFLER
300D	399635		MUFFLER -(Square Lo Tone)
300B	392989		MUFFLER
300C	291519		MUFFLER
300D	399635		MUFFLER -(Square Lo Tone)
300D	399635		MUFFLER -(Square Lo Tone)
300C	291519		MUFFLER
300B	392989		MUFFLER
300B	392989		MUFFLER
300C	291519		MUFFLER
300D	399635		MUFFLER -(Square Lo Tone)

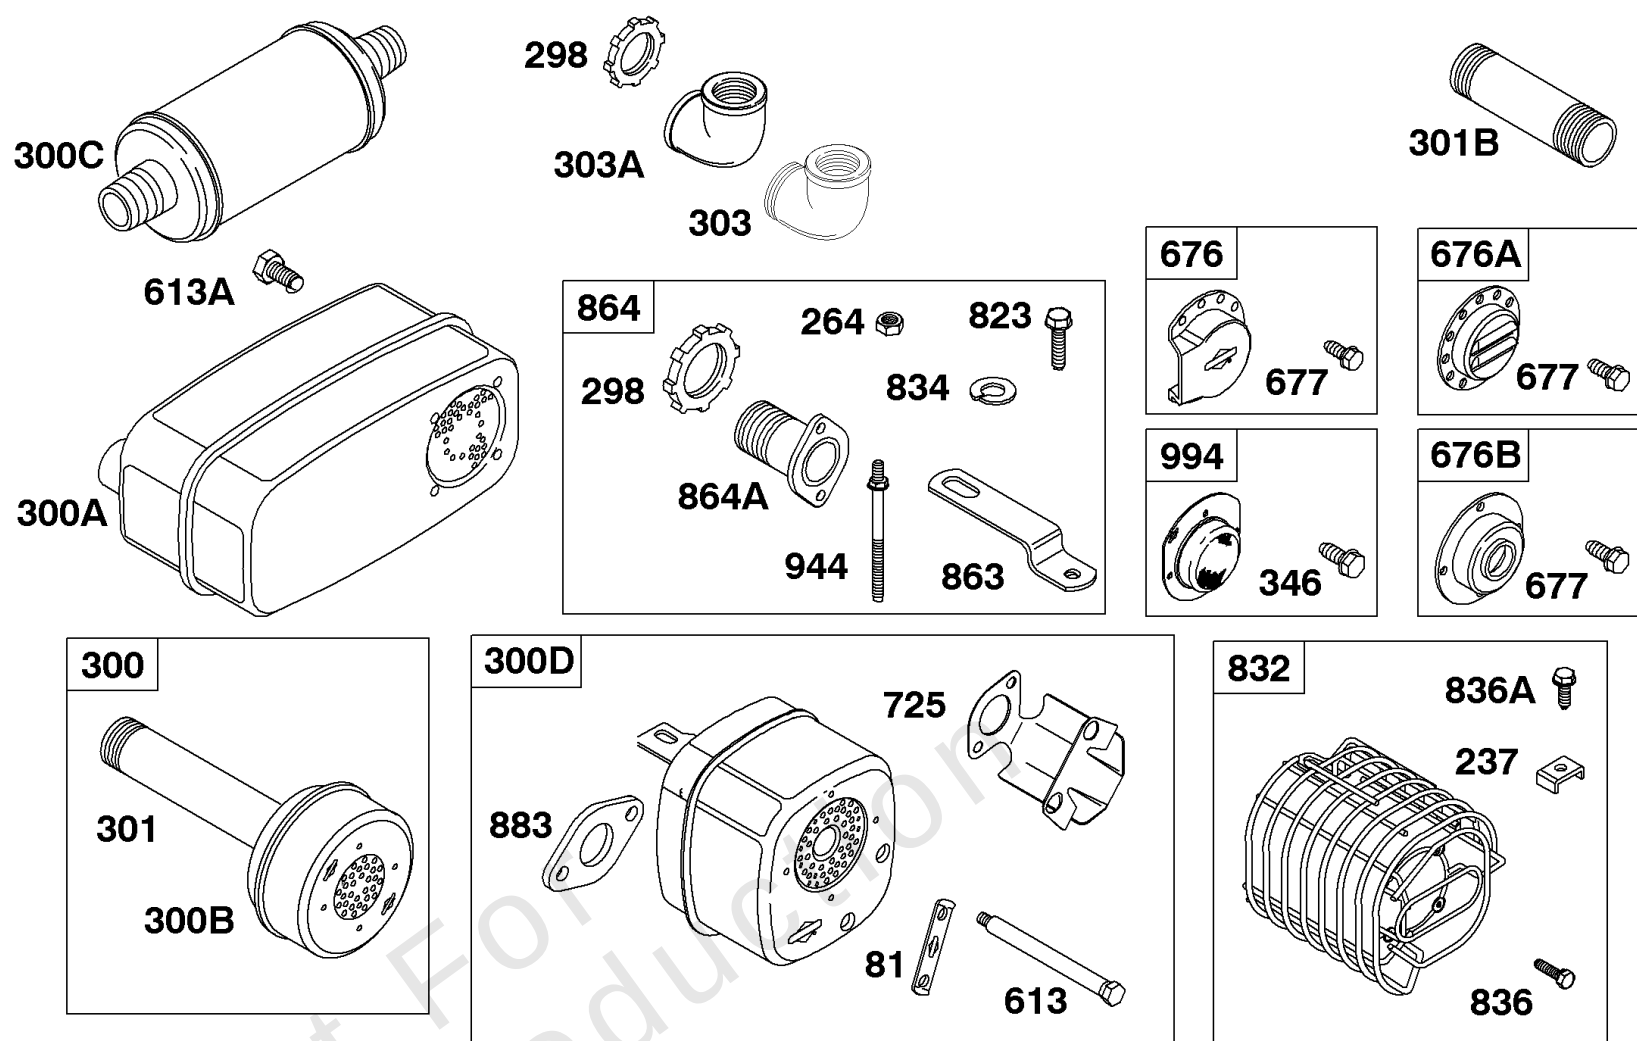 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
81	691178	Lock-Muffler Screw	303	690281	Elbow-Exhaust (1", 90 Degree)	676	393761	Deflector-Muffler
237	690409	Retainer-Muffler Guard	303A	91296	Elbow-Exhaust (1", 90 Degree) Used on Type No(s). 0391, 0686, 0726, 0732, 0737, 0744, 0750, 0759, 0781.	676A	397630	Deflector-Muffler
264	691105	Nut (Muffler Adapter)			----- Note -----	676B	396903	Deflector-Muffler
298	691808	Locknut-Muffler/Elbow			91415 Elbow-Exhaust (1", 45 Degree)	677	690661	Screw (Muffler Deflector)
300	393232S	Muffler	346	690661	Screw (Spark Arrestor)	725	690420	Shield-Heat
300A	498984S	Muffler	613	691416	Screw (Muffler)	823	690810	Screw (Muffler Adapter)
300B	392989	Muffler	613A	690297	Screw (Muffler) (Used After Code Date 97012300).	832	690648	Guard-Muffler
300C	291519	Muffler			----- Note -----	834	691075	Washer (Muffler Adapter)
300D	399635	Muffler			692198 Screw (Exhaust Muffler) (Used Before Code Date 97012400).	836	691083	Screw (Muffler Guard) (1" Long)
301	93734	Pipe-Exhaust (8" Long)				836A	690367	Screw (Muffler Guard) (2/3" Long)
301B	91416	Pipe-Exhaust (1 1/2" Long) Used on Type No(s). 0163, 0327.				863	694016	Bracket-Muffler
						864	394584	Adapter-Muffler
						864A	690637	Adapter-Muffler
						883	692236	Gasket-Exhaust
						944	691690	Stud (Muffler Adapter)
						994	392390	Arrestor-Spark

Muffler, Shields


REF NO	PART NO	QTY	DESCRIPTION
300D	399635		MUFFLER -(Square Lo Tone)
300C	291519		MUFFLER
300B	392989		MUFFLER
301	93734		ADAPTER, Muffler -(8)
301	93734		ADAPTER, Muffler -(8)
301	93734		ADAPTER, Muffler -(8)
301	93734		ADAPTER, Muffler -(8)
301	93734		ADAPTER, Muffler -(8)
303	690281		MANIFOLD, Exhaust -(1 90 Degree)
303	91415		ELBOW, Exhaust -(45 Degree)
303	91415		ELBOW, Exhaust -(45 Degree)
303	690281		MANIFOLD, Exhaust -(1 90 Degree)
303	690281		MANIFOLD, Exhaust -(1 90 Degree)
303	91415		ELBOW, Exhaust -(45 Degree)
303	690281		MANIFOLD, Exhaust -(1 90 Degree)
303	91415		ELBOW, Exhaust -(45 Degree)
303	690281		MANIFOLD, Exhaust -(1 90 Degree)
303	91415		ELBOW, Exhaust -(45 Degree)
346	690661		SCREW -(Spark Arrestor)
346	690661		SCREW -(Spark Arrestor)
346	690661		SCREW -(Spark Arrestor)
346	690661		SCREW -(Spark Arrestor)
346	690661		SCREW -(Spark Arrestor)
613	691416		SCREW -(Muffler)
613	691416		SCREW -(Muffler)
613	691416		SCREW -(Muffler)
613	691416		SCREW -(Muffler)
613	691416		SCREW -(Muffler)
613A	690297		SCREW -(Muffler) -Used After Code Date 97012300
613A	692198		SCREW -(Muffler) -Used Before Code Date 97012400

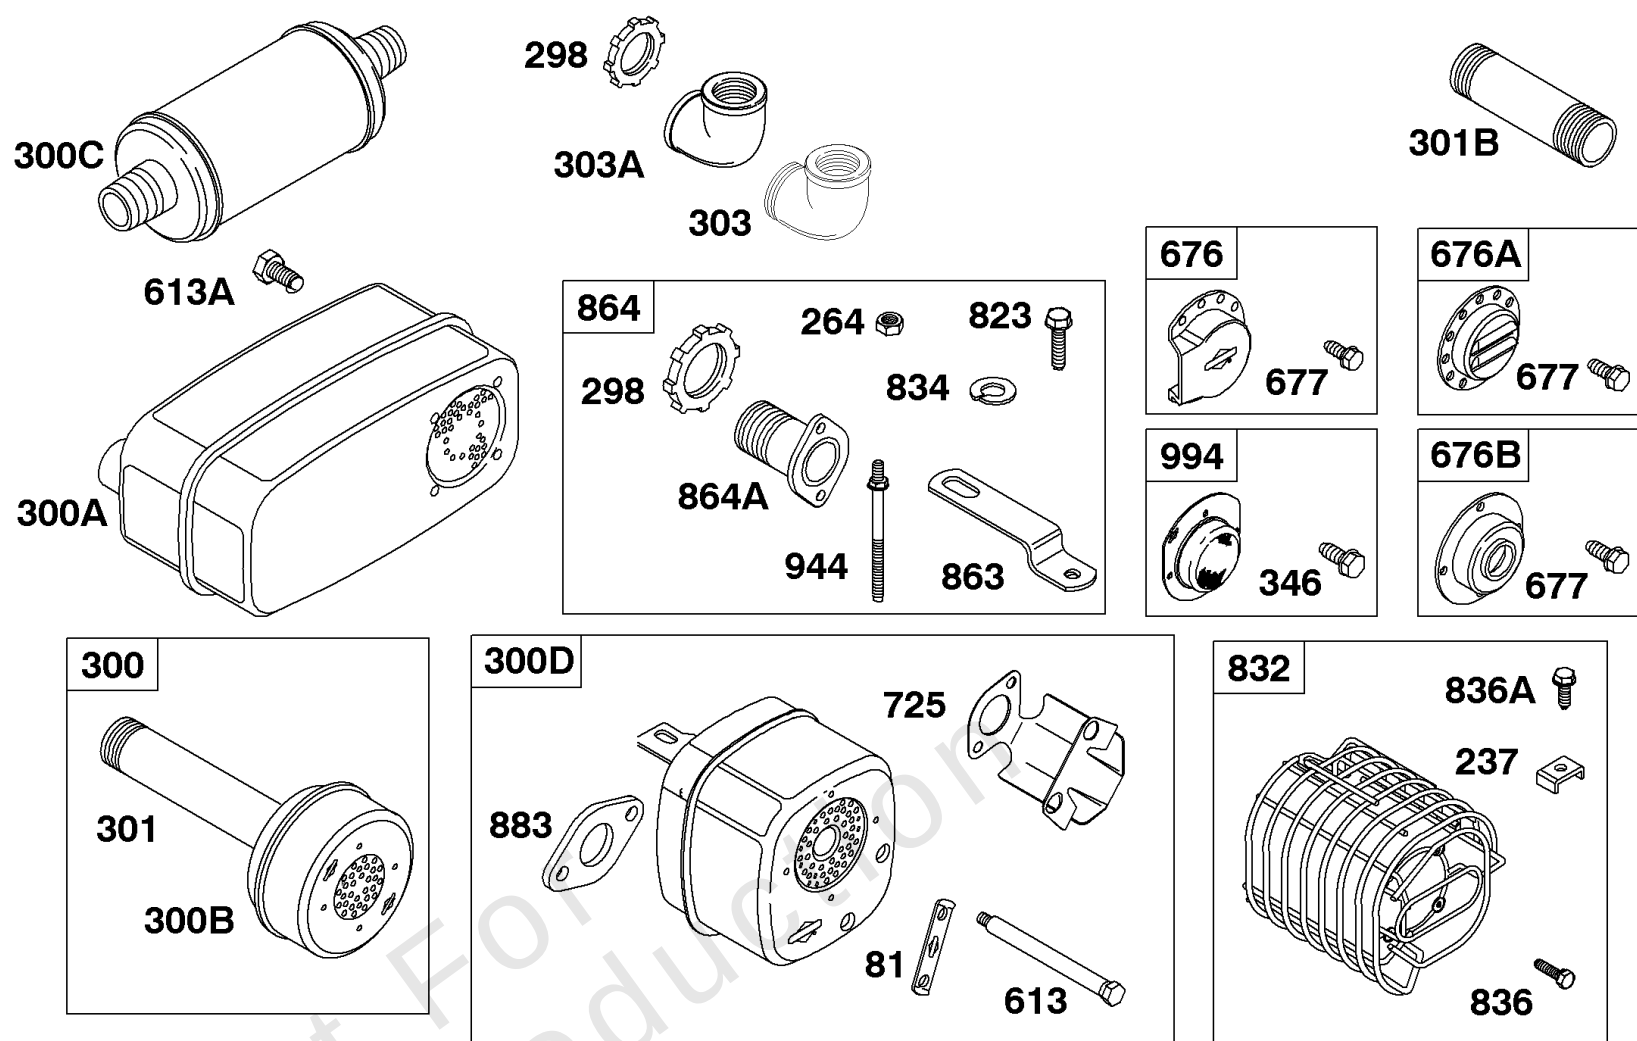 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
81	691178	Lock-Muffler Screw	303	690281	Elbow-Exhaust (1", 90 Degree)	676	393761	Deflector-Muffler
237	690409	Retainer-Muffler Guard	303A	91296	Elbow-Exhaust (1", 90 Degree) Used on Type No(s). 0391, 0686, 0726, 0732, 0737, 0744, 0750, 0759, 0781.	676A	397630	Deflector-Muffler
264	691105	Nut (Muffler Adapter)			----- Note -----	676B	396903	Deflector-Muffler
298	691808	Locknut-Muffler/Elbow			91415 Elbow-Exhaust (1", 45 Degree)	677	690661	Screw (Muffler Deflector)
300	393232S	Muffler	346	690661	Screw (Spark Arrestor)	725	690420	Shield-Heat
300A	498984S	Muffler	613	691416	Screw (Muffler)	823	690810	Screw (Muffler Adapter)
300B	392989	Muffler	613A	690297	Screw (Muffler) (Used After Code Date 97012300).	832	690648	Guard-Muffler
300C	291519	Muffler			----- Note -----	834	691075	Washer (Muffler Adapter)
300D	399635	Muffler			692198 Screw (Exhaust Muffler) (Used Before Code Date 97012400).	836	691083	Screw (Muffler Guard) (1" Long)
301	93734	Pipe-Exhaust (8" Long)				836A	690367	Screw (Muffler Guard) (2/3" Long)
301B	91416	Pipe-Exhaust (1 1/2" Long) Used on Type No(s). 0163, 0327.				863	694016	Bracket-Muffler
						864	394584	Adapter-Muffler
						864A	690637	Adapter-Muffler
						883	692236	Gasket-Exhaust
						944	691690	Stud (Muffler Adapter)
						994	392390	Arrestor-Spark

Muffler, Shields


REF NO	PART NO	QTY	DESCRIPTION
613A	690297		SCREW -(Muffler) -Used After Code Date 97012300
613A	690297		SCREW -(Muffler) -Used After Code Date 97012300
613A	692198		SCREW -(Muffler) -Used Before Code Date 97012400
613A	692198		SCREW -(Muffler) -Used Before Code Date 97012400
613A	690297		SCREW -(Muffler) -Used After Code Date 97012300
613A	692198		SCREW -(Muffler) -Used Before Code Date 97012400
613A	690297		SCREW -(Muffler) -Used After Code Date 97012300
613A	692198		SCREW -(Muffler) -Used Before Code Date 97012400
676	393761		DEFLECTOR, Muffler -(Side Outlet)
676	393761		DEFLECTOR, Muffler -(Side Outlet)
676	393761		DEFLECTOR, Muffler -(Side Outlet)
676	393761		DEFLECTOR, Muffler -(Side Outlet)
676	393761		DEFLECTOR, Muffler -(Side Outlet)
676A	397630		DEFLECTOR, Muffler -(Louvered Outlet)
676A	397630		DEFLECTOR, Muffler -(Louvered Outlet)
676A	397630		DEFLECTOR, Muffler -(Louvered Outlet)
676A	397630		DEFLECTOR, Muffler -(Louvered Outlet)
676A	397630		DEFLECTOR, Muffler -(Louvered Outlet)
676B	396903		DEFLECTOR, Muffler
676B	396903		DEFLECTOR, Muffler
676B	396903		DEFLECTOR, Muffler
676B	396903		DEFLECTOR, Muffler
676B	396903		DEFLECTOR, Muffler
677	690661		SCREW -(Muffler Deflector)
677	690661		SCREW -(Muffler Deflector)
677	690661		SCREW -(Muffler Deflector)
677	690661		SCREW -(Muffler Deflector)
677	690661		SCREW -(Muffler Deflector)
725	690420		SHIELD, Heat

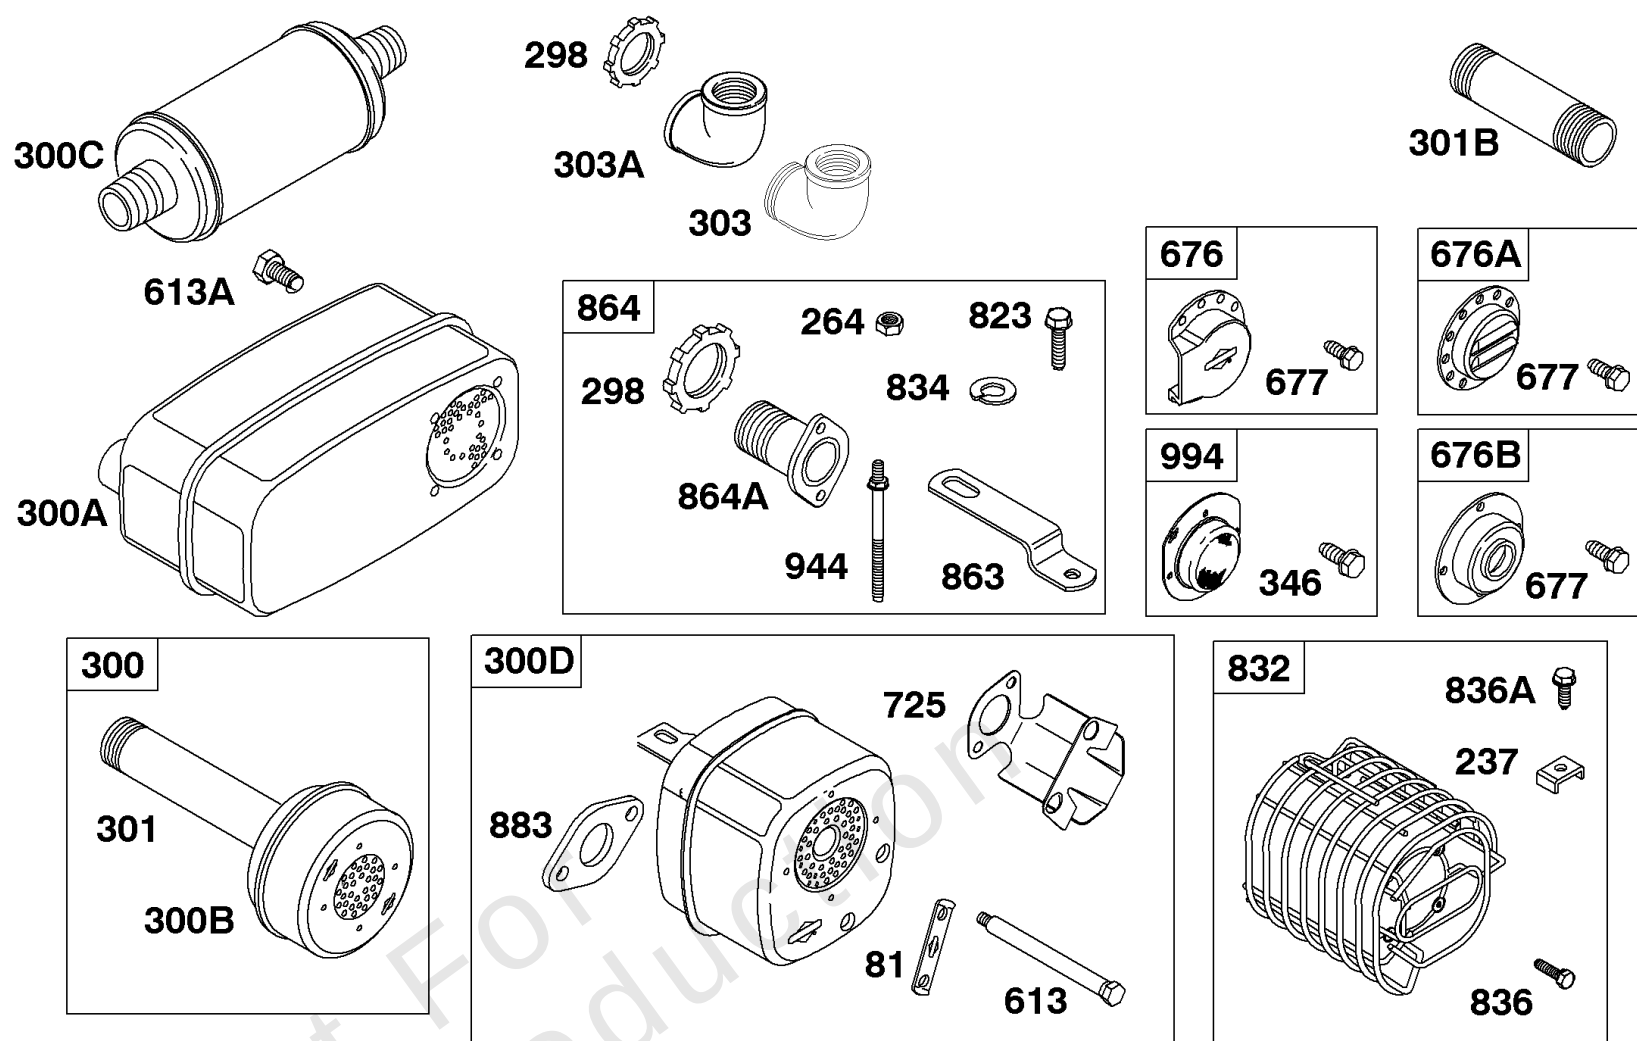 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
81	691178	Lock-Muffler Screw	303	690281	Elbow-Exhaust (1", 90 Degree)	676	393761	Deflector-Muffler
237	690409	Retainer-Muffler Guard	303A	91296	Elbow-Exhaust (1", 90 Degree) Used on Type No(s). 0391, 0686, 0726, 0732, 0737, 0744, 0750, 0759, 0781.	676A	397630	Deflector-Muffler
264	691105	Nut (Muffler Adapter)			----- Note -----	676B	396903	Deflector-Muffler
298	691808	Locknut-Muffler/Elbow			91415 Elbow-Exhaust (1", 45 Degree)	677	690661	Screw (Muffler Deflector)
300	393232S	Muffler	346	690661	Screw (Spark Arrestor)	725	690420	Shield-Heat
300A	498984S	Muffler	613	691416	Screw (Muffler)	823	690810	Screw (Muffler Adapter)
300B	392989	Muffler	613A	690297	Screw (Muffler) (Used After Code Date 97012300).	832	690648	Guard-Muffler
300C	291519	Muffler			----- Note -----	834	691075	Washer (Muffler Adapter)
300D	399635	Muffler			692198 Screw (Exhaust Muffler) (Used Before Code Date 97012400).	836	691083	Screw (Muffler Guard) (1" Long)
301	93734	Pipe-Exhaust (8" Long)				836A	690367	Screw (Muffler Guard) (2/3" Long)
301B	91416	Pipe-Exhaust (1 1/2" Long) Used on Type No(s). 0163, 0327.				863	694016	Bracket-Muffler
						864	394584	Adapter-Muffler
						864A	690637	Adapter-Muffler
						883	692236	Gasket-Exhaust
						944	691690	Stud (Muffler Adapter)
						994	392390	Arrestor-Spark

Muffler, Shields


REF NO	PART NO	QTY	DESCRIPTION
725	690420		SHIELD, Heat
725	690420		SHIELD, Heat
725	690420		SHIELD, Heat
725	690420		SHIELD, Heat
823	690810		SCREW -(Muffler Adapter)
823	690810		SCREW -(Muffler Adapter)
823	690810		SCREW -(Muffler Adapter)
823	690810		SCREW -(Muffler Adapter)
823	690810		SCREW -(Muffler Adapter)
832	690648		GUARD, Muffler
832	690648		GUARD, Muffler
832	690648		GUARD, Muffler
832	690648		GUARD, Muffler
832	690648		GUARD, Muffler
834	691075		WASHER -(Muffler Adapter)
834	691075		WASHER -(Muffler Adapter)
834	691075		WASHER -(Muffler Adapter)
834	691075		WASHER -(Muffler Adapter)
836	691083		SCREW -(Muffler Guard) (1)
836	691083		SCREW -(Muffler Guard) (1)
836	691083		SCREW -(Muffler Guard) (1)
836	691083		SCREW -(Muffler Guard) (1)
836	691083		SCREW -(Muffler Guard) (1)
836A	690367		SCREW -(Muffler Guard) (2/3)
836A	690367		SCREW -(Muffler Guard) (2/3)
836A	690367		SCREW -(Muffler Guard) (2/3)
836A	690367		SCREW -(Muffler Guard) (2/3)
836A	690367		SCREW -(Muffler Guard) (2/3)
863	694016		BRACKET, Muffler
863	694016		BRACKET, Muffler
863	694016		BRACKET, Muffler
863	694016		BRACKET, Muffler
864	394584		ADAPTER, Muffler
864	394584		ADAPTER, Muffler
864	394584		ADAPTER, Muffler

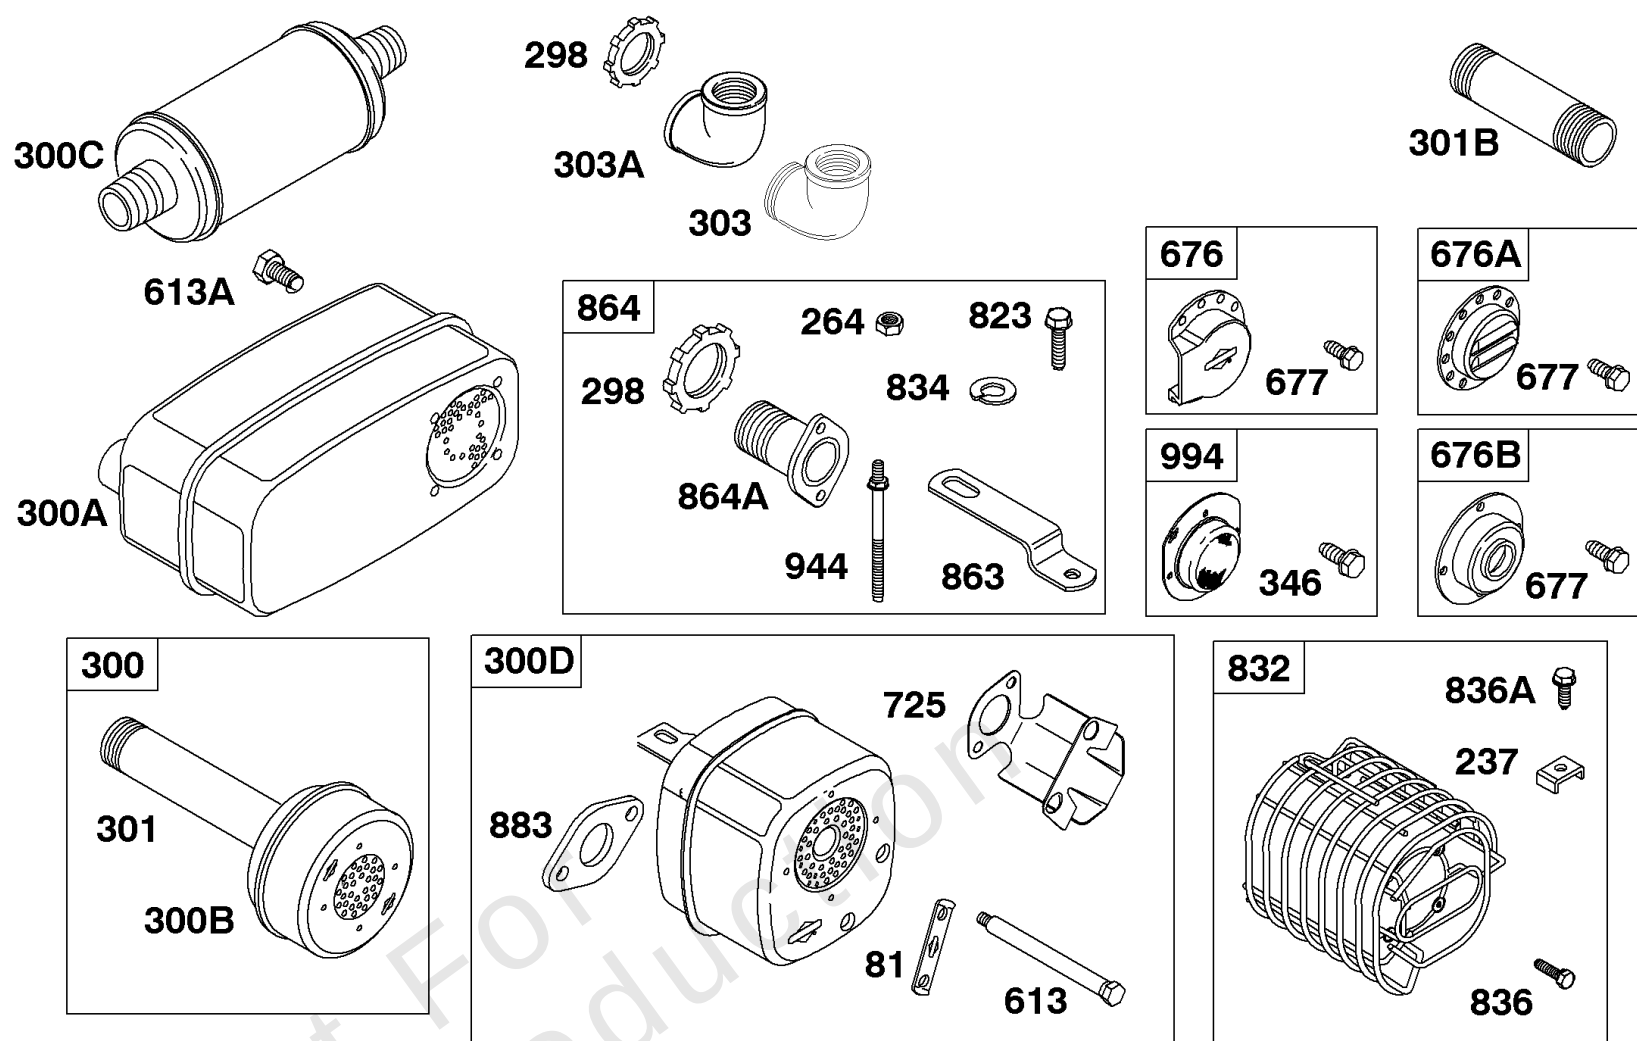 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
81	691178	Lock-Muffler Screw	303	690281	Elbow-Exhaust (1", 90 Degree)	676	393761	Deflector-Muffler
237	690409	Retainer-Muffler Guard	303A	91296	Elbow-Exhaust (1", 90 Degree) Used on Type No(s). 0391, 0686, 0726, 0732, 0737, 0744, 0750, 0759, 0781.	676A	397630	Deflector-Muffler
264	691105	Nut (Muffler Adapter)			----- Note -----	676B	396903	Deflector-Muffler
298	691808	Locknut-Muffler/Elbow			91415 Elbow-Exhaust (1", 45 Degree)	677	690661	Screw (Muffler Deflector)
300	393232S	Muffler	346	690661	Screw (Spark Arrestor)	725	690420	Shield-Heat
300A	498984S	Muffler	613	691416	Screw (Muffler)	823	690810	Screw (Muffler Adapter)
300B	392989	Muffler	613A	690297	Screw (Muffler) (Used After Code Date 97012300).	832	690648	Guard-Muffler
300C	291519	Muffler			----- Note -----	834	691075	Washer (Muffler Adapter)
300D	399635	Muffler			692198 Screw (Exhaust Muffler) (Used Before Code Date 97012400).	836	691083	Screw (Muffler Guard) (1" Long)
301	93734	Pipe-Exhaust (8" Long)				836A	690367	Screw (Muffler Guard) (2/3" Long)
301B	91416	Pipe-Exhaust (1 1/2" Long) Used on Type No(s). 0163, 0327.				863	694016	Bracket-Muffler
						864	394584	Adapter-Muffler
						864A	690637	Adapter-Muffler
						883	692236	Gasket-Exhaust
						944	691690	Stud (Muffler Adapter)
						994	392390	Arrestor-Spark

Muffler, Shields


REF NO	PART NO	QTY	DESCRIPTION
864	394584		ADAPTER, Muffler
864	394584		ADAPTER, Muffler
864A	690637		ADAPTER, Muffler
864A	690637		ADAPTER, Muffler
864A	690637		ADAPTER, Muffler
864A	690637		ADAPTER, Muffler
864A	690637		ADAPTER, Muffler
883	692236		GASKET, Exhaust
883	692236		GASKET, Exhaust
883	692236		GASKET, Exhaust
883	692236		GASKET, Exhaust
883	692236		GASKET, Exhaust
944	691690		STUD -(Muffler Adapter)
944	691690		STUD -(Muffler Adapter)
944	691690		STUD -(Muffler Adapter)
944	691690		STUD -(Muffler Adapter)
944	691690		STUD -(Muffler Adapter)
994	392390		ARRESTOR, Spark
994	392390		ARRESTOR, Spark
994	392390		ARRESTOR, Spark
994	392390		ARRESTOR, Spark
994	392390		ARRESTOR, Spark

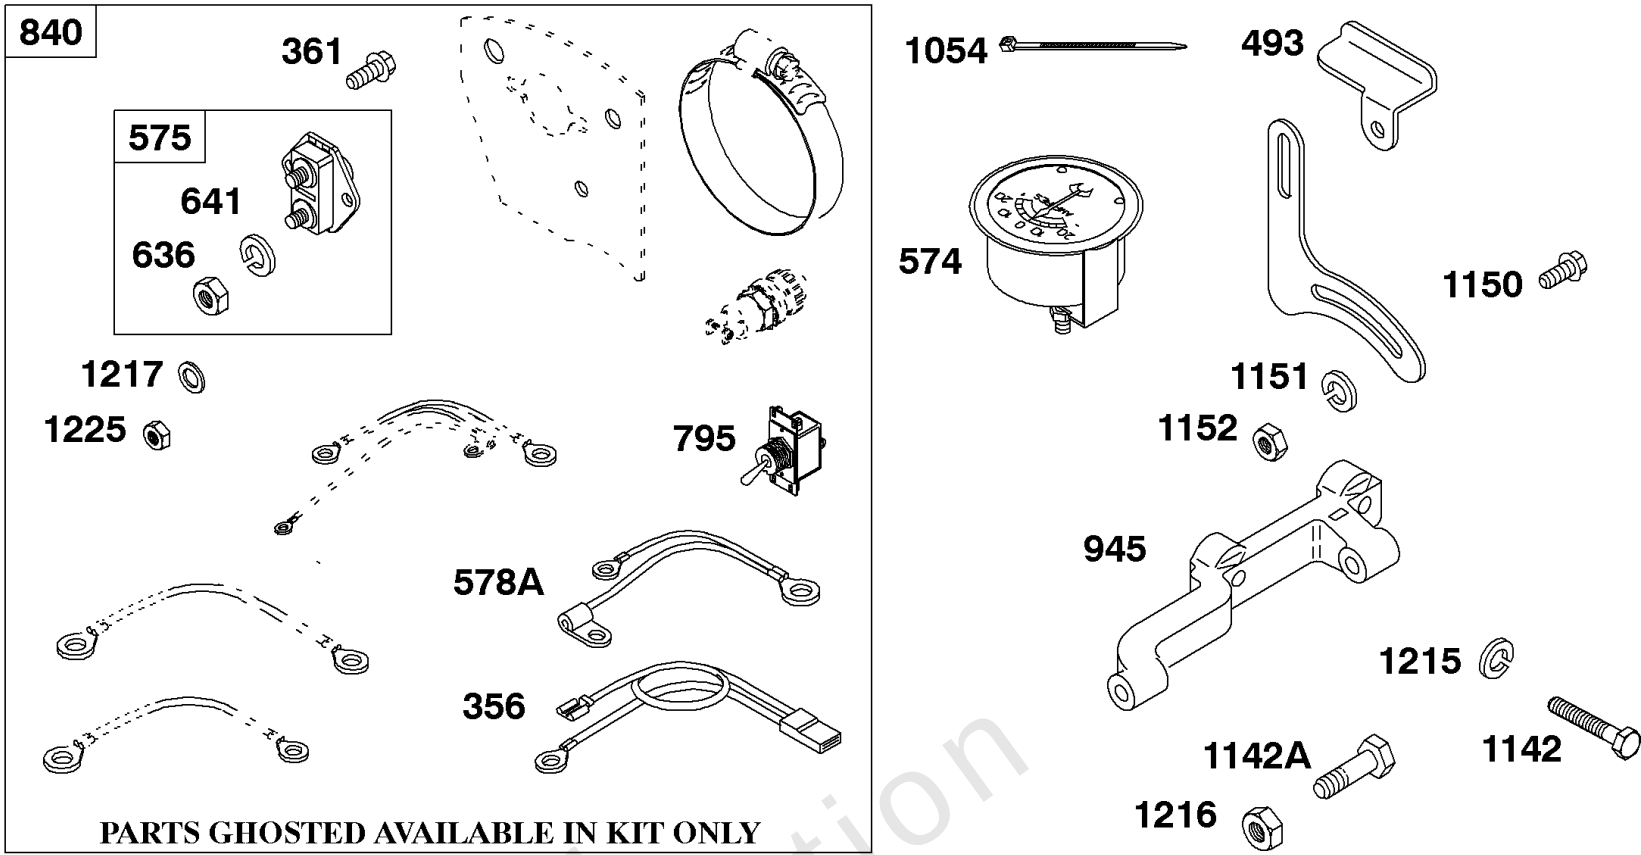 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
356	398808	Wire-Stop	795	298590	Switch-Toggle	1215	691075	Washer (Starter Bracket)
361	93415	Screw (Starting Switch)	840	298561	Kit-Panel (Generator Panel)	1216	691105	Nut (Starter Bracket)
493	221933	Bracket-Mounting	945	211785	Bracket-Starter Motor	1217	690282	Washer (Starting Switch)
574	295158	Ammeter (Stewart Warner Number 357-W)	1054	280275	Tie-Cable	1225	691029	Nut (Starting Switch)
575	692303	Switch-Starting	1142	690303	Screw (Starter Motor Bracket)			
578A	298582	Wire Assembly	1142A	691614	Screw (Starter Motor Bracket) (1 3/4" Long)			
636	696198	Nut (Starting Switch) (Terminal)	1150	691058	Screw (Adjusting Strap)			
641	691075	Washer (Starting Switch) (Terminal)	1151	690282	Washer (Adjusting Strap)			
			1152	691105	Nut (Adjusting Strap)			

Panel Kit, Gages, Wires



REF NO	PART NO	QTY	DESCRIPTION
356	398808		WIRE, Stop -(Cut To Required Length)
356	398808		WIRE, Stop -(Cut To Required Length)
356	398808		WIRE, Stop -(Cut To Required Length)
356	398808		WIRE, Stop -(Cut To Required Length)
356	398808		WIRE, Stop -(Cut To Required Length)
361	691681		SCREW -(Starting Switch)
361	691681		SCREW -(Starting Switch)
361	691681		SCREW -(Starting Switch)
361	691681		SCREW -(Starting Switch)
361	691681		SCREW -(Starting Switch)
493	221933		BRACKET, Starter Motor
493	221933		BRACKET, Starter Motor
493	221933		BRACKET, Starter Motor
493	221933		BRACKET, Starter Motor
493	221933		BRACKET, Starter Motor
574	295158		AMMETER -(Stewart Warner Number 357-W)
574	295158		AMMETER -(Stewart Warner Number 357-W)
574	295158		AMMETER -(Stewart Warner Number 357-W)
574	295158		AMMETER -(Stewart Warner Number 357-W)
574	295158		AMMETER -(Stewart Warner Number 357-W)
575	692303		SWITCH-STARTING
575	692303		SWITCH-STARTING
575	692303		SWITCH-STARTING
575	692303		SWITCH-STARTING
575	692303		SWITCH-STARTING
578A	298582		WIRE ASSEMBLY -(2 Wires, 5-7/16, And 3-7/8)(Insulated Support Ring Terminal,Insulated Support Ring Terminal, And Flag Ring Terminal)
578A	298582		WIRE ASSEMBLY -(2 Wires, 5-7/16, And 3-7/8)(Insulated Support Ring Terminal,Insulated Support Ring Terminal, And Flag Ring Terminal)
578A	692306		WIRE ASSEMBLY
578A	298582		WIRE ASSEMBLY -(2 Wires, 5-7/16, And 3-7/8)(Insulated Support Ring Terminal,Insulated Support Ring Terminal, And Flag Ring Terminal)
578A	692306		WIRE ASSEMBLY
578A	298582		WIRE ASSEMBLY -(2 Wires, 5-7/16, And 3-7/8)(Insulated Support Ring Terminal,Insulated Support Ring Terminal, And Flag Ring Terminal)
578A	692306		WIRE ASSEMBLY
578A	692306		WIRE ASSEMBLY
578A	692306		WIRE ASSEMBLY

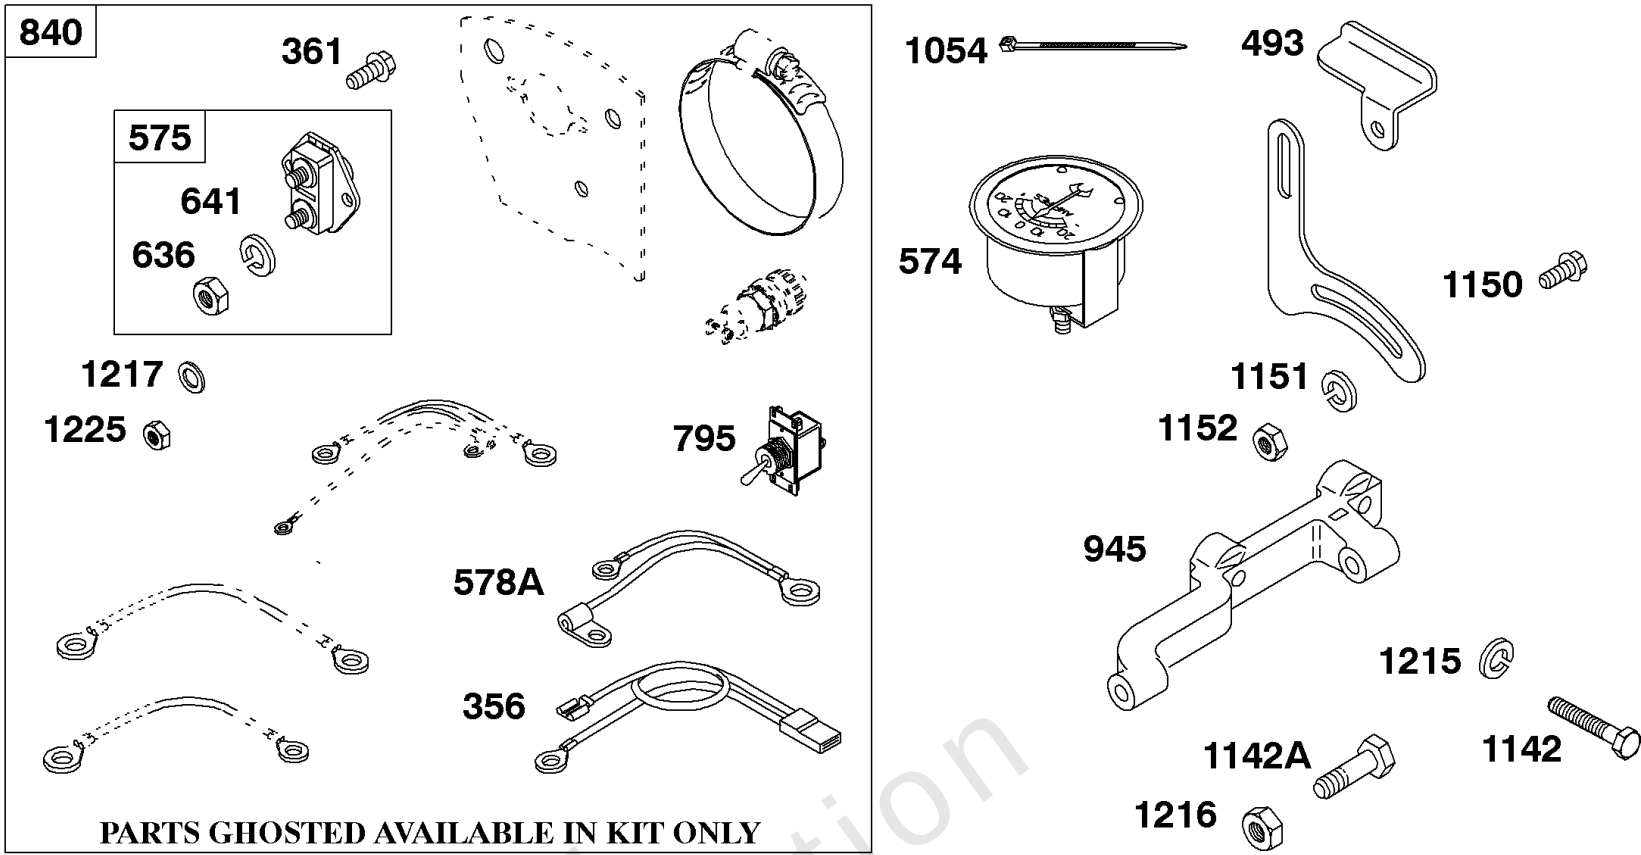 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
356	398808	Wire-Stop	795	298590	Switch-Toggle	1215	691075	Washer (Starter Bracket)
361	93415	Screw (Starting Switch)	840	298561	Kit-Panel (Generator Panel)	1216	691105	Nut (Starter Bracket)
493	221933	Bracket-Mounting	945	211785	Bracket-Starter Motor	1217	690282	Washer (Starting Switch)
574	295158	Ammeter (Stewart Warner Number 357-W)	1054	280275	Tie-Cable	1225	691029	Nut (Starting Switch)
575	692303	Switch-Starting	1142	690303	Screw (Starter Motor Bracket)			
578A	298582	Wire Assembly	1142A	691614	Screw (Starter Motor Bracket) (1 3/4" Long)			
636	696198	Nut (Starting Switch) (Terminal)	1150	691058	Screw (Adjusting Strap)			
641	691075	Washer (Starting Switch) (Terminal)	1151	690282	Washer (Adjusting Strap)			
			1152	691105	Nut (Adjusting Strap)			

Panel Kit, Gages, Wires



REF NO	PART NO	QTY	DESCRIPTION
578A	298582		WIRE ASSEMBLY -(2 Wires, 5-7/16, And 3-7/8)(Insulated Support Ring Terminal,Insulated Support Ring Terminal, And Flag Ring Terminal)
636	696198		NUT -(Starting Switch) (Terminal)
636	696198		NUT -(Starting Switch) (Terminal)
636	696198		NUT -(Starting Switch) (Terminal)
636	696198		NUT -(Starting Switch) (Terminal)
636	696198		NUT -(Starting Switch) (Terminal)
641	691075		WASHER -(Starting Switch) (Terminal)
641	691075		WASHER -(Starting Switch) (Terminal)
641	691075		WASHER -(Starting Switch) (Terminal)
641	691075		WASHER -(Starting Switch) (Terminal)
641	691075		WASHER -(Starting Switch) (Terminal)
795	298590		SWITCH, Toggle
795	298590		SWITCH, Toggle
795	298590		SWITCH, Toggle
795	298590		SWITCH, Toggle
795	298590		SWITCH, Toggle
840	298561		KIT, Panel -(Generator Panel)
840	298561		KIT, Panel -(Generator Panel)
840	298561		KIT, Panel -(Generator Panel)
840	298561		KIT, Panel -(Generator Panel)
840	298561		KIT, Panel -(Generator Panel)
945	211785		BRACKET, Starter Motor
945	211785		BRACKET, Starter Motor
945	211785		BRACKET, Starter Motor
945	211785		BRACKET, Starter Motor
945	211785		BRACKET, Starter Motor
1054	280275		TIE, Cable
1054	280275		TIE, Cable
1054	280275		TIE, Cable
1054	280275		TIE, Cable
1054	280275		TIE, Cable
1142	690303		SCREW -(Starter Motor Bracket)
1142	690303		SCREW -(Starter Motor Bracket)
1142	690303		SCREW -(Starter Motor Bracket)
1142	690303		SCREW -(Starter Motor Bracket)
1142	690303		SCREW -(Starter Motor Bracket)

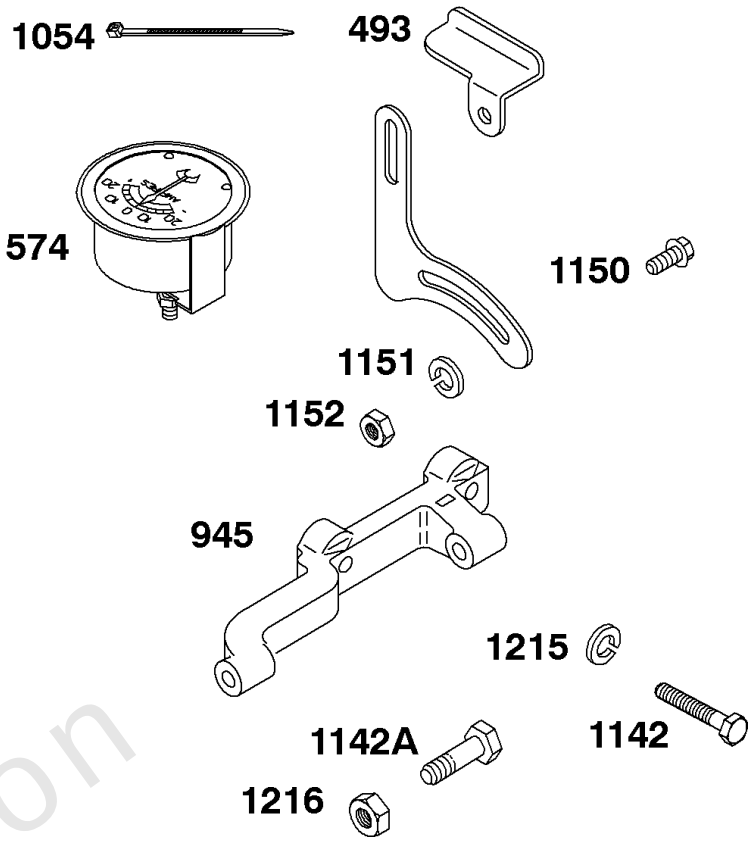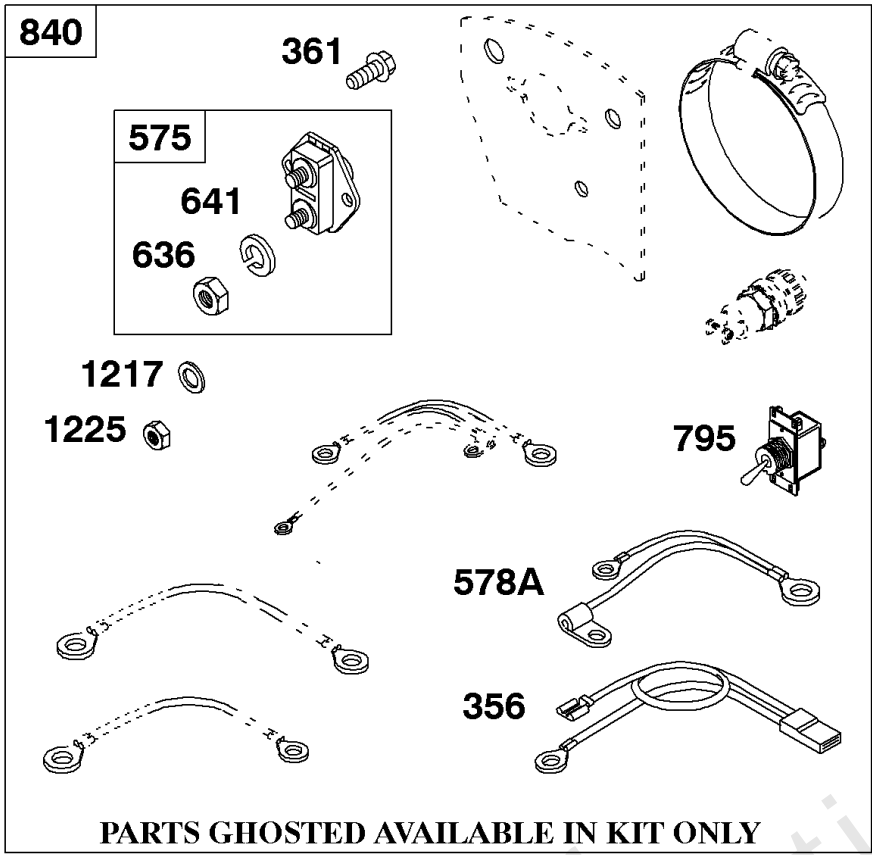  

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
356	398808	Wire-Stop	795	298590	Switch-Toggle	1215	691075	Washer (Starter Bracket)
361	93415	Screw (Starting Switch)	840	298561	Kit-Panel (Generator Panel)	1216	691105	Nut (Starter Bracket)
493	221933	Bracket-Mounting	945	211785	Bracket-Starter Motor	1217	690282	Washer (Starting Switch)
574	295158	Ammeter (Stewart Warner Number 357-W)	1054	280275	Tie-Cable	1225	691029	Nut (Starting Switch)
575	692303	Switch-Starting	1142	690303	Screw (Starter Motor Bracket)			
578A	298582	Wire Assembly	1142A	691614	Screw (Starter Motor Bracket) (1 3/4" Long)			
636	696198	Nut (Starting Switch) (Terminal)	1150	691058	Screw (Adjusting Strap)			
641	691075	Washer (Starting Switch) (Terminal)	1151	690282	Washer (Adjusting Strap)			
			1152	691105	Nut (Adjusting Strap)			

Panel Kit, Gages, Wires


REF NO	PART NO	QTY	DESCRIPTION
1142A	691614		SCREW -(Starter Motor Bracket) (1 3/4)
1142A	691614		SCREW -(Starter Motor Bracket) (1 3/4)
1142A	691614		SCREW -(Starter Motor Bracket) (1 3/4)
1142A	691614		SCREW -(Starter Motor Bracket) (1 3/4)
1142A	691614		SCREW -(Starter Motor Bracket) (1 3/4)
1150	691058		SCREW -(Adjusting Strap)
1150	691058		SCREW -(Adjusting Strap)
1150	691058		SCREW -(Adjusting Strap)
1150	691058		SCREW -(Adjusting Strap)
1150	691058		SCREW -(Adjusting Strap)
1151	690282		WASHER -(Adjusting Strap)
1151	690282		WASHER -(Adjusting Strap)
1151	690282		WASHER -(Adjusting Strap)
1151	690282		WASHER -(Adjusting Strap)
1151	690282		WASHER -(Adjusting Strap)
1152	691105		LOCKNUT -(Adjusting Strap)
1152	691105		LOCKNUT -(Adjusting Strap)
1152	691105		LOCKNUT -(Adjusting Strap)
1152	691105		LOCKNUT -(Adjusting Strap)
1152	691105		LOCKNUT -(Adjusting Strap)
1215	691075		WASHER -(Starter Bracket)
1215	691075		WASHER -(Starter Bracket)
1215	691075		WASHER -(Starter Bracket)
1215	691075		WASHER -(Starter Bracket)
1215	691075		WASHER -(Starter Bracket)
1216	691105		LOCKNUT -(Starter Bracket)
1216	691105		LOCKNUT -(Starter Bracket)
1216	691105		LOCKNUT -(Starter Bracket)
1216	691105		LOCKNUT -(Starter Bracket)
1216	691105		LOCKNUT -(Starter Bracket)

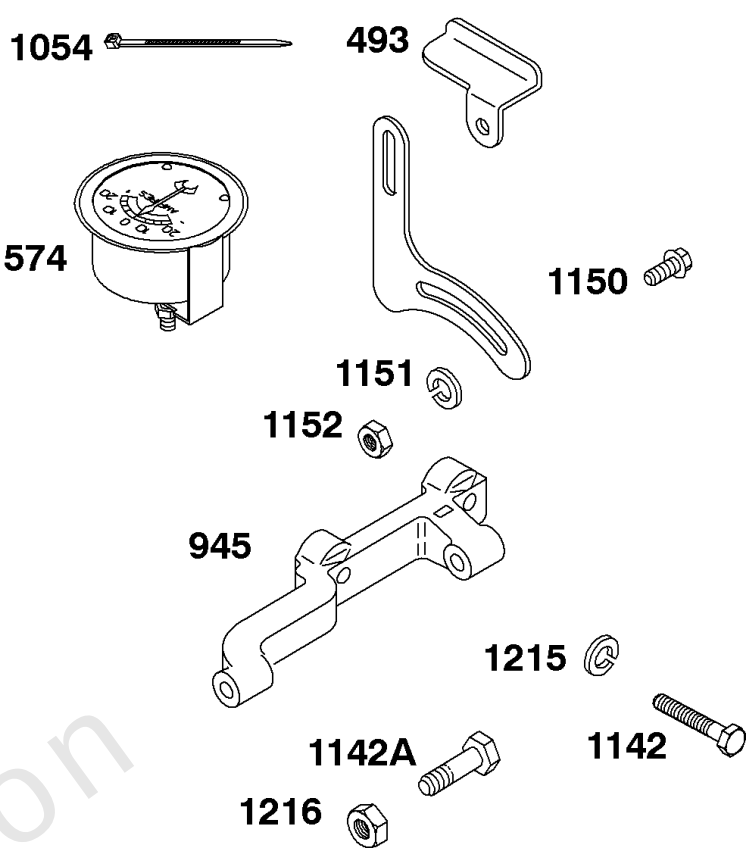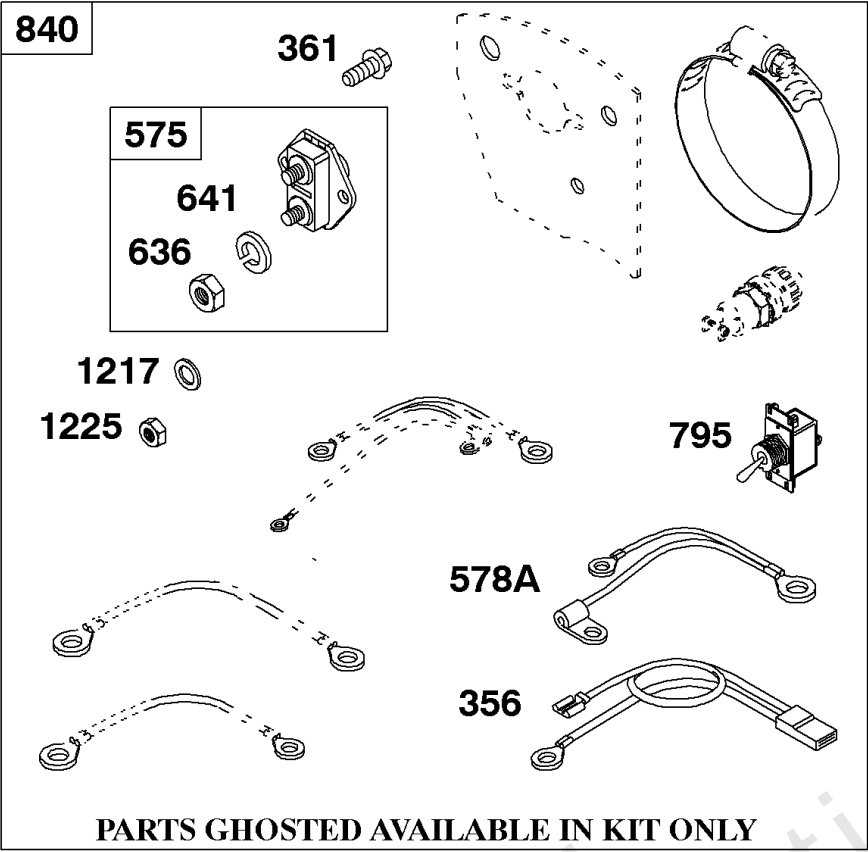  

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
356	398808	Wire-Stop	795	298590	Switch-Toggle	1215	691075	Washer (Starter Bracket)
361	93415	Screw (Starting Switch)	840	298561	Kit-Panel (Generator Panel)	1216	691105	Nut (Starter Bracket)
493	221933	Bracket-Mounting	945	211785	Bracket-Starter Motor	1217	690282	Washer (Starting Switch)
574	295158	Ammeter (Stewart Warner Number 357-W)	1054	280275	Tie-Cable	1225	691029	Nut (Starting Switch)
575	692303	Switch-Starting	1142	690303	Screw (Starter Motor Bracket)			
578A	298582	Wire Assembly	1142A	691614	Screw (Starter Motor Bracket) (1 3/4" Long)			
636	696198	Nut (Starting Switch) (Terminal)	1150	691058	Screw (Adjusting Strap)			
641	691075	Washer (Starting Switch) (Terminal)	1151	690282	Washer (Adjusting Strap)			
			1152	691105	Nut (Adjusting Strap)			

Panel Kit, Gages, Wires


REF NO	PART NO	QTY	DESCRIPTION
1217	690282		WASHER -(Starting Switch)
1217	690282		WASHER -(Starting Switch)
1217	690282		WASHER -(Starting Switch)
1217	690282		WASHER -(Starting Switch)
1217	690282		WASHER -(Starting Switch)
1225	691029		NUT -(Starting Switch)
1225	691029		NUT -(Starting Switch)
1225	691029		NUT -(Starting Switch)
1225	691029		NUT -(Starting Switch)
1225	691029		NUT -(Starting Switch)

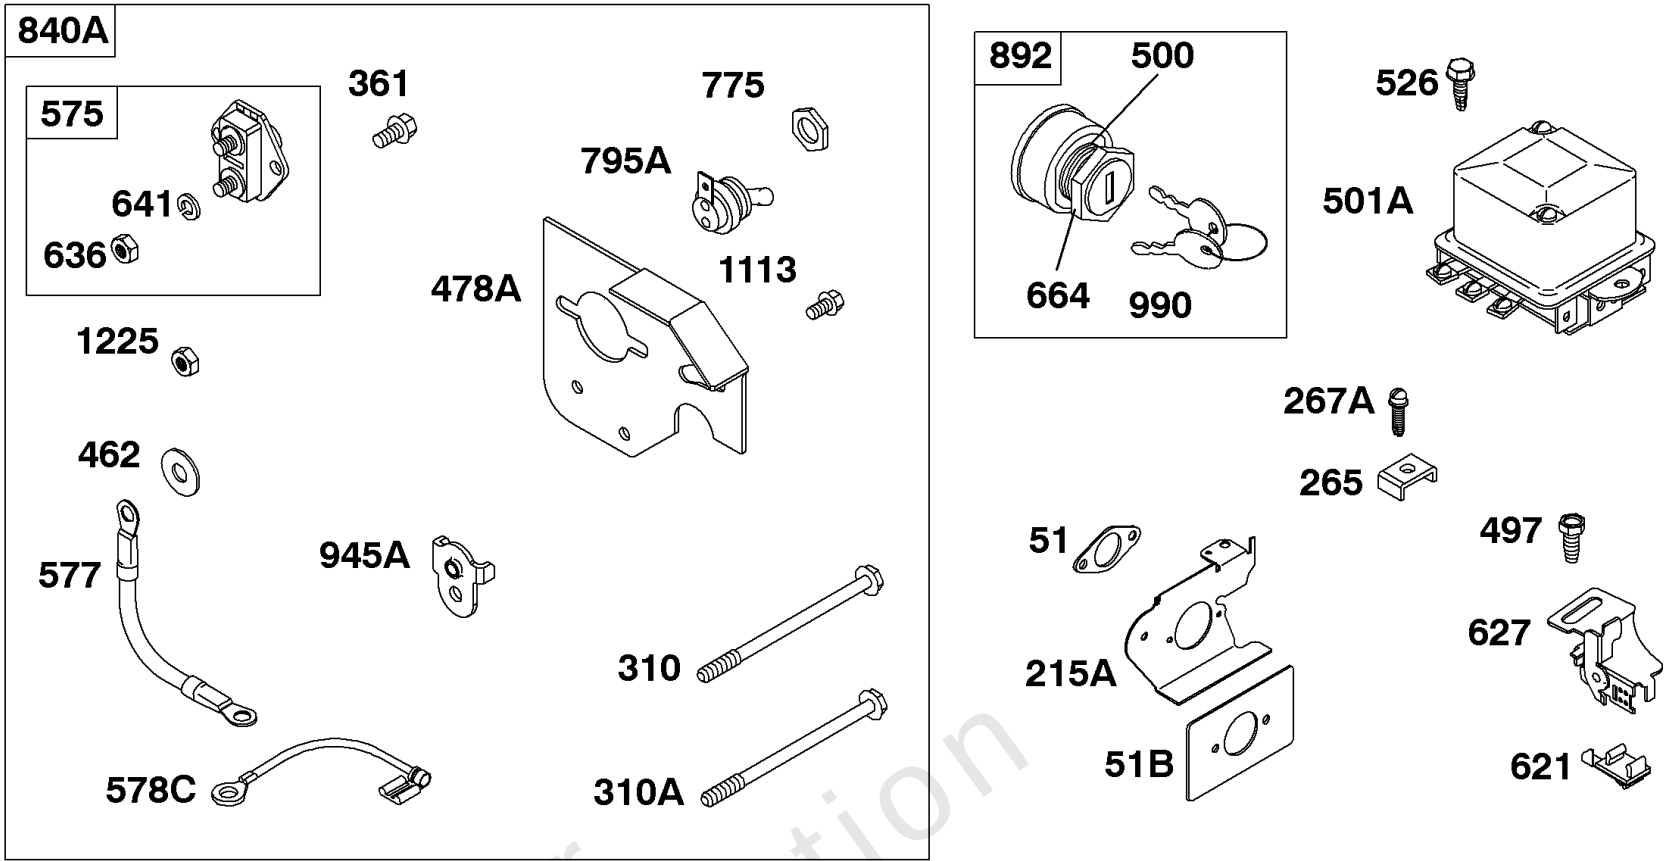 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51	27381	Gasket-Intake	500	691086	Washer (Key Switch)	775	690315	Nut (Toggle Switch)
51B	692917	Gasket-Intake	501A	295924	Regulator (Flat Mount) (Delco Remy No. 1118988) Used on Type No(s). 0199.	795A	496590	Switch-Toggle
215A	291871	Guide-Air				840A	395408	Kit-Panel (Toggle Switch) ----- Note ----- 395409 Kit-Panel (Key Switch)
265	692179	Clamp-Casing	526	690297	Screw (Regulator)	892	392833	Switch-Key
267A	93107	Screw (Casing Clamp) ----- Note ----- 691044 Screw (Casing Clamp) Used on Type No(s). 0644, 0672.	575	692303	Switch-Starting	945A	692132	Bracket-Starter Motor
310	690323	Screw (Starter Motor) (4" Long)	577	690630	Cable-Starter	990	691959	Key Set
310A	692329	Screw (Starter Motor) (5" Long)	578C	690647	Wire Assembly	1113	691681	Screw (Panel)
361	93415	Screw (Starting Switch)	621	297472S	Switch-Stop	1225	691029	Nut (Starting Switch)
462	690282	Washer (Starter Cable)	627	392884	Bracket-Stopswitch			
478A	395410	Panel	636	696198	Nut (Starting Switch) (Terminal)			
497	692198	Screw (Stopswitch Bracket)	641	691075	Washer (Starting Switch)			
			664	691087	Nut (Key Switch)			

Panel Kit, Regulator, Key Switch


REF NO	PART NO	QTY	DESCRIPTION
51	27381S		GASKET, Intake
51	27381S		GASKET, Intake
51	27381S		GASKET, Intake
51	27381S		GASKET, Intake
51	27381S		GASKET, Intake
51B	692917		GASKET, Intake
51B	692917		GASKET, Intake
51B	692917		GASKET, Intake
51B	692917		GASKET, Intake
51B	692917		GASKET, Intake
215A	291871		GUIDE, Air
215A	291871		GUIDE, Air
215A	291871		GUIDE, Air
215A	291871		GUIDE, Air
215A	291871		GUIDE, Air
265	692179		CLAMP-CASING
265	692179		CLAMP-CASING
265	692179		CLAMP-CASING
265	692179		CLAMP-CASING
265	692179		CLAMP-CASING
267A	93107		SCREW -(Casing Clamp)
267A	93107		SCREW -(Casing Clamp)
267A	93107		SCREW -(Casing Clamp)
267A	93107		SCREW -(Casing Clamp)
267A	93107		SCREW -(Casing Clamp)
310	690323		SCREW -(Starter Motor)
310	690323		SCREW -(Starter Motor)
310	690323		SCREW -(Starter Motor)
310	690323		SCREW -(Starter Motor)
310	690323		SCREW -(Starter Motor)
310A	692329		BOLT -(Starter Motor) (5) (4 1/2 And 4 3/8 Housing)
310A	692329		BOLT -(Starter Motor) (5) (4 1/2 And 4 3/8 Housing)
310A	692329		BOLT -(Starter Motor) (5) (4 1/2 And 4 3/8 Housing)
310A	692329		BOLT -(Starter Motor) (5) (4 1/2 And 4 3/8 Housing)
310A	692329		BOLT -(Starter Motor) (5) (4 1/2 And 4 3/8 Housing)
361	691681		SCREW -(Starting Switch)
361	691681		SCREW -(Starting Switch)
361	691681		SCREW -(Starting Switch)

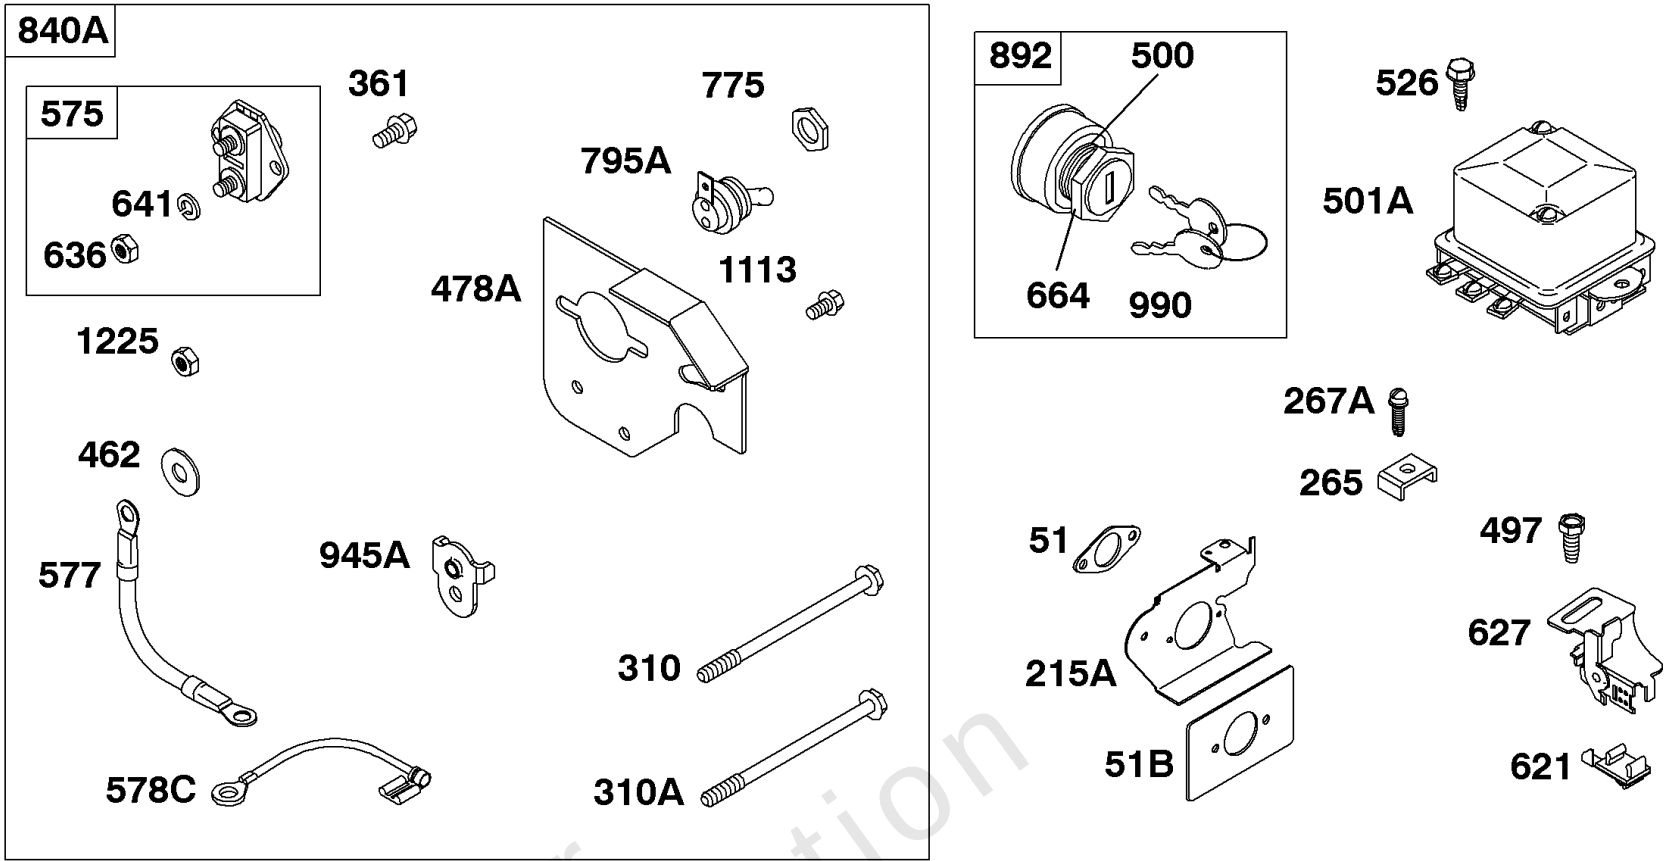 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51	27381	Gasket-Intake	500	691086	Washer (Key Switch)	775	690315	Nut (Toggle Switch)
51B	692917	Gasket-Intake	501A	295924	Regulator (Flat Mount) (Delco Remy No. 1118988)	795A	496590	Switch-Toggle
215A	291871	Guide-Air			Used on Type No(s). 0199.	840A	395408	Kit-Panel (Toggle Switch)
265	692179	Clamp-Casing						----- Note -----
267A	93107	Screw (Casing Clamp)	526	690297	Screw (Regulator)	892	392833	Switch-Key
		----- Note -----	575	692303	Switch-Starting	945A	692132	Bracket-Starter Motor
		691044 Screw (Casing Clamp) Used on Type No(s). 0644, 0672.	577	690630	Cable-Starter	990	691959	Key Set
310	690323	Screw (Starter Motor) (4" Long)	578C	690647	Wire Assembly	1113	691681	Screw (Panel)
310A	692329	Screw (Starter Motor) (5" Long)	621	297472S	Switch-Stop	1225	691029	Nut (Starting Switch)
361	93415	Screw (Starting Switch)	627	392884	Bracket-Stopswitch			
462	690282	Washer (Starter Cable)	636	696198	Nut (Starting Switch) (Terminal)			
478A	395410	Panel	641	691075	Washer (Starting Switch)			
497	692198	Screw (Stopswitch Bracket)	664	691087	Nut (Key Switch)			

Panel Kit, Regulator, Key Switch


REF NO	PART NO	QTY	DESCRIPTION
361	691681		SCREW -(Starting Switch)
361	691681		SCREW -(Starting Switch)
462	690282		WASHER -(Starter Cable)
462	690282		WASHER -(Starter Cable)
462	690282		WASHER -(Starter Cable)
462	690282		WASHER -(Starter Cable)
462	690282		WASHER -(Starter Cable)
478A	395410		KIT, Panel
478A	395410		KIT, Panel
478A	395410		KIT, Panel
478A	395410		KIT, Panel
478A	395410		KIT, Panel
497	692198		SCREW -(Stopswitch Bracket)
497	692198		SCREW -(Stopswitch Bracket)
497	692198		SCREW -(Stopswitch Bracket)
497	692198		SCREW -(Stopswitch Bracket)
497	692198		SCREW -(Stopswitch Bracket)
500	691086		WASHER -(Key Switch)
500	691086		WASHER -(Key Switch)
500	691086		WASHER -(Key Switch)
500	691086		WASHER -(Key Switch)
500	691086		WASHER -(Key Switch)
526	690297		SCREW -(Regulator)
526	690297		SCREW -(Regulator)
526	690297		SCREW -(Regulator)
526	690297		SCREW -(Regulator)
526	690297		SCREW -(Regulator)
575	692303		SWITCH-STARTING
575	692303		SWITCH-STARTING
575	692303		SWITCH-STARTING
575	692303		SWITCH-STARTING
575	692303		SWITCH-STARTING
577	690630		CABLE, Starter
577	690630		CABLE, Starter
577	690630		CABLE, Starter
577	690630		CABLE, Starter

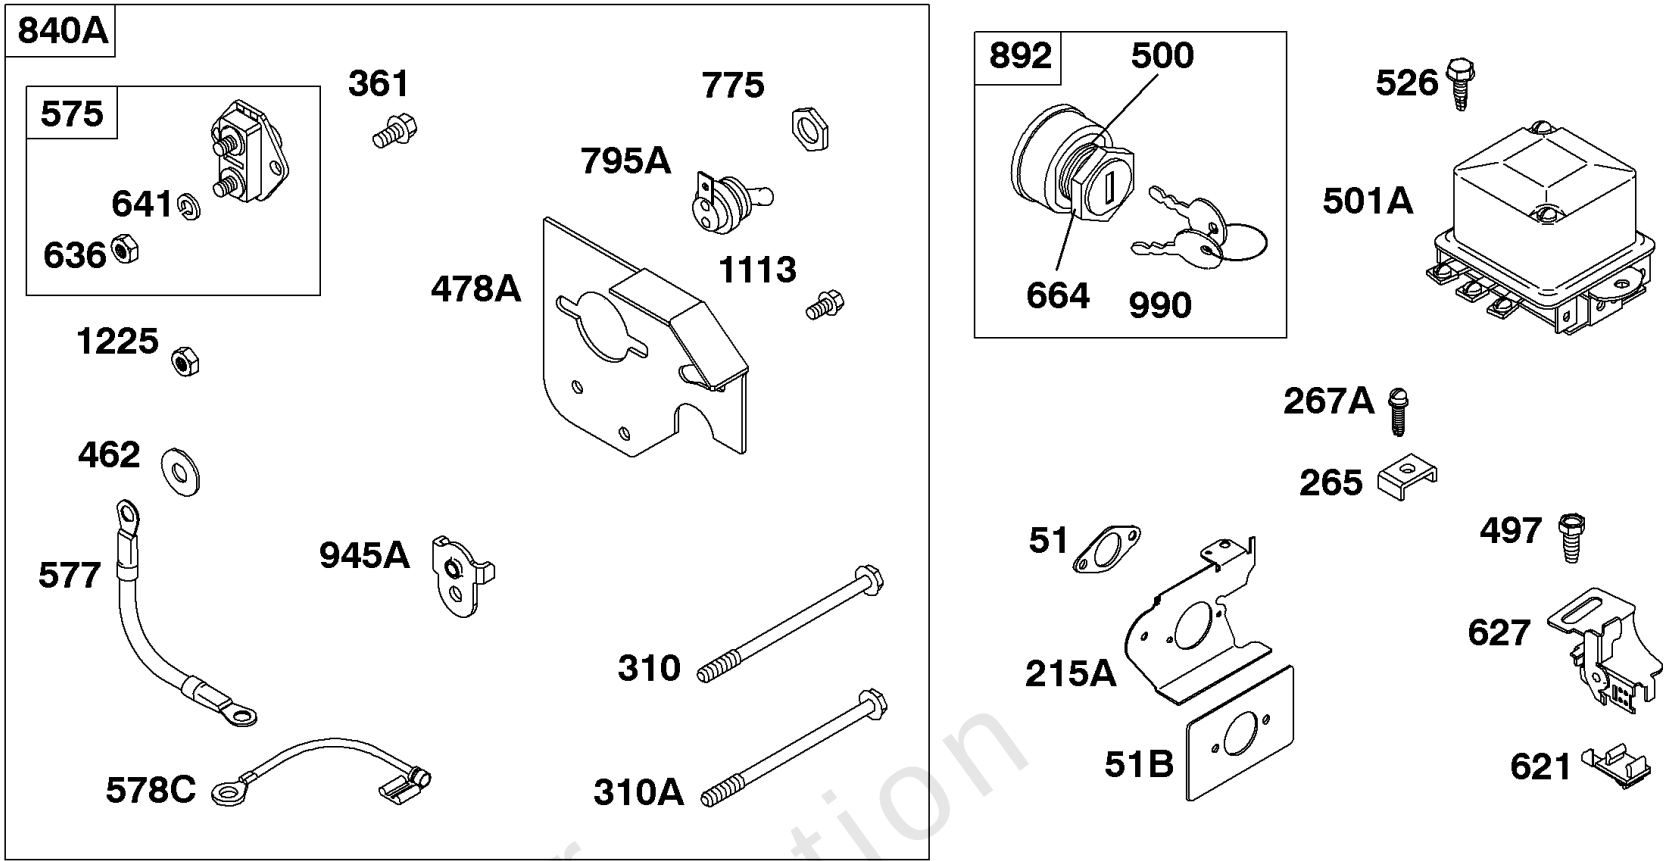 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51	27381	Gasket-Intake	500	691086	Washer (Key Switch)	775	690315	Nut (Toggle Switch)
51B	692917	Gasket-Intake	501A	295924	Regulator (Flat Mount) (Delco Remy No. 1118988)	795A	496590	Switch-Toggle
215A	291871	Guide-Air			Used on Type No(s). 0199.	840A	395408	Kit-Panel (Toggle Switch)
265	692179	Clamp-Casing	526	690297	Screw (Regulator)	----- Note -----		
267A	93107	Screw (Casing Clamp)	575	692303	Switch-Starting	892	392833	Switch-Key
		----- Note -----	577	690630	Cable-Starter	945A	692132	Bracket-Starter Motor
		691044 Screw (Casing Clamp) Used on Type No(s). 0644, 0672.	578C	690647	Wire Assembly	990	691959	Key Set
310	690323	Screw (Starter Motor) (4" Long)	621	297472S	Switch-Stop	1113	691681	Screw (Panel)
310A	692329	Screw (Starter Motor) (5" Long)	627	392884	Bracket-Stopswitch	1225	691029	Nut (Starting Switch)
361	93415	Screw (Starting Switch)	636	696198	Nut (Starting Switch) (Terminal)			
462	690282	Washer (Starter Cable)	641	691075	Washer (Starting Switch)			
478A	395410	Panel	664	691087	Nut (Key Switch)			
497	692198	Screw (Stopswitch Bracket)						

Panel Kit, Regulator, Key Switch


REF NO	PART NO	QTY	DESCRIPTION
577	690630		CABLE, Starter
578C	690647		WIRE ASSEMBLY -(1 Wire, 23)(Insulated-Support Ring Terminal, And Push-OnInsulated-Support Female Blade Terminal)
578C	690647		WIRE ASSEMBLY -(1 Wire, 23)(Insulated-Support Ring Terminal, And Push-OnInsulated-Support Female Blade Terminal)
578C	690647		WIRE ASSEMBLY -(1 Wire, 23)(Insulated-Support Ring Terminal, And Push-OnInsulated-Support Female Blade Terminal)
578C	690647		WIRE ASSEMBLY -(1 Wire, 23)(Insulated-Support Ring Terminal, And Push-OnInsulated-Support Female Blade Terminal)
578C	690647		WIRE ASSEMBLY -(1 Wire, 23)(Insulated-Support Ring Terminal, And Push-OnInsulated-Support Female Blade Terminal)
621	297472S		SWITCH, Stop
621	297472S		SWITCH, Stop
621	297472S		SWITCH, Stop
621	297472S		SWITCH, Stop
621	297472S		SWITCH, Stop
627	392884		BRACKET, Stopswitch
627	392884		BRACKET, Stopswitch
627	392884		BRACKET, Stopswitch
627	392884		BRACKET, Stopswitch
627	392884		BRACKET, Stopswitch
636	696198		NUT -(Starting Switch) (Terminal)
636	696198		NUT -(Starting Switch) (Terminal)
636	696198		NUT -(Starting Switch) (Terminal)
636	696198		NUT -(Starting Switch) (Terminal)
636	696198		NUT -(Starting Switch) (Terminal)
641	691075		WASHER -(Starting Switch) (Terminal)
641	691075		WASHER -(Starting Switch) (Terminal)
641	691075		WASHER -(Starting Switch) (Terminal)
641	691075		WASHER -(Starting Switch) (Terminal)
641	691075		WASHER -(Starting Switch) (Terminal)
664	691087		NUT -(Key Switch)
664	691087		NUT -(Key Switch)
664	691087		NUT -(Key Switch)
664	691087		NUT -(Key Switch)
664	691087		NUT -(Key Switch)
775	690315		NUT -(Toggle Switch)
775	690315		NUT -(Toggle Switch)

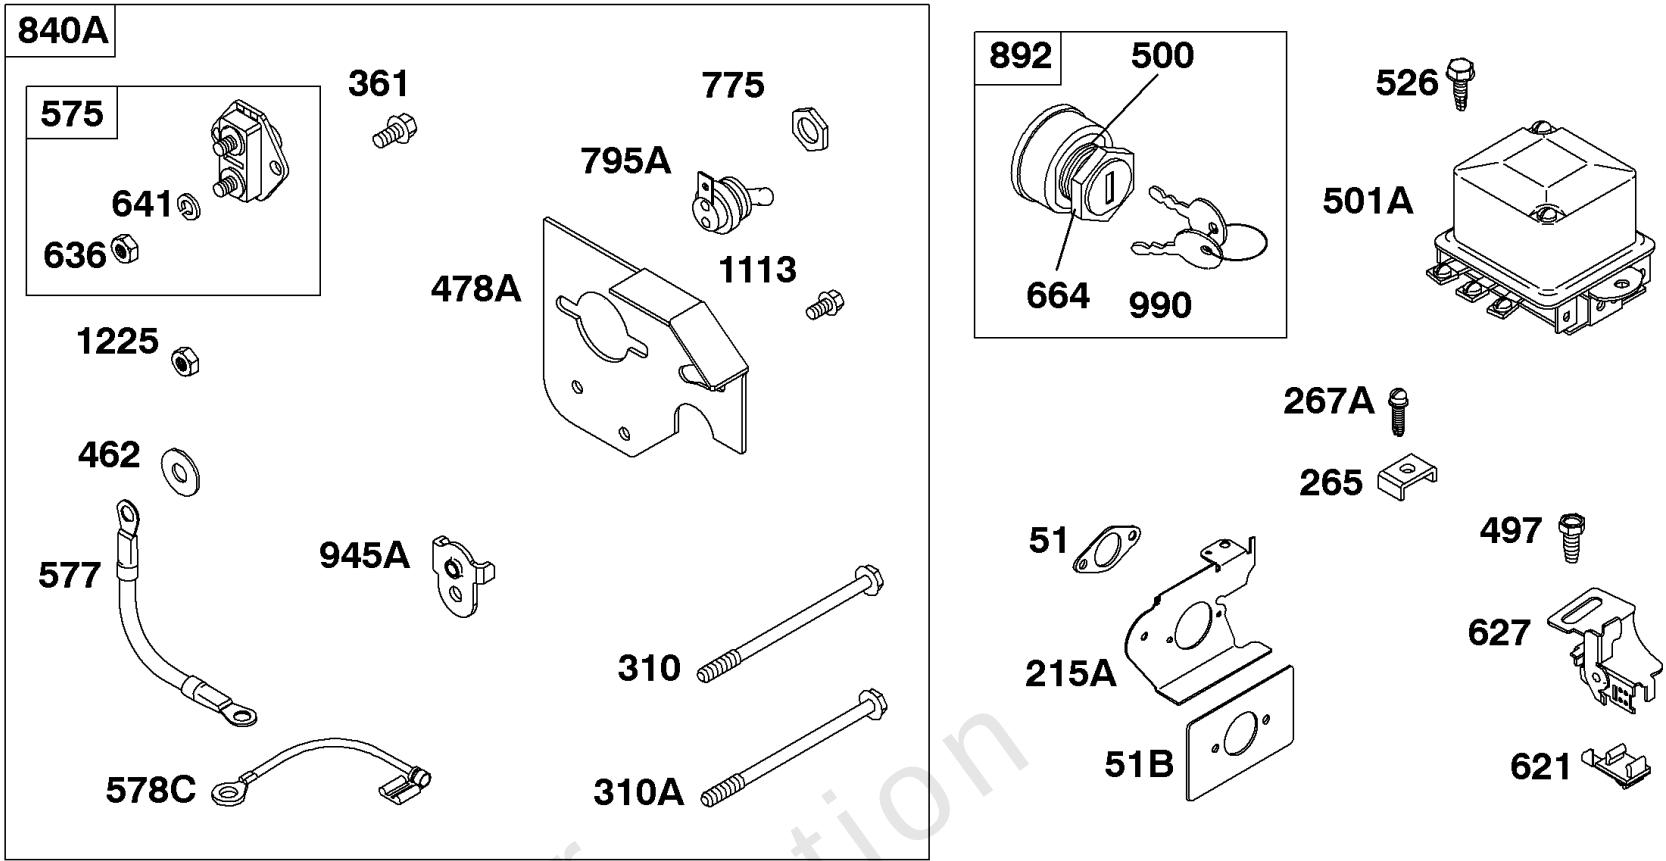 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51	27381	Gasket-Intake	500	691086	Washer (Key Switch)	775	690315	Nut (Toggle Switch)
51B	692917	Gasket-Intake	501A	295924	Regulator (Flat Mount) (Delco Remy No. 1118988)	795A	496590	Switch-Toggle
215A	291871	Guide-Air			Used on Type No(s). 0199.	840A	395408	Kit-Panel (Toggle Switch)
265	692179	Clamp-Casing						----- Note -----
267A	93107	Screw (Casing Clamp)	526	690297	Screw (Regulator)	892	392833	Switch-Key
		----- Note -----	575	692303	Switch-Starting	945A	692132	Bracket-Starter Motor
		691044 Screw (Casing Clamp) Used on Type No(s). 0644, 0672.	577	690630	Cable-Starter	990	691959	Key Set
310	690323	Screw (Starter Motor) (4" Long)	578C	690647	Wire Assembly	1113	691681	Screw (Panel)
310A	692329	Screw (Starter Motor) (5" Long)	621	297472S	Switch-Stop	1225	691029	Nut (Starting Switch)
361	93415	Screw (Starting Switch)	627	392884	Bracket-Stopswitch			
462	690282	Washer (Starter Cable)	636	696198	Nut (Starting Switch) (Terminal)			
478A	395410	Panel	641	691075	Washer (Starting Switch)			
497	692198	Screw (Stopswitch Bracket)	664	691087	Nut (Key Switch)			

Panel Kit, Regulator, Key Switch


REF NO	PART NO	QTY	DESCRIPTION
775	690315		NUT -(Toggle Switch)
775	690315		NUT -(Toggle Switch)
775	690315		NUT -(Toggle Switch)
795A	496590		SWITCH, Toggle
795A	496590		SWITCH, Toggle
795A	496590		SWITCH, Toggle
795A	496590		SWITCH, Toggle
795A	496590		SWITCH, Toggle
840A	395409		KIT, Panel -(Key Switch)
840A	395409		KIT, Panel -(Key Switch)
840A	395408		KIT, Panel -(Toggle Switch)
840A	395408		KIT, Panel -(Toggle Switch)
840A	395409		KIT, Panel -(Key Switch)
840A	395408		KIT, Panel -(Toggle Switch)
840A	395409		KIT, Panel -(Key Switch)
840A	395408		KIT, Panel -(Toggle Switch)
840A	395409		KIT, Panel -(Key Switch)
840A	395408		KIT, Panel -(Toggle Switch)
892	392833		SWITCH, Key
892	392833		SWITCH, Key
892	392833		SWITCH, Key
892	392833		SWITCH, Key
892	392833		SWITCH, Key
945A	692132		BRACKET, Starter Motor
945A	692132		BRACKET, Starter Motor
945A	692132		BRACKET, Starter Motor
945A	692132		BRACKET, Starter Motor
945A	692132		BRACKET, Starter Motor
990	691959		SET, Key
990	691959		SET, Key
990	691959		SET, Key
990	691959		SET, Key
990	691959		SET, Key
1113	691681		SCREW -(Panel)
1113	691681		SCREW -(Panel)
1113	691681		SCREW -(Panel)
1113	691681		SCREW -(Panel)
1113	691681		SCREW -(Panel)

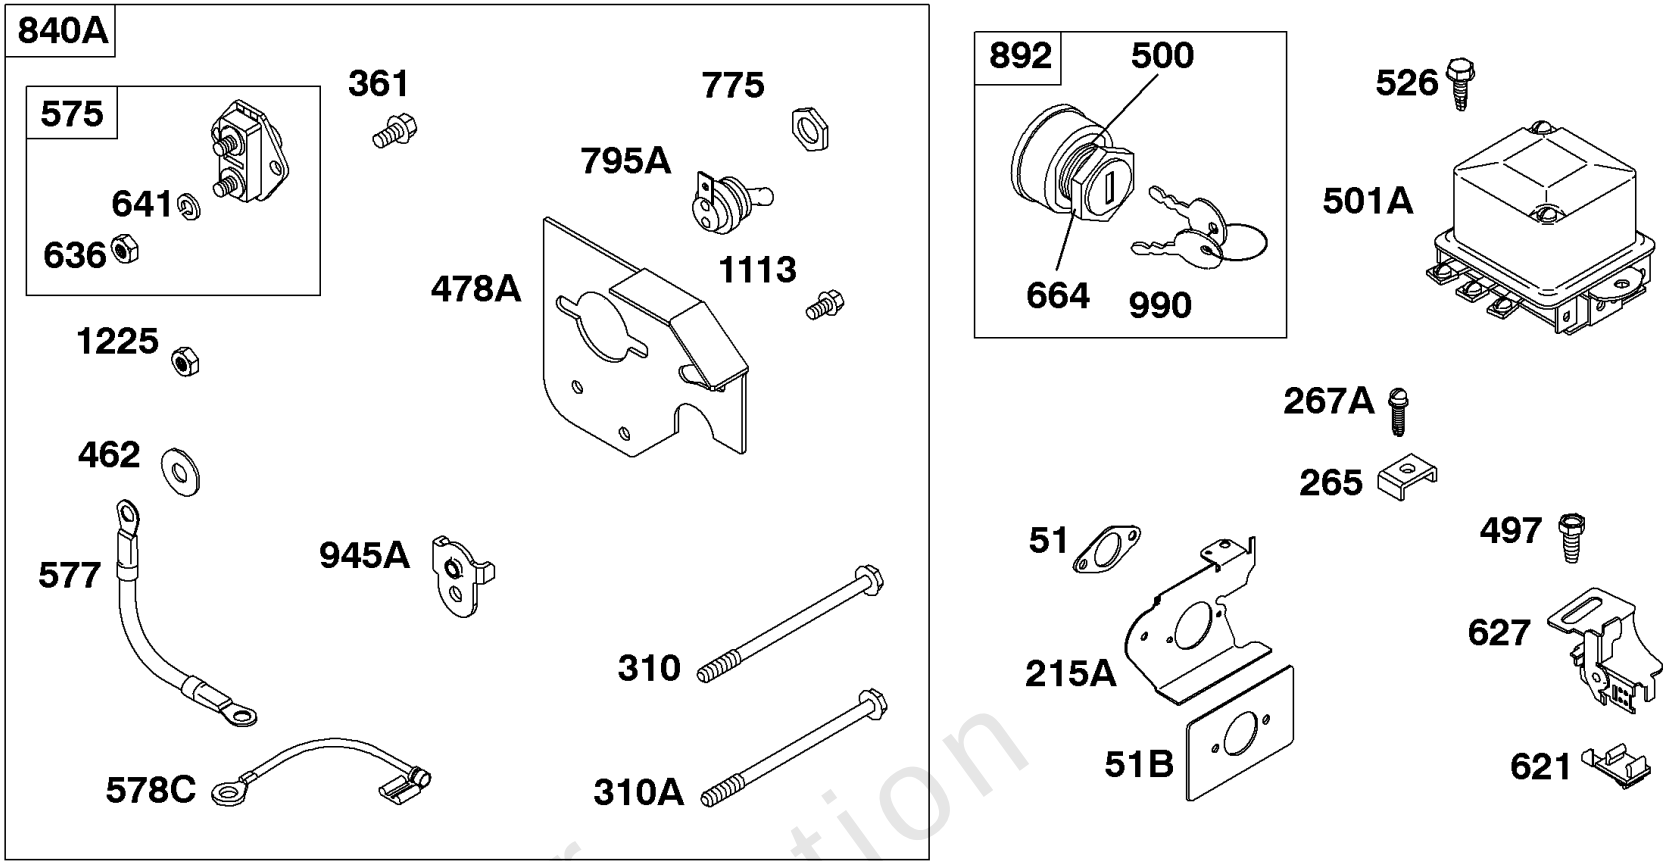 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
51	27381	Gasket-Intake	500	691086	Washer (Key Switch)	775	690315	Nut (Toggle Switch)
51B	692917	Gasket-Intake	501A	295924	Regulator (Flat Mount) (Delco Remy No. 1118988)	795A	496590	Switch-Toggle
215A	291871	Guide-Air				840A	395408	Kit-Panel (Toggle Switch)
265	692179	Clamp-Casing						----- Note -----
267A	93107	Screw (Casing Clamp)						395409 Kit-Panel (Key Switch)
		----- Note -----	526	690297	Screw (Regulator)	892	392833	Switch-Key
		691044 Screw (Casing Clamp) Used on Type No(s). 0644, 0672.	575	692303	Switch-Starting	945A	692132	Bracket-Starter Motor
310	690323	Screw (Starter Motor) (4" Long)	577	690630	Cable-Starter	990	691959	Key Set
310A	692329	Screw (Starter Motor) (5" Long)	578C	690647	Wire Assembly	1113	691681	Screw (Panel)
361	93415	Screw (Starting Switch)	621	297472S	Switch-Stop	1225	691029	Nut (Starting Switch)
462	690282	Washer (Starter Cable)	627	392884	Bracket-Stopswitch			
478A	395410	Panel	636	696198	Nut (Starting Switch) (Terminal)			
497	692198	Screw (Stopswitch Bracket)	641	691075	Washer (Starting Switch)			
			664	691087	Nut (Key Switch)			

Panel Kit, Regulator, Key Switch

REF NO	PART NO	QTY	DESCRIPTION
1225	691029		NUT -(Starting Switch)
1225	691029		NUT -(Starting Switch)
1225	691029		NUT -(Starting Switch)
1225	691029		NUT -(Starting Switch)
1225	691029		NUT -(Starting Switch)

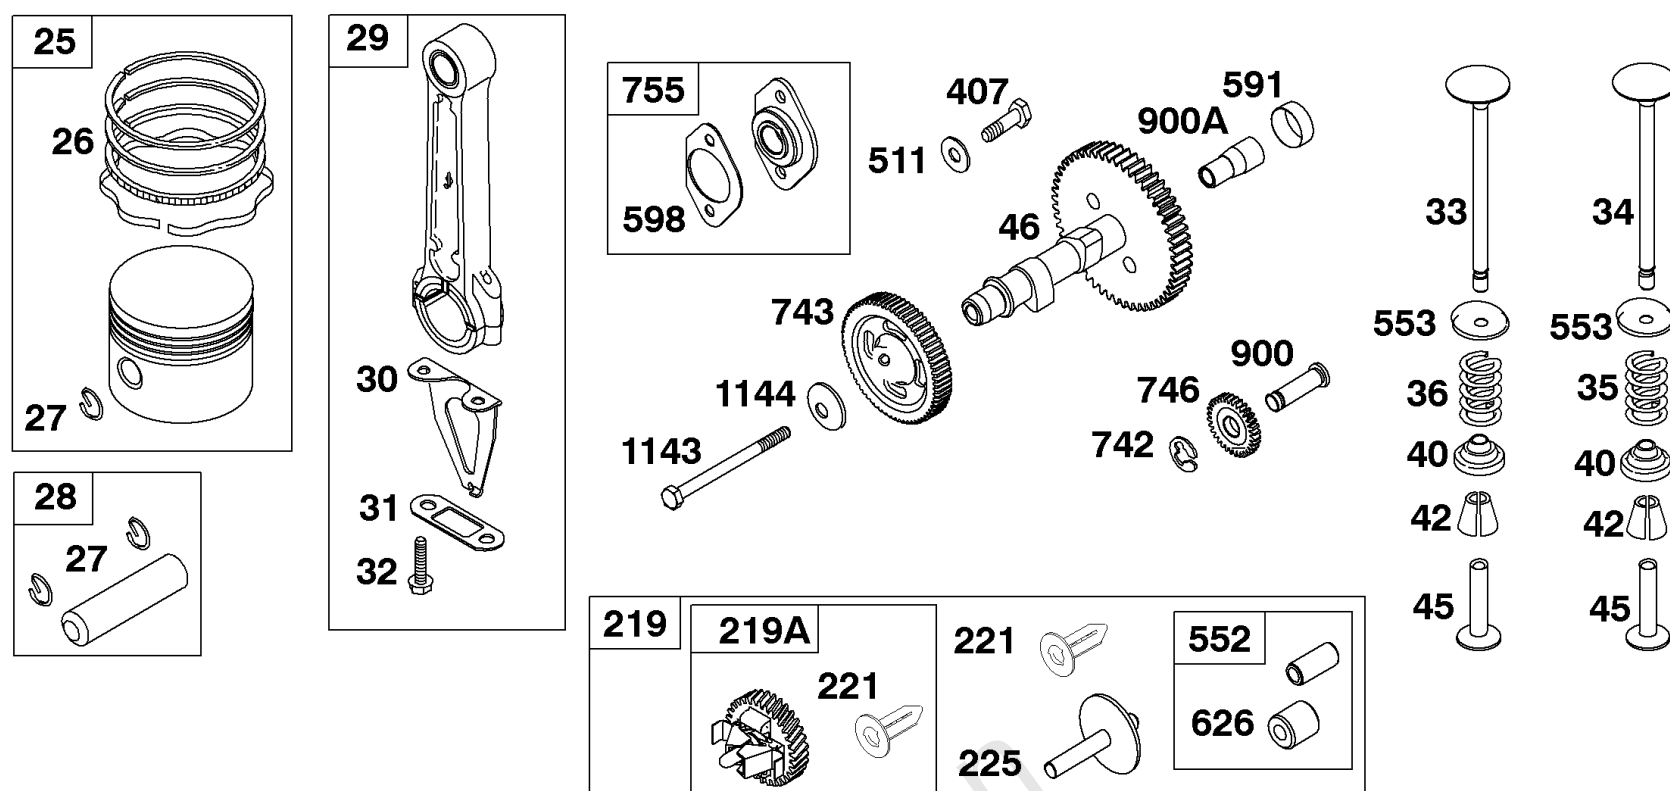 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
25	792365	Piston Assembly (Standard) ----- Note ----- 792367 Piston Assembly (.020" Oversize)	32	692345	Screw (Connecting Rod)	511	690402	Washer (Camshaft Bearing)
26	792366	Ring Set (Standard) ----- Note ----- 792368 Ring Set (.020" Oversize)	33	394436	Valve-Exhaust	552	393666	Bushing-Governor Crank
27	691792	Lock-Piston Pin	34	394435	Valve-Intake	553	690269	Retainer-Valve Spring
28	299691	Pin-Piston (Standard) ----- Note ----- 391286 Pin-Piston (.005" Oversize)	35	691597	Spring-Valve (Intake)	591	691746	Plug-Camshaft
29	299632	Rod-Connecting (Standard) ----- Note ----- 390306 Rod-Connecting (.020" Undersize)	36	691597	Spring-Valve (Exhaust)	598	270516	Shim-End Play (Camshaft Bearing) (.009" Thick) ----- Note ----- 270517 Shim-End Play (Camshaft Bearing) (.007" Thick) 270518 Shim-End Play (Camshaft Bearing) (.005" Thick)
30	691726	Dipper-Connecting Rod	40	691939	Retainer-Valve ----- Note ----- 690274 Retainer-Valve Used on Type No(s). 0722.	626	690512	Spacer-Governor Crank
31	690396	Lock-Rod Screw	42	494553	Keeper-Valve (Used After Code Date 80111200). ----- Note ----- 68283 Keeper-Valve (Used Before Code Date 80111300).	742	691080	Retainer-E Ring
			45	691594	Tappet-Valve	743	691153	Gear-Drive
			46	692855	Camshaft	746	691803	Gear-Idler
			219	291192	Gear-Governor (Used Before Code Date 78062000).	755	299706	Bearing-Camshaft
			219A	393720	Gear-Governor	900	691767	Shaft-Gear
			221	841026	Cup-Governor	900A	691768	Shaft-Gear
			225	691357	Shaft-Governor Gear	1143	691081	Screw (Drive Gear Cover)
			407	690810	Screw (Camshaft Bearing)	1144	690301	Washer (Drive Gear Cover)

Piston, Rings, Connecting Rod, Camshaft, Valves


REF NO	PART NO	QTY	DESCRIPTION
1	395663		CYLINDER ASSEMBLY
1	395663		CYLINDER ASSEMBLY
1	395663		CYLINDER ASSEMBLY
1	395663		CYLINDER ASSEMBLY
1	395663		CYLINDER ASSEMBLY
25	792365		PISTON ASSEMBLY -(Standard)
25	792367		PISTON ASSEMBLY -(.020 Oversize)
25	792367		PISTON ASSEMBLY -(.020 Oversize)
25	792365		PISTON ASSEMBLY -(Standard)
25	792367		PISTON ASSEMBLY -(.020 Oversize)
25	792365		PISTON ASSEMBLY -(Standard)
25	792365		PISTON ASSEMBLY -(Standard)
25	792367		PISTON ASSEMBLY -(.020 Oversize)
25	792365		PISTON ASSEMBLY -(Standard)
25	792367		PISTON ASSEMBLY -(.020 Oversize)
26	792368		SET, Ring -(.020 Oversize)
26	792368		SET, Ring -(.020 Oversize)
26	792366		SET, Ring -(Standard)(Chrome)
26	792366		SET, Ring -(Standard)(Chrome)
26	792366		SET, Ring -(Standard)(Chrome)
26	792368		SET, Ring -(.020 Oversize)
26	792368		SET, Ring -(.020 Oversize)
26	792366		SET, Ring -(Standard)(Chrome)
26	792368		SET, Ring -(.020 Oversize)
26	792366		SET, Ring -(Standard)(Chrome)
27	691792		LOCK, Piston Pin
27	691792		LOCK, Piston Pin
27	691792		LOCK, Piston Pin
27	691792		LOCK, Piston Pin
27	691792		LOCK, Piston Pin
28	299691		PIN, Piston -(Standard)
28	299691		PIN, Piston -(Standard)
28	391286		PIN, Piston -(.005 Oversize)
28	299691		PIN, Piston -(Standard)

 Mfg. No: 326431-0709-01

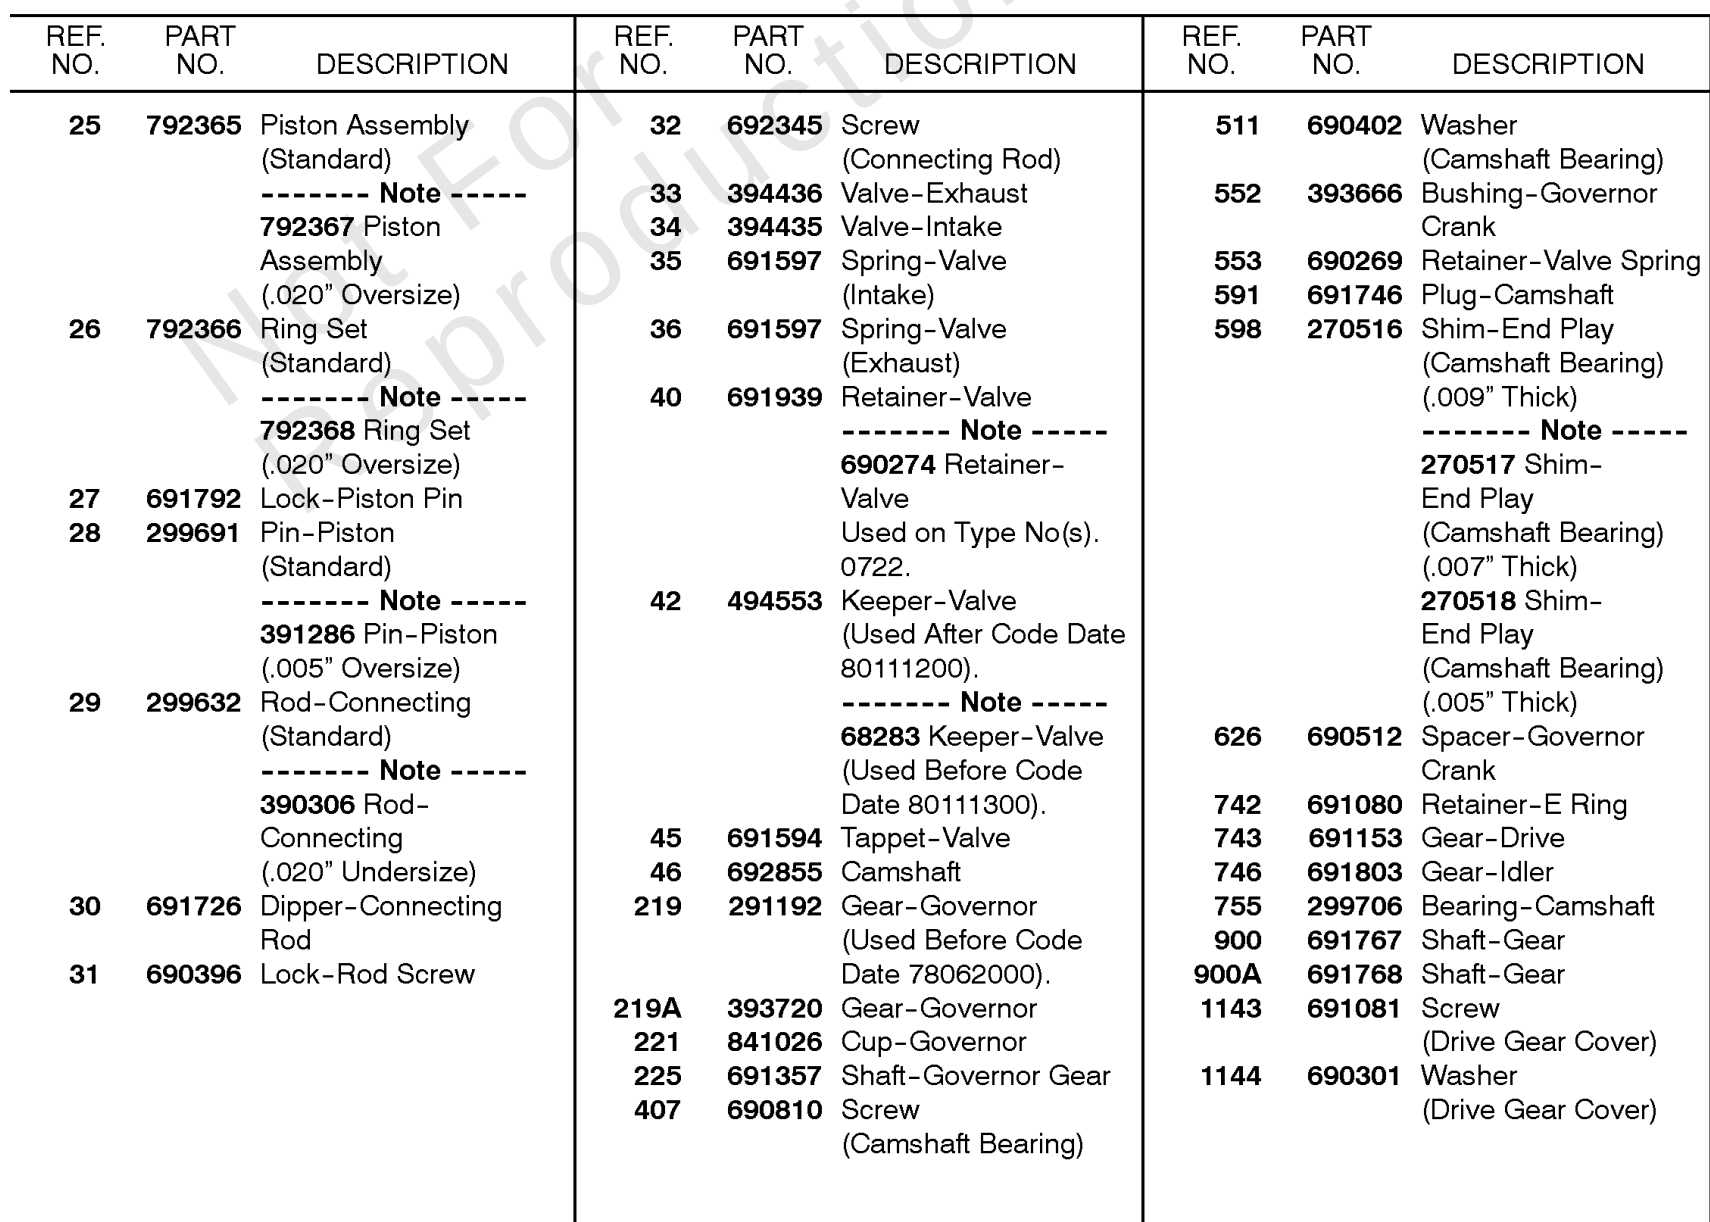

Piston, Rings, Connecting Rod, Camshaft, Valves

REF NO	PART NO	QTY	DESCRIPTION
28	299691		PIN, Piston -(Standard)
28	391286		PIN, Piston -(.005 Oversize)
28	391286		PIN, Piston -(.005 Oversize)
28	299691		PIN, Piston -(Standard)
28	391286		PIN, Piston -(.005 Oversize)
28	391286		PIN, Piston -(.005 Oversize)
29	299632		ROD, Connecting -(Standard)
29	299632		ROD, Connecting -(Standard)
29	390306		ROD, Connecting -(.020 Undersize)
29	299632		ROD, Connecting -(Standard)
29	299632		ROD, Connecting -(Standard)
29	390306		ROD, Connecting -(.020 Undersize)
29	390306		ROD, Connecting -(.020 Undersize)
29	390306		ROD, Connecting -(.020 Undersize)
29	299632		ROD, Connecting -(Standard)
29	390306		ROD, Connecting -(.020 Undersize)
30	691726		DIPPER, Connecting Rod
30	691726		DIPPER, Connecting Rod
30	691726		DIPPER, Connecting Rod
30	691726		DIPPER, Connecting Rod
30	691726		DIPPER, Connecting Rod
31	690396		LOCK, Rod Screw
31	690396		LOCK, Rod Screw
31	690396		LOCK, Rod Screw
31	690396		LOCK, Rod Screw
31	690396		LOCK, Rod Screw
32	692345		SCREW -(Connecting Rod)
32	692345		SCREW -(Connecting Rod)
32	692345		SCREW -(Connecting Rod)
32	692345		SCREW -(Connecting Rod)
32	692345		SCREW -(Connecting Rod)
33	394436		VALVE, Exhaust
33	394436		VALVE, Exhaust
33	394436		VALVE, Exhaust
33	394436		VALVE, Exhaust
33	394436		VALVE, Exhaust

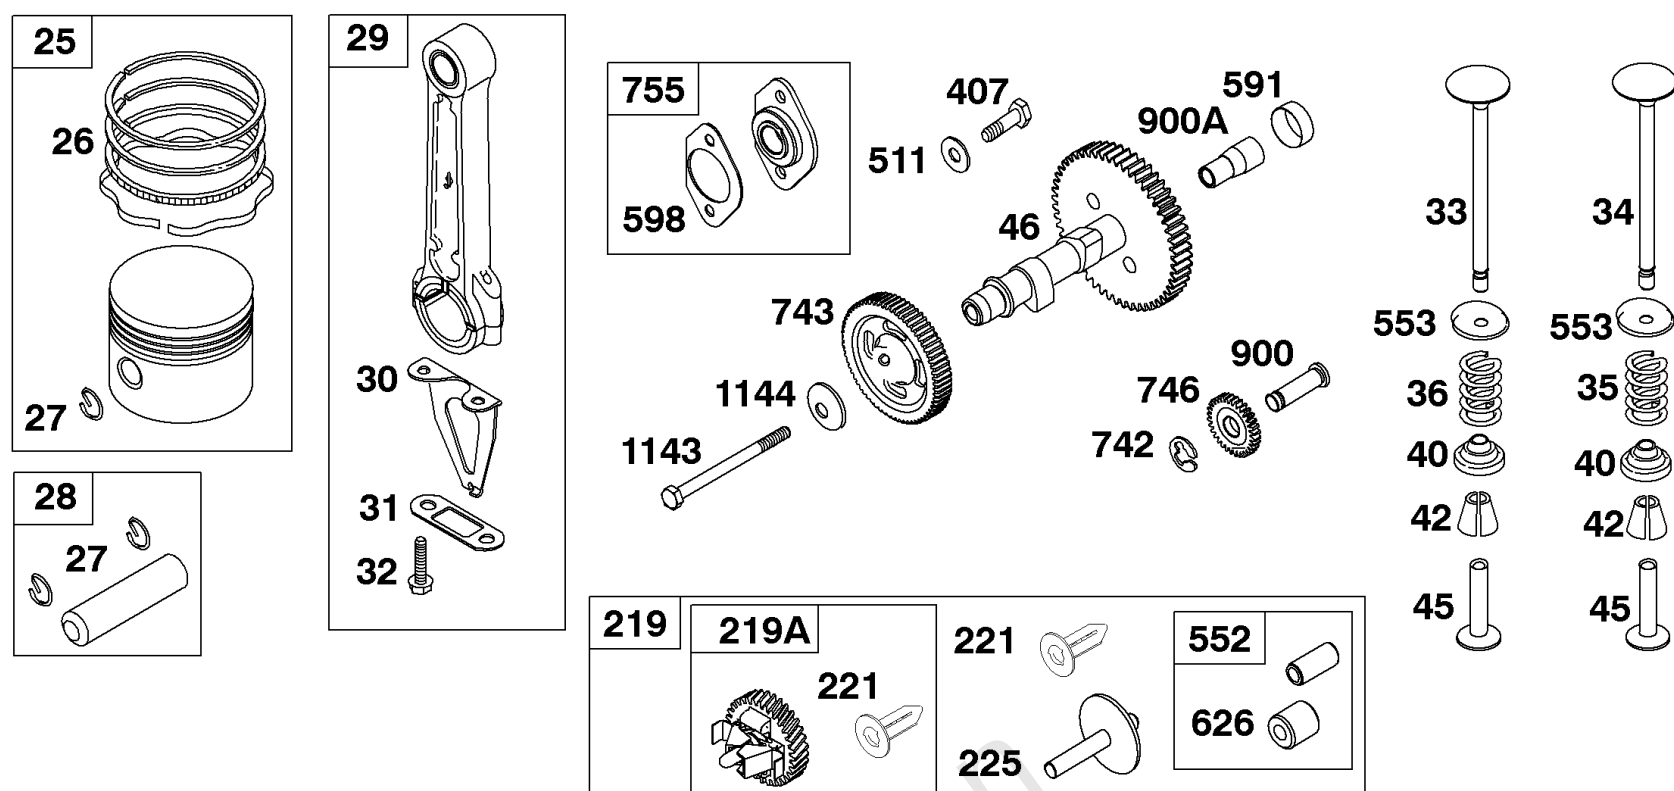 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
25	792365	Piston Assembly (Standard) ----- Note ----- 792367 Piston Assembly (.020" Oversize)	32	692345	Screw (Connecting Rod)	511	690402	Washer (Camshaft Bearing)
26	792366	Ring Set (Standard) ----- Note ----- 792368 Ring Set (.020" Oversize)	33	394436	Valve-Exhaust	552	393666	Bushing-Governor Crank
27	691792	Lock-Piston Pin	34	394435	Valve-Intake	553	690269	Retainer-Valve Spring
28	299691	Pin-Piston (Standard) ----- Note ----- 391286 Pin-Piston (.005" Oversize)	35	691597	Spring-Valve (Intake)	591	691746	Plug-Camshaft
29	299632	Rod-Connecting (Standard) ----- Note ----- 390306 Rod-Connecting (.020" Undersize)	36	691597	Spring-Valve (Exhaust)	598	270516	Shim-End Play (Camshaft Bearing) (.009" Thick) ----- Note ----- 270517 Shim-End Play (Camshaft Bearing) (.007" Thick) 270518 Shim-End Play (Camshaft Bearing) (.005" Thick)
30	691726	Dipper-Connecting Rod	40	691939	Retainer-Valve ----- Note ----- 690274 Retainer-Valve Used on Type No(s). 0722.	626	690512	Spacer-Governor Crank
31	690396	Lock-Rod Screw	42	494553	Keeper-Valve (Used After Code Date 80111200). ----- Note ----- 68283 Keeper-Valve (Used Before Code Date 80111300).	742	691080	Retainer-E Ring
			45	691594	Tappet-Valve	743	691153	Gear-Drive
			46	692855	Camshaft	746	691803	Gear-Idler
			219	291192	Gear-Governor (Used Before Code Date 78062000).	755	299706	Bearing-Camshaft
			219A	393720	Gear-Governor	900	691767	Shaft-Gear
			221	841026	Cup-Governor	900A	691768	Shaft-Gear
			225	691357	Shaft-Governor Gear	1143	691081	Screw (Drive Gear Cover)
			407	690810	Screw (Camshaft Bearing)	1144	690301	Washer (Drive Gear Cover)

Piston, Rings, Connecting Rod, Camshaft, Valves

REF NO	PART NO	QTY	DESCRIPTION
34	394435		VALVE, Intake
34	394435		VALVE, Intake
34	394435		VALVE, Intake
34	394435		VALVE, Intake
34	394435		VALVE, Intake
35	691597		SPRING, Valve -(Intake)
35	691597		SPRING, Valve -(Intake)
35	691597		SPRING, Valve -(Intake)
35	691597		SPRING, Valve -(Intake)
35	691597		SPRING, Valve -(Intake)
36	691597		SPRING, Valve -(Exhaust)
36	691597		SPRING, Valve -(Exhaust)
36	691597		SPRING, Valve -(Exhaust)
36	691597		SPRING, Valve -(Exhaust)
36	691597		SPRING, Valve -(Exhaust)
40	691939		RETAINER, Valve -(Exhaust)
40	691939		RETAINER, Valve -(Exhaust)
40	691939		RETAINER, Valve -(Exhaust)
40	691939		RETAINER, Valve -(Exhaust)
40	691939		RETAINER, Valve -(Exhaust)
42	68283		RETAINER, Valve -Used Before Code Date 80111300
42	494553		KEEPER, Valve -(Exhaust) -Used After Code Date 80111200
42	494553		KEEPER, Valve -(Exhaust) -Used After Code Date 80111200
42	68283		RETAINER, Valve -Used Before Code Date 80111300
42	68283		RETAINER, Valve -Used Before Code Date 80111300
42	494553		KEEPER, Valve -(Exhaust) -Used After Code Date 80111200
42	68283		RETAINER, Valve -Used Before Code Date 80111300
42	494553		KEEPER, Valve -(Exhaust) -Used After Code Date 80111200
42	494553		KEEPER, Valve -(Exhaust) -Used After Code Date 80111200
42	68283		RETAINER, Valve -Used Before Code Date 80111300

 
Mfg. No: 326431-0709-01

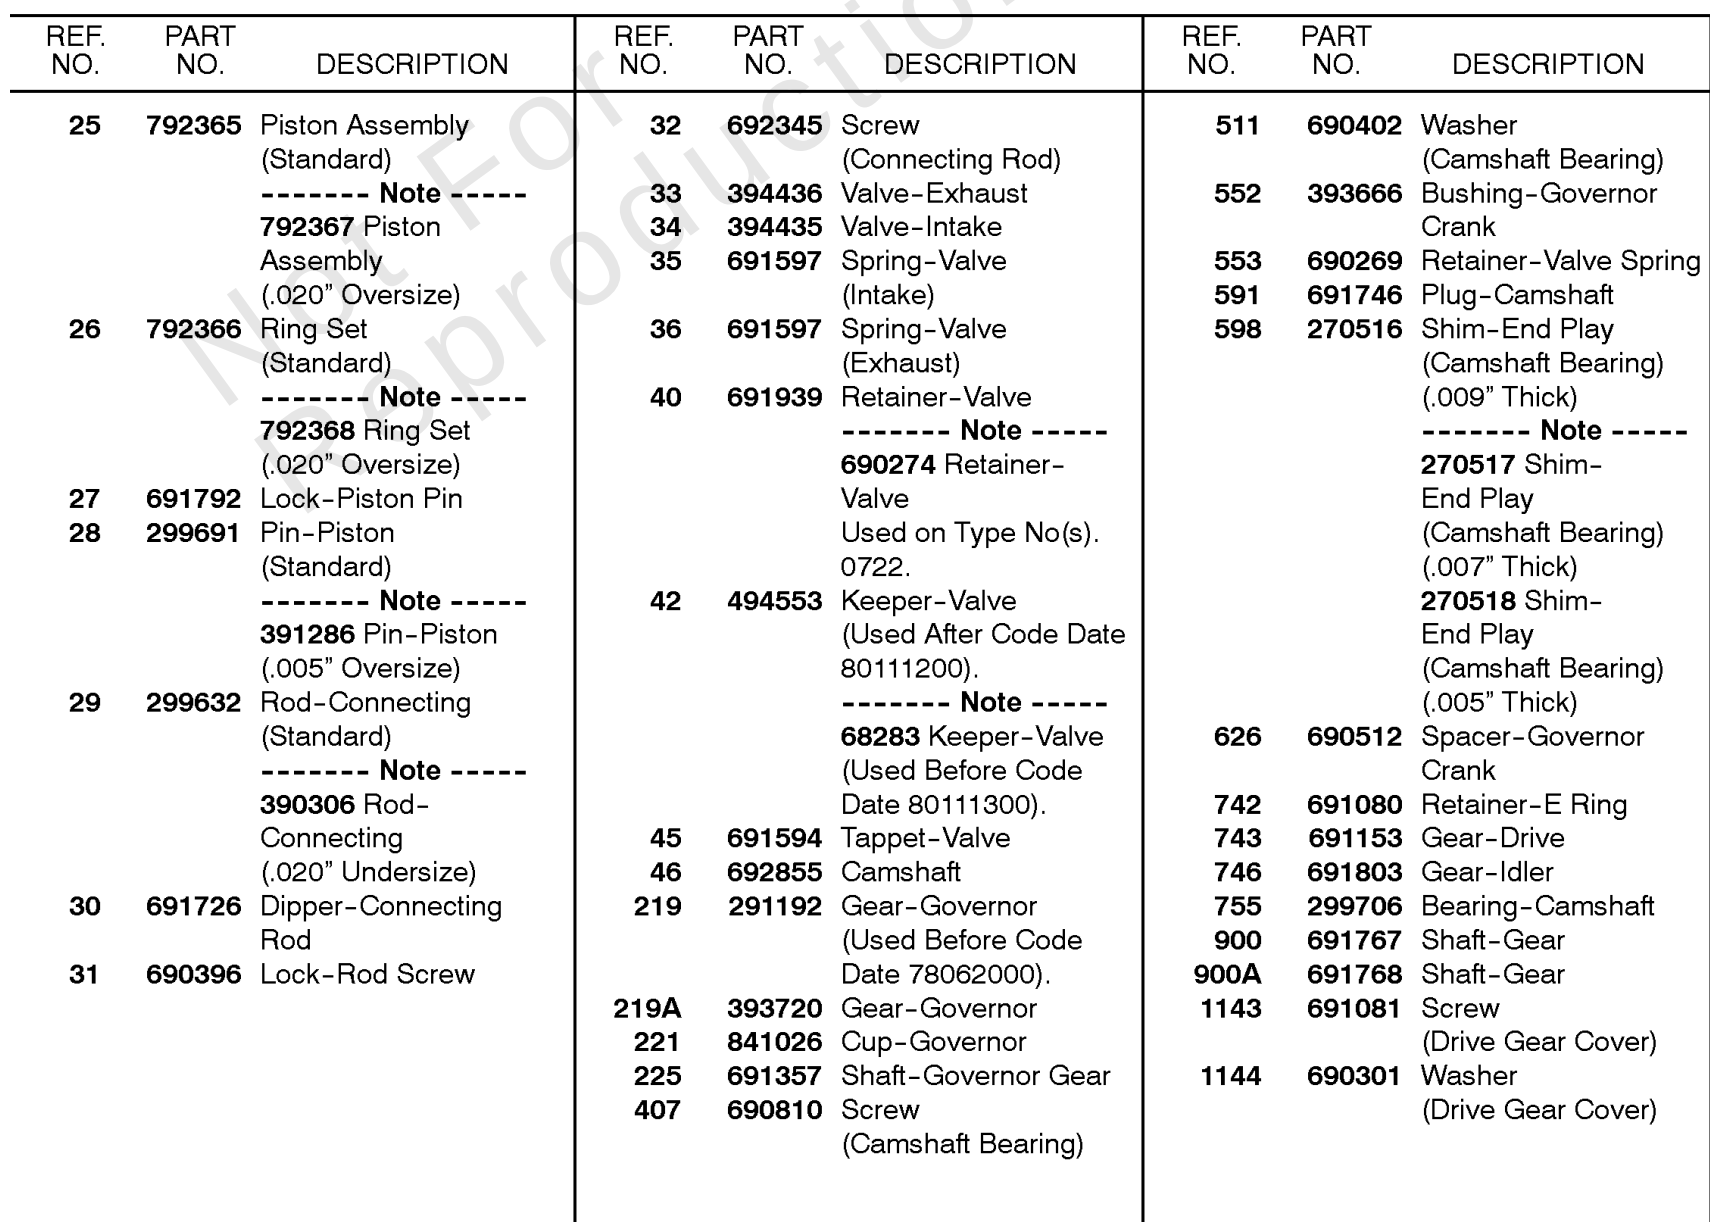

Piston, Rings, Connecting Rod, Camshaft, Valves

REF NO	PART NO	QTY	DESCRIPTION
45	691594		TAPPET, Valve
45	691594		TAPPET, Valve
45	691594		TAPPET, Valve
45	691594		TAPPET, Valve
45	691594		TAPPET, Valve
46	692855		CAMSHAFT
46	692855		CAMSHAFT
46	692855		CAMSHAFT
46	692855		CAMSHAFT
46	692855		CAMSHAFT
219	291192		GEAR, Governor -Used Before Code Date 78062000
219	291192		GEAR, Governor -Used Before Code Date 78062000
219	291192		GEAR, Governor -Used Before Code Date 78062000
219	291192		GEAR, Governor -Used Before Code Date 78062000
219	291192		GEAR, Governor -Used Before Code Date 78062000
219A	393720		GEAR, Governor
219A	393720		GEAR, Governor
219A	393720		GEAR, Governor
219A	393720		GEAR, Governor
219A	393720		GEAR, Governor
221	841026		CUP, Governor
221	841026		CUP, Governor
221	841026		CUP, Governor
221	841026		CUP, Governor
221	841026		CUP, Governor
225	691357		SHAFT, Governor Gear
225	691357		SHAFT, Governor Gear
225	691357		SHAFT, Governor Gear
225	691357		SHAFT, Governor Gear
225	691357		SHAFT, Governor Gear
407	690810		SCREW -(Camshaft Bearing)
407	690810		SCREW -(Camshaft Bearing)
407	690810		SCREW -(Camshaft Bearing)
407	690810		SCREW -(Camshaft Bearing)
407	690810		SCREW -(Camshaft Bearing)
511	690402		WASHER -(Camshaft Bearing)
511	690402		WASHER -(Camshaft Bearing)
511	690402		WASHER -(Camshaft Bearing)
511	690402		WASHER -(Camshaft Bearing)
511	690402		WASHER -(Camshaft Bearing)

 
Mfg. No: 326431-0709-01

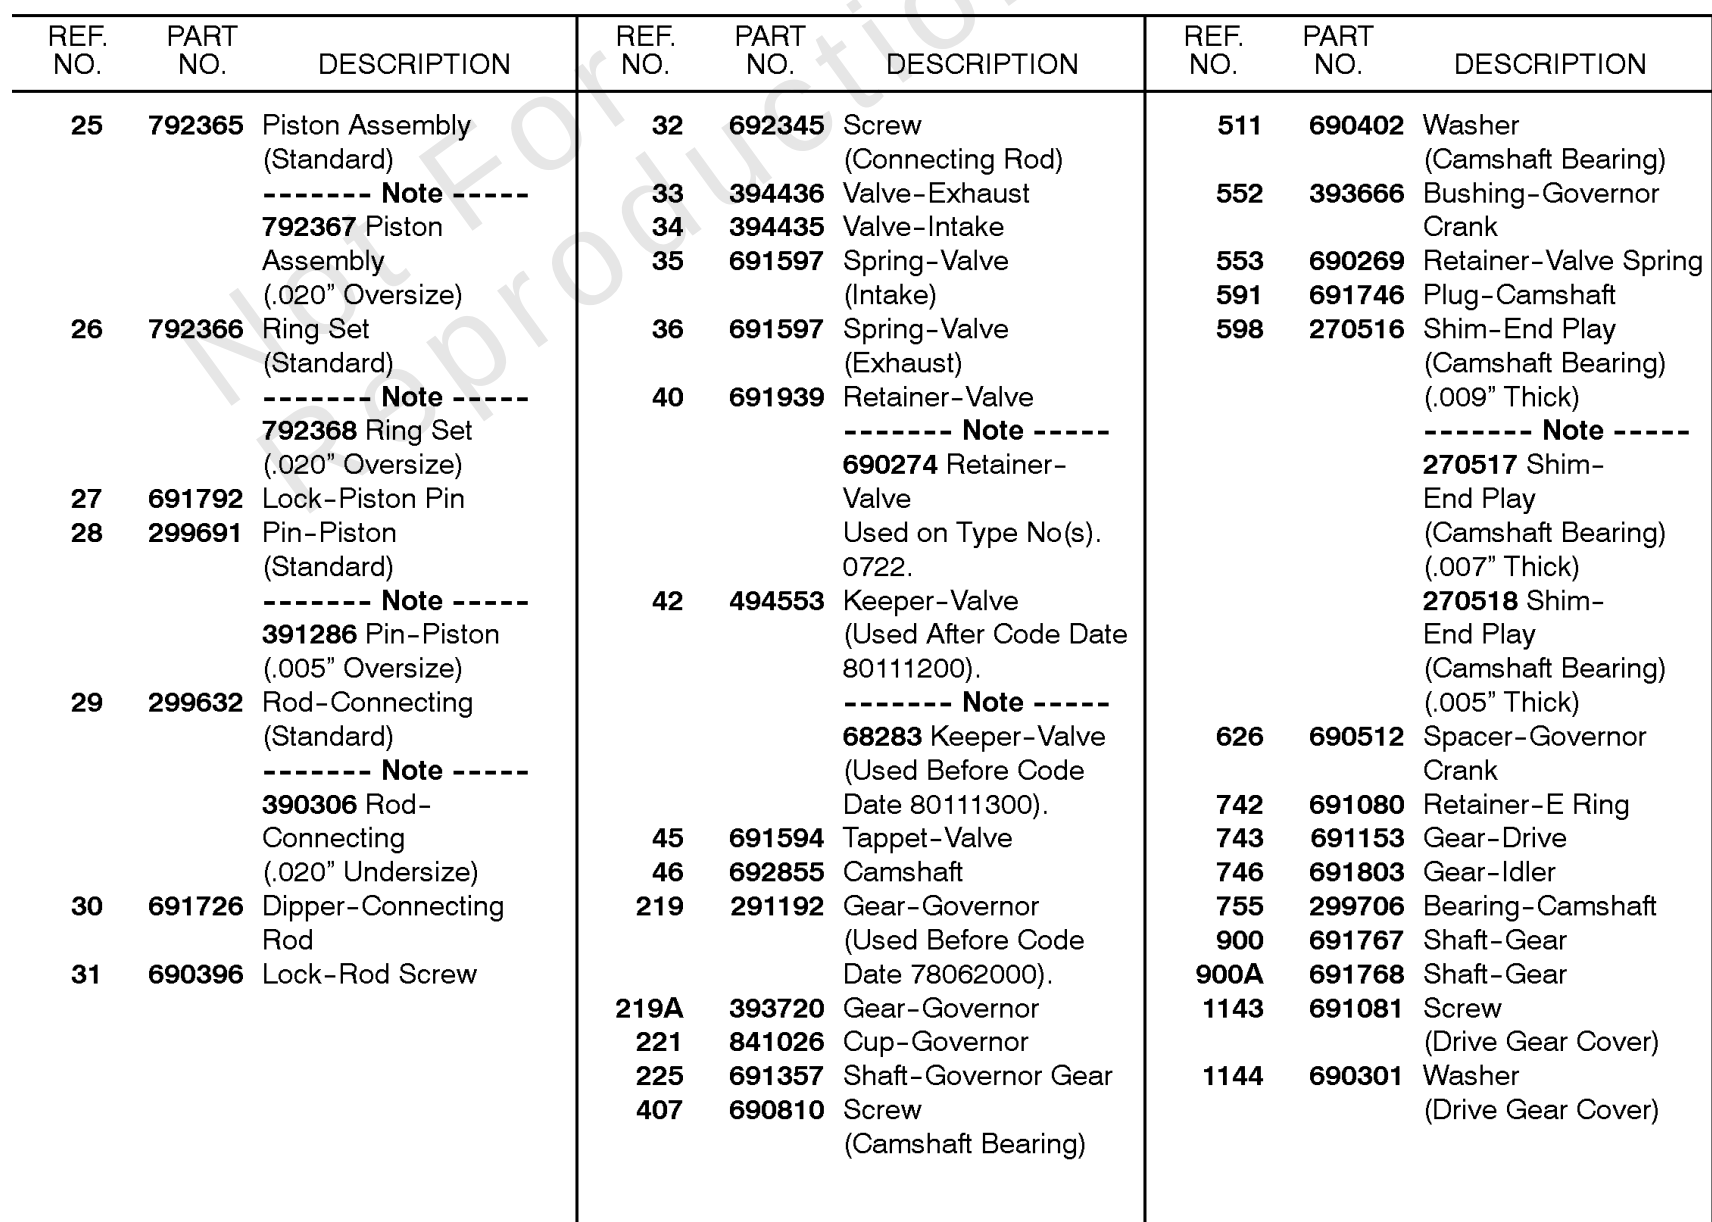

Piston, Rings, Connecting Rod, Camshaft, Valves


REF NO	PART NO	QTY	DESCRIPTION
552	393666		BUSHING, Governor Crank
552	393666		BUSHING, Governor Crank
552	393666		BUSHING, Governor Crank
552	393666		BUSHING, Governor Crank
552	393666		BUSHING, Governor Crank
553	690269		RETAINER, Valve
553	690269		RETAINER, Valve
553	690269		RETAINER, Valve
553	690269		RETAINER, Valve
553	690269		RETAINER, Valve
591	691746		PLUG, Camshaft
591	691746		PLUG, Camshaft
591	691746		PLUG, Camshaft
591	691746		PLUG, Camshaft
591	691746		PLUG, Camshaft
598	270518		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.005)
598	270516		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.009)
598	270517		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.007)
598	270518		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.005)
598	270518		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.005)
598	270516		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.009)
598	270517		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.007)
598	270516		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.009)
598	270517		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.007)
598	270518		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.005)
598	270517		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.007)
598	270516		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.009)
598	270516		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.009)
598	270517		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.007)
598	270518		SHIM, End Play -(Crankshaft or Camshaft Bearing) (.005)
626	690512		SPACER -(Governor Lever)
626	690512		SPACER -(Governor Lever)
626	690512		SPACER -(Governor Lever)
626	690512		SPACER -(Governor Lever)
626	690512		SPACER -(Governor Lever)
742	691080		RETAINER, E Ring
742	691080		RETAINER, E Ring

 Mfg. No: 326431-0709-01

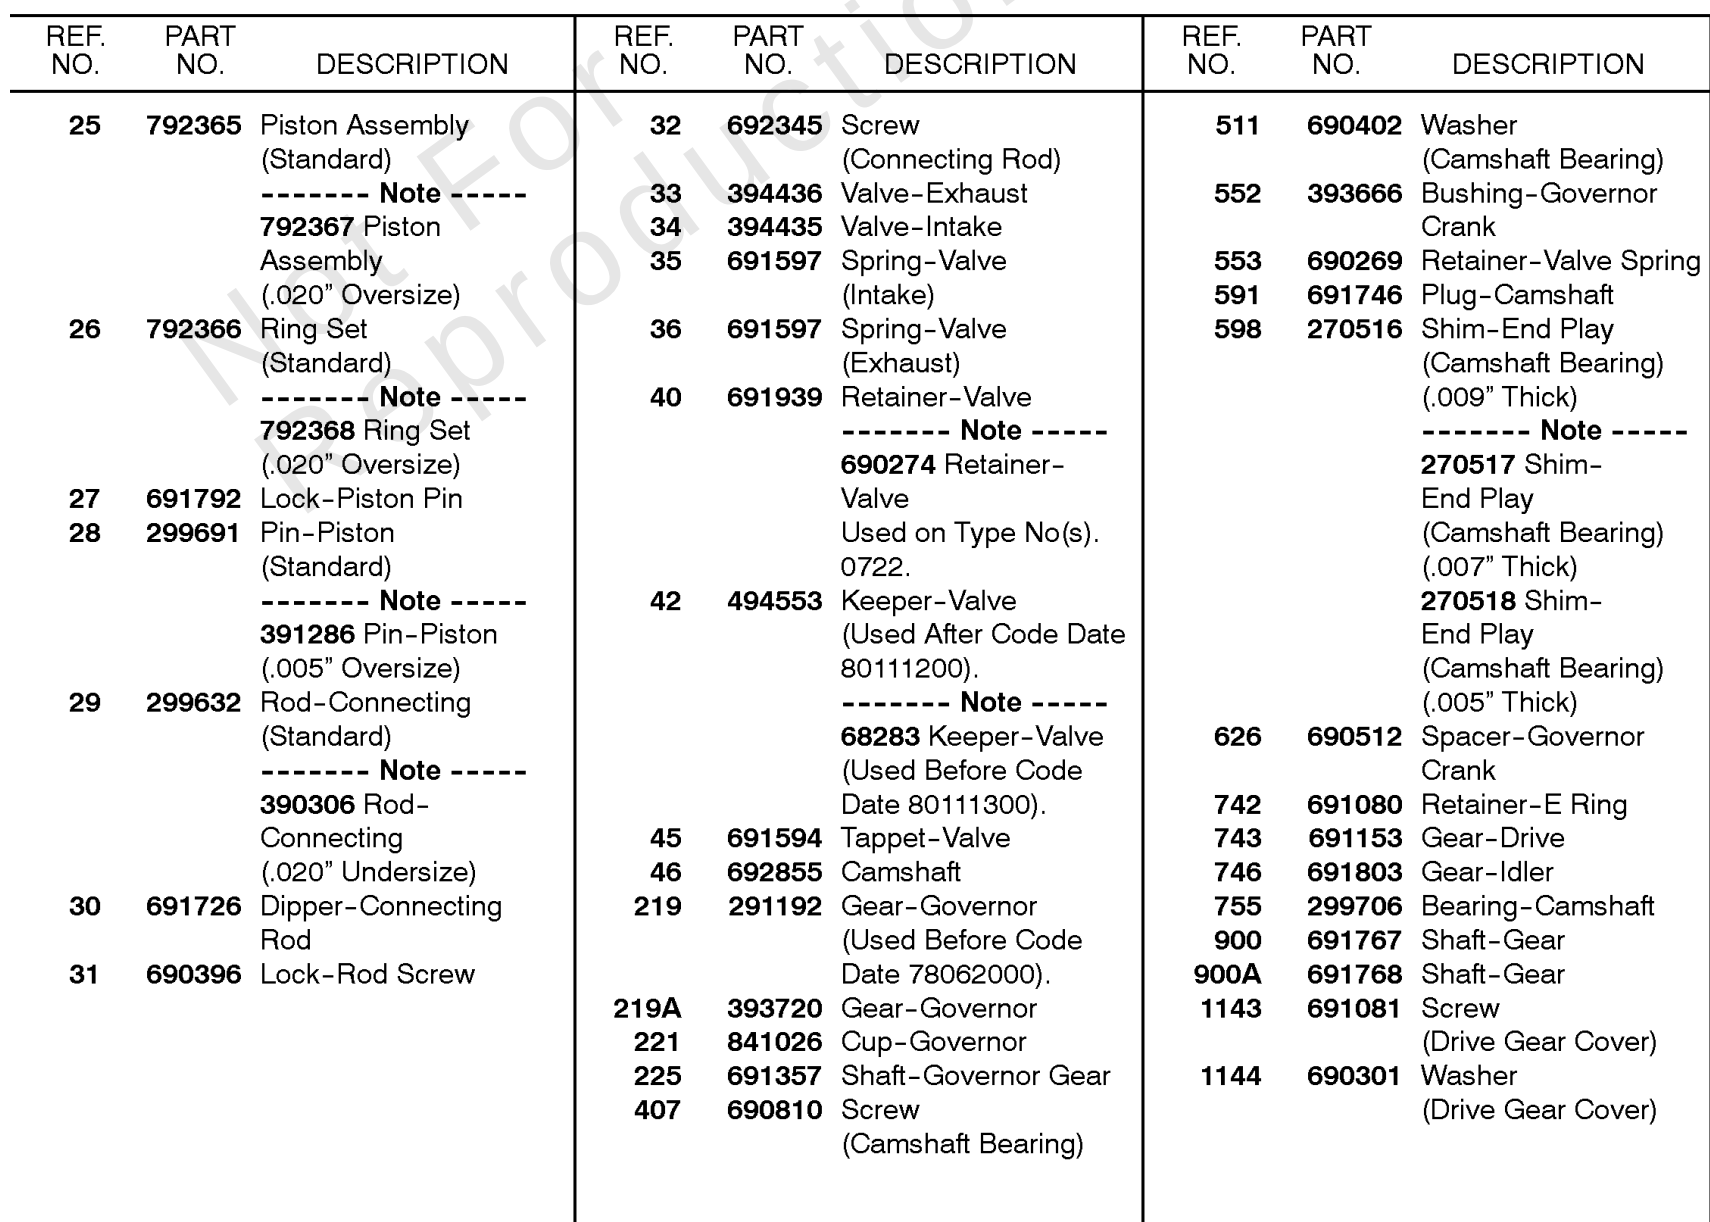

Piston, Rings, Connecting Rod, Camshaft, Valves


REF NO	PART NO	QTY	DESCRIPTION
742	691080		RETAINER, E Ring
742	691080		RETAINER, E Ring
742	691080		RETAINER, E Ring
743	691153		GEAR, Drive
743	691153		GEAR, Drive
743	691153		GEAR, Drive
743	691153		GEAR, Drive
743	691153		GEAR, Drive
746	691803		GEAR, Idler
746	691803		GEAR, Idler
746	691803		GEAR, Idler
746	691803		GEAR, Idler
746	691803		GEAR, Idler
755	299706		BEARING, Camshaft
755	299706		BEARING, Camshaft
755	299706		BEARING, Camshaft
755	299706		BEARING, Camshaft
755	299706		BEARING, Camshaft
900	691767		SHAFT, Gear
900	691767		SHAFT, Gear
900	691767		SHAFT, Gear
900	691767		SHAFT, Gear
900	691767		SHAFT, Gear
900A	691768		SHAFT, Gear
900A	691768		SHAFT, Gear
900A	691768		SHAFT, Gear
900A	691768		SHAFT, Gear
900A	691768		SHAFT, Gear
1143	691081		SCREW -(Drive Gear Cover)
1143	691081		SCREW -(Drive Gear Cover)
1143	691081		SCREW -(Drive Gear Cover)
1143	691081		SCREW -(Drive Gear Cover)
1143	691081		SCREW -(Drive Gear Cover)
1144	690301		WASHER -(Drive Gear Cover)
1144	690301		WASHER -(Drive Gear Cover)
1144	690301		WASHER -(Drive Gear Cover)
1144	690301		WASHER -(Drive Gear Cover)
1144	690301		WASHER -(Drive Gear Cover)

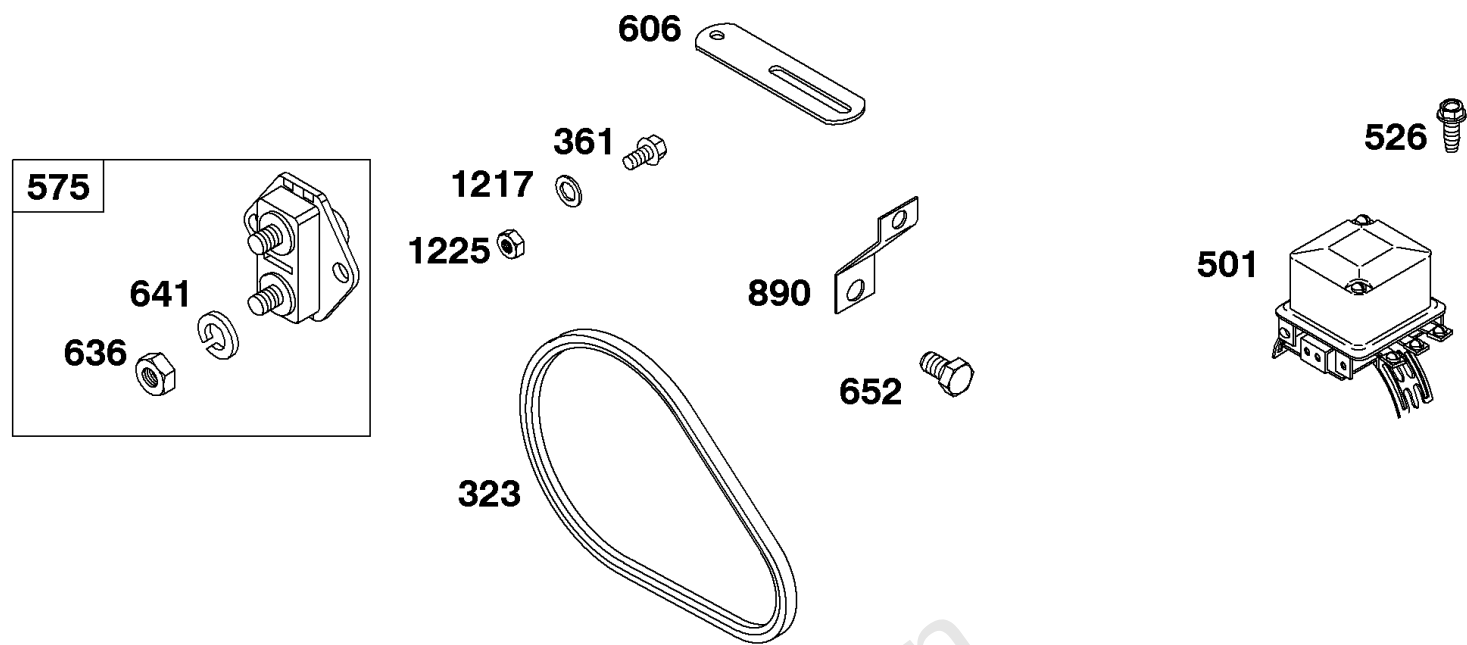 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
323	68898	Belt-Vee (For Low Position Mounting) (35 3/4" Long)	526	690297	Screw (Regulator)	890	221472	Bracket-Support
			575	692303	Switch-Starting	1217	690282	Washer (Starting Switch)
		----- Note -----	606	221442	Strap-Adjusting	1225	691029	Nut (Starting Switch)
		68878 Belt-Vee (For High Position Mounting) (36 3/4" Long)	636	696198	Nut (Starting Switch) (Terminal)			
361	691681	Screw (Starting Switch)	641	691075	Washer (Starting Switch) (Terminal)			
501	297196	Regulator (Saddle Mount) (Delco Remy Number 1119577)	652	693972	Screw (Support Bracket)			

Regulator, Vee Belt

REF NO	PART NO	QTY	DESCRIPTION
323	68878		BELT, Vee -(High Position)(36 3/4)
323	68878		BELT, Vee -(High Position)(36 3/4)
323	68878		BELT, Vee -(High Position)(36 3/4)
323	68898		BELT, Vee -(Low Position)(35 3/4)
323	68898		BELT, Vee -(Low Position)(35 3/4)
323	68878		BELT, Vee -(High Position)(36 3/4)
323	68898		BELT, Vee -(Low Position)(35 3/4)
323	68898		BELT, Vee -(Low Position)(35 3/4)
323	68878		BELT, Vee -(High Position)(36 3/4)
323	68898		BELT, Vee -(Low Position)(35 3/4)
361	691681		SCREW -(Starting Switch)
361	691681		SCREW -(Starting Switch)
361	691681		SCREW -(Starting Switch)
361	691681		SCREW -(Starting Switch)
361	691681		SCREW -(Starting Switch)
501	297196		REGULATOR -(Saddle Mount)(Delco Remy Number 1119577)
501	297196		REGULATOR -(Saddle Mount)(Delco Remy Number 1119577)
501	297196		REGULATOR -(Saddle Mount)(Delco Remy Number 1119577)
501	297196		REGULATOR -(Saddle Mount)(Delco Remy Number 1119577)
501	297196		REGULATOR -(Saddle Mount)(Delco Remy Number 1119577)
526	690297		SCREW -(Regulator)
526	690297		SCREW -(Regulator)
526	690297		SCREW -(Regulator)
526	690297		SCREW -(Regulator)
526	690297		SCREW -(Regulator)
575	692303		SWITCH-STARTING
575	692303		SWITCH-STARTING
575	692303		SWITCH-STARTING
575	692303		SWITCH-STARTING
575	692303		SWITCH-STARTING
606	221442		STRAP, Adjusting
606	221442		STRAP, Adjusting
606	221442		STRAP, Adjusting

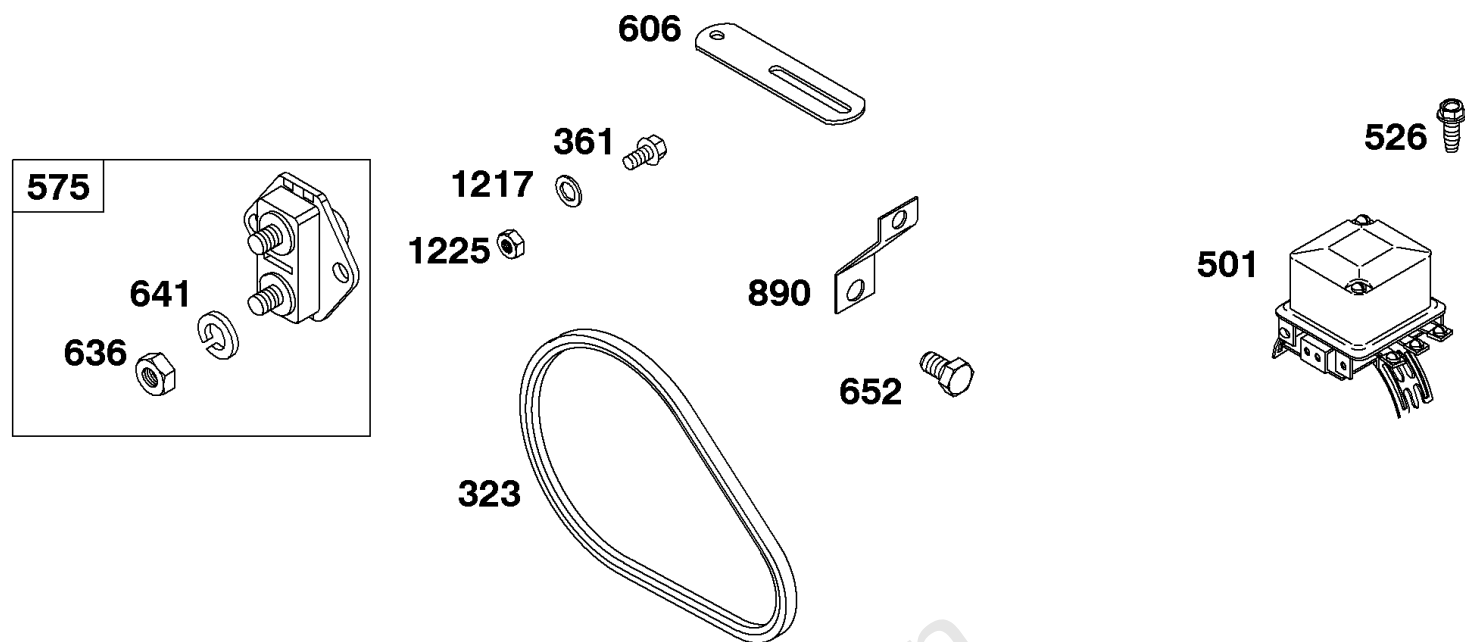 


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
323	68898	Belt-Vee (For Low Position Mounting) (35 3/4" Long)	526	690297	Screw (Regulator)	890	221472	Bracket-Support
			575	692303	Switch-Starting	1217	690282	Washer (Starting Switch)
		----- Note -----	606	221442	Strap-Adjusting	1225	691029	Nut (Starting Switch)
		68878 Belt-Vee (For High Position Mounting) (36 3/4" Long)	636	696198	Nut (Starting Switch) (Terminal)			
361	691681	Screw (Starting Switch)	641	691075	Washer (Starting Switch) (Terminal)			
501	297196	Regulator (Saddle Mount) (Delco Remy Number 1119577)	652	693972	Screw (Support Bracket)			

Regulator, Vee Belt

REF NO	PART NO	QTY	DESCRIPTION
606	221442		STRAP, Adjusting
606	221442		STRAP, Adjusting
636	696198		NUT -(Starting Switch) (Terminal)
636	696198		NUT -(Starting Switch) (Terminal)
636	696198		NUT -(Starting Switch) (Terminal)
636	696198		NUT -(Starting Switch) (Terminal)
636	696198		NUT -(Starting Switch) (Terminal)
641	691075		WASHER -(Starting Switch) (Terminal)
641	691075		WASHER -(Starting Switch) (Terminal)
641	691075		WASHER -(Starting Switch) (Terminal)
641	691075		WASHER -(Starting Switch) (Terminal)
641	691075		WASHER -(Starting Switch) (Terminal)
652	693972		SCREW -(Support Bracket)
652	693972		SCREW -(Support Bracket)
652	693972		SCREW -(Support Bracket)
652	693972		SCREW -(Support Bracket)
652	693972		SCREW -(Support Bracket)
890	221472		BRACKET, Support
890	221472		BRACKET, Support
890	221472		BRACKET, Support
890	221472		BRACKET, Support
890	221472		BRACKET, Support
1217	690282		WASHER -(Starting Switch)
1217	690282		WASHER -(Starting Switch)
1217	690282		WASHER -(Starting Switch)
1217	690282		WASHER -(Starting Switch)
1217	690282		WASHER -(Starting Switch)
1225	691029		NUT -(Starting Switch)
1225	691029		NUT -(Starting Switch)
1225	691029		NUT -(Starting Switch)
1225	691029		NUT -(Starting Switch)
1225	691029		NUT -(Starting Switch)

Replacement Engine - US & Canada


REF NO	PART NO	QTY	DESCRIPTION
	3264312550	1	Replacement Engine
	691806	1	CRANKSHAFT -Add Part
	690535	1	CRANKSHAFT -Remove Part
-----			Top No-Load Speed: 3600 -Trim: ALL
-----			Service Note: For all Go-Karts use only a Model 136200 series engine as a replacement, regardless of the original Model.
-----			Service Note: Replacement engine is not available in the U. S. A. Repair with individual parts.

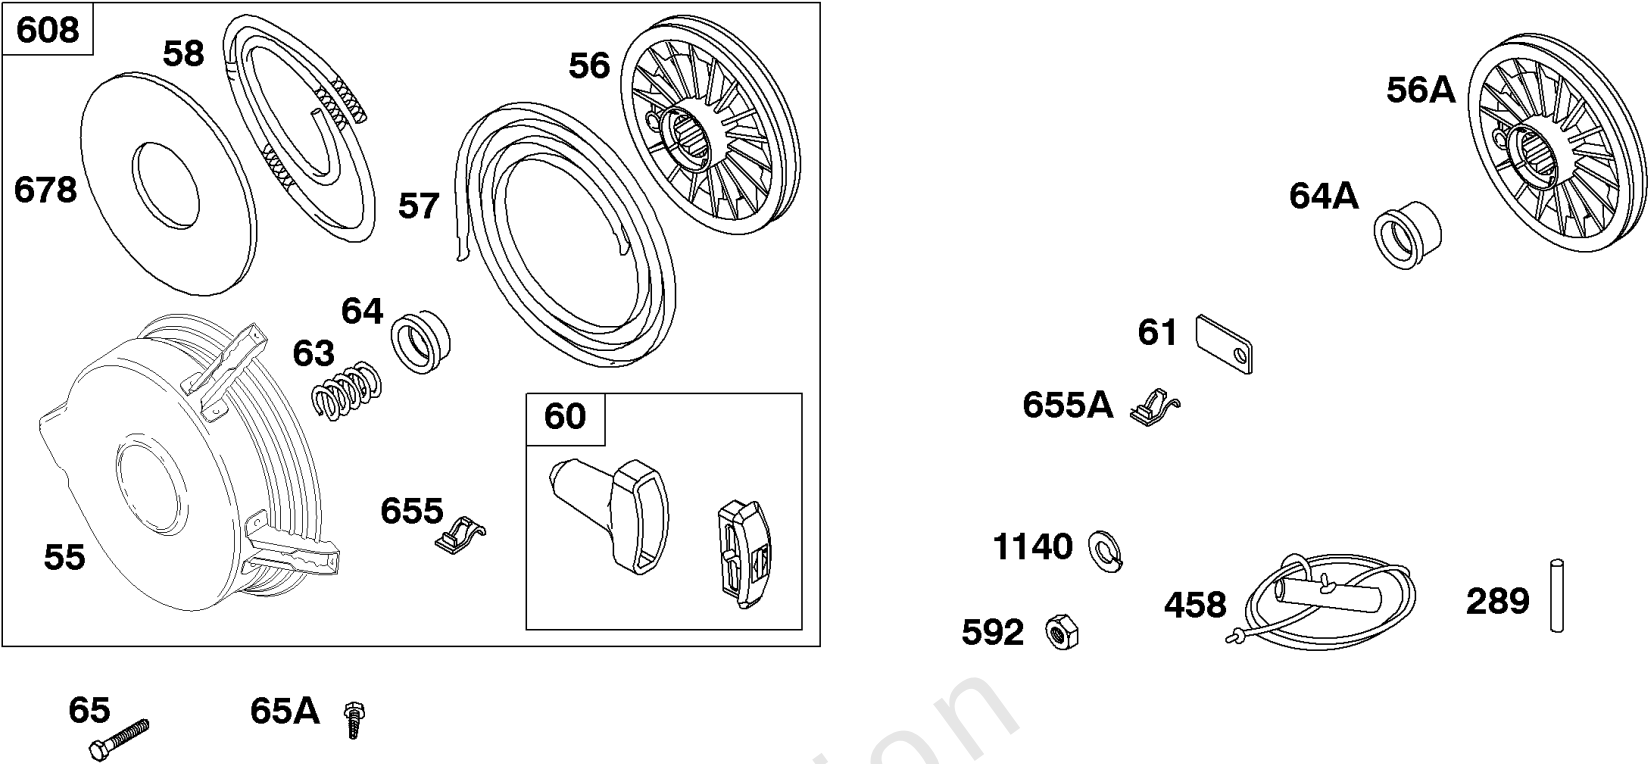 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	691355	Housing-Rewind Starter (Low Profile)		66574	Rope-Starter (99" Long) (Cut to Required Length) (Use With Metal Pulley)	289	230228S	Pin-Starter Grip
56	392630	Pulley-Starter (Low Profile)		61	68848S	592	690276	Kit-Handle/Rope (Rewind Starter)
56A	295871	Pulley-Starter (Wide Legs Starter Housing, Includes 63" Rope)	60	490652	Grip-Starter Rope	608	691958	Nut (Rewind Starter)
57	490179	Spring-Rewind Starter	61	68848S	Bumper-Starter Pulley (Wide Legs Starter Housing)	655	691734	Starter-Rewind
58	692188	Rope-Starter (63" Long) (Use With Plastic Pulley)	63	690547	Spring-Ratchet	655A	221014	Anchor-Rewind Spring (Wide Legs Starter Housing)
		----- Note -----	64	690511	Adapter-Ratchet Spring (Low Profile)	678	490817	Anchor-Rewind Spring (Wide Legs Starter Housing)
		695002 Rope-Starter (99" Long) (Cut to Required Length) (Use With Plastic Pulley)	64A	691920	Adapter-Ratchet Spring (Wide Legs Starter Housing)	1140	690286	Spacer-Rewind Washer (Rewind Starter)
		66564 Rope-Starter (63" Long) (Use With Metal Pulley)	65	691693	Screw (Rewind Starter) (3/8" Long)			
			65A	93254	Screw (Rewind Starter) (7/16" Long)			

Rewind Starter, Rope


REF NO	PART NO	QTY	DESCRIPTION
55	691355		HOUSING, Rewind Starter -(Low Profile)
55	691355		HOUSING, Rewind Starter -(Low Profile)
55	691355		HOUSING, Rewind Starter -(Low Profile)
55	691355		HOUSING, Rewind Starter -(Low Profile)
55	691355		HOUSING, Rewind Starter -(Low Profile)
56	392630		PULLEY, Starter -(Low Profile)
56	392630		PULLEY, Starter -(Low Profile)
56	392630		PULLEY, Starter -(Low Profile)
56	392630		PULLEY, Starter -(Low Profile)
56	392630		PULLEY, Starter -(Low Profile)
56A	295871		PULLEY, Starter -(Wide Legs Starter Housing, Includes 63 Rope)
56A	295871		PULLEY, Starter -(Wide Legs Starter Housing, Includes 63 Rope)
56A	295871		PULLEY, Starter -(Wide Legs Starter Housing, Includes 63 Rope)
56A	295871		PULLEY, Starter -(Wide Legs Starter Housing, Includes 63 Rope)
56A	295871		PULLEY, Starter -(Wide Legs Starter Housing, Includes 63 Rope)
57	490179		SPRING-REWIND STR
57	490179		SPRING-REWIND STR
57	490179		SPRING-REWIND STR
57	490179		SPRING-REWIND STR
57	490179		SPRING-REWIND STR
58	695002		ROPE, Starter -(99)(Cut to Required Length)(Use With Plastic Pulley)
58	692188		ROPE, Starter -(63)(Use With Plastic Pulley)
58	66564		ROPE, Starter -(63)(Use With Metal Pulley)
58	66574		ROPE, Starter -(99)(Cut to Required Length)(Use With Metal Pulley)
58	692188		ROPE, Starter -(63)(Use With Plastic Pulley)
58	695002		ROPE, Starter -(99)(Cut to Required Length)(Use With Plastic Pulley)
58	66574		ROPE, Starter -(99)(Cut to Required Length)(Use With Metal Pulley)
58	66564		ROPE, Starter -(63)(Use With Metal Pulley)
58	695002		ROPE, Starter -(99)(Cut to Required Length)(Use With Plastic Pulley)
58	692188		ROPE, Starter -(63)(Use With Plastic Pulley)
58	66564		ROPE, Starter -(63)(Use With Metal Pulley)
58	66574		ROPE, Starter -(99)(Cut to Required Length)(Use With Metal Pulley)

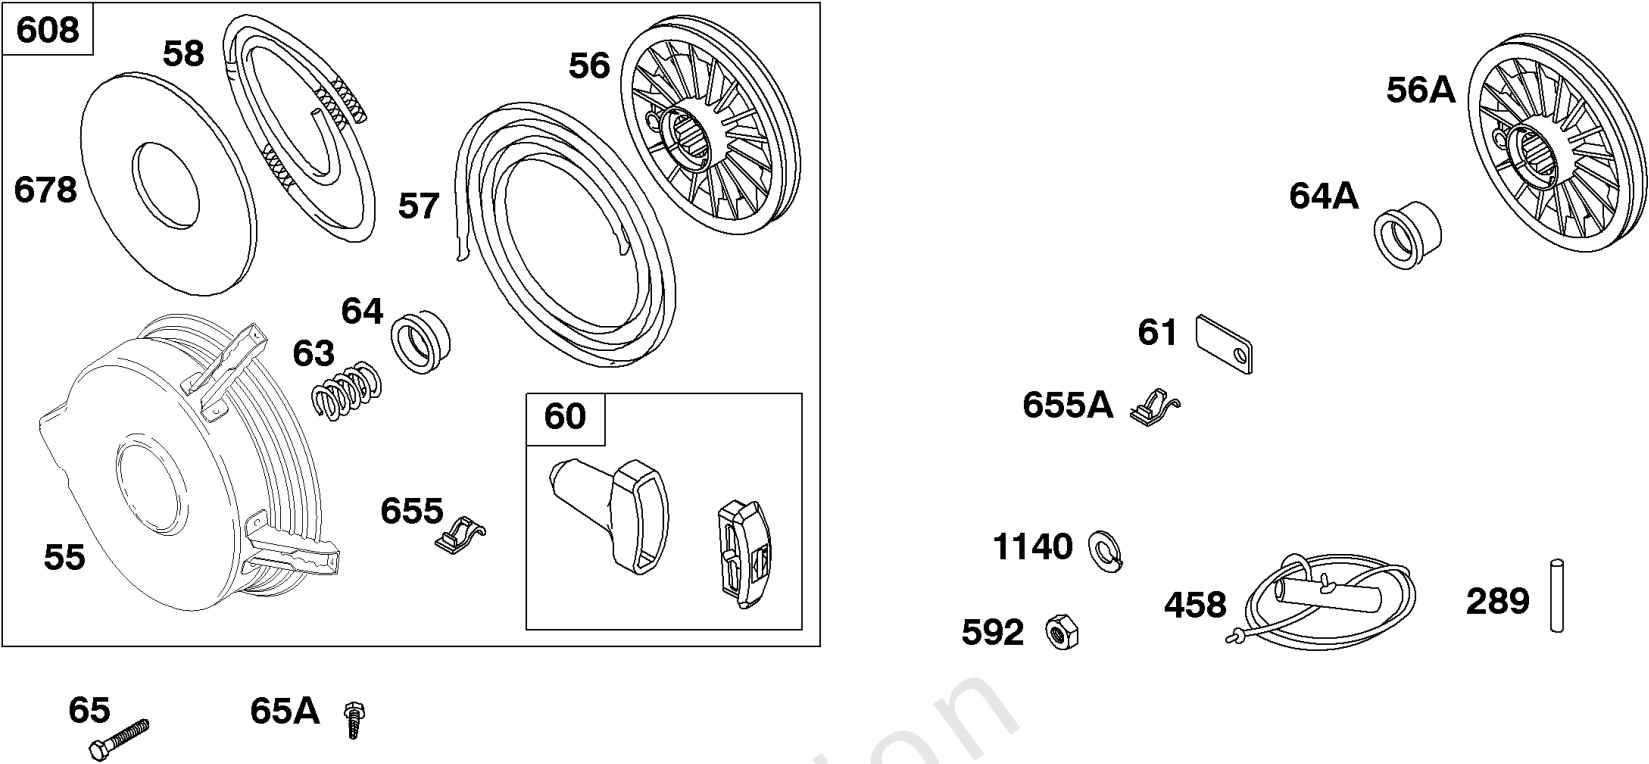 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	691355	Housing-Rewind Starter (Low Profile)		66574	Rope-Starter (99" Long) (Cut to Required Length) (Use With Metal Pulley)	289	230228S	Pin-Starter Grip
56	392630	Pulley-Starter (Low Profile)				458	69932S	Kit-Handle/Rope
56A	295871	Pulley-Starter (Wide Legs Starter Housing, Includes 63" Rope)	60	490652	Grip-Starter Rope	592	690276	Nut (Rewind Starter)
57	490179	Spring-Rewind Starter	61	68848S	Bumper-Starter Pulley (Wide Legs Starter Housing)	608	691958	Starter-Rewind
58	692188	Rope-Starter (63" Long) (Use With Plastic Pulley) ----- Note ----- 695002 Rope-Starter (99" Long) (Cut to Required Length) (Use With Plastic Pulley)	63	690547	Spring-Ratchet	655	691734	Anchor-Rewind Spring
			64	690511	Adapter-Ratchet Spring (Low Profile)	655A	221014	Anchor-Rewind Spring (Wide Legs Starter Housing)
			64A	691920	Adapter-Ratchet Spring (Wide Legs Starter Housing)	678	490817	Spacer-Rewind
			65	691693	Screw (Rewind Starter) (3/8" Long)	1140	690286	Washer (Rewind Starter)
			65A	93254	Screw (Rewind Starter) (7/16" Long)			

Rewind Starter, Rope


REF NO	PART NO	QTY	DESCRIPTION
58	692188		ROPE, Starter -(63)(Use With Plastic Pulley)
58	695002		ROPE, Starter -(99)(Cut to Required Length)(Use With Plastic Pulley)
58	66574		ROPE, Starter -(99)(Cut to Required Length)(Use With Metal Pulley)
58	695002		ROPE, Starter -(99)(Cut to Required Length)(Use With Plastic Pulley)
58	66564		ROPE, Starter -(63)(Use With Metal Pulley)
58	66564		ROPE, Starter -(63)(Use With Metal Pulley)
58	66574		ROPE, Starter -(99)(Cut to Required Length)(Use With Metal Pulley)
58	692188		ROPE, Starter -(63)(Use With Plastic Pulley)
60	490652		GRIP-STARTER ROPE
60	490652		GRIP-STARTER ROPE
60	490652		GRIP-STARTER ROPE
60	490652		GRIP-STARTER ROPE
60	490652		GRIP-STARTER ROPE
61	68848S		BUMPER, Starter Pulley -(Wide Legs Starter Housing)
61	68848S		BUMPER, Starter Pulley -(Wide Legs Starter Housing)
61	68848S		BUMPER, Starter Pulley -(Wide Legs Starter Housing)
61	68848S		BUMPER, Starter Pulley -(Wide Legs Starter Housing)
61	68848S		BUMPER, Starter Pulley -(Wide Legs Starter Housing)
63	690547		SPRING, Ratchet
63	690547		SPRING, Ratchet
63	690547		SPRING, Ratchet
63	690547		SPRING, Ratchet
63	690547		SPRING, Ratchet
64	690511		ADAPTER, Ratchet Spring -(Low Profile)
64	690511		ADAPTER, Ratchet Spring -(Low Profile)
64	690511		ADAPTER, Ratchet Spring -(Low Profile)
64	690511		ADAPTER, Ratchet Spring -(Low Profile)
64	690511		ADAPTER, Ratchet Spring -(Low Profile)
64A	691920		ADAPTER, Ratchet Spring -(Wide Legs Starter Housing)
64A	691920		ADAPTER, Ratchet Spring -(Wide Legs Starter Housing)
64A	691920		ADAPTER, Ratchet Spring -(Wide Legs Starter Housing)
64A	691920		ADAPTER, Ratchet Spring -(Wide Legs Starter Housing)
64A	691920		ADAPTER, Ratchet Spring -(Wide Legs Starter Housing)
65	691693		SCREW -(Rewind Starter) (3/8" Long)

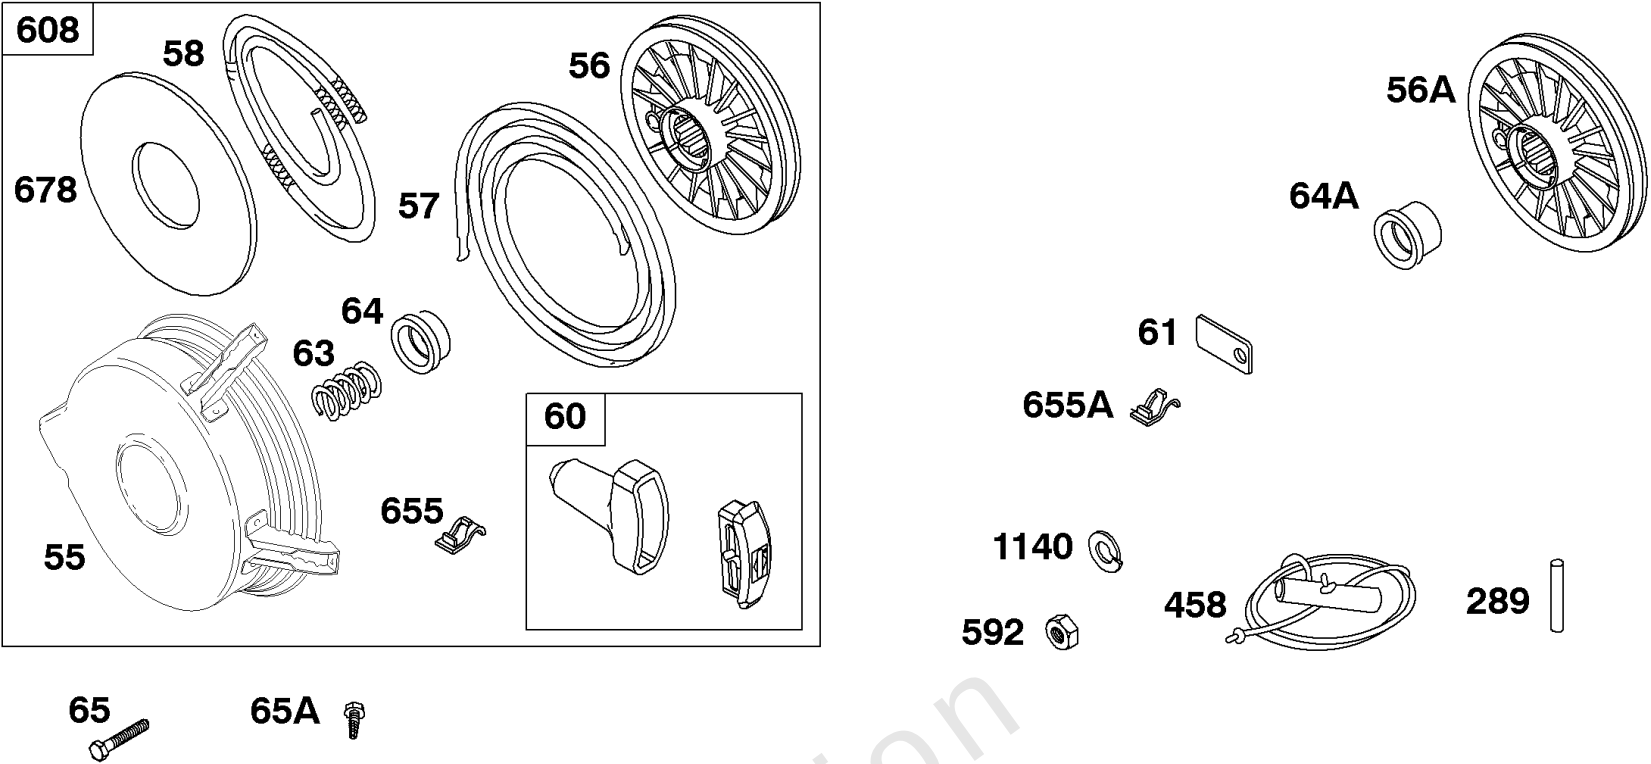 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	691355	Housing-Rewind Starter (Low Profile)		66574	Rope-Starter (99" Long) (Cut to Required Length) (Use With Metal Pulley)	289	230228S	Pin-Starter Grip
56	392630	Pulley-Starter (Low Profile)		61	68848S	69932S	690276	Kit-Handle/Rope (Rewind Starter)
56A	295871	Pulley-Starter (Wide Legs Starter Housing, Includes 63" Rope)	60	490652	Grip-Starter Rope	608	691958	Starter-Rewind
57	490179	Spring-Rewind Starter	63	690547	Spring-Ratchet	655	691734	Anchor-Rewind Spring
58	692188	Rope-Starter (63" Long) (Use With Plastic Pulley)	64	690511	Adapter-Ratchet Spring (Low Profile)	655A	221014	Anchor-Rewind Spring (Wide Legs Starter Housing)
		----- Note -----	64A	691920	Adapter-Ratchet Spring (Wide Legs Starter Housing)	678	490817	Spacer-Rewind
		695002 Rope-Starter (99" Long) (Cut to Required Length) (Use With Plastic Pulley)	65	691693	Screw (Rewind Starter) (3/8" Long)	1140	690286	Washer (Rewind Starter)
		66564 Rope-Starter (63" Long) (Use With Metal Pulley)	65A	93254	Screw (Rewind Starter) (7/16" Long)			

Rewind Starter, Rope


REF NO	PART NO	QTY	DESCRIPTION
65	691693		SCREW -(Rewind Starter) (3/8" Long)
65	691693		SCREW -(Rewind Starter) (3/8" Long)
65	691693		SCREW -(Rewind Starter) (3/8" Long)
65	691693		SCREW -(Rewind Starter) (3/8" Long)
65A	93254		SCREW -(Rewind Starter) (7/16)
65A	93254		SCREW -(Rewind Starter) (7/16)
65A	93254		SCREW -(Rewind Starter) (7/16)
65A	93254		SCREW -(Rewind Starter) (7/16)
65A	93254		SCREW -(Rewind Starter) (7/16)
289	230228S		PIN, Starter Grip
289	230228S		PIN, Starter Grip
289	230228S		PIN, Starter Grip
289	230228S		PIN, Starter Grip
289	230228S		PIN, Starter Grip
458	69932S		KIT, Handle/Rope
458	69932S		KIT, Handle/Rope
458	69932S		KIT, Handle/Rope
458	69932S		KIT, Handle/Rope
458	69932S		KIT, Handle/Rope
592	690276		NUT -(Rewind Starter)
592	690276		NUT -(Rewind Starter)
592	690276		NUT -(Rewind Starter)
592	690276		NUT -(Rewind Starter)
592	690276		NUT -(Rewind Starter)
608	691958		STARTER, Rewind
608	691958		STARTER, Rewind
608	691958		STARTER, Rewind
608	691958		STARTER, Rewind
608	691958		STARTER, Rewind
655	691734		ANCHOR-REWIND SPRING
655	691734		ANCHOR-REWIND SPRING
655	691734		ANCHOR-REWIND SPRING
655	691734		ANCHOR-REWIND SPRING
655	691734		ANCHOR-REWIND SPRING
655A	221014		ANCHOR, Rewind Spring -(Wide Legs Starter Housing)
655A	221014		ANCHOR, Rewind Spring -(Wide Legs Starter Housing)
655A	221014		ANCHOR, Rewind Spring -(Wide Legs Starter Housing)
655A	221014		ANCHOR, Rewind Spring -(Wide Legs Starter Housing)

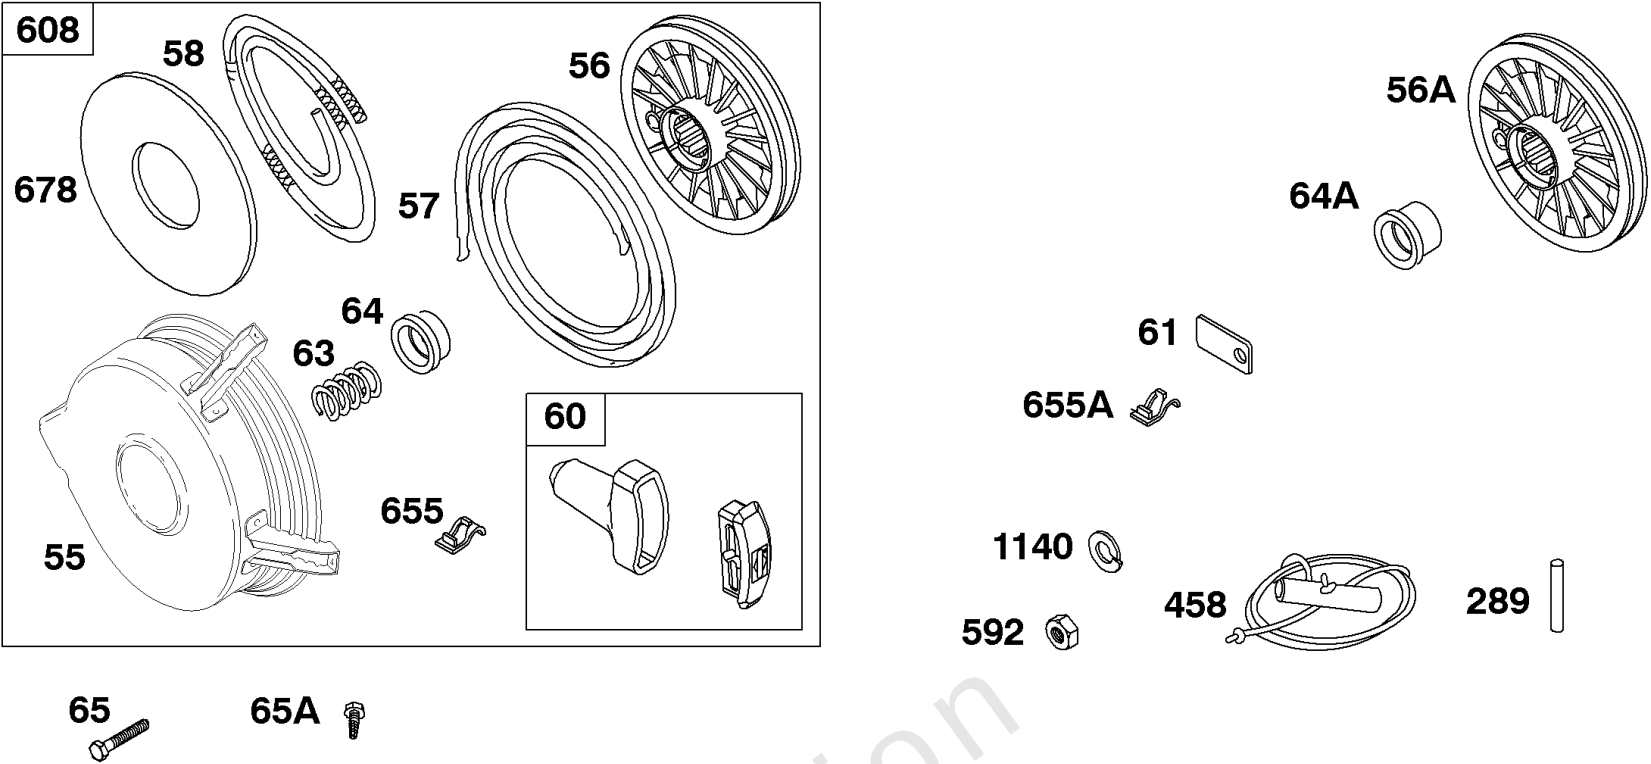 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	691355	Housing-Rewind Starter (Low Profile)		66574	Rope-Starter (99" Long) (Cut to Required Length) (Use With Metal Pulley)	289	230228S	Pin-Starter Grip
56	392630	Pulley-Starter (Low Profile)		61	68848S	608	691958	Starter-Rewind
56A	295871	Pulley-Starter (Wide Legs Starter Housing, Includes 63" Rope)	60	490652	Grip-Starter Rope	655	691734	Anchor-Rewind Spring
57	490179	Spring-Rewind Starter	61	68848S	Bumper-Starter Pulley (Wide Legs Starter Housing)	655A	221014	Anchor-Rewind Spring (Wide Legs Starter Housing)
58	692188	Rope-Starter (63" Long) (Use With Plastic Pulley)	63	690547	Spring-Ratchet	678	490817	Spacer-Rewind
		----- Note -----	64	690511	Adapter-Ratchet Spring (Low Profile)	1140	690286	Washer (Rewind Starter)
		695002 Rope-Starter (99" Long) (Cut to Required Length) (Use With Plastic Pulley)	64A	691920	Adapter-Ratchet Spring (Wide Legs Starter Housing)			
		66564 Rope-Starter (63" Long) (Use With Metal Pulley)	65	691693	Screw (Rewind Starter) (3/8" Long)			
			65A	93254	Screw (Rewind Starter) (7/16" Long)			

Rewind Starter, Rope


REF NO	PART NO	QTY	DESCRIPTION
655A	221014		ANCHOR, Rewind Spring -(Wide Legs Starter Housing)
678	490817		SPACER-REWIND -(Rewind)
678	490817		SPACER-REWIND -(Rewind)
678	490817		SPACER-REWIND -(Rewind)
678	490817		SPACER-REWIND -(Rewind)
678	490817		SPACER-REWIND -(Rewind)
1140	690286		WASHER -(Rewind Starter)
1140	690286		WASHER -(Rewind Starter)
1140	690286		WASHER -(Rewind Starter)
1140	690286		WASHER -(Rewind Starter)
1140	690286		WASHER -(Rewind Starter)

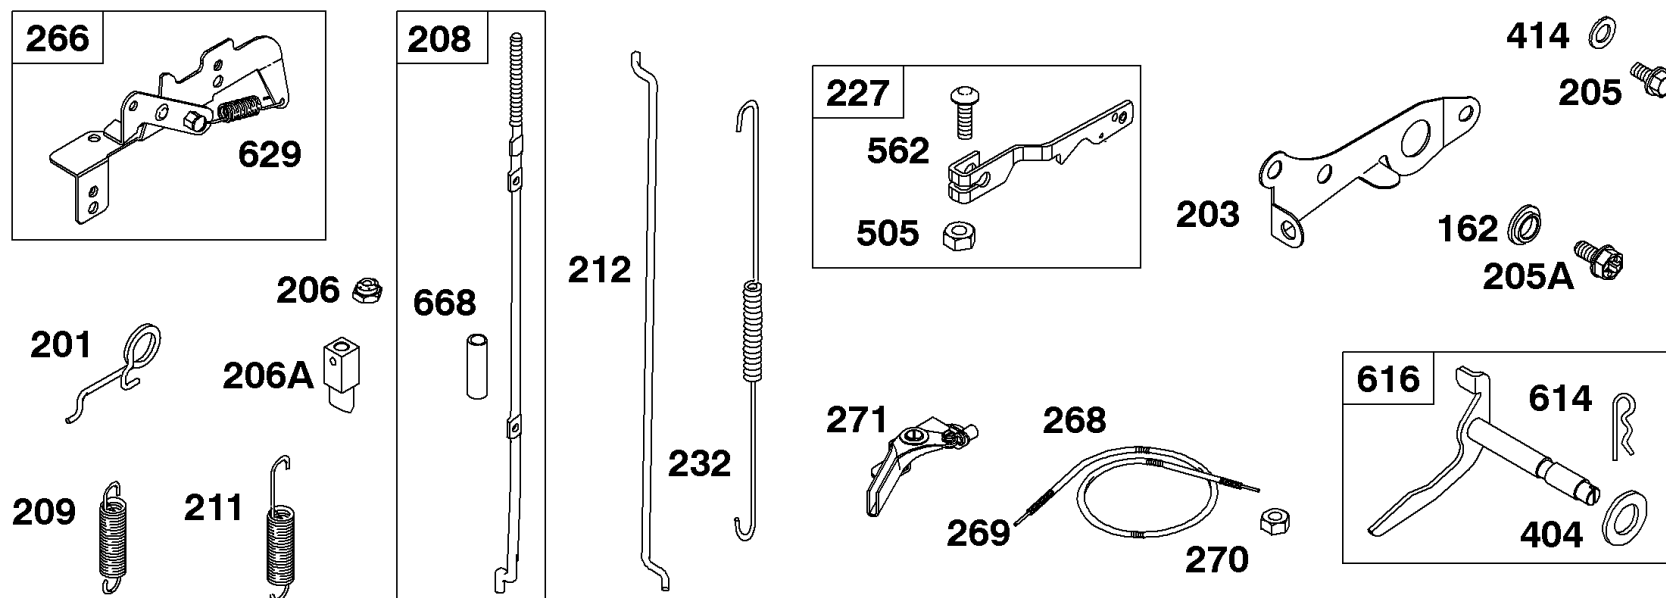 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
162	690267	Collar-Bell Crank	212	691791	Link-Throttle	268	691025	Casing-Control Wire
201	261027	Link-Air Vane			----- Note -----			(Cut to Required Length)
		Used on Type No(s).			691595 Link-Throttle	269	691026	Wire-Control
		0234, 0705.			Used on Type No(s).			(Cut to Required Length)
203	690263	Crank-Bell			0248, 0308, 0358,	270	691027	Nut
205	691681	Screw	227	690607	Lever-Governor Control			(Control Wire Casing)
		(Bell Crank)			----- Note -----	271	691028	Lever-Control
		Used on Type No(s).			690616 Lever-Governor Control			----- Note -----
		0136, 0139, 0204,			Used on Type No(s).			221987 Lever-Control
		0228, 0234, 0248,			0611, 0630, 0647,			Used on Type No(s).
		0328, 0678, 0705.			0651, 0684, 0690,	404	690264	Washer
205A	690810	Screw			0706, 0721, 0660,			(Governor Crank)
		(Bell Crank)			0671, 0675, 0681,	414	692810	Washer
206	691079	Nut-Governor Adjusting			0683, 0685, 0689,			(Bell Crank)
206A	691584	Nut-Governor Adjusting			0692, 0694, 0697,			Used on Type No(s).
					0699, 0801, 2520,			0136, 0139, 0204,
208	393613	Rod-Governor Control			2527, 2528, 2529,			0228, 0234, 0248,
209	691596	Spring-Governor			2550, 2561, 2581,			0328, 0678, 0705.
		----- Note -----			2582.	505	691251	Nut
		691789 Spring-Governor	232	690545	Spring-Governor Link			(Governor Control Lever)
		Used on Type No(s).			----- Note -----	562	92613	Bolt
		0611, 0630, 0647,			692207 Spring-Governor Link			(Governor Control Lever)
		0651, 0690, 0760,			Used on Type No(s).	614	691620	Pin-Cotter
		0781, 0801, 2520,			0248, 0308, 0358,	616	291364	Crank-Governor
		2527, 2528, 2529,			0638, 0707, 0770.	629	690538	Spring-Throttle Return
		2550, 2581, 2582.	266	494554	Control-Throttle			Used on Type No(s).
211	691790	Spring-Governed Idle			----- Note -----			0234, 0631, 0632,
		Used on Type No(s).			299361 Control-Throttle			0637, 0641, 0642,
		0611, 0630, 0647,			(Dial Control)			0705, 0803, 2580.
		0651, 0690, 0760,			Used on Type No(s).	668	690313	Spacer
		0781, 0801, 2520,			0640, 0652, 0653,			(Governor Control Rod)
		2527, 2528, 2529,			0665.			
		2550, 2581, 2582.						

Springs, Controls


REF NO	PART NO	QTY	DESCRIPTION
162	690267		BUSHING
162	690267		BUSHING
162	690267		BUSHING
162	690267		BUSHING
162	690267		BUSHING
203	690263		CRANK, Bell
203	690263		CRANK, Bell
203	690263		CRANK, Bell
203	690263		CRANK, Bell
203	690263		CRANK, Bell
205A	690810		SCREW -(Bell Crank)
205A	690810		SCREW -(Bell Crank)
205A	690810		SCREW -(Bell Crank)
205A	690810		SCREW -(Bell Crank)
205A	690810		SCREW -(Bell Crank)
206	691079		NUT, Governor Adjusting
206	691079		NUT, Governor Adjusting
206	691079		NUT, Governor Adjusting
206	691079		NUT, Governor Adjusting
206	691079		NUT, Governor Adjusting
206A	691584		NUT, Governor Adjusting
206A	691584		NUT, Governor Adjusting
206A	691584		NUT, Governor Adjusting
206A	691584		NUT, Governor Adjusting
206A	691584		NUT, Governor Adjusting
208	393613		ROD, Governor Control
208	393613		ROD, Governor Control
208	393613		ROD, Governor Control
208	393613		ROD, Governor Control
208	393613		ROD, Governor Control
209	691596		SPRING, Governor
209	691596		SPRING, Governor
209	691596		SPRING, Governor
209	691596		SPRING, Governor
209	691596		SPRING, Governor
212	691791		LINK, Throttle
212	691791		LINK, Throttle
212	691791		LINK, Throttle
212	691791		LINK, Throttle
212	691791		LINK, Throttle
227	690607		LEVER, Governor Control
227	690607		LEVER, Governor Control
227	690607		LEVER, Governor Control
227	690607		LEVER, Governor Control
227	690607		LEVER, Governor Control
232	690545		SPRING/LINK, Governor
232	690545		SPRING/LINK, Governor
232	690545		SPRING/LINK, Governor

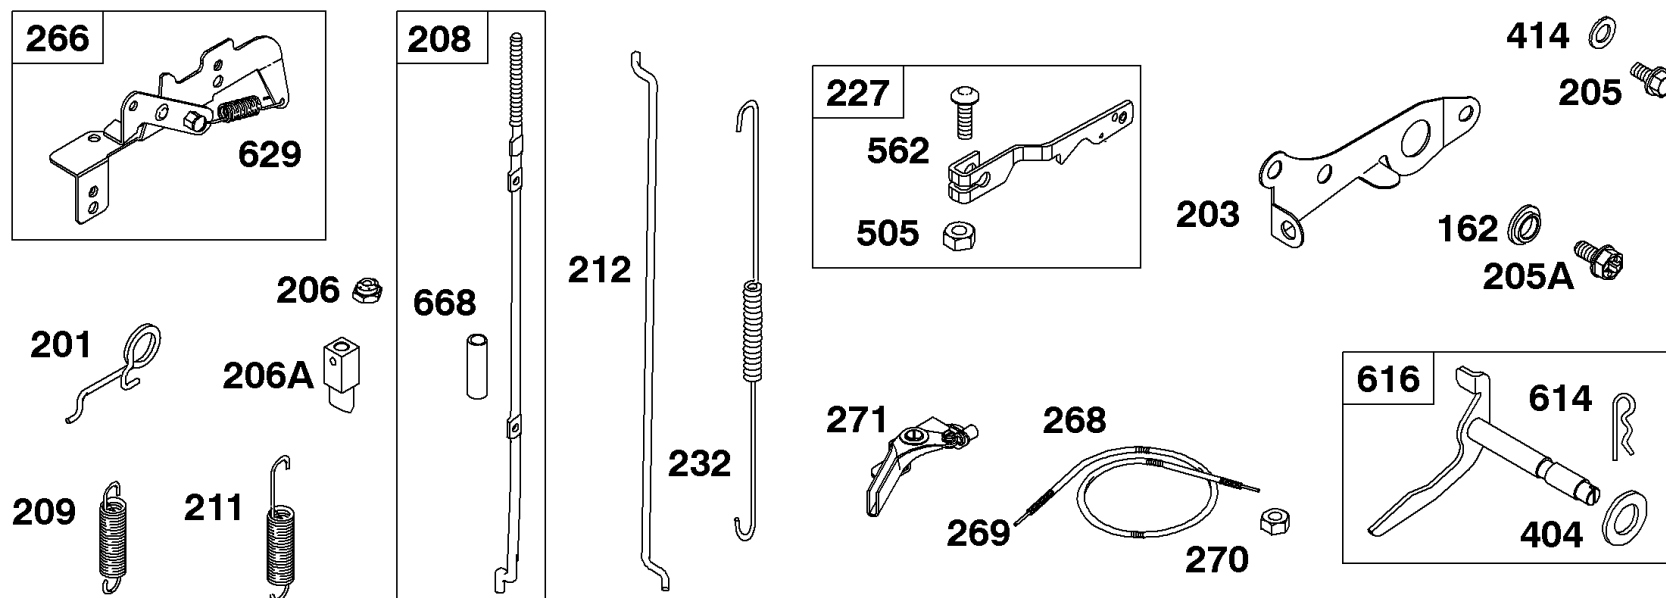 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
162	690267	Collar-Bell Crank	212	691791	Link-Throttle	268	691025	Casing-Control Wire
201	261027	Link-Air Vane			----- Note -----			(Cut to
		Used on Type No(s).			691595 Link-Throttle			Required Length)
		0234, 0705.			Used on Type No(s).	269	691026	Wire-Control
203	690263	Crank-Bell			0248, 0308, 0358,			(Cut to
205	691681	Screw			0638, 0707, 0770.			Required Length)
		(Bell Crank)	227	690607	Lever-Governor	270	691027	Nut
		Used on Type No(s).			Control			(Control Wire Casing)
		0136, 0139, 0204,			----- Note -----	271	691028	Lever-Control
		0228, 0234, 0248,			690616 Lever-			----- Note -----
		0328, 0678, 0705.			Governor Control			221987 Lever-Control
205A	690810	Screw			Used on Type No(s).			Used on Type No(s).
		(Bell Crank)			0611, 0630, 0647,			0678, 0705.
206	691079	Nut-Governor			0651, 0684, 0690,	404	690264	Washer
		Adjusting			0706, 0721, 0660,			(Governor Crank)
206A	691584	Nut-Governor			0671, 0675, 0681,	414	692810	Washer
		Adjusting			0683, 0685, 0689,			(Bell Crank)
208	393613	Rod-Governor Control			0692, 0694, 0697,			Used on Type No(s).
209	691596	Spring-Governor			0699, 0801, 2520,			0136, 0139, 0204,
		----- Note -----			2527, 2528, 2529,			0228, 0234, 0248,
		691789 Spring-			2550, 2561, 2581,			0328, 0678, 0705.
		Governor	232	690545	Spring-Governor Link	505	691251	Nut
		Used on Type No(s).			----- Note -----			(Governor Control
		0611, 0630, 0647,			692207 Spring-			Lever)
		0651, 0690, 0760,			Governor Link	562	92613	Bolt
		0781, 0801, 2520,			Used on Type No(s).			(Governor Control
		2527, 2528, 2529,			0248, 0308, 0358,			Lever)
		2550, 2581, 2582.			0638, 0707, 0770.	614	691620	Pin-Cotter
211	691790	Spring-Governed Idle	266	494554	Control-Throttle	616	291364	Crank-Governor
		Used on Type No(s).			----- Note -----	629	690538	Spring-Throttle Return
		0611, 0630, 0647,			299361 Control-			Used on Type No(s).
		0651, 0690, 0760,			Throttle			0234, 0631, 0632,
		0781, 0801, 2520,			(Dial Control)			0637, 0641, 0642,
		2527, 2528, 2529,			Used on Type No(s).			0705, 0803, 2580.
		2550, 2581, 2582.			0640, 0652, 0653,	668	690313	Spacer
					0665.			(Governor Control
								Rod)

Springs, Controls



REF NO	PART NO	QTY	DESCRIPTION
232	690545		SPRING/LINK, Governor
232	690545		SPRING/LINK, Governor
266	494554		CONTROL, Throttle
266	494554		CONTROL, Throttle
266	494554		CONTROL, Throttle
266	494554		CONTROL, Throttle
266	494554		CONTROL, Throttle
268	691025		CASING, Control Wire -(Cut To Required Length)
268	691025		CASING, Control Wire -(Cut To Required Length)
268	691025		CASING, Control Wire -(Cut To Required Length)
268	691025		CASING, Control Wire -(Cut To Required Length)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
270	691027		NUT -(Control Wire Casing)
270	691027		NUT -(Control Wire Casing)
270	691027		NUT -(Control Wire Casing)
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
271	691028		LEVER, Control
271	691028		LEVER, Control
271	691028		LEVER, Control
271	691028		LEVER, Control
404	690264		WASHER -(Governor Crank)
404	690264		WASHER -(Governor Crank)
404	690264		WASHER -(Governor Crank)
404	690264		WASHER -(Governor Crank)
404	690264		WASHER -(Governor Crank)
505	691251		NUT -(Governor Control Lever)
505	691251		NUT -(Governor Control Lever)
505	691251		NUT -(Governor Control Lever)

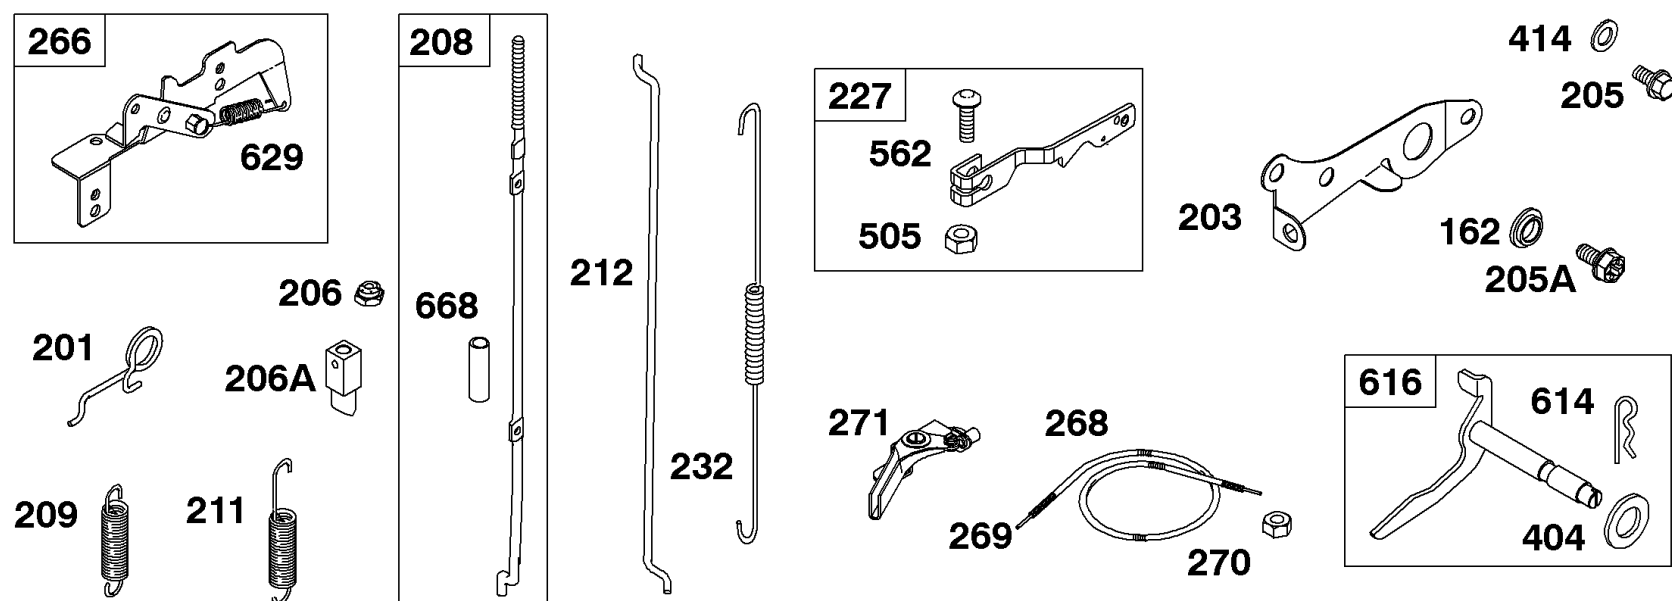 

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
162	690267	Collar-Bell Crank	212	691791	Link-Throttle	268	691025	Casing-Control Wire (Cut to Required Length)
201	261027	Link-Air Vane			----- Note -----	269	691026	Wire-Control (Cut to Required Length)
		Used on Type No(s). 0234, 0705.			691595 Link-Throttle	270	691027	Nut (Control Wire Casing)
203	690263	Crank-Bell			Used on Type No(s). 0248, 0308, 0358, 0638, 0707, 0770.	271	691028	Lever-Control
205	691681	Screw (Bell Crank)	227	690607	Lever-Governor Control			----- Note -----
		Used on Type No(s). 0136, 0139, 0204, 0228, 0234, 0248, 0328, 0678, 0705.			----- Note -----			221987 Lever-Control
205A	690810	Screw (Bell Crank)			Used on Type No(s). 0611, 0630, 0647, 0651, 0684, 0690, 0706, 0721, 0660, 0671, 0675, 0681, 0683, 0685, 0689, 0692, 0694, 0697, 0699, 0801, 2520, 2527, 2528, 2529, 2550, 2561, 2581, 2582.	404	690264	Washer (Governor Crank)
206	691079	Nut-Governor Adjusting	232	690545	Spring-Governor Link	414	692810	Washer (Bell Crank)
206A	691584	Nut-Governor Adjusting			----- Note -----			Used on Type No(s). 0136, 0139, 0204, 0228, 0234, 0248, 0328, 0678, 0705.
208	393613	Rod-Governor Control			692207 Spring-Governor Link	505	691251	Nut (Governor Control Lever)
209	691596	Spring-Governor			Used on Type No(s). 0248, 0308, 0358, 0638, 0707, 0770.	562	92613	Bolt (Governor Control Lever)
		----- Note -----	266	494554	Control-Throttle	614	691620	Pin-Cotter
		691789 Spring-Governor			----- Note -----	616	291364	Crank-Governor
		Used on Type No(s). 0611, 0630, 0647, 0651, 0690, 0760, 0781, 0801, 2520, 2527, 2528, 2529, 2550, 2581, 2582.			299361 Control-Throttle (Dial Control)	629	690538	Spring-Throttle Return
211	691790	Spring-Governed Idle			Used on Type No(s). 0640, 0652, 0653, 0665.			Used on Type No(s). 0234, 0631, 0632, 0637, 0641, 0642, 0705, 0803, 2580.
		Used on Type No(s). 0611, 0630, 0647, 0651, 0690, 0760, 0781, 0801, 2520, 2527, 2528, 2529, 2550, 2581, 2582.				668	690313	Spacer (Governor Control Rod)

Springs, Controls



REF NO	PART NO	QTY	DESCRIPTION
505	691251		NUT -(Governor Control Lever)
505	691251		NUT -(Governor Control Lever)
562	92613		BOLT -(Governor Lever)
562	92613		BOLT -(Governor Lever)
562	92613		BOLT -(Governor Lever)
562	92613		BOLT -(Governor Lever)
562	92613		BOLT -(Governor Lever)
614	691620		PIN, Cotter
614	691620		PIN, Cotter
614	691620		PIN, Cotter
614	691620		PIN, Cotter
614	691620		PIN, Cotter
616	291364		CRANK, Governor
616	291364		CRANK, Governor
616	291364		CRANK, Governor
616	291364		CRANK, Governor
616	291364		CRANK, Governor
668	690313		SPACER -(Governor Control Rod)
668	690313		SPACER -(Governor Control Rod)
668	690313		SPACER -(Governor Control Rod)
668	690313		SPACER -(Governor Control Rod)
668	690313		SPACER -(Governor Control Rod)

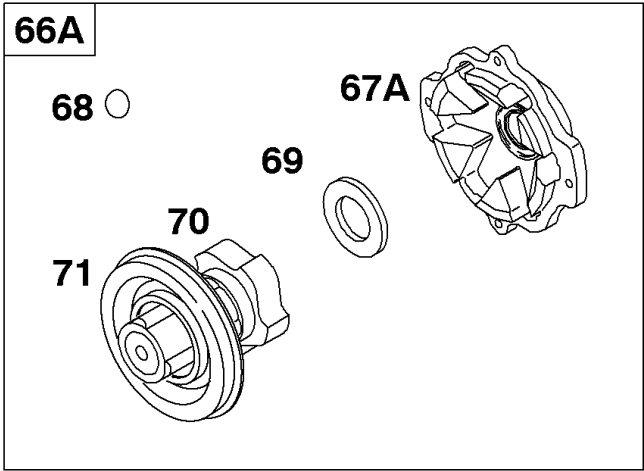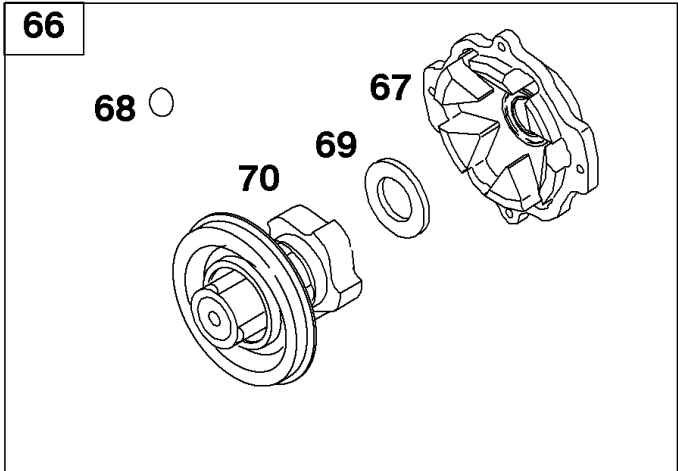  

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
66	393127S	Clutch-Starter	69	690271	Washer (Starter Clutch)	71	691359	Cover-Ratchet
66A	399671	Clutch-Starter (Sealed)	69A	690260	Washer (Starter Clutch)	257	690309	Screw (Starter Clutch)
67	690542	Housing-Clutch	69B	690277	Washer (Starter Clutch)			
67A	394897	Housing-Clutch	70	691945	Ratchet-Clutch			
68	691604	Ball-Clutch						

Starter Clutch

REF NO	PART NO	QTY	DESCRIPTION
66	393127S		CLUTCH, Starter
66	393127S		CLUTCH, Starter
66	393127S		CLUTCH, Starter
66	393127S		CLUTCH, Starter
66	393127S		CLUTCH, Starter
66A	399671		CLUTCH-STARTER -(Sealed)
66A	399671		CLUTCH-STARTER -(Sealed)
66A	399671		CLUTCH-STARTER -(Sealed)
66A	399671		CLUTCH-STARTER -(Sealed)
66A	399671		CLUTCH-STARTER -(Sealed)
67	690542		HOUSING, Clutch
67	690542		HOUSING, Clutch
67	690542		HOUSING, Clutch
67	690542		HOUSING, Clutch
67	690542		HOUSING, Clutch
67A	394897		HOUSING, Clutch
67A	394897		HOUSING, Clutch
67A	394897		HOUSING, Clutch
67A	394897		HOUSING, Clutch
67A	394897		HOUSING, Clutch
68	691604		BALL, Clutch
68	691604		BALL, Clutch
68	691604		BALL, Clutch
68	691604		BALL, Clutch
68	691604		BALL, Clutch
69	690271		WASHER -(Starter Clutch)
69	690271		WASHER -(Starter Clutch)
69	690271		WASHER -(Starter Clutch)
69	690271		WASHER -(Starter Clutch)
69	690271		WASHER -(Starter Clutch)
69A	690260		WASHER -(Starter Clutch)
69A	690260		WASHER -(Starter Clutch)
69A	690260		WASHER -(Starter Clutch)
69A	690260		WASHER -(Starter Clutch)
69A	690260		WASHER -(Starter Clutch)
69B	690277		WASHER -(Starter Clutch)
69B	690277		WASHER -(Starter Clutch)
69B	690277		WASHER -(Starter Clutch)

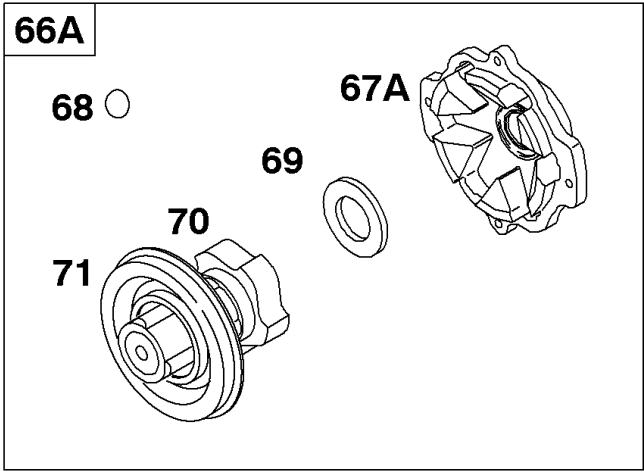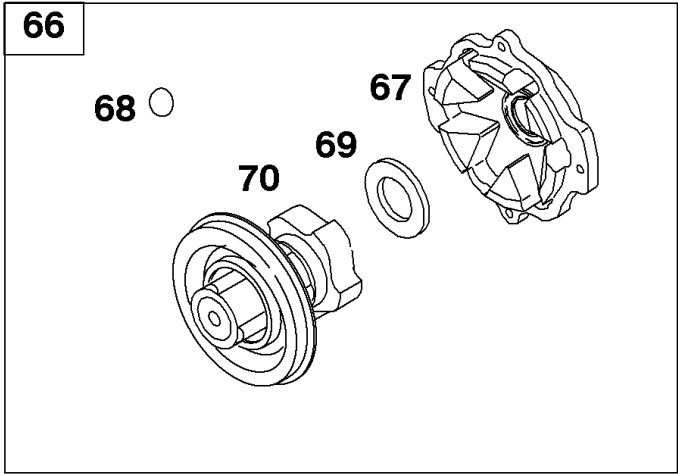  

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
66	393127S	Clutch-Starter	69	690271	Washer (Starter Clutch)	71	691359	Cover-Ratchet
66A	399671	Clutch-Starter (Sealed)	69A	690260	Washer (Starter Clutch)	257	690309	Screw (Starter Clutch)
67	690542	Housing-Clutch	69B	690277	Washer (Starter Clutch)			
67A	394897	Housing-Clutch	70	691945	Ratchet-Clutch			
68	691604	Ball-Clutch						

Starter Clutch

REF NO	PART NO	QTY	DESCRIPTION
69B	690277		WASHER -(Starter Clutch)
69B	690277		WASHER -(Starter Clutch)
70	691945		RATCHET-CLUTCH
70	691945		RATCHET-CLUTCH
70	691945		RATCHET-CLUTCH
70	691945		RATCHET-CLUTCH
70	691945		RATCHET-CLUTCH
71	691359		COVER, Ratchet
71	691359		COVER, Ratchet
71	691359		COVER, Ratchet
71	691359		COVER, Ratchet
71	691359		COVER, Ratchet
257	690309		SCREW -(Starter Clutch)
257	690309		SCREW -(Starter Clutch)
257	690309		SCREW -(Starter Clutch)
257	690309		SCREW -(Starter Clutch)
257	690309		SCREW -(Starter Clutch)

