 




Parts Manual

Mfg. No: 386777-0155-B5



Model Components	Page
Air Cleaner Group.	4
Alternator Group.	6
Blower Housing Group.	8
Carburetor and Fuel Supply Group.	10
Controls Group.	12
Crankcase Cover/Sump Group.	14
Crankshaft Group.	18
Cylinder Group.	20
Cylinder Head Group.	22
Flywheel, Ignition, and Starter Group.	26
Lubrication Group.	28
Model 29, 30, 35 & 38 Engine Accessories Catalog.	30
Maintenance Kits.	31
Lubrication.	33
Starter Motor Side Outlet Mufflers.	35
Oil Filter Side Outlet Mufflers.	37
Oil Filter Side Outlet Manifolds.	39
Starter Motor Side Outlet Manifolds.	41
Mufflers.	43
Center Outlet Mufflers.	45
Muffler Guards and Shields.	47
Spark Arrestors and Deflectors.	49
Muffler Mounting Hardware.	51
Flywheel and Air Intake Guards.	53
PTO.	55
Electrical.	57
Speed Control.	59

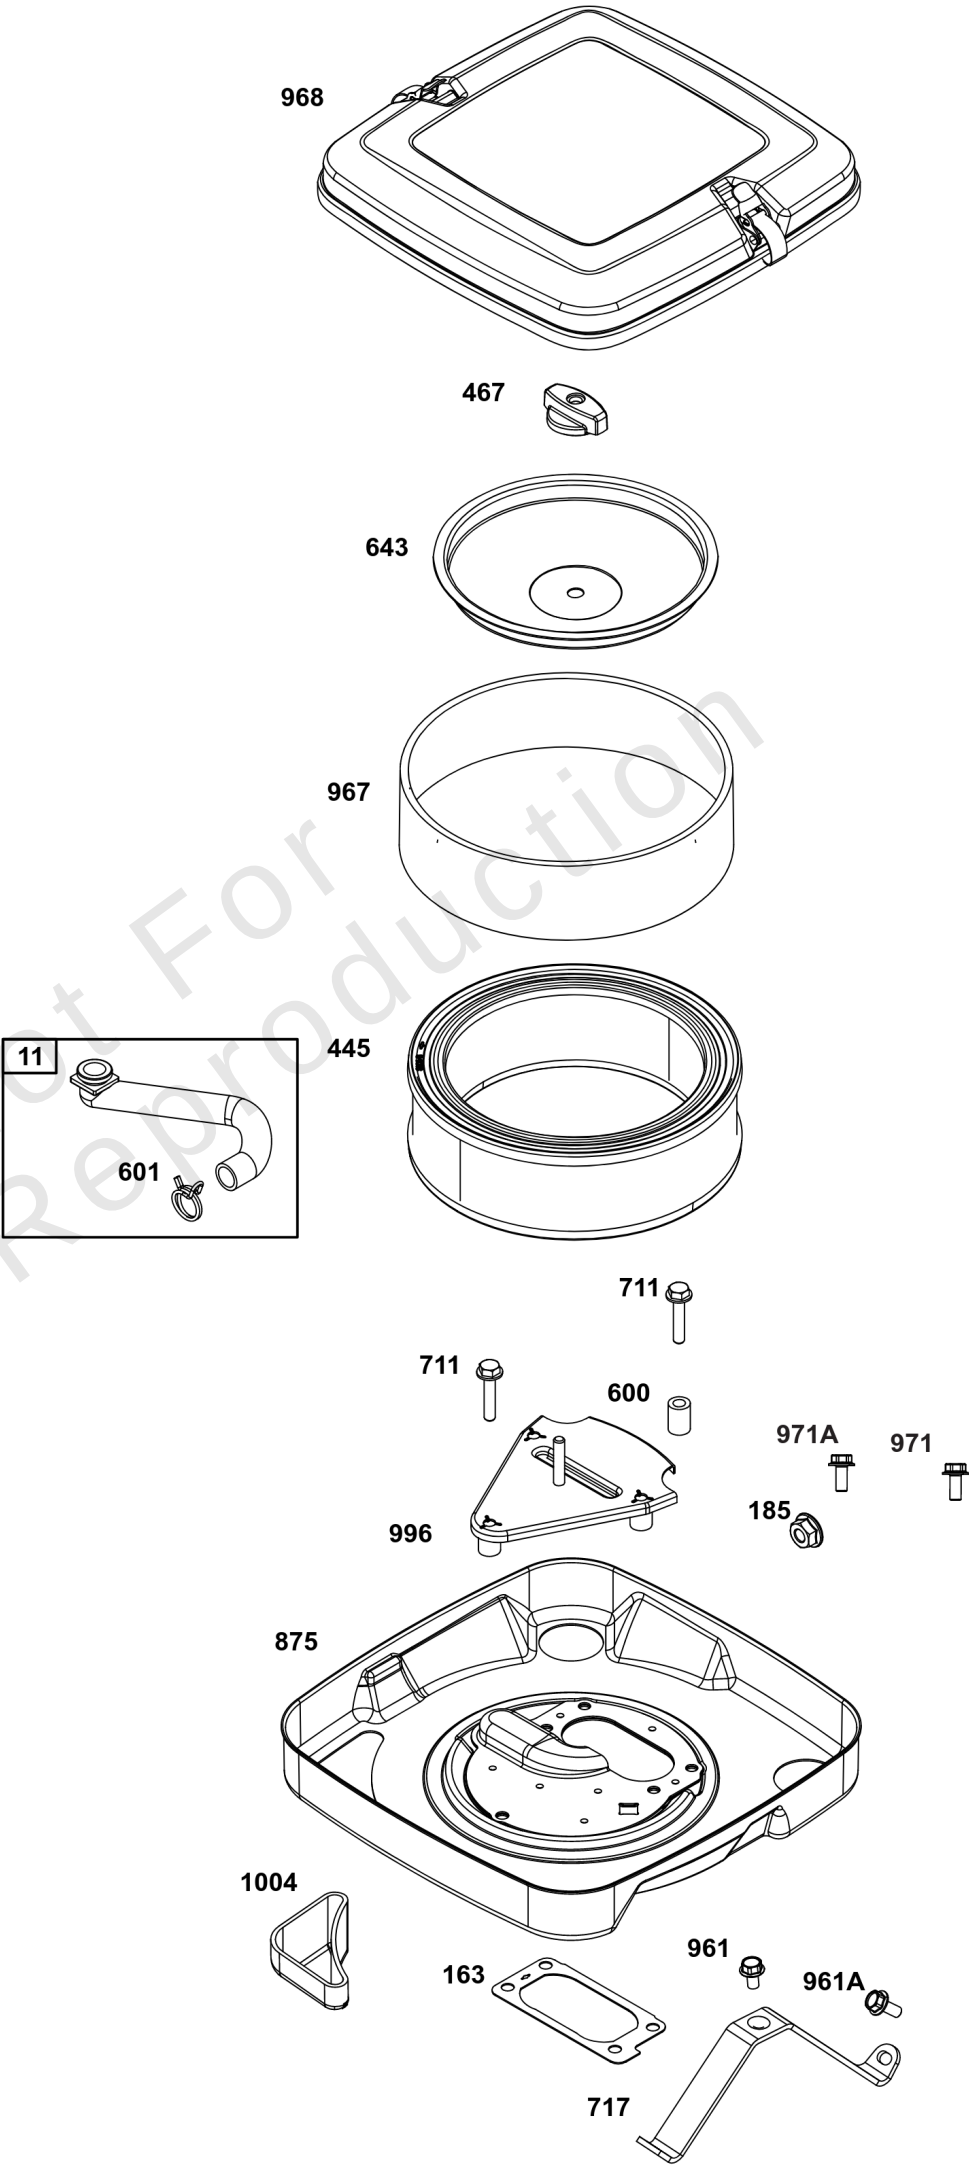

Air Cleaner Group

REF NO	PART NO	QTY	DESCRIPTION
11	806379	1	TUBE, Breather
163	692087	1	GASKET, Air Cleaner
185	690939	2	NUT
445	692519	1	FILTER, A/C Cartridge
467	846431	1	KNOB, Air Cleaner Cover
600	845213	2	SPACER, Air Cleaner
601	845268	1	CLAMP, Hose
601	691145	2	CLAMP, Hose
643	844932	1	RETAINER, Air Cleaner
711	691492	5	SCREW -(Carburetor Shield)
717	806440	1	STRAP/STUD, Air Cleaner Mounting
875	808676	1	BASE, Air Cleaner
961	841233	1	SCREW -(Air Cleaner Bracket)
961A	807084	2	SCREW -(Air Cleaner Bracket)
967	692520	1	FILTER, Pre Cleaner
968	808654	1	COVER, Air Cleaner
971	807084	1	SCREW -(Air Cleaner Base to Carburetor/Throttle Body)
971A	841853	1	SCREW -(Air Cleaner Base to Carburetor/Throttle Body)
996	845212	1	SHIELD, Carburetor
1004	690865	1	DUCT, Air

  
1119

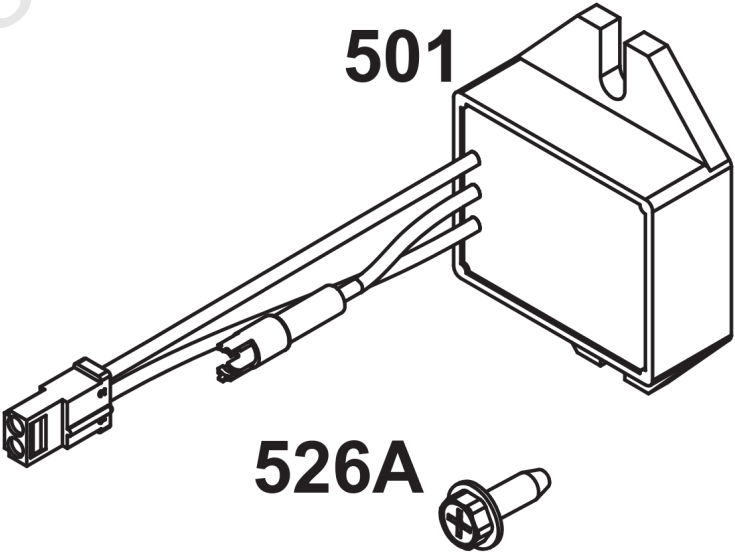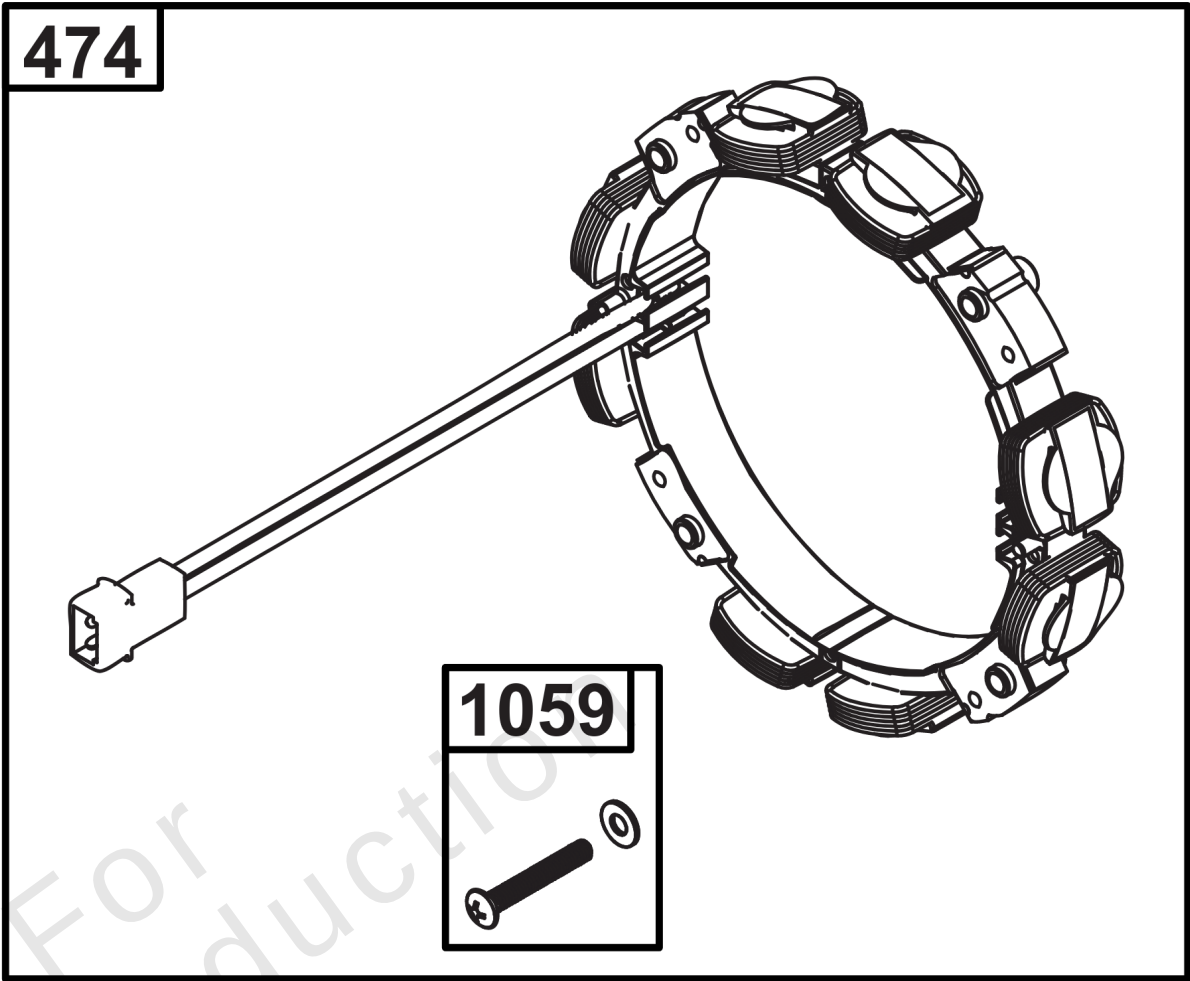

Alternator Group


REF NO	PART NO	QTY	DESCRIPTION
474	592829	1	ALTERNATOR
501	794360	1	REGULATOR
526A	690717	2	SCREW -(Regulator)
1059	698516	1	KIT, Screw/Washer
1119	691552	4	SCREW -(Alternator)

 Not For Reproduction

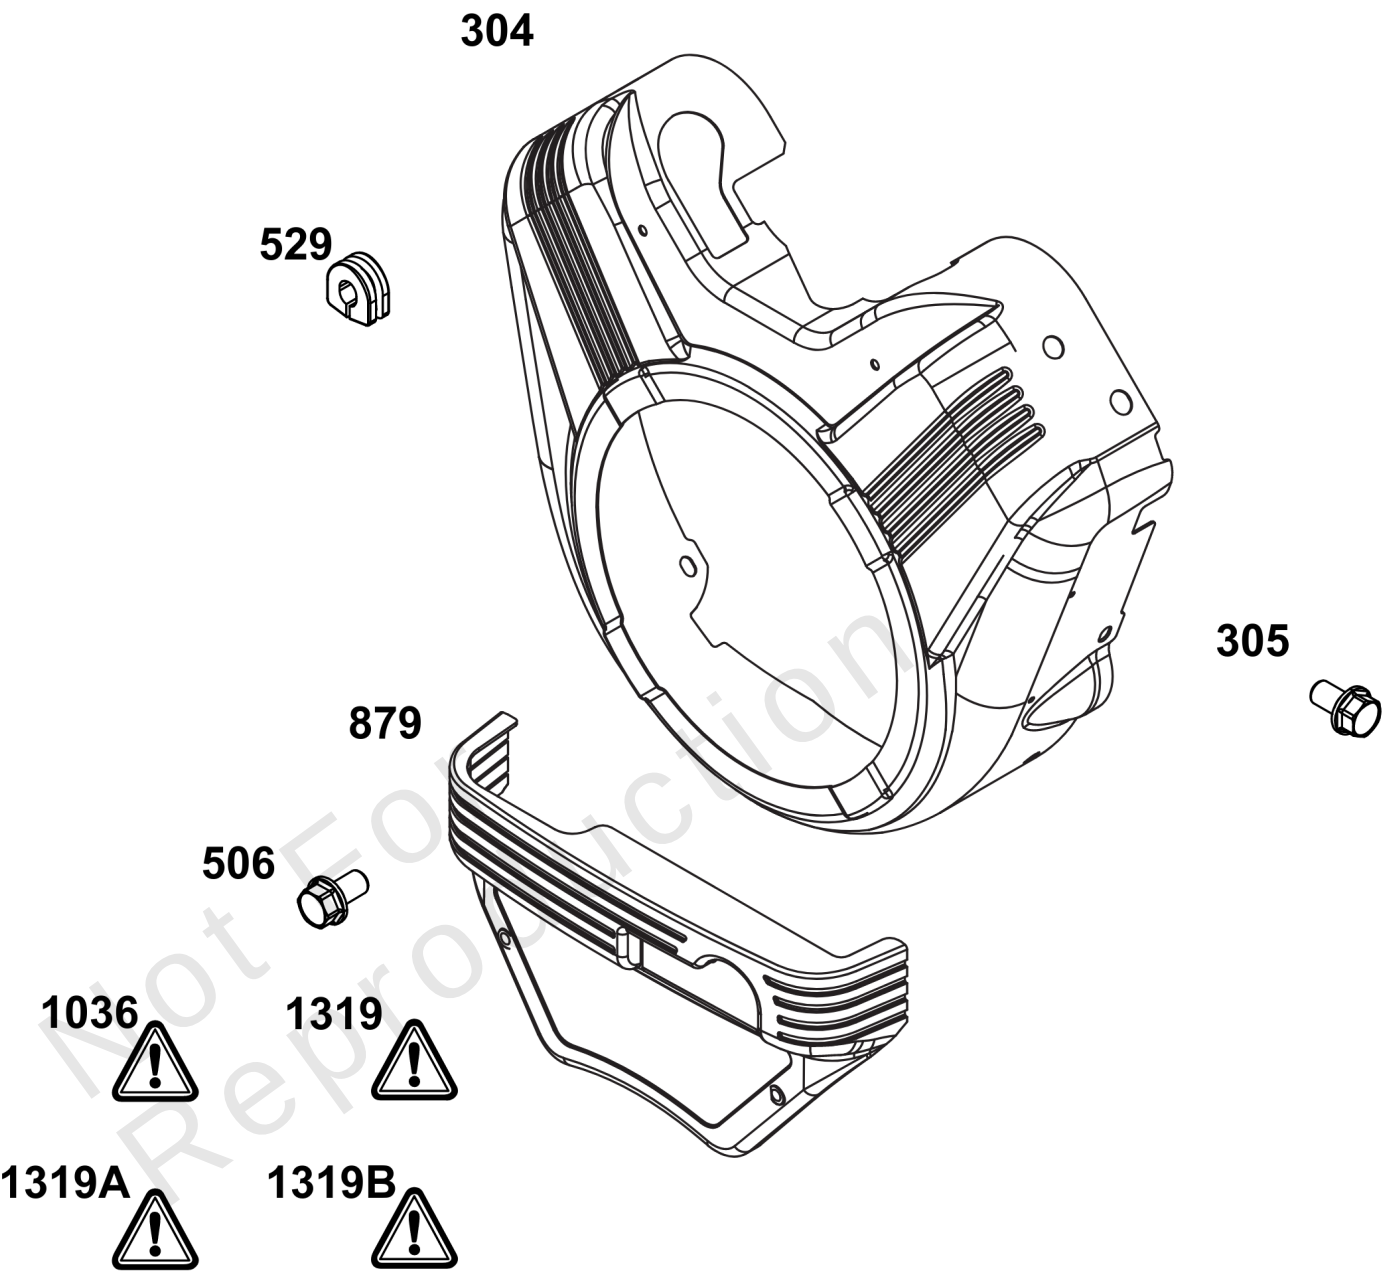


Blower Housing Group

REF NO	PART NO	QTY	DESCRIPTION
304	844154	1	HOUSING, Blower
305	692056	1	SCREW -(Blower Housing)
506	807120	2	SCREW -(Carburetor/EFI Cover)
529	690744	2	GROMMET
879	807460	1	COVER, Carburetor/EFI
1036	-----	1	LABEL, Emissions -(Available from a Briggs & Stratton Authorized Dealer)
1319	794467	1	LABEL, Warning -(REQUIRED When Replacing Parts With Warning Labels Affixed)
1319A	797669	1	LABEL, Warning -(REQUIRED When Replacing Parts With Warning Labels Affixed)
1319B	278911GS	1	LABEL, Warning -(REQUIRED When Replacing Parts With Warning Labels Affixed)

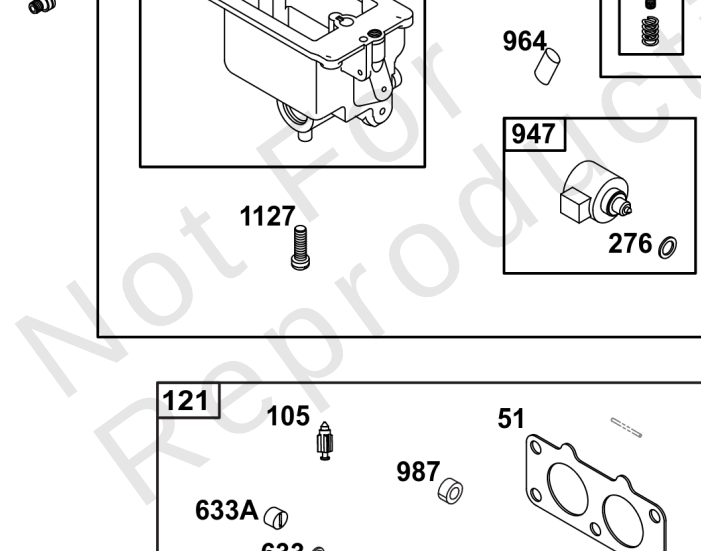 

Carburetor and Fuel Supply Group

REF NO	PART NO	QTY	DESCRIPTION
51	690950	2	GASKET, Intake -(Part information located in Cylinder Head Group.)
98	809716	1	KIT, Idle Speed
104	690739	1	PIN, Float Hinge
105	809759	1	VALVE, Float Needle
117	809635	2	JET, Main
118A	842153	2	JET, Main -(High Altitude 5000 Feet)
118A	843783	2	JET, Main -(High Altitude 6500 Feet)
118A	809708	2	JET, Main -(High Altitude 9000 Feet and Above)
121	843787	1	KIT, Carburetor Overhaul -(Service Kits may include extra parts not specific to this engine.)
122	690870	1	SPACER, Carburetor
125	844370	1	CARBURETOR
130	809642	2	VALVE, Throttle
131	809718	1	KIT, Throttle Shaft
133	809637	1	FLOAT, Carburetor
137	809645	1	GASKET, Float Bowl
141	843785	6	KIT, Choke Shaft
147	845727	4	JET, Pilot
187	846584	1	LINE, Fuel
240	845125	1	FILTER, Fuel
276	806476	2	WASHER, Sealing
385	807084	2	SCREW -(Fuel Pump)
387	597338	1	PUMP, Fuel
587	690423	1	CLAMP, Tube
601	691038	6	CLAMP, Hose
628	692062	2	SCREW -(Fuel Pump Bracket)
628A	806660	1	SCREW -(Fuel Pump Bracket)
633	809638	1	SEAL, Choke/Throttle Shaft
633A	809644	1	SEAL, Choke/Throttle Shaft
633B	809641	2	SEAL, Choke/Throttle Shaft
788	691559	1	BRACKET, Fuel Pump
947	842109	2	SOLENOID, Fuel
964	809640	1	CAP, Connector
975A	844947	1	BOWL, Float
987	809639	1	SEAL, Choke/Throttle Shaft
1127	809715	4	SCREW -(Float Bowl to Carburetor Body)

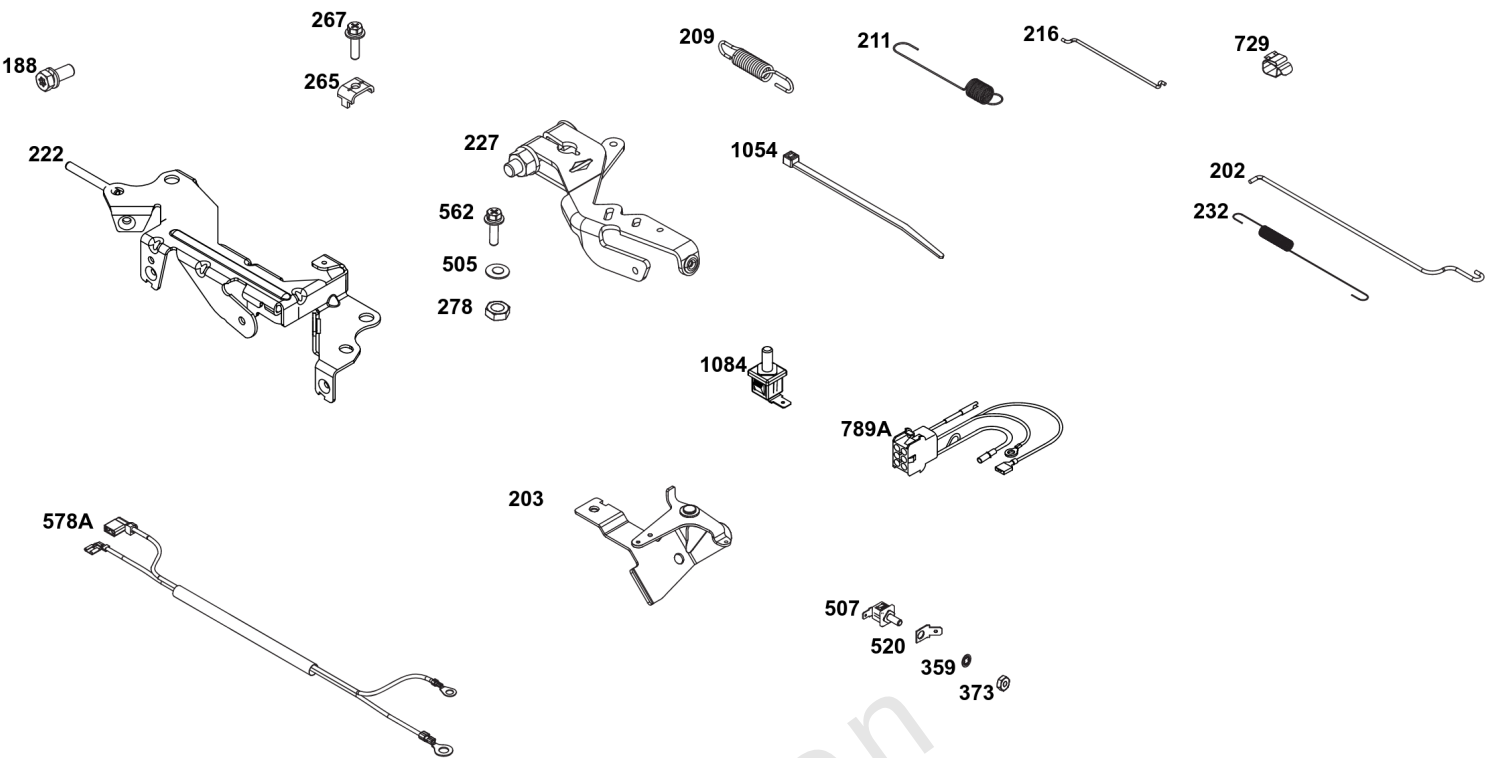 




Not For
Reproduction

Controls Group

REF NO	PART NO	QTY	DESCRIPTION
188	691902	4	SCREW -(Control Bracket)
202	690867	1	LINK, Mechanical Governor
209	692071	1	SPRING, Governor
211	692069	1	SPRING, Governed Idle
216	690871	1	LINK, Choke
222	808454	1	BRACKET, Control
203	808753	1	CRANK, Bell
227	690236	1	LEVER, Governor Control
232	690874	1	SPRING/LINK, Governor
265	691024	3	CLAMP, Casing
267	841552	3	SCREW -(Casing Clamp)
278	842122	1	WASHER -(Governor Control Lever)
359	691077	1	WASHER -(Ground Terminal)
373	845823	1	NUT -(Ground Terminal)
505	844752	1	NUT -(Governor Control Lever)
507	691972	1	INSULATOR
520	691084	1	TERMINAL, Ground
562	690239	1	BOLT -(Governor Control Lever)
578A	844547	1	HARNESS, Wiring
729	593826	1	CLIP, Wire
789A	844914	1	HARNESS, Wiring
1054	280275	2	TIE, Cable
1084	848341	1	CONNECTOR, Terminal



Crankcase Cover/Sump Group

   Mfg. No: 386777-0155-B5

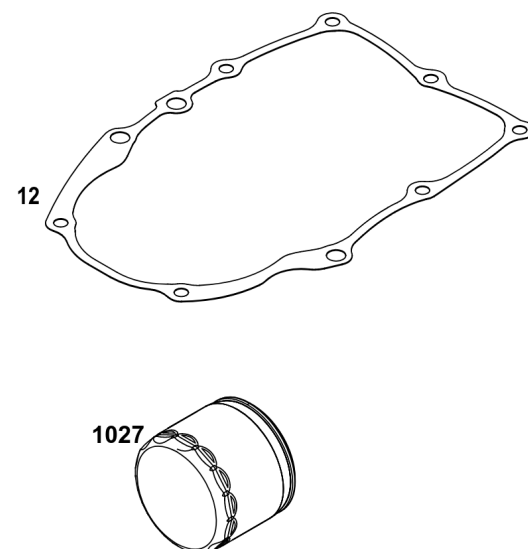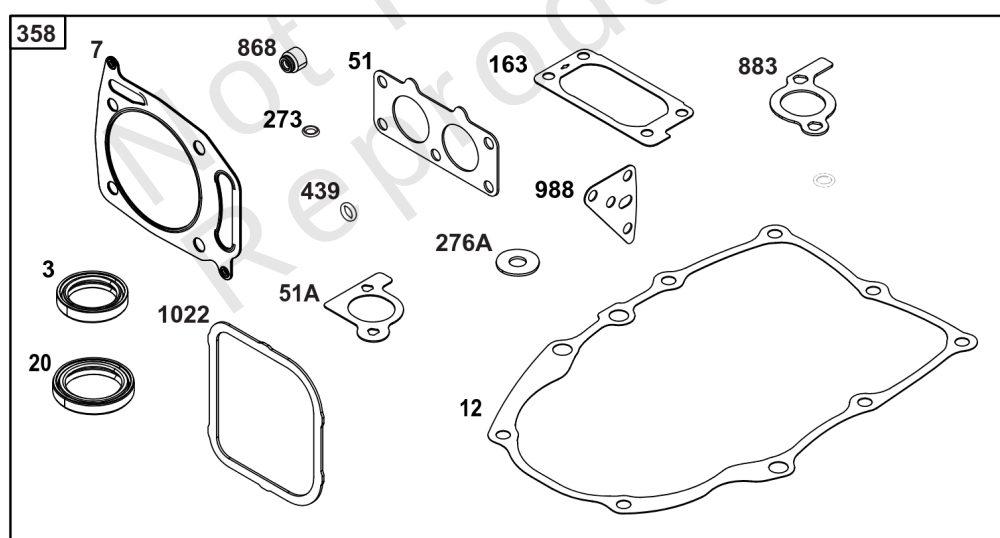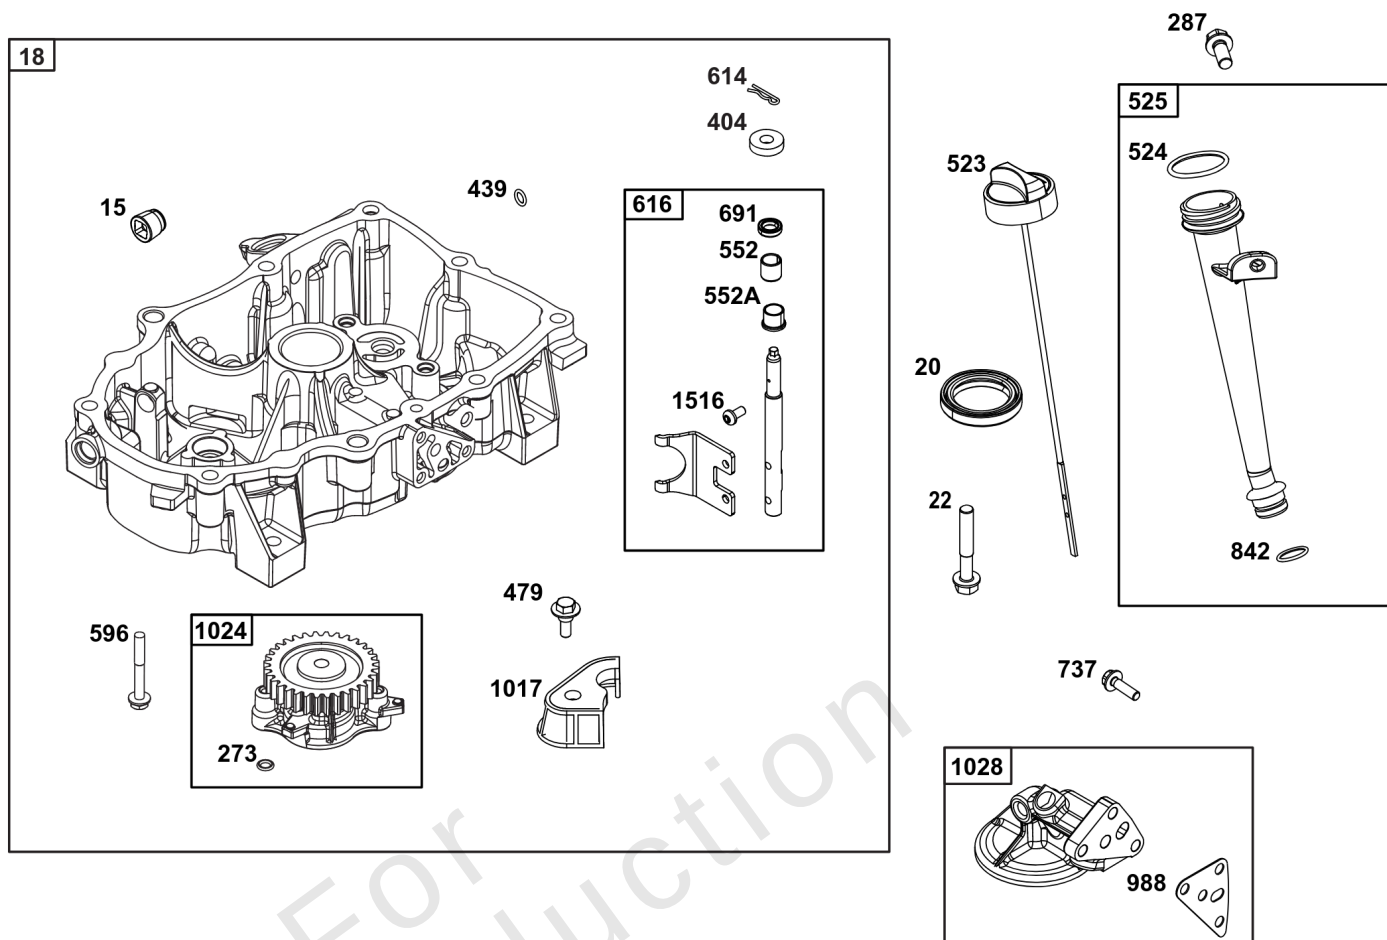

Crankcase Cover/Sump Group






REF NO	PART NO	QTY	DESCRIPTION
3	-----	1	SEAL, Oil -(Part information located in Cylinder Group.)
7	-----	2	GASKET, Cylinder Head -(Part information located in Cylinder Head Group.)
12	846487	1	GASKET, Crankcase
15	691680	3	PLUG, Oil Drain
18	84002118	1	COVER, Crankcase
20	805049S	1	SEAL, Oil -(PTO Side)
22	807362	9	SCREW -(Crankcase Cover/Sump)
51	-----	2	GASKET, Intake -(Part information located in Cylinder Head Group.)
51A	-----	2	GASKET, Intake -(Part information located in Cylinder Head Group.)
163	-----	1	GASKET, Air Cleaner -(Part information located in Air Cleaner Group.)
273	-----	2	SEAL, O-Ring -(Part information located in Lubrication Group.)
276A	-----	4	WASHER, Sealing -(Part information located in Cylinder Head Group.)
287	-----	1	SCREW -(Part information located in Lubrication Group.)
358	-----	1	GASKET SET, Engine -(Part information located in Cylinder Group.)
404	690704	1	WASHER -(Governor Crank)
439	692154	1	O-RING, Oil Gallery -(Crankcase Cover/Sump or Cylinder Assembly)
479	-----	1	SCREW -(Part information located in Lubrication Group.)
523	-----	1	DIPSTICK -(Part information located in Lubrication Group.)
524	-----	1	SEAL, O-Ring -(Part information located in Lubrication Group.)
525	-----	1	TUBE, Dipstick -(Part information located in Lubrication Group.)
552	690701	1	BUSHING, Governor Crank
552A	806686	1	BUSHING, Governor Crank
596	-----	2	SCREW -(Part information located in Lubrication Group.)
614	691550	1	PIN, Cotter
616	806685	1	CRANK, Governor
691	842826	1	SEAL, Governor Shaft
737	-----	1	SCREW -(Part information located in Lubrication Group.)
842	-----	1	SEAL, O-Ring -(Part information located in Lubrication Group.)
868	-----	1	SEAL, Valve -(Part information located in Cylinder Head Group.)
883	-----	2	GASKET, Exhaust -(Part information located in Cylinder Head Group.)
988	-----	1	GASKET, Oil Adapter -(Part information located in Lubrication Group.)
1017	-----	1	SCREEN, Oil Pump -(Part information located in Lubrication Group.)
1022	-----	2	GASKET, Rocker Cover -(Part information located in Cylinder Head Group.)

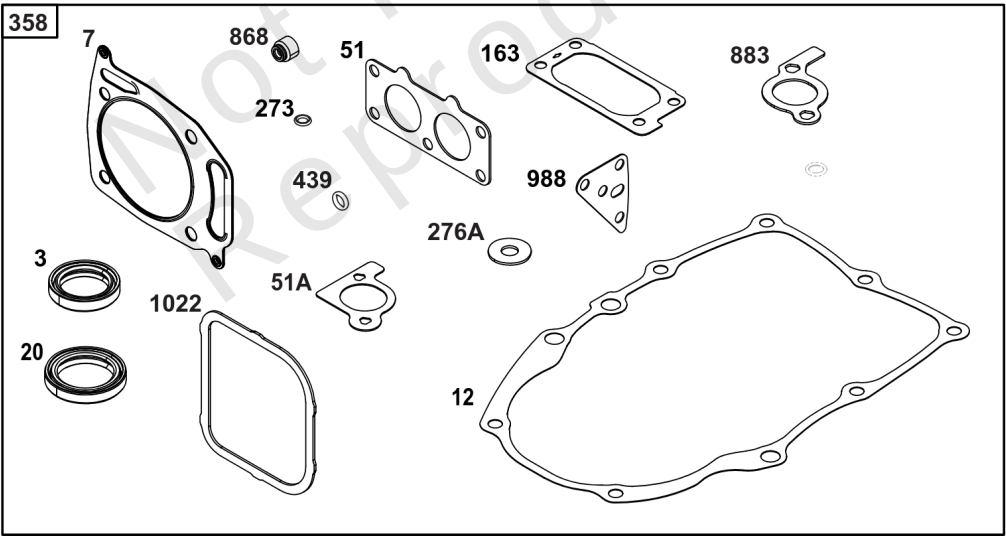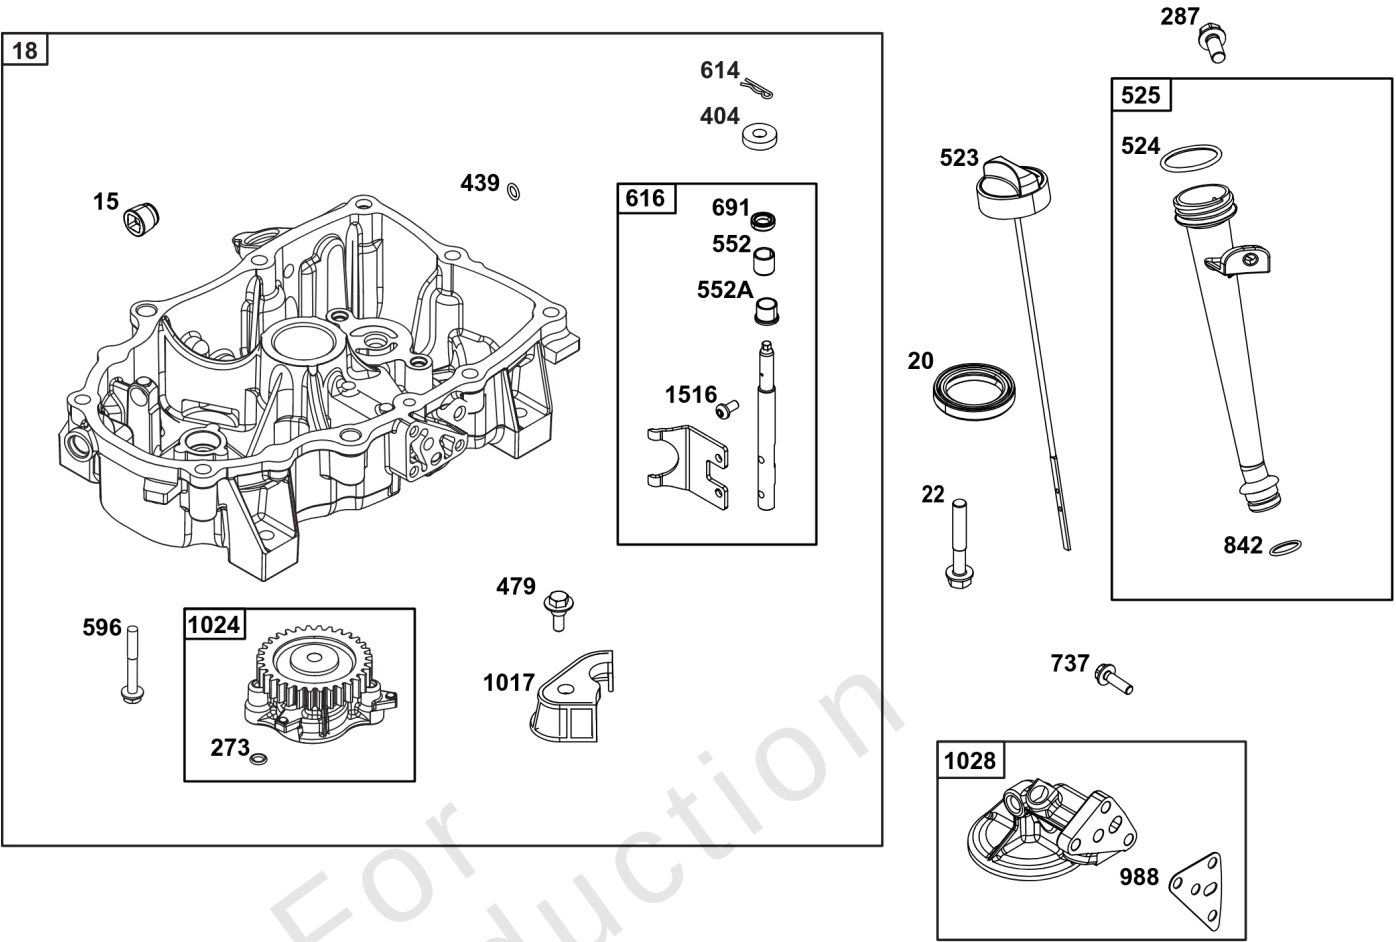  

Crankcase Cover/Sump Group





REF NO	PART NO	QTY	DESCRIPTION
1024	-----	1	PUMP, Oil -(Part information located in Lubrication Group.)
1027	-----	1	FILTER, Oil
1028	-----	1	ADAPTER, Oil Filter -(Part information located in Lubrication Group.)
1516	846459	2	SCREW -(Governor Crank)

     Not For Reproduction

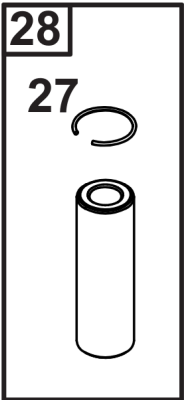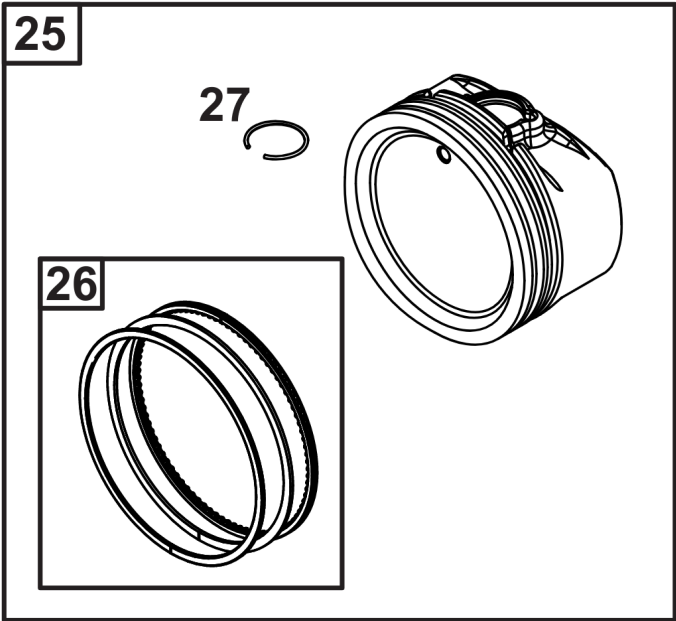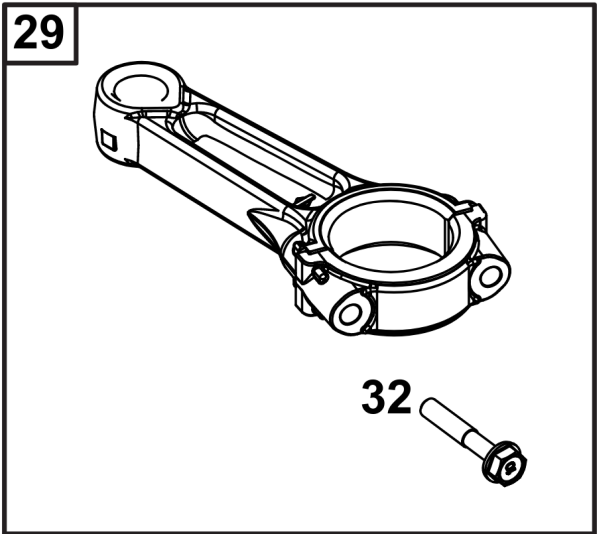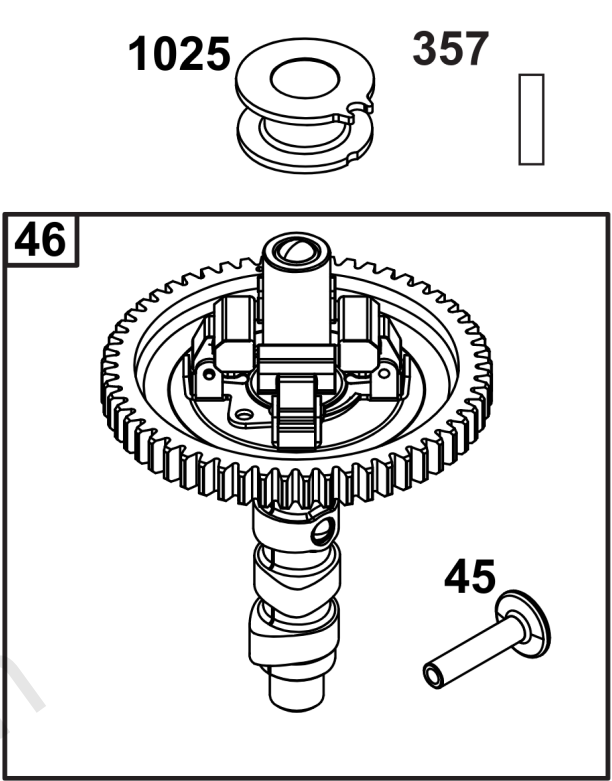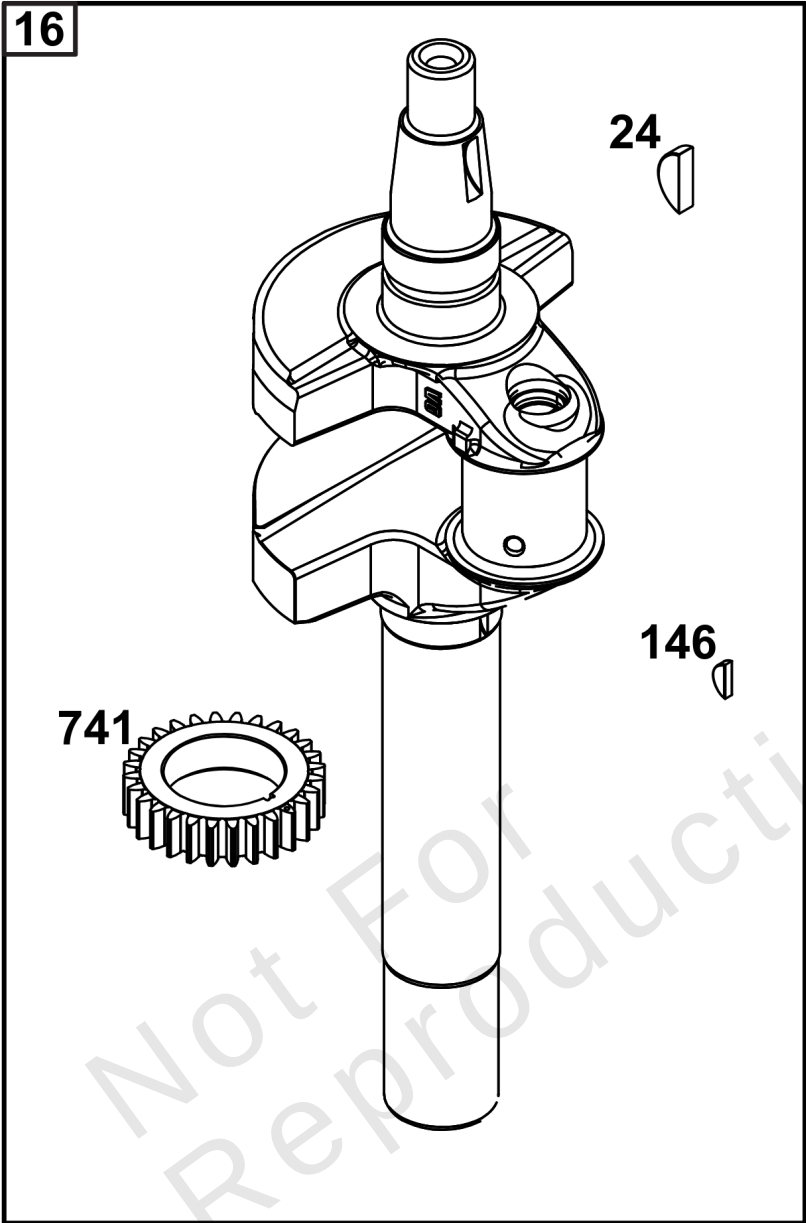


Crankshaft Group

REF NO	PART NO	QTY	DESCRIPTION
16	84004536	1	CRANKSHAFT
24	808095	1	KEY, Flywheel
25	843805	2	PISTON ASSEMBLY -(Standard)
25	844877	1	PISTON ASSEMBLY -(.020" Oversize)
26	843806	2	SET, Ring -(Standard)
26	843824	1	SET, Ring -(.020" Oversize)
27	690683	4	LOCK, Piston Pin
28	593650	2	PIN, Piston
29	807900S	2	ROD, Connecting
32	690698	4	SCREW -(Connecting Rod)
45	-----	4	TAPPET, Valve -(Part information located in Cylinder Head Group.)
46	690927	1	CAMSHAFT
146	691639	1	KEY, Woodruff
357	691483	1	KEY, Drive Pulley
741	846085	1	GEAR, Timing
1025	690689	1	SPOOL, Governor

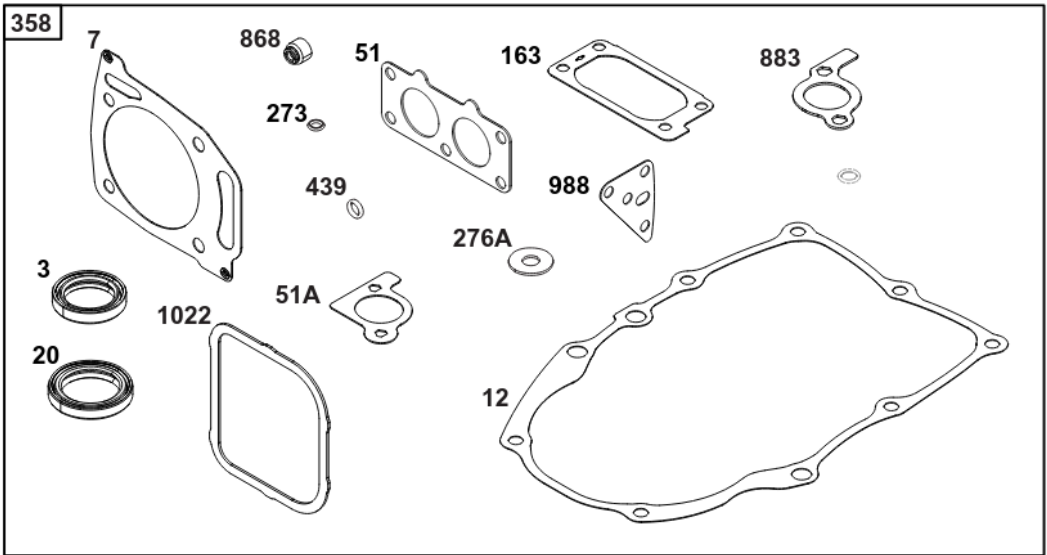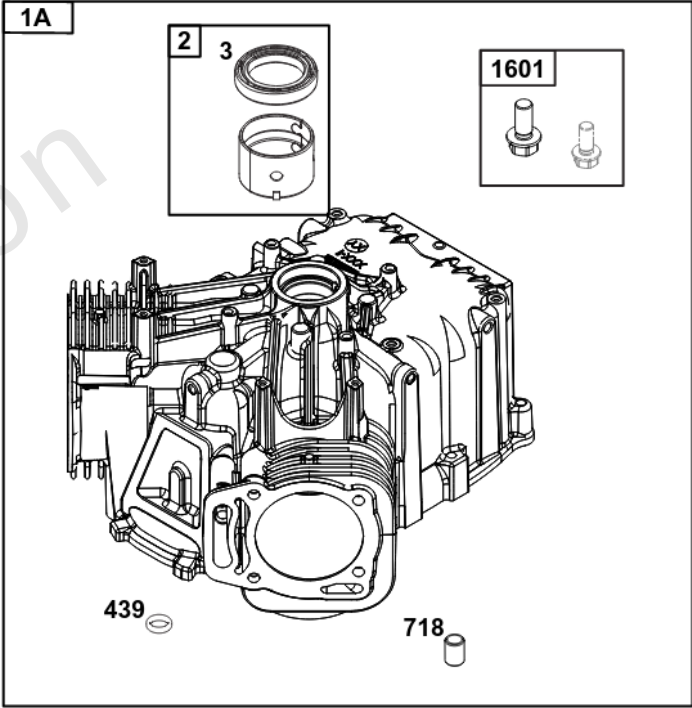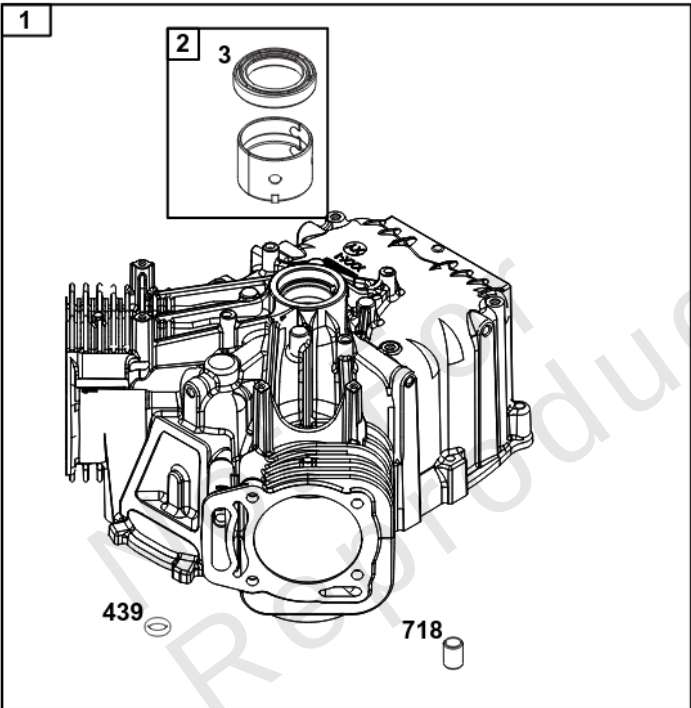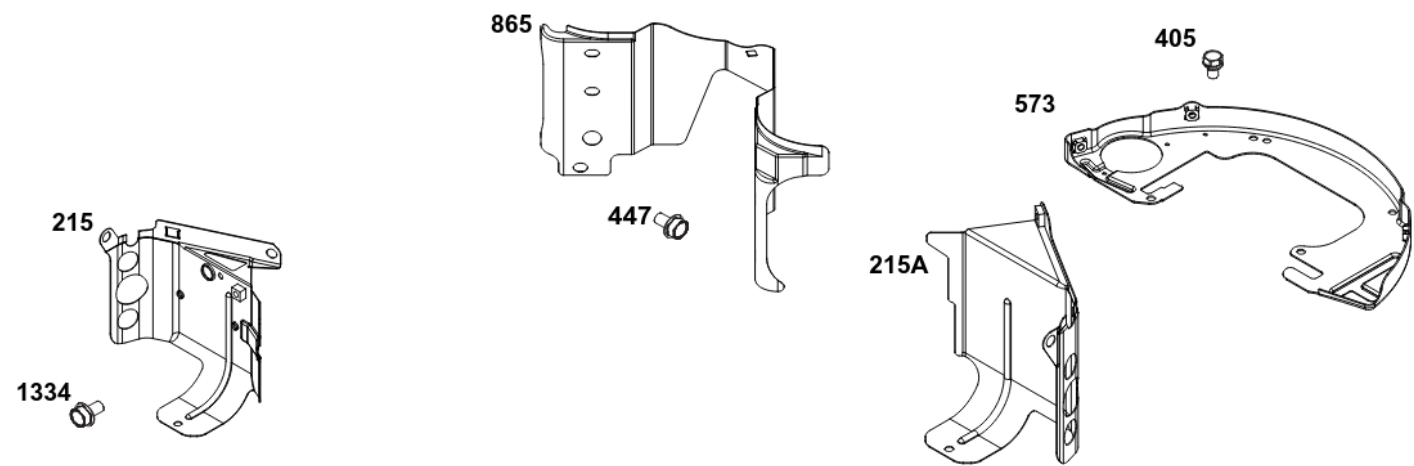    


Cylinder Group

REF NO	PART NO	QTY	DESCRIPTION
1	84004621	1	CYLINDER ASSEMBLY
1A	84013599	1	CYLINDER ASSEMBLY
2	808534	1	KIT, Bushing/Seal -(Magneto Side)
3	805101S	1	SEAL, Oil -(Magneto Side)
7	-----	2	GASKET, Cylinder Head -(Part information located in Cylinder Head Group.)
12	-----	1	GASKET, Crankcase -(Part information located in Crankcase Cover/Sump Group.)
15	-----	3	PLUG, Oil Drain -(Part information located in Crankcase Cover/Sump Group.)
20	-----	1	SEAL, Oil -(Part information located in Crankcase Cover/Sump Group.)
22	-----	9	SCREW -(Part information located in Crankcase Cover/Sump Group.)
51	-----	2	GASKET, Intake -(Part information located in Cylinder Head Group.)
51A	-----	2	GASKET, Intake -(Part information located in Cylinder Head Group.)
163	-----	1	GASKET, Air Cleaner -(Part information located in Air Cleaner Group.)
215	841183	1	GUIDE, Air
215A	841182	1	GUIDE, Air
273	-----	2	SEAL, O-Ring -(Part information located in Lubrication Group.)
276A	-----	4	WASHER, Sealing -(Part information located in Cylinder Head Group.)
358	845549	1	GASKET SET, Engine -(Service Kits may include extra parts not specific to this engine.)
405	807163	4	SCREW -(Back Plate)
439	-----	1	O-RING, Oil Gallery -(Part information located in Crankcase Cover/Sump Group.)
447	841233	3	SCREW -(Air Guide Cover)
573	841310	1	PLATE, Back
718	806469	2	PIN, Locating
865	843768	1	COVER, Air Guide
868	-----	1	SEAL, Valve -(Part information located in Cylinder Head Group.)
883	-----	2	GASKET, Exhaust -(Part information located in Cylinder Head Group.)
988	-----	1	GASKET, Oil Adapter -(Part information located in Lubrication Group.)
1022	-----	2	GASKET, Rocker Cover -(Part information located in Cylinder Head Group.)
1334	807084	4	SCREW -(Air Guide)
1601	84013604	1	KIT, Hardware -"Only For Use With Reference 1A"

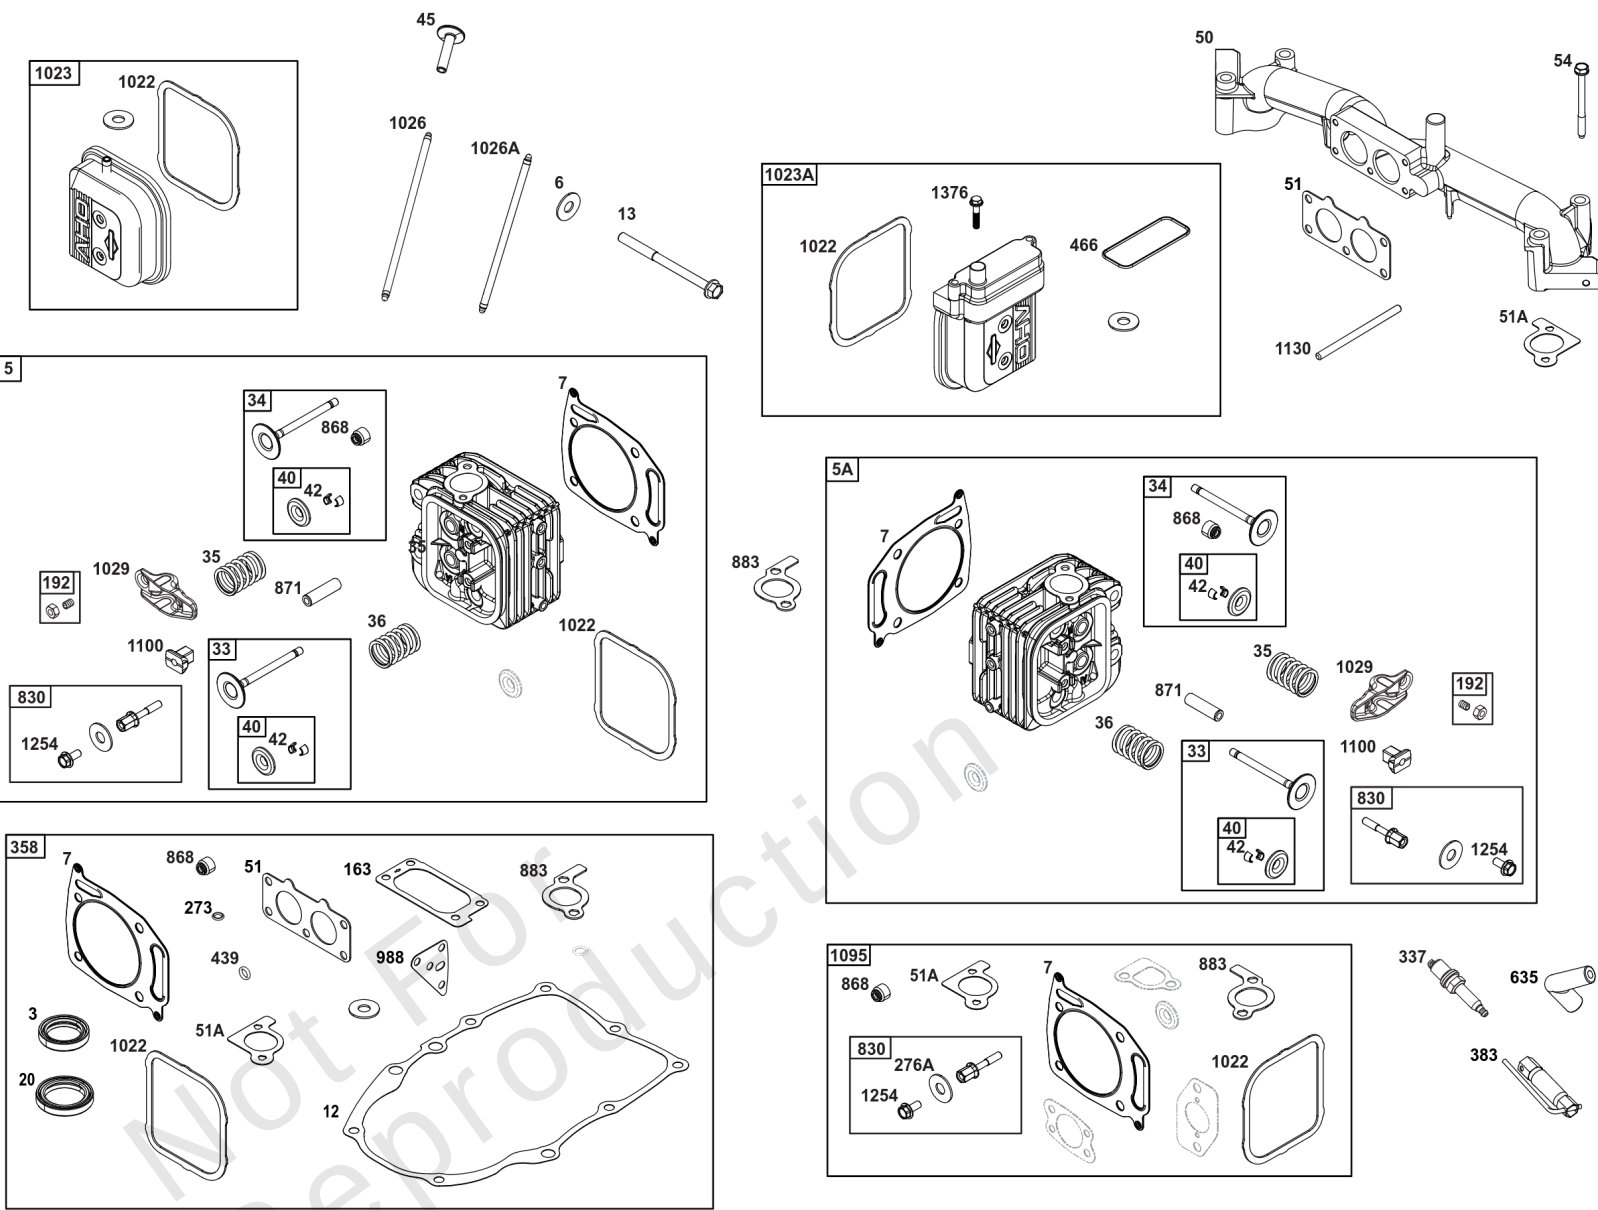 

Cylinder Head Group


REF NO	PART NO	QTY	DESCRIPTION
3	-----	1	SEAL, Oil -(Part information located in Cylinder Group.)
5	84002012	1	HEAD, Cylinder
6	84005965	8	WASHER
5A	84002013	1	HEAD, Cylinder
7	842622	2	GASKET, Cylinder Head
12	-----	1	GASKET, Crankcase -(Part information located in Crankcase Cover/Sump Group.)
13	842618	8	SCREW -(Cylinder Head)
20	-----	1	SEAL, Oil -(Part information located in Crankcase Cover/Sump Group.)
33	843752	2	VALVE, Exhaust
34	845712	2	VALVE, Intake
35	692084	2	SPRING, Valve -(Intake)
36	692084	2	SPRING, Valve -(Exhaust)
40	692058	4	RETAINER, Valve
42	807683	8	KEEPER, Valve
45	843379	4	TAPPET, Valve
50	806376	1	MANIFOLD, Intake
51	690950	2	GASKET, Intake
51A	806418	2	GASKET, Intake
54	806444	4	SCREW -(Intake Manifold)
163	-----	1	GASKET, Air Cleaner -(Part information located in Air Cleaner Group.)
192	807623	1	ADJUSTER, Rocker Arm
273	-----	2	SEAL, O-Ring -(Part information located in Lubrication Group.)
337	792015	2	PLUG, Spark
358	-----	1	GASKET SET, Engine -(Part information located in Cylinder Group.)
383	19576S	1	WRENCH, Spark Plug
439	-----	1	O-RING, Oil Gallery -(Part information located in Crankcase Cover/Sump Group.)
466	806466	1	SEAL, O-Ring -(Breather Assembly)
635	-----	1	BOOT, Spark Plug -(Part information located in Flywheel/Ignition/Starter Group.)
830	809157	4	STUD, Rocker Arm
868	691963	2	SEAL, Valve
871	692057	4	BUSHING, Valve Guide
883	806425	2	GASKET, Exhaust
988	-----	1	GASKET, Oil Adapter -(Part information located in Lubrication Group.)
1022	806039S	2	GASKET, Rocker Cover
1023	691558	1	COVER, Rocker
1023A	843750	1	COVER, Rocker
1026	691836	2	ROD, Push
1026A	691758	2	ROD, Push
1029	807323	1	ARM, Rocker
1095	842662	1	GASKET SET, Valve -(Service Kits may include extra parts not specific to this engine.)

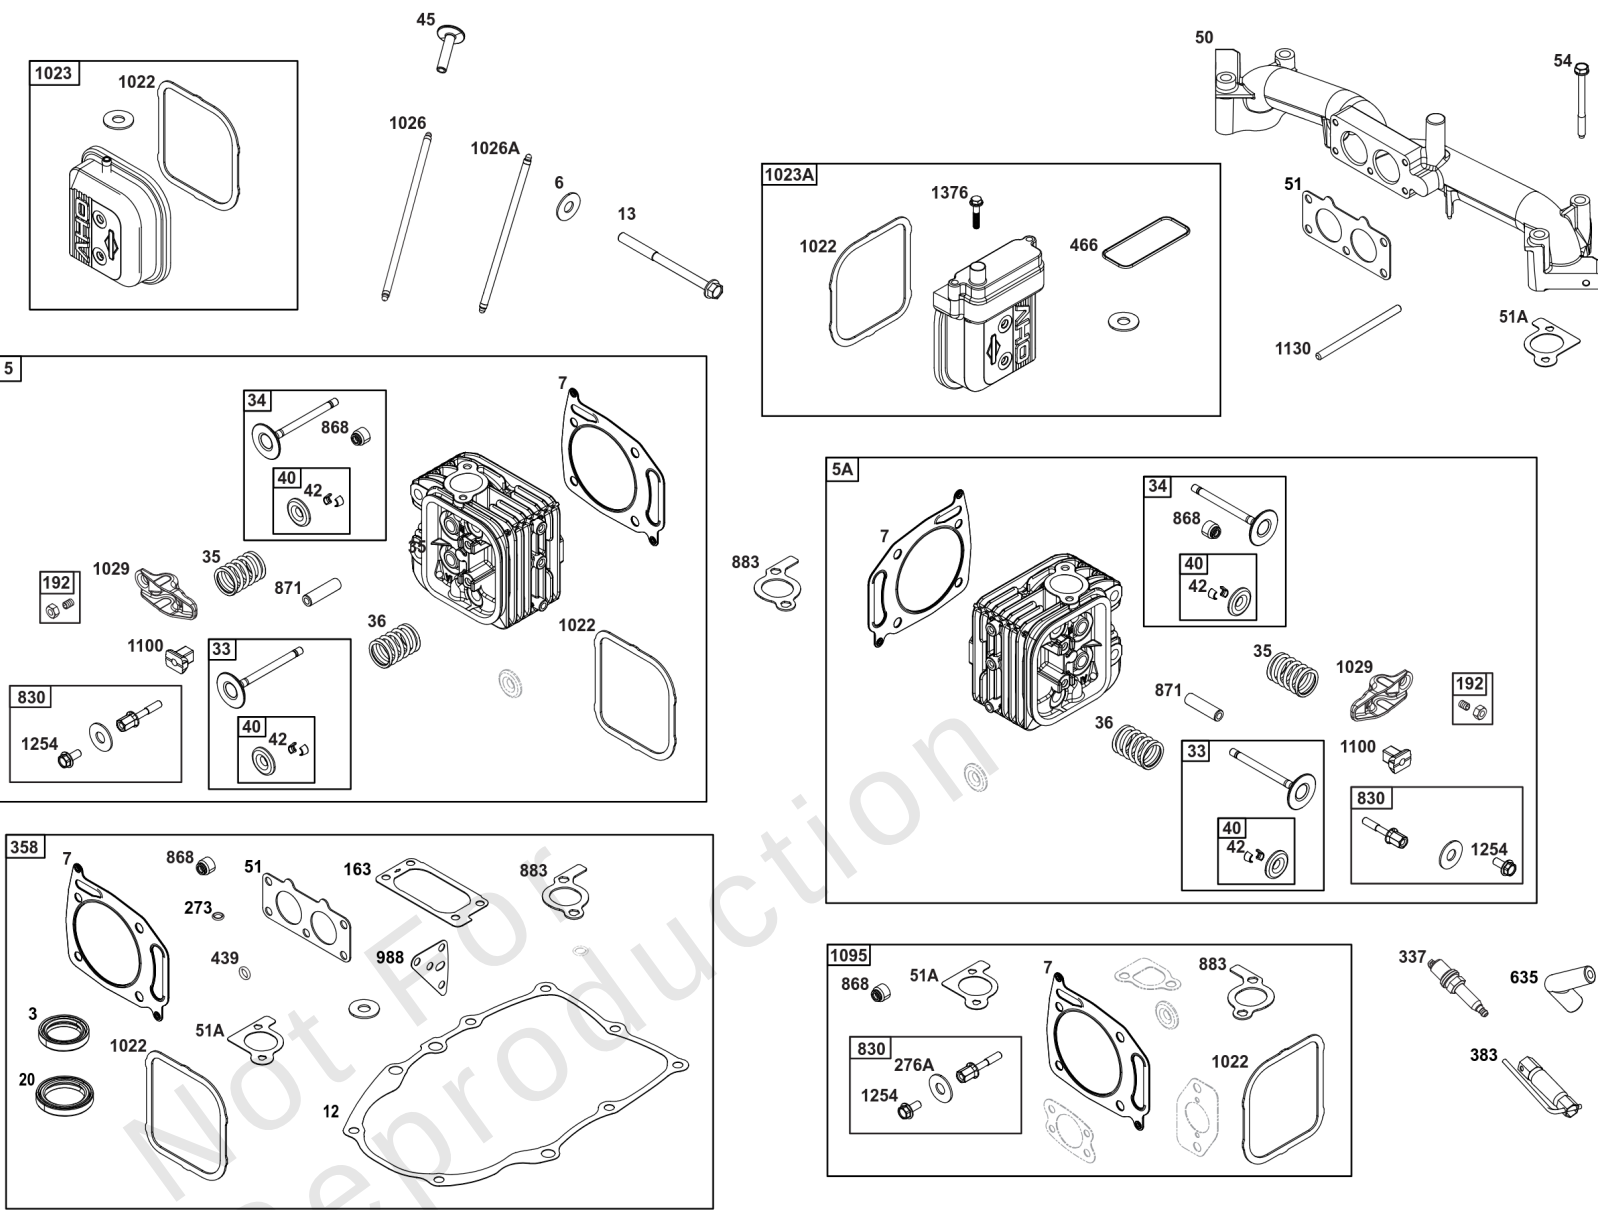 

Cylinder Head Group


REF NO	PART NO	QTY	DESCRIPTION
1100	791959	4	PIVOT, Rocker Arm
1130	690869	2	STUD
1254	807084	4	SCREW -(Rocker Arm Stud)
1376	806421	2	SCREW -(Breather Reed Cover)

 Not For Reproduction

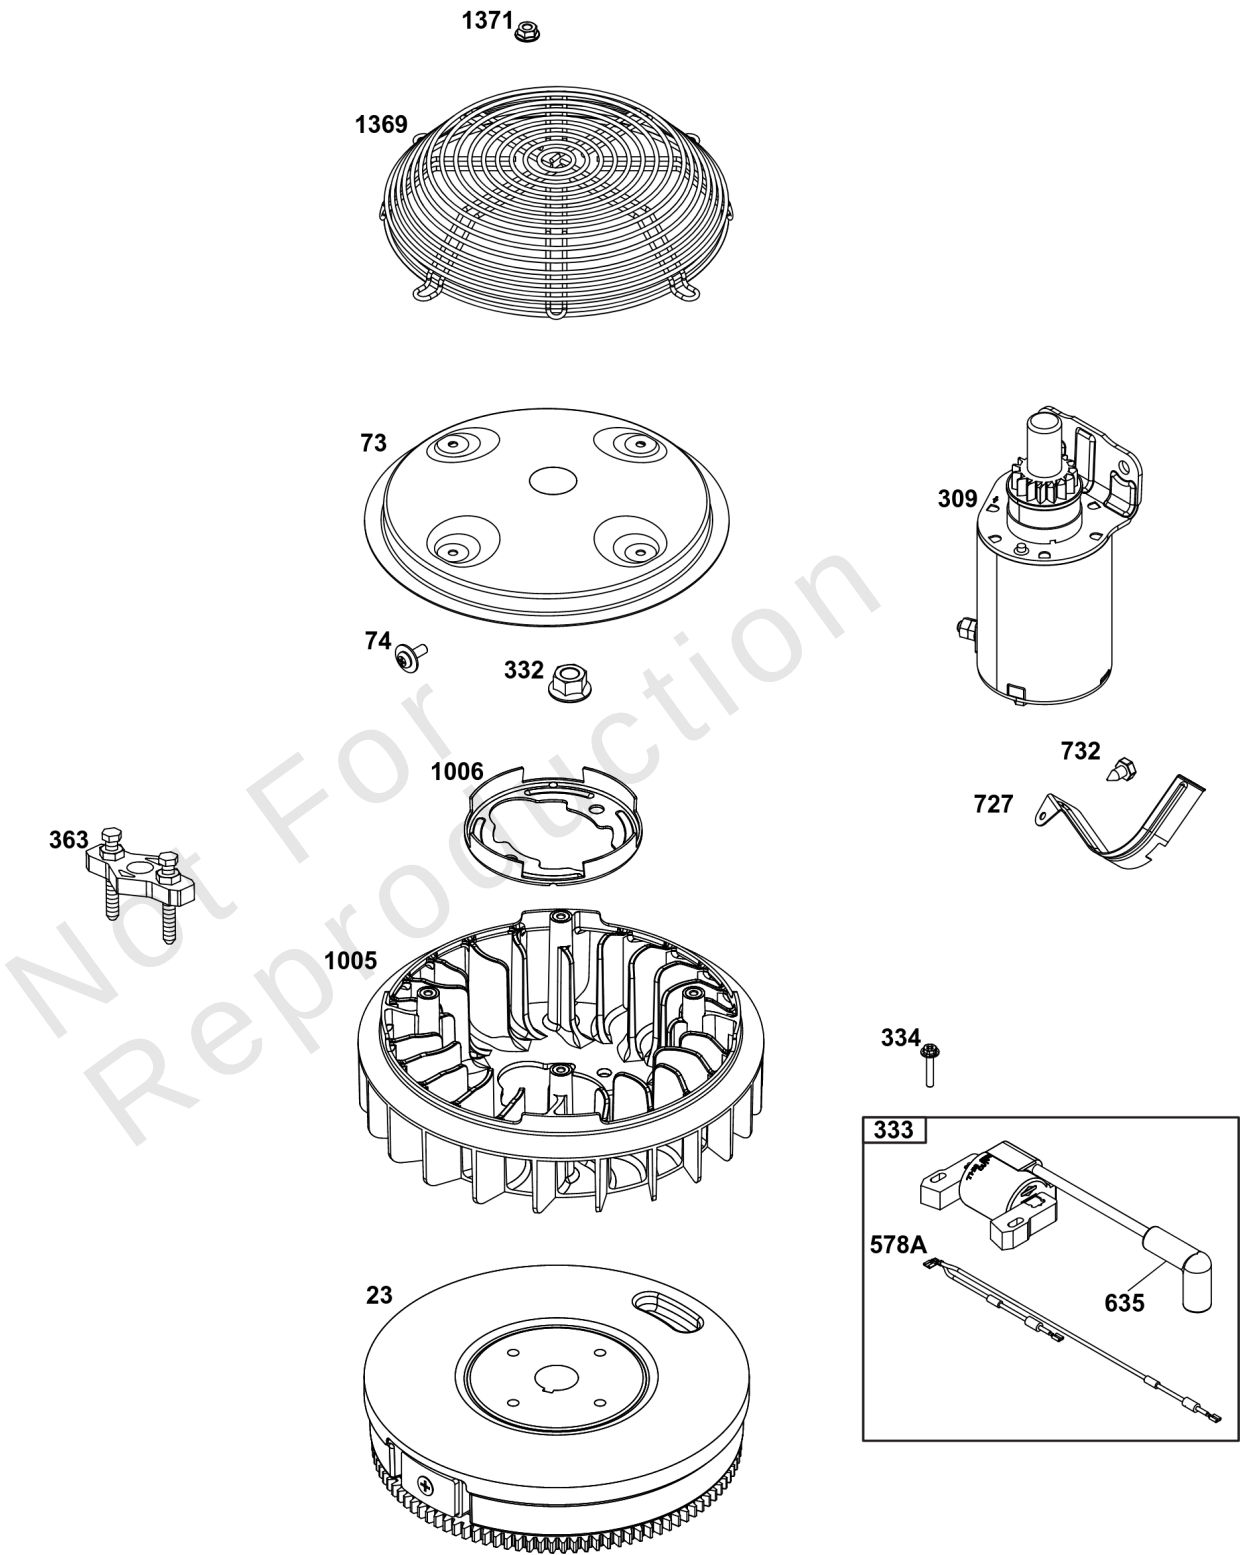

Flywheel, Ignition, and Starter Group

REF NO	PART NO	QTY	DESCRIPTION
23	841050	1	FLYWHEEL ASSEMBLY
73	841440	1	SCREEN, Rotating
74	841441	4	SCREW -(Rotating Screen)
309	844717	1	MOTOR, Starter
332	690887	1	NUT -(Flywheel)
333	84003819	1	ARMATURE, Magneto
334	692066	4	SCREW -(Magneto Armature)
363	19203	1	PULLER, Flywheel
578A	-----	1	WIRE ASSEMBLY -(Part information located in Controls Group.)
635	-----	1	BOOT, Spark Plug -(Part information located in Cylinder Head Group.)
727	841313	1	COVER, Starter Drive
732	690688	1	SCREW
1005	841439	1	FAN, Flywheel
1006	690452	1	RETAINER, Fan
1369	846284	1	GUARD, Flywheel Fan
1371	690939	2	NUT -(Flywheel Fan Guard)

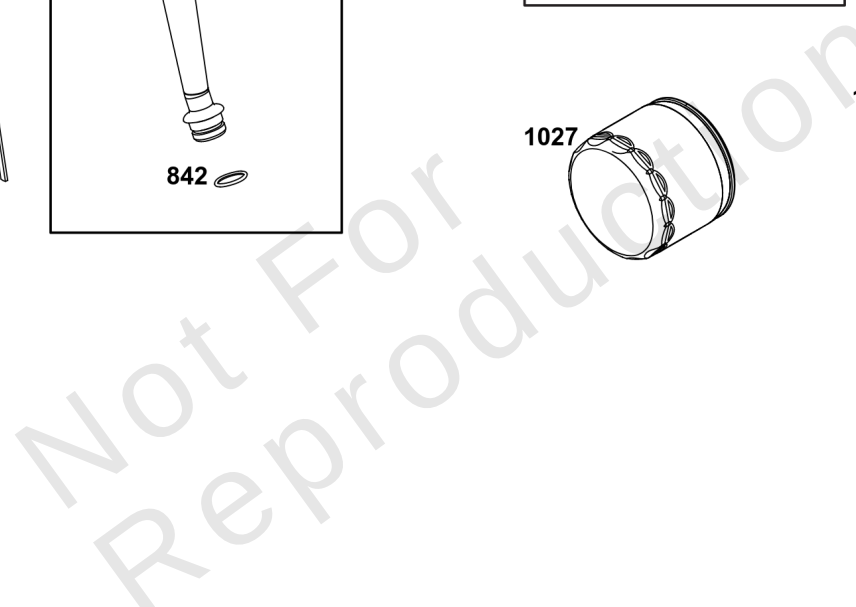 

Lubrication Group

REF NO	PART NO	QTY	DESCRIPTION
186	693184	2	CONNECTOR, Hose
239	690233	1	SWITCH, Oil Pressure
273	690681	2	SEAL, O-Ring -(Oil Pump)
287	692062	1	SCREW -(Dipstick Tube)
400	846489	1	COOLER, Oil
417	843345	2	SCREW -(Oil Cooler)
448	841488	1	BRACKET, Oil Cooler
479	843961	1	SCREW -(Oil Pump Screen)
523	692101	1	DIPSTICK
524	691870	1	SEAL, O-Ring -(Dipstick Tube)
525	692093	1	TUBE, Dipstick
558	806647	3	WASHER -(Oil Filter Adapter)
596	807389	2	SCREW -(Oil Pump)
601	841597	4	CLAMP, Hose
737	84006523	3	SCREW -(Oil Filter Adapter)
829	841999	1	HOSE/CLAMP ASSEMBLY
829A	841999	1	HOSE/CLAMP ASSEMBLY
842	692053	1	SEAL, O-Ring -(Dipstick Cap)
988	692063	1	GASKET, Oil Adapter
1017	843960	1	SCREEN, Oil Pump
1024	843959	1	PUMP, Oil
1027	842921	1	FILTER, Oil
1028	843898	1	ADAPTER, Oil Filter
1373	841233	2	SCREW -(Oil Cooler Bracket)




Model 29, 30, 35 & 38 Engine Accessories Catalog

Not For
Reproduction








Maintenance Kits

REF NO	PART NO	QTY	DESCRIPTION
9000	84004936		KIT, Maintenance -(Non-Oil Guard™ Engines) (20 - 23 HP)
9000A	84004937		KIT, Maintenance -(Non-Oil Guard™ Engines) (12.5 - 18 HP)
9000B	84002315		KIT, Maintenance -(Non-Oil Guard™ Engines)
240	845125	1	FILTER, Fuel
240A	84001895	1	FILTER, Fuel
337	491055S	2	PLUG, Spark
337	84007216	2	PLUG, Spark -(China Only)
445	692519	1	FILTER, A/C Cartridge -"Professional / PXi" & "Commercial / CXi".
445A	394018S	1	FILTER, A/C Cartridge -"Professional / PXi" & "Commercial / CXi".
445B	841497	1	FILTER, A/C Cartridge -"Professional / PXi" & "Commercial / CXi".
967	692520	1	FILTER, Pre Cleaner
967A	272490S	1	FILTER, Pre Cleaner
1027	842921	1	FILTER, Oil -(Vanguard®)
1505	100169		OIL-1QT VANGUARD (CASE) -(1 qt. Bottle)

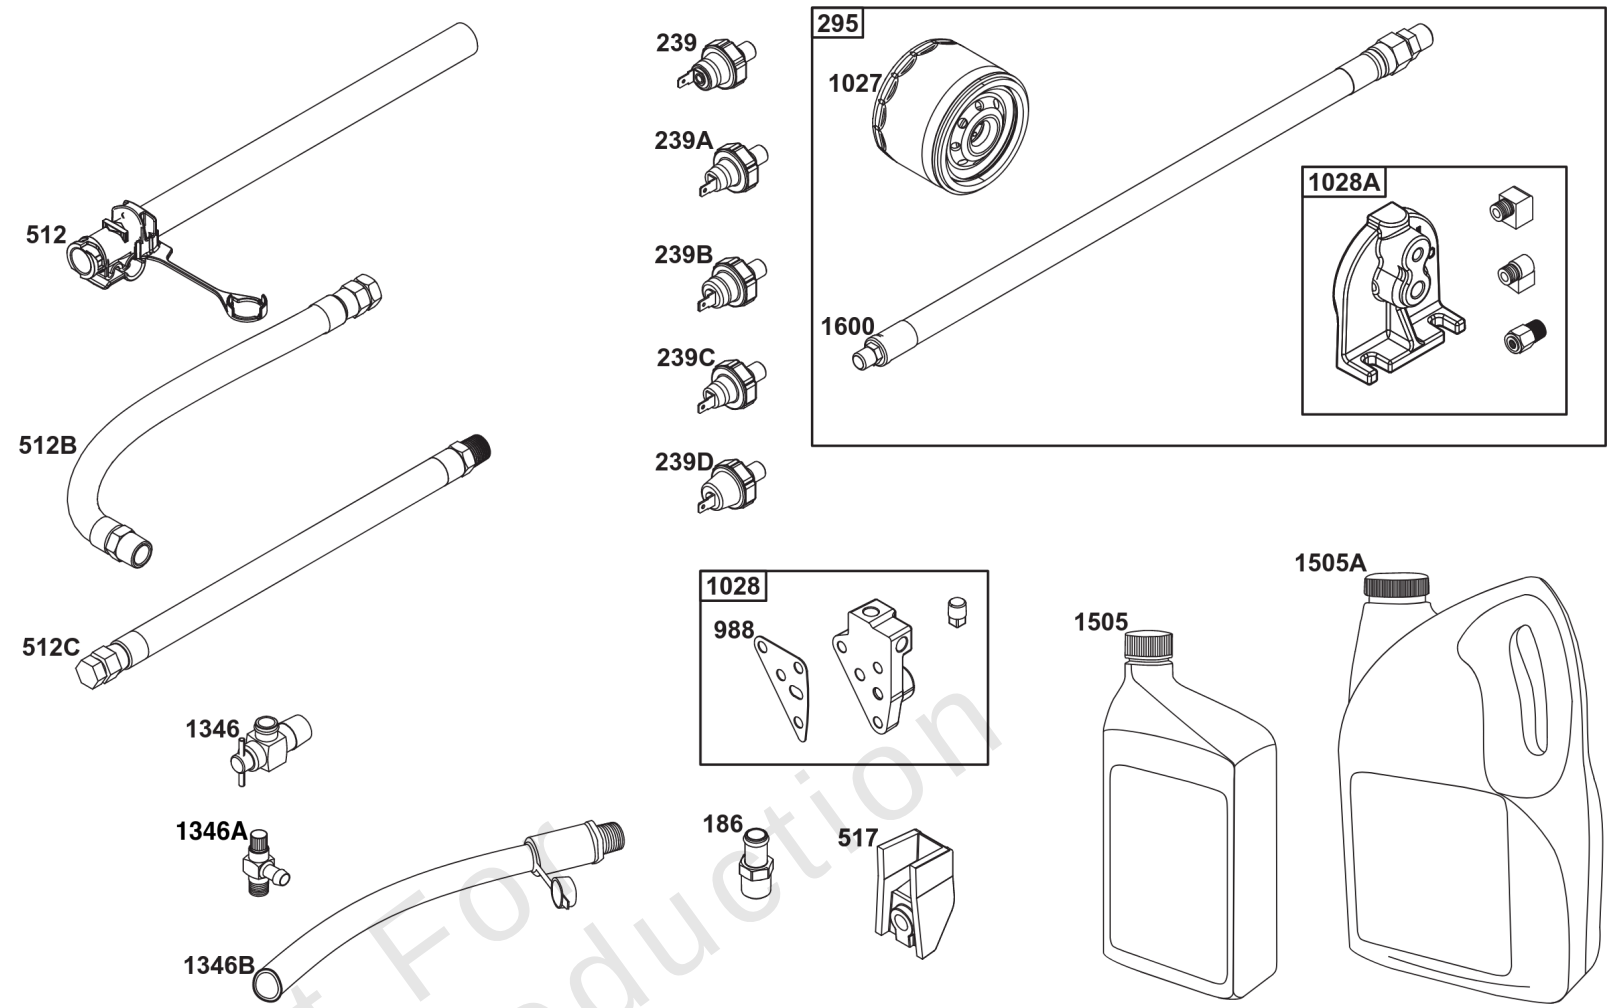 








Lubrication

REF NO	PART NO	QTY	DESCRIPTION
186	796532	1	CONNECTOR, Hose -(Threaded Engine Block Connector for EZ-Oil Drain Hose)(Order hose separate)
239	690233	1	SWITCH, Oil Pressure -(2-4 PSI Normally-Closed Switch)
239A	491657S	1	SWITCH, Oil Pressure -(3-5 PSI Normally-Closed Switch)
239B	841281	1	SWITCH, Oil Pressure -(7-10 PSI Normally-Closed Switch)
239C	694115	1	SWITCH, Oil Pressure -(9-13 PSI Normally-Closed Switch)
239D	697049	1	SWITCH, Oil Pressure -(3-6 PSI Normally-Open Switch)
295	492061	1	ADAPTER, Remote Oil Filter -(Remote oil filter head with 18" (48 cm) hoses)
295	492062	1	ADAPTER, Remote Oil Filter -(Remote oil filter head with 30" (76 cm) hoses)
512	594200	1	HOSE, Oil Drain -(EZ-Oil Drain Hose, 10.5")(Order threaded engine block connector separate)
512	593635	1	HOSE, Oil Drain -(EZ-Oil Drain Hose, 13.75")(Order threaded engine block connector separate)
512B	1723165SM	1	HOSE, Oil Drain, 10-1/2" Long, 3/8-18 Fittings -(10.5")
512C	5048681SM	1	HOSE, OIL DRAIN -(12.5")
517	593633	1	RETAINER, Oil Drain
988	692063	1	GASKET, Oil Adapter
1027	492932S	1	FILTER, Oil
1028	492687	1	ADAPTER, Oil Filter -(Adapter Kit for mounting remote oil filter)
1028A	495244	1	ADAPTER-OIL FILTER -(Remote oil filter mounting head with fittings)
1346	844802	1	VALVE, Oil Drain Shut Off
1346A	492031	1	VALVE, Oil Drain Shut Off
1346B	5401WEB	1	VALVE, Oil Drain Shut Off -(1/4 Turn Oil Drain Valve with Hose)
1505	100169		OIL-1QT VANGUARD (CASE) -(1 qt. Bottle)
1505A	100170		OIL-5QT VANGUARD (CASE) -(5 qt. Bottle)
1600	494724	2	HOSE, Remote Oil Filter -(Hoses only (2) 18" (48 cm))
1600	494725	2	HOSE, Remote Oil Filter -(Hoses only (2) 30" (76 cm))

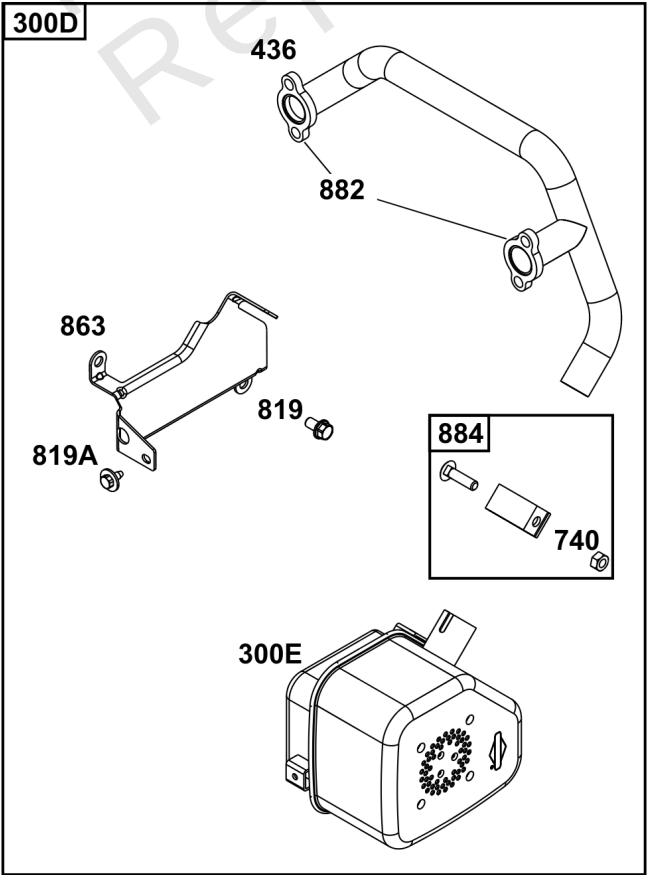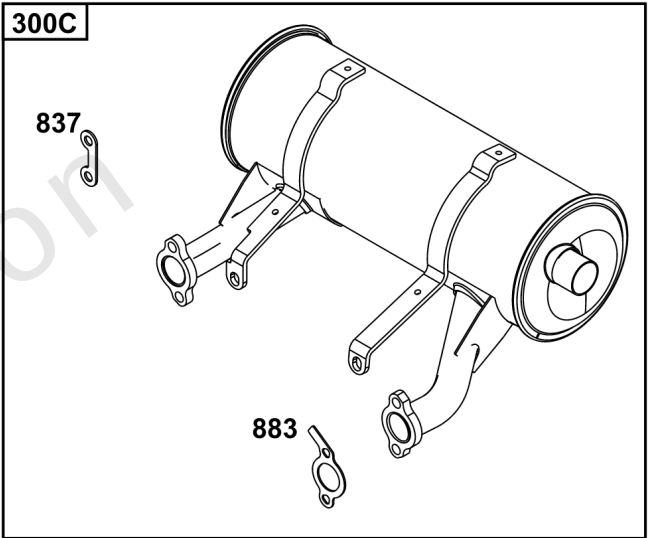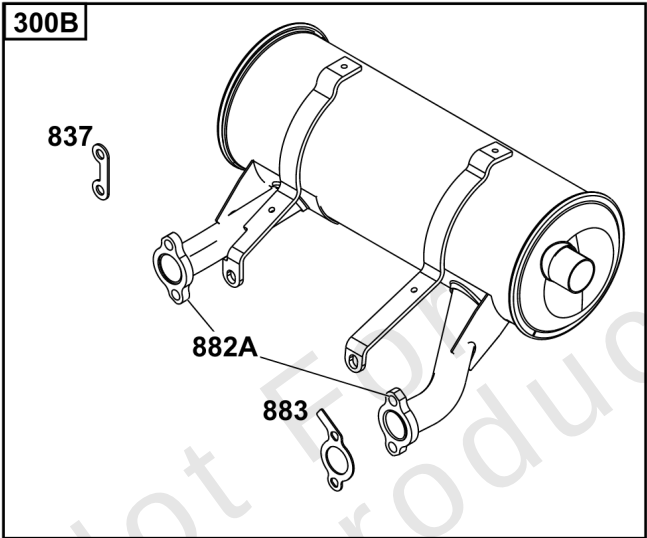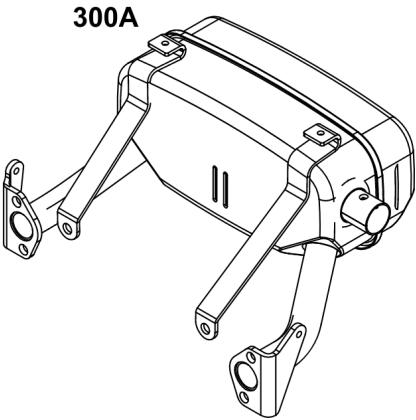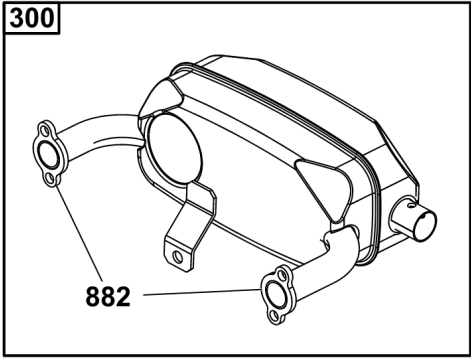     






Starter Motor Side Outlet Mufflers

REF NO	PART NO	QTY	DESCRIPTION
300	690931	1	MUFFLER -(Super Lo-Tone) (Horizontal: 3054, 3564)
300A	690906	1	MUFFLER -(Super Lo-Tone) (Horizontal: 3054, 3564)
300B	808705	1	MUFFLER -(5" Round) (Horizontal: 3854, 3864)
300C	845873	1	MUFFLER -(5" Round, Stainless Steel) (Horizontal: 3854, 3864)
300D	995005	1	MUFFLER ASSY -(Lo-Tone) (Horizontal: 3054, 3564)
300E	692099	1	MUFFLER -(Lo Mount)
436	691499	1	MANIFOLD, Exhaust -(Cylinder 1) (Side Outlet)
740	793859	1	NUT
819	692056	2	SCREW -(Muffler Bracket) (M8x1.25)
819A	691514	2	SCREW -(Muffler Bracket) (M6 X 1.0)
837	808085	2	SPACER, Muffler -(Includes 2)
863	690756	1	BRACKET, Muffler -(Cylinder 1) (Side Outlet)
882	692074	2	FLANGE, Exhaust
882A	806965	2	FLANGE, Exhaust
883	806425	2	GASKET, Exhaust
884	690898	1	CLAMP, Muffler

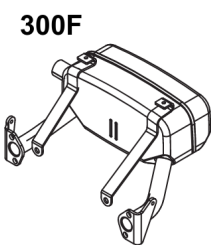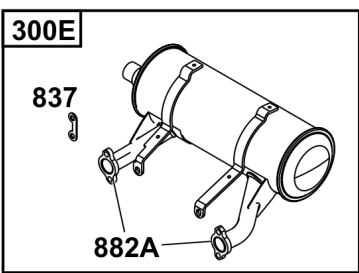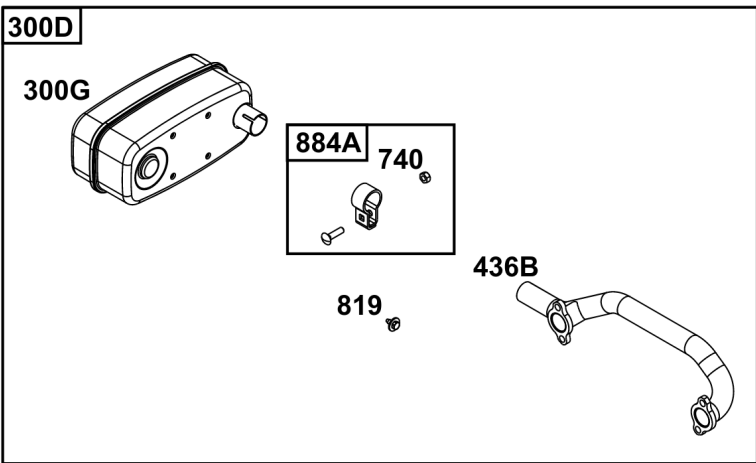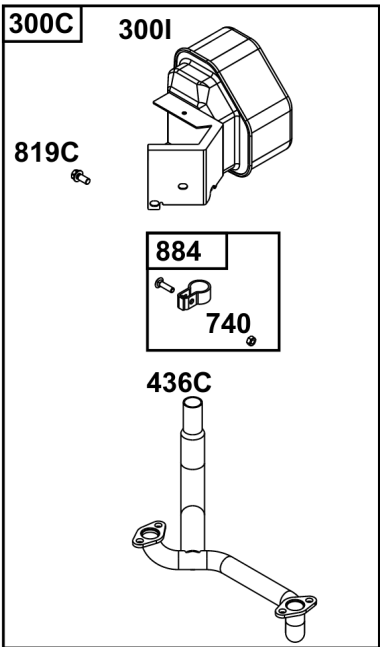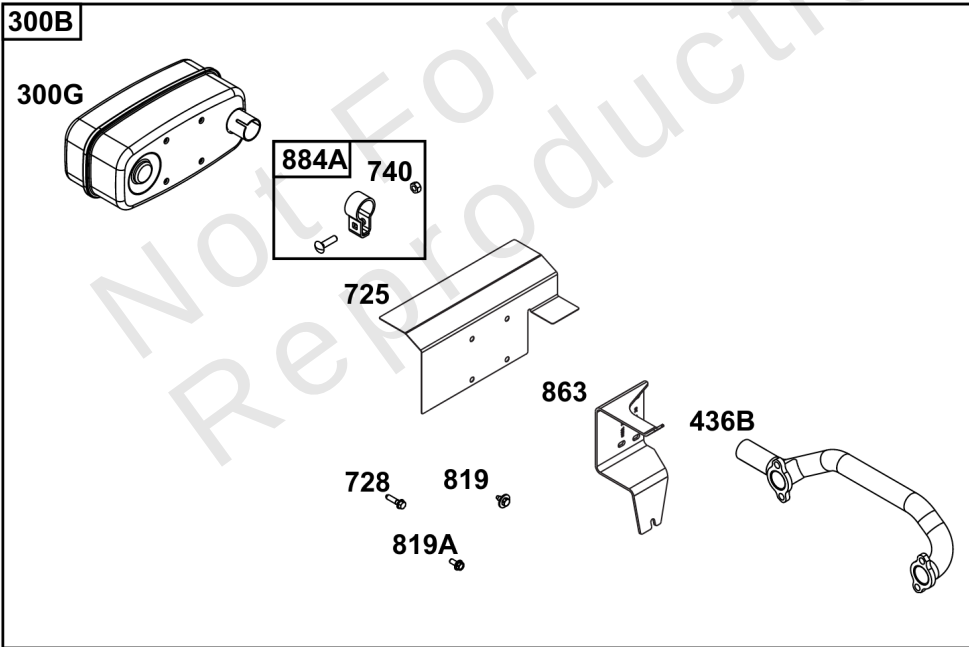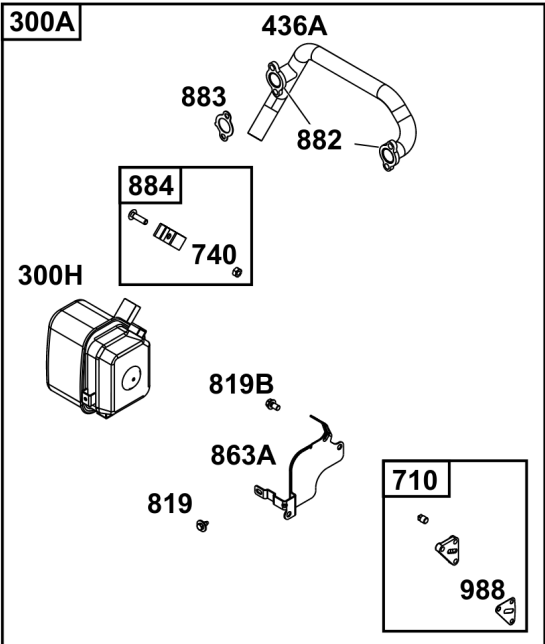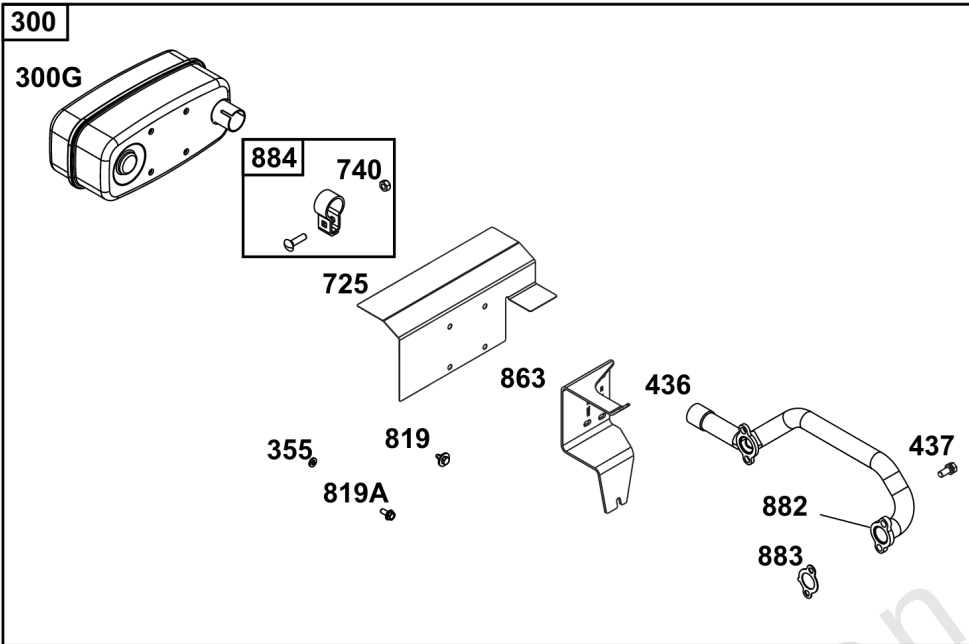       




Oil Filter Side Outlet Mufflers

REF NO	PART NO	QTY	DESCRIPTION
300	995002	1	HIGH MNT SPR LO-TONE OIL FLTR SIDE -(Super Lo-Tone) (Horizontal: 3054, 3564) (Vertical: 3567)
300A	995000	1	OIL FILTER SIDE LO-MT -(Lo-Tone) (Horizontal: 3054, 3564) (Requires 808033 Oil Filter Adaptor)
300B	995004	1	HI MNT SPR LO-TONE OIL FLT SIDE -(Super Lo-Tone) (Horizontal: 3854, 3864) (Vertical: 3867)
300C	995009	1	COMMERCIAL MOWERS KIT -(For Wide Area Walker) (Vertical: 3567)
300D	995010	1	COMMERCIAL MOWERS KIT -(Vertical: 3867)
300E	808896	1	MUFFLER
300F	691562	1	MUFFLER -(Super Lo-Tone) (Horizontal: 3054, 3564)
300G	498984S	1	MUFFLER -(Super Lo Tone)
300H	807948	1	MUFFLER -(Lo Mount)
300I	807953	1	MUFFLER
355	842122	2	WASHER -(Muffler Bracket)
436	805609	1	MANIFOLD, Exhaust -(Cylinder 2) (Side Outlet)
436A	692061	1	MANIFOLD, Exhaust -(Cylinder 2) (Side Outlet)
436B	808916	1	MANIFOLD, Exhaust -(Cylinder 2) (Side Outlet)
436C	805778	1	MANIFOLD, Exhaust -(Wide Area Walker)
437	691902	4	SCREW -(Exhaust Manifold)
710	807689	1	COVER, Oil Filter
725	806102	1	SHIELD, Heat
728	690297	2	SCREW
740	793859	1	NUT
819	691514	2	SCREW -(Muffler Bracket) (M6 X 1.0)
819A	807084	2	SCREW -(Muffler Bracket)
819B	692056	2	SCREW -(Muffler Bracket) (M8x1.25)
819C	692062	2	SCREW -(Muffler Bracket)
837	808085	2	SPACER, Muffler -(Includes 2)
863	806759	1	BRACKET, Muffler
863A	691513	1	BRACKET, Muffler
882	692074	2	FLANGE, Exhaust -(3054 & 3564)
882A	806965	2	FLANGE, Exhaust
883	691613	2	GASKET, Exhaust
884	690898	1	CLAMP, Muffler
884A	691956	1	CLAMP, Muffler
988	690687	1	GASKET, Oil Adapter

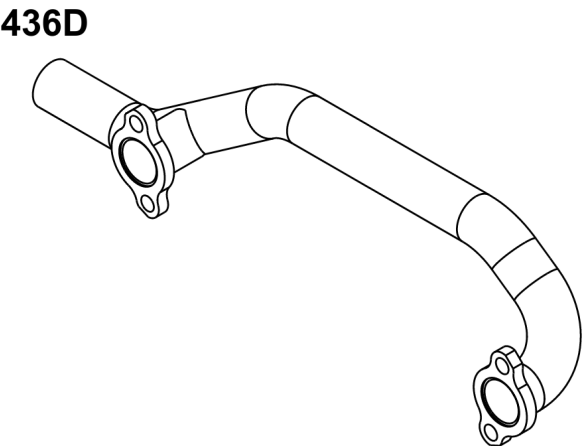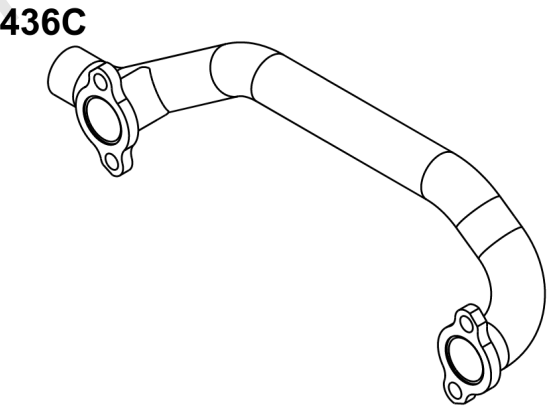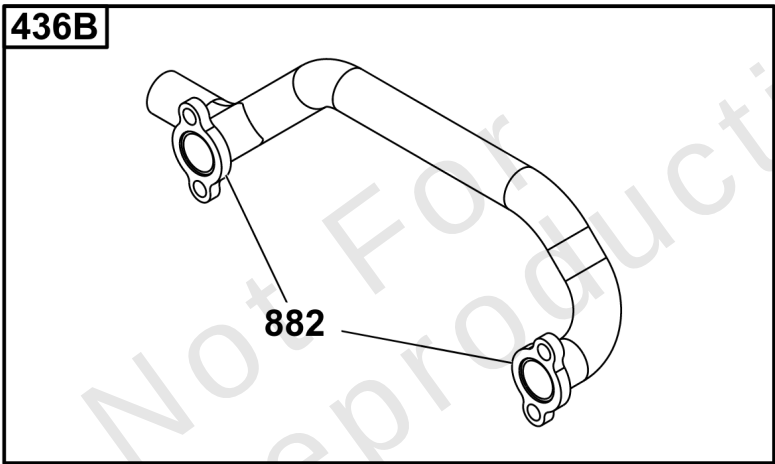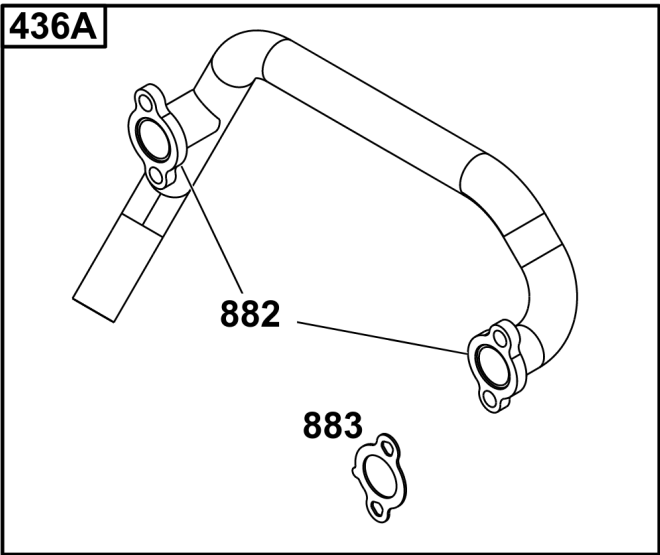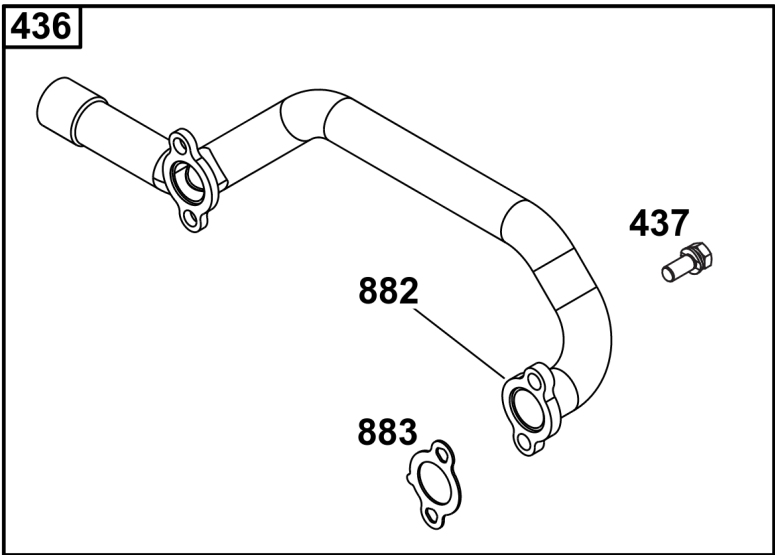     

Oil Filter Side Outlet Manifolds


REF NO	PART NO	QTY	DESCRIPTION
436	805609	1	MANIFOLD, Exhaust -(Vertical: 3567)
436A	692061	1	MANIFOLD, Exhaust -(Horizontal: 3054, 3564)
436B	691501	1	MANIFOLD, Exhaust -(Horizontal: 3054, 3564)
436C	808908	1	MANIFOLD, Exhaust -(Horizontal: 3854, 3864)
436D	808916	1	MANIFOLD, Exhaust -(Horizontal: 3854, 3864) (Vertical: 3867)
437	691902	4	SCREW -(Exhaust Manifold)
882	692074	2	FLANGE, Exhaust
883	691613	2	GASKET, Exhaust

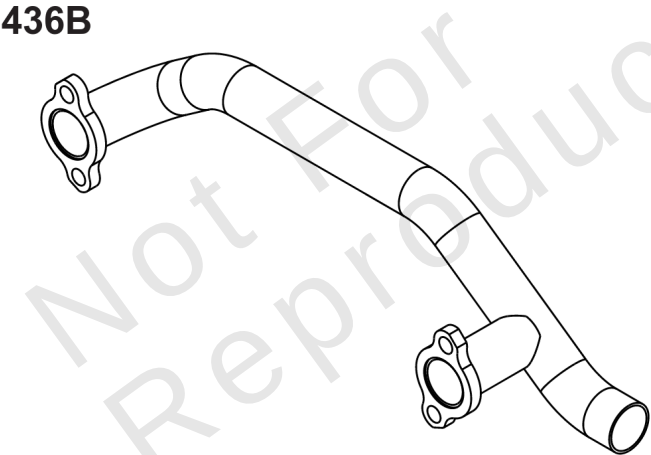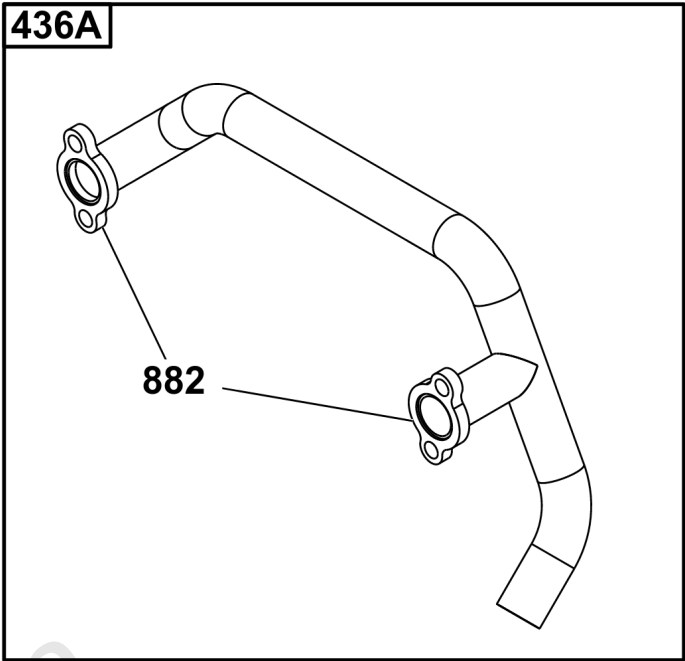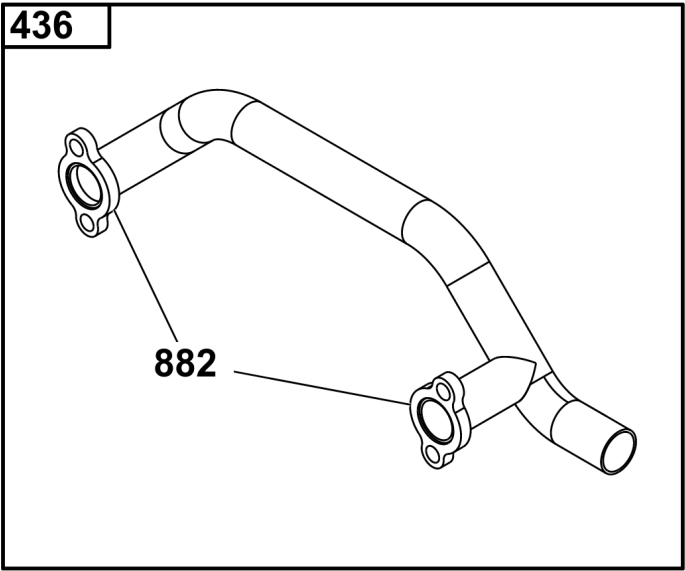   

Starter Motor Side Outlet Manifolds

REF NO	PART NO	QTY	DESCRIPTION
436	691502	1	MANIFOLD, Exhaust -(Horizontal: 3054, 3564)
436A	691499	1	MANIFOLD, Exhaust -(Horizontal: 3054, 3564)
436B	808909	1	MANIFOLD, Exhaust -(Horizontal: 3854, 3864) (Vertical: 3867)
882	692074	2	FLANGE, Exhaust

 
Not For Reproduction

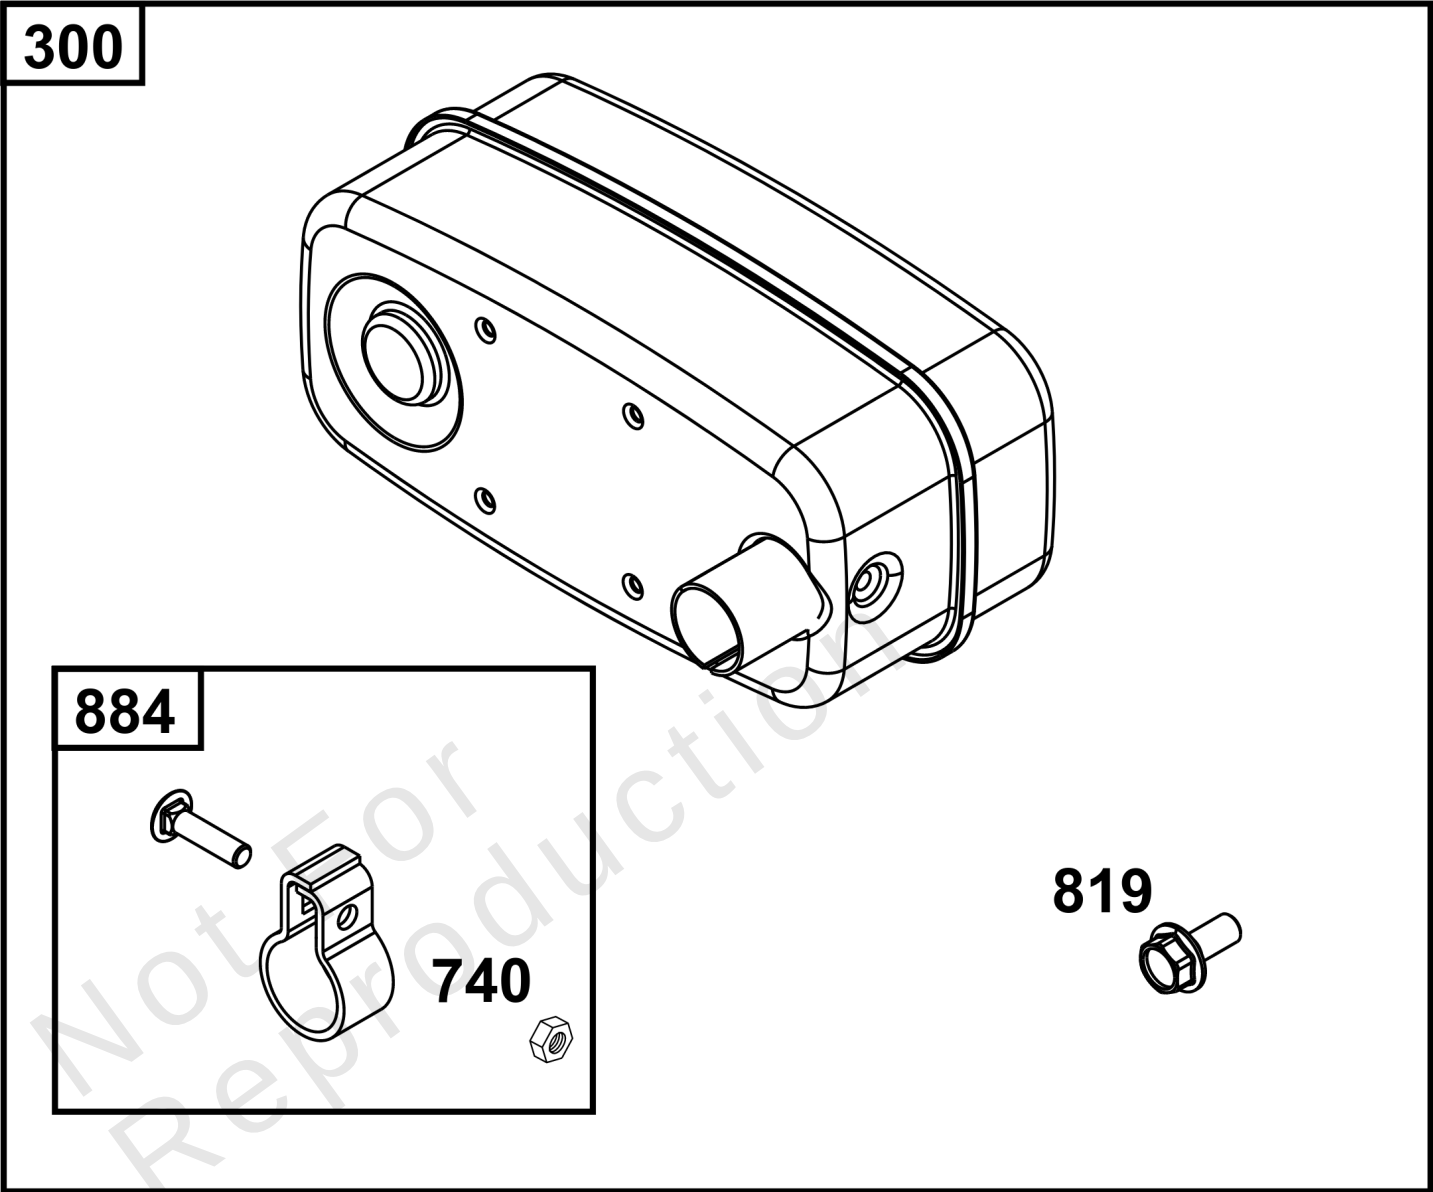

Mufflers

REF NO	PART NO	QTY	DESCRIPTION
300	995018	1	MUFFLER -(Inlet I.D. 1.14" (28.9mm))
740	793859	1	NUT
819	807084	4	SCREW
884	691956	1	CLAMP, Muffler


 
Not For Reproduction

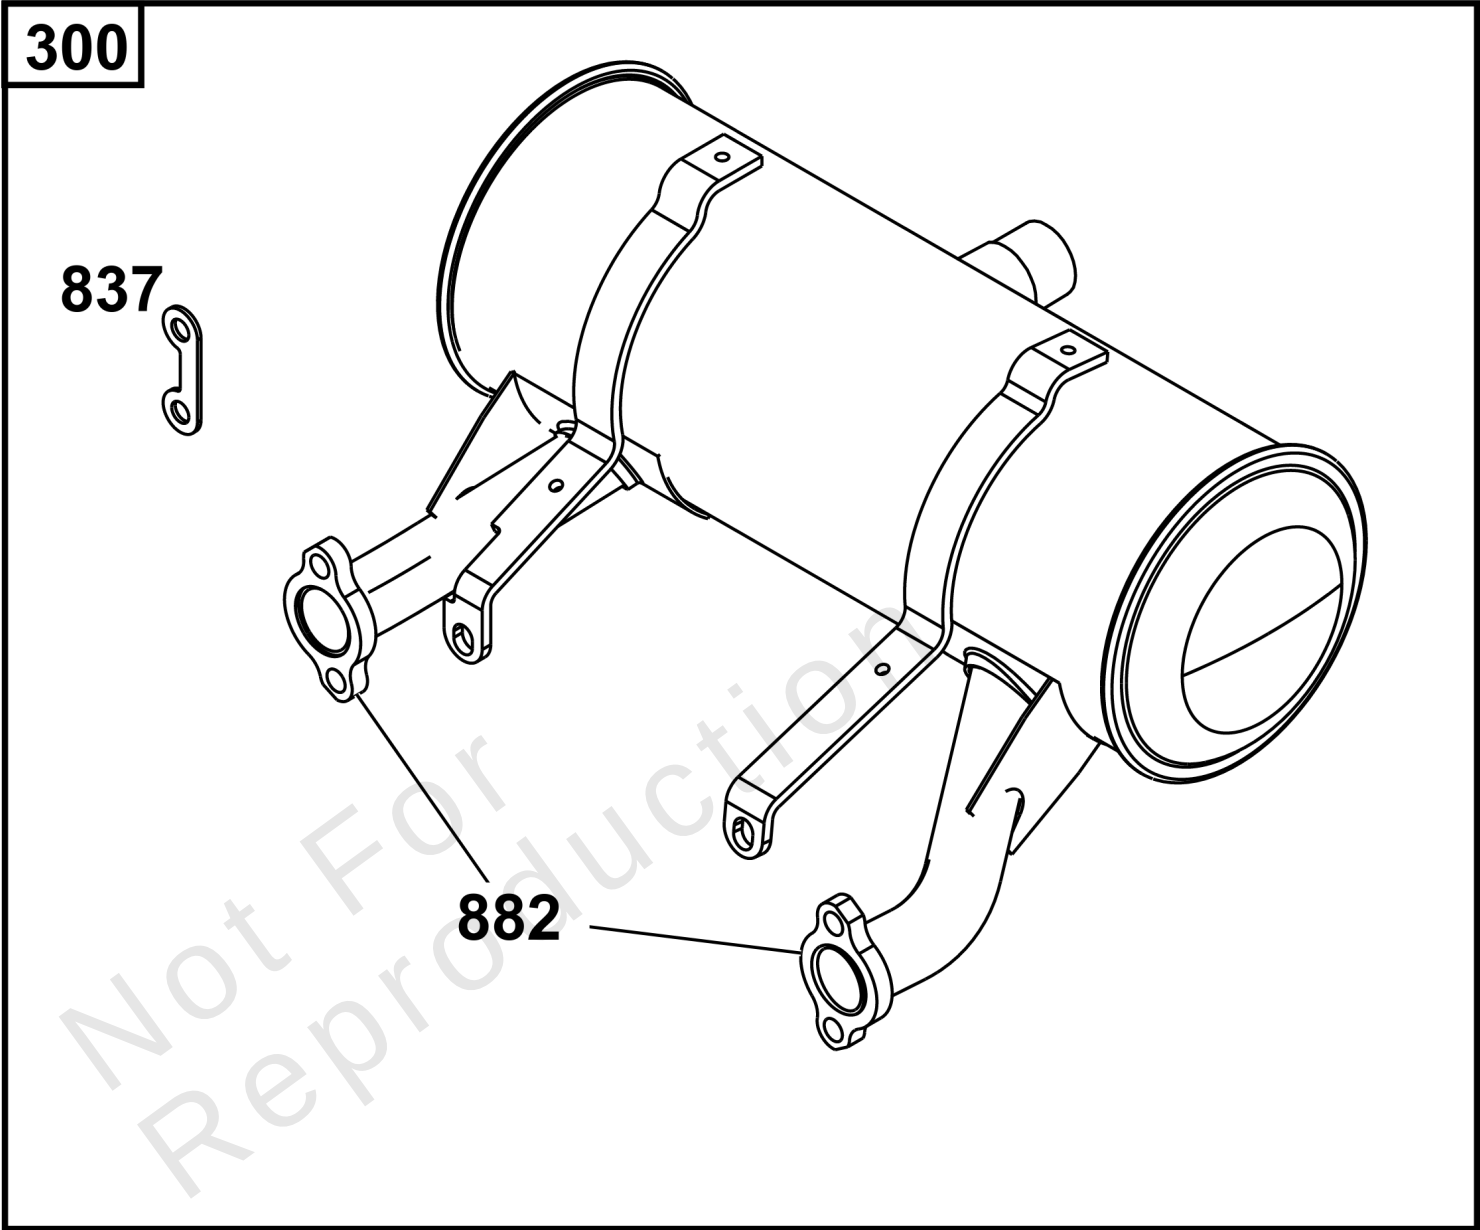

Center Outlet Mufflers

REF NO	PART NO	QTY	DESCRIPTION
300	808911	1	MUFFLER -(5" Round) (Horizontal: 3854, 3864)
837	808085	2	SPACER, Muffler
882	806965	2	FLANGE, Exhaust

  Not For Reproduction





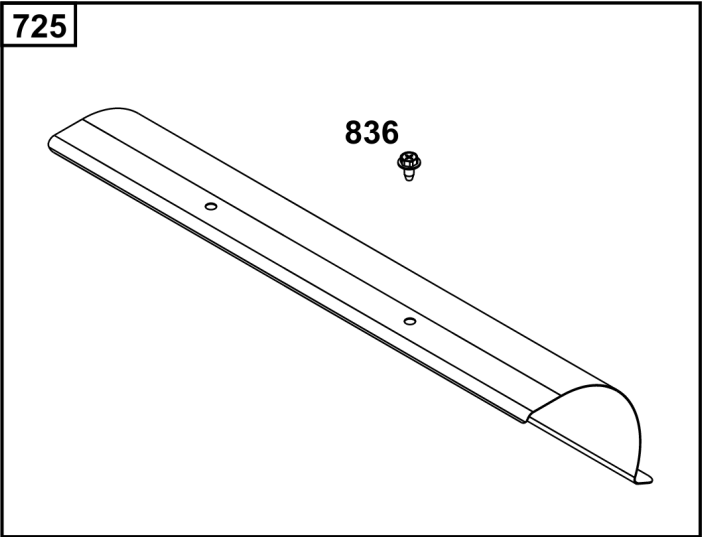
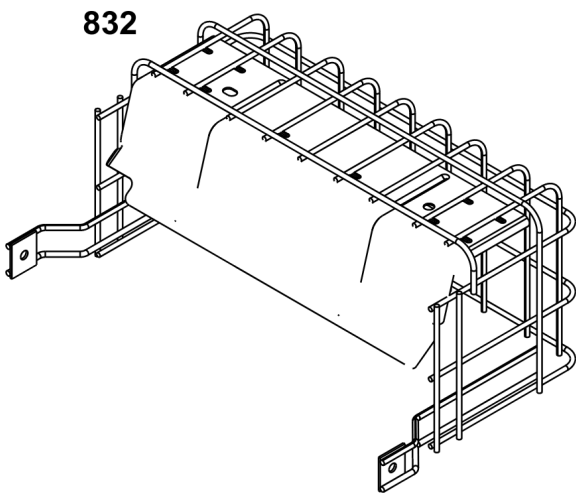


Not For
Reproduction

Muffler Guards and Shields

REF NO	PART NO	QTY	DESCRIPTION
725	846568	1	SHIELD, Heat -(For 5" Round Mufflers) (Horizontal: 3854, 3864)
832	691571	1	GUARD, Muffler -(Assembly for 690906 & 691562) (Horizontal: 3054, 3564)
836	692067	4	SCREW

      Not For Reproduction

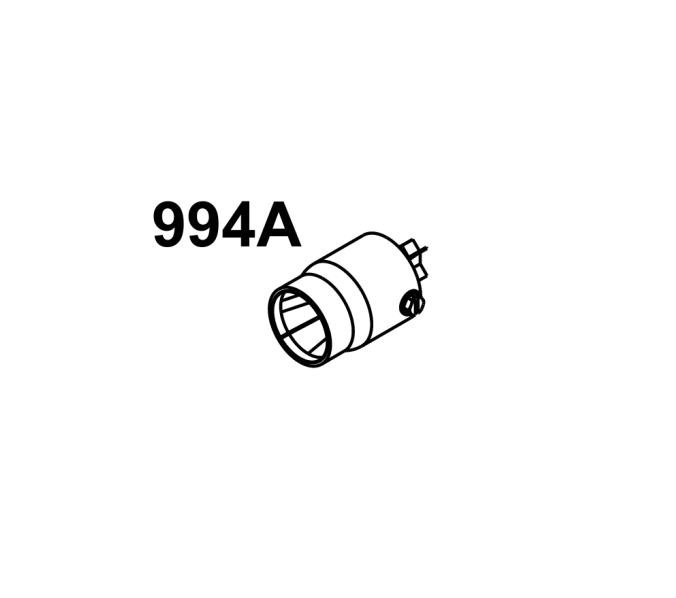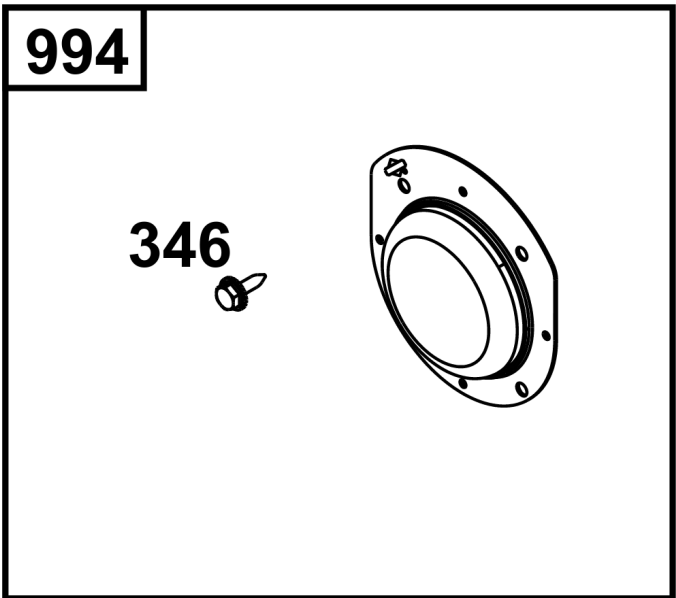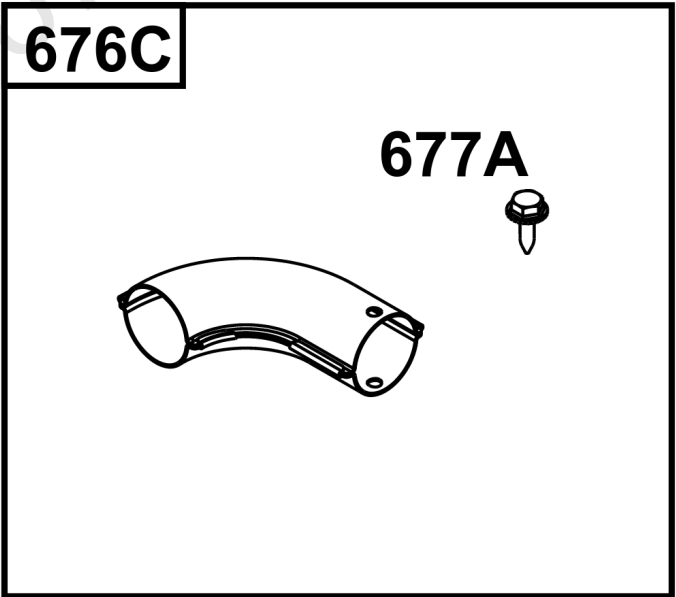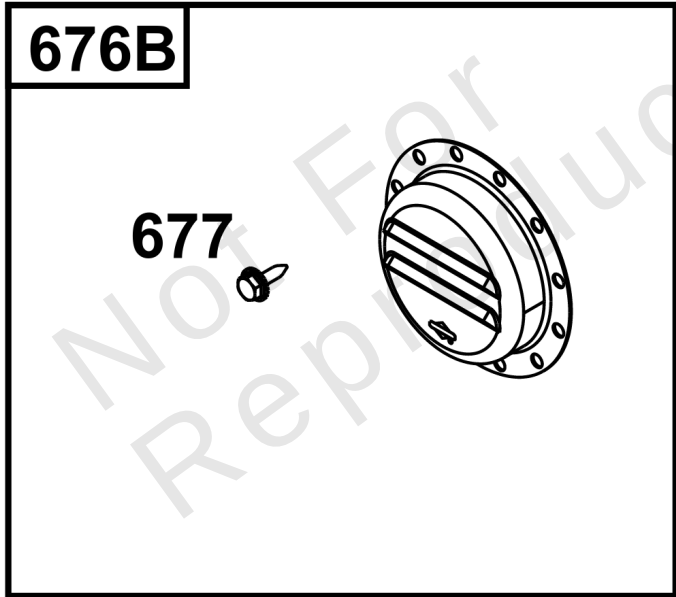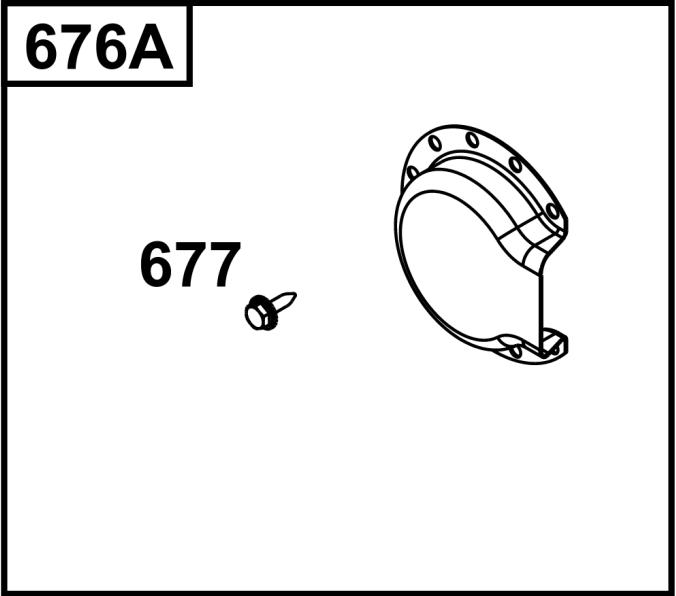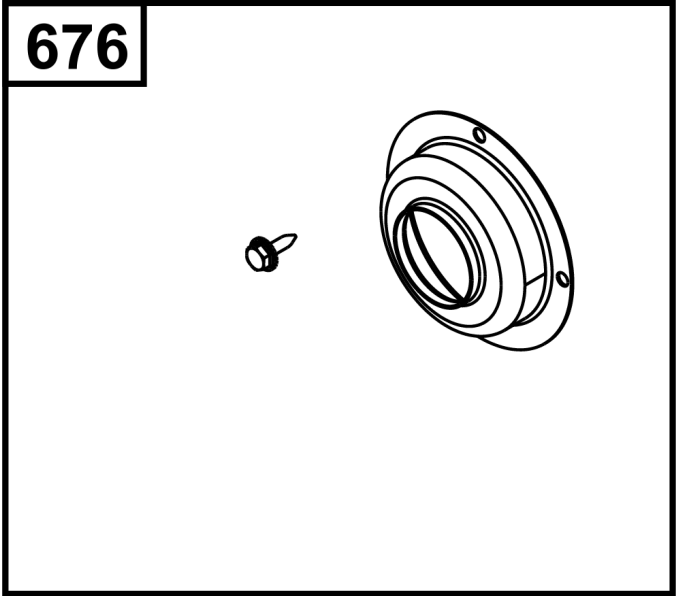

Spark Arrestors and Deflectors

REF NO	PART NO	QTY	DESCRIPTION
346	794845	4	SCREW -(Spark Arrestor)
676	396903	1	DEFLECTOR, Muffler -(Direct Outlet) (Face Mounting with 4 Screws)
676A	795036	1	DEFLECTOR, Muffler -(Deflector 90 Degree) (Face Mounting with 4 Screws)
676B	795038	1	DEFLECTOR, Muffler -(Deflector Louvered) (Face Mounting with 4 Screws)
676C	495518	1	DEFLECTOR, Muffler -(Elbow for Muffler Assembly) (For Exit Pipe O.D. of 1.10" (28mm))
677	794845	4	SCREW -(Muffler Deflector)
677A	810079	1	SCREW -(Muffler Deflector)
994	794945	1	ARRESTOR, Spark -(Spark Arrestor) (Face Mounting with 4 Screws)
994A	594562	1	ARRESTOR, Spark -(Spark Arrestor) (For Exit Pipe O.D. of 1.10" (28mm))

 
613



1177



296




883




883A



 882



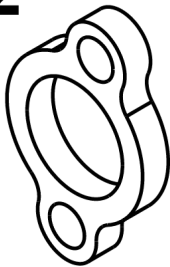


882A

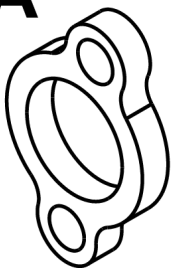 

Muffler Mounting Hardware



REF NO	PART NO	QTY	DESCRIPTION
296	841185	4	STUD -(Mounting Mufflers)
613	691902	4	SCREW -(Mounting Mufflers)
882	692074	2	FLANGE, Exhaust -(3054 & 3564)
882A	806965	2	FLANGE, Exhaust -(3854 & 3864)
883	806425	2	GASKET, Exhaust -(Horizontal: 3854, 3864) (Vertical: 3567)
883A	691613	2	GASKET, Exhaust -(Horizontal: 3054, 3564) (Vertical: 3567)
1177	842067	4	NUT -(Required if Using 841185)

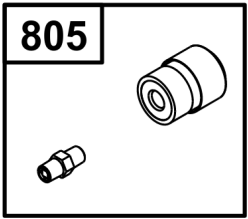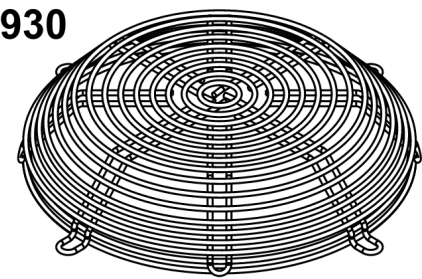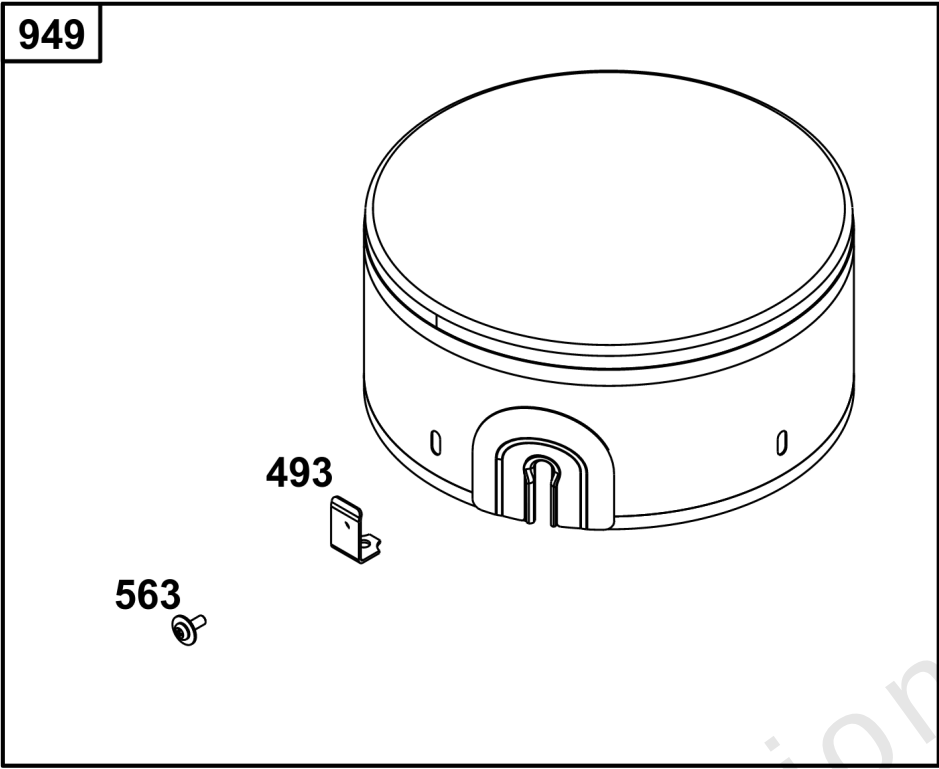   

Flywheel and Air Intake Guards





REF NO	PART NO	QTY	DESCRIPTION
493	845729	4	BRACKET, Mounting
563	841441	4	SCREW
805	843024	1	MINDER, Filter -(For Engines with Cyclonic Air Filter)
930	846284	1	GUARD, Flywheel Fan
949	845728	1	GUARD, Debris Screen -(Vertical: 3867)

  Not For Reproduction

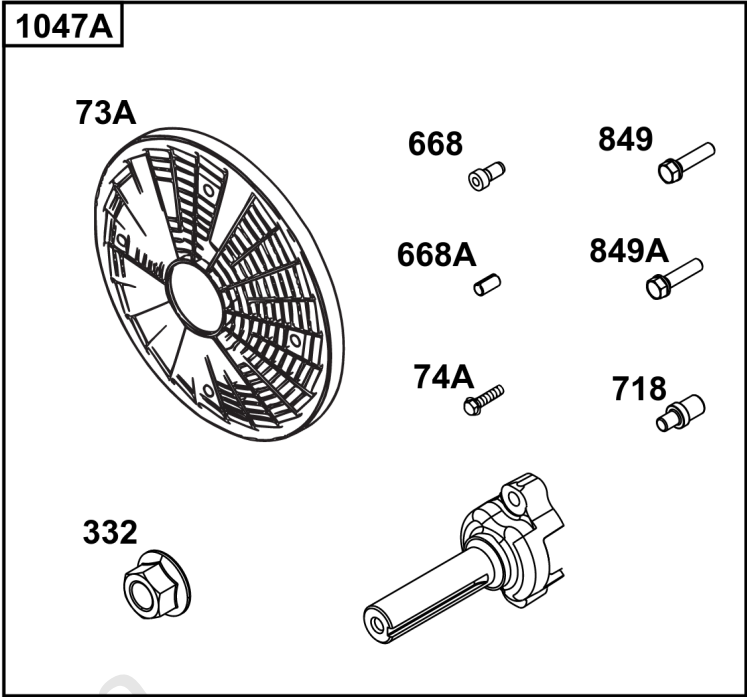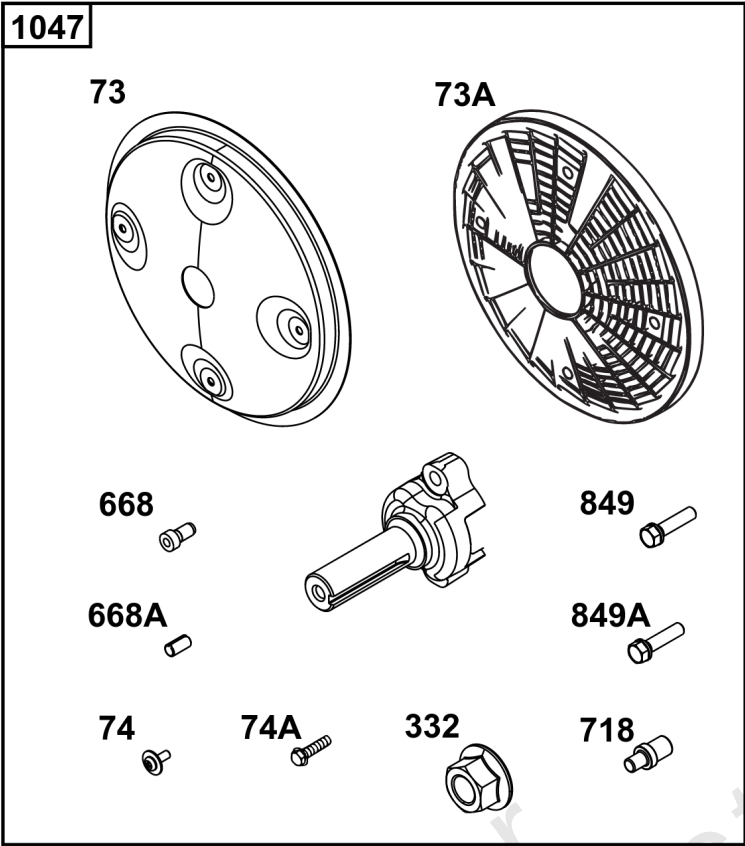

PTO

REF NO	PART NO	QTY	DESCRIPTION
73	841582	1	SCREEN, Rotating
73A	494439	1	SCREEN, Rotating
74	841441	4	SCREW -(Rotating Screen)
74A	691647	4	SCREW -(Rotating Screen)
332	690887	1	NUT -(Flywheel)
668	691500	4	SPACER -(Rotating Screen)
668A	691215	4	SPACER -(Rotating Screen)
718	841581	1	PIN, Locating -(32MM)
849	691088	2	SCREW -(Stub Shaft)
849A	846236	2	SCREW -(Stub Shaft)
1047	841580	1	SHAFT, Stub -(1" Diameter) (4.75" Length)
1047A	842655	1	SHAFT, Stub -(1" Diameter) (5.43" Length)

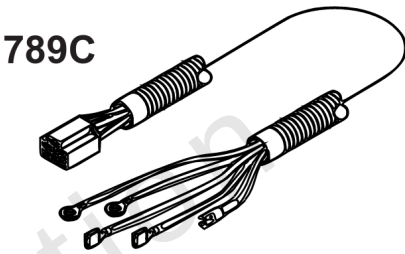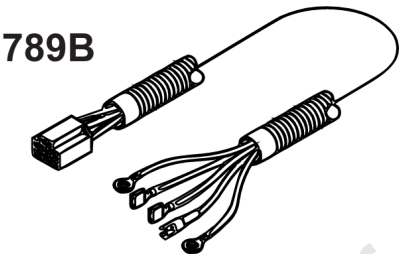  
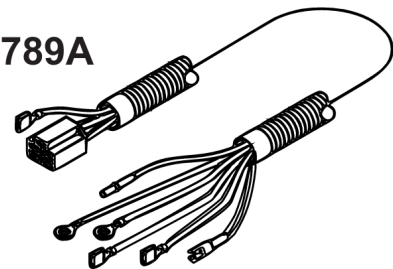 
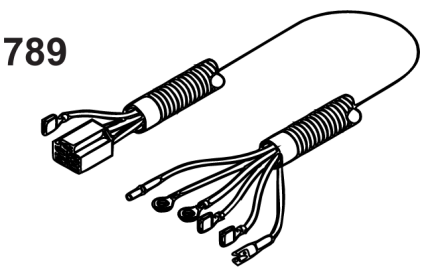 


578


LOOSE CONNECTOR:
TE # 1-480704-0
MATE-N-LOK 6 POSITION HOUSING

Electrical


REF NO	PART NO	QTY	DESCRIPTION
415	1714480SM	1	PLUG -(Plug for Ignition Switch Removal)
578	84007350	1	WIRE ASSEMBLY -(Aids in Repowering Engine Application with 6-Pin Connector and Wires with Terminals to Create Custom Adapter Configurations)
789	691996	1	HARNESS, Wiring -(For 16 Amp Alternators)
789A	841318	1	HARNESS, Wiring -(For 16 Amp Alternators with Solenoid Shift Starter)
789B	847601	1	HARNESS, Wiring -(For 20 Amp Alternators)
789C	847602	1	HARNESS, Wiring -(For 20 Amp Alternators with Solenoid Shift Starter)

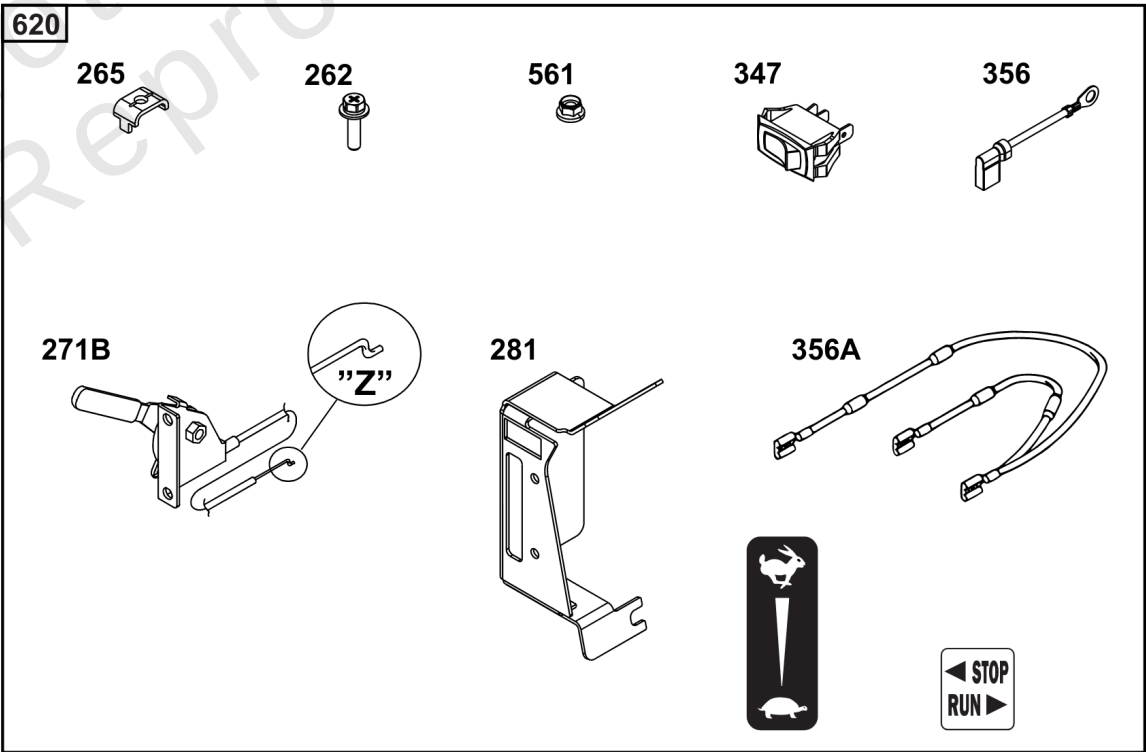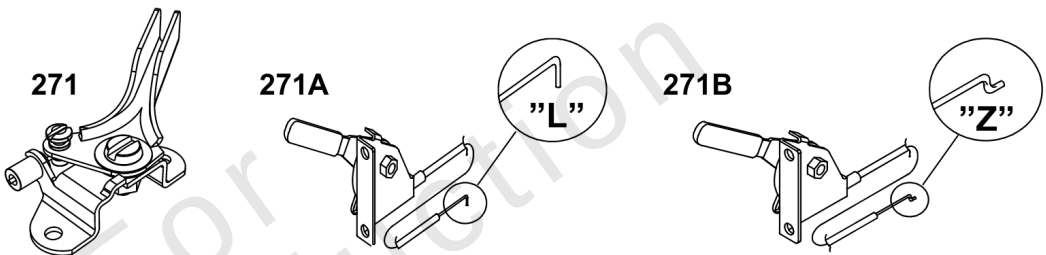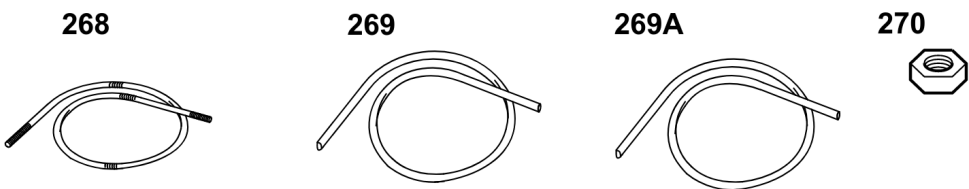   



271B

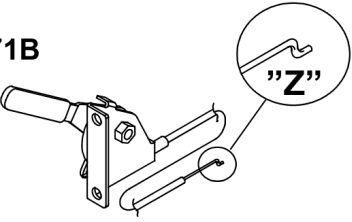 

281

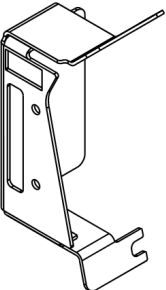 

356A

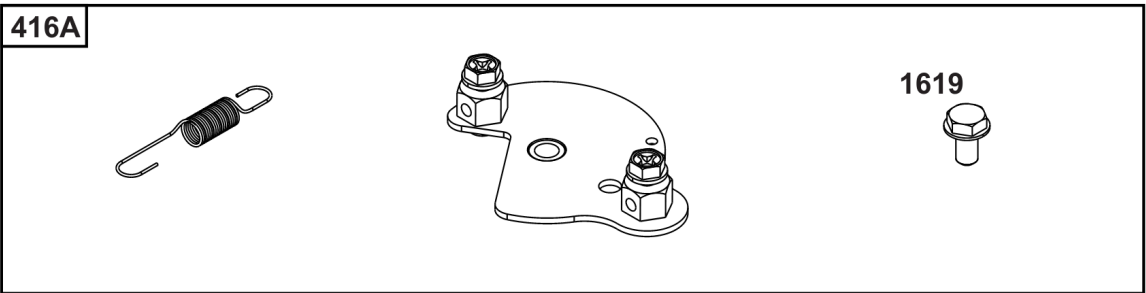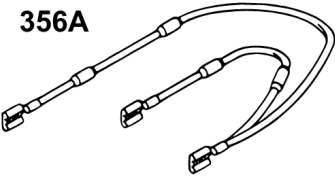  

Speed Control

REF NO	PART NO	QTY	DESCRIPTION
262	841552	1	SCREW
265	691024	1	CLAMP, Casing -(Casing Clamp for Hard Casing)
265A	690798	1	CLAMP, Casing -(Casing Clamp for Soft Casing)
267	792629	1	SCREW -(Screw for Casing Clamp)
268	691025	1	CASING, Control Wire -(Wire Casing 72")
269	26634	1	WIRE, Control -(Control Wire 78")
269A	93907	1	WIRE, Control -(Control Wire 100")
270	691027	1	NUT -(Nut for Wire Casing)
271	691028	1	LEVER, Control -(Speed Control Lever Assembly)
271A	692105	1	LEVER, Control -(Speed Control Lever Assembly) ('L' Shaped End)
271B	692541	1	LEVER, Control -(Speed Control Lever Assembly) ('Z' Shaped End)
281	690742	1	PANEL, Control
347	691995	1	SWITCH-ROCKER
356	690796	1	WIRE, Stop
356A	691999	1	WIRE ASSEMBLY
416	595196	1	BRACKET, Throttle Cable -(Casing Clamp for Snap-In Casing)
416A	84006945	1	BRACKET, Throttle Cable
561	806447	1	NUT
620	494052	1	BRACKET, Control -(Throttle Control for Vanguard V-Twin Horizontal Small Block)
1619	691693	1	SCREW

