


REPLACEMENT PARTS - MODEL S27BV

2-CYCLE BLOWER/VACUUM

PPN 41AR2HBC707

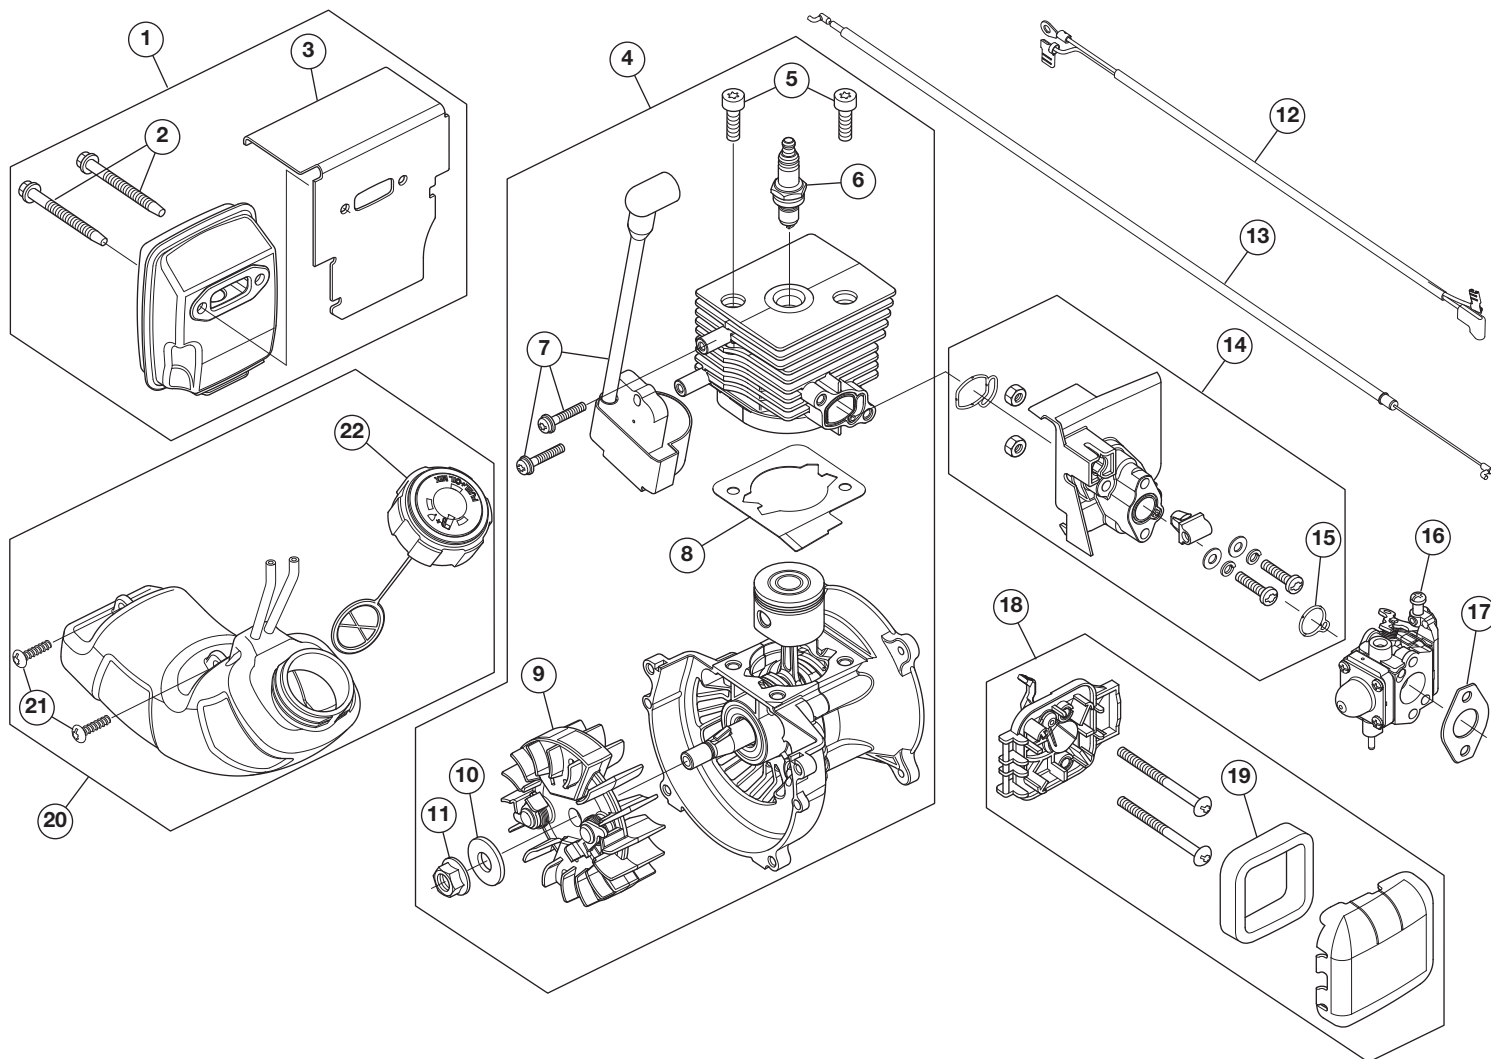


Item	Part No.	Description
1	753-06027	Muffler Assembly (includes 2 & 3)
2	753-06294	Muffler Screws
3	753-05946	Muffler Gasket
4	753-06687	Shortblock Assembly (includes 5 - 11)
5	753-05703	Screw
6	753-06193	Spark Plug
7	753-06443	Module Assembly
8	753-06827	Cylinder Gasket
9	753-06175	Flywheel Assembly
10	753-08022	Washer
11	753-05687	Nut

Item	Part No.	Description
12	753-05949	Lead Wire
13	753-06690	Throttle Cable
14	753-06189	Insulator Assembly (includes 15)
15	753-06185	Insulator O-Ring
16	753-06753	Carburetor Assembly (includes 17)
17	753-06253	Carburetor Gasket
18	753-05725	Air Cleaner Assembly (includes 19)
19	791-181757	Air Filter
20	753-06720	Fuel Tank Assembly (includes 21 & 22)
21	710-04194	Screw
22	791-182529	Fuel Cap

REPLACEMENT PARTS - MODEL S27BV

2-CYCLE BLOWER/VACUUM

PPN 41AR2HBC707

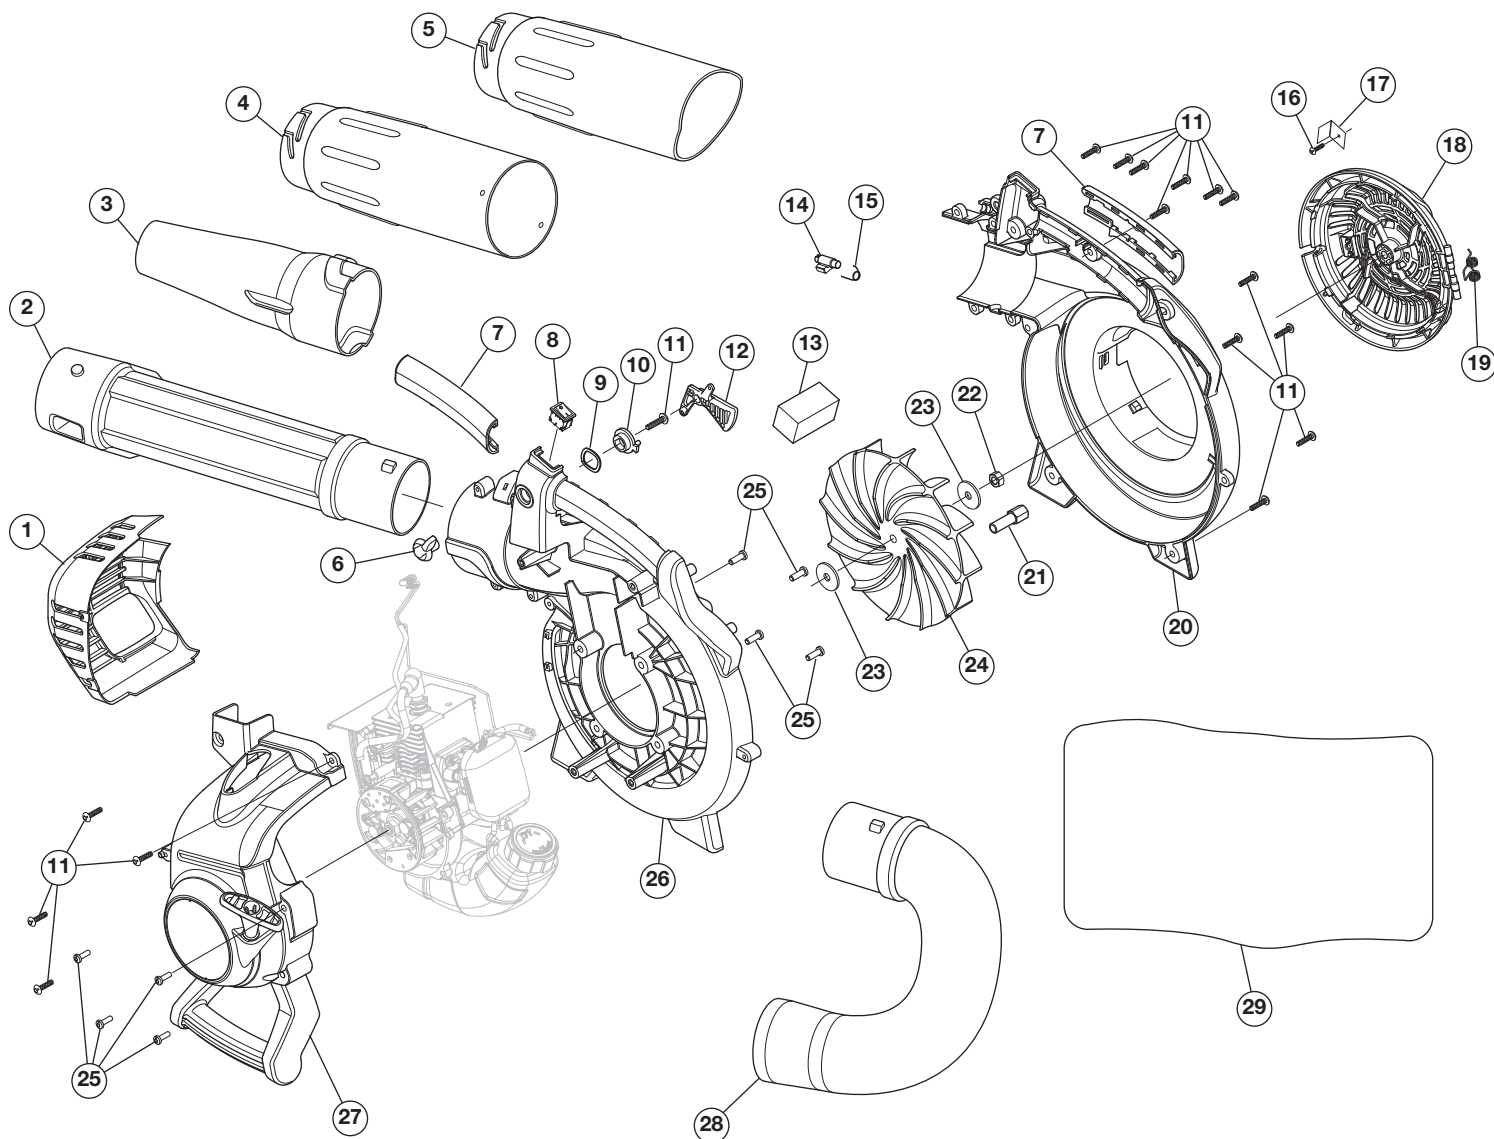

Item	Part No.	Description
1	753-06694	Muffler Cover Assembly (includes 11)
2	753-05936	Upper Tube
3	753-06000	Nozzle
4	753-06660	Upper Vac Tube
5	753-06661	Lower Vac Tube
6	753-05932	Outer Trigger Lock
7	753-05919	Handle Grips
8	791-182405	Switch
9	753-05925	Wavey Washer
10	753-05924	Inner Trigger Lock
11	710-04194	Screw
12	753-05930	Throttle Trigger
13	753-05254	Foam Filter
14	753-05926	Latch Tube
15	753-05939	Latch Spring

Item	Part No.	Description
16	1755	Screw
17	753-06696	Door Lock
18	753-06678	Intake Cover
19	753-05918	Spring
20	753-06679	Impeller Housing
21	753-06700	Adapter
22	753-06701	Nut
23	753-05928	Washer
24	753-06807	Impeller
25	791-181862	Screw
26	753-06693	Impeller Housing
27	753-08679	Engine Cover Assembly (includes 11 & 225)
28	753-06658	Elbow
29	753-06659	Bag